

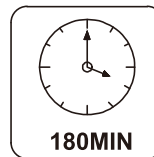
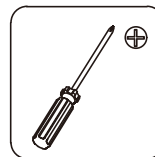
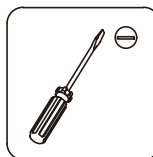



Installation & Assembly

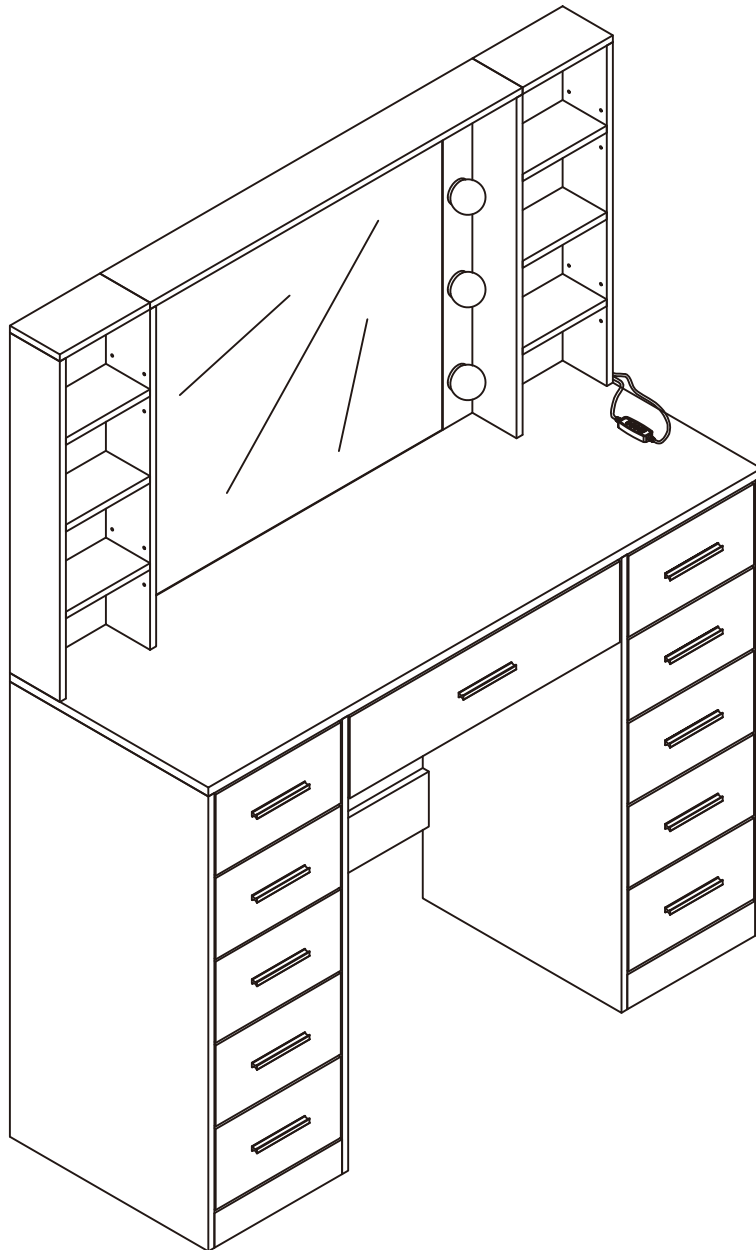


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

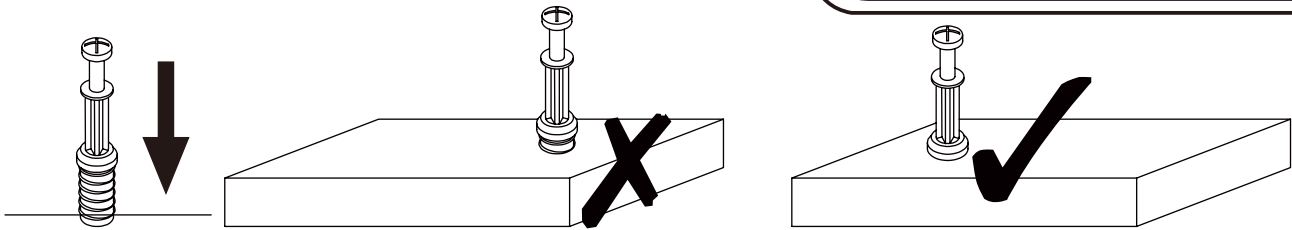


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

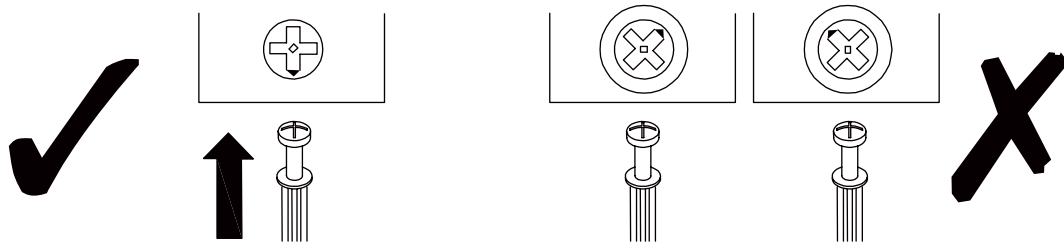











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










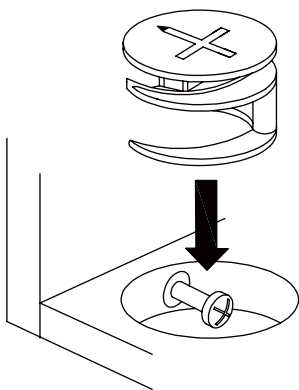












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



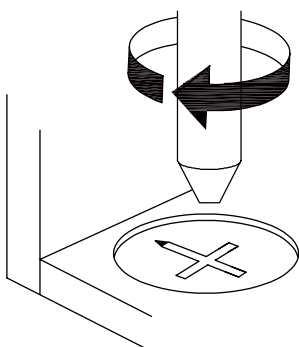





EN_Turn cam lock clockwise to tighten.

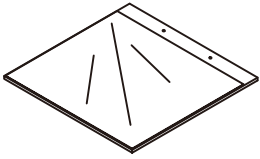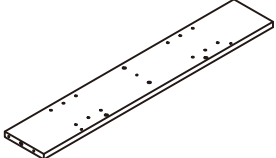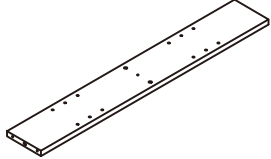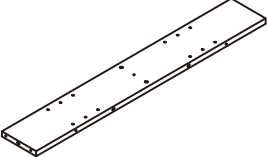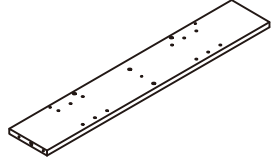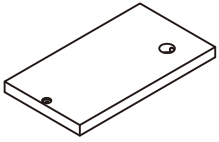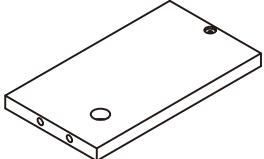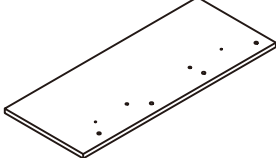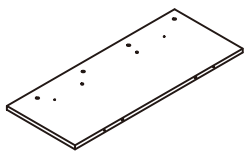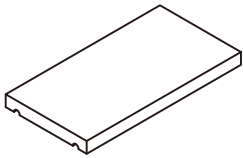NO.		QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x4	

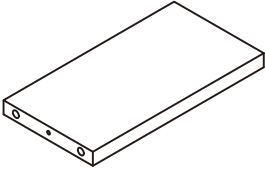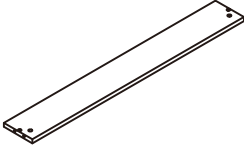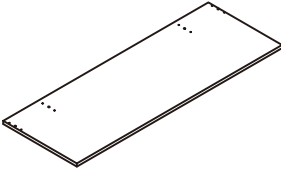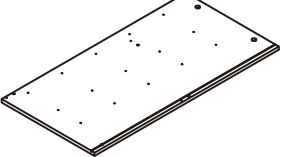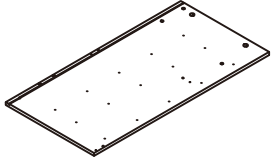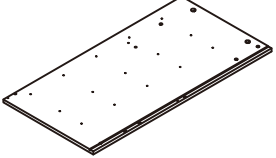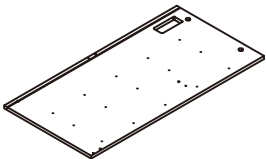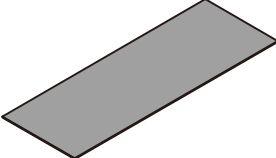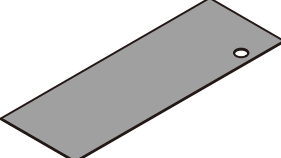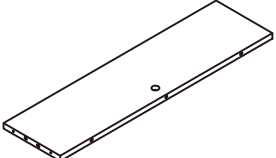NO.		QTY	SPARE
11		x2	
12		x1	
13		x1	
14		x1	
15		x1	
16		x1	
17		x1	
18		x1	
19		x1	
20		x1	

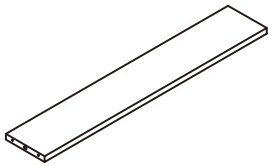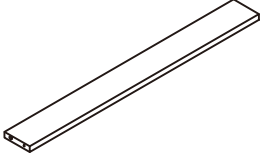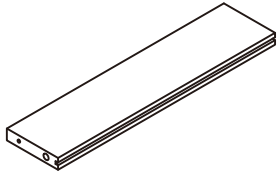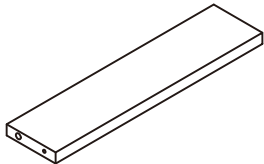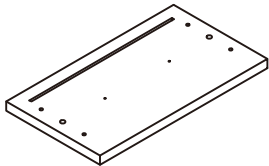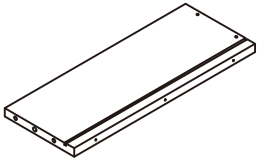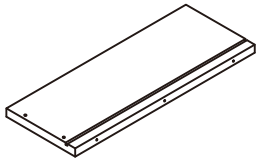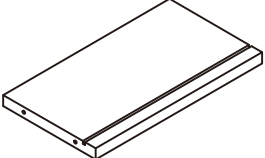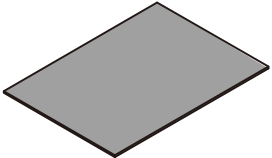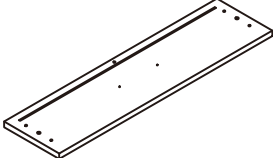
NO.		QTY	SPARE
21		x1	
22		x1	
23		x2	
24		x6	
25		x10	
26		x11	
27		x11	
28		x10	
29		x10	
30		x1	

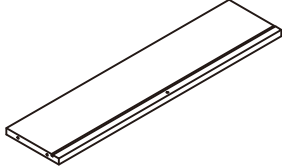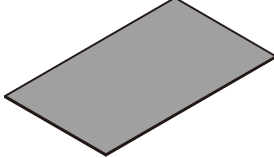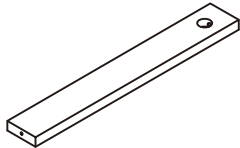NO.		QTY	SPARE
31		x1	
32		x1	
33		x1	
	 Hardware Kit	x1	

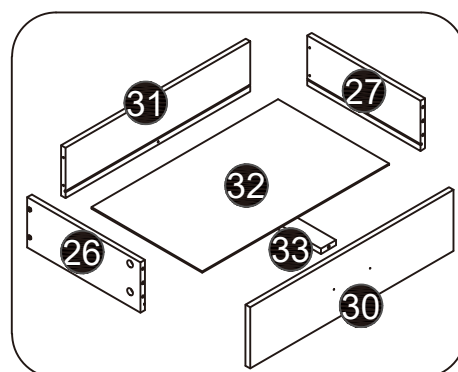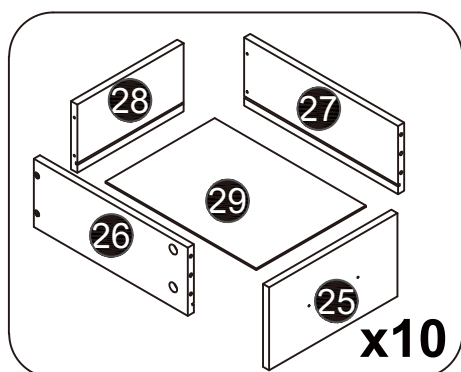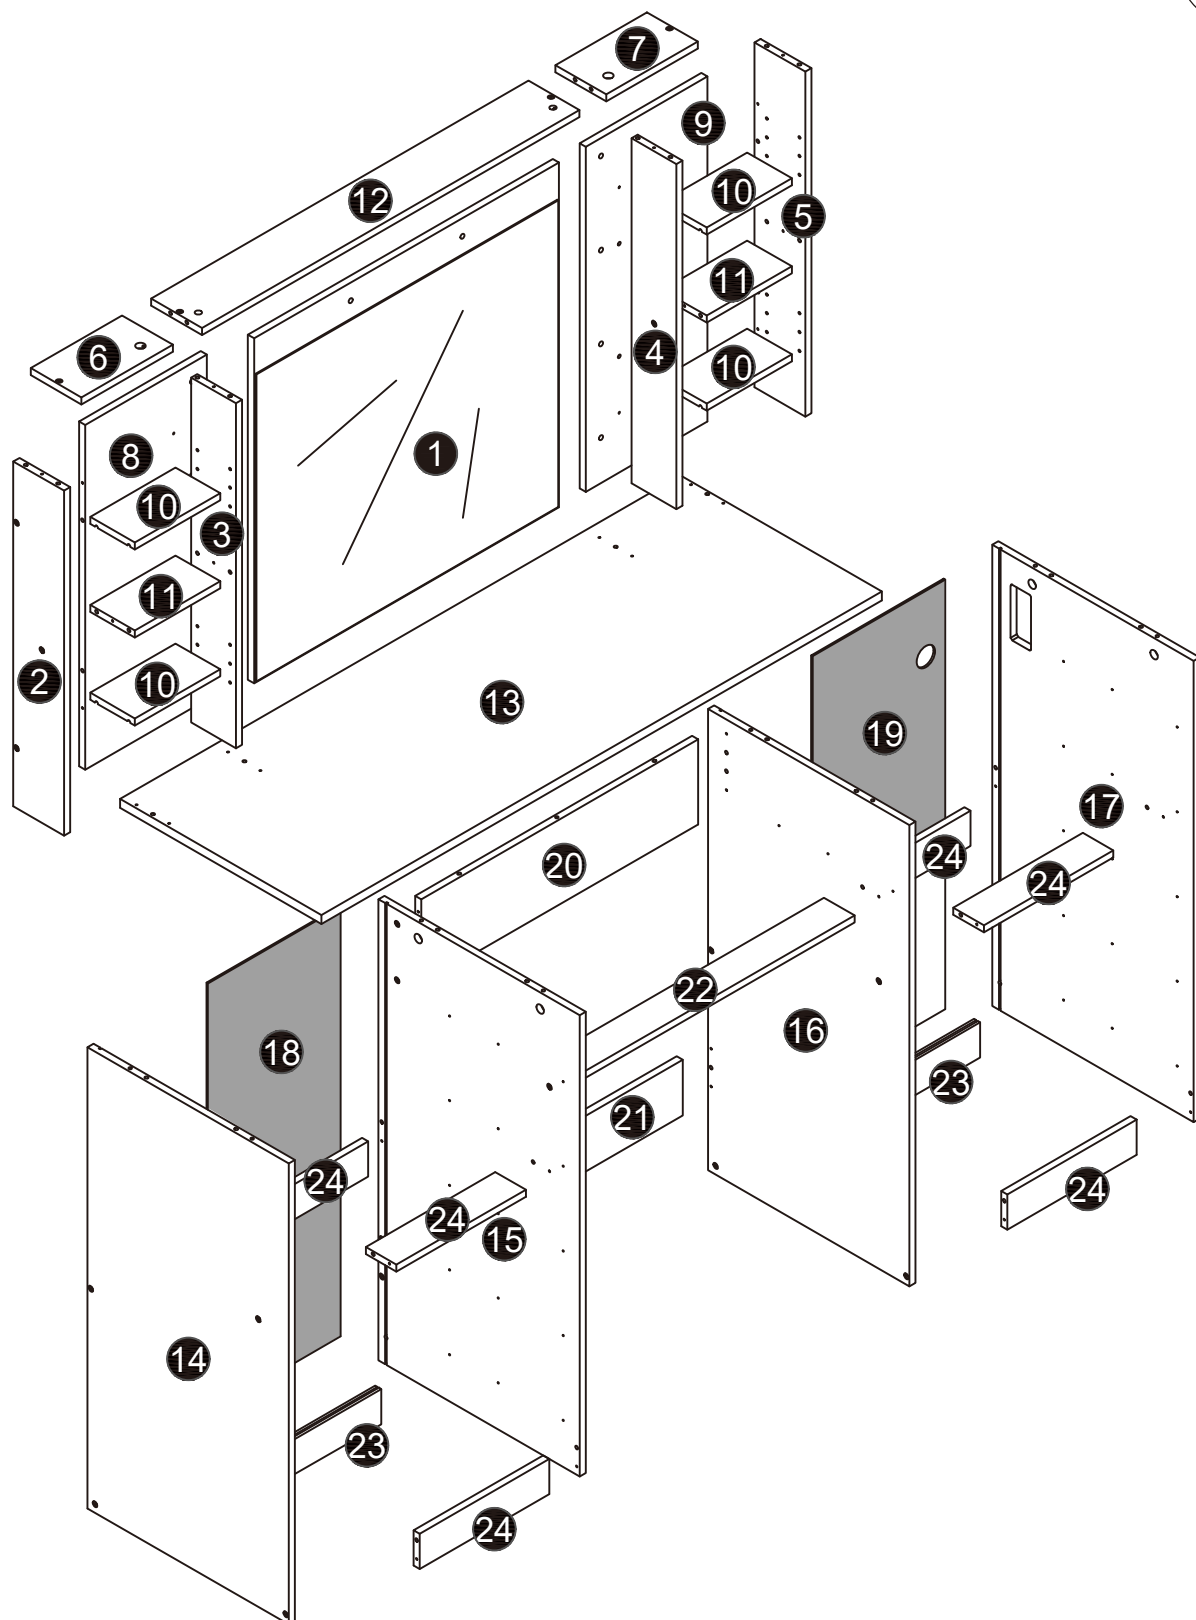




A x54 Ø6x35mm +3(spare)	B x56 Ø15x10mm +3(spare)	C x86 Ø6x30mm +3(spare)	D x97 Ø4x35mm +3(spare)	E x134 Ø3.5x12mm +4(spare)	F x1
G x2	H x11 H-1 H-2	I x2 I-1 I-2 I-3	J x8 Ø3x16mm J-1 J-2	K x6 K-1 K-2	L x1 L-1 L-2
M x2	N x2	O x16	P x32 +3(spare)	Q x1 Q-1 x10 Q-2 x10 Q-3 x1 Q-4 x1	
CL x11 L300mm	CR x11 L300mm	DL x11 L300mm	DR x11 L300mm		





D x5












01

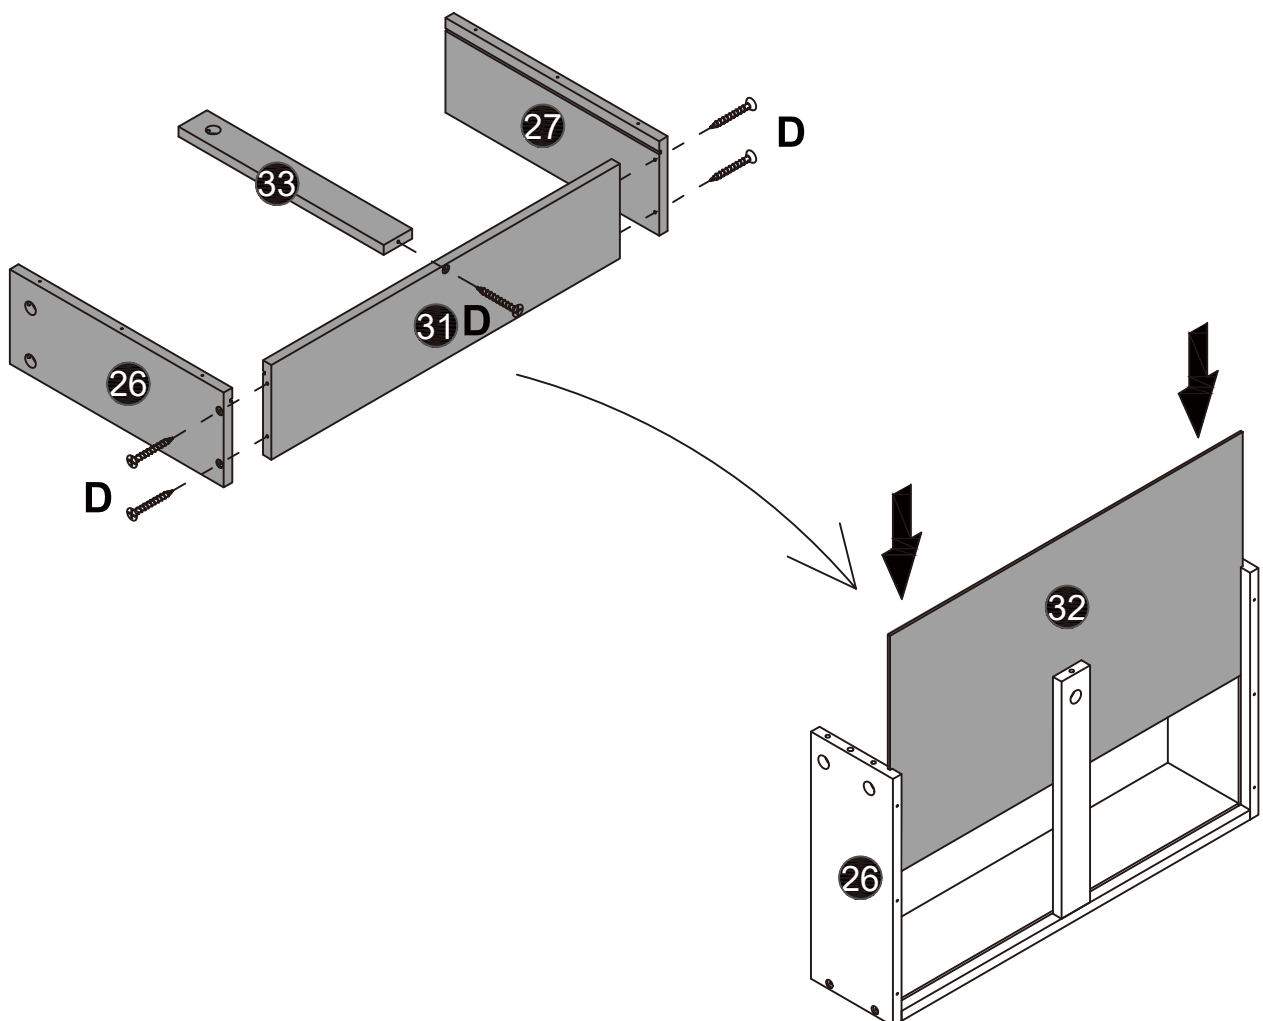

A x5 	B x5 	C x2 	E x6 	H x1  H-1  H-2
DL x1 	DR x1 			

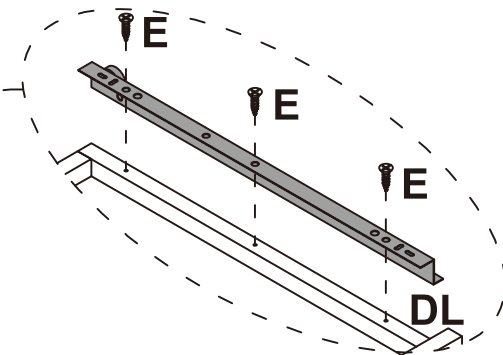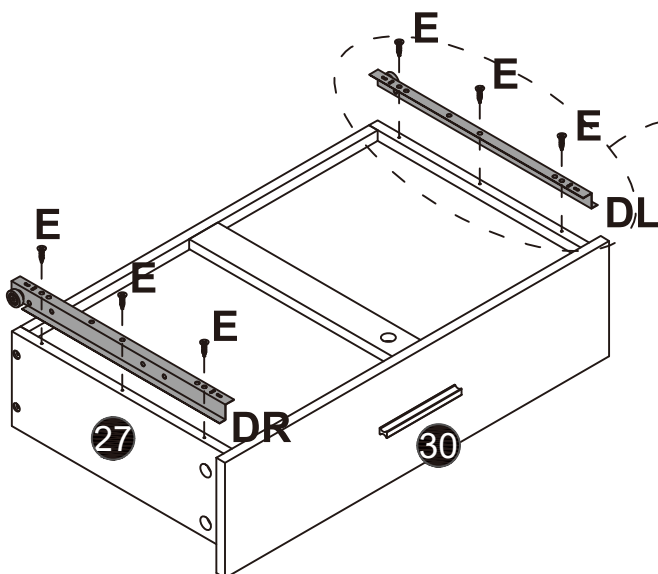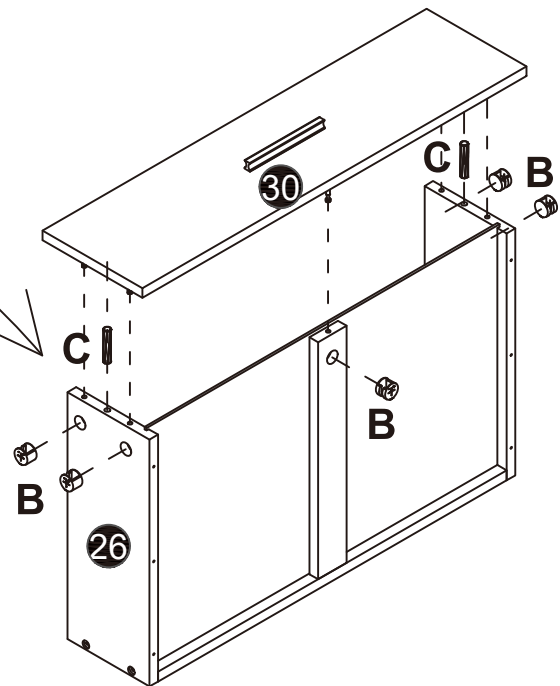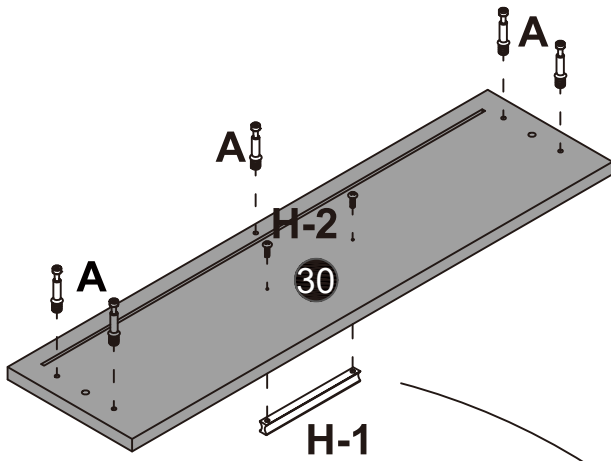

A x40	B x40	C x20	D x40	E x60
				
H x10	DL x10	DR x10		
 H-1	 H-2			

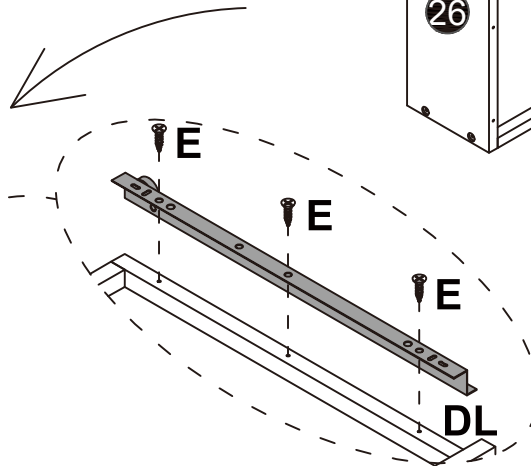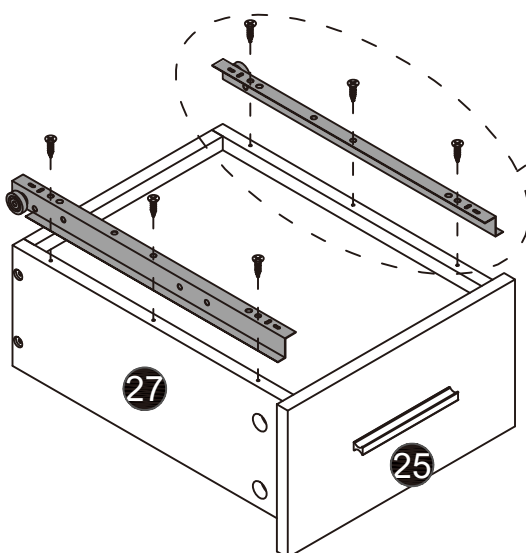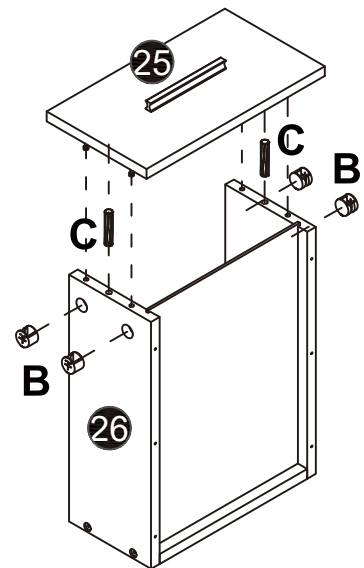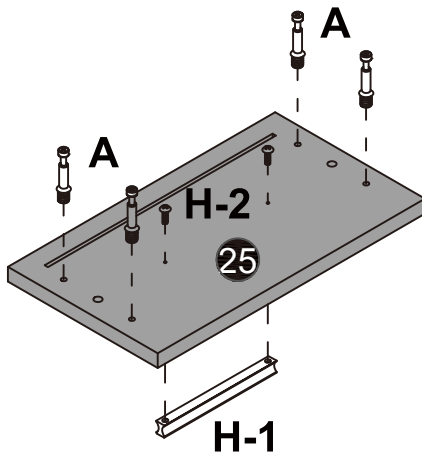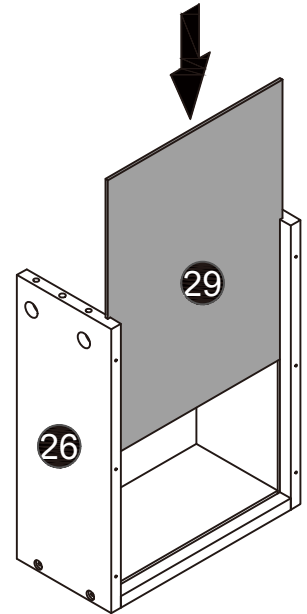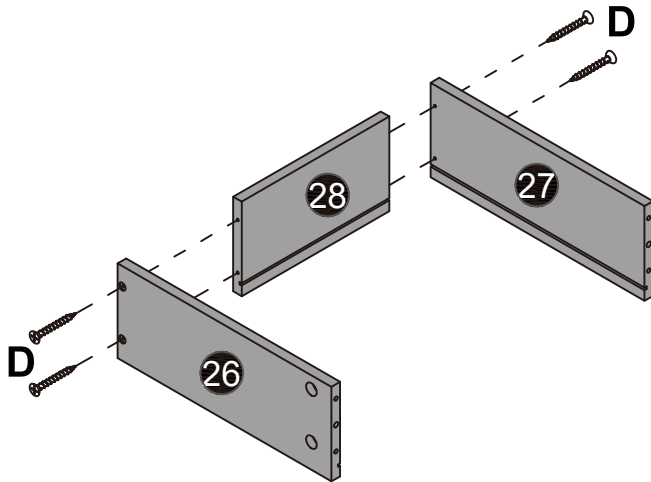


x10



E x15



CL x5

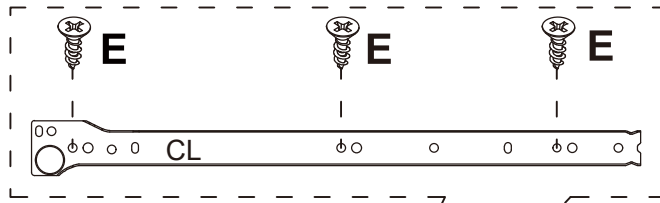


Attention,
first hole

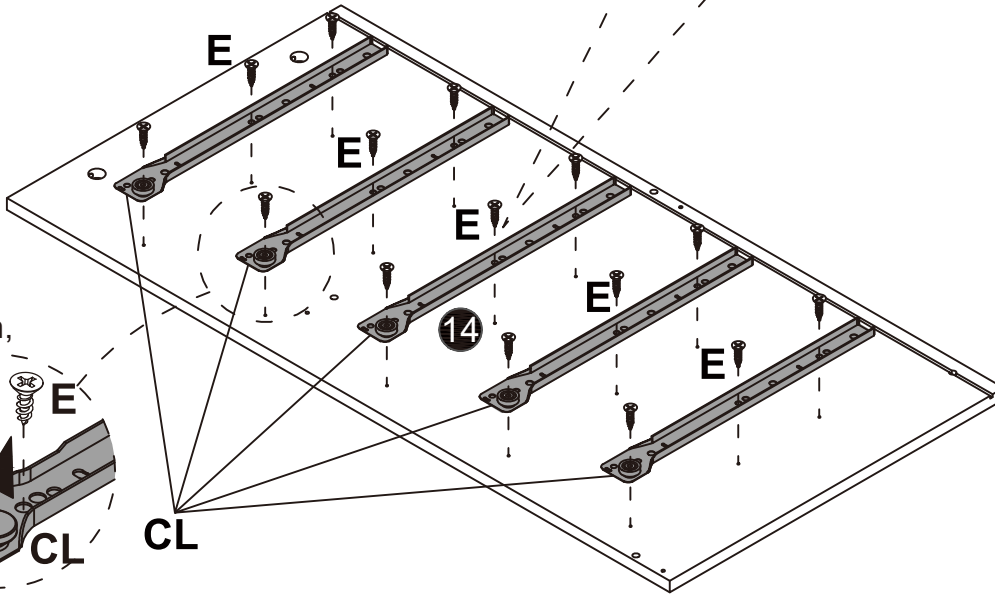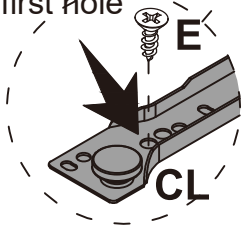



E x15



CR x5

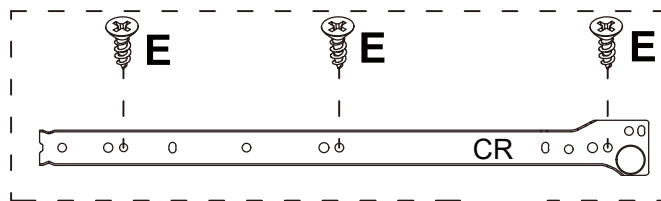



Attention,
first hole

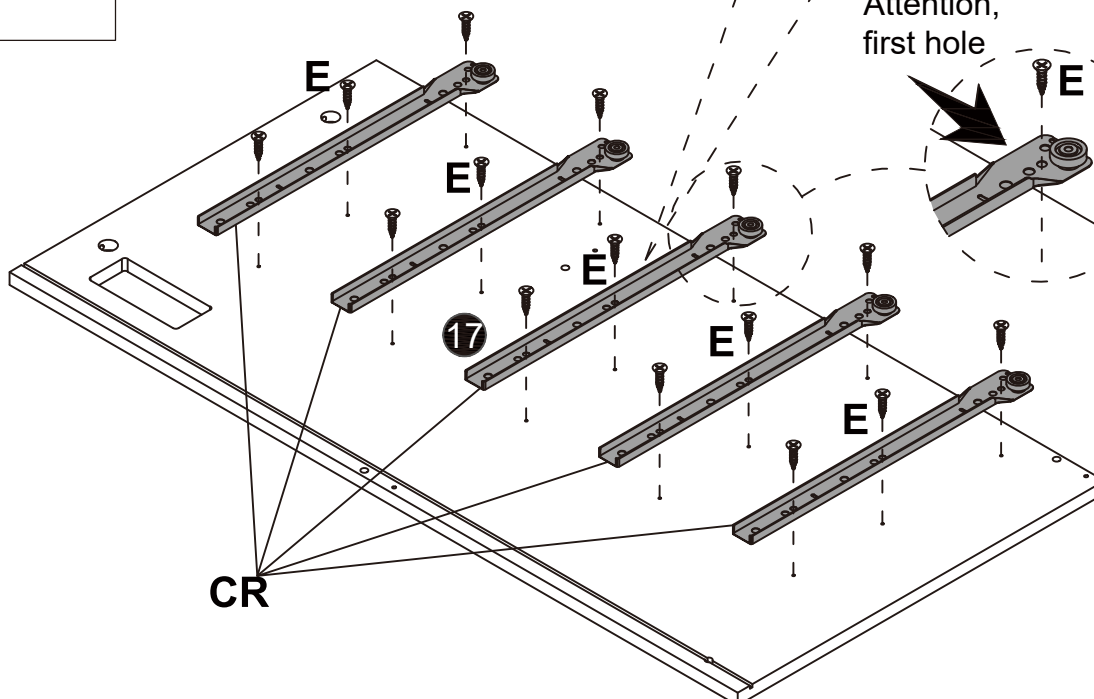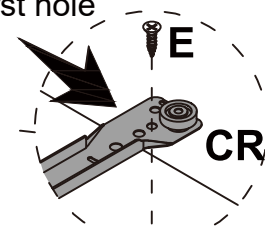


E x18

CL x1

CR x5

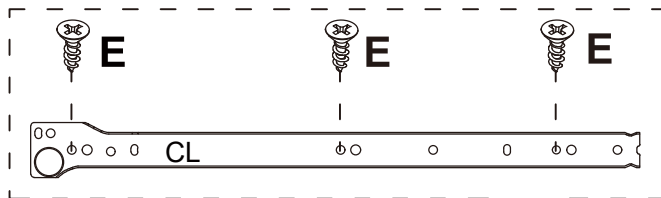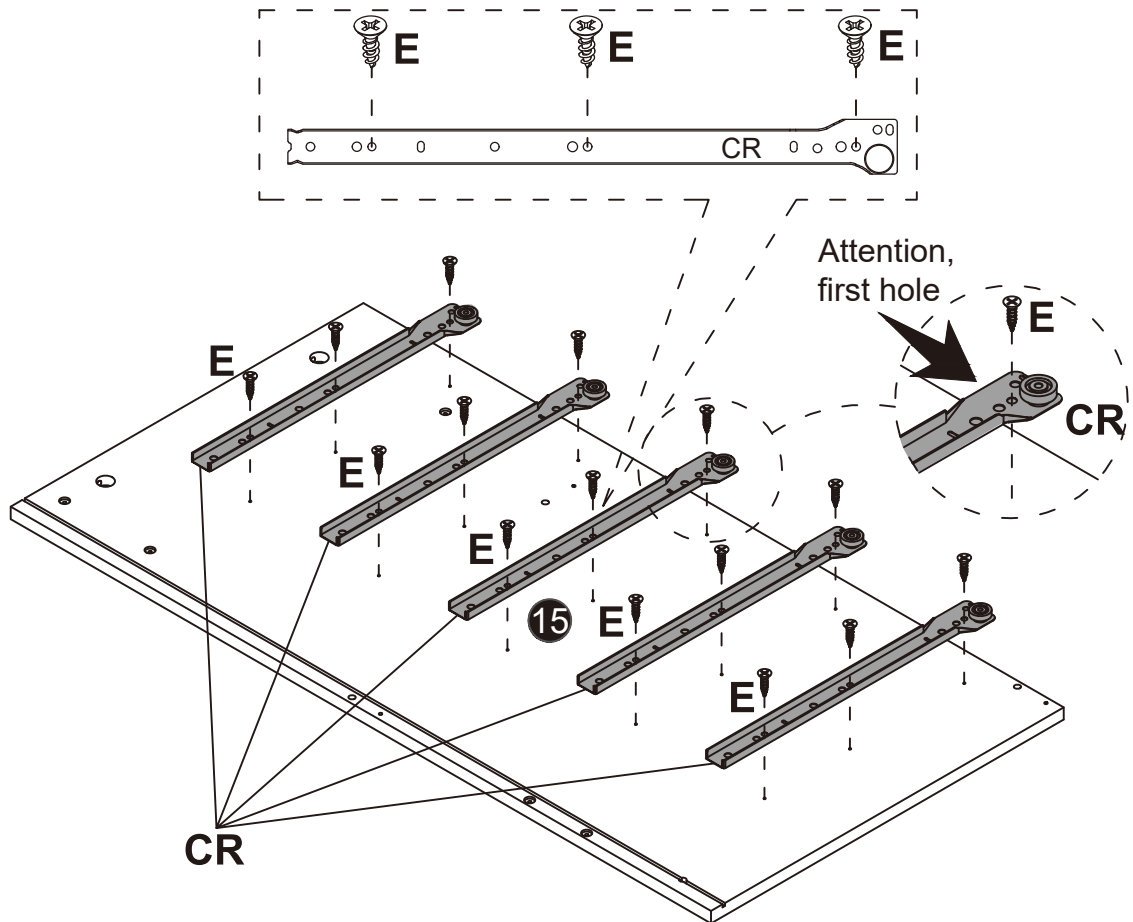


180°

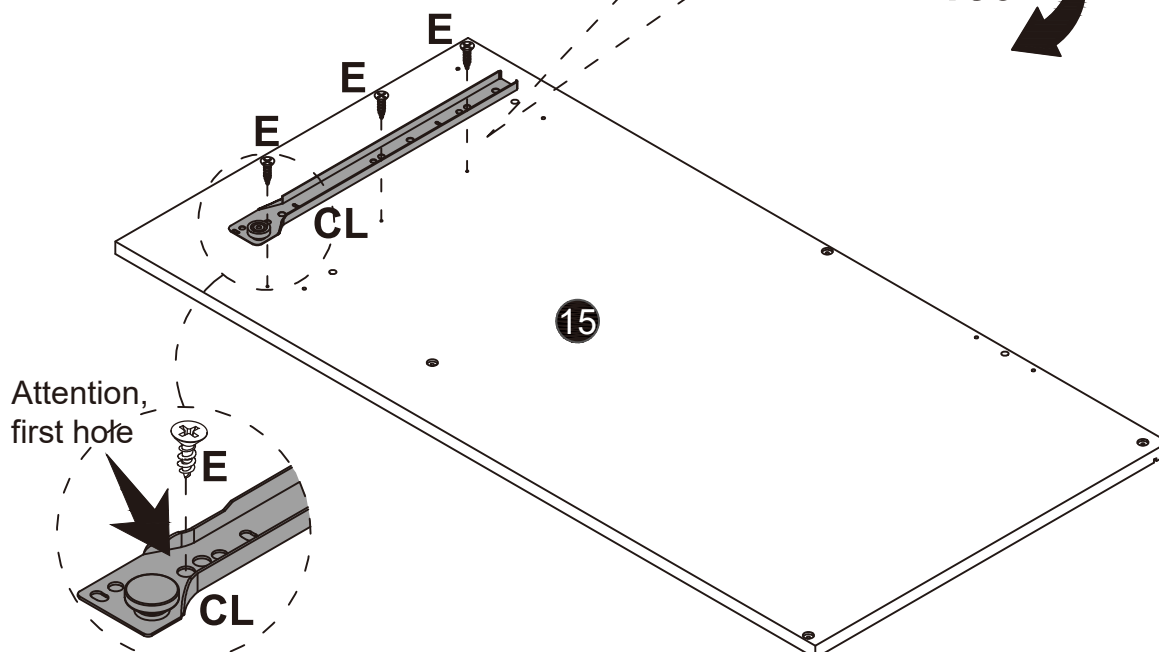




E x18

CL x5



CR x1

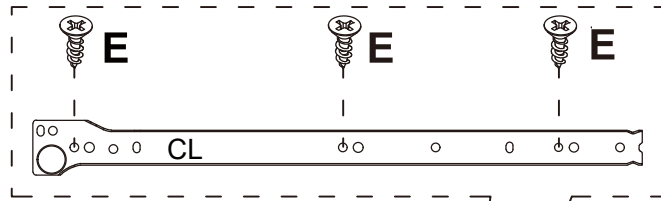


Attention,
first hole

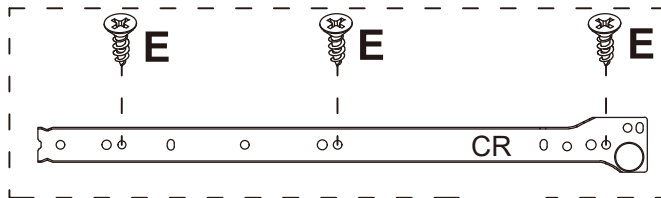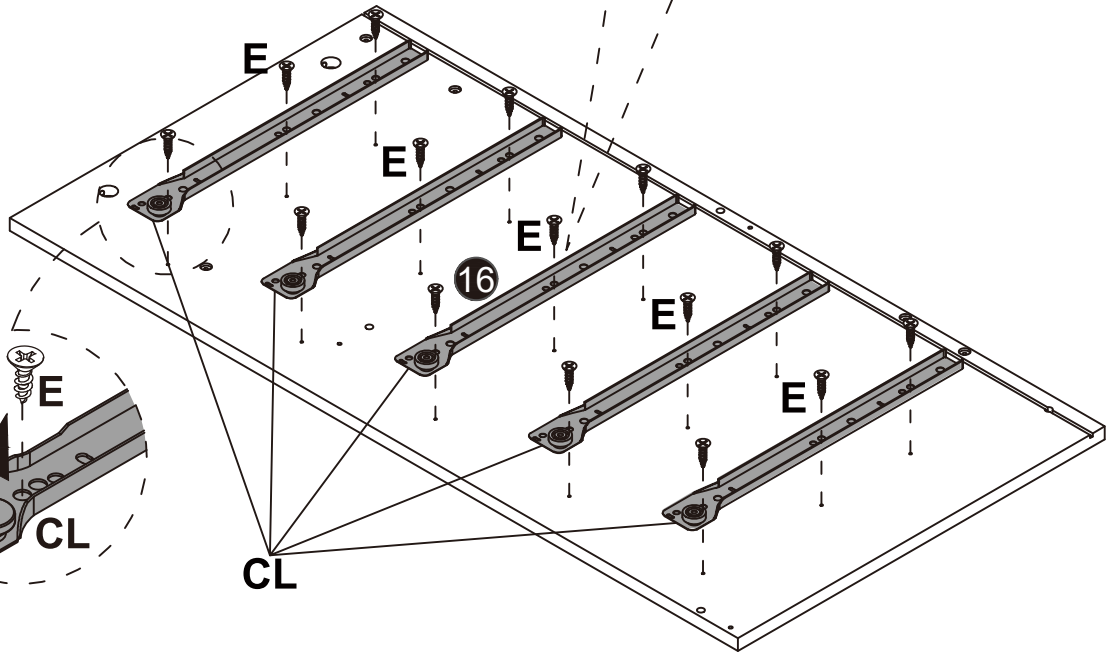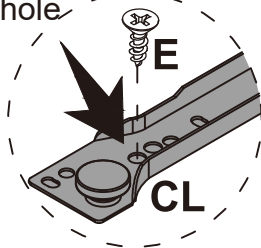



Attention,
first hole

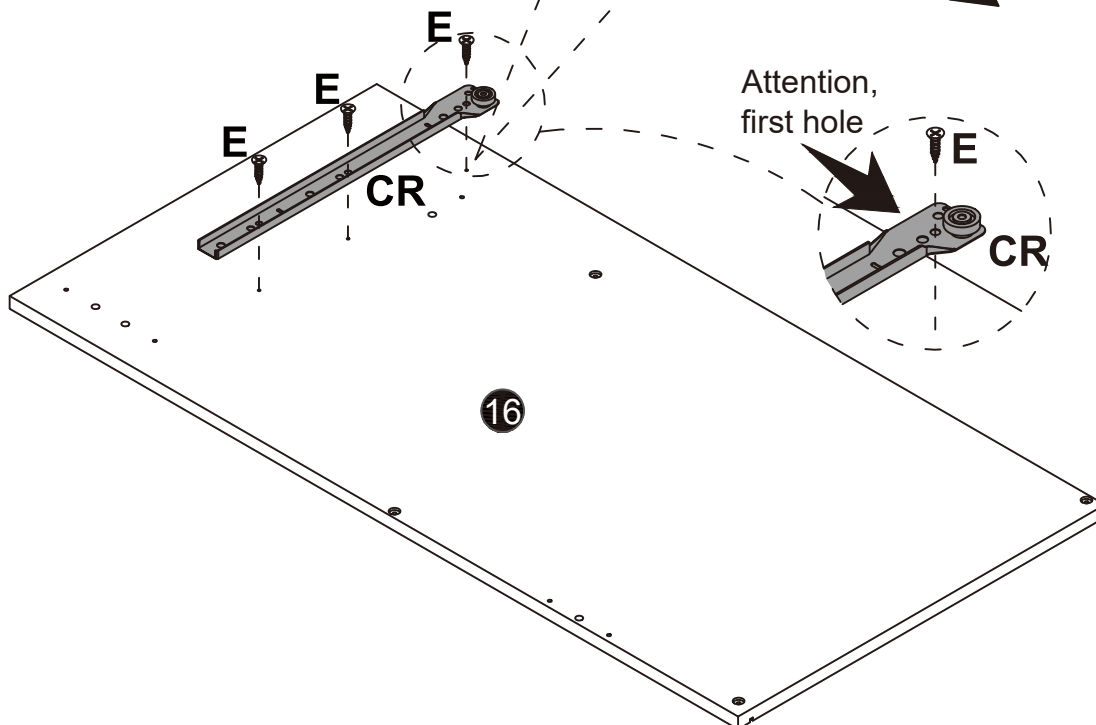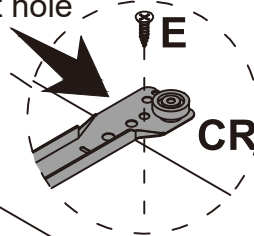

C x4





D x4

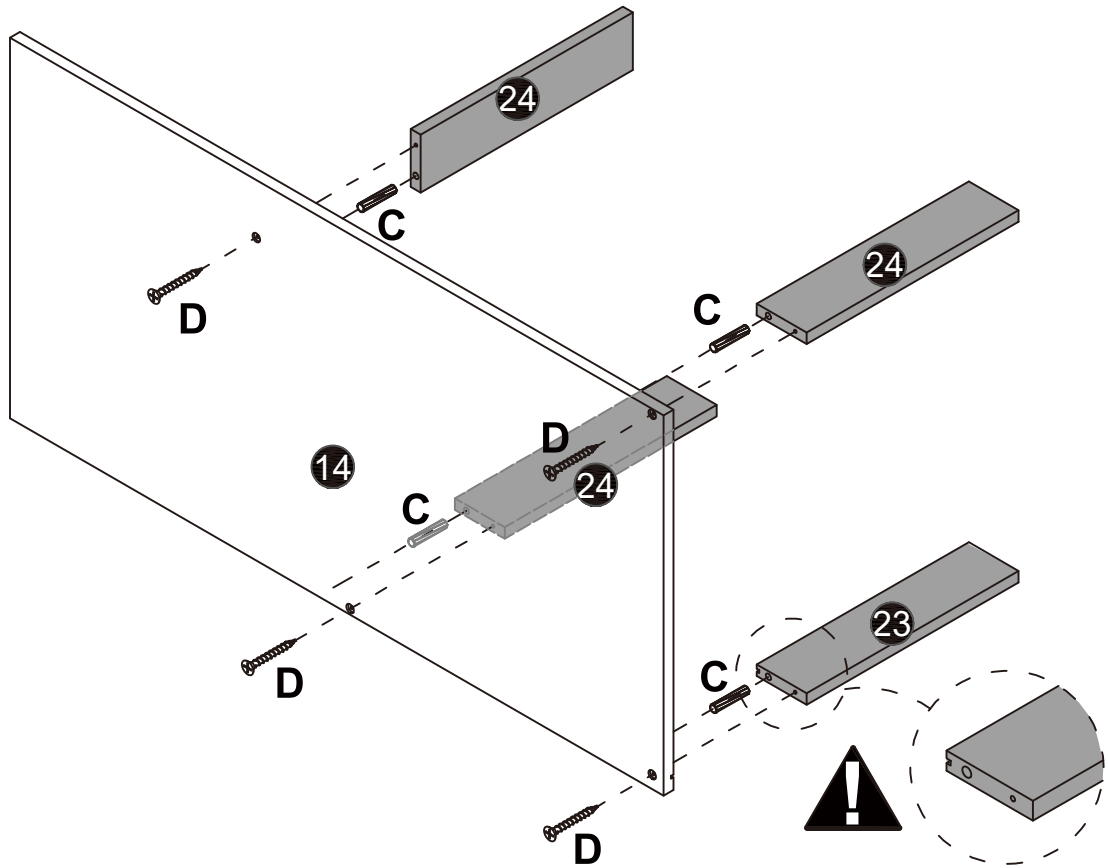


C x4





D x4

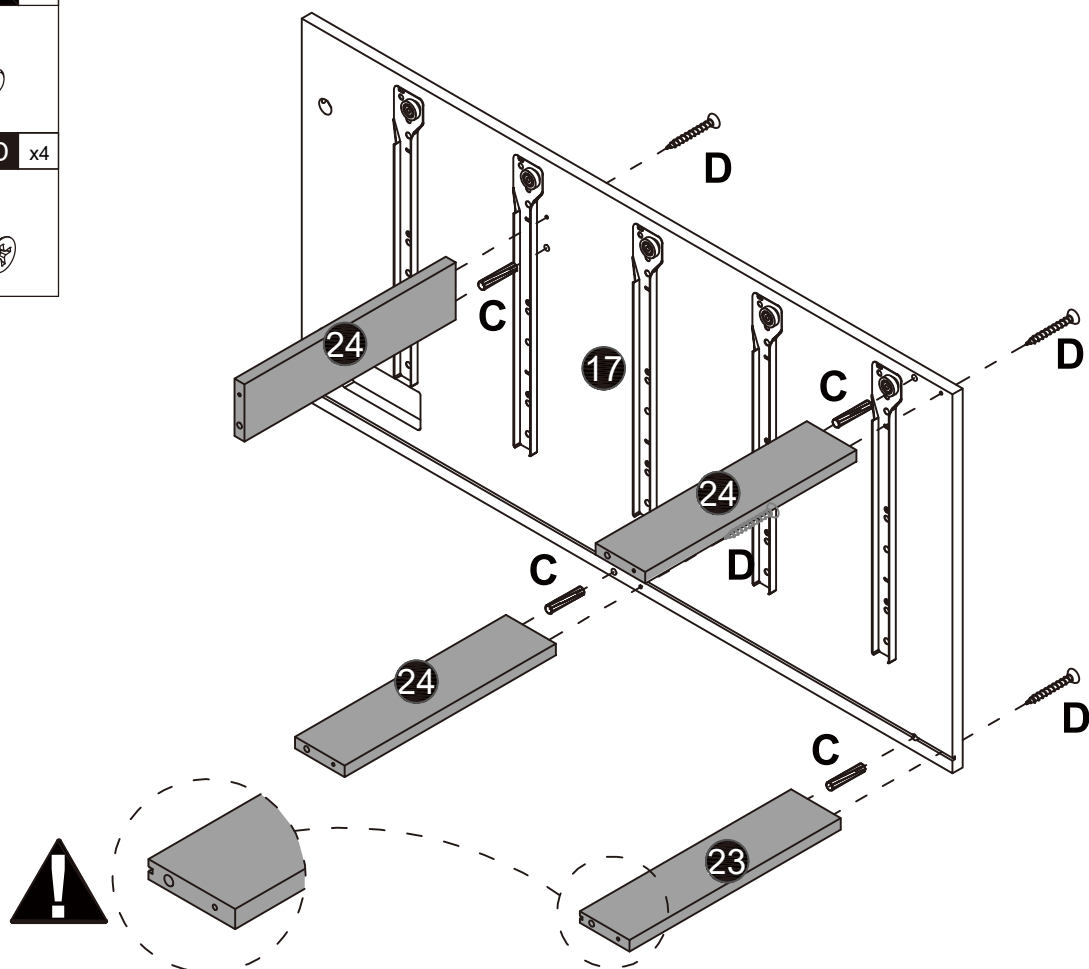

C x4





D x4

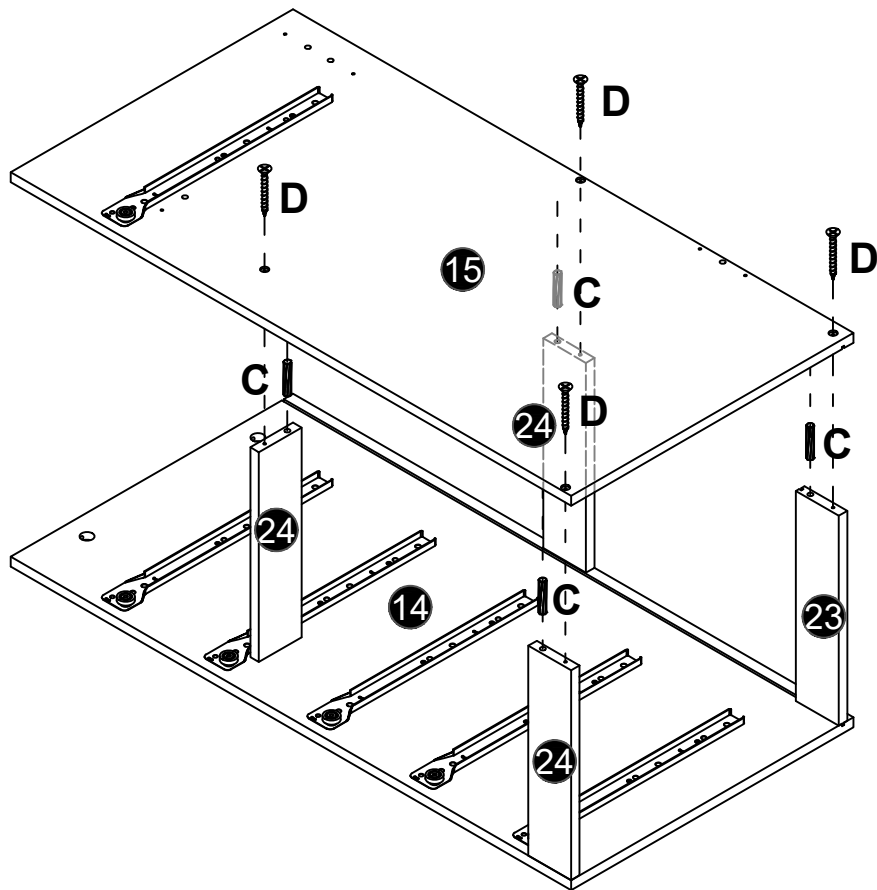

C x4






D x4

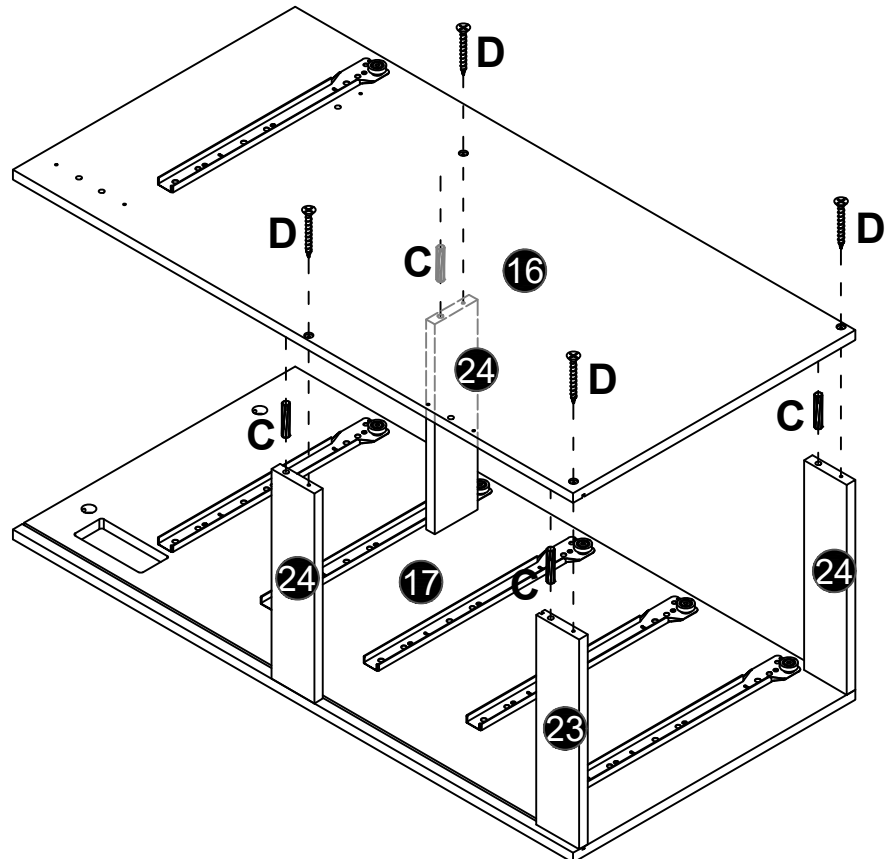


C x8



D x10

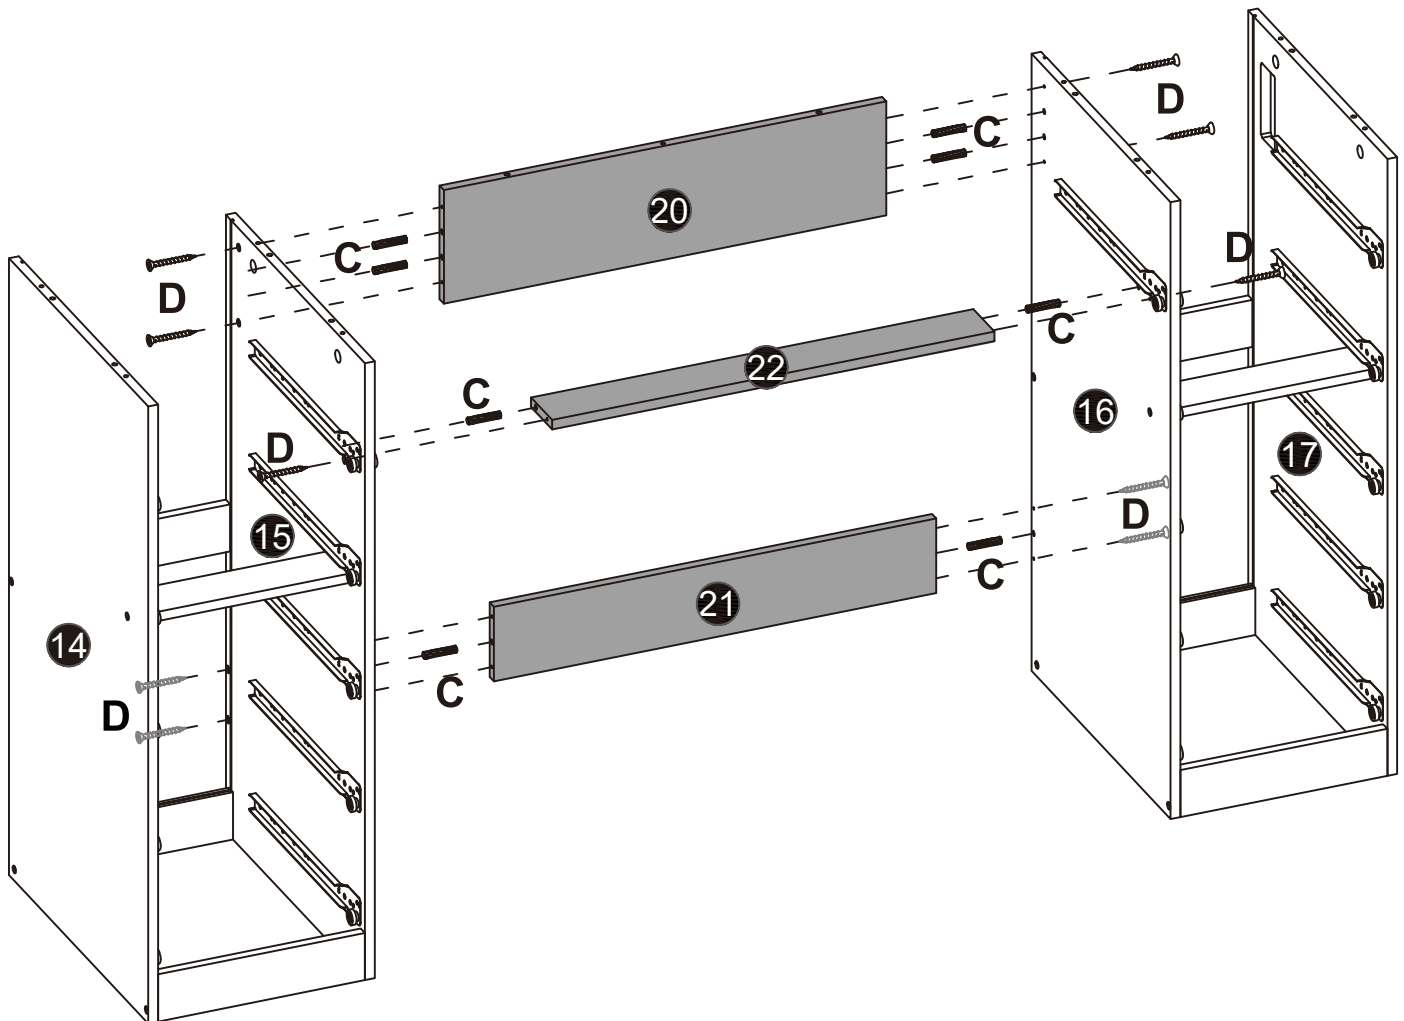
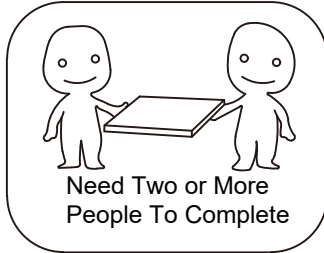



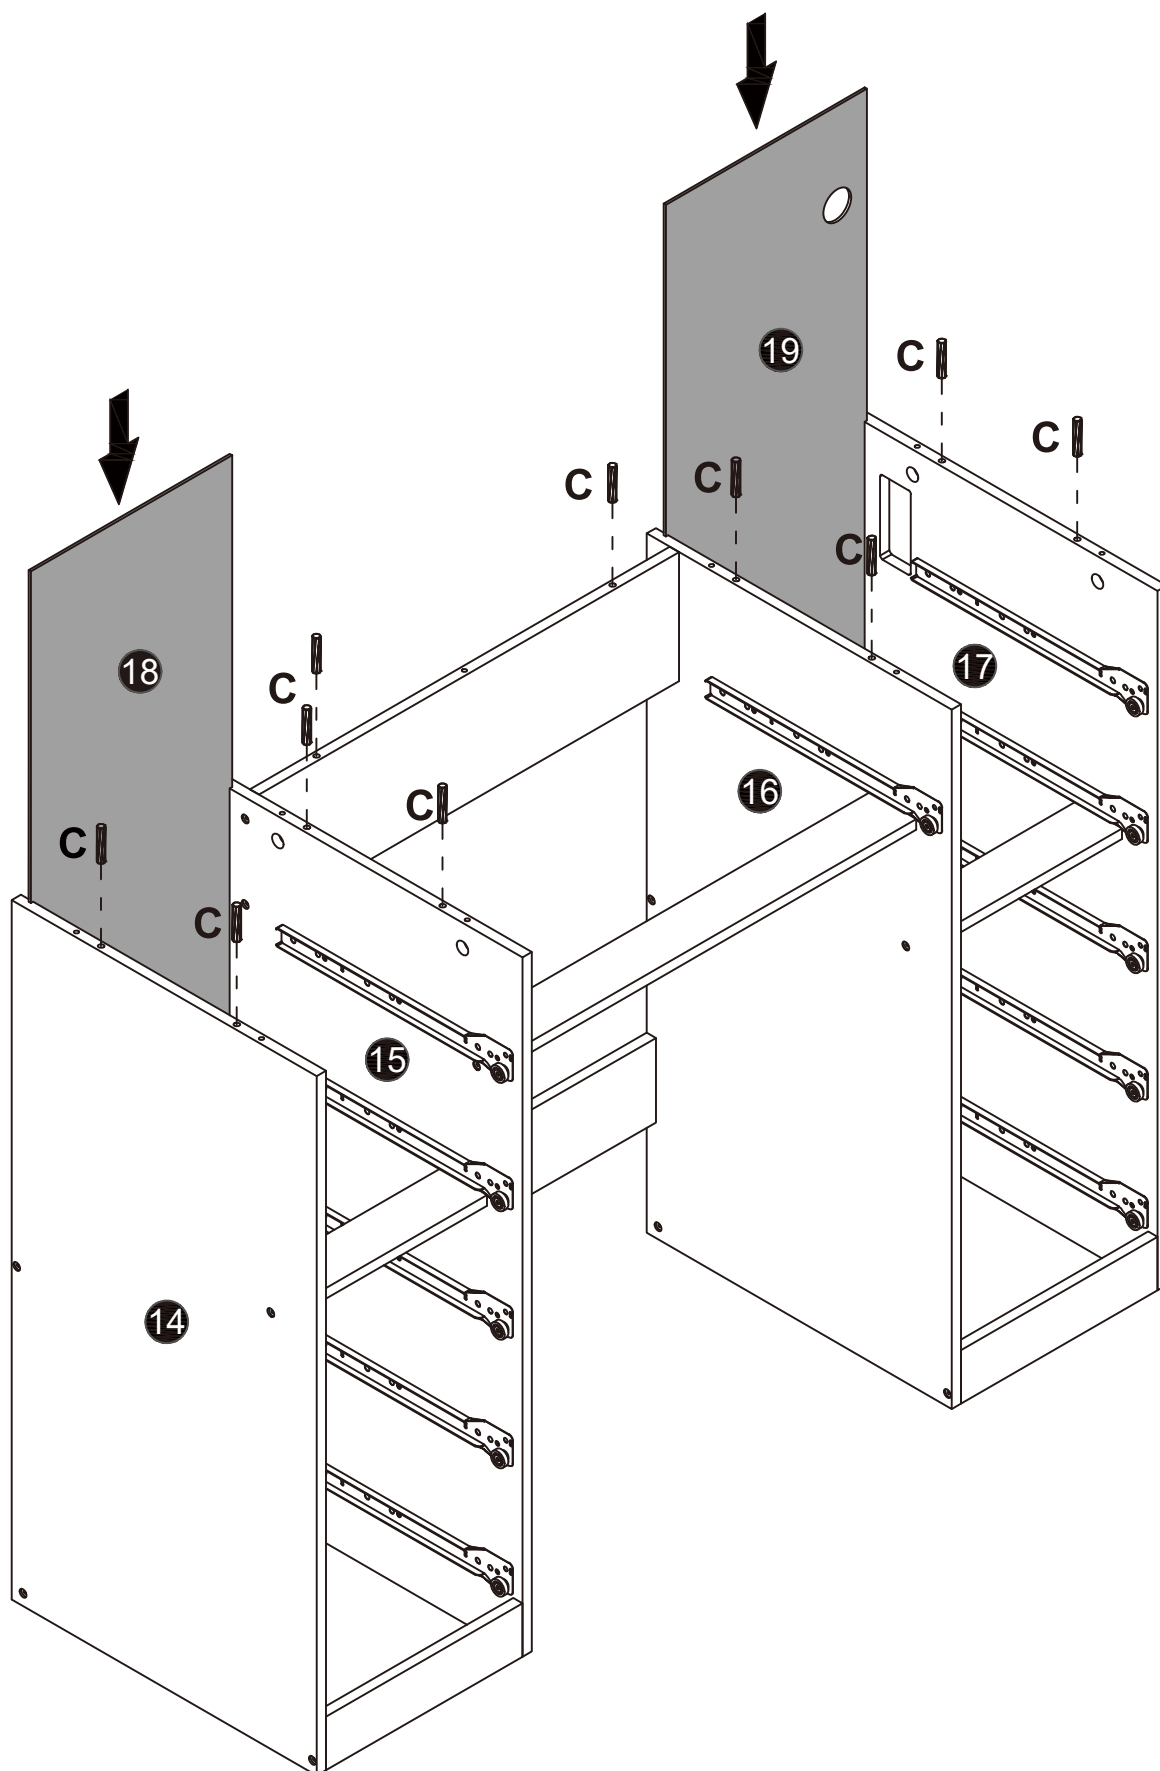


F x1





G x2

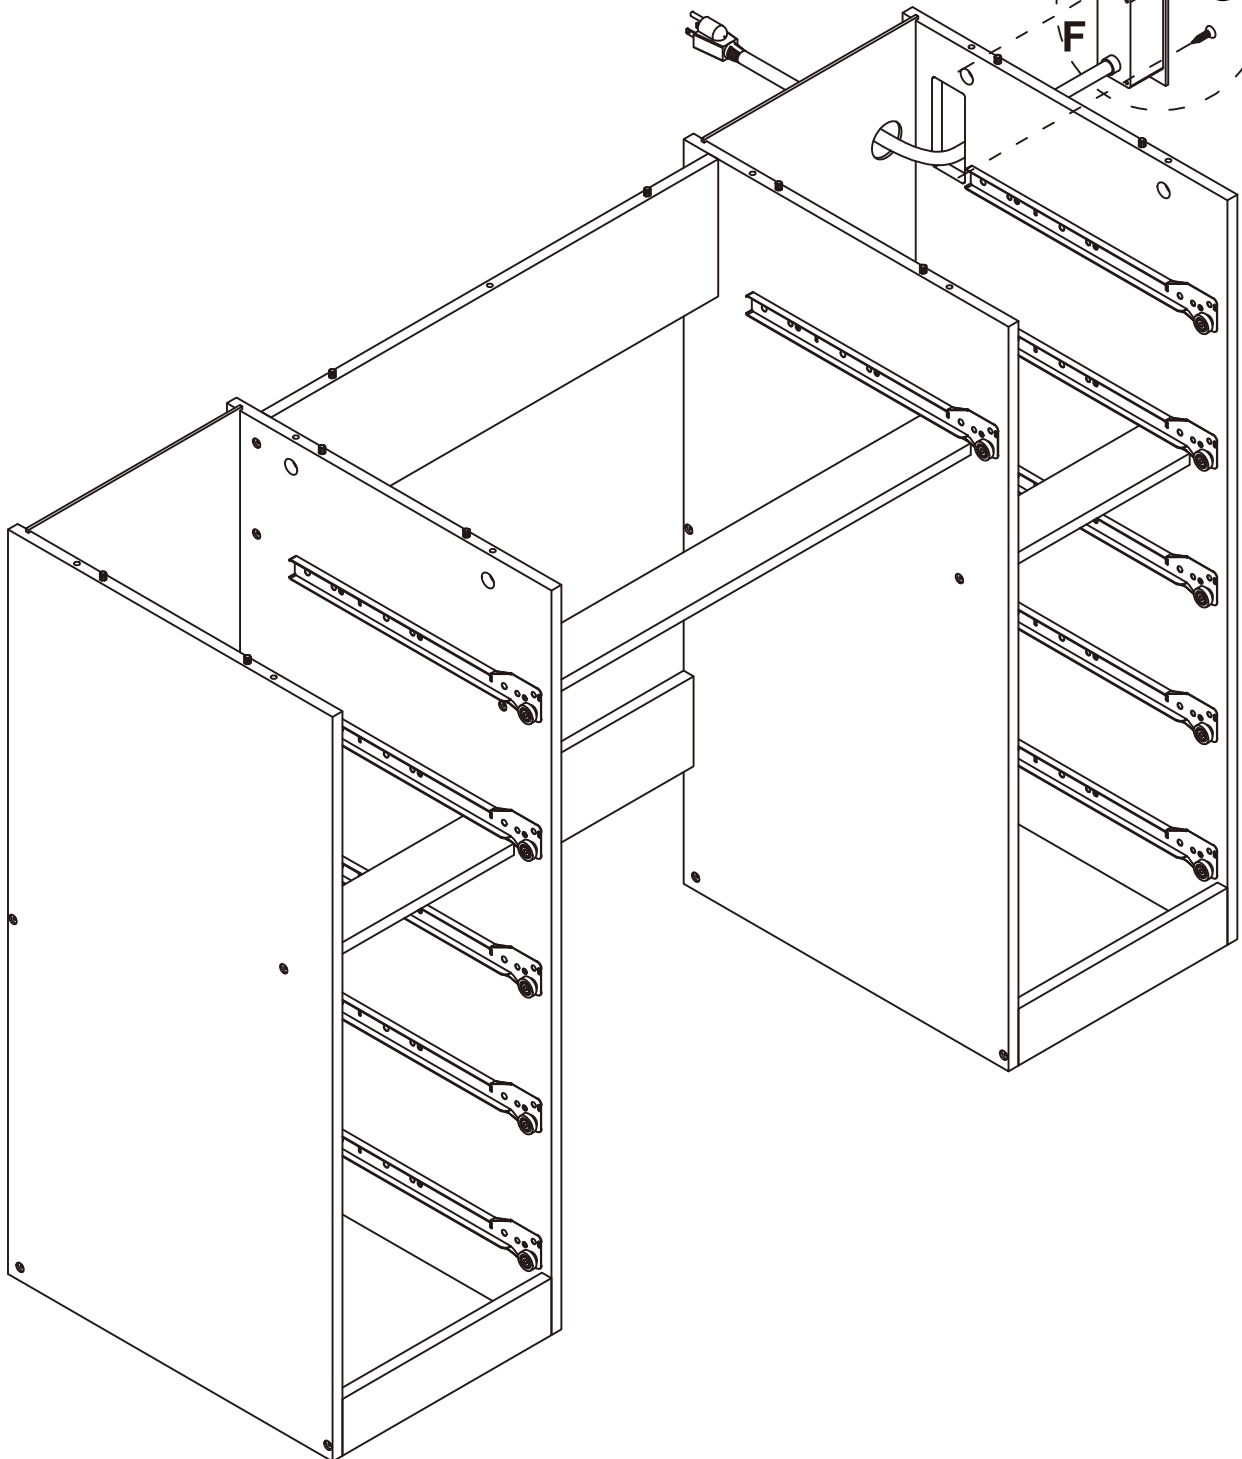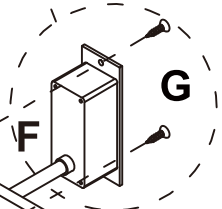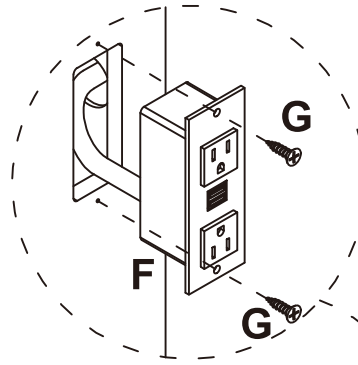

C x2




D x2

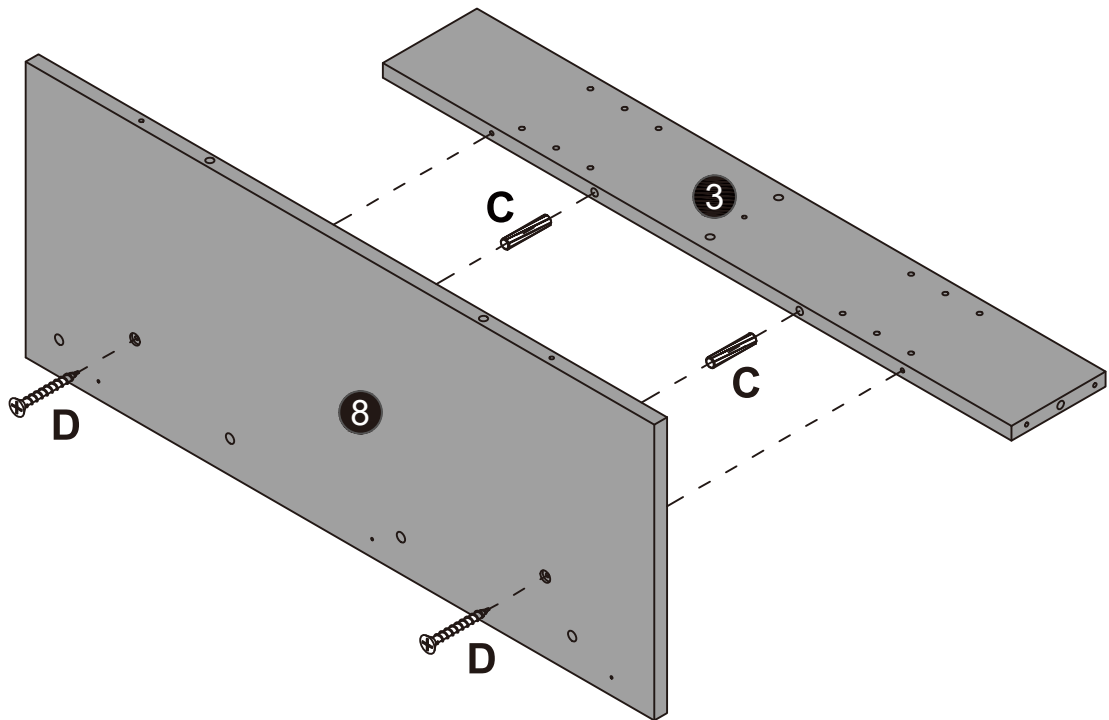

C x2





D x2

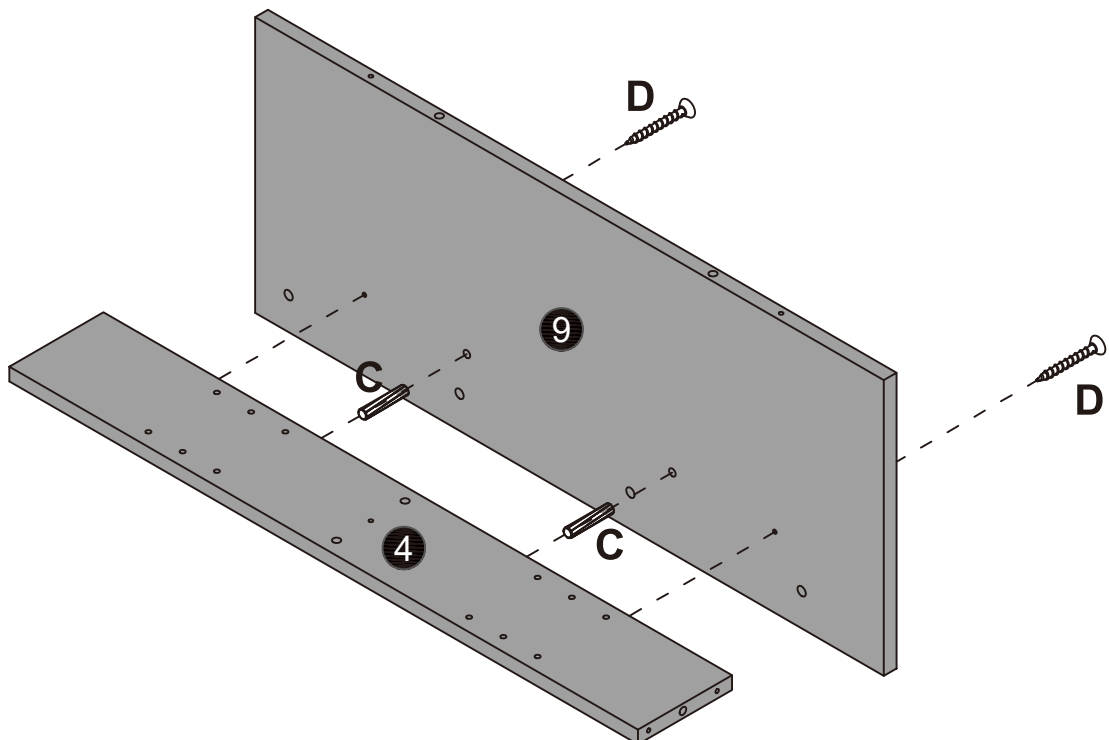

C x2





D x1

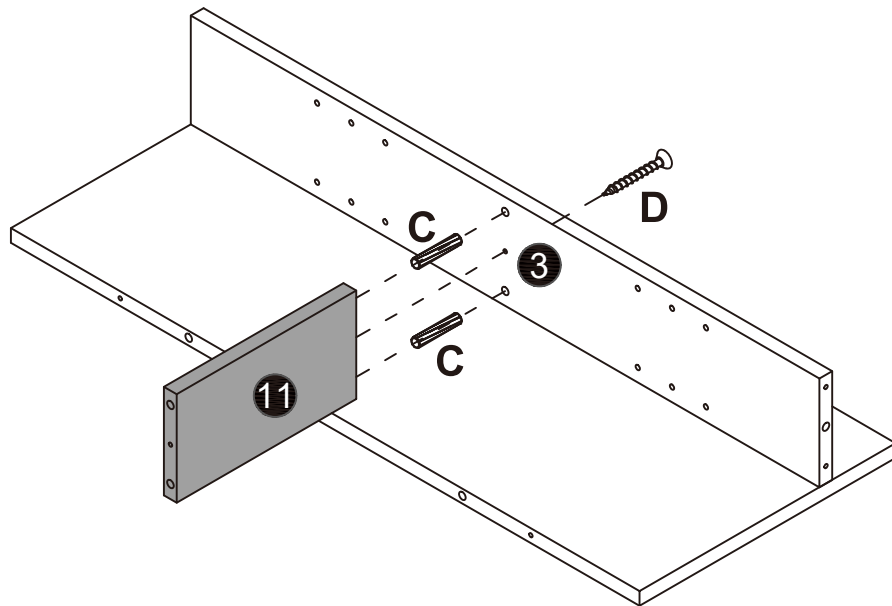

C x2





D x1

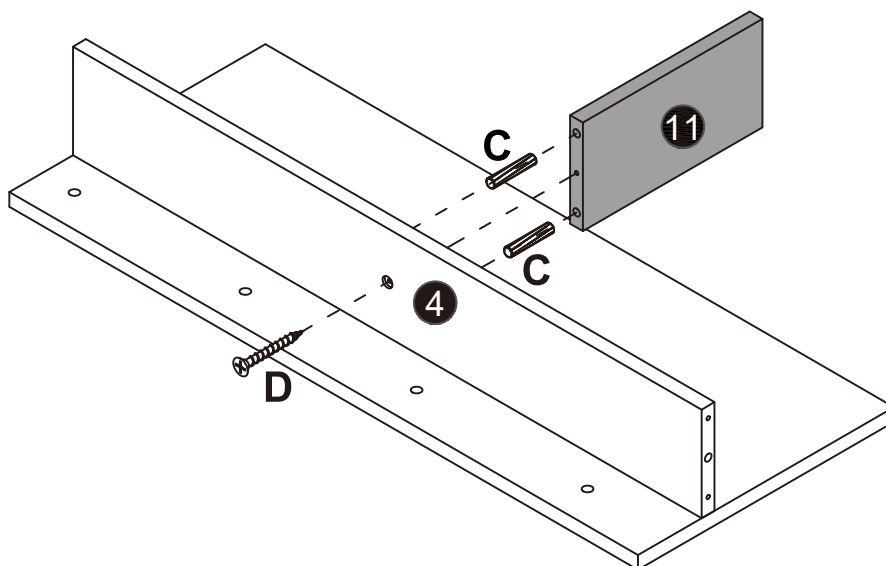



C x4

D x3

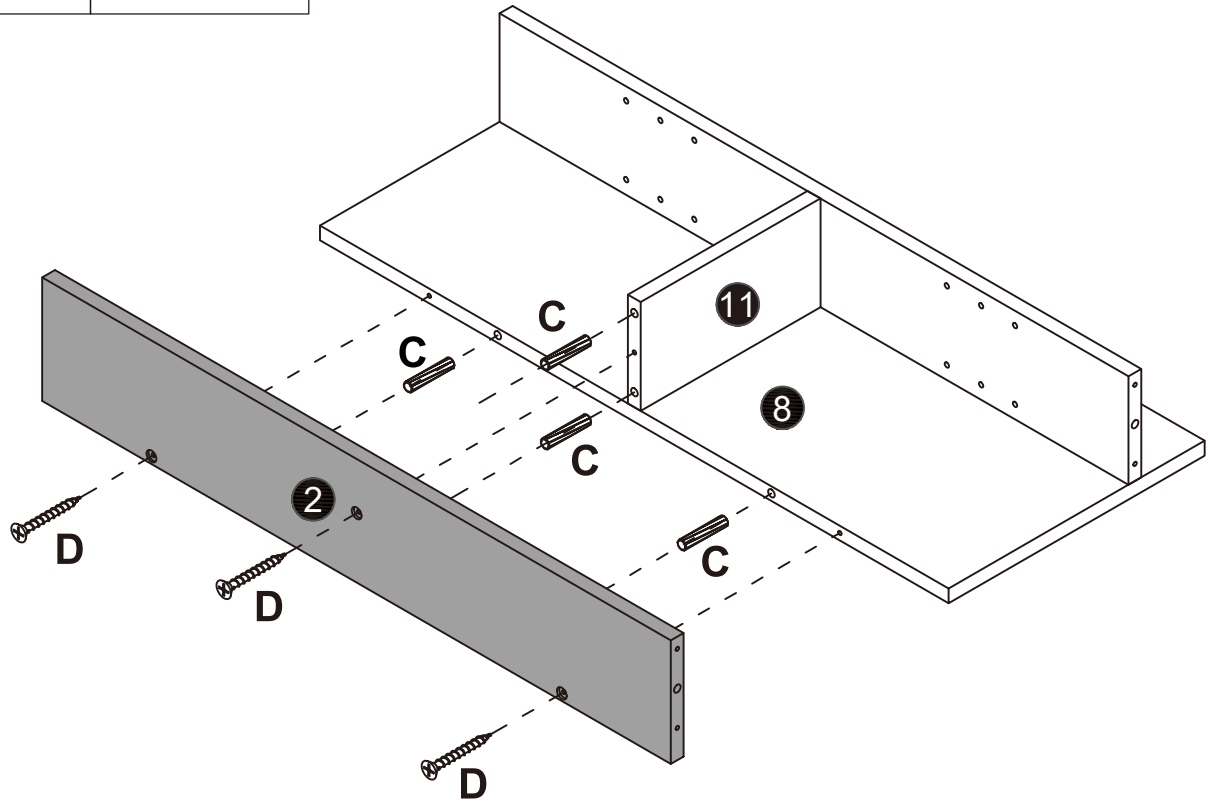


C x4



D x3

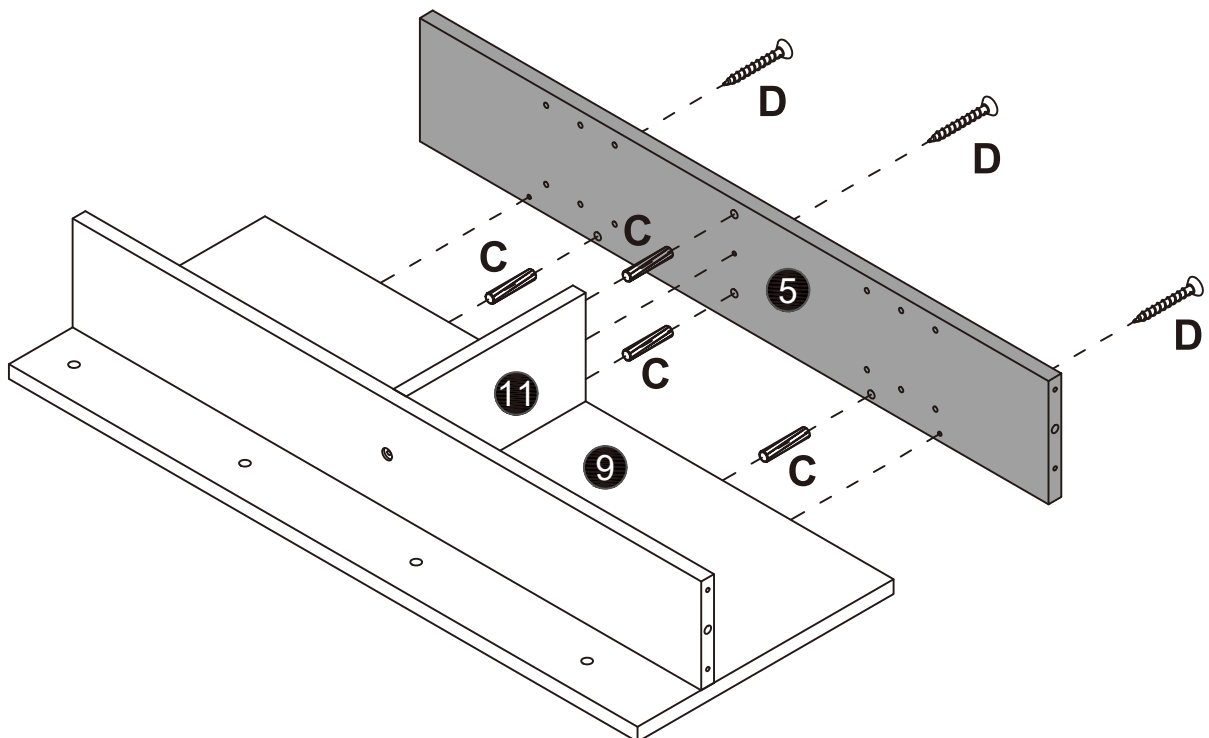




C x4






D x8

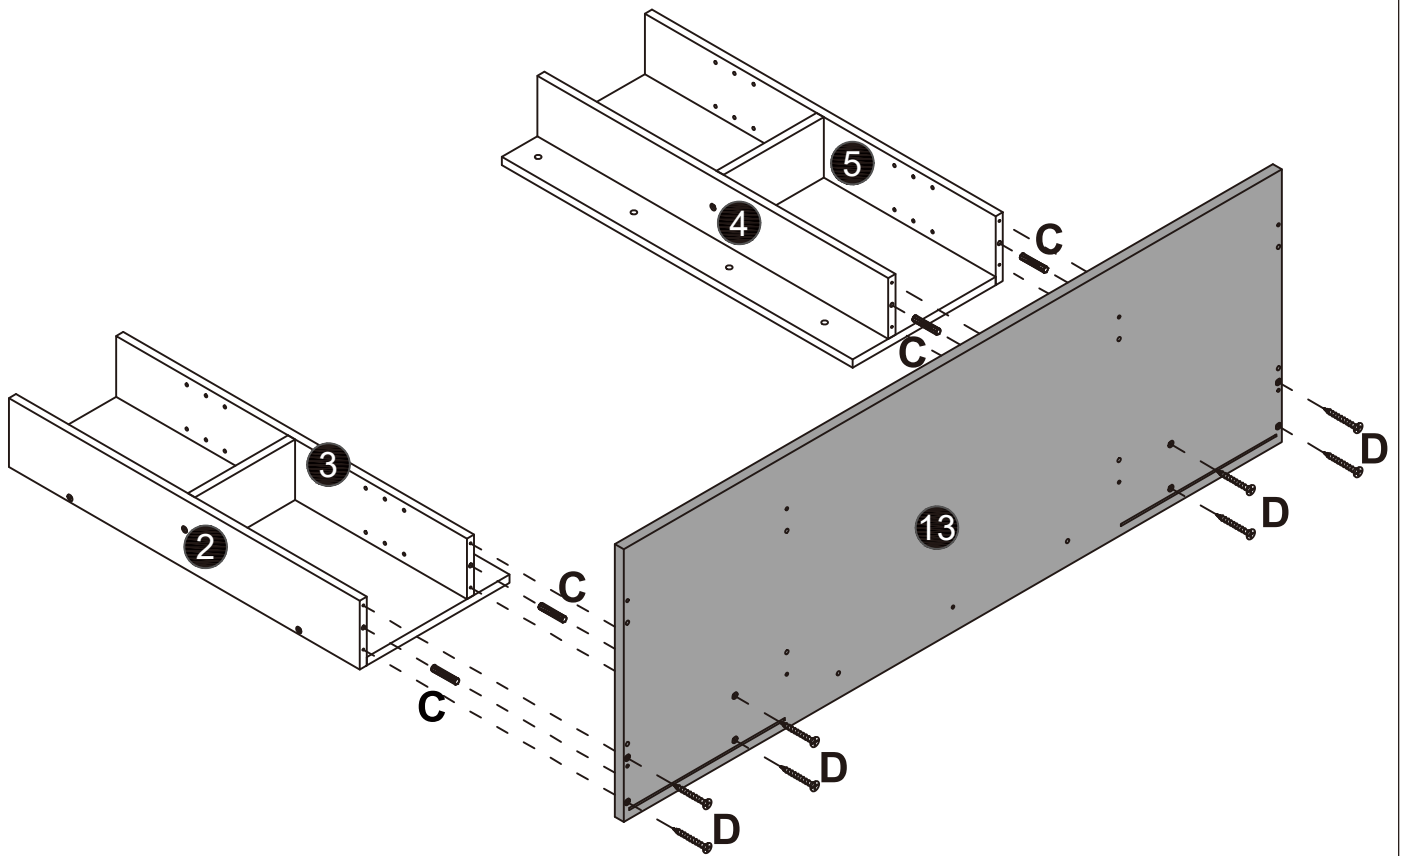

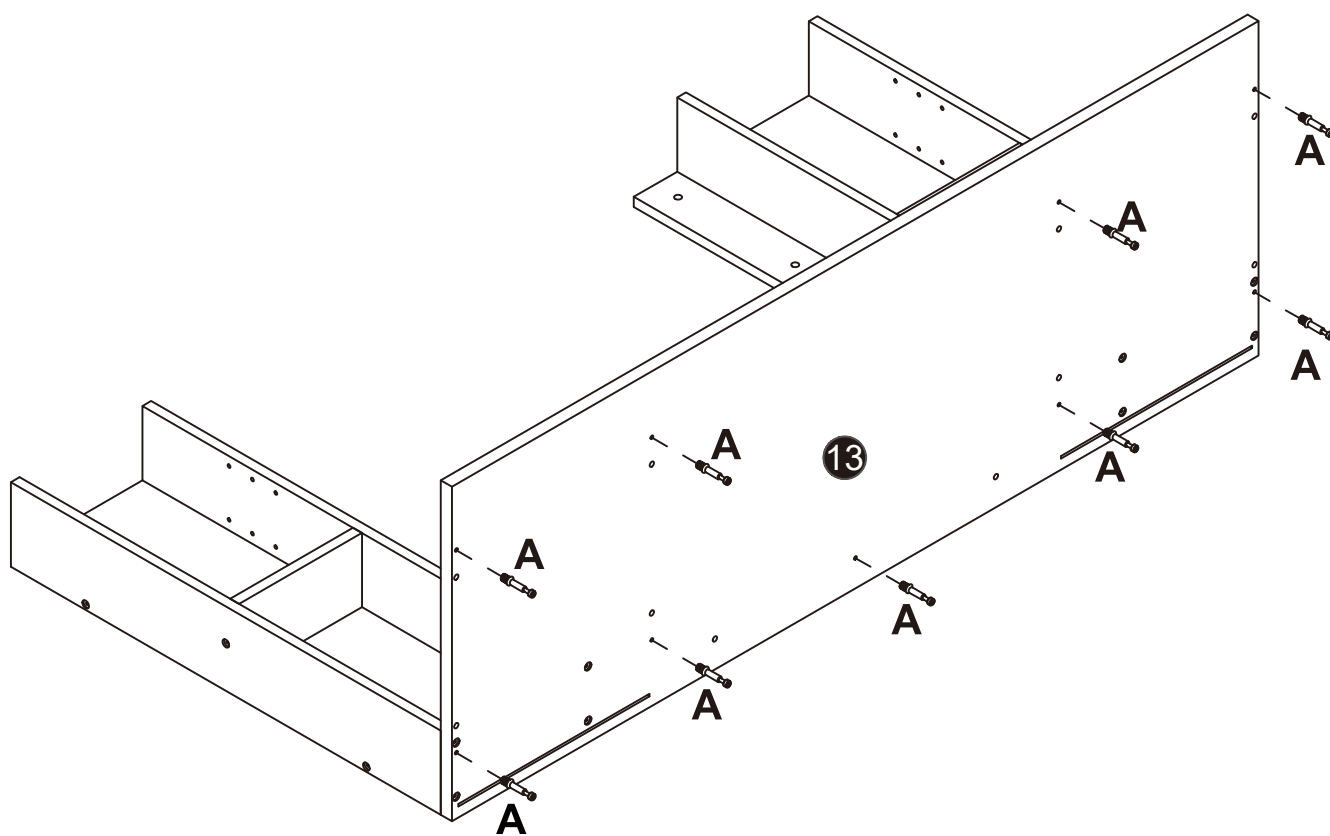

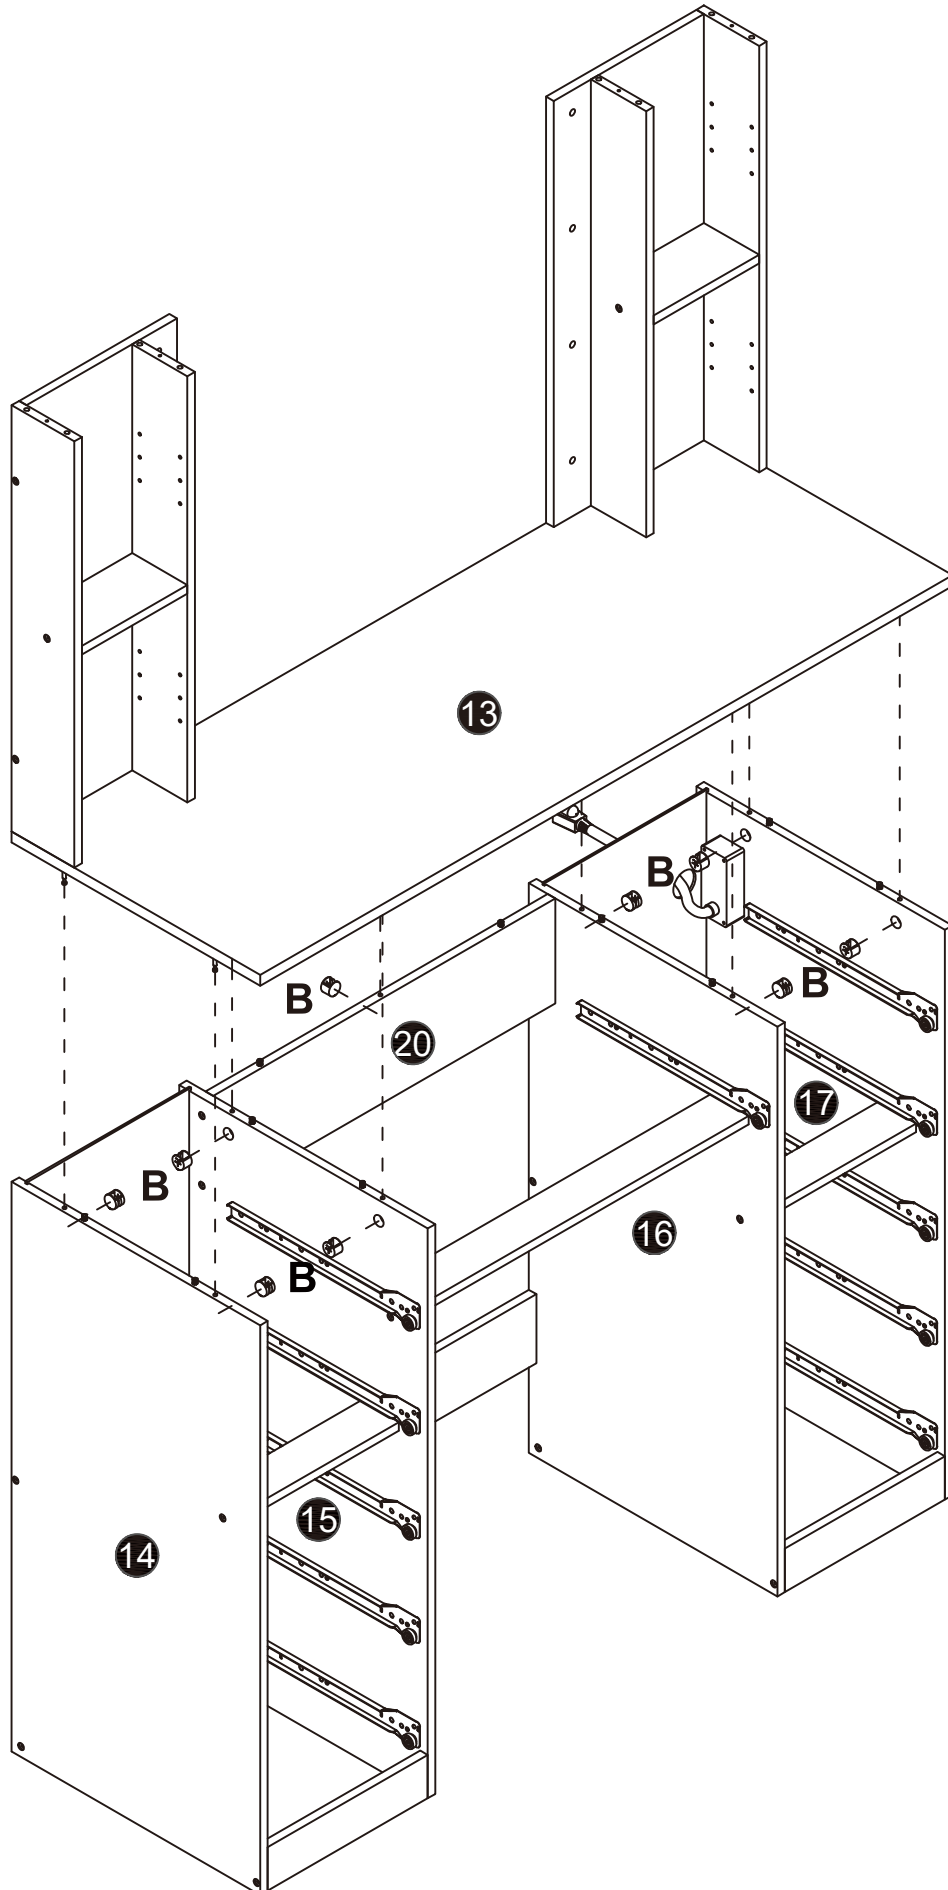

K x6

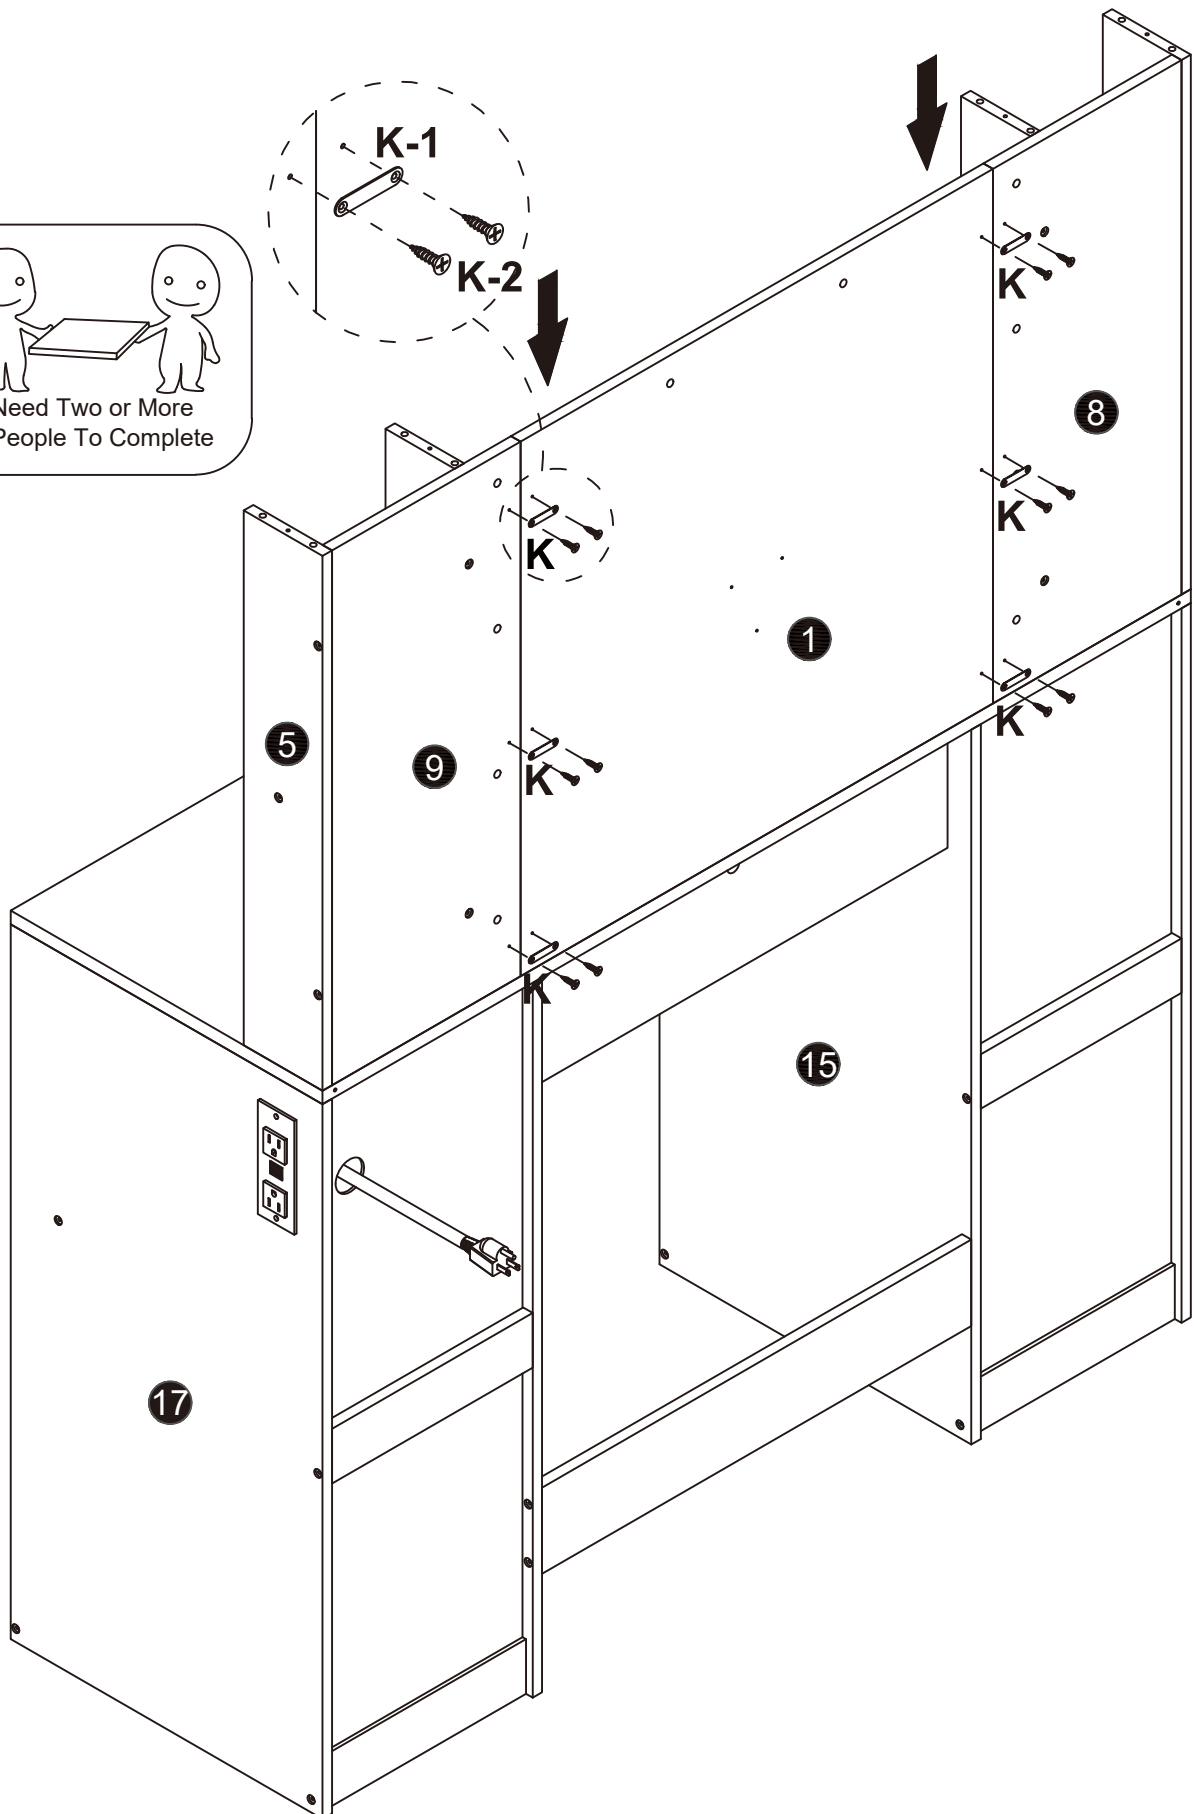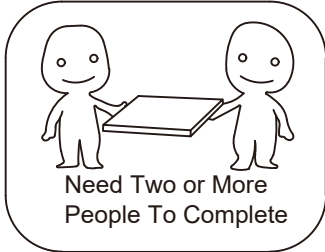


Q x10




Q-1



Q-2

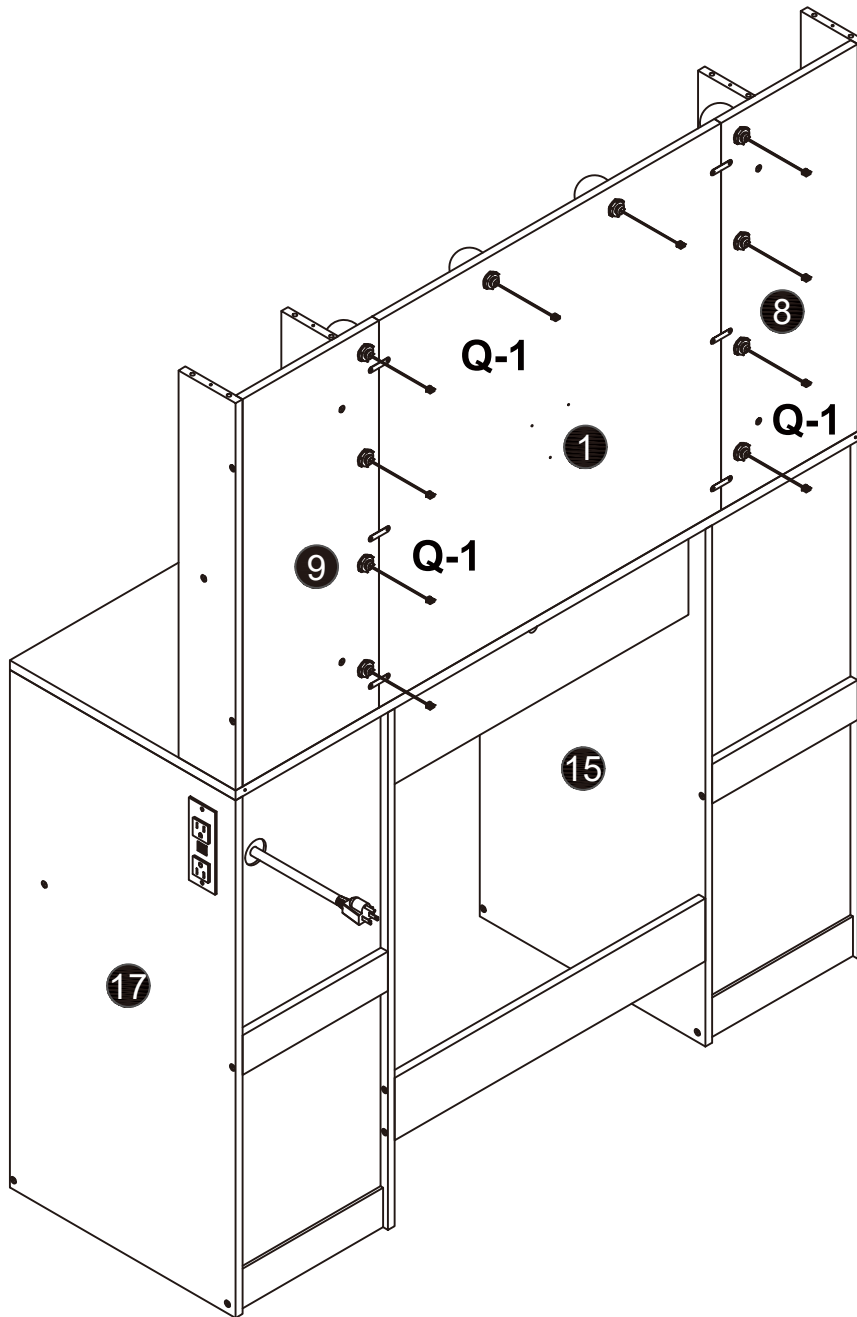


(1)

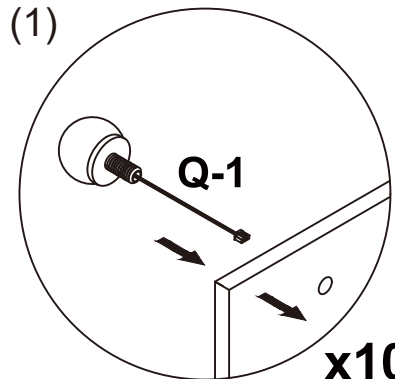


x10

(2)

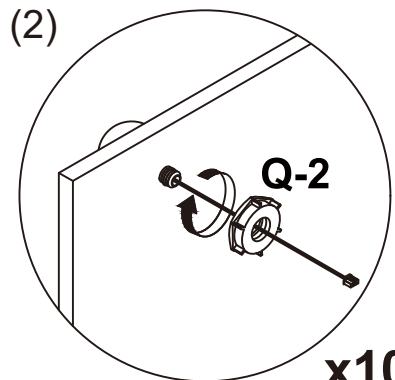

x10

(3)

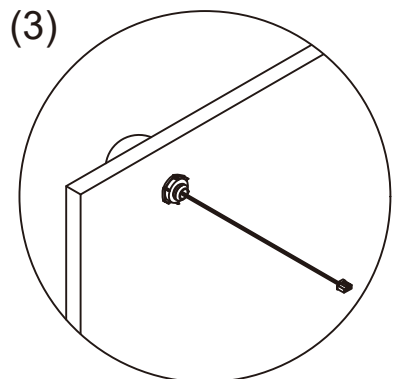

E x2

Q x1

L x1



Q-3




Q-4



L-1



L-2

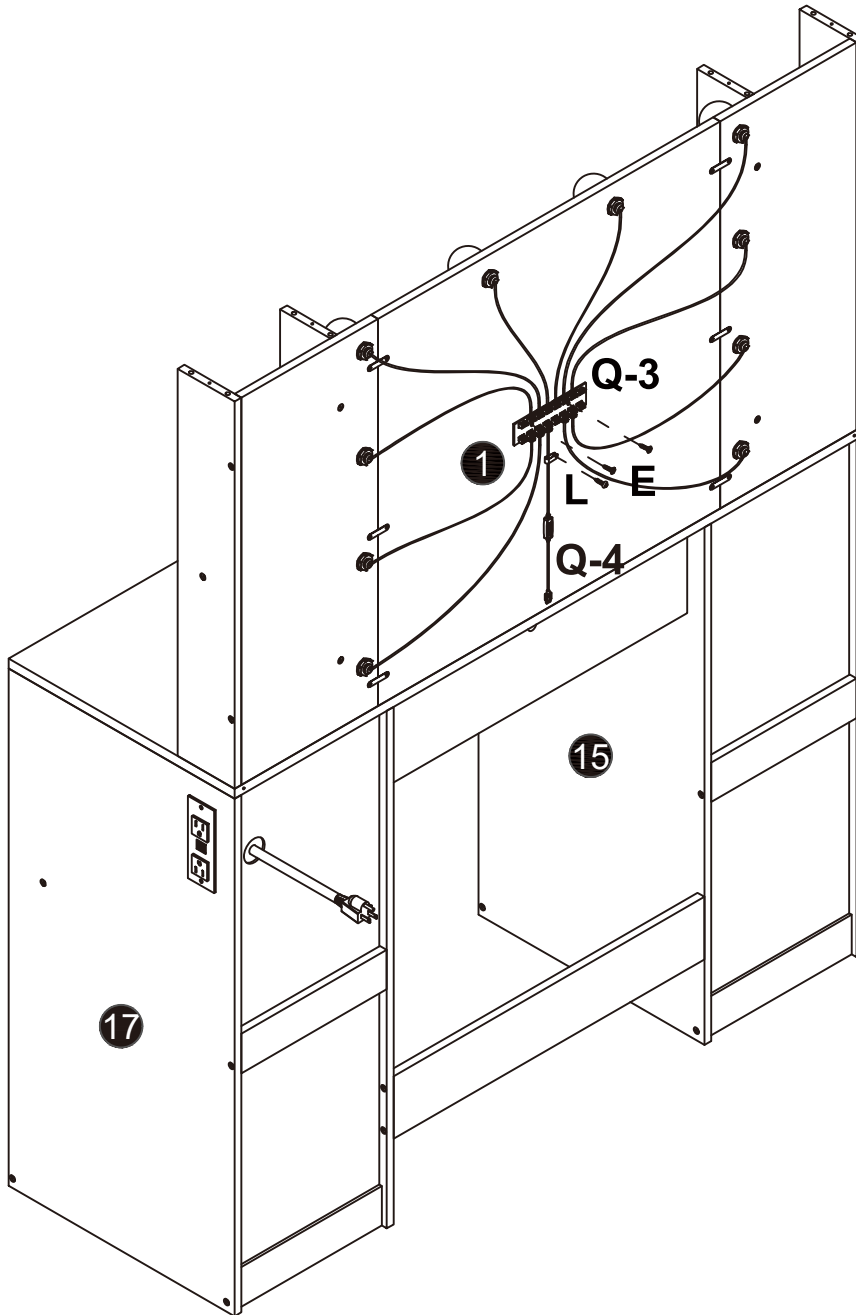

(1)

Q-1

Q-3

(2)

Q-1

Q-1

Q-3

Q-1

Q-1

Q-4

(3)

(4)

E

E

L-1

L-2


J x8



J-1




J-2

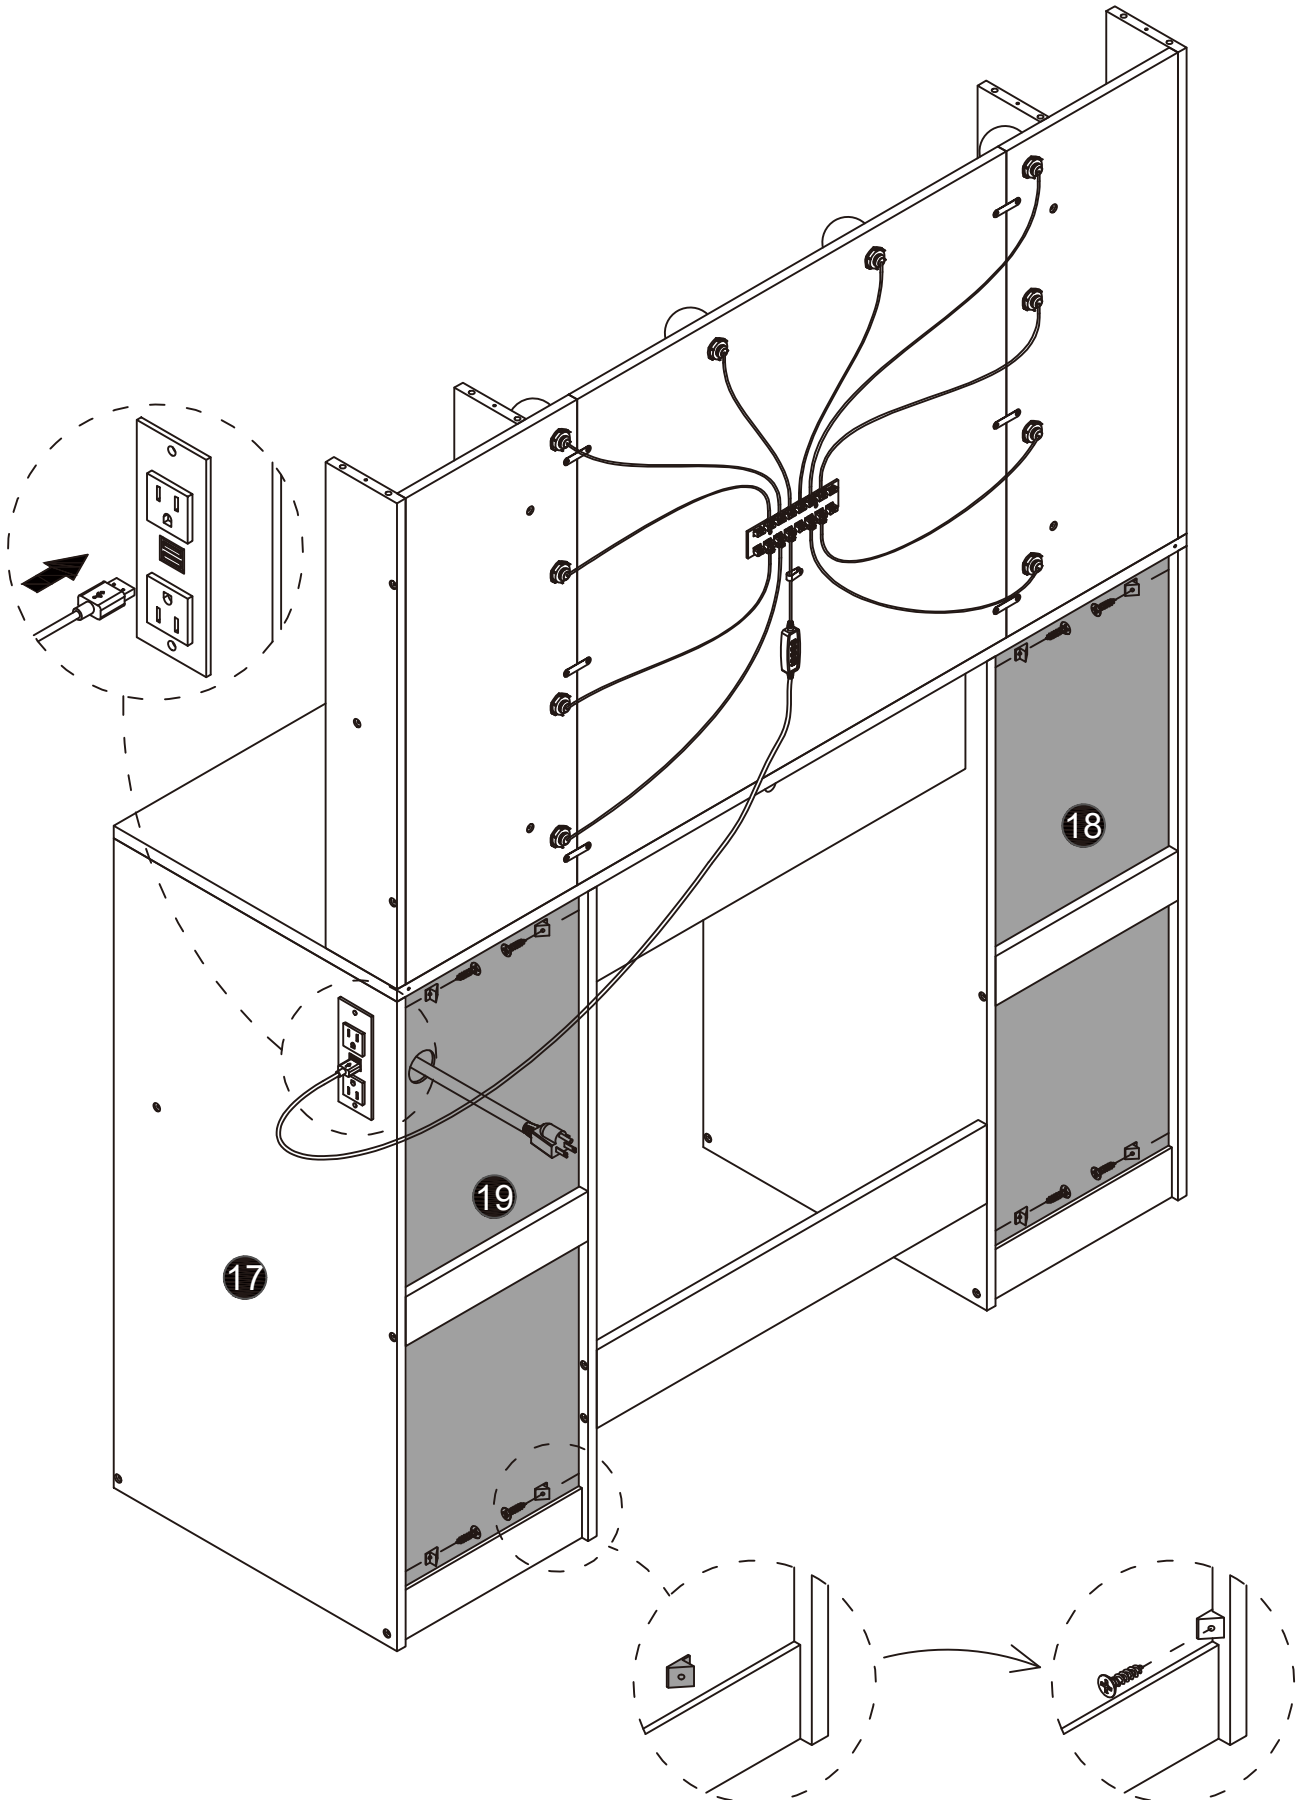


B x2




C x2




M x2





N x2

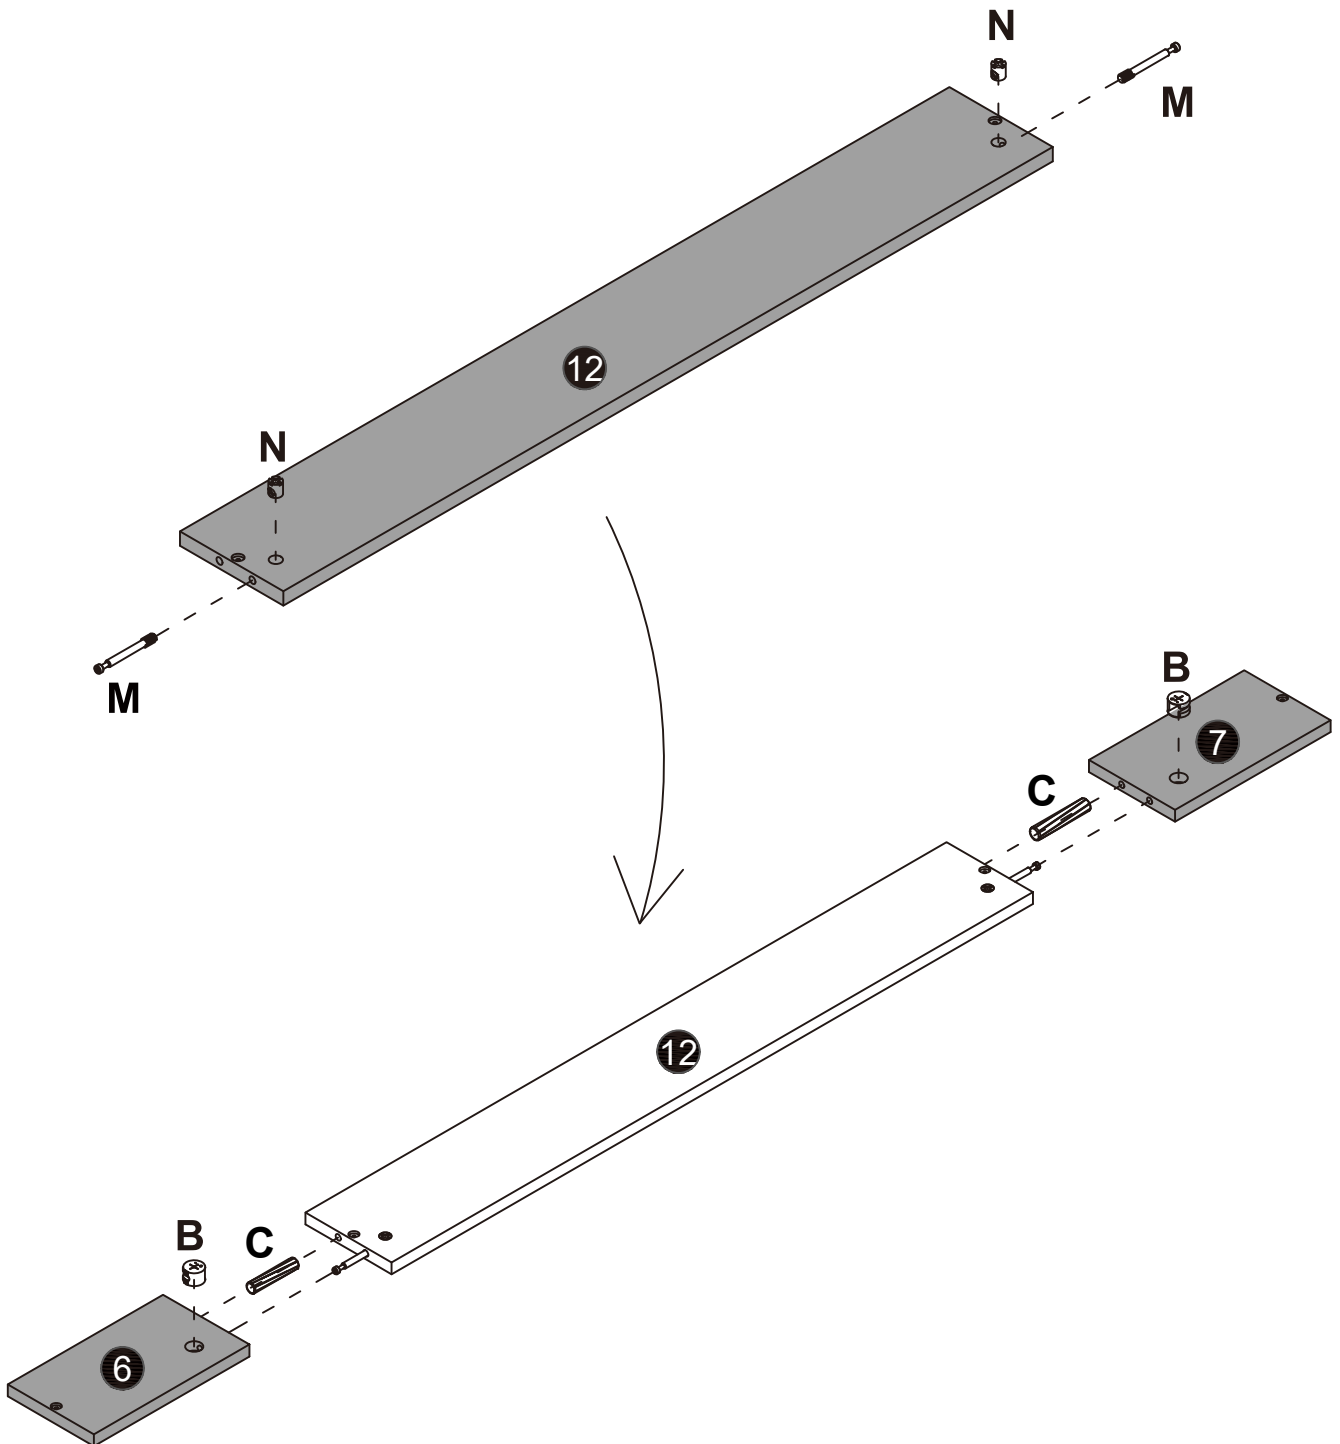


C x8




D x4


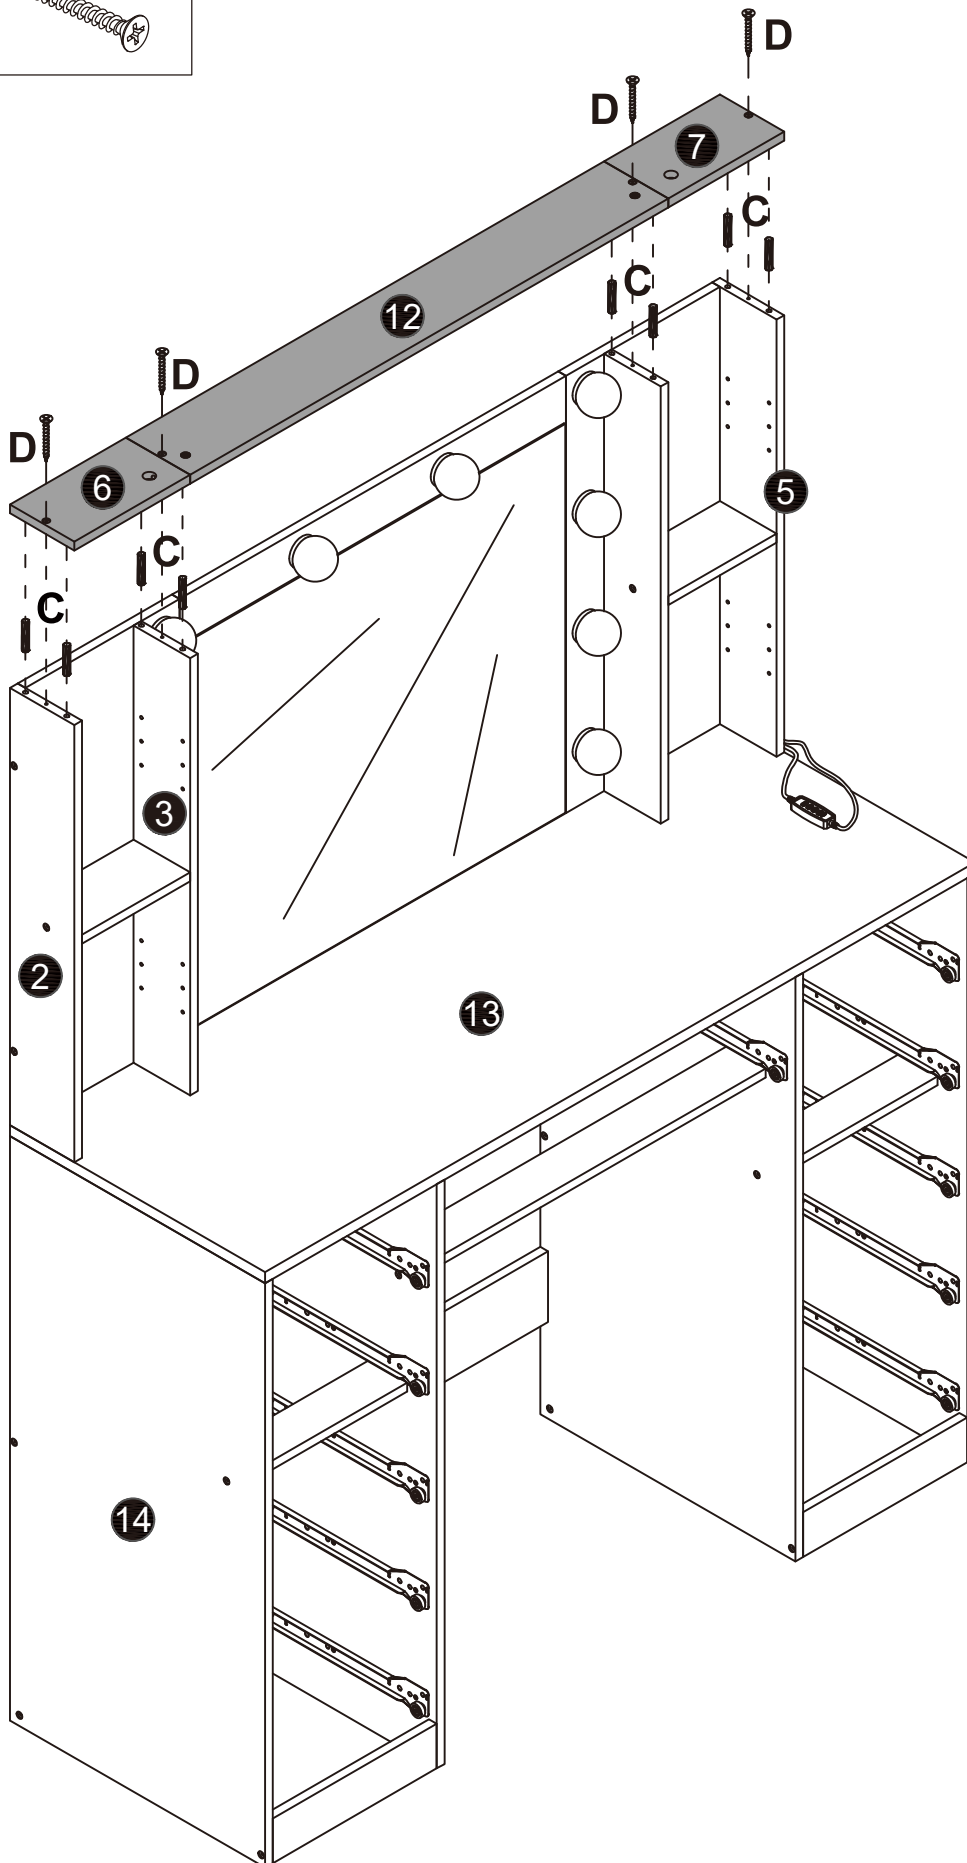



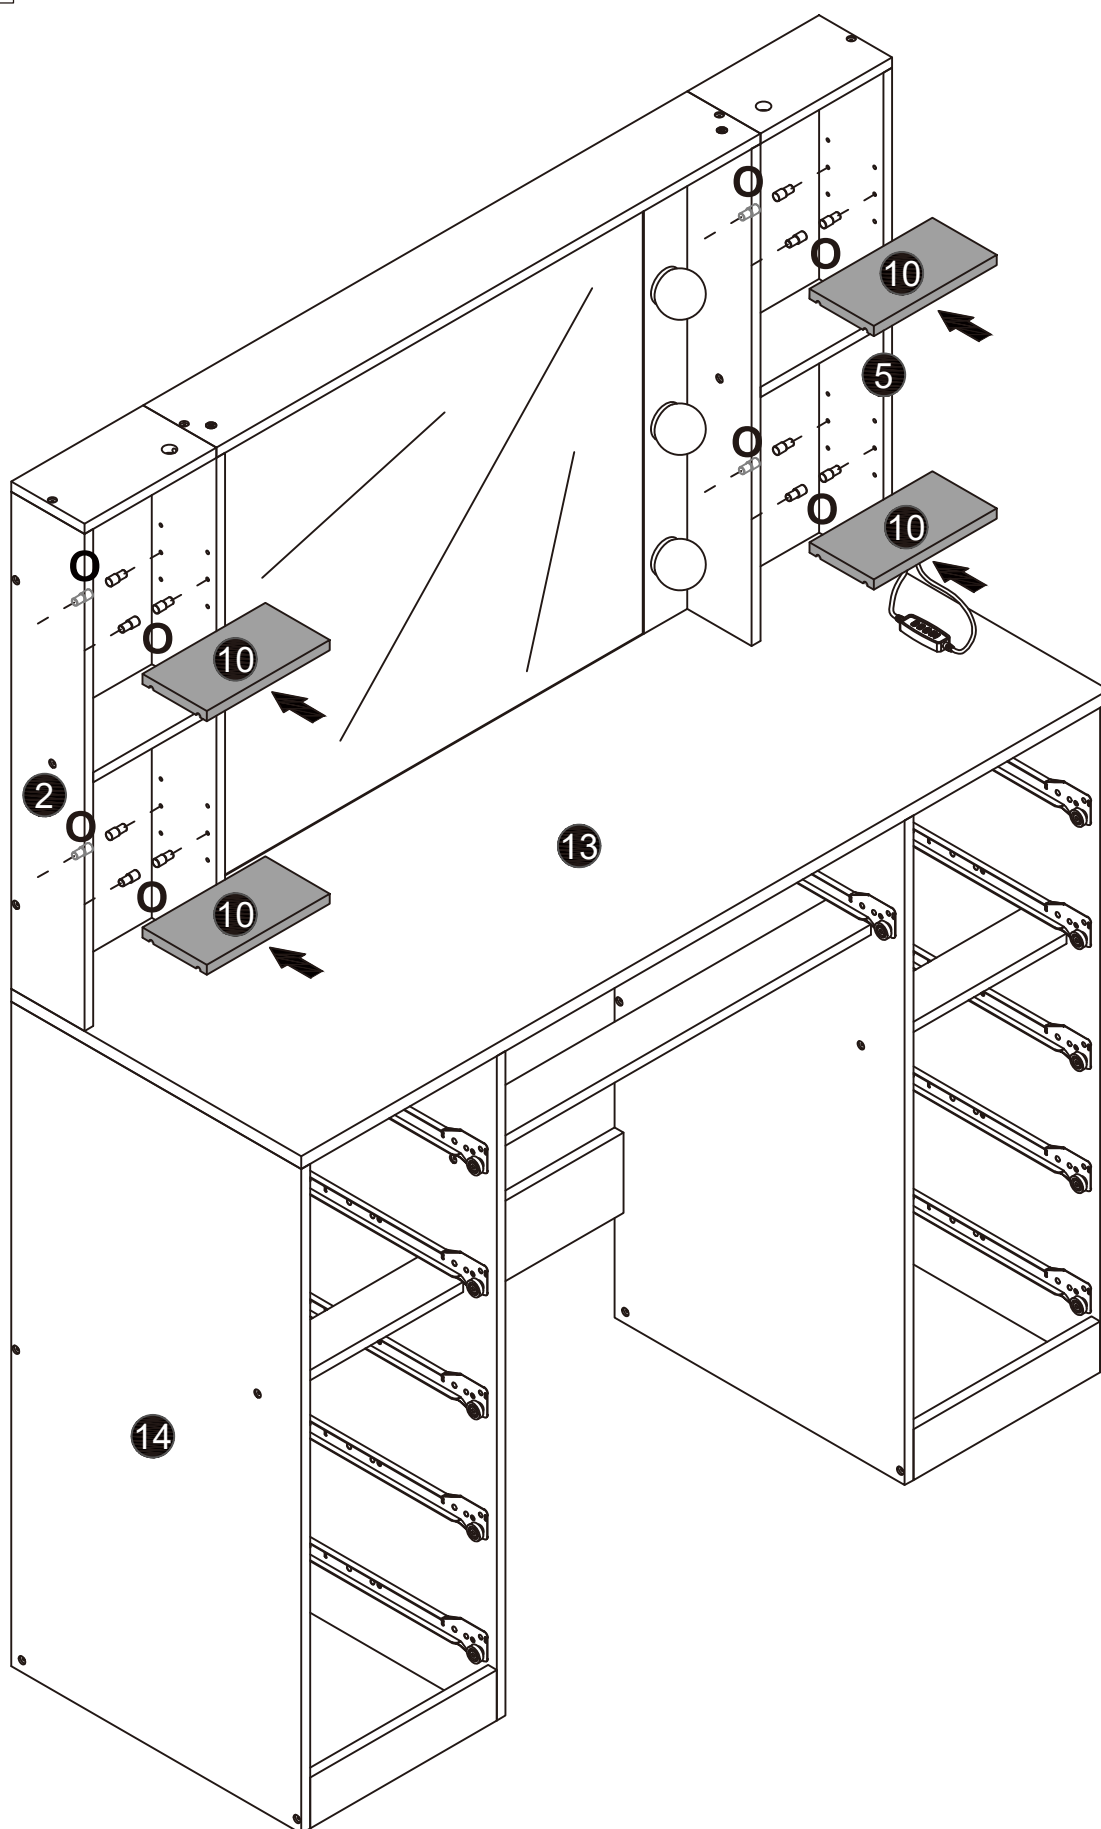


(1)

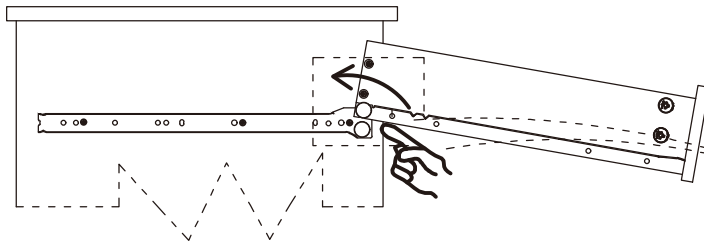


(2)

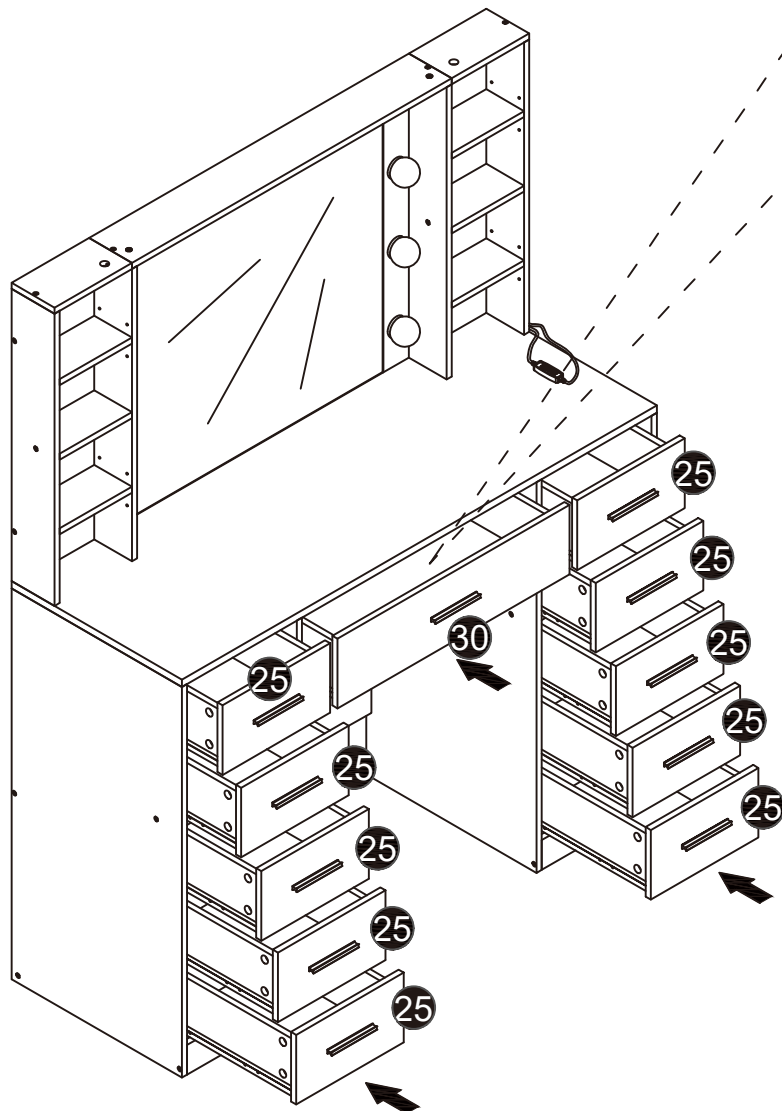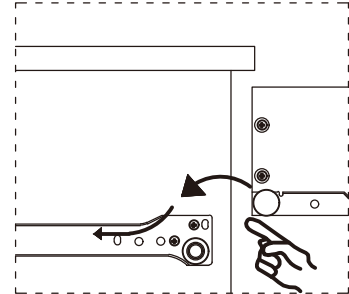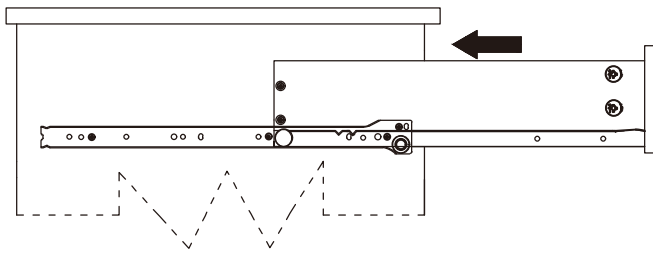

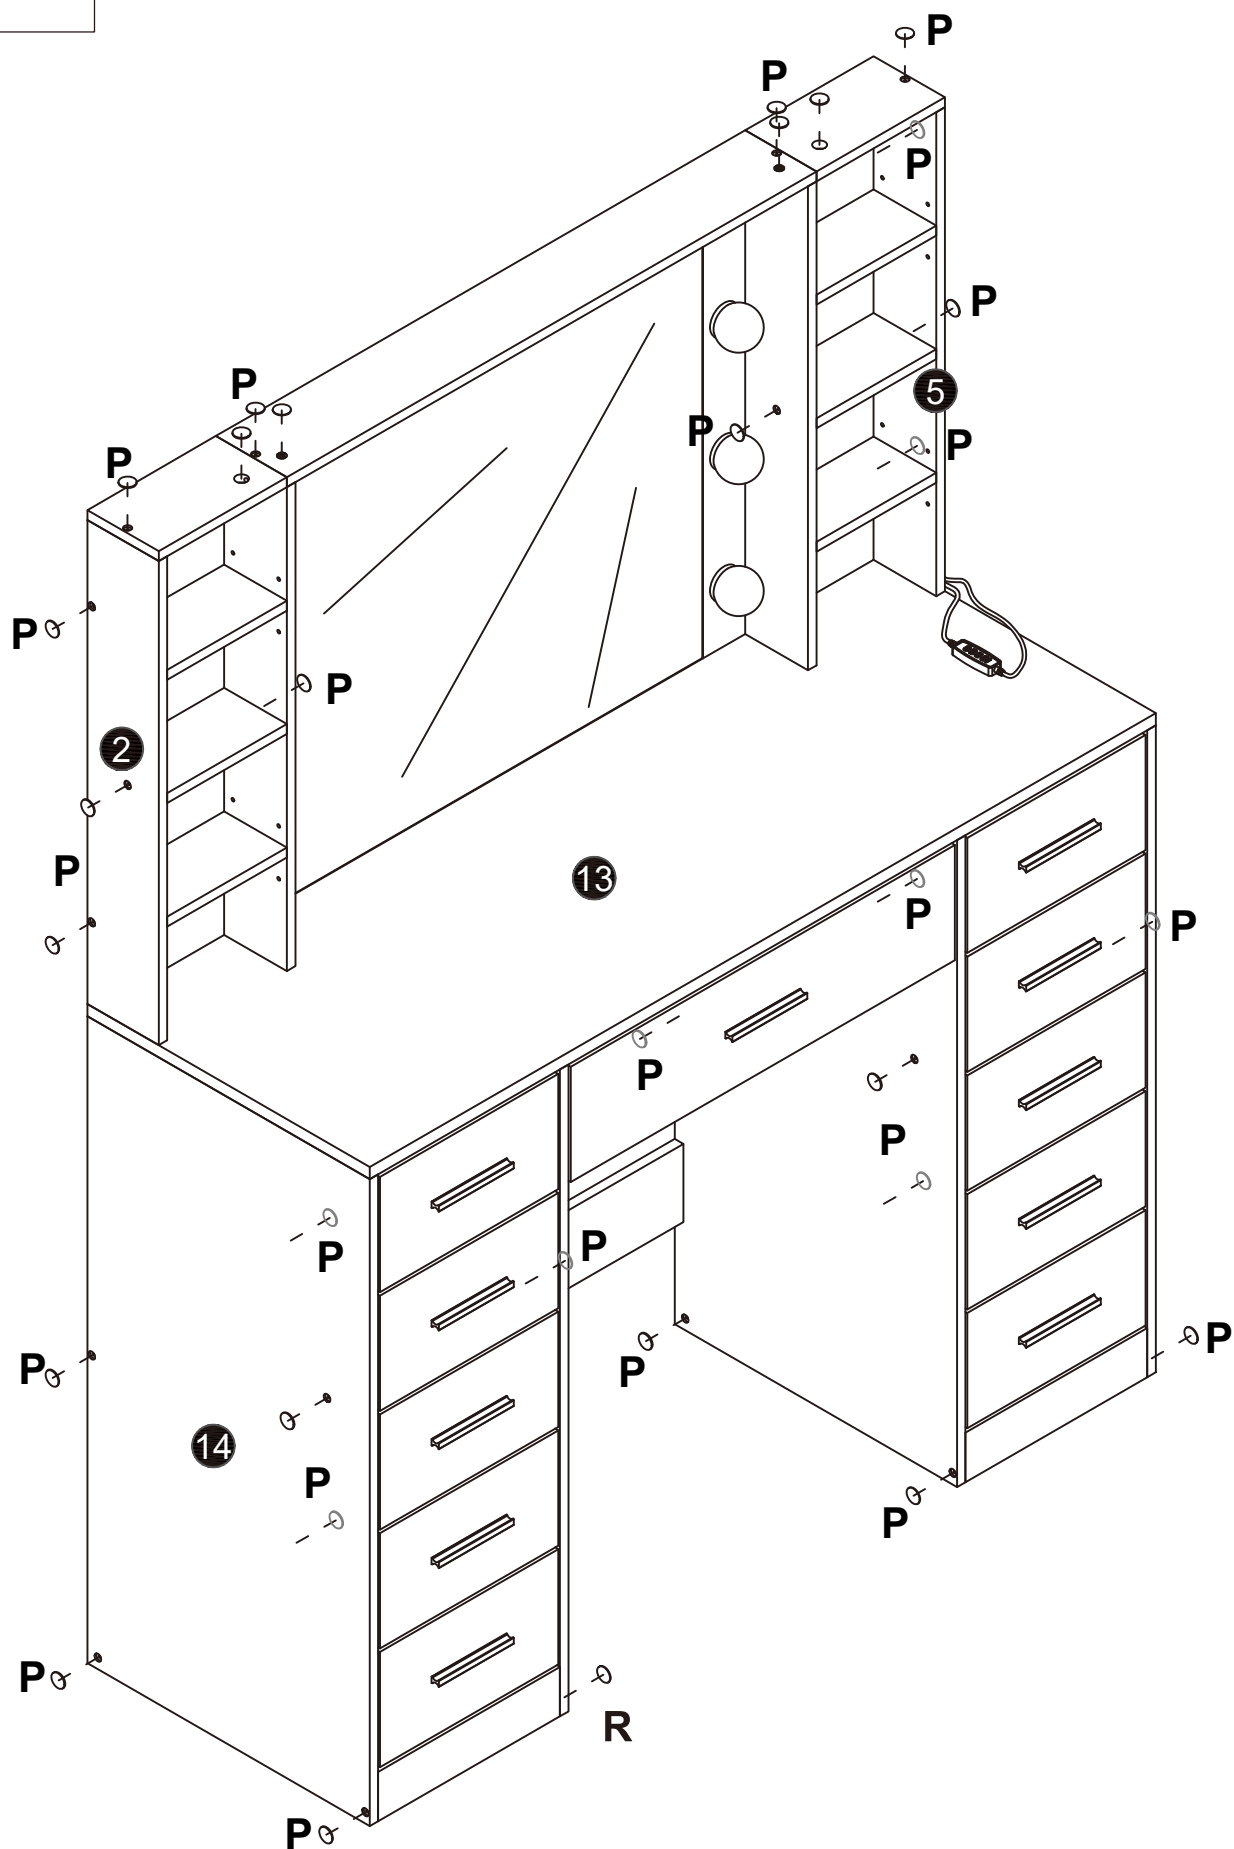

D x2



I x2



I-1



I-2



I-3

I-1

I-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

WALL

I-3

(4)x2

WALL

I-3

D

(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

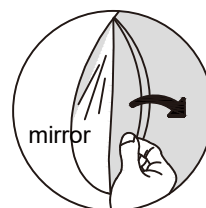

Please tear off the film on the outside of the mirror.

WALL

I-3

D

I-3

D

switch

