
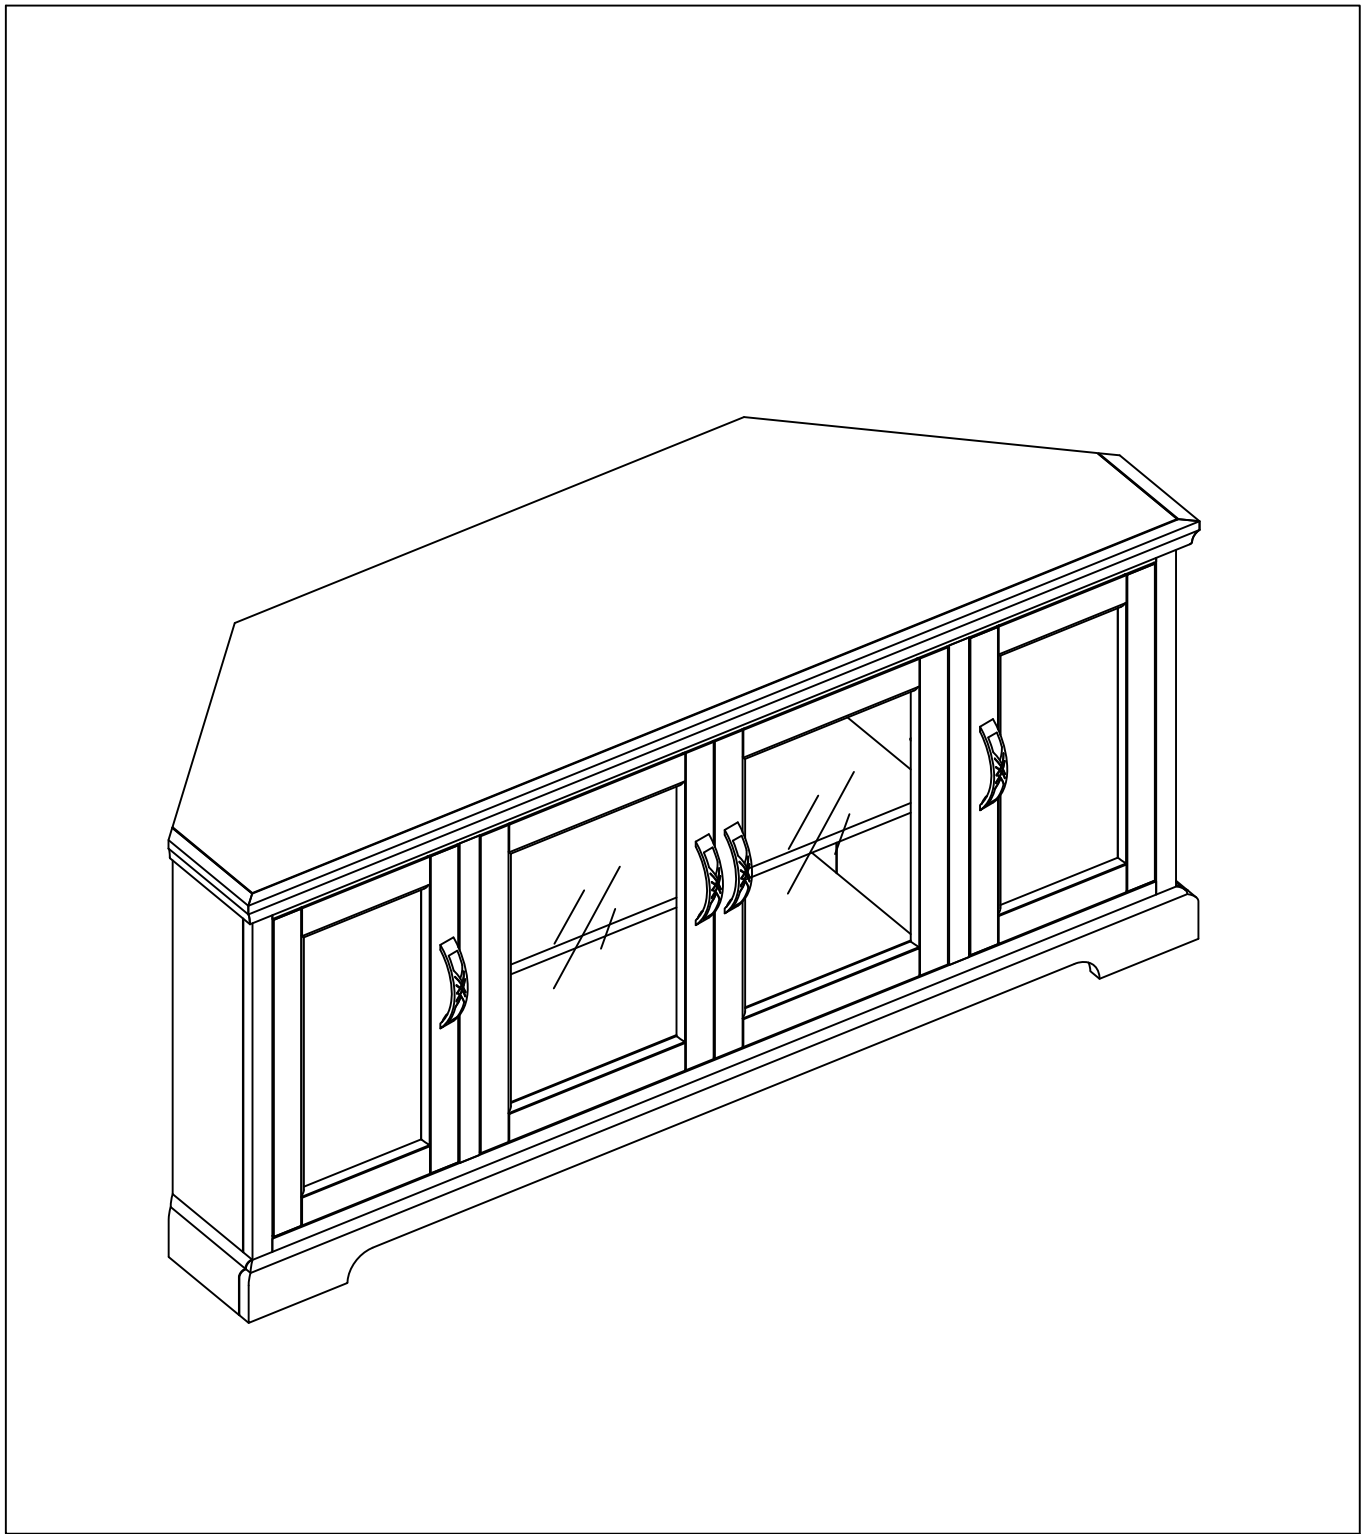

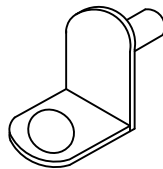











Transitional Gray 56" W Corner TV Console

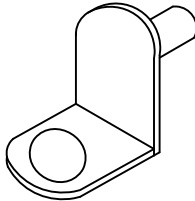

Hardware List

	Item	Description	Qty
a		Bolt 1/4" * 1-1/8"	4PCS
b		Allen wrench	1PC
c		Washer 1/4" * 12mm	4PCS
d		Shelf metal clip	12PCS
e		Bigger Shelf metal clip	2PCS
f		Door Pull	4PCS
g		Machine screw for door pull 5/32" * 3/4"	8PCS

Parts List

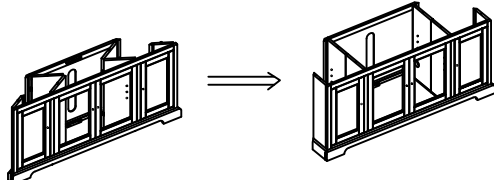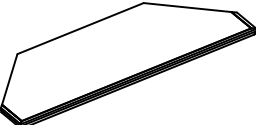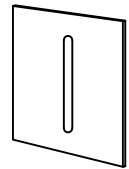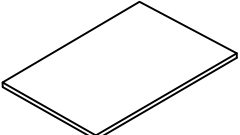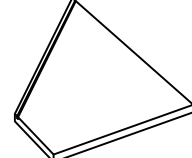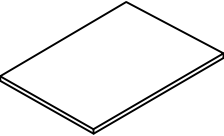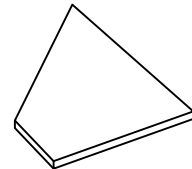
Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Side Back Panel	2PCS
D	 Middle Bottom Panel	1PC
E	 Left Side Bottom Panel	1PC
F	 Right Side Bottom Panel	1PC
G	 Middle Adjustable Shelf	1PC
H	 Left Side Adjustable Shelf	1PC
I	 Right Side Adjustable Shelf	1PC

Assembly Instructions

Two person assembly recommended.


step 1

Unfold Cabinet.

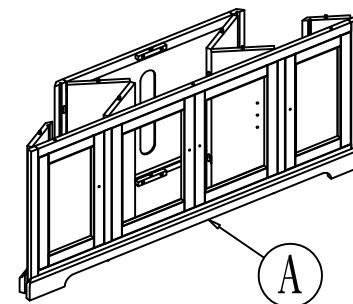


step 2

Install two bigger shelf clips on the side bottom.

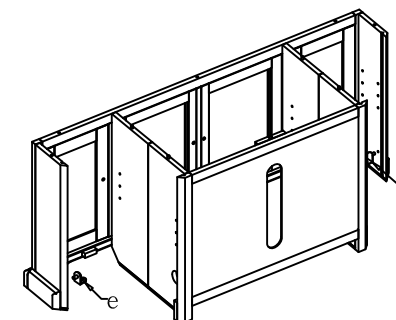


step 3

Open 4 doors. Insert the center bottom panel first, then insert the side bottom panel.

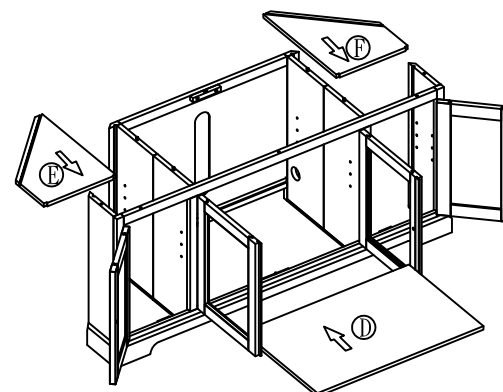


step 4

Insert two side back panels.

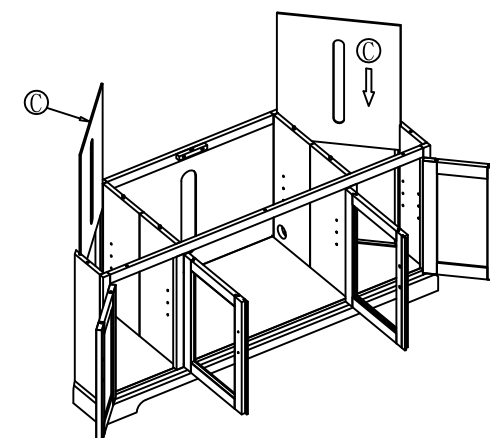

step 5

Bolt on top with 4 bolts.
DO NOT OVER TIGHTEN.

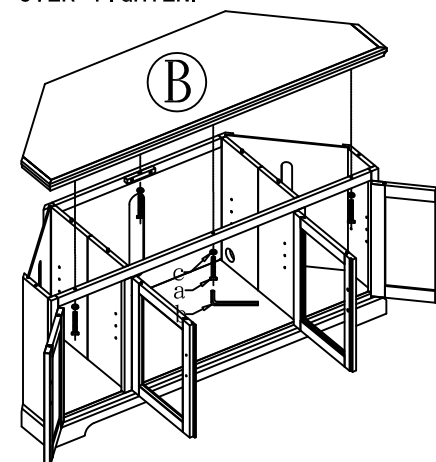

step 6

Install shelf clips and insert shelves and door pulls.

