




ASSEMBLY INSTRUCTION


NO.:DK-10305C

A	B	C	D
 M6*50mm×4	 M6×1	 ×1	 ×1


STEP 1

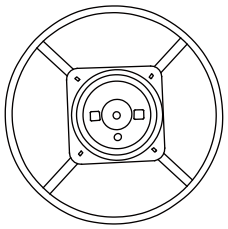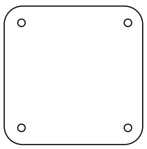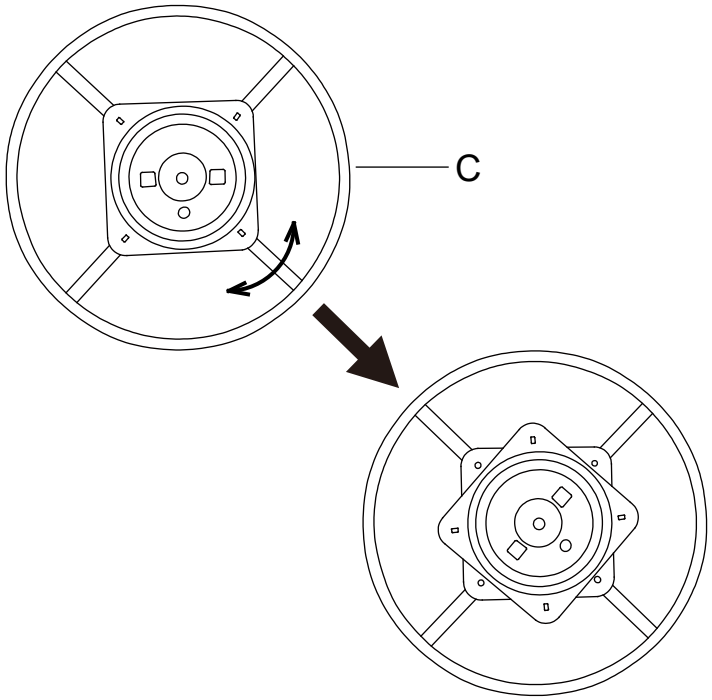

STEP 2

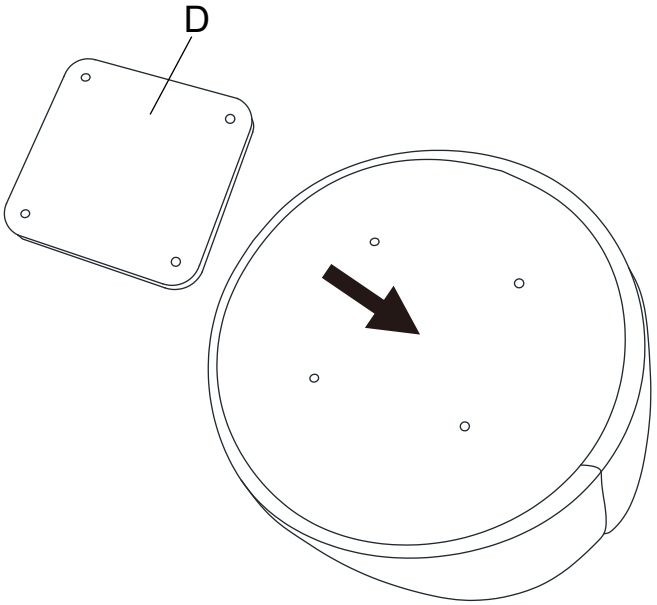

STEP 3

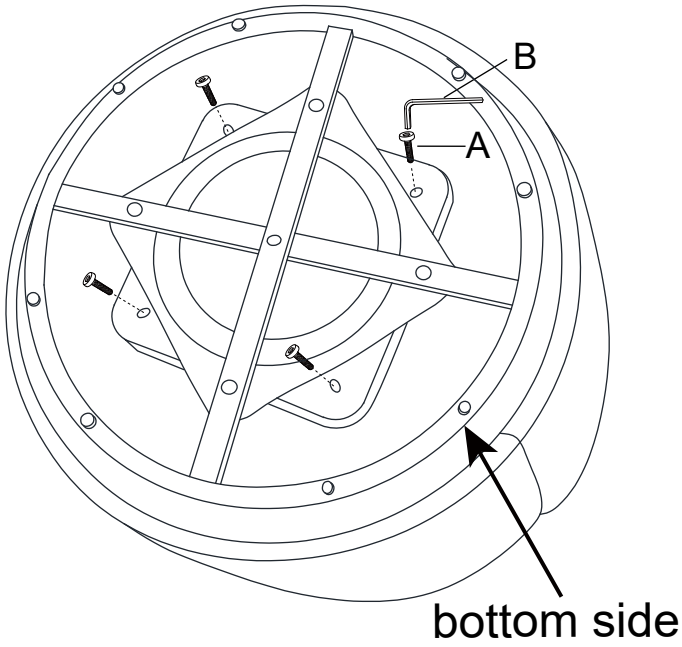

Align the four bolts with the holes and then tighten them.

STEP 4

