


ASSEMBLY INSTRUCTION

SKU CODE: N736P431419W/N736P431420W/N736P431421W

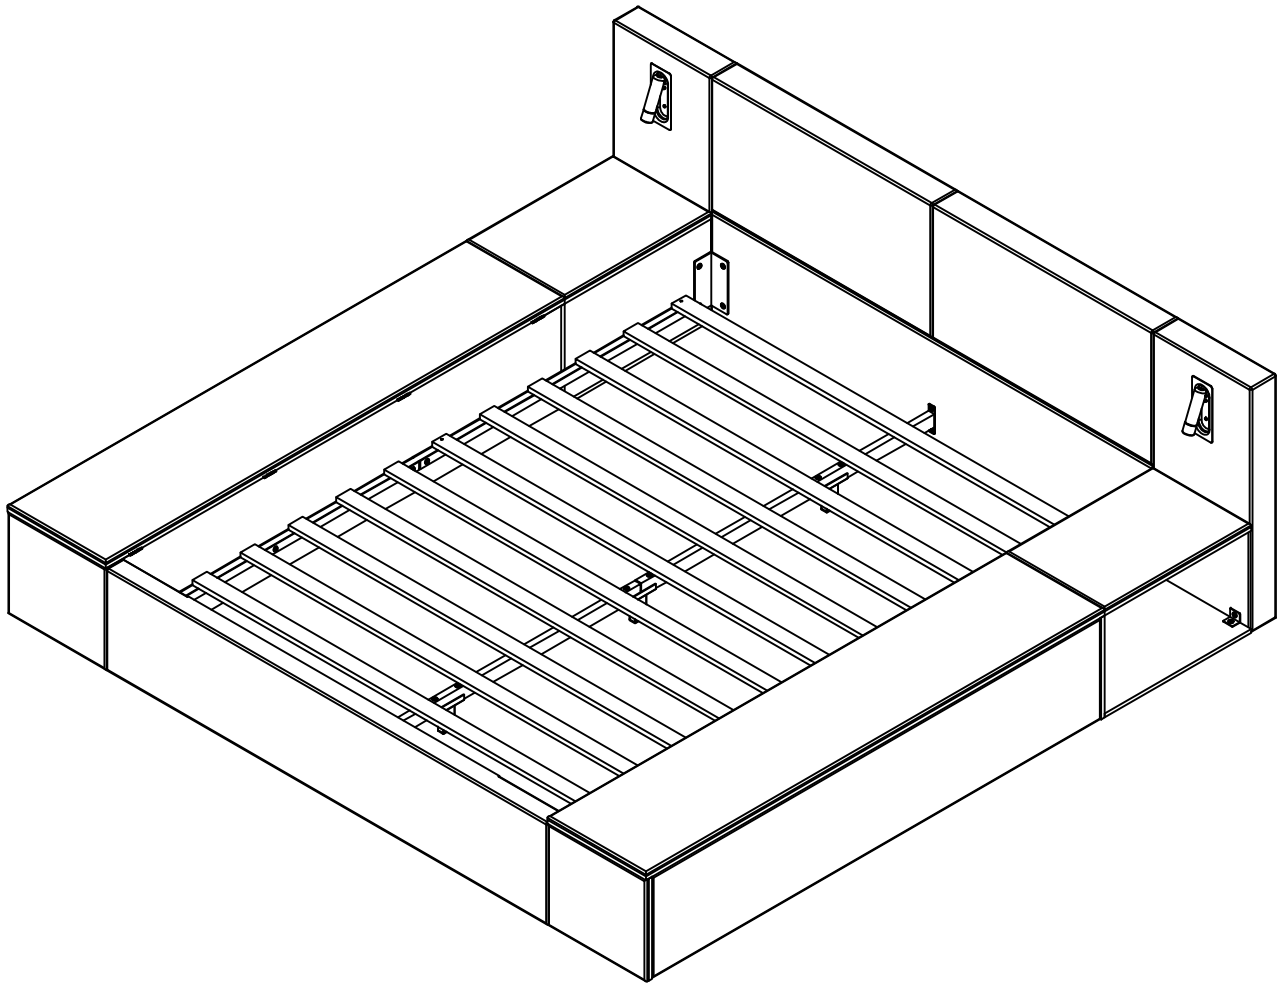

Our product will be delivered to you in 3 packages. The delivery times of these 3 packages may differ, please be patient and thank you for your understanding.

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.




- Do not write on furniture without a padded barrier to protect the surface



- Do not place furniture outside. For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.





- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth

UPHOLSTERED BED

N736P431419W/N736P431420W/N736P431421W

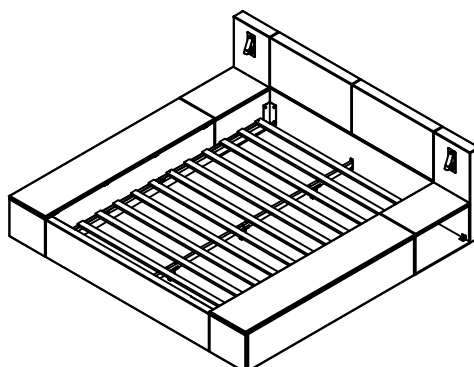

REQUIRED
ASSEMBLY TOOLS



NO POWER TOOLS
NEEDED




2 PERSON
ASSEMBLY

Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%. If you encounter these issues, such as if the holes cannot be aligned or some parts cannot be installed, please check if the screws are used correctly and adjust the tightness of the screws.

IMPORTANT! KEEP FOR FUTURE REFERENCE READ CAREFULLY

To be assembled by two adults. Assembly must be checked by an adult before use

- WARNING! Keep all screws, small parts and plastic bags out of the reach of children
- Properly identify all parts before assembling
- Never use your item if any of its parts are broken or missing
- Should any problems arise, please contact our After Sales Service
- Manufacturer's instructions shall be followed at all times
- Care: Clean with a soft, dry cloth, In case of larger stains, carefully rub with a slightly damp, non-abrasive sponge
- Avoid the risk of fire by not placing furniture near sources of ignition or hot items
- Do not jump on the bed

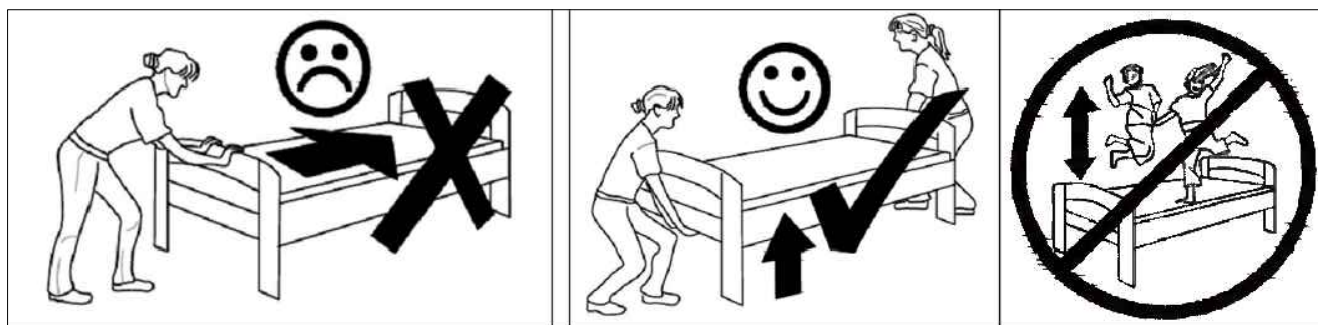



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed
NEVER place items with a string, cord, or ribbon such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts
ALWAYS follow assembly instructions



WARNING!

Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.











NOTE: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.








The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.









Parts List (Box 1 - N736P431419W)

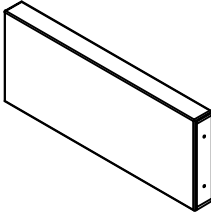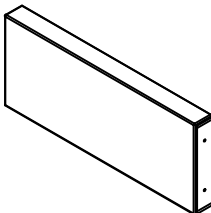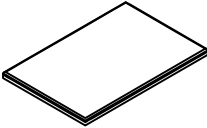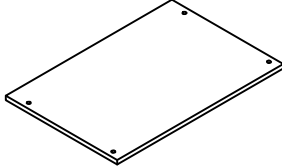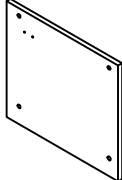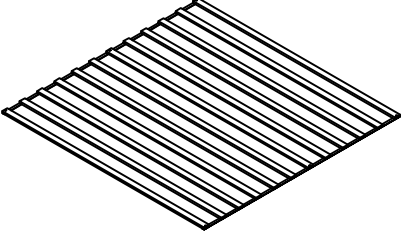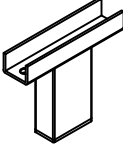④ x1pcs  Headboard left	③ x1pcs  Headboard right
②① x2pcs  Left and right side panels of the small cabinet	②② x2pcs  Left and right side panels of the small cabinet
①② x1pcs  Front panel on the left side of the cabinet	①① x1pcs  Front panel on the right side of the cabinet
①④ x1pcs  Back panel of the left cabinet	①③ x1pcs  Back panel of the right cabinet
⑨ x1pcs  Slats	①⑩ x3pcs  Center legs


Parts List (Box 2 - N736P431420W)

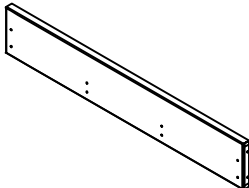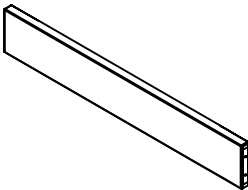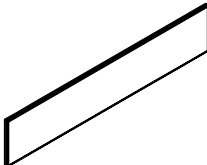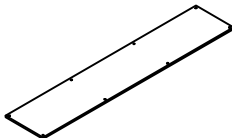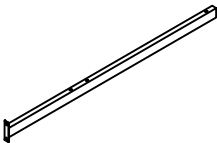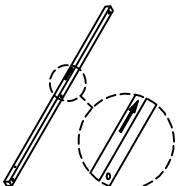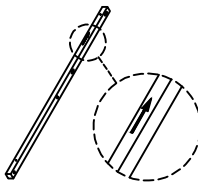② x1pcs  Lower headboard	① x1pcs  Footboard	
⑮ x1pcs  Left and right front panel of the cabinet	⑱ x2pcs  Left and right cabinet bottom panels	
⑧ x2pcs  Slat supports	⑦ x2pcs  Side support 1	⑫ x2pcs  Side support 2



Parts List (Box 3 - N736P431421W)

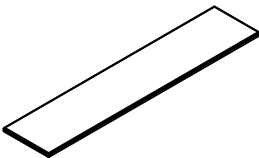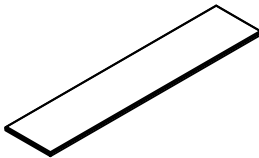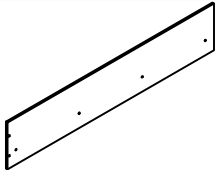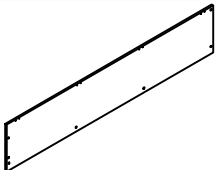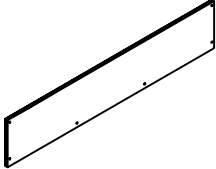⑥ x1pcs  Wing left	⑤ x1pcs  Wing right
⑳ x1pcs  The panel on the top of the large cabinet on the left	⑲ x1pcs  The panel on the top of the large cabinet on the right
⑰ x1pcs  Back panel of the left cabinet	⑰ x1pcs  Back panel of the right cabinet
⑳ x1pcs  Side panel inside the small cabinet on the left	㉓ x1pcs  Side panel inside the small cabinet on the right
⑮ x1pcs  Left and right front panel of the cabinet	



Hardware List (Box 1 - N736P431419W)

No.	OUTLOOK	DESCRIPTION	QTY
A		Bolt M6x12mm	92
B		Bolt M8x30mm	02
C		Hex nut M8	02
D		Bolt M6x35mm	22
E		Bolt M6x30mm	06
F		Bolt M6x15mm	16
G		Screws M4x12mm	48
H		Screws M4x30mm	06
I		Bolt M8x50mm	06
J		Screws M4x15mm	04
Y		Wrench 13mm	01
Z		Allen key K4*60mm	02
K		Screwdriver	01

Hardware List (Box 1 - N736P431419W)


No.	OUTLOOK	DESCRIPTION	QTY
M		Base 1	24
N		Base 2	16
O		Base 3	01
R		Hinge	08
S		Bedside lamp	02

Hardware List (Box 3 - N736P431421W)

No.	OUTLOOK	DESCRIPTION	QTY
P		Base 4	02
Q		Piston	04

Assembly preparation

Before Beginning Assembly

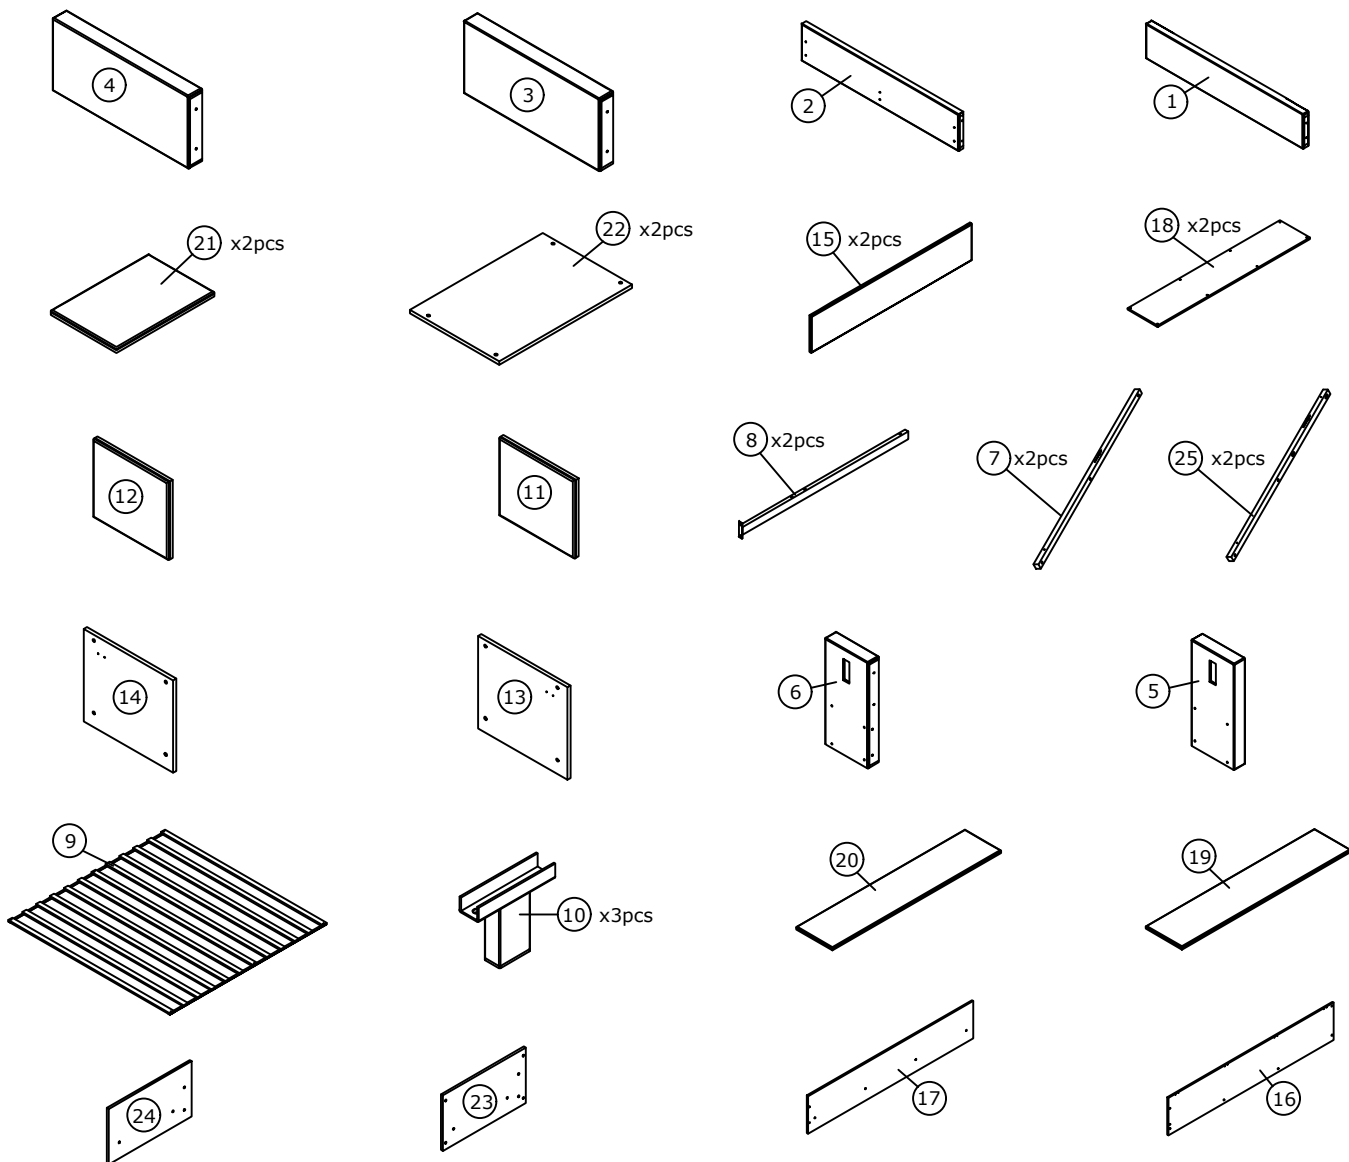

(A) x92pcs 

(G) x48pcs 


(M) x24pcs 

(S) x02pcs 

(B) x02pcs 


(H) x06pcs 


(N) x16pcs 

(P) x02pcs 

(C) x02pcs 

(I) x06pcs 


(O) x01pcs 

(Q) x04pcs 

(D) x22pcs 

(J) x04pcs 

(R) x08pcs 


(K) x01pcs 

(E) x06pcs 

(Y) x01pcs 

(F) x16pcs 

(Z) x02pcs 

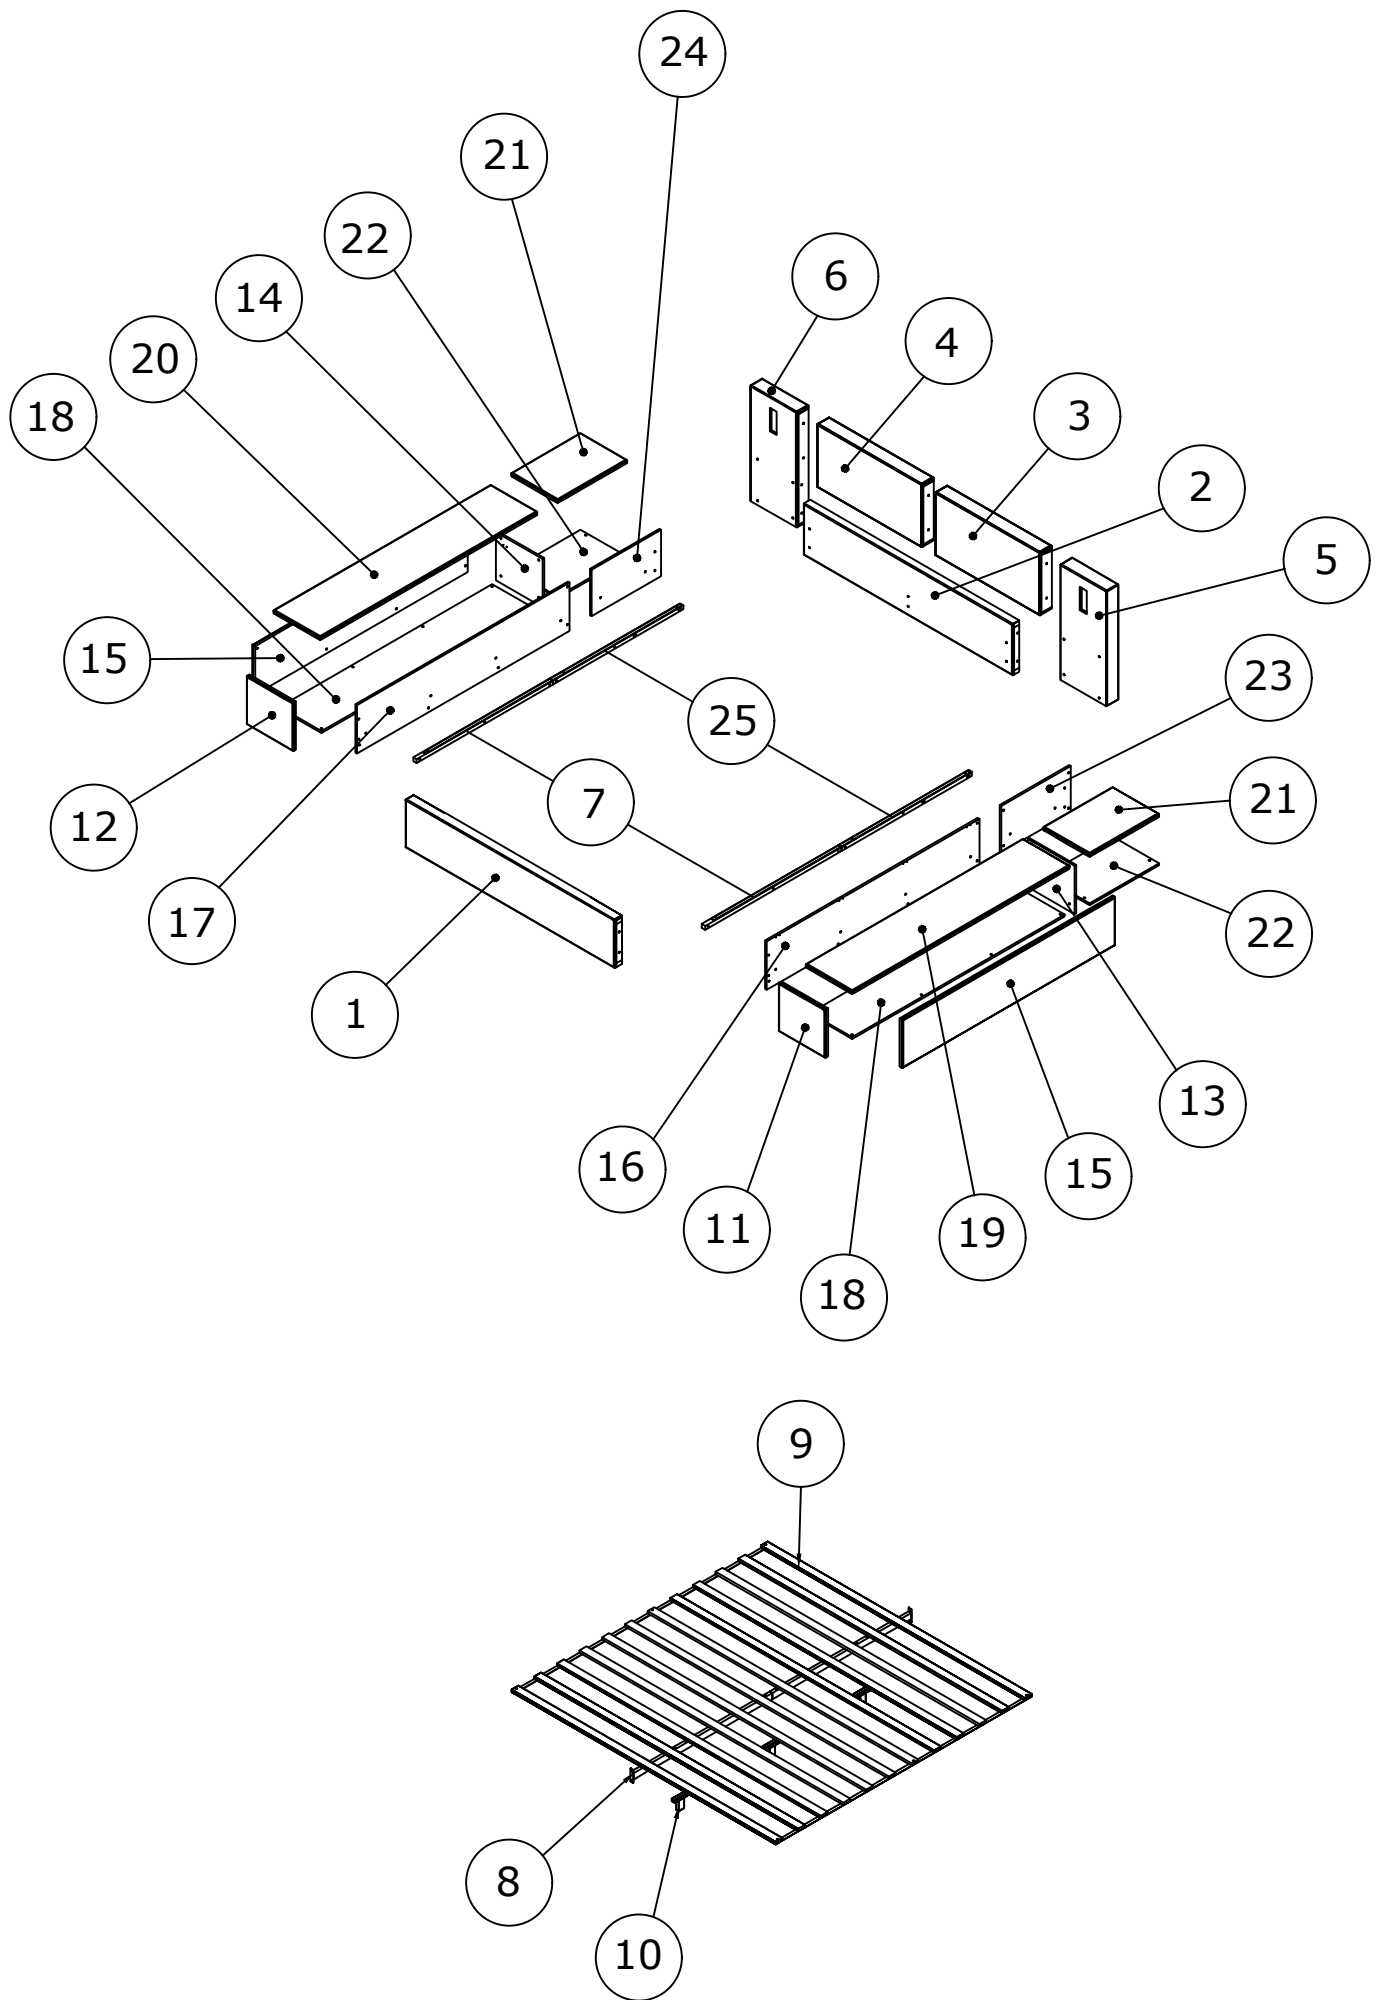




- Read instruction, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.






















ASSEMBLY Step

Overview

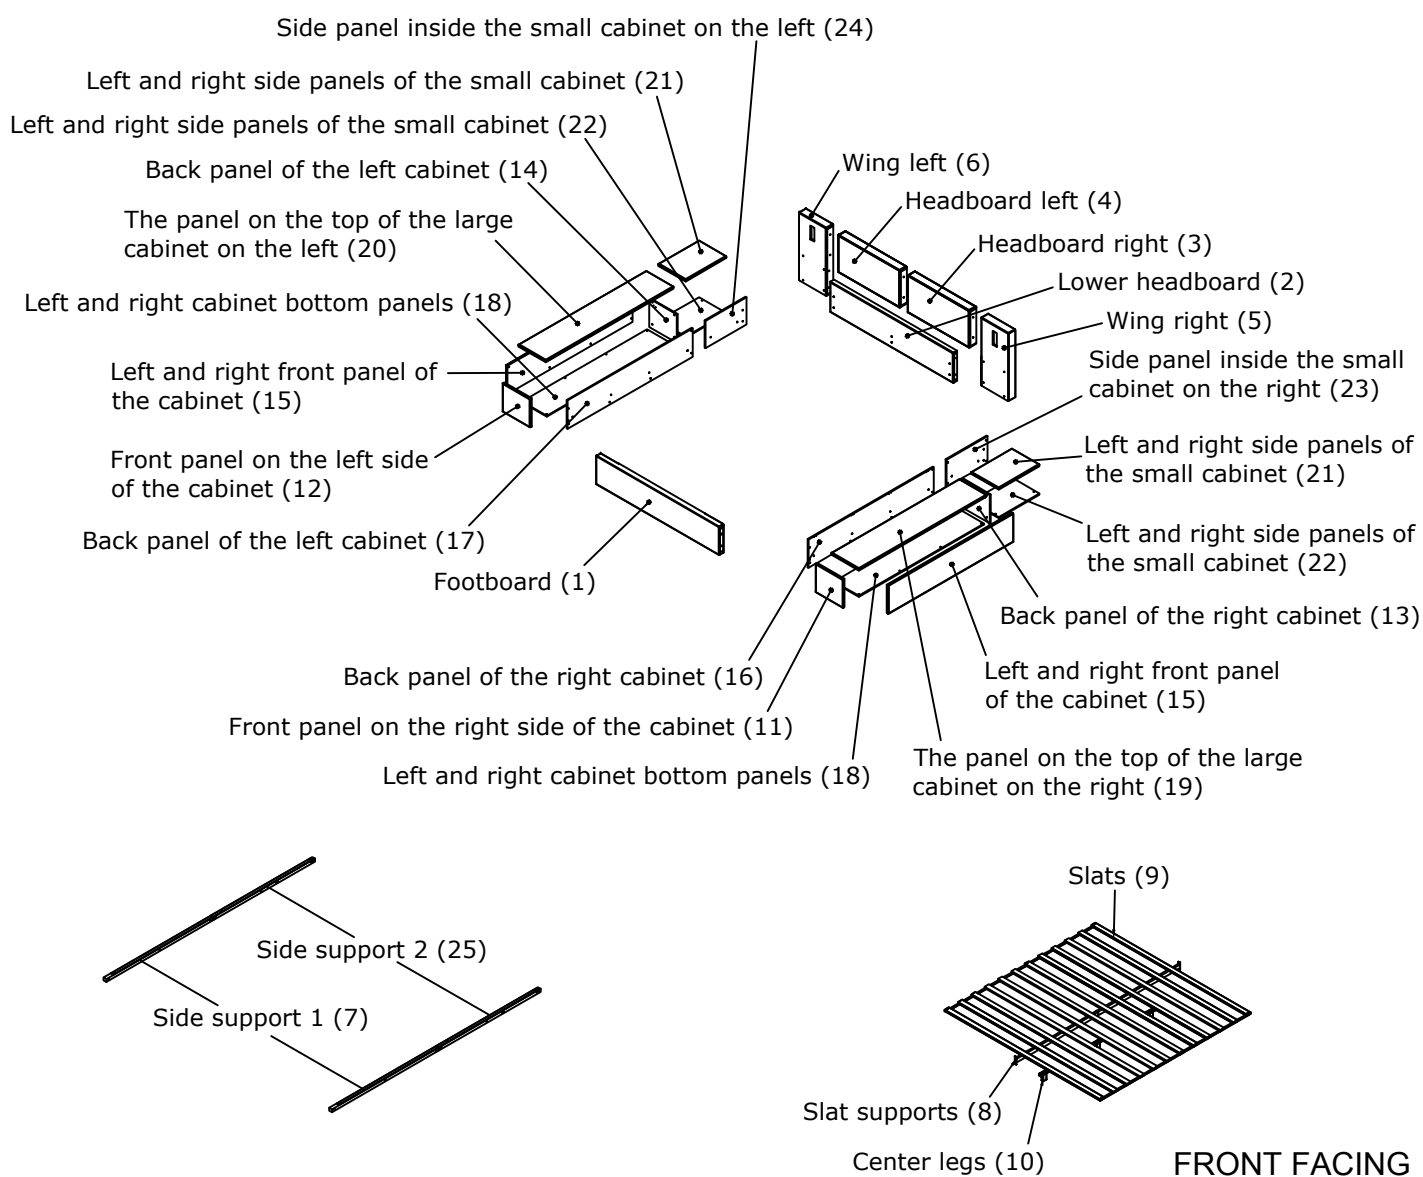


This Bed has multiple parts and may require up to 1 hour to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

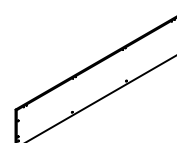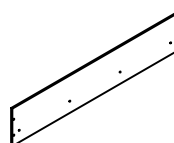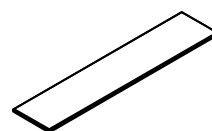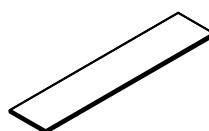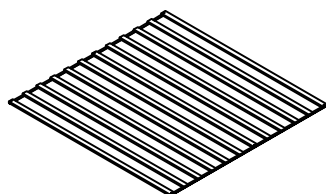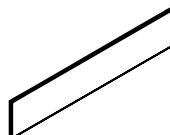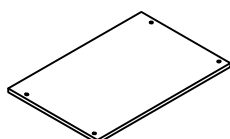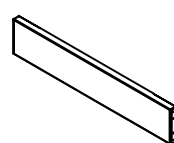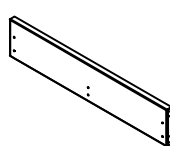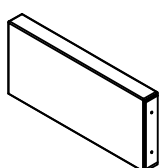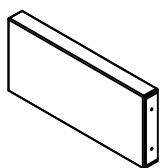

Unpack and place all parts on a clean, non marring surface.

Step 2

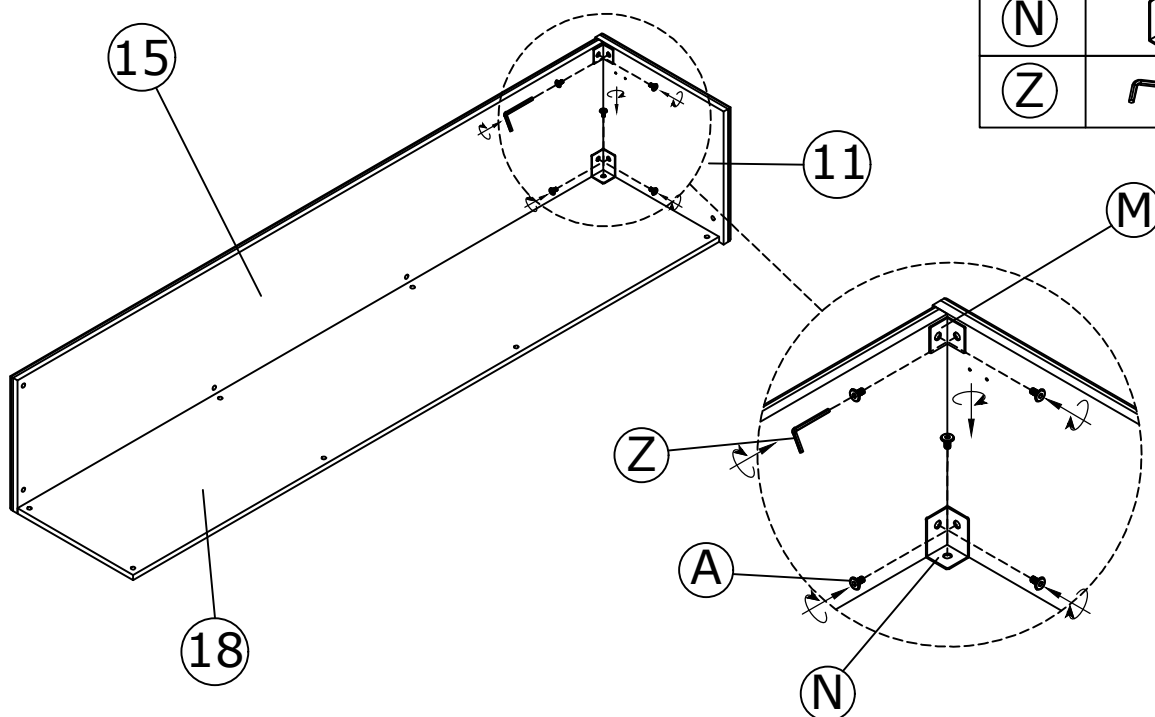


(A)		05
(M)		01
(N)		01
(Z)		01

Attach the left and right cabinet bottom panels (18), left and right front panel of the cabinet (15) and front panel on the right side of the cabinet (11) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 3


Piercing hole location,
black fabric surface
inside large cabinet

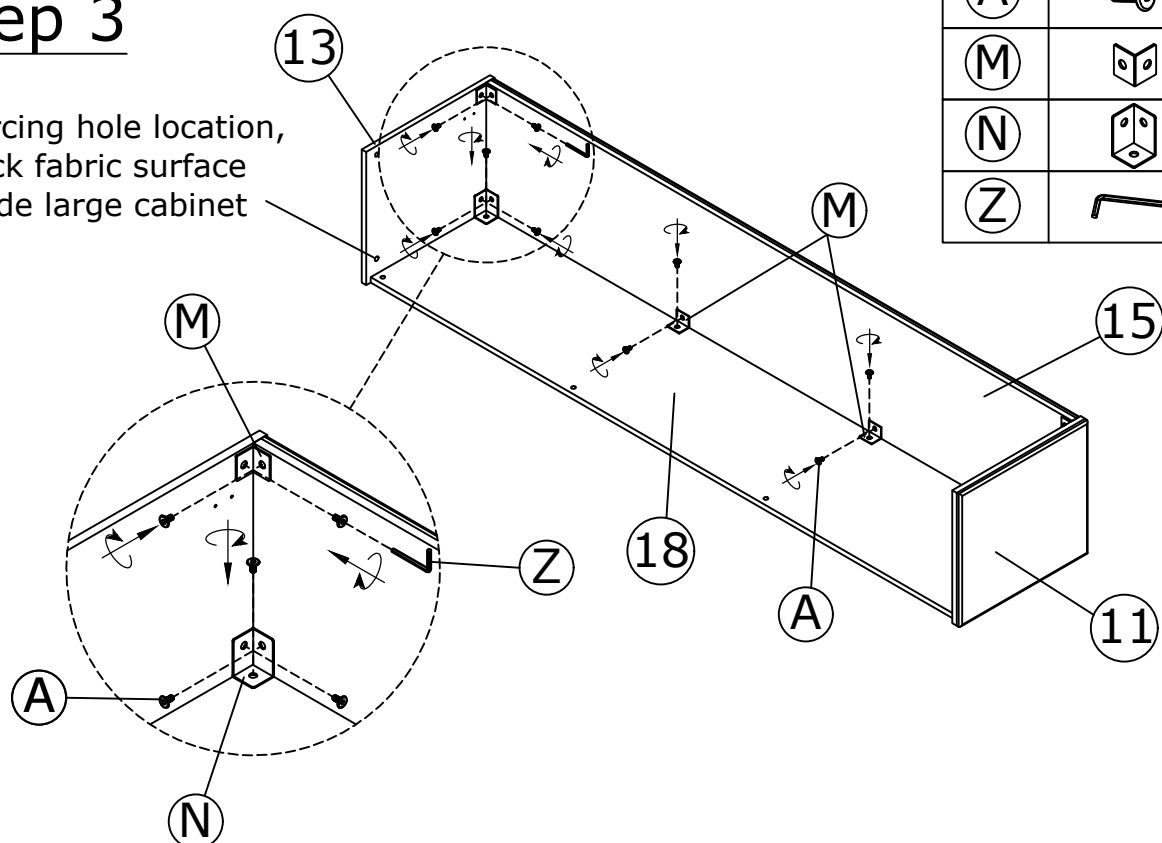

(A)		09
(M)		03
(N)		01
(Z)		01


Attach the left and right cabinet bottom panels (18), left and right front panel of the cabinet (15) and back panel of the right cabinet (13) using base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 4

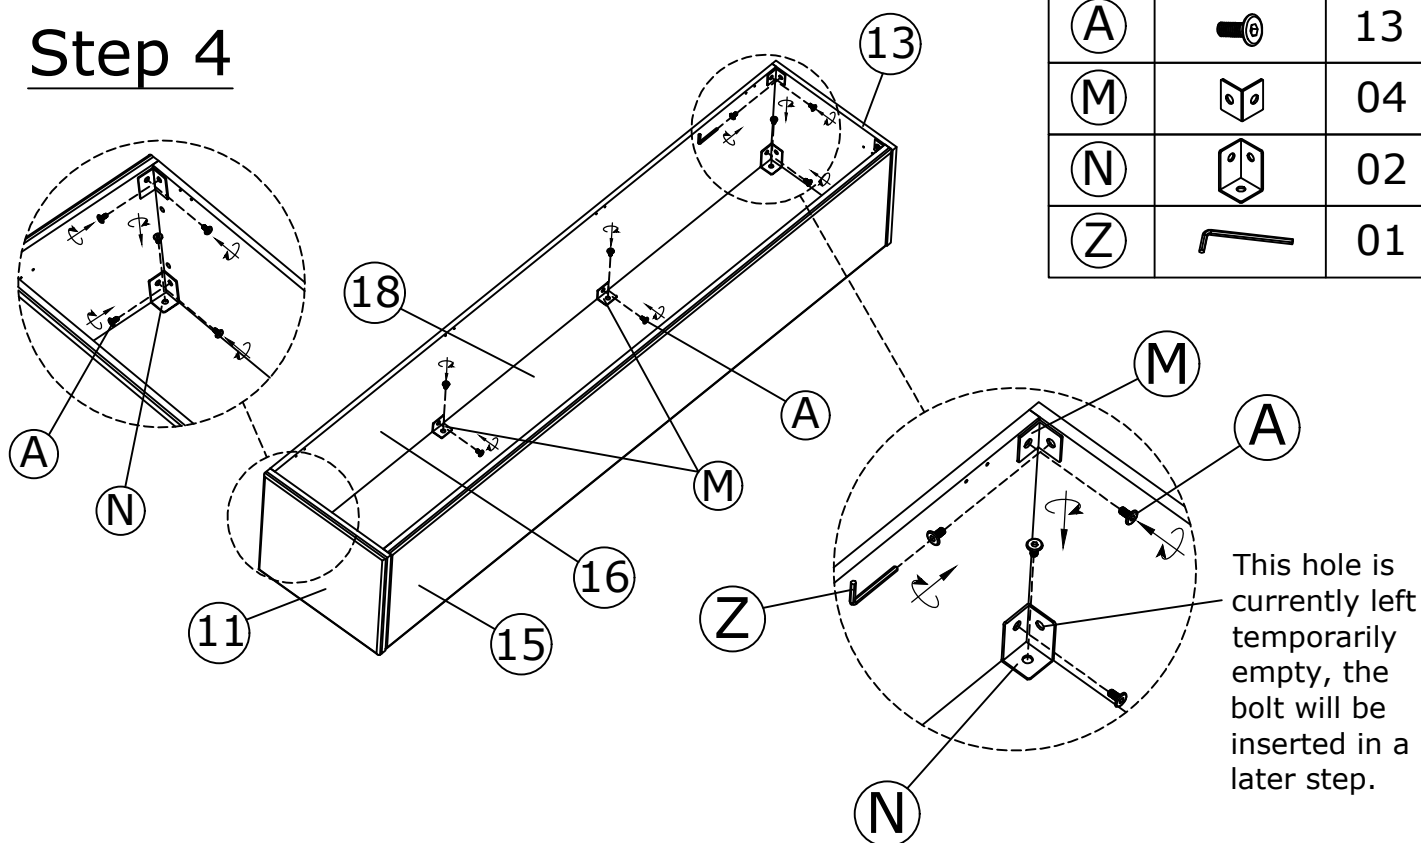


Attach the back panel of the right cabinet (16) to the front panel on the right side of the cabinet (11), left and right cabinet bottom panels (18), back panel of the right cabinet (13) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 5

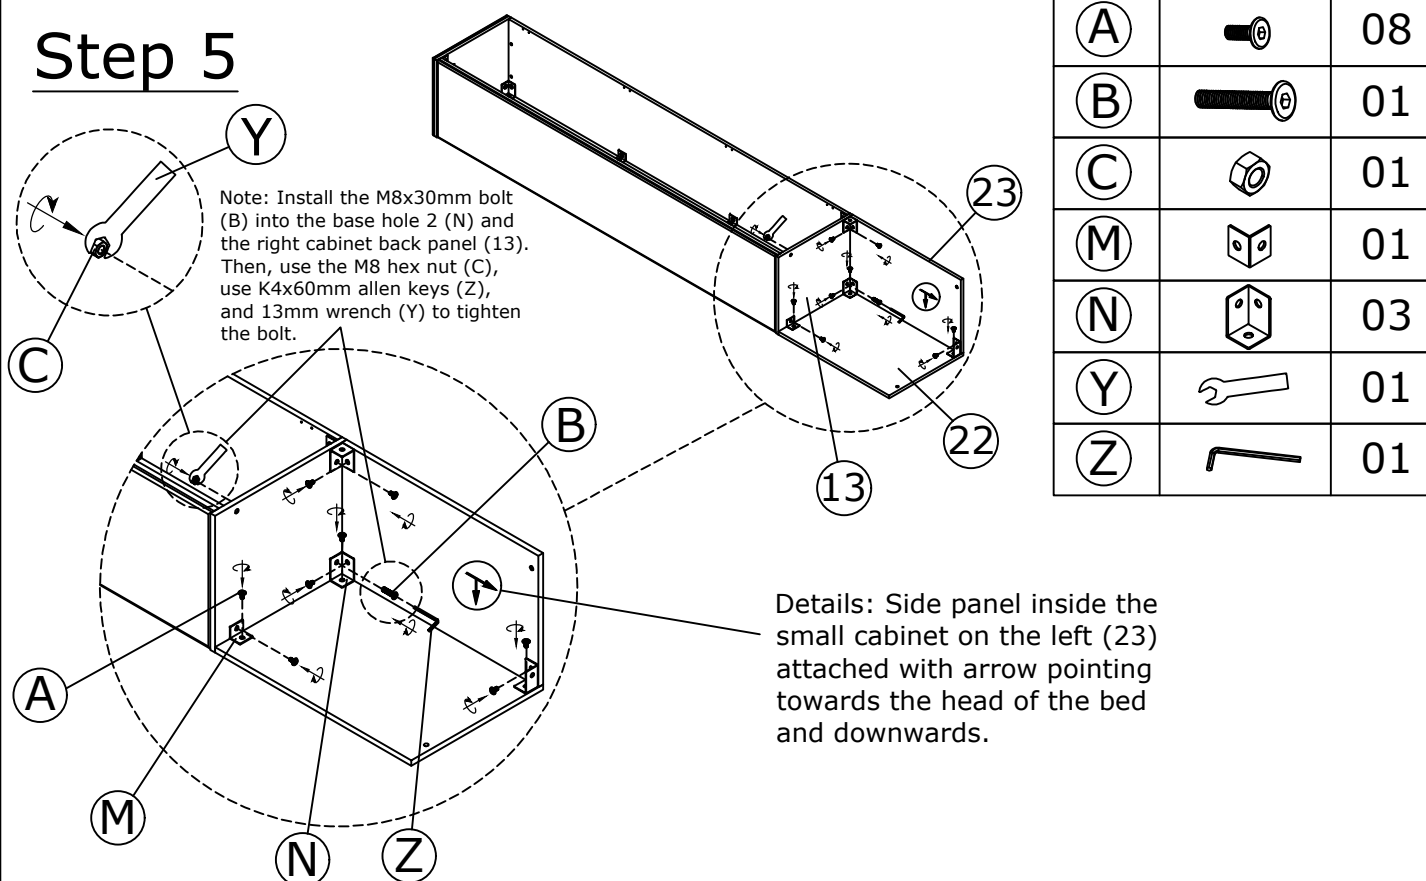

Attach the side panel inside the small cabinet on the right (23) to the left and right side panels of the small cabinet (22) and back panel of the right cabinet (13) with base 1 (M), base 2 (N) and bolt M6x12mm (A), bolt M8x30mm (B) and hex nut M8 (C) use K4x60mm allen keys (Z) and wrench 13mm (Y) and tighten the bolts.


Step 6

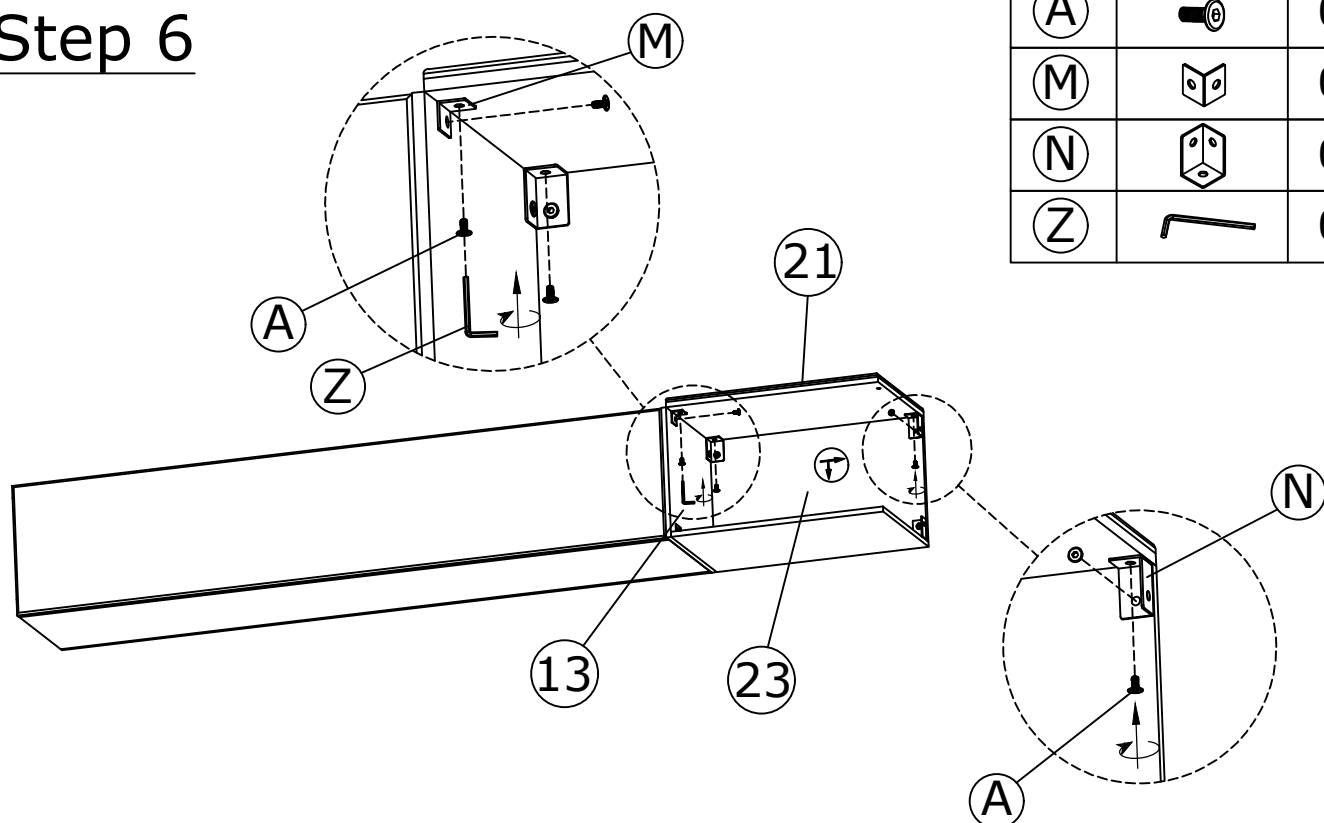

(A)		05
(M)		01
(N)		01
(Z)		01

Attach the left and right side panels of the small cabinet (21), side panel inside the small cabinet on the right (23) and back panel of the right cabinet (13) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.


Step 7

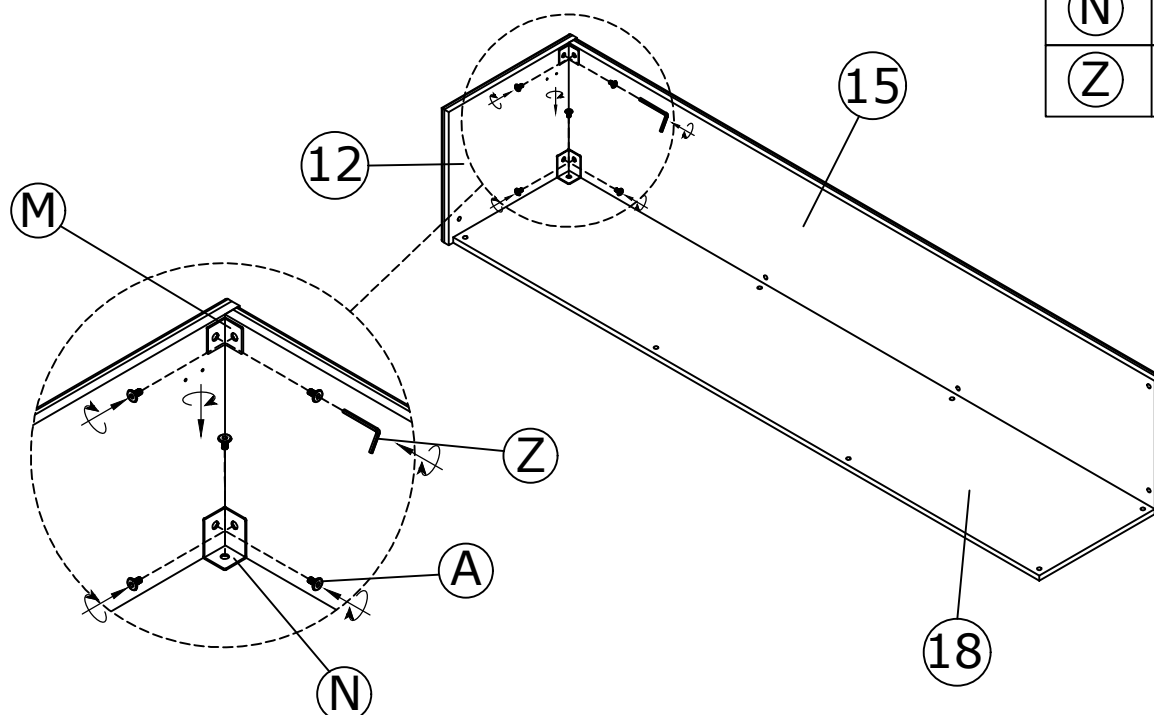

(A)		05
(M)		01
(N)		01
(Z)		01


Attach the left and right cabinet bottom panels (18), left and right front panel of the cabinet (15) and front panel on the left side of the cabinet (12) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 8

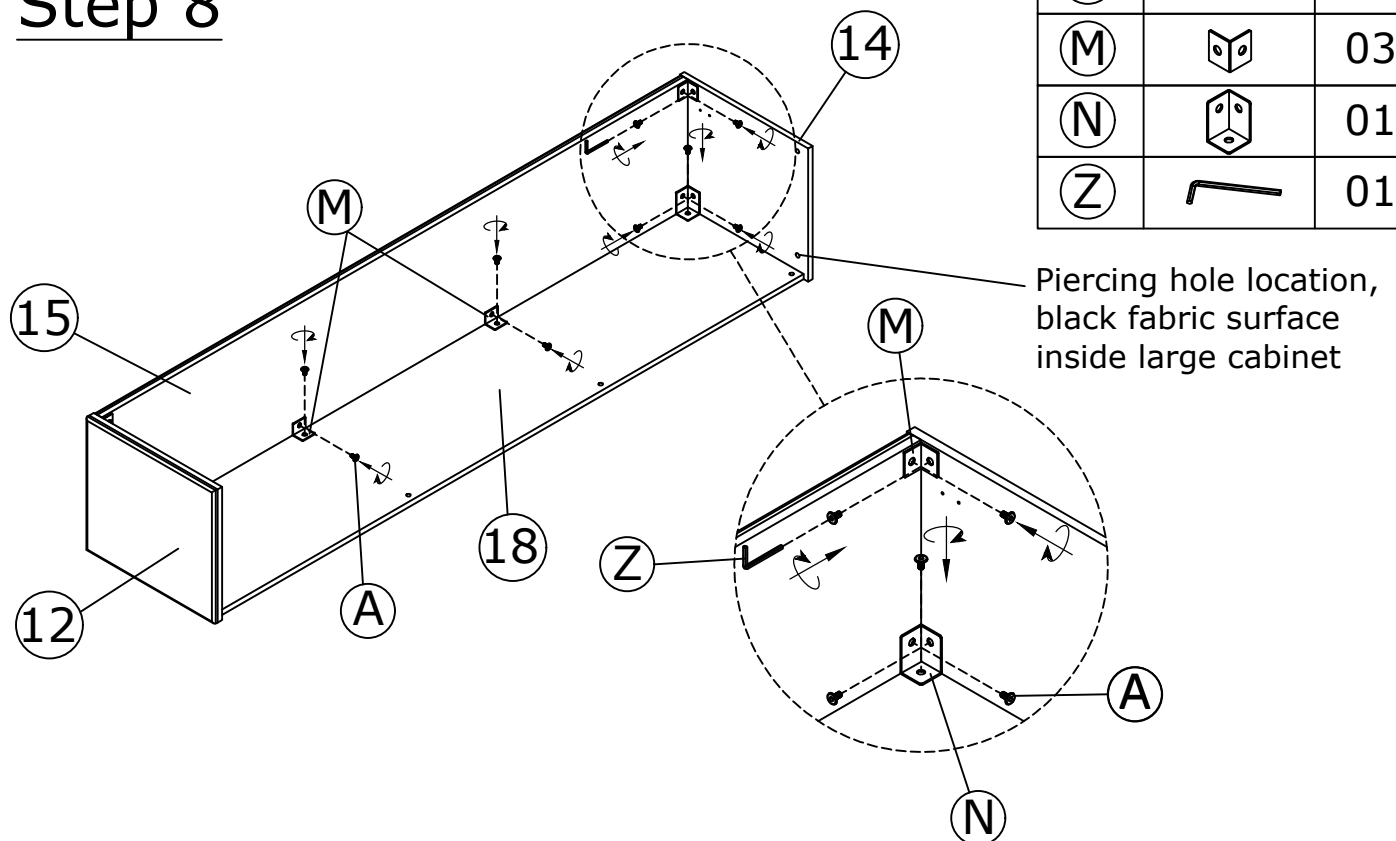


Attach the left and right cabinet bottom panels (18), left and right front panel of the cabinet (15) and back panel of the left cabinet (14) using base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 9

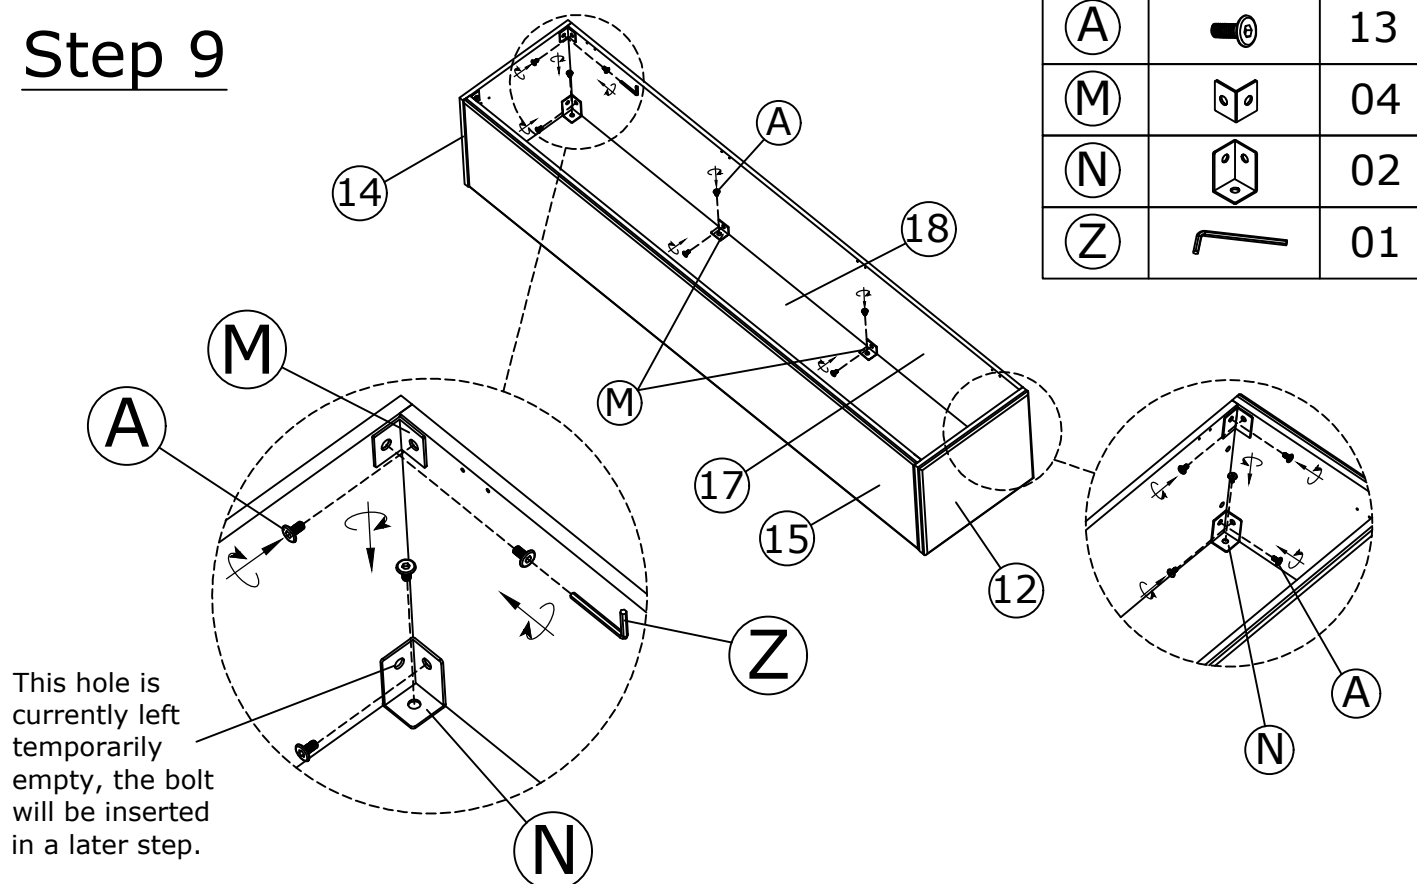

Attach the back panel of the left cabinet (17) to the front panel on the left side of the cabinet (12) left and right cabinet bottom panels (18) back panel of the left cabinet (14) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.


Step 10

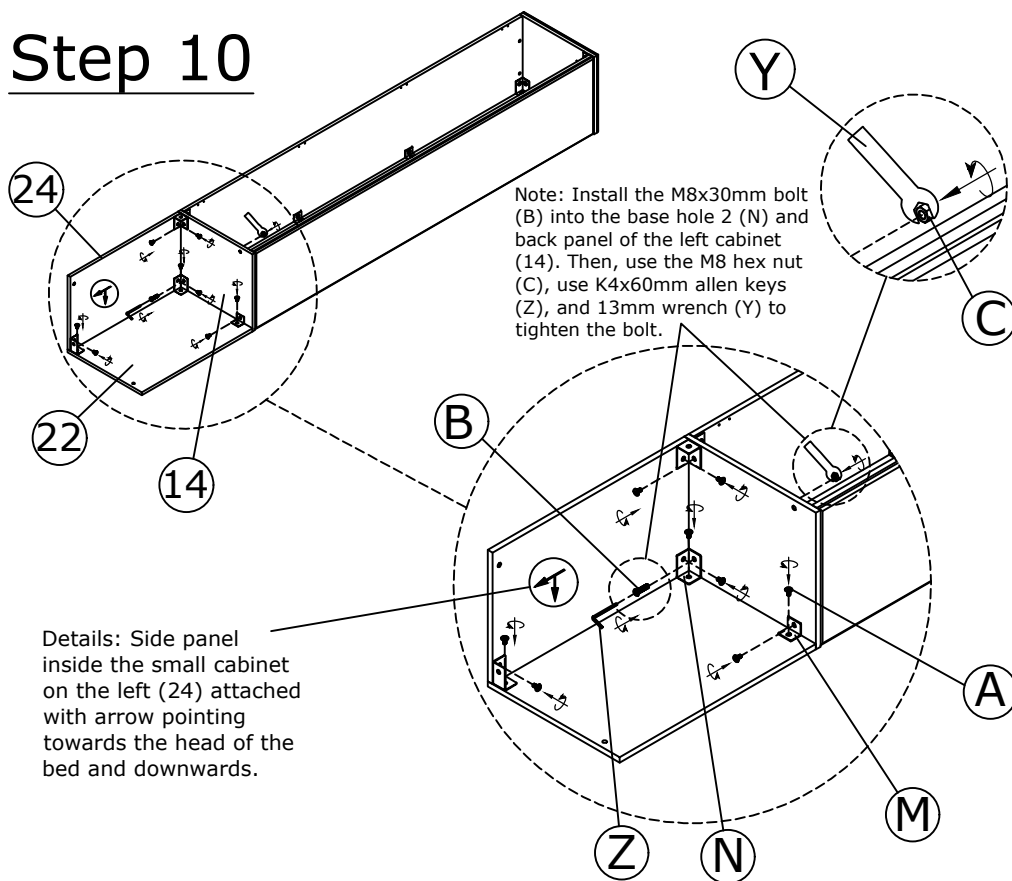

(A)		08
(B)		01
(C)		01
(M)		01
(N)		03
(Y)		01
(Z)		01

Attach the side panel inside the small cabinet on the left (24) to the left and right side panels of the small cabinet (22) and back panel of the left cabinet (14) with base 1 (M), base 2 (N) and bolt M6x12mm (A), bolt M8x30mm (B) and hex nut M8 (C) use K4x60mm allen keys (Z) and wrench 13mm (Y) and tighten the bolts.

Step 11

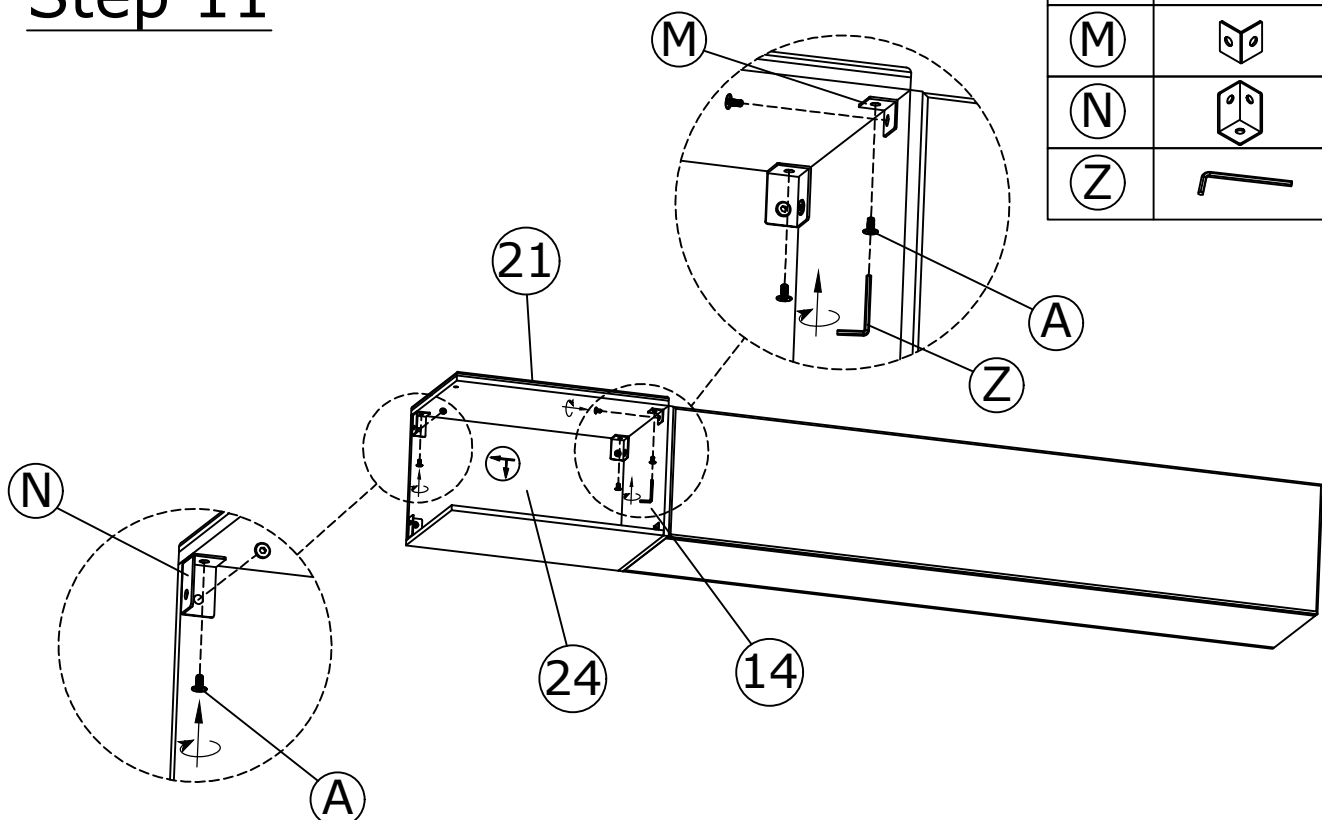


(A)		05
(M)		01
(N)		01
(Z)		01

Attach the left and right side panels of the small cabinet (21), side panel inside the small cabinet on the left (24) back panel of the left cabinet (14) with base 1 (M), base 2 (N) and bolt M6x12mm (A), use K4x60mm allen keys (Z) and tighten the bolts.

Step 12


(D)		04
(Z)		01

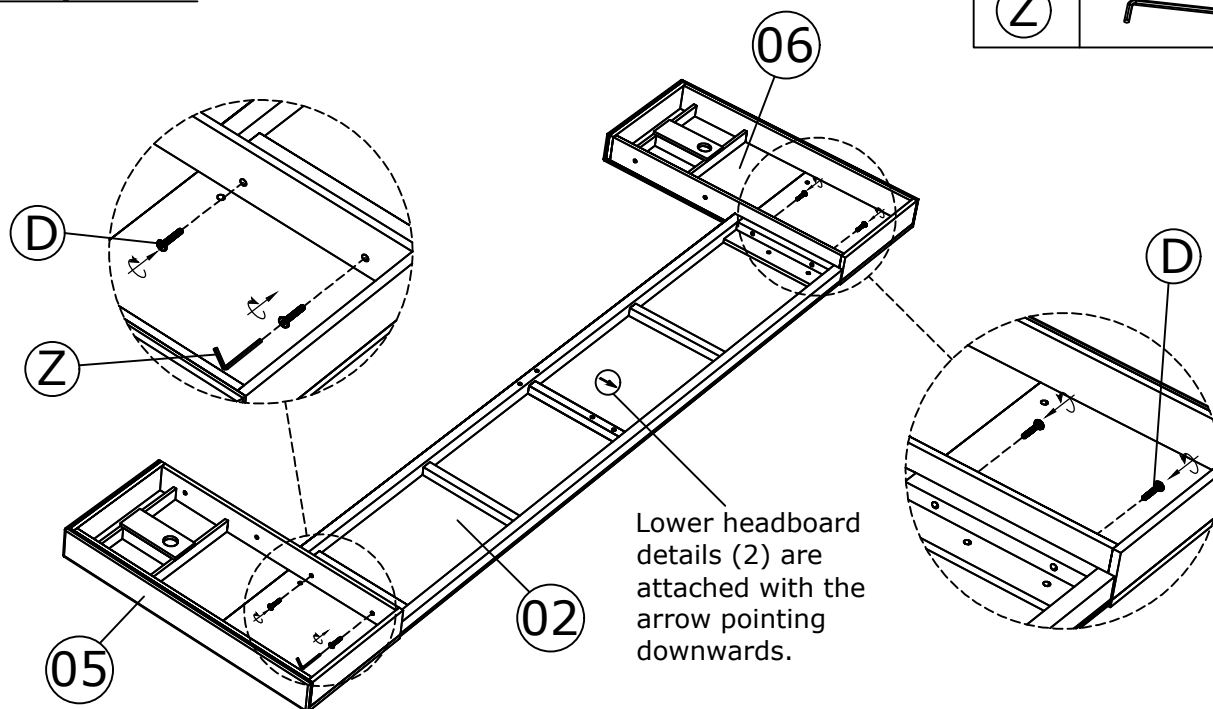

Attach the right wing (5), lower headboard (2), and left wing (6) with M6x35mm bolts (D), use K4x60mm Allen keys (Z), and tighten the bolts until they fit but not completely.

Step 13


(E)		06
(Z)		01

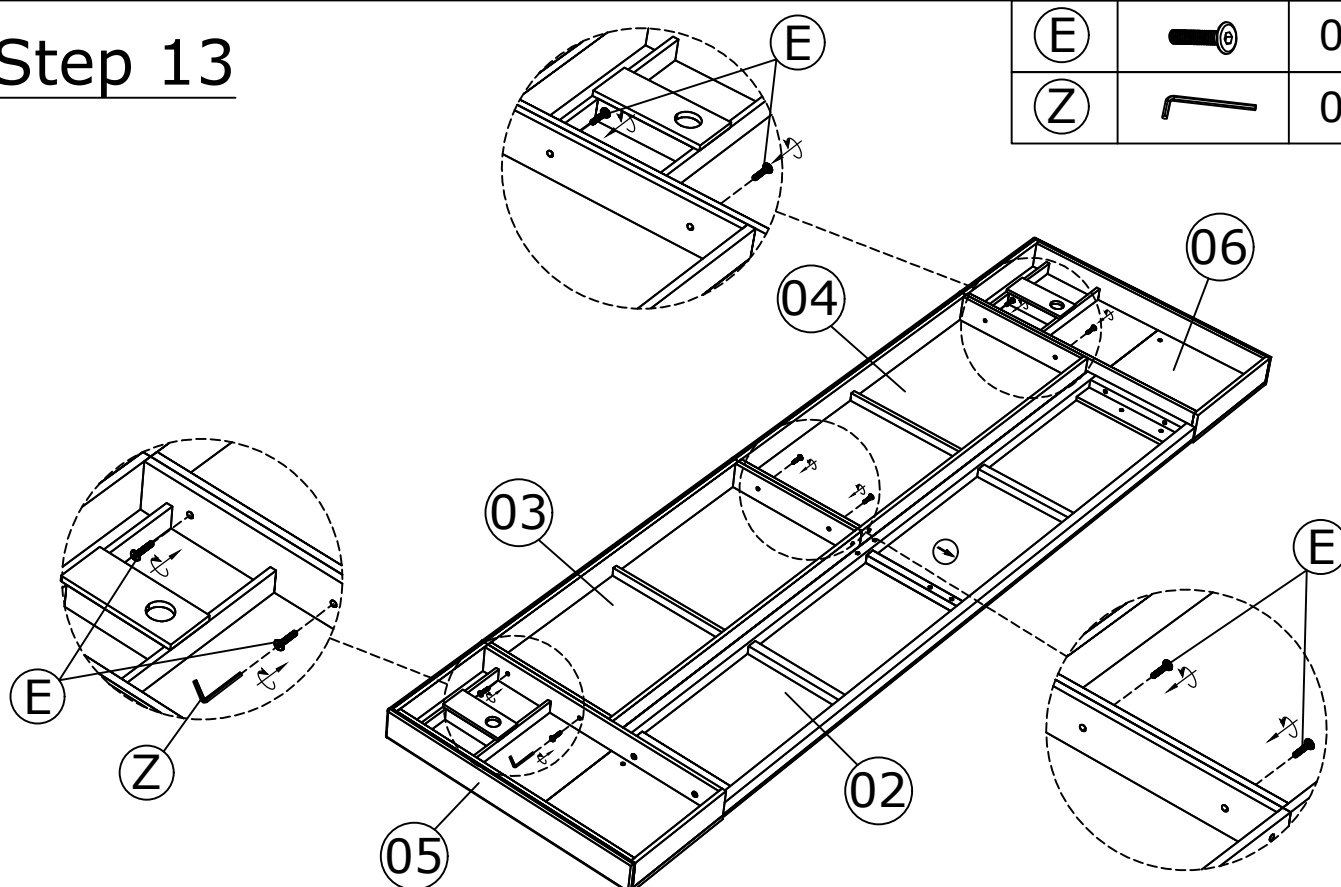

Attach the right headboard (3), left headboard (4), right wing (5), and left wing (6) with M6x30mm bolts (E). Use K4x60mm Allen keys (Z) and tighten the bolts until they fit but not completely.

Step 14

(F)		04
(O)		01
(Z)		01

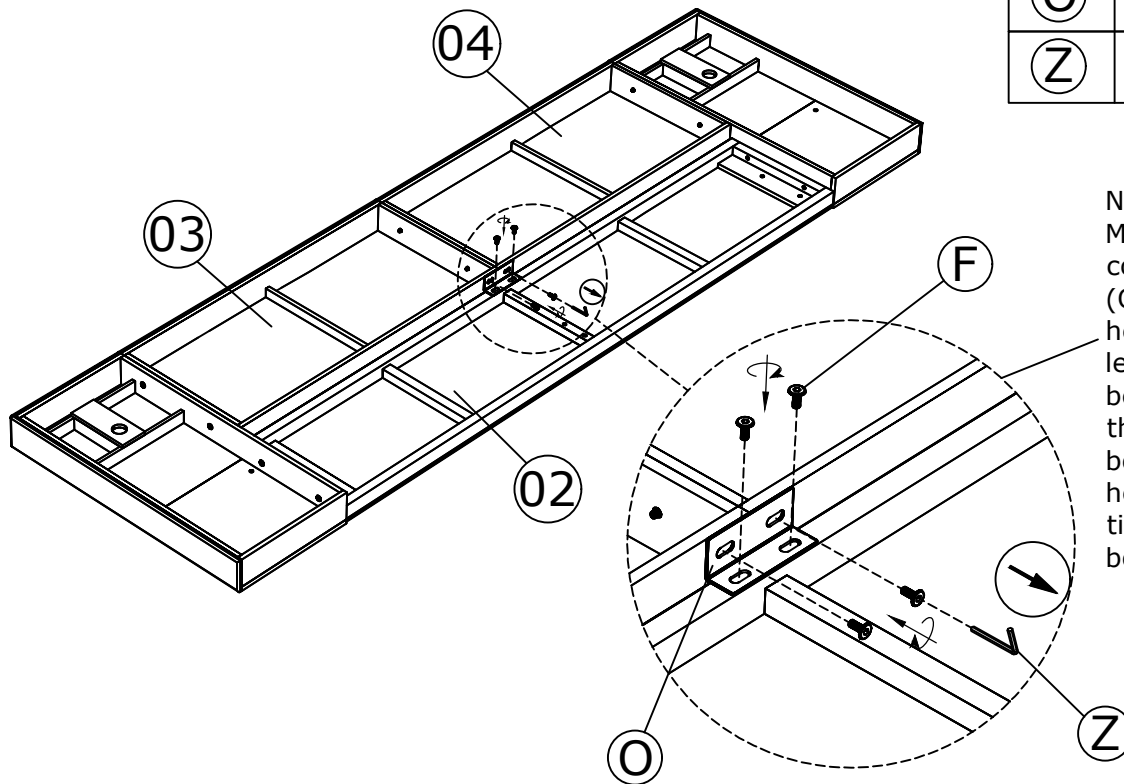


Note: Attach the M6x15mm (F) bolts connecting base 3 (O) to the right headboard (3) and left headboard (4) before attaching the M6x15mm (F) bolts to the lower headboard (2) and tightening the bolts.

Attach the base 3 (O) with right headboard (3), left headboard (4), and lower headboard (2) with M6x15mm bolt (F) use K4x60mm Allen keys (Z), and tighten the bolt then tighten the bolt in steps 12, 13.


Step 15

(A)		06
(M)		02
(Z)		01

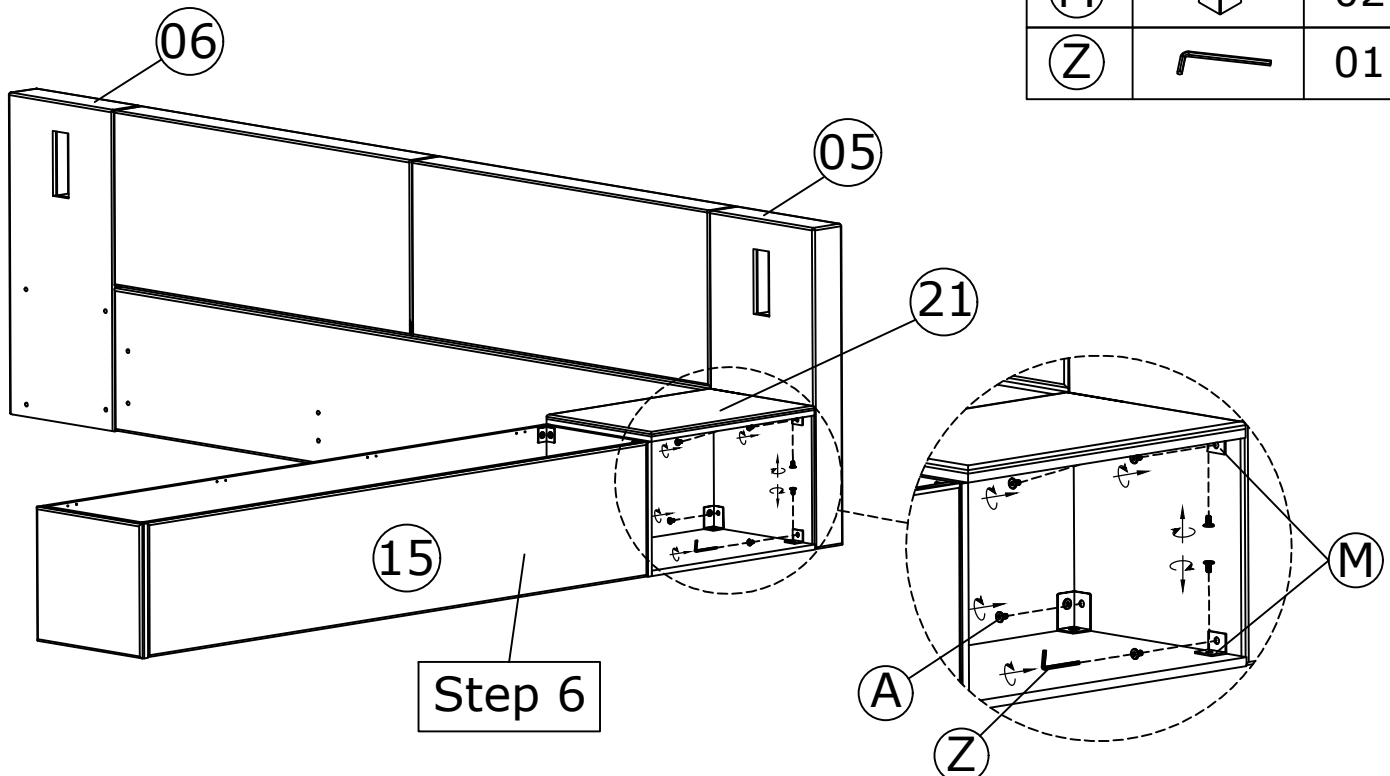

Attach the parts from step 6 to the wing right (5) using base 1 (M) and M6x12mm bolts (A), use K4x60mm Allen keys (Z), and tighten the bolts.


Step 16

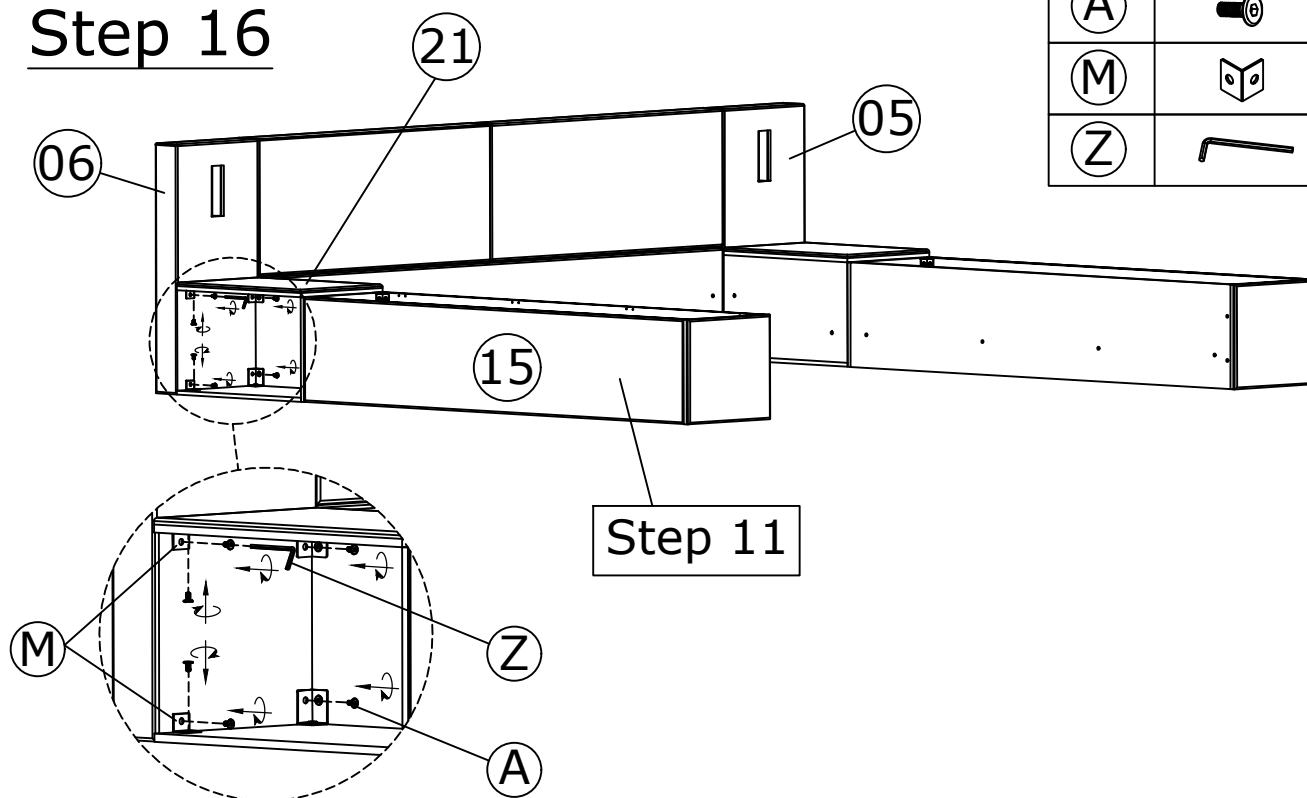

(A)		06
(M)		02
(Z)		01

Attach the parts from step 11 to the wing left (6) using base 1 (M) and M6x12mm bolts (A), use K4x60mm Allen keys (Z), and tighten the bolts.


Step 17

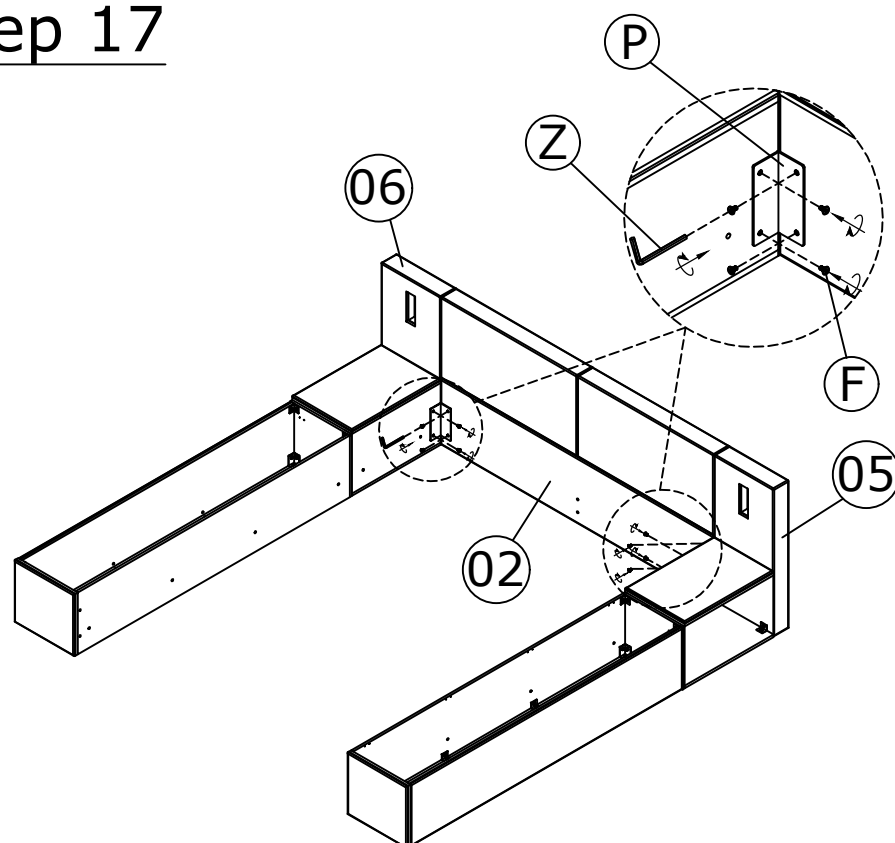

(F)		08
(P)		02
(Z)		01

Attach the base 4 (P) with side panel inside the small cabinet on the left (24), lower headboard (2) and side panel inside the small cabinet on the right (23) with M6x15mm bolts (F), use K4x60mm Allen keys (Z), and tighten the bolts.


Step 18

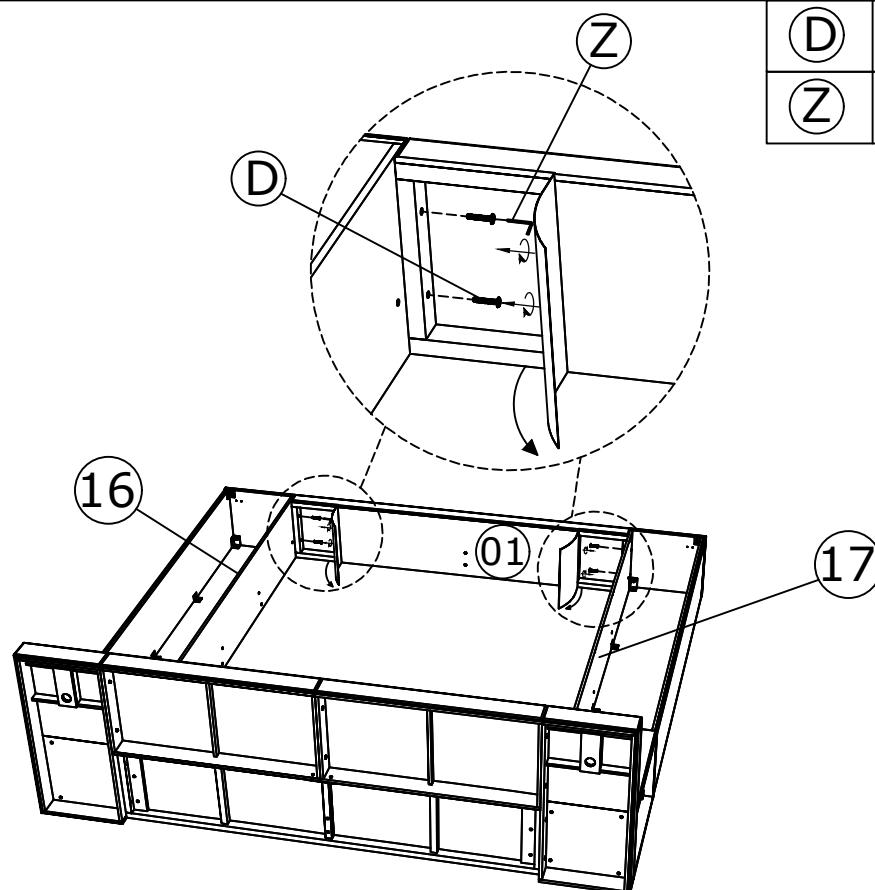

(D)		04
(Z)		01

Remove the fabric from both sides of the footboard (1) and attach the footboard (1), back panel of the right cabinet (16), back panel of the left cabinet (17) with M6x35mm bolts (D), use K4x60mm Allen keys (Z), and tighten the bolts, then glue the fabric on both sides.

Step 19

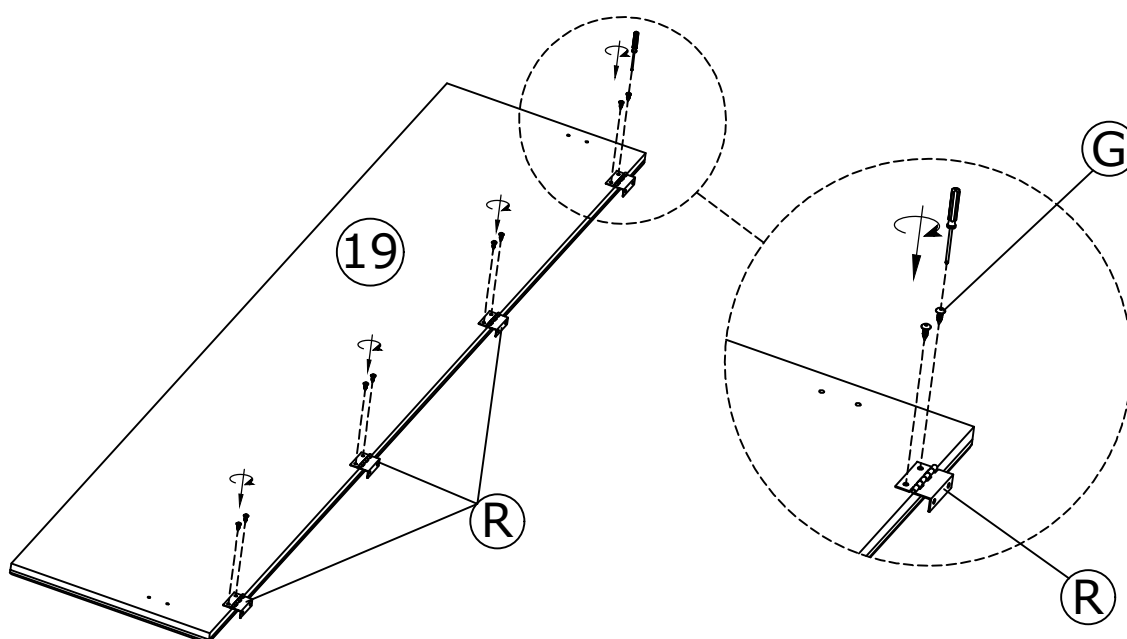


(G)		08
(R)		04

Attach the hinge (R), to the panel on the top of the large cabinet on the right (19) with Screws M4x12mm (G), and tighten the screws with a screwdriver.

Step 20


(G)		08
(R)		04

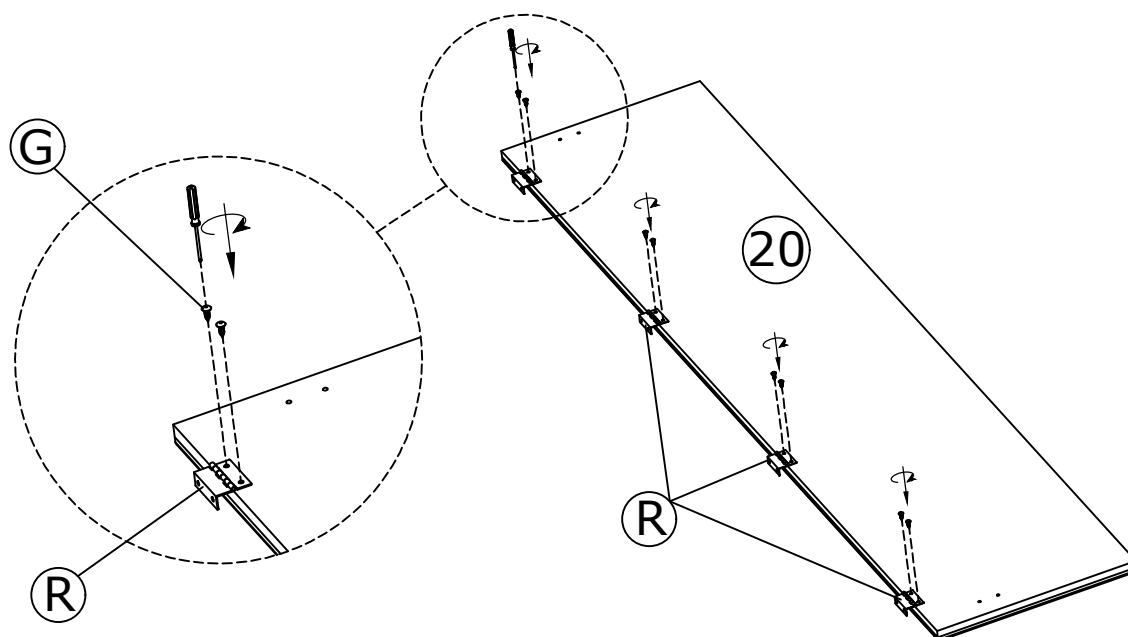

Attach the hinge (R), to the panel on the top of the large cabinet on the left (20) with M4x12mm screws (G), and tighten the screws with a screwdriver.

Step 21

(G)		08
-----	---	----

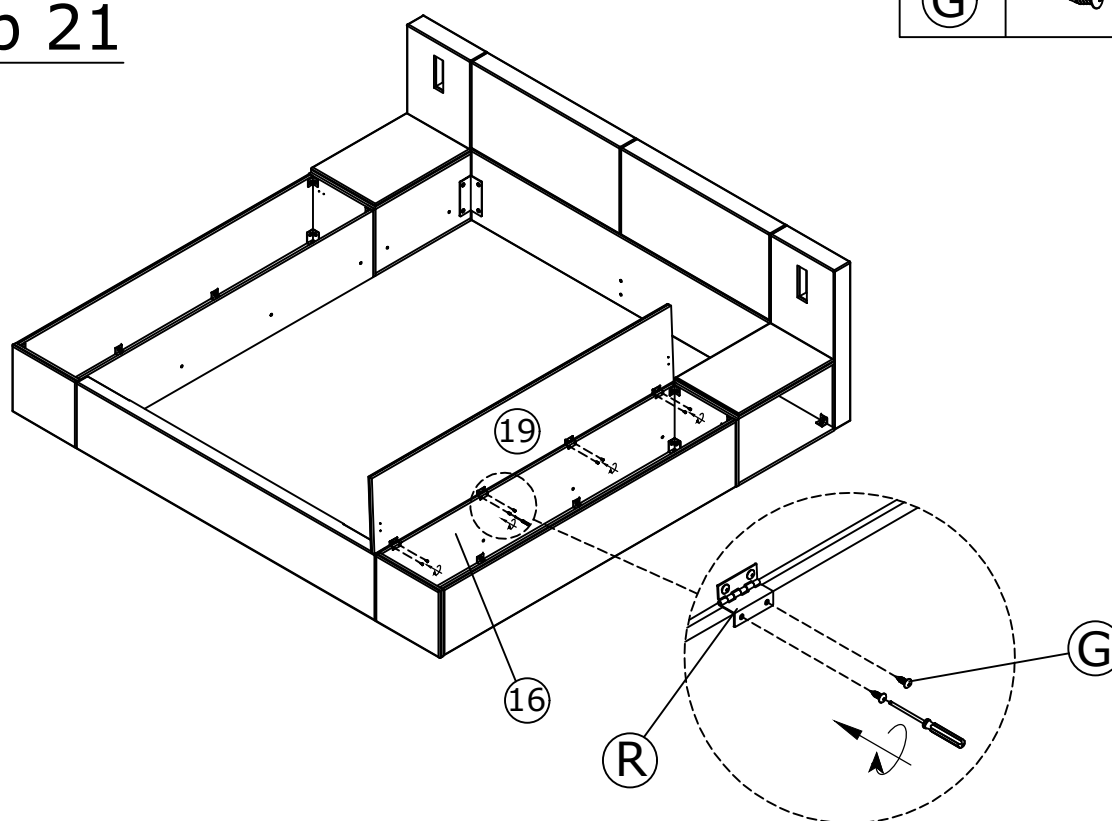


Attach the hinge (R) on the panel on the top of the large cabinet on the right (19) to back panel of the right cabinet (16) with screws M4x12mm (G), and tighten the screws with a screwdriver.

Step 22

(G)



08

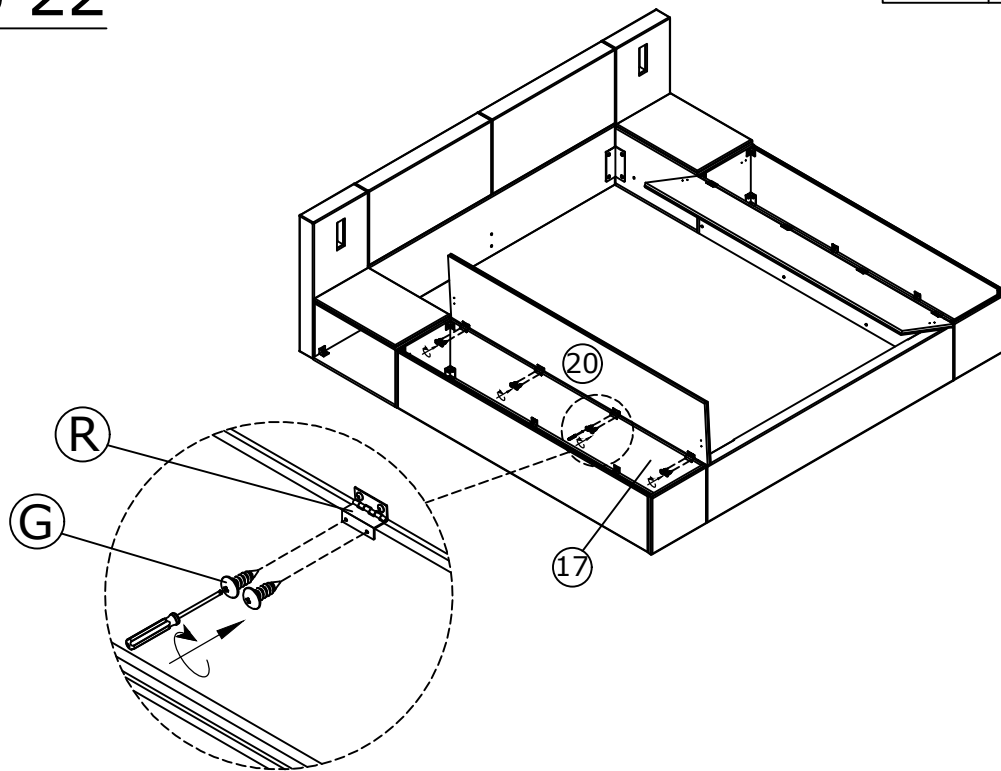

Attach the hinge (R) on the panel on the top of the large cabinet on the left (20) to the back panel of the left cabinet (17) with M4x12mm screws (G), and tighten the screws with a screwdriver.

Step 23

(G)




08

(Q)



04

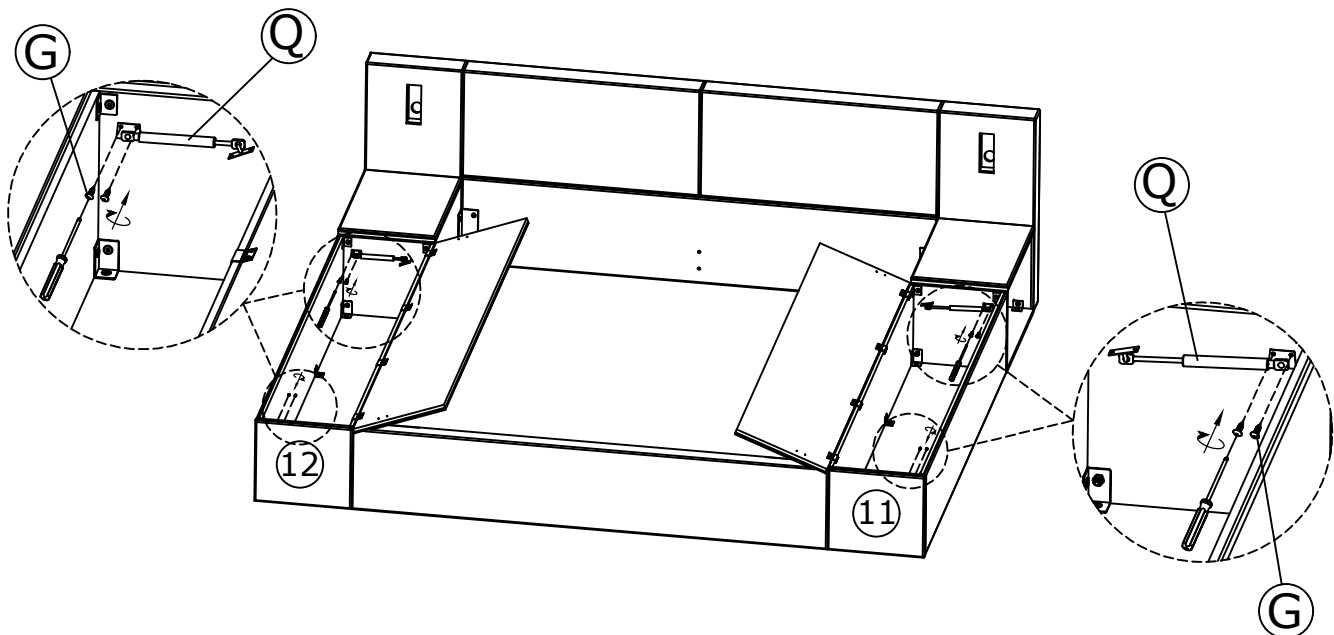


Attach the piston (Q) with back panel of the right side of the cabinet (13), front panel on the right side of the cabinet (11) and back panel of the left side of the cabinet (14), front panel on the left side of the cabinet (12) with screws M4x12mm (G), and tighten the screws with a screwdriver.

Step 24

(G)



04

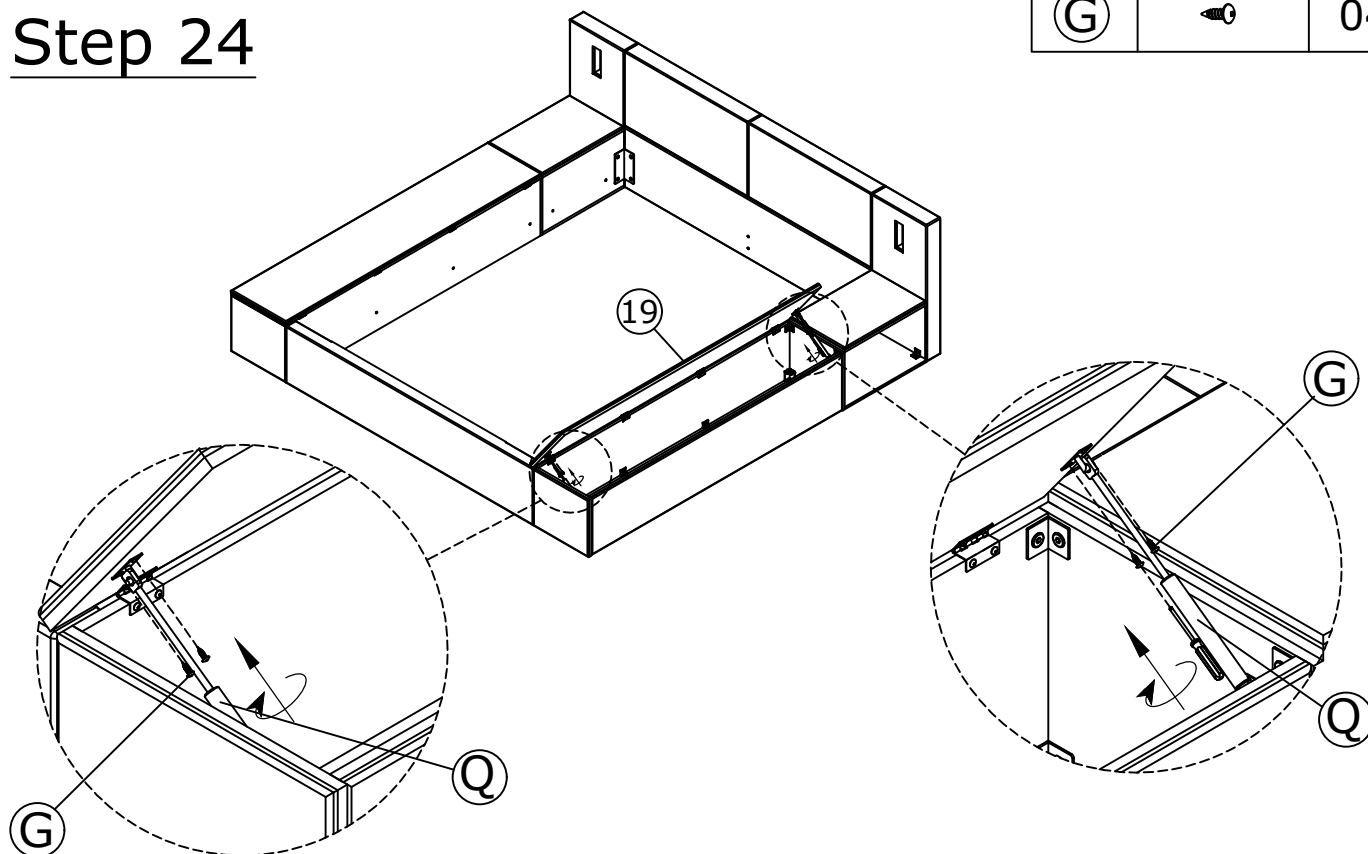


Attach the piston (Q) to the panel on the top of the large cabinet on the right (19) with screws M4x12mm (G), and tighten the screws with a screwdriver.

Step 25

(G)




04

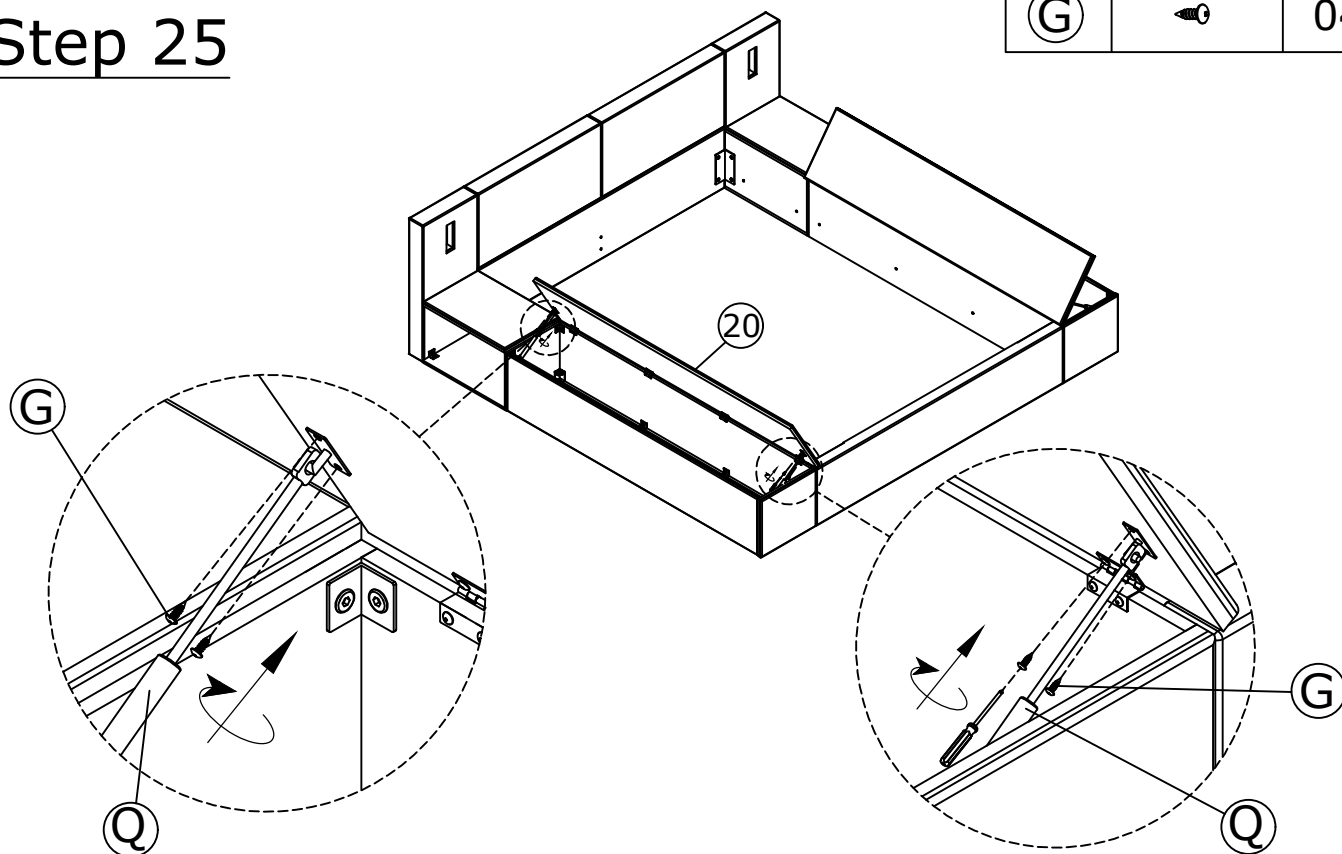

Attach the piston (Q) to the panel on the top of the large cabinet on the left (20) with M4x12mm screws (G), and tighten the screws with a screwdriver.

Step 26


(D)		07
(Z)		01

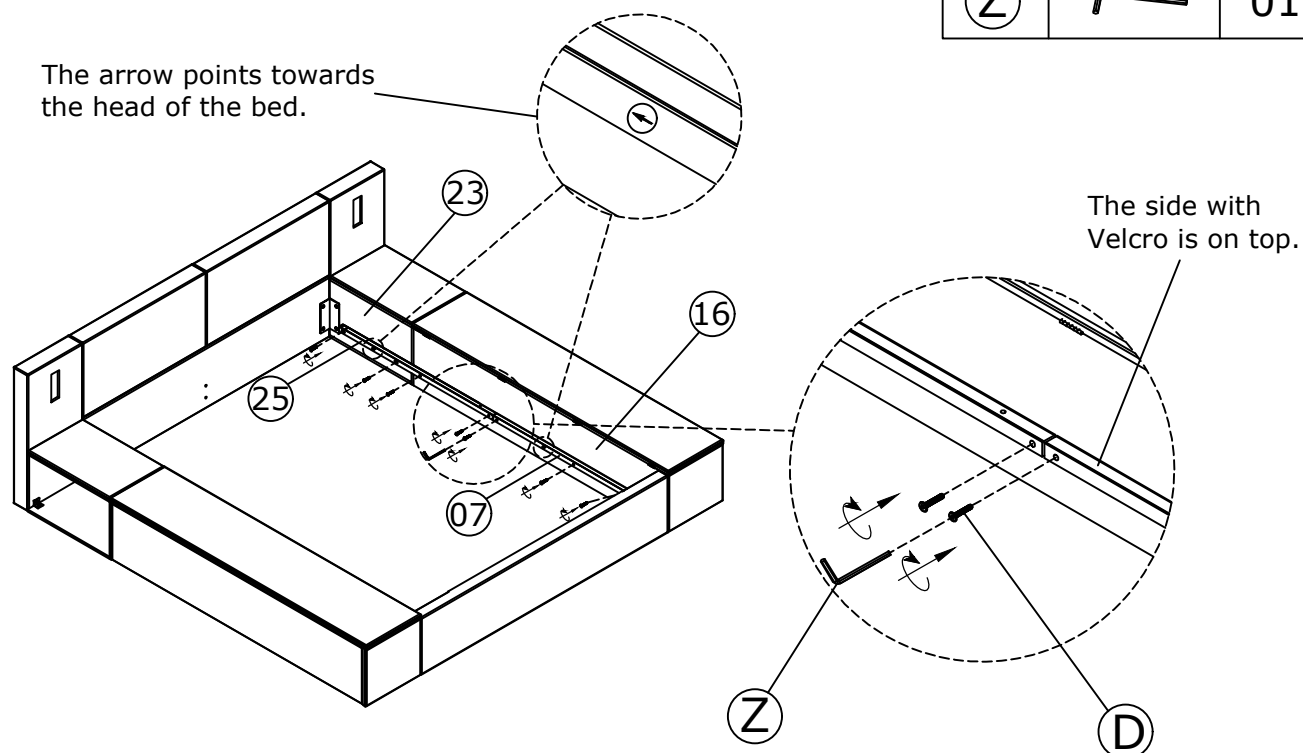

Attach the Side support 1 (7), Side support 2 (25) with back panel of the right cabinet (16), side panel inside the small cabinet on the right (23) with M6x35mm bolts (D), use K4x60mm Allen keys (Z), and tighten the bolts.


Step 27

(D)		07
(Z)		01

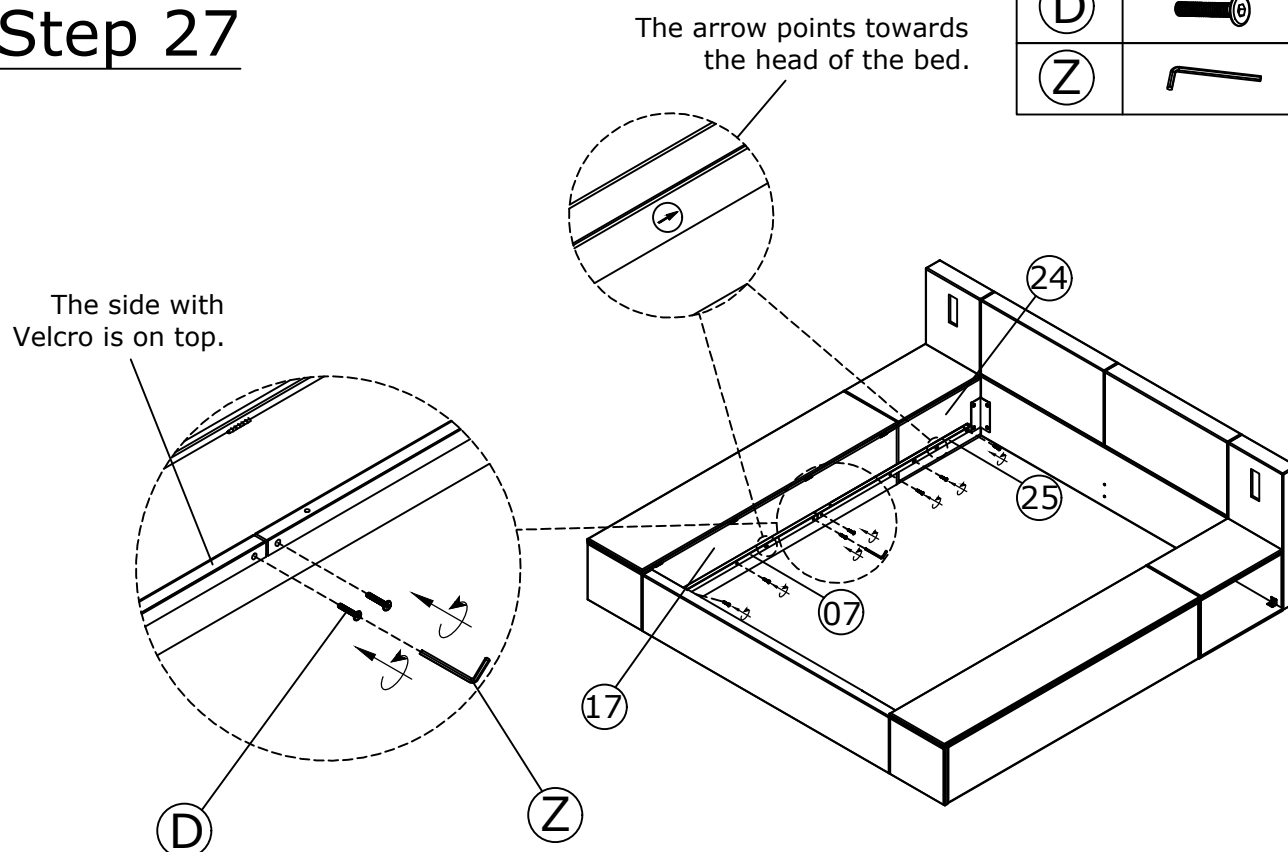

Attach the Side support 1 (7), Side support 2 (25) with back panel of the left cabinet (17), Side panel inside the small cabinet on the left (24) with M6x35mm bolts (D), use K4x60mm Allen keys (Z), and tighten the bolts.


Step 28

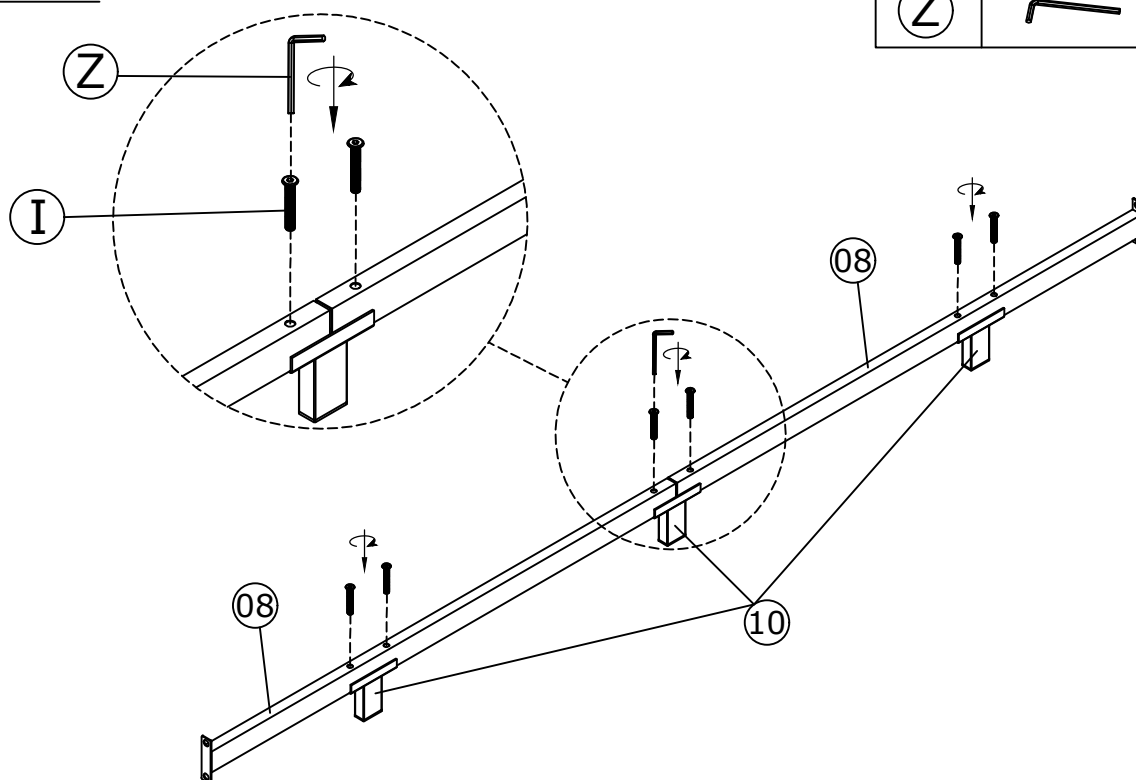

(I)		06
(Z)		01

Attach the center legs (10) with slat supports (8), with M8x50mm bolts (I), use K4x60mm Allen keys (Z), and tighten the bolts.

Step 29

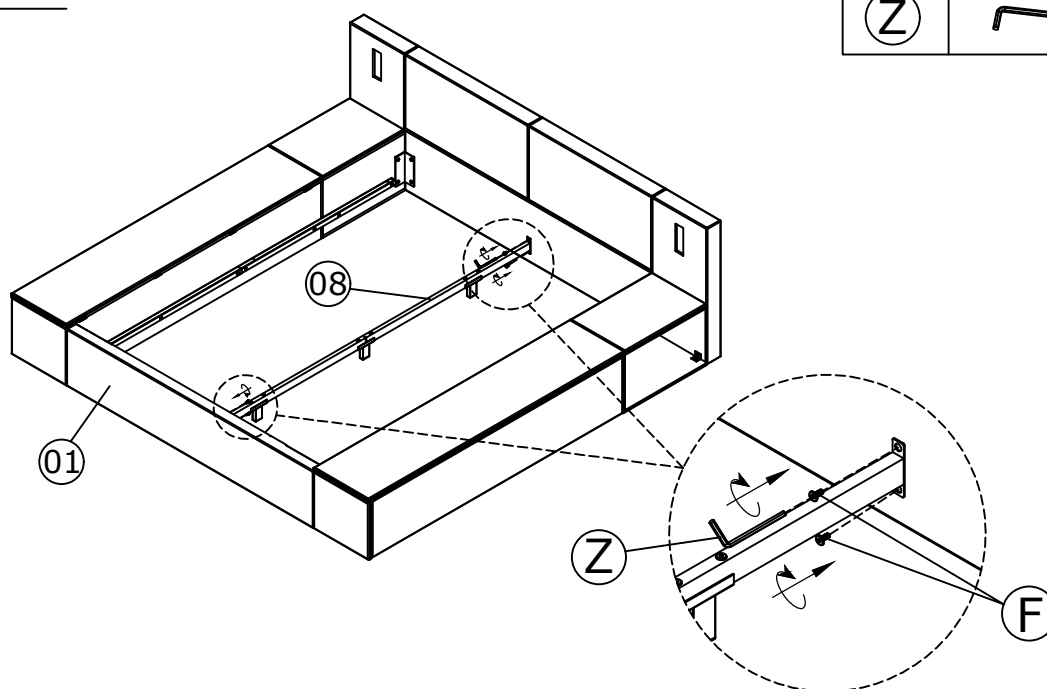

(F)		04
(Z)		01


Attach the slat supports (8) with Footboard (1), lower headboard (2), with M6x15mm bolt (F), use K4x60mm Allen keys (Z), and tighten the bolts.

Step 30

(H)





06

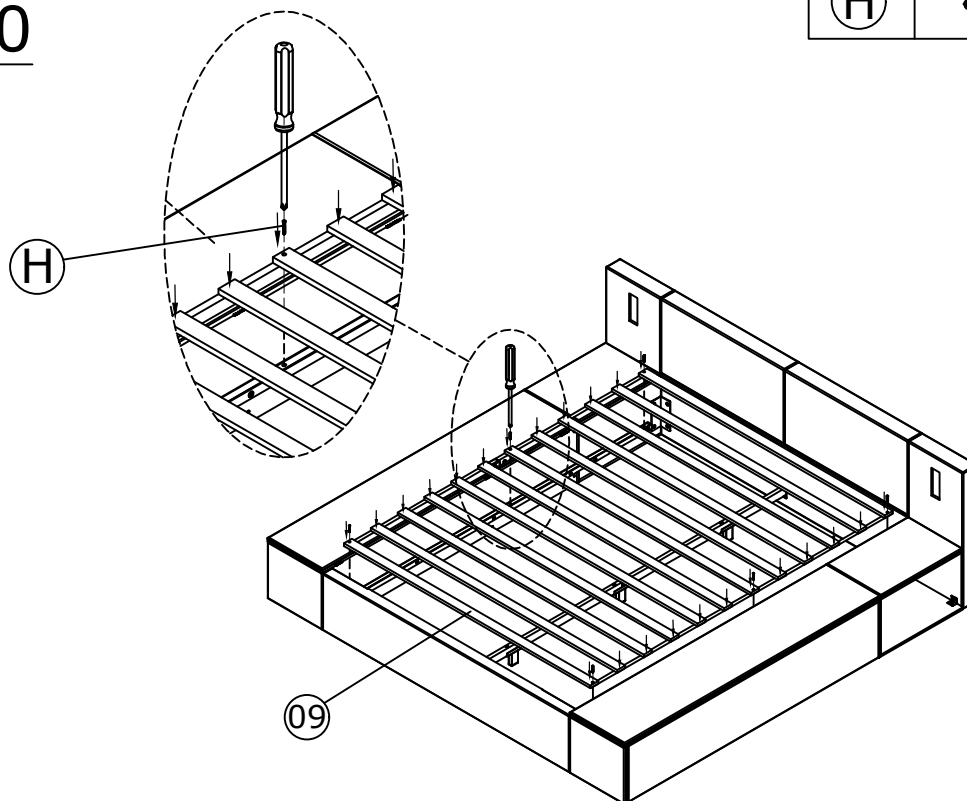

Attach the bars (9) to Side Support 1 (7), Side Support 2 (25) with M4x30mm screws and tighten the screws with a screwdriver.

Step 31

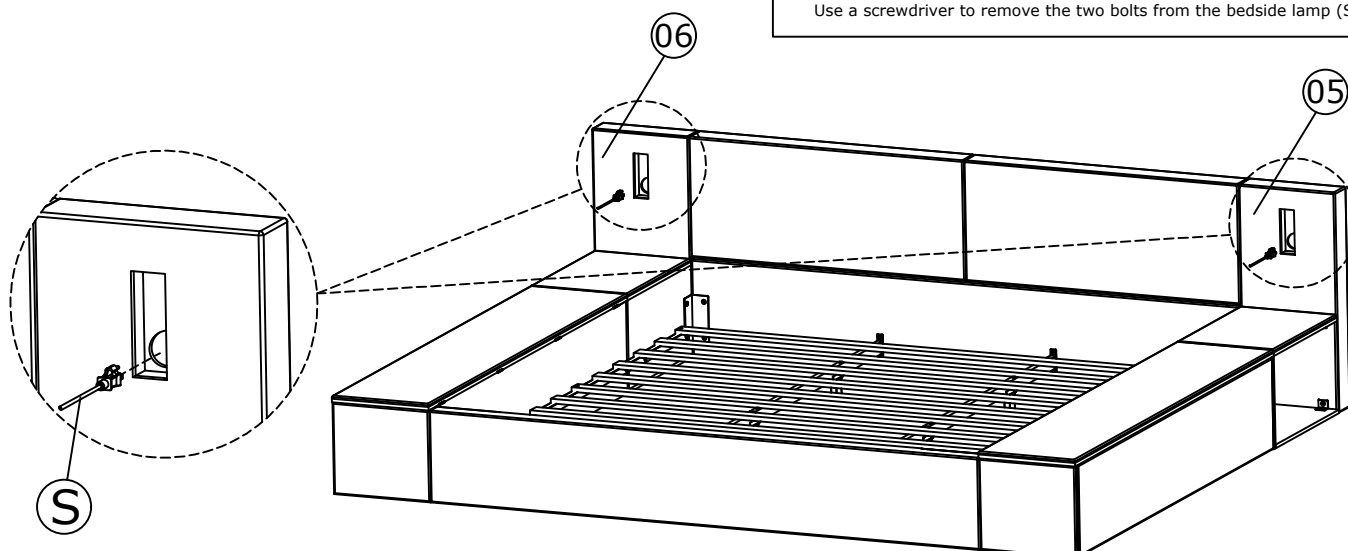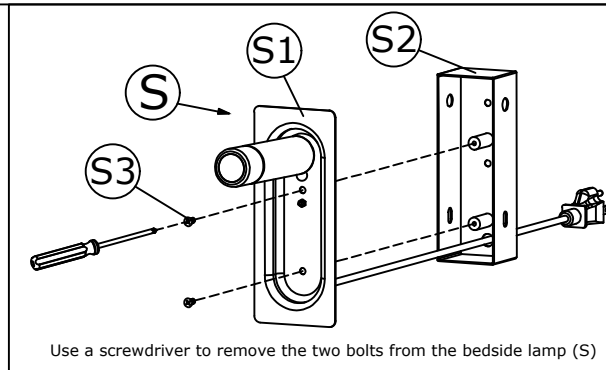


Pass the plug of bedside lamp (S) through the round hole on Wing left (6), Wing right (5).

Step 32

(J)




04

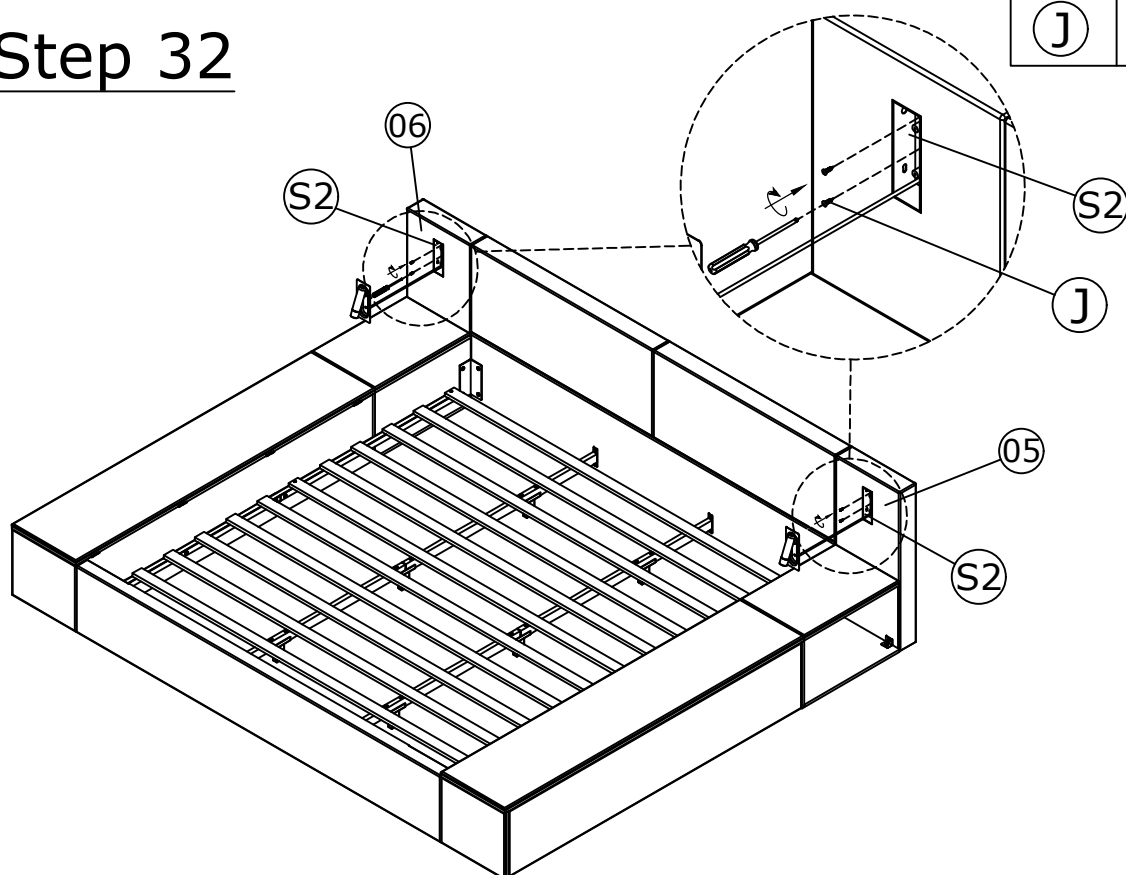


Attach the bedside lamp (S)-(S2) with wing left (6), wing right (5) with screws M4x15mm (J), and tighten the screws with a screwdriver.

Step 33

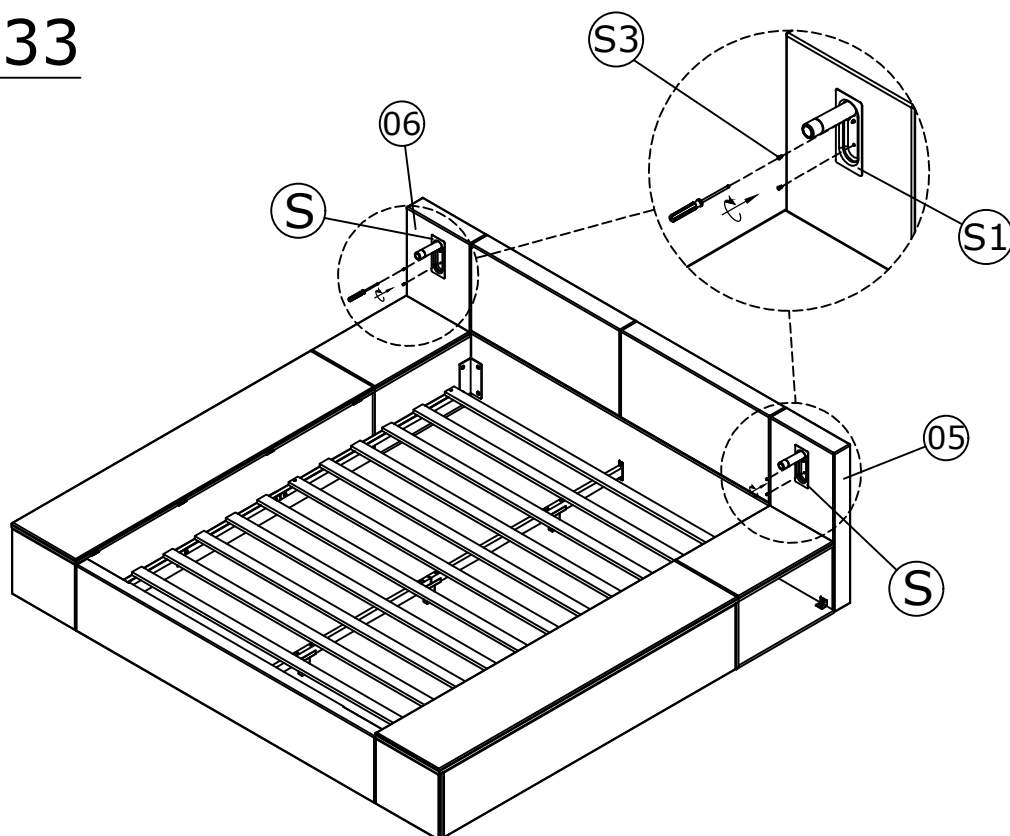

Use a screwdriver to reinstall the two bolts (S3) previously removed from the bedside Lamp (S).

Step 34

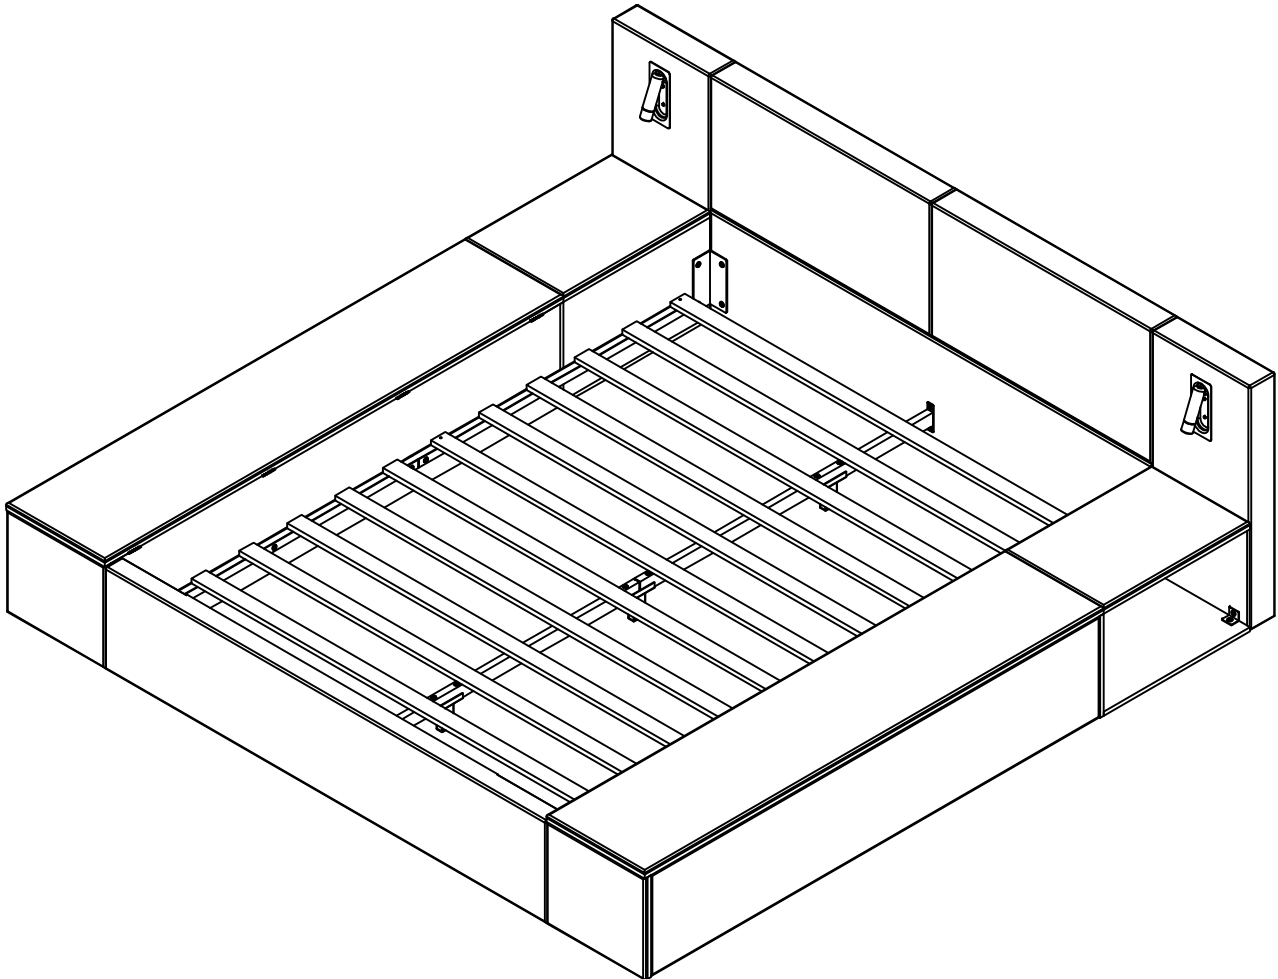

Place the Bed on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Don't push too hard, shake on the bed.

This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially. DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process. DO NOT tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.

The bed is ready to be used.

Caution 2: This bed can only be used on a flat, level surface.