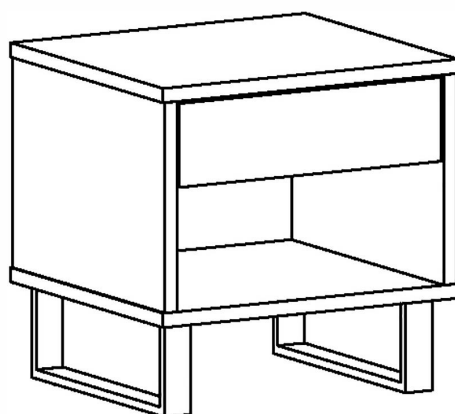


ASSEMBLY INSTRUCTION















ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


**Warning!!**

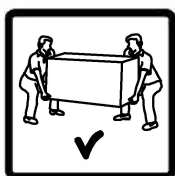1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

**ASSEMBLy TIME PER UNIT: 120 MINUTES****PARTS IDENTIFICATION**

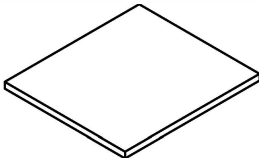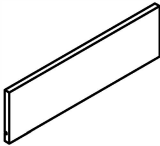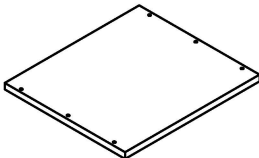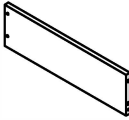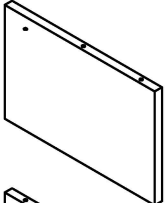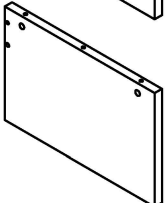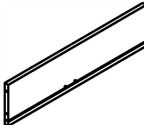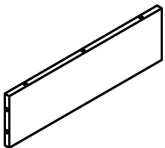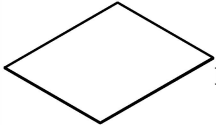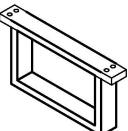
(A) TOP		1 PC	(G) DRAWER FRONT PANEL		1 PC
(B) BOTTOM PANEL		1 PC	(H) DRAWER LEFT SIDE PANEL		1 PC
(C) LEFT SIDE PANEL		1 PC	(I) DRAWER RIGHT SIDE PANEL		1 PC
(D) RIGHT SIDE PANEL		1 PC	(J) DRAWER BACK PANEL		1 PC
(E) BACK PANEL		1 PC	(K) DRAWER BOTTOM PANEL		1 PC
(F) LEG FRAME		2 PCS	(L) DRAWER BOTTOM SUPPORT		1 PC

Z	HARDWARE PACKAGE	
NO	DESCRIPTION	Q'TY
1	LARGE CAMBOLT L=29mm	8pcs
2	LARGE CAMLOCK ϕ 15mm	8pcs
3	SMALL CAMBOLT L=20mm	4pcs
4	SMALL CAMLOCK ET12mm	4pcs
5	LONG DOWEL ϕ 8X25mm	7pcs
6	SHORT DOWEL ϕ 6X30mm	2pcs
7	SCREW ϕ 4x30mm	6pcs
8	WOOD SCREW ϕ 7x48mm	4pcs
9	WASHER ϕ 8X16X2mm	4pcs
10	WRENCH M4mm	1pc
11	INNER HEX SCREW M6x20mm	8pcs
12	STICKER ϕ 22mm	8pcs
13	GLUE	1pc

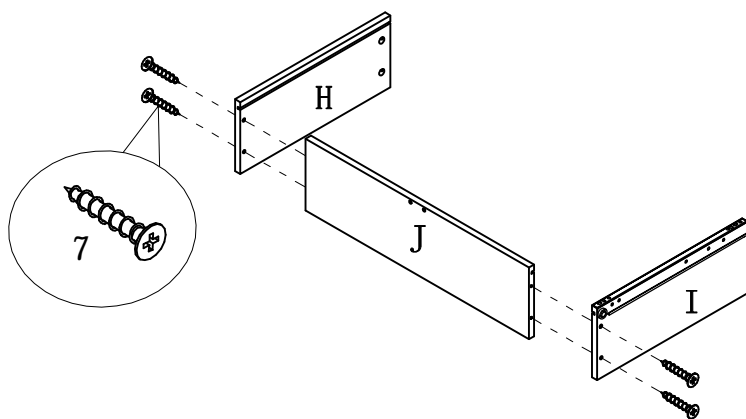








STEP1

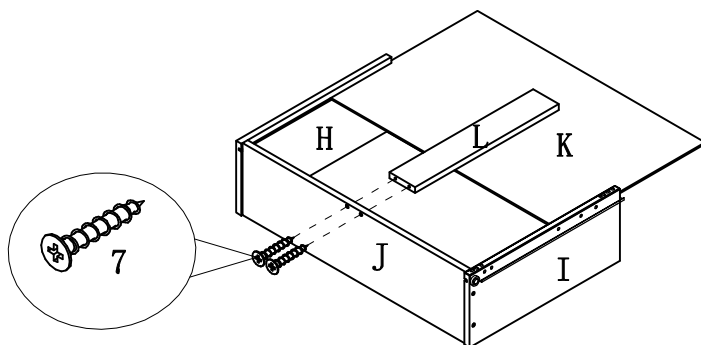STEP2




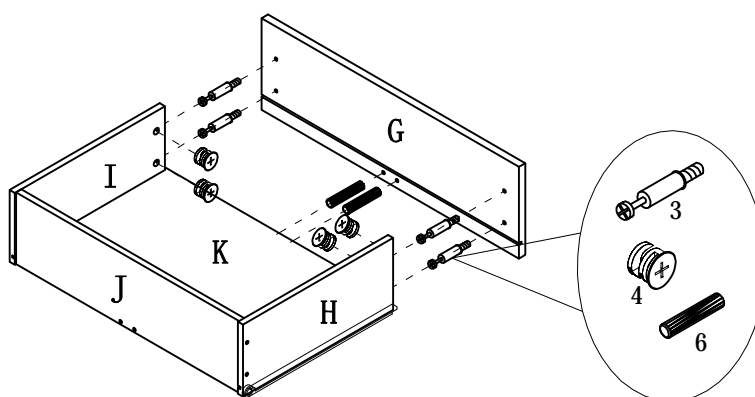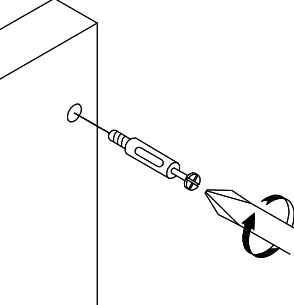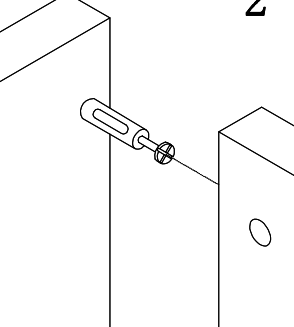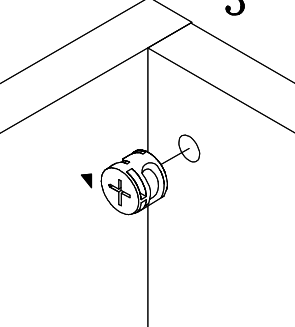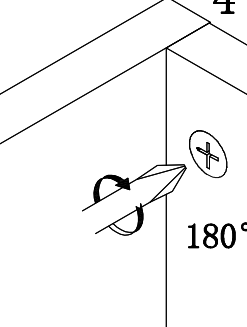
STEP3




HOW TO	1	2	3	4
 Cam Bolt  Cam Lock	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position. 180°

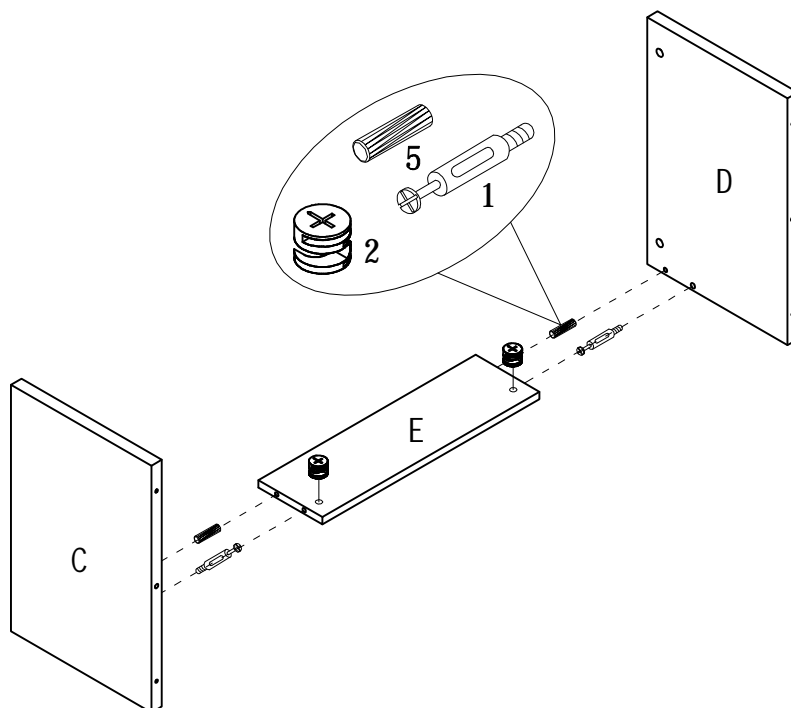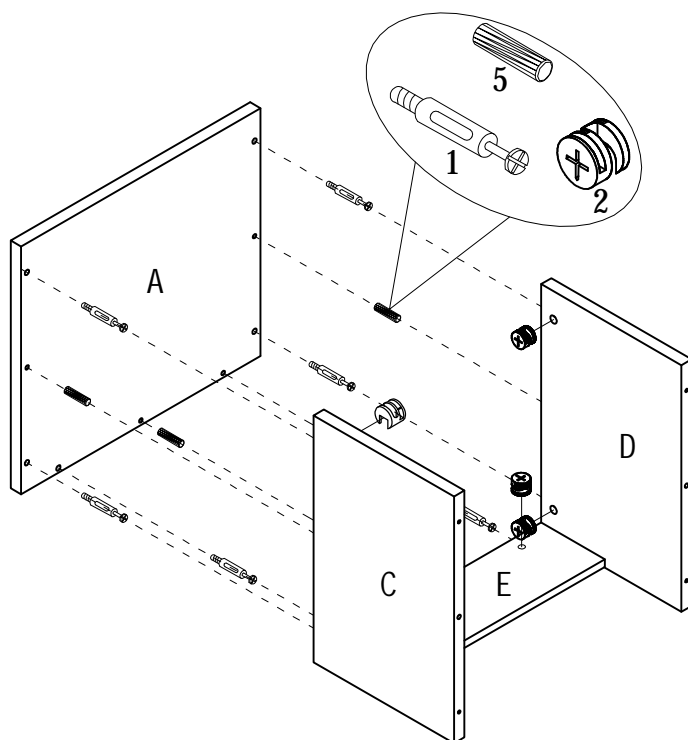STEP4






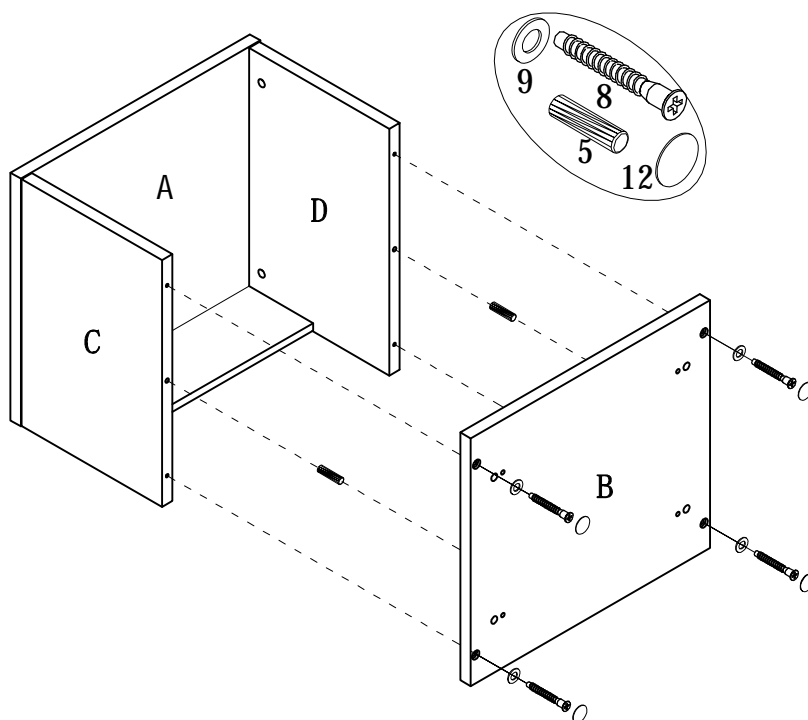STEP5



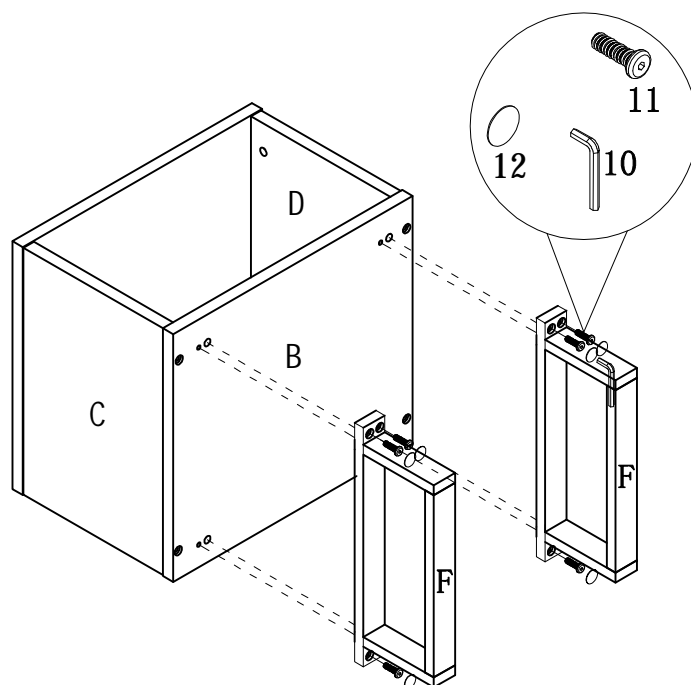STEP6



STEP7

STEP8

