

Upholstered Platform Bed with Tufted Wingback Headboard.

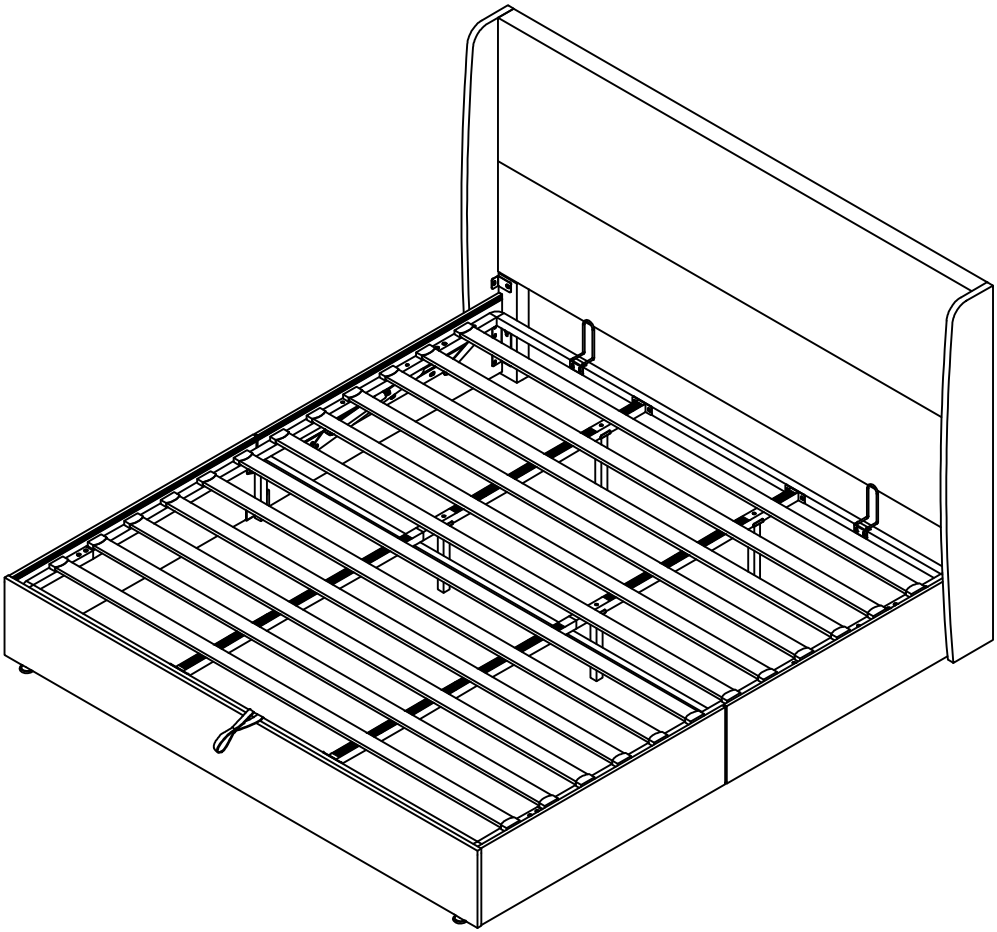


Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

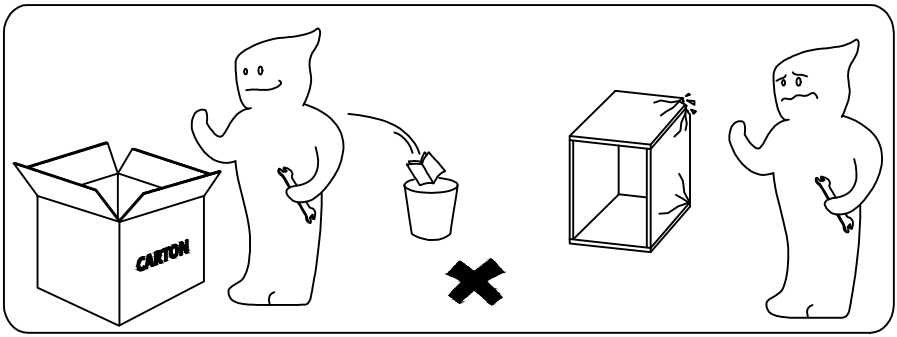


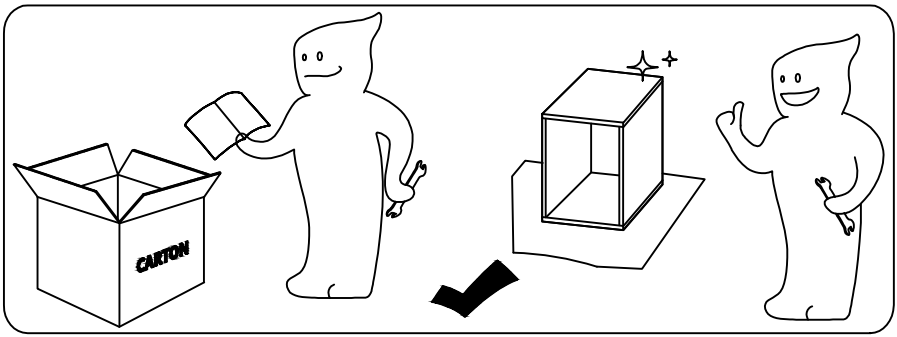















Note:
1.Should be assembled on flat ground to keep balance.
2.Before completing the installation,do not tighten the screws.












For easier and better assembly, 2 or more adults are required.

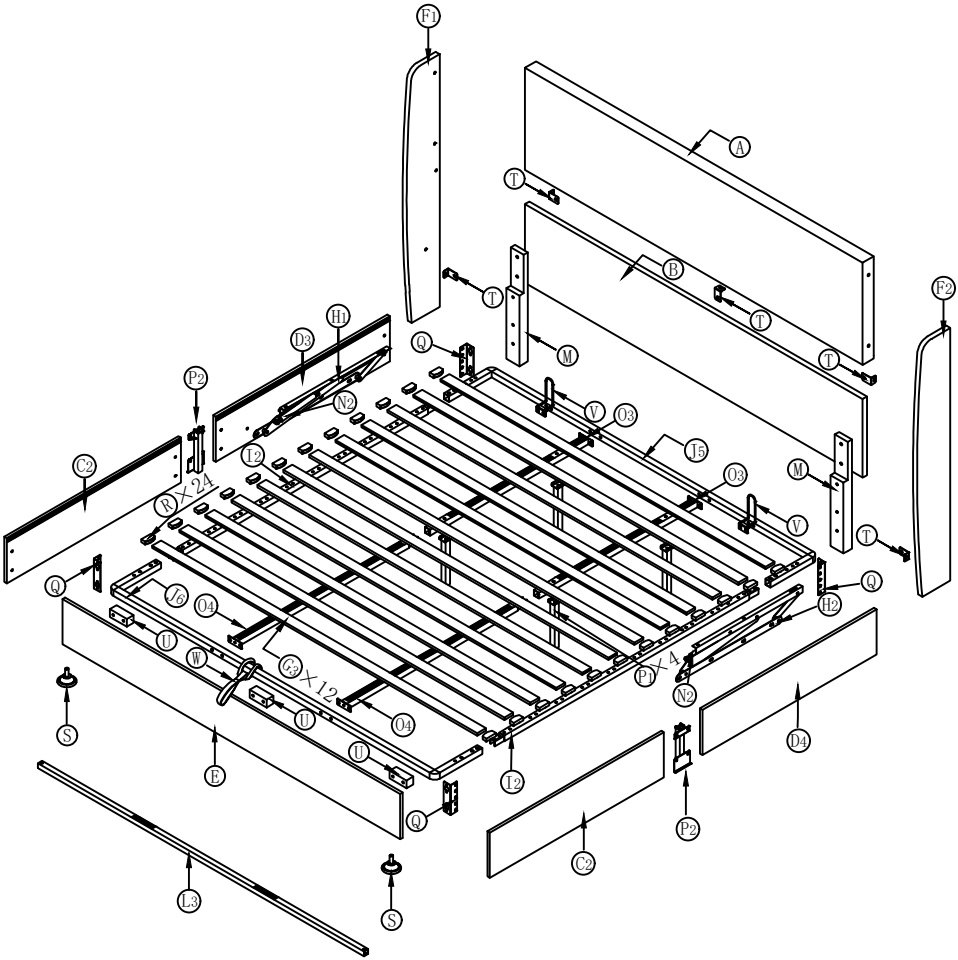
F1
A
T
B
T
T
F2
H1
D3
Q
M
P2
N2
V
O3
I5
O3
C2
T2
R×2
M
V
T
Q
Q
I6
O4
H2
U
W
G3×12
P1×4
N2
O4
U
U
D4
S
E
T2
Q
C2
P2
L3
S





Part List

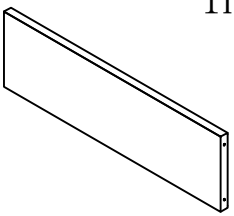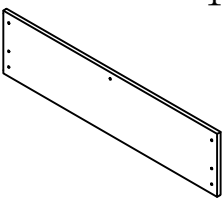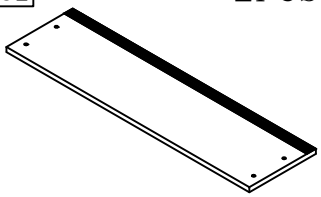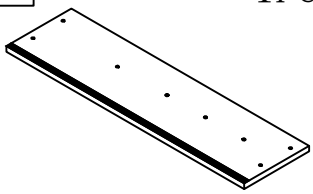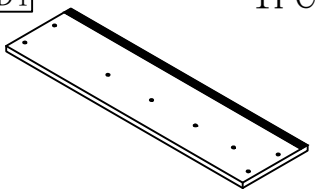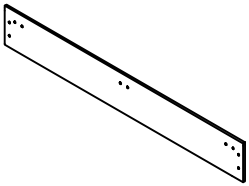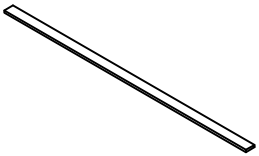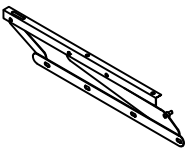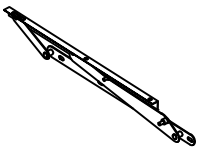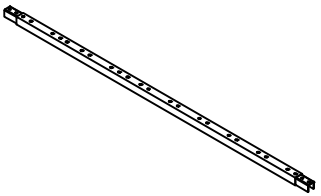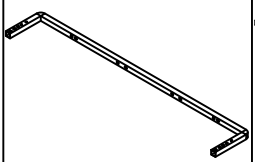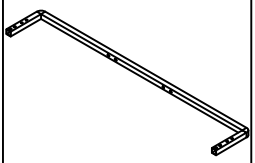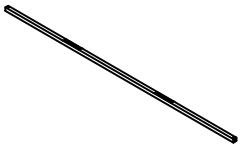A 1PC  Top headboard	B 1PC  Bottom headboard	C2 2PCS  Rear bed side
D3 1PC  Left front bed side	D4 1PC  Right front bed side	E 1PC  Footboard
F1 1PC  Left wing	F2 1PC  Right wing	G3 12PCS  Slat
H1 1PC  Left lift frame	H2 1PC  Right lift frame	I2 2PCS 
J5 1PC 	J6 1PC 	L3 1PC  Cross bar
M 2PCS 		


Part List

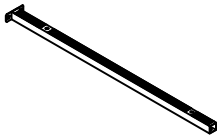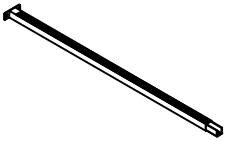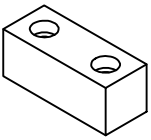N2 2PCS  Hydraulic rod	O3 2PCS  Front Middle support bar	O4 2PCS  Rear middle support bar	P1 4PCS  Support leg
P2 2PCS 	Q 4PCS  Connector	R 24PCS 	S 2PCS  Leg
T 5PCS  Connector	U 3PCS 	V 2PCS 	W 1PC 

Hardware List

X1 4PCS  M8*50mm	X2 12PCS  M8*45mm	X3 10PCS  M8*40mm	X4 12PCS  M8*30mm	X5 13PCS  M8*25mm
X6 41PCS  M8*14mm	Y 10PCS  M8	Z1 4PCS  ϕ22*ϕ8.5	Z2 1PC  M8 Spanner	Z3 1PC  M8 Spanner


1

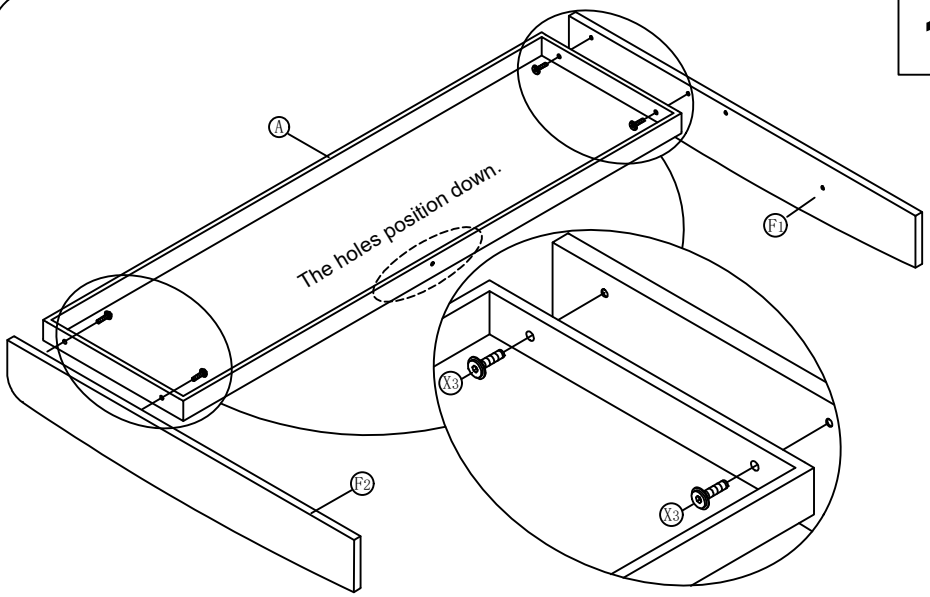

X3	M8*40	4PCS

Back side


2

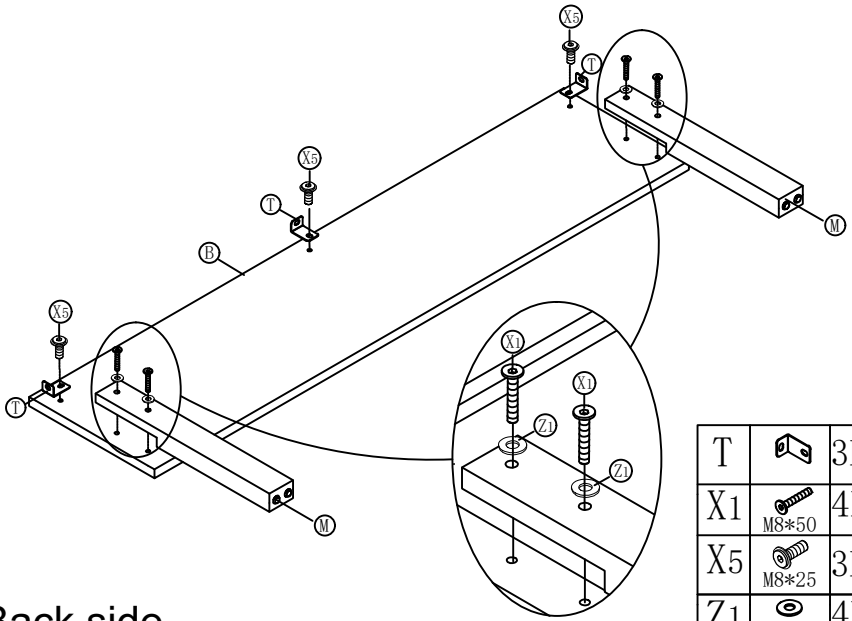

T		3PCS
X1	M8*50	4PCS
X5	M8*25	3PCS
Z1	ø22*ø8.5	4PCS

Back side


3

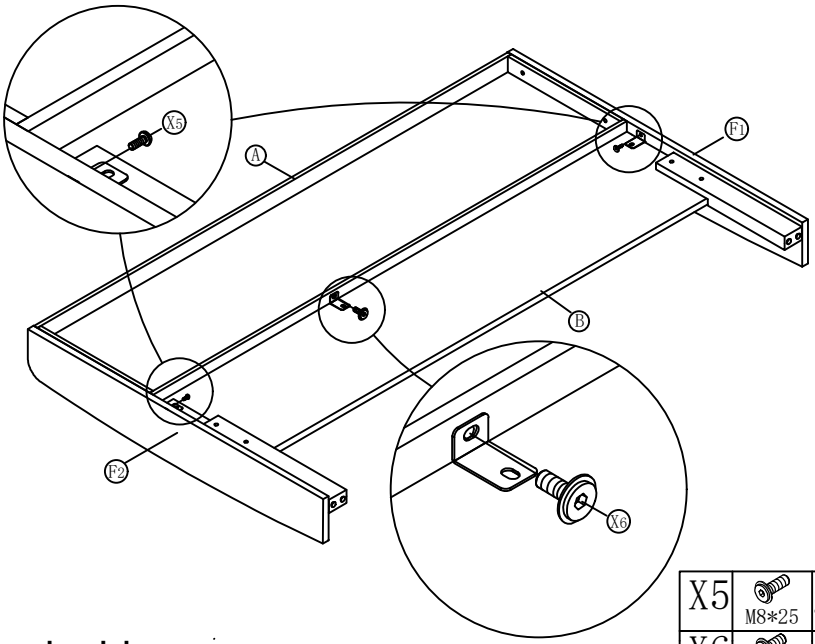

X5	M8*25	2PCS
X6	M8*14	1PC


Back side

4

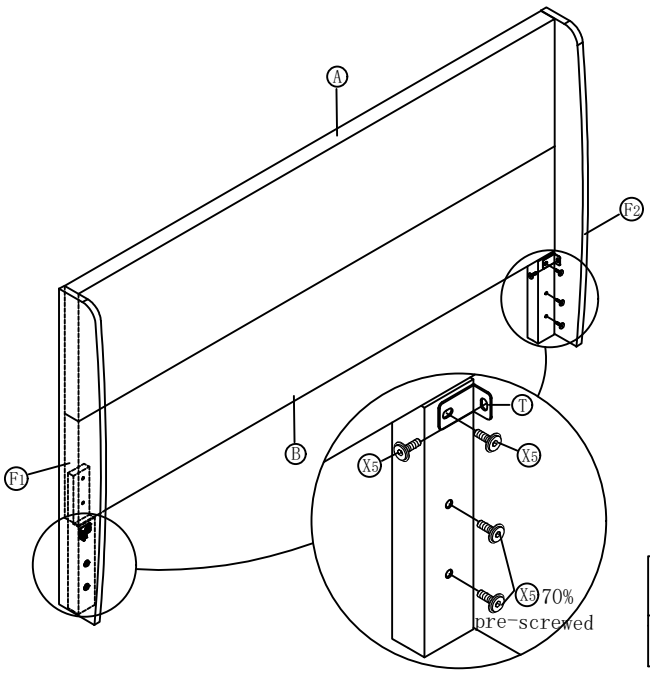


T		2PCS
X5	M8*25	8PCS


5

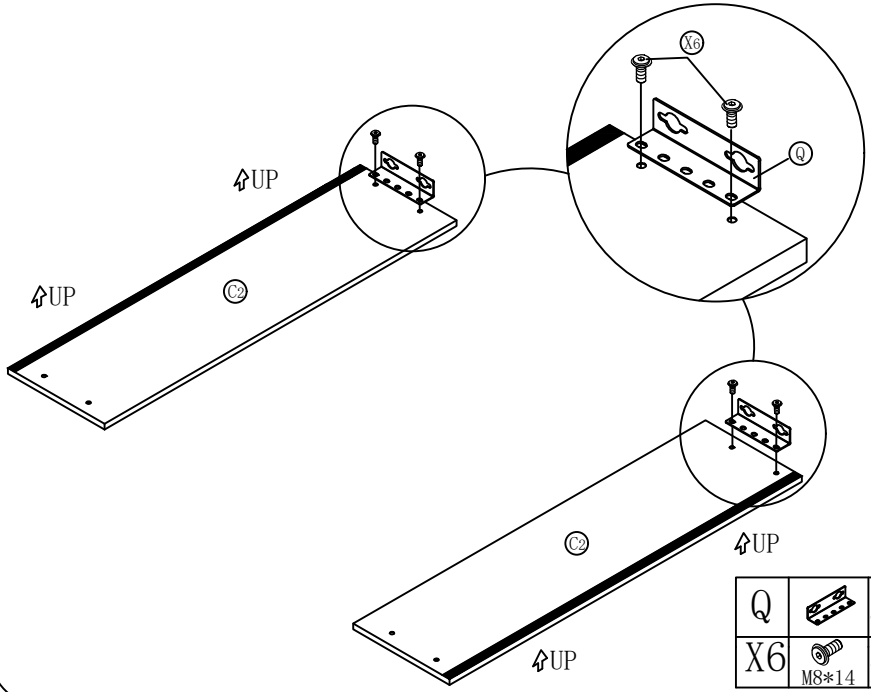

Q		2PCS
X6	M8*14	4PCS


6

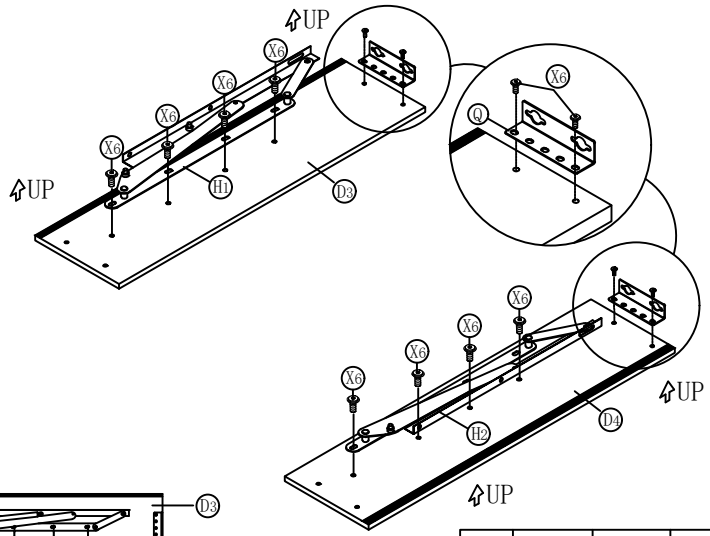

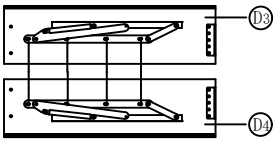


H1		1PC	Q		2PCS
H2		1PC	X6	M8*14	12PCS

7

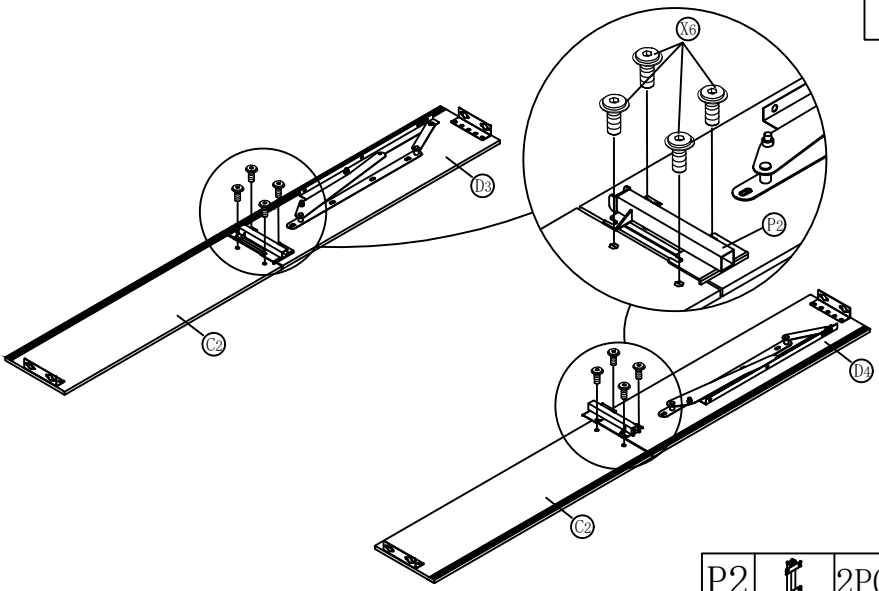



P2		2PCS
X6	M8*14	8PCS

8

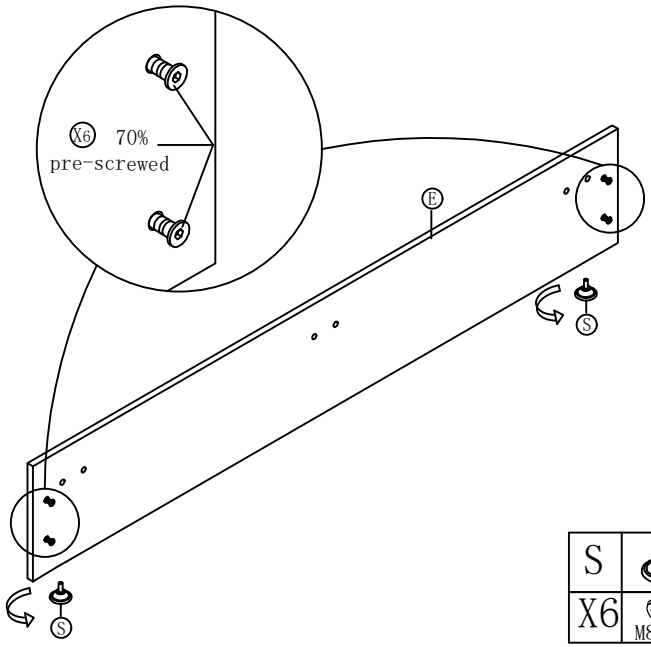


S		2PCS
X6	M8*14	4PCS

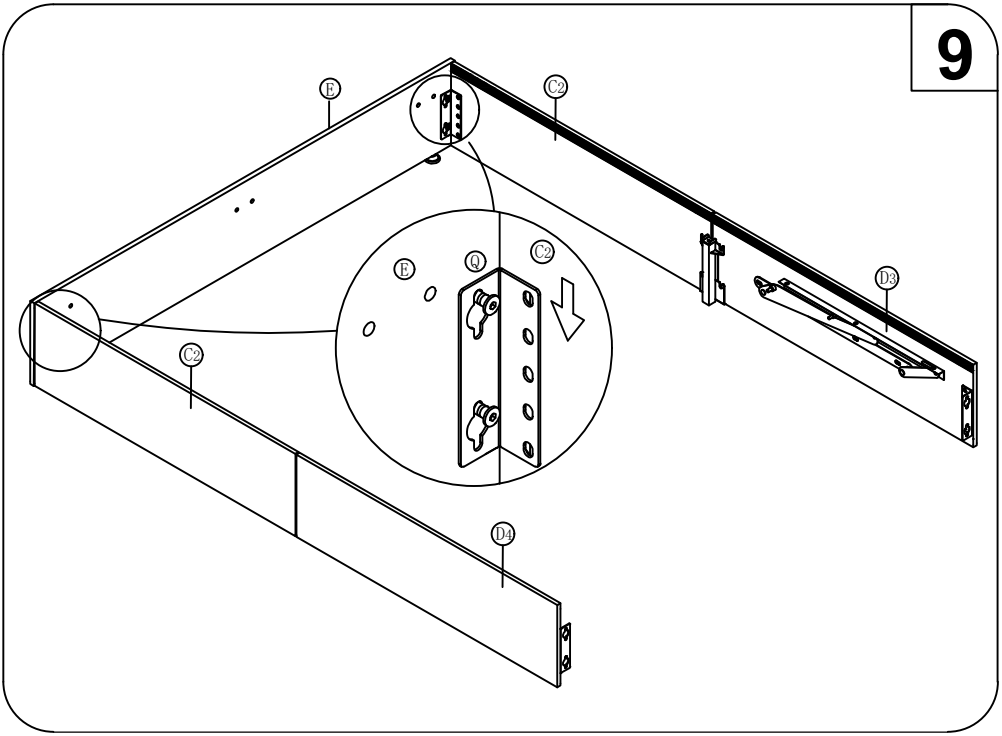

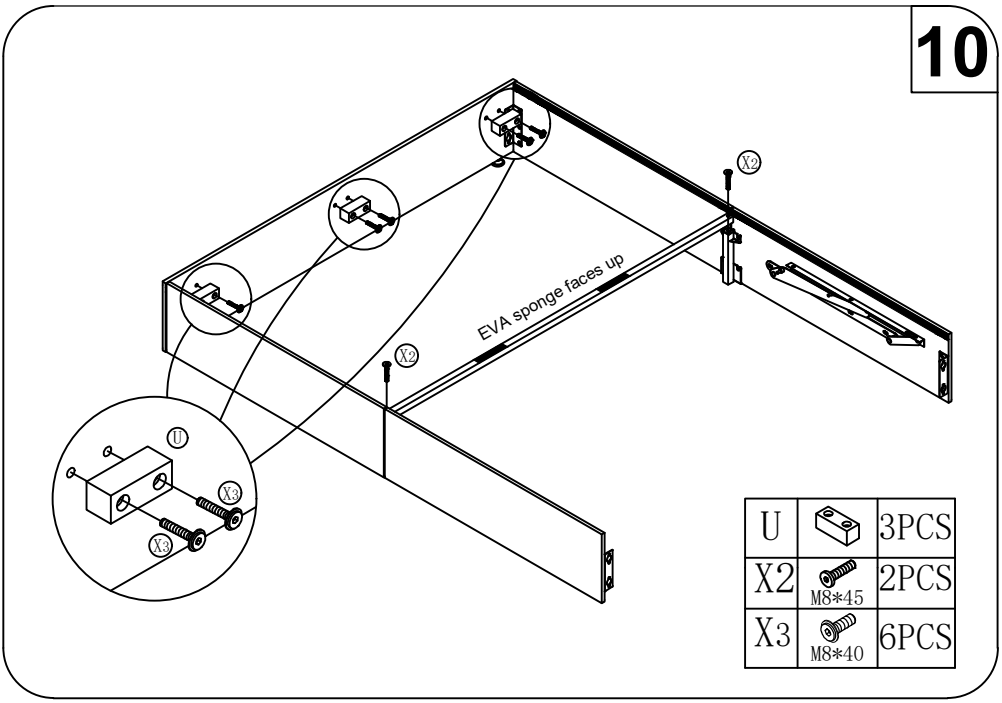


U		3PCS
X2	M8*45	2PCS
X3	M8*40	6PCS

11

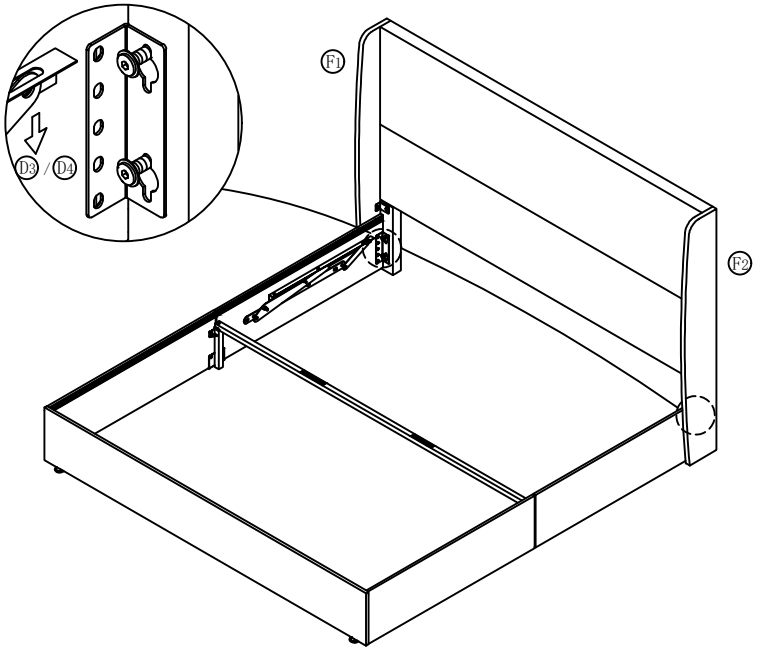

12

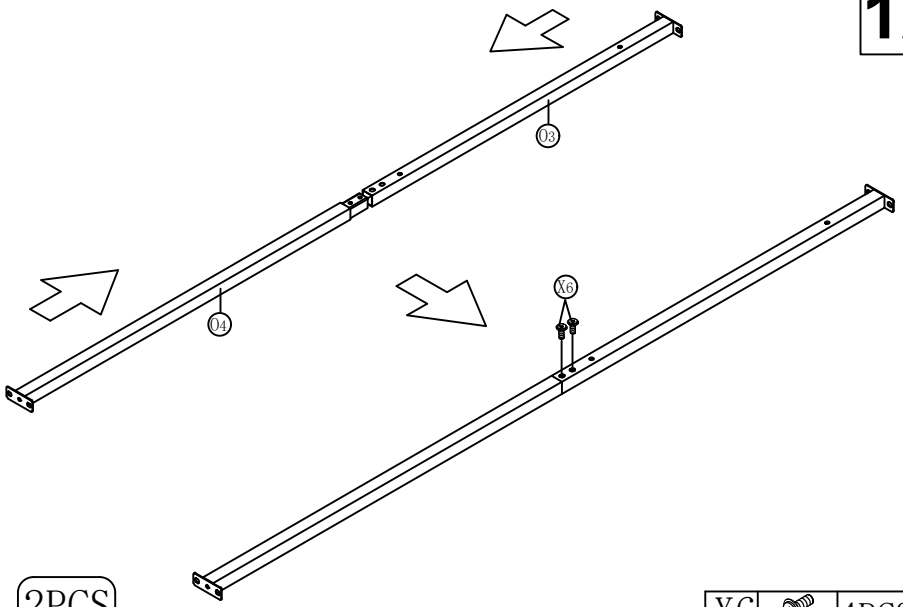


2PCS


X6	M8*14	4PCS

Note: Align the arrow marks
for installation.

13

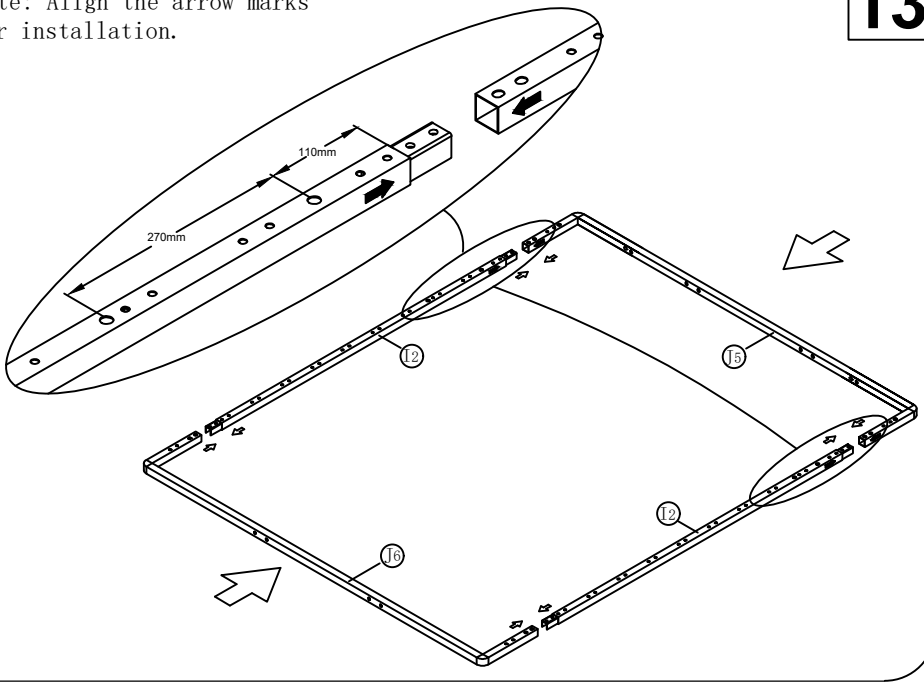


14

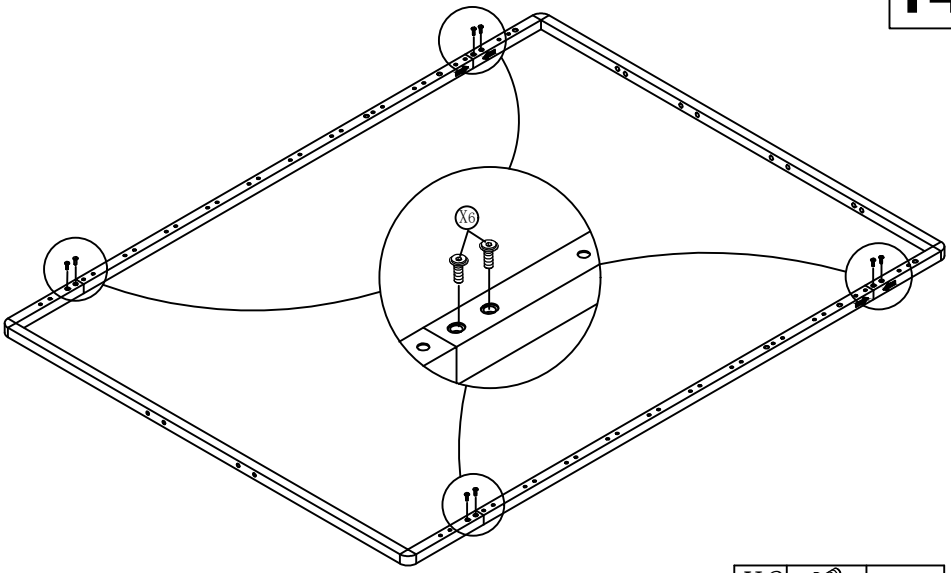


X6	M8*14	8PCS

15

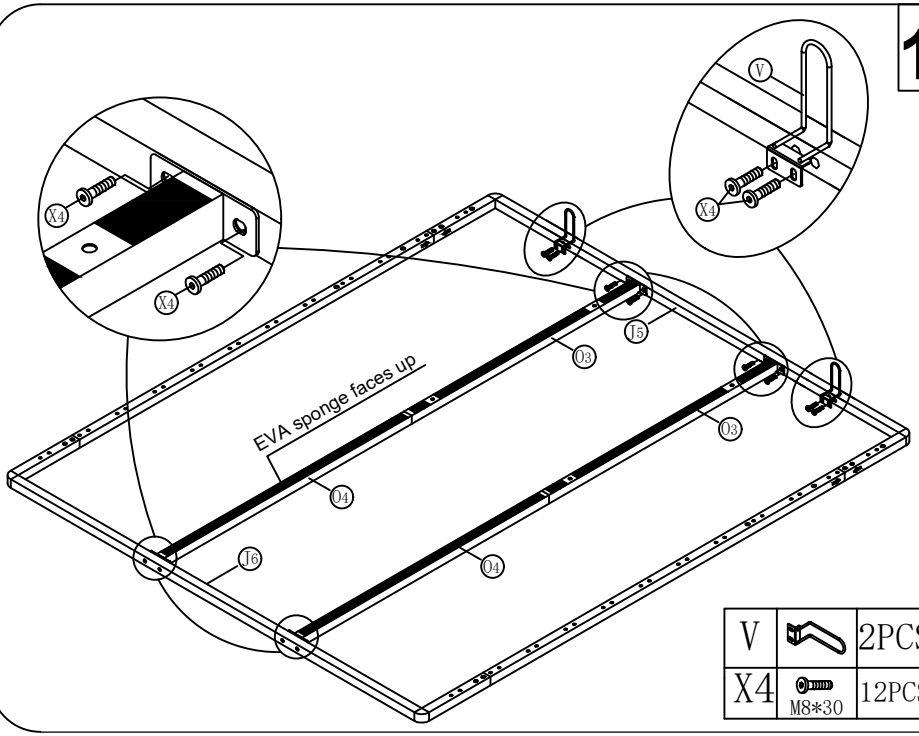


V		2PCS
X4	M8*30	12PCS

16

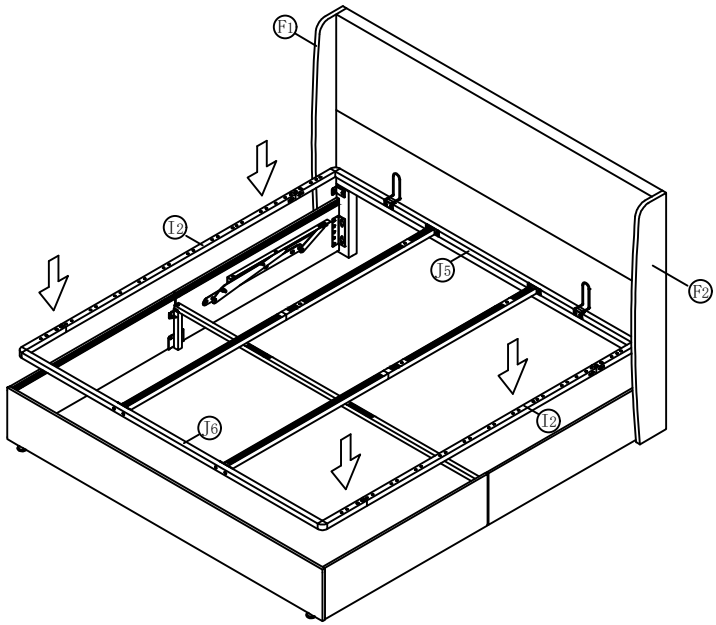


17

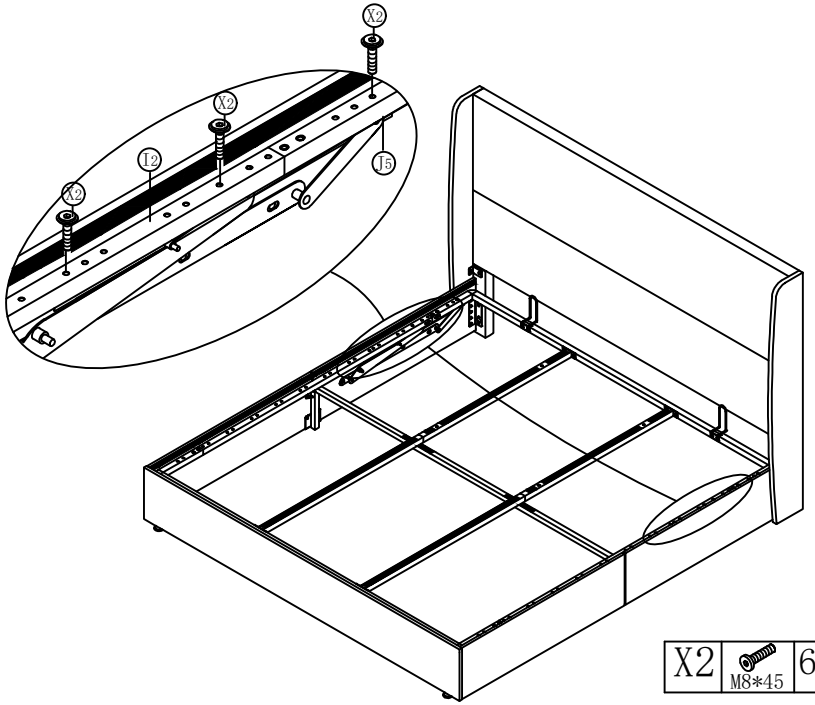


X2	M8*45	6PCS

18

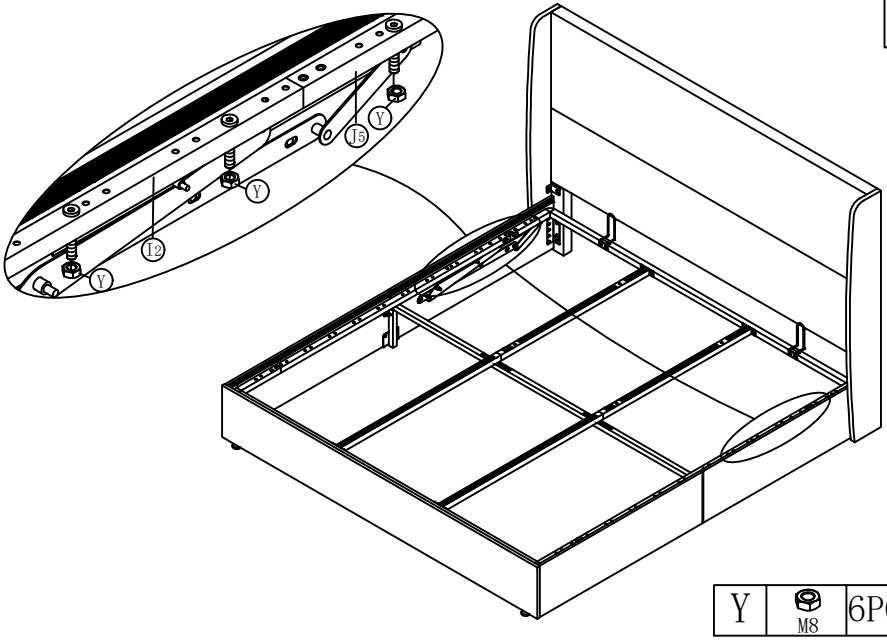

Y	M8	6PCS


Tips：If only one person installs the Hydraulic rod, one hand to hold the l2 up and the another put the N2 on the right position as shown in the figure. After installing the N2, tighten the screws.

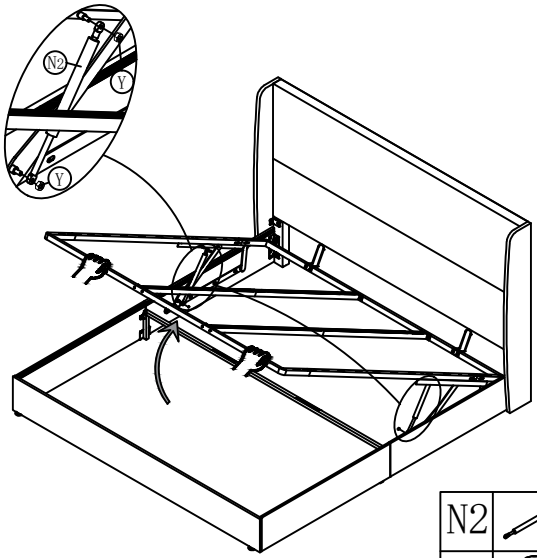


N2		2PCS
Y	M8	4PCS

Note: 1. It requires extra force to push down when there is no mattress placed on it.

2. The hydraulic struts only function when mounted on the bed frame and cannot be actuated independently.

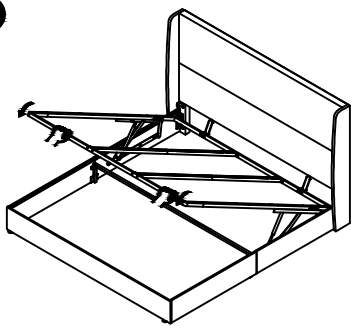


Operate from the foot of the bed

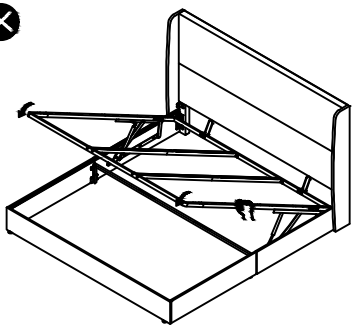

To avoid deformation of the metal frame, do not operate from the sides of the bed.


20

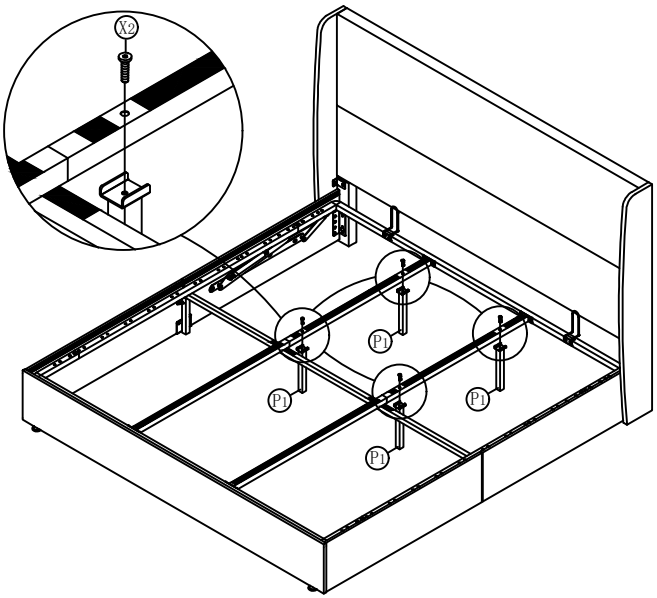

Lock all the screws.


X2	M8*45	4PCS

21

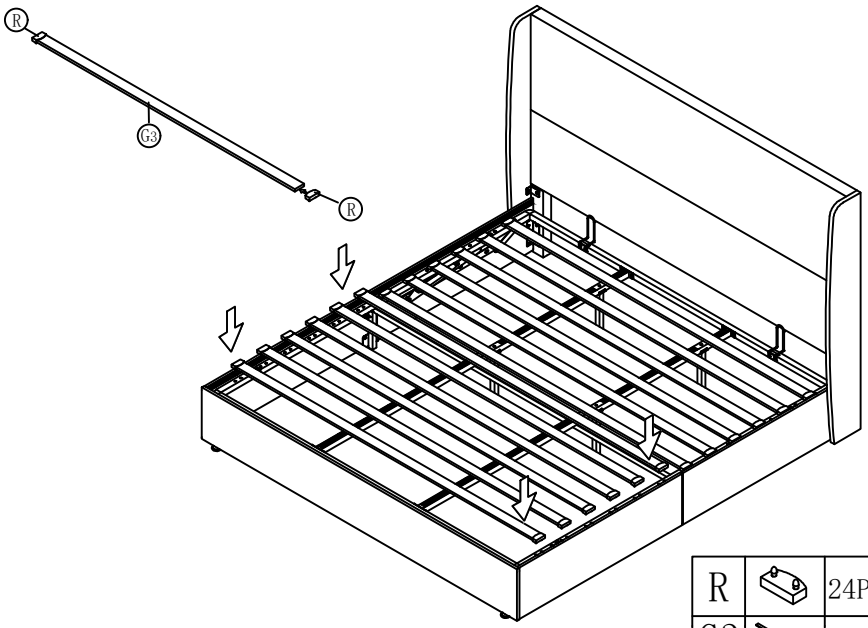

R		24PCS
G3		12PCS

22

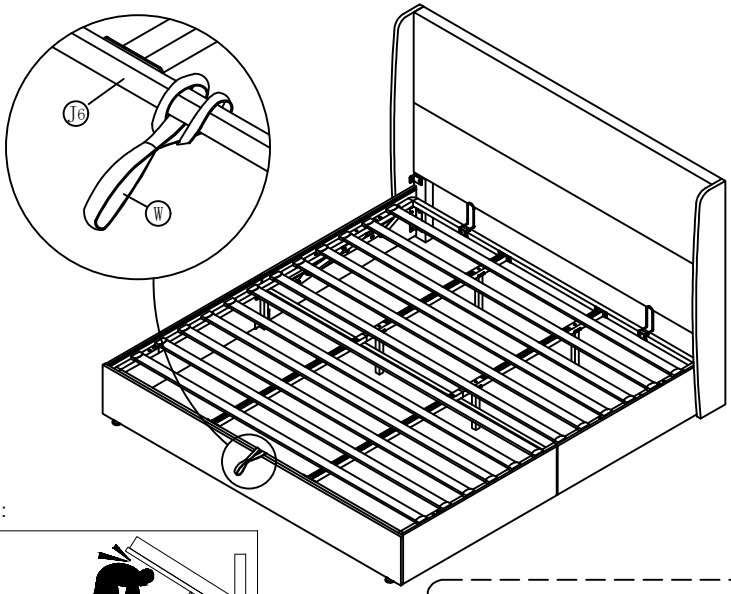

Warning Label:



Installation Complete

