


# Assembly Instruction


INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US**

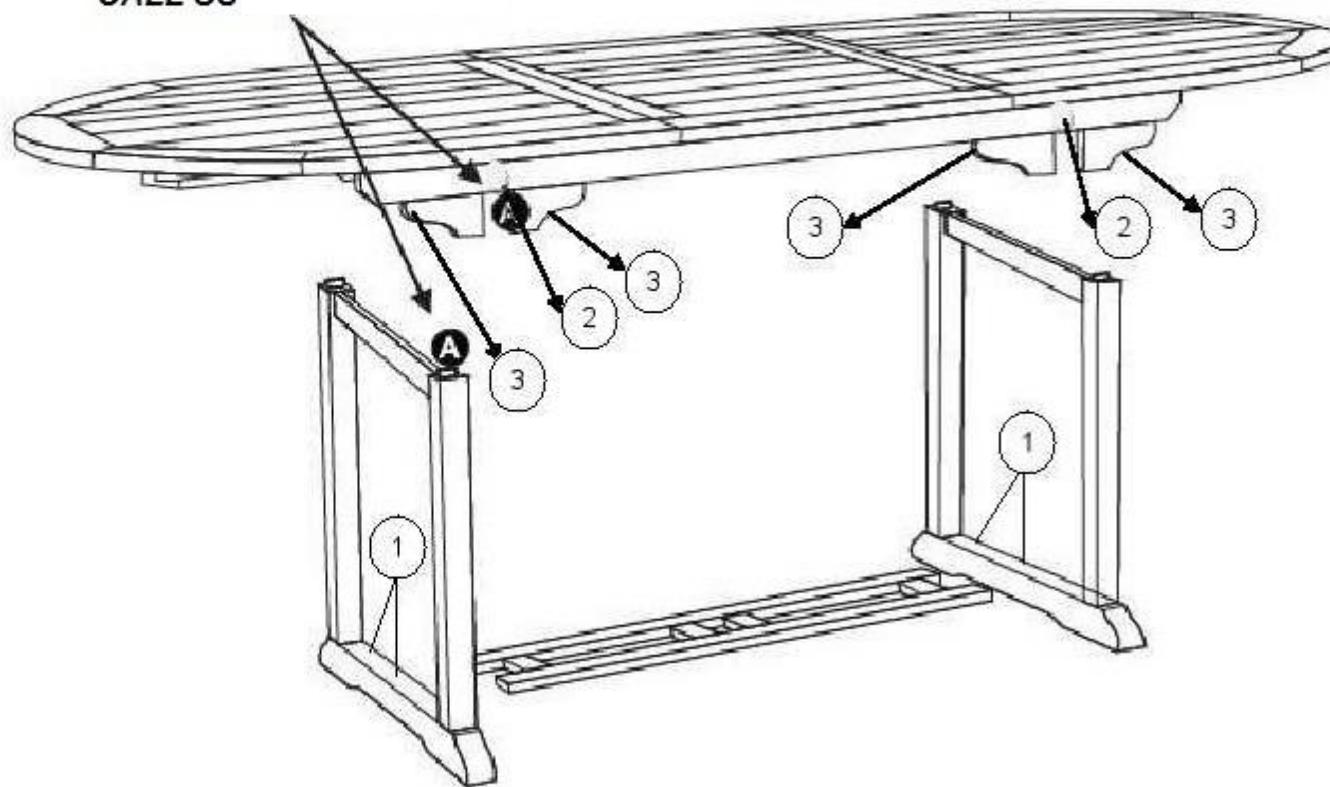

**Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly**

## Hardware

-  1. Custom Bolt 50 mm (4 Pcs)
-  2. Custom Bolt 25 mm (4 Pcs)
-  3. Screw 40 mm (8 Pcs)

## Tool



Socket Wrench 4mm Hex

## Total Section

**4 Section**