


This manual will give you basic instructions for the installation of tub and shower accessories in a step-by-step sequence that will work in most types of installations. If you have an installation that is not covered in this manual, please call your local Transolid distributor or contact Transolid directly for additional information to cover your application.

### Tools and Supplies Needed for Installation

- Pencil
- Straight Edge
- Silicone Caulk
- Tape Measure
- Compass

1. If you are replacing an existing sink, remove the old sink and proceed to step 5. For installation of a new countertop, go to step 2.


2. Place sink upside-down on countertop, positioning sink front to back so that the bowls will not interfere with the cabinets below. Use a pencil to trace around the outside of the sink, then remove the sink from the countertop. See Figure 1.

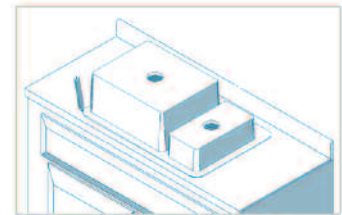

**Figure 1.** Trace edge of sink with pencil.

3. Measure in 1/2" from the sink outline and draw a second line inside the first line. Use the compass to draw a 1 1/2" radius at each corner of the second line. This inside line will be the cutout line. See Figure 2.

4. Following your countertop manufacturer's instructions for cutting, cut out the opening for the sink along the line you drew in Step 2. Take care not to remove too much material. Erase all remaining pencil marks.

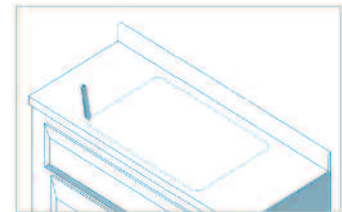


**Figure 2.** Draw cutout line 1/2" in from sink outline.

5. Test fit the sink in the countertop cutout with the faucet flange to the back. If an adjustment needs to be made to the cutout, do so now. Remove the sink from the countertop.

6. Install the faucet and drains according to the manufacturer's instructions. **DO NOT OVERTIGHTEN** any fasteners or drain connections – this could damage the sink. (If faucet holes are not yet drilled, refer to Faucet Hole Drilling on the back of this page.)

7. Apply a bead of silicone around the countertop cutout. See Figure 3. Gently lower the sink into the countertop, and wipe away any excess silicone. Connect the drain fittings to the waste trap. Connect the water supply to the faucet. Allow the silicone to cure according to the manufacturer's instructions. **CAUTION! DO NOT OVERTIGHTEN!** Over tightening of fittings may cause damage to solid surface products. Hand tighten first until all fittings are sealed, then turn additional 1/2 to 3/4 turn.

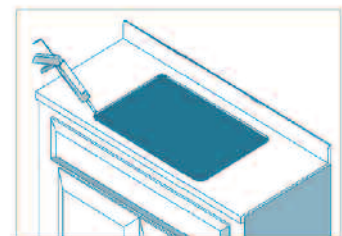

**Figure 3.** Apply silicone caulk around the opening.

Gracias por comprar una Tarja Transolid. Por favor, lea cuidadosamente las instrucciones antes de instalar su Tarja. Estas son las instrucciones básicas para su instalación en una secuencia paso a paso que funcionará en la mayoría de los tipos de instalaciones. Si usted tiene una instalación que no está cubierta aquí, por favor pónganse en contacto con Transolid para obtener información adicional.

### Herramientas y suministros necesarios para la instalación

- Lápiz
- Regla
- Sellador de silicón
- Cinta métrica
- Compás

1. Si se está reemplazando una tarja existente, eliminar la vieja tarja y proceder al paso 5.

2. Coloque la tarja boca abajo sobre la cubierta, posicionándolo de manera que la tarja (en su posición final) no interfiera con el interior de ninguno de los gabinetes. Utilice un lápiz para trazar alrededor del exterior del fregadero, después retire la tarja de la cubierta. (Ver Fig. 1).

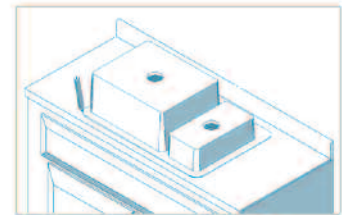


Figure 1. Trace edge of sink with pencil.

3. Mida 1/2" del contorno del fregadero y dibuje una segunda línea en el interior de la primera línea. Use el compás para señalar un radio de 1 1/2" en cada esquina de la segunda línea. Esta línea interna será la línea de corte. (Ver Fig. 2).

4. Siguiendo las instrucciones de corte del fabricante de la cubierta, corte la apertura para el fregadero a lo largo de la línea que señaló en el paso 3. Tenga cuidado de no eliminar demasiado material y al final borrar todas las demás marcas de lápiz.

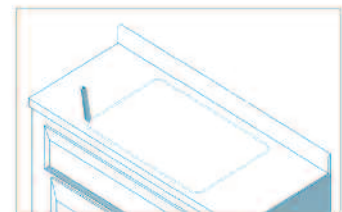


Figure 2. Draw cutout line 1/2" in from sink outline.

5. Pruebe que el fregadero se ajuste en la cubierta cuidando que el área para llave mezcladora se coloque en la trasera de la cubierta. Si tiene que hacer algún ajuste al orificio, hágalo ahora. Retire el fregadero de la cubierta.

6. Instale la llave mezcladora y los drenajes de acuerdo con las instrucciones del fabricante. No sobre apriete los sujetadores o cualquiera de las conexiones del drenaje - esto podría dañar el fregadero. (Si los orificios de la llave mezcladora todavía no se han perforado, consulte las instrucciones para barrenado de orificios de la llave mezcladora al reverso de esta página)

7. Aplique silicón alrededor del corte de la cubierta. (Ver Fig. 3). Suavemente coloque la tarja dentro de la cubierta y limpie cualquier exceso de silicón. Conecte la tubería al drenaje. Conecte la alimentación del agua a la llave mezcladora. Dejar que el silicón seque de acuerdo con las instrucciones del fabricante.

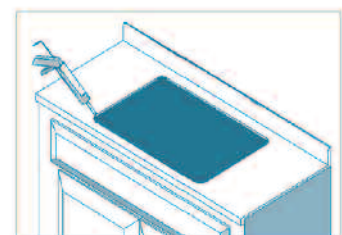


Figure 3. Apply silicone caulk around the opening.

**PRECAUCIÓN:** No sobre apretar. Sobre apretar las piezas puede causar daños a los productos de superficie sólida. Primero apriete a mano las conexiones hasta que estas estén selladas, enseguida gire 1/2 a 3/4 de vuelta.