


ASSEMBLY INSTRUCTION FOR

SAXON CABINET


Hardware List

A		Vacuum Bat	12
B		Tipping Hardware	2 SET
C		Screw Driver (Not Included)	01

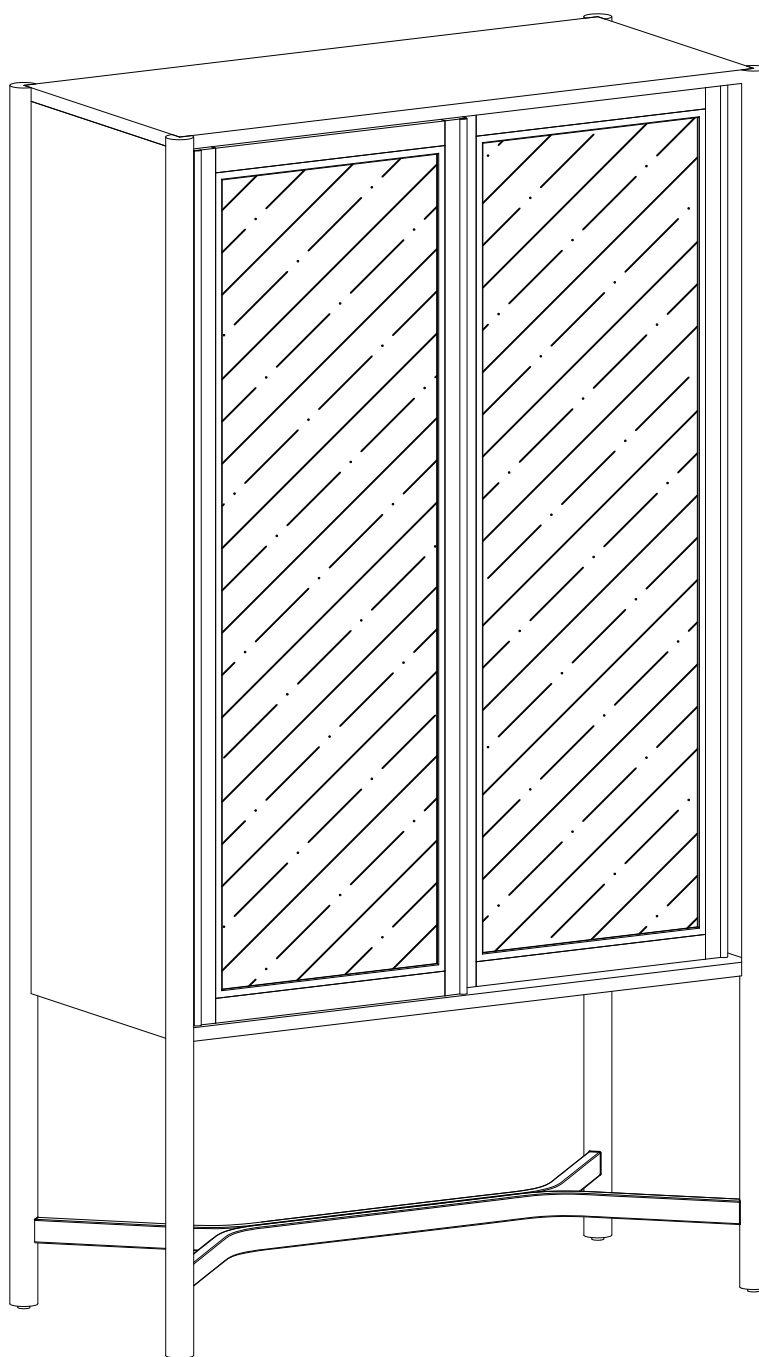


CAUTION : Please do not over tighten bolt / Screws

Step 1

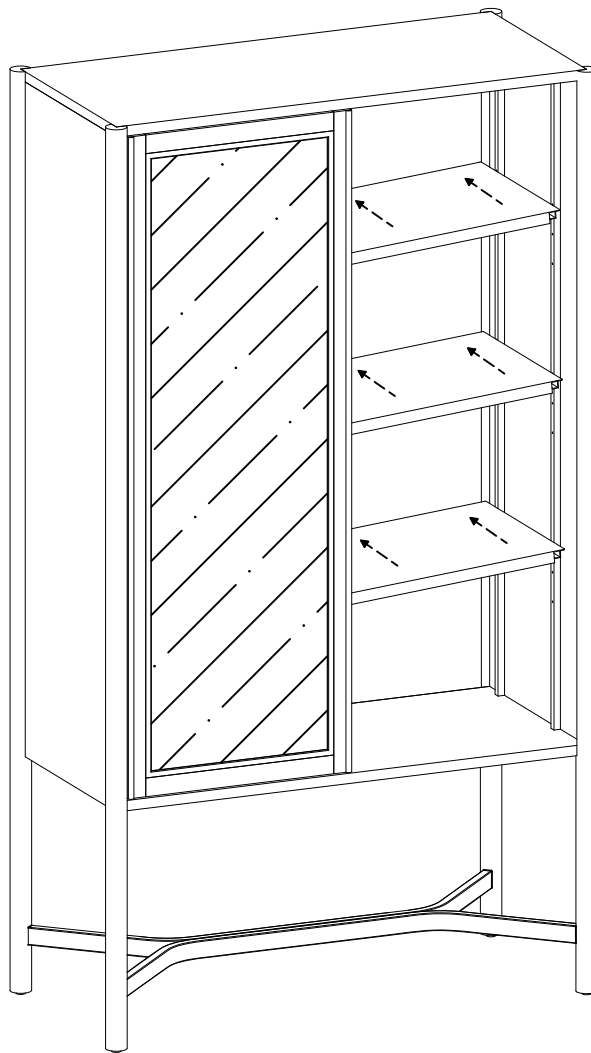


Step 2

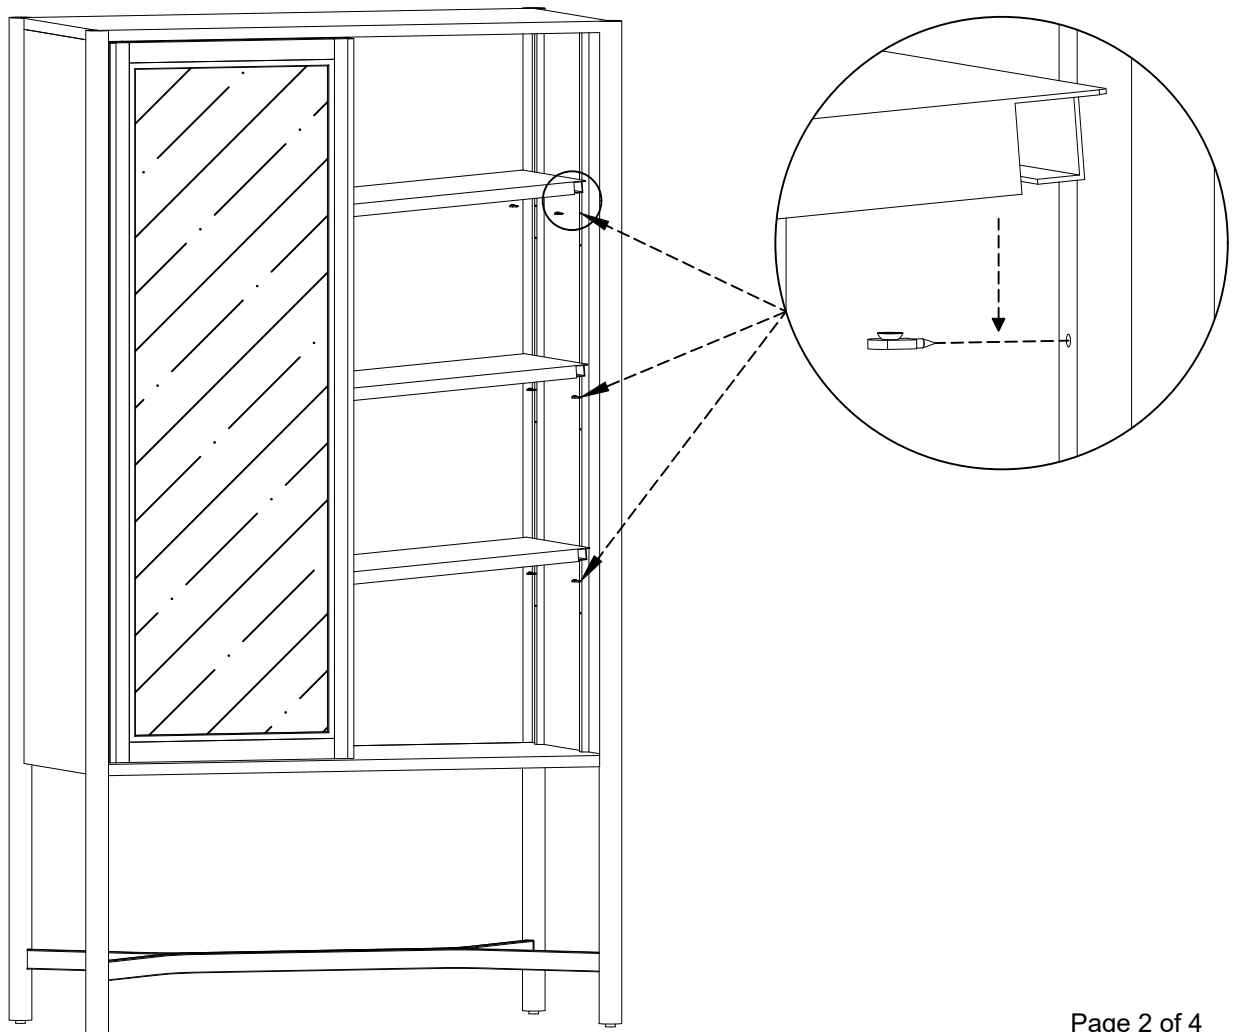



Step 3

★ REMARK: There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

Tipping Hardware

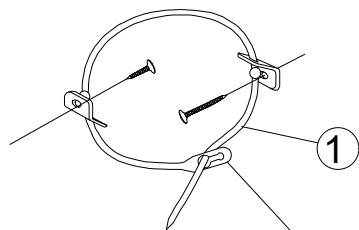

Tipping Hardware

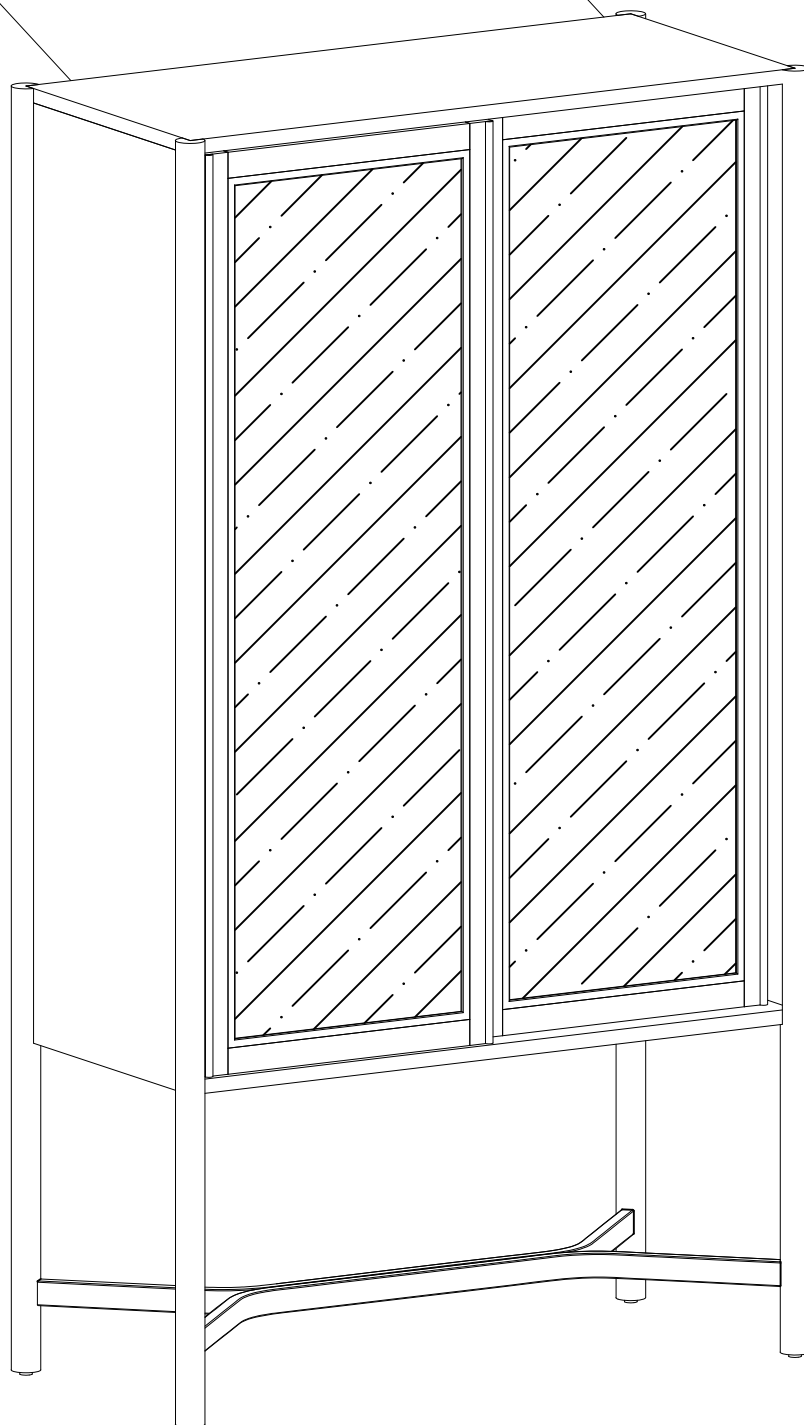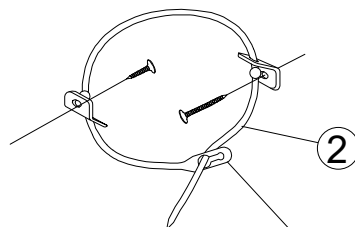

Step 4

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Step 1: Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

