


# ASSEMBLY INSTRUCTIONS

266-304 266-305

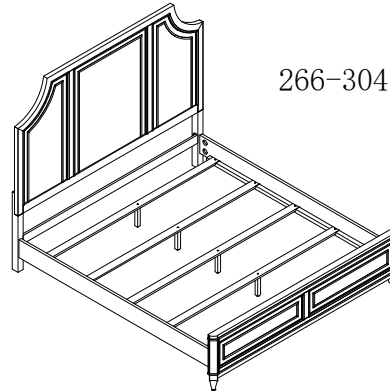

## TOOLS REQUIRED:

Allen wrench (supplied, part # D,H)  
Phillips Screwdriver (Not Provided)

## BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

## INSTRUCTIONS:

1. Attach stretcher to the side panel with Allen bolt (E), Lock Washer (F) and Flat Washer (G). Tighten all bolts with Allen Wrench (H) as shown in Figure 1

2. Attach the headboard to the headboard base, with Allen bolt (E), Lock Washer (F) and Flat Washer (G). Tighten all bolts with Allen Wrench (H) as shown in Figure 2

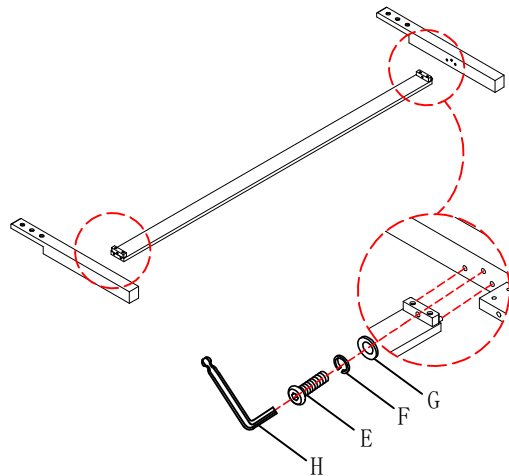


Figure 1

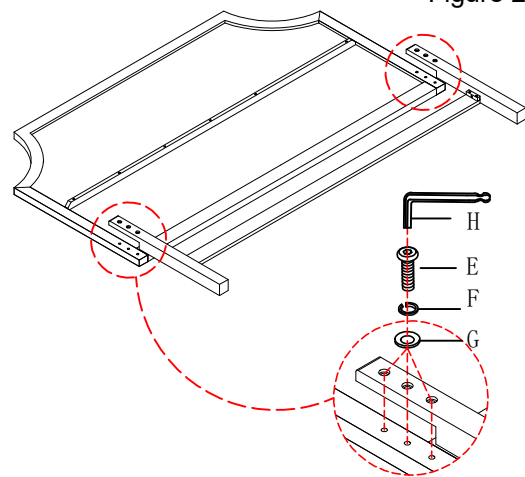


Figure 2

| No. | Hardware List 2                                                                     |                                     | Q' ty |
|-----|-------------------------------------------------------------------------------------|-------------------------------------|-------|
| A   |  | Screw (#8*1")                       | 10pcs |
| B   |  | Thread Bolt (Ø5/16"*3 ")            | 8pcs  |
| C   |  | Curved Slotted Washer (Ø5/16"*12mm) | 8pcs  |
| D   |  | Spanner Wrench (Ø12mm*160mmL)       | 1pc   |

| No. | Hardware List 1                                                                     |                                | Q' ty |
|-----|-------------------------------------------------------------------------------------|--------------------------------|-------|
| E   |  | Bolt (Ø5/16"x1-3/4")           | 8pcs  |
| F   |  | Lock Washer (Ø5/16")           | 8pcs  |
| G   |  | Flat Washer (Ø5/16"*19*1.5mm ) | 8pcs  |
| H   |  | Allen Wrench (110*60*4mm)      | 1pc   |

Thank you for purchasing furniture  
from american drew!

## ASSEMBLY INSTRUCTIONS

### INSTRUCTIONS:

3. Attach the side rail into head panel and foot panel with Thread Bolt (B), tighten the Curved Slotted Washer (C) with Spanner wrench(D).As shown in Figure 3
4. Tighten the center feet on each slat as shown in Figure 4
5. Attach slats to side rails with Screws (A) as shown in Figure 5

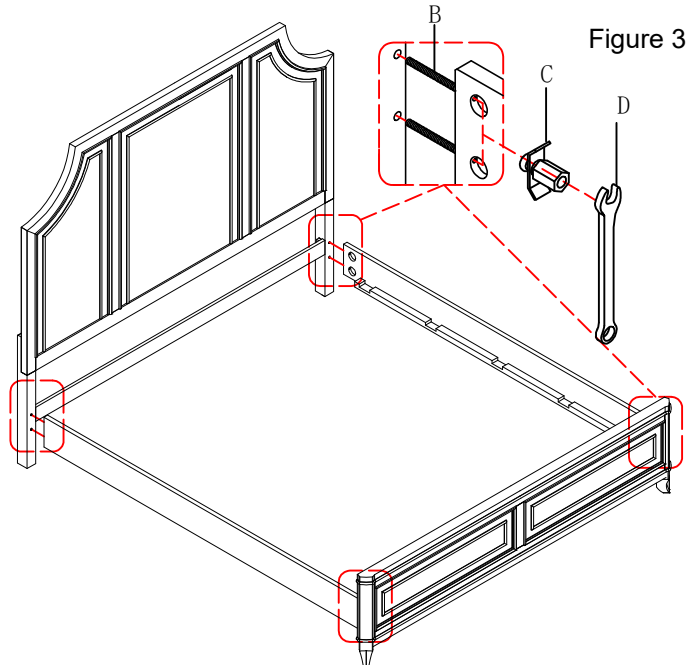


Figure 3

Figure 4

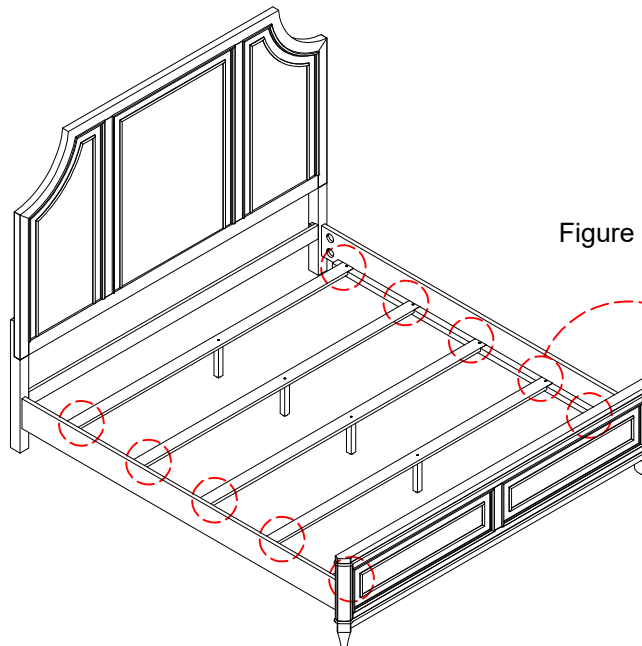
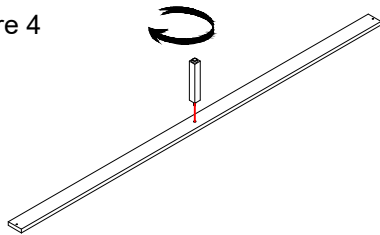


Figure 5

Thank you for purchasing furniture  
from american drew!