


Installation & Assembly

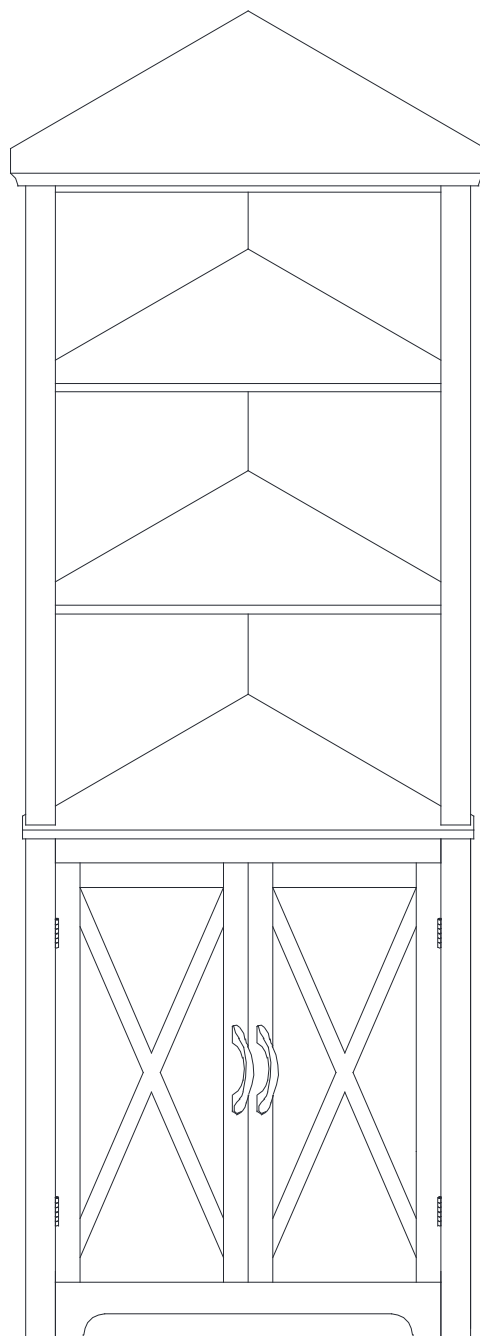



Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.












Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?








Completed Assembly






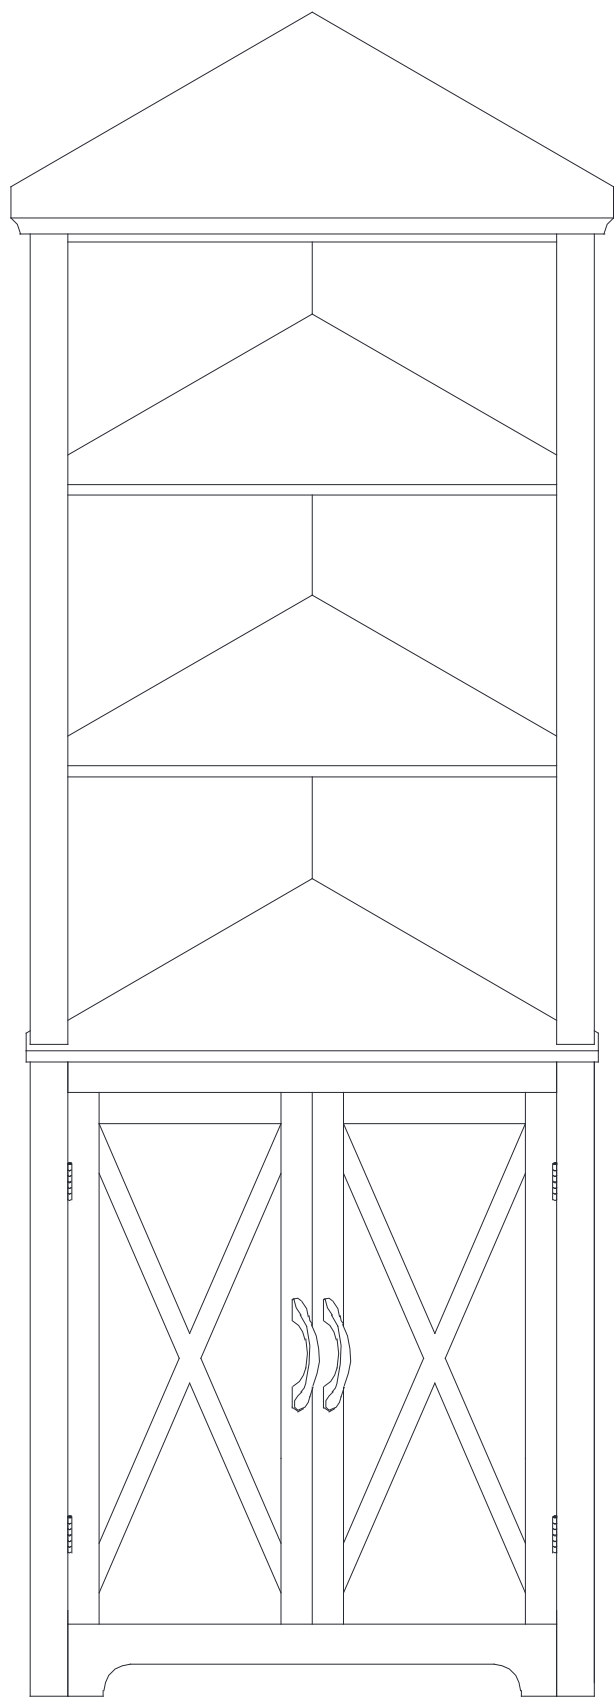









Parts Description

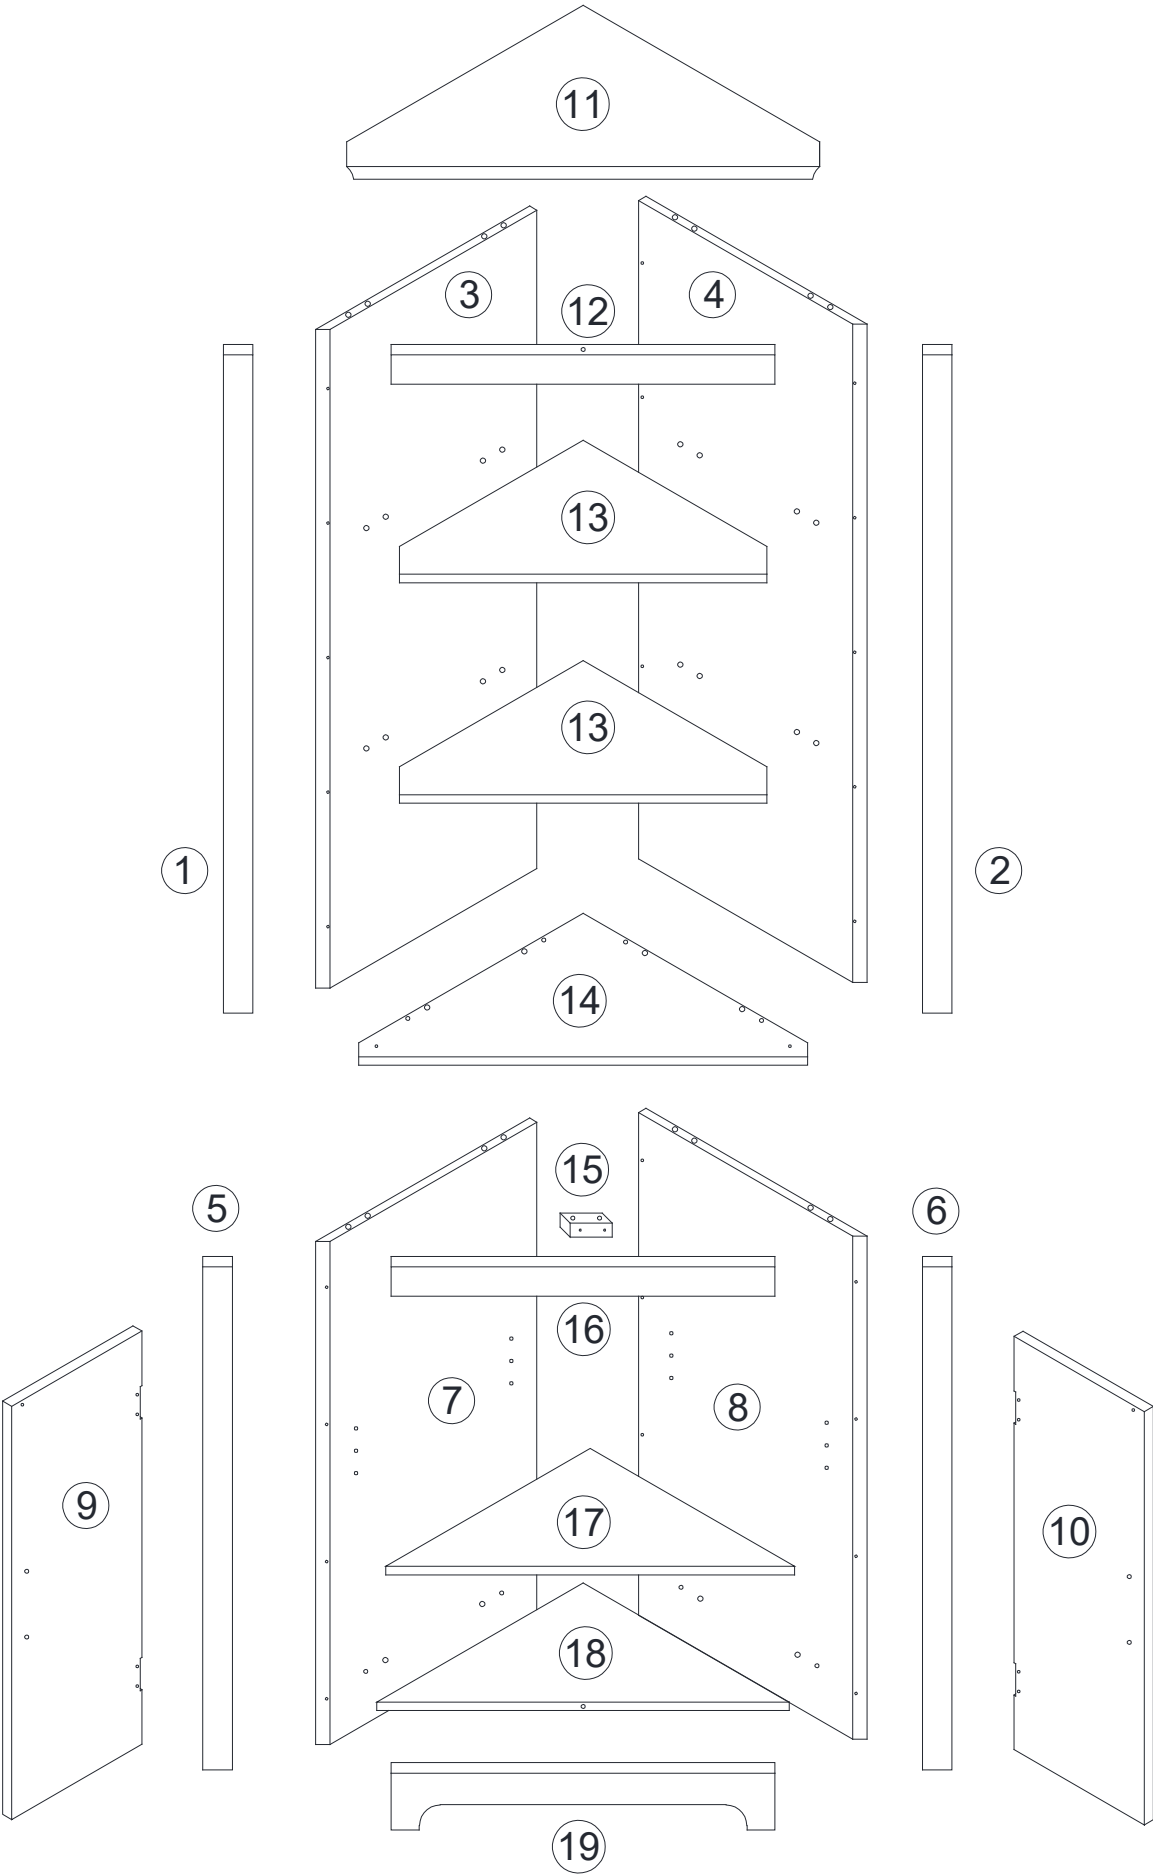

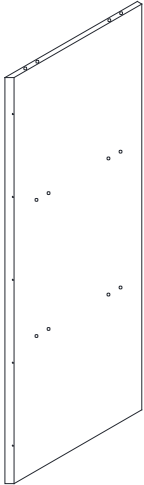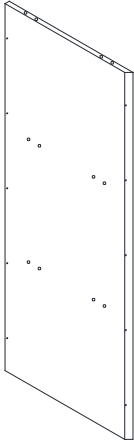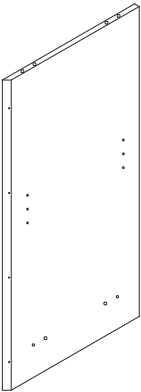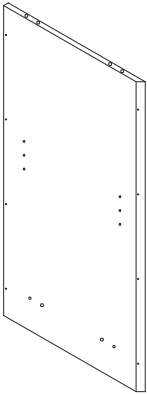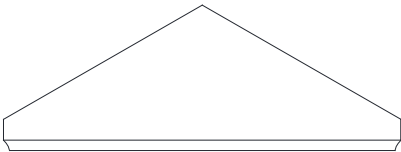1  ①Left Front Panel 1pc	2  ②Right Front Panel 1pc	3  ③Left Side Panel 1pc
4  ④Right Side Panel 1pc	5  ⑤Lower Left Front Panel 1pc	6  ⑥Lower Right Front Panel 1pc
7  ⑦Lower Left Side Panel 1pc	8  ⑧Lower Right Side Panel 1pc	9  ⑨Left Side Door 1pc
10  ⑩Right Side Door 1pc	11  ⑪Top Panel 1pc	12  ⑫Support Bar 1pc

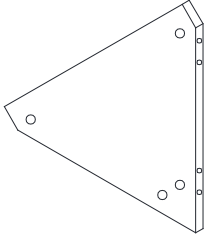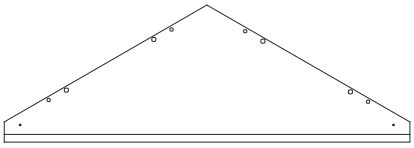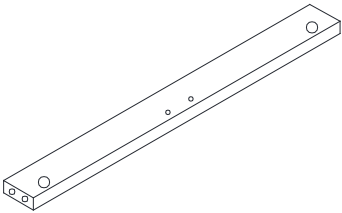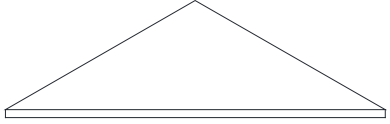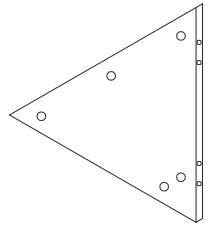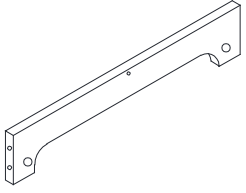13  ⑬Middle Shelf 2pcs	14  ⑭Middle Shelf 1pc	15  ⑮Wood Block 1pc
16  ⑯Support Bar 1pc	17  ⑰Adjustable Shelf 1pc	18  ⑱Bottom Panel 1pc
19  ⑲Front Bottom Bar 1pc		

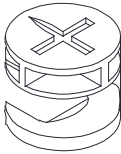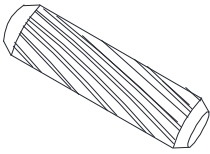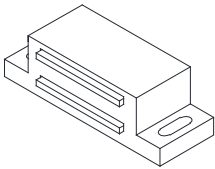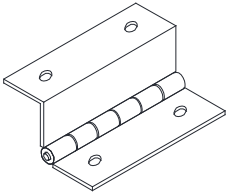A  Cam Bolt 28pcs	B  Cam Lock 28pcs	C  8*30mm Wood Dowel 30pcs
D  4*30mm Screw 15pcs	E  4*20mm Screw 18pcs	F  3*14mm Screw 2pcs
G  3*12mm Screw 18pcs	H  Magnet 1pcs	I  Metal Plate 2pcs
J  Bolt 4pcs	K  Handle 2pcs	L  Hinge 4pcs

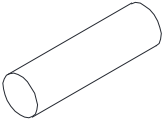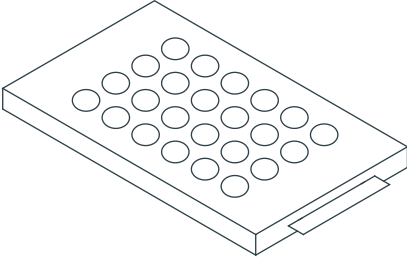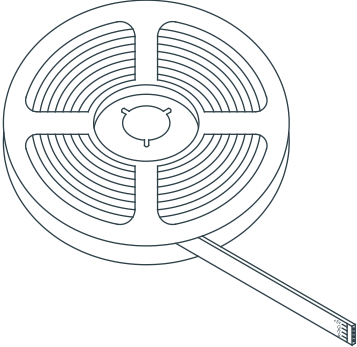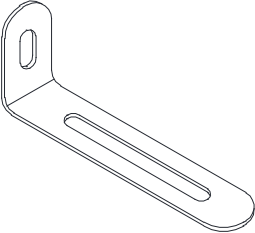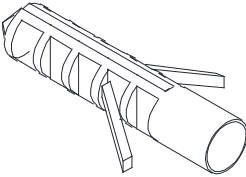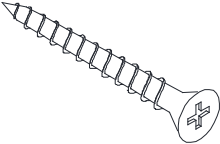M  Shelf Support 4pcs	N  Remote Control 1pc	O  Light Strip 1pc
P  Battery Box 1pc	Q  Screw 2pcs	S  Tilting Prevention Device 2pcs
T  Anchor 2pcs	U  4*35mm Screw 2pcs	V  4*25mm Screw 2pcs



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

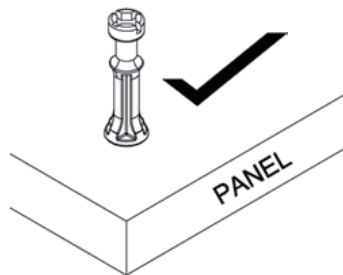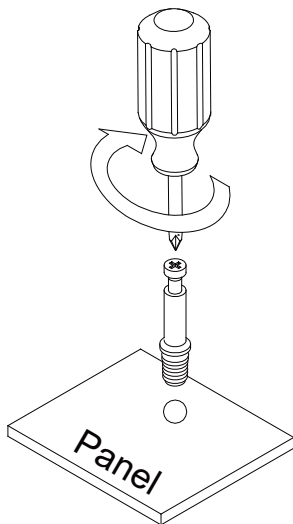



Shoulder is flushed
(on the same level)
with the panel.

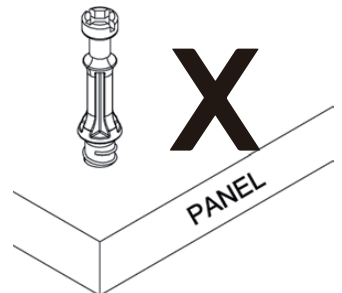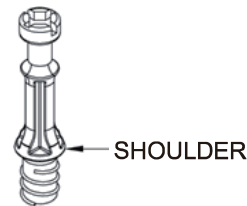

Shoulder is
above the panel.

CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

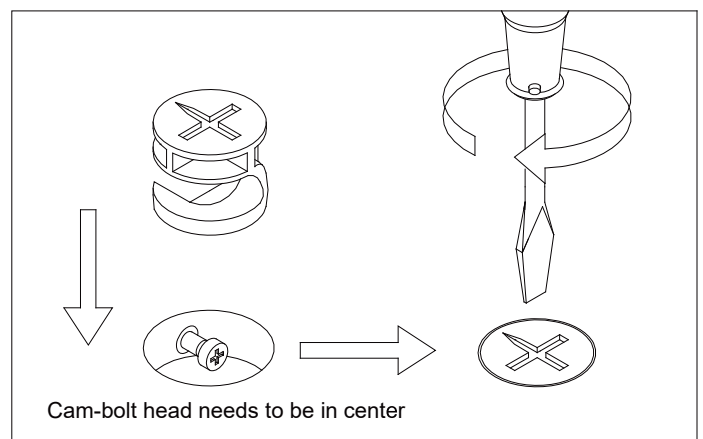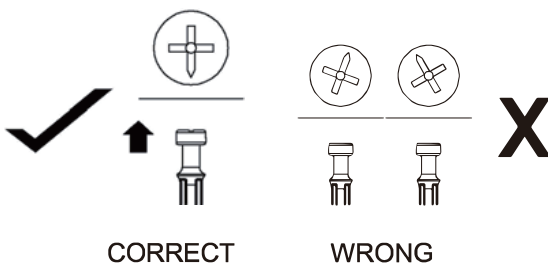


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.




③ Left Side Panel

1pc

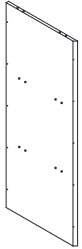

④ Right Side Panel

1pc



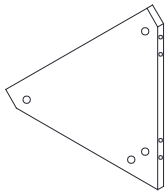


⑬ Middle Shelf

2pcs

Step 1


1. Screw Cam Bolt (A) and put Wooden Dowel (C) into Left Side Panel (3) and Right Side Panel (4).
2. Attach Middle Shelf (13) to Left Side Panel (3), using Cam Lock (B).
3. Attach Right Side Panel (4) to Left Side Panel (3) and Middle Shelf (13), using Screw (D).

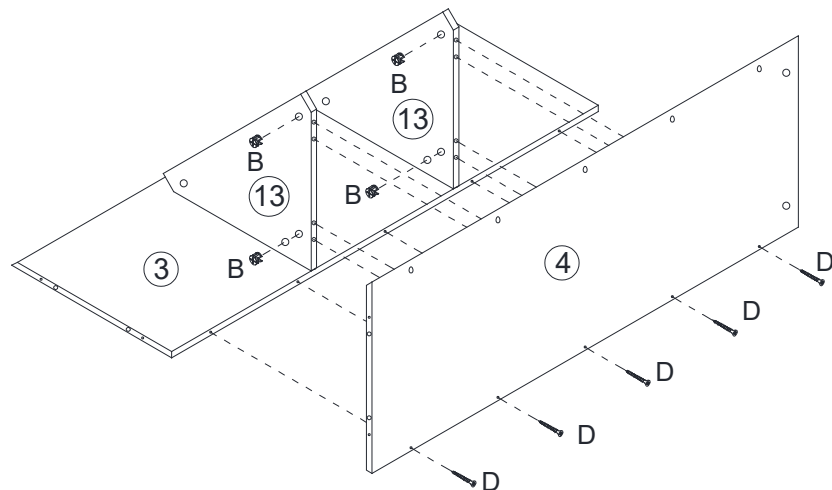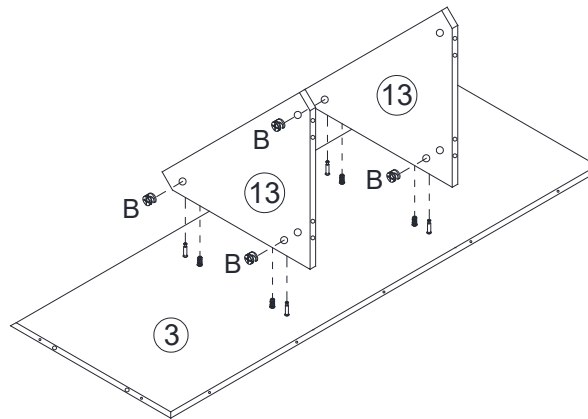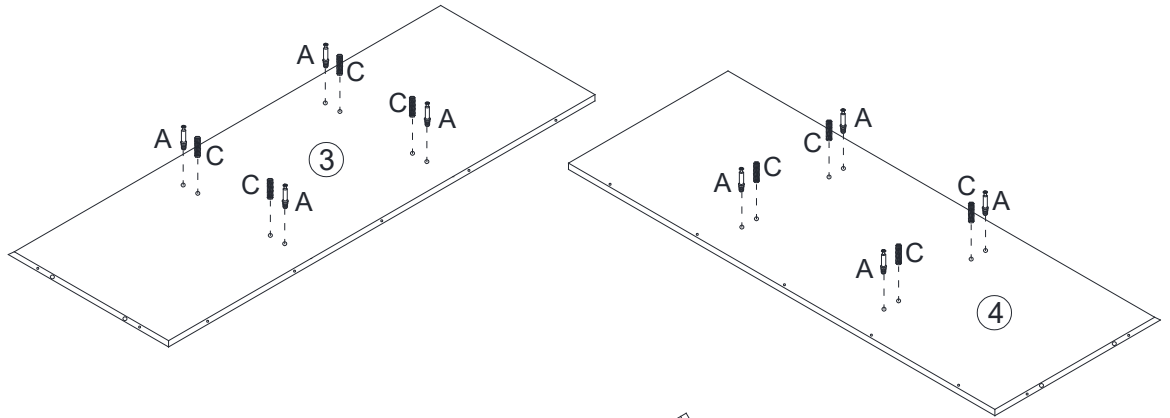

A x 8



B x 8

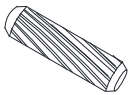

C x 8



D x 5


Step 2

1. Attach Support Bar (12) to Left Front Panel (1) and Right Front Panel (2), using Cam Bolt (A), Cam Lock (B) and Wood Dowel (C).
2. As shown in the figure, merge the two parts together.
3. Attach Left Front Panel (1) and Right Front Panel (2) to Left Side Panel (3) and Right Side Panel (4), using Screw (E).

① Left Front Panel 1pc

② Right Front Panel 1pc

⑫ Support Bar 1pc


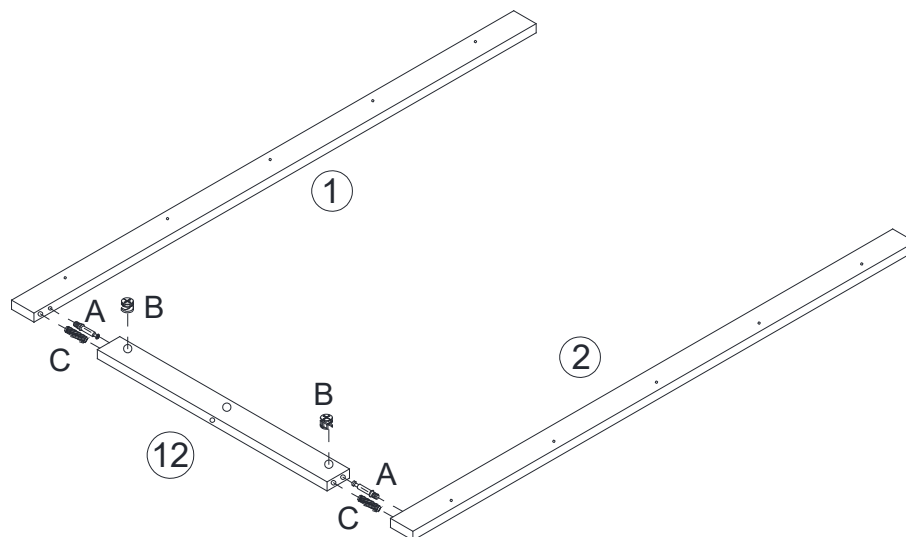




A x 2

B x 2

C x 2




E x 10

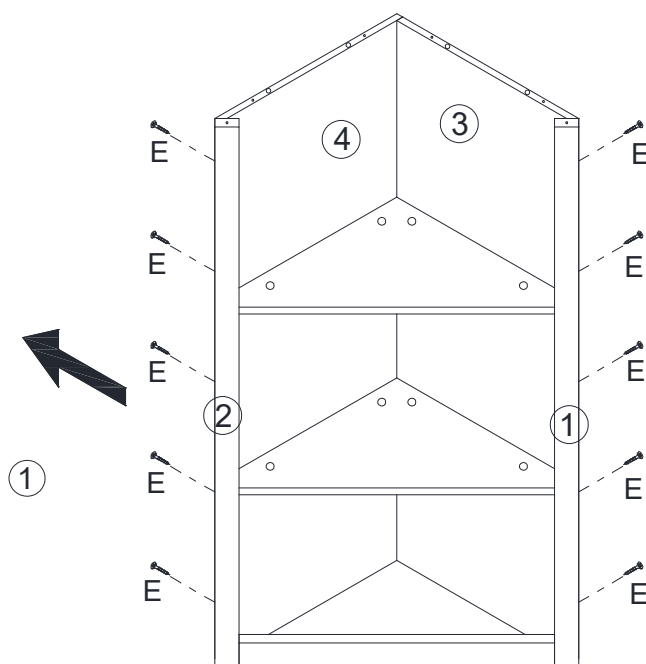
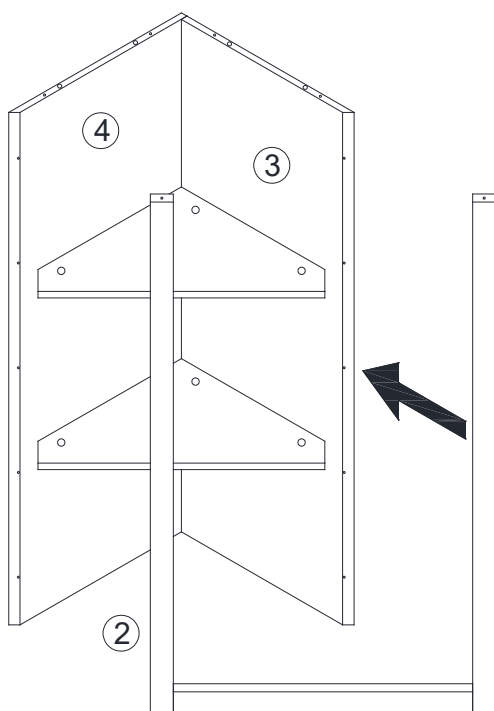


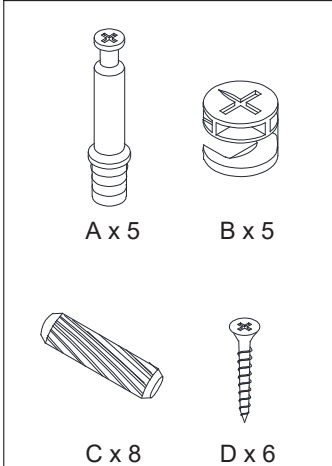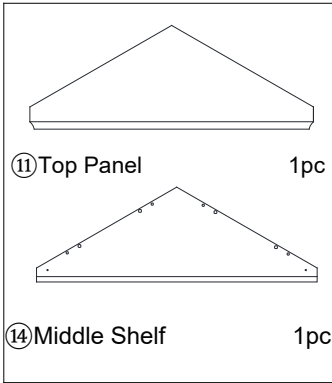

Step 3

- 1.Screw Cam Bolt (A) and put Wooden Dowel (C) into Top Panel (11) .
- 2.Attach Top Panel (11) to the whole completed in the step 2, using Cam Lock (B).
- 3.Attach Middle Shelf (14) to Left Front Panel (1),Right Front Panel (2), Left Side Panel (3) and Right Side Panel(4) ,using Wood Dowel (C) and Screw (D).

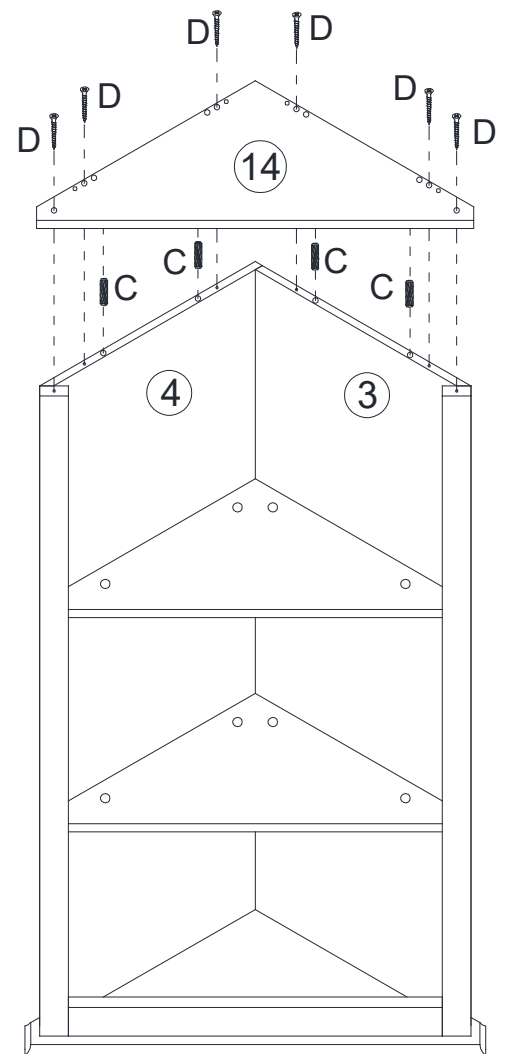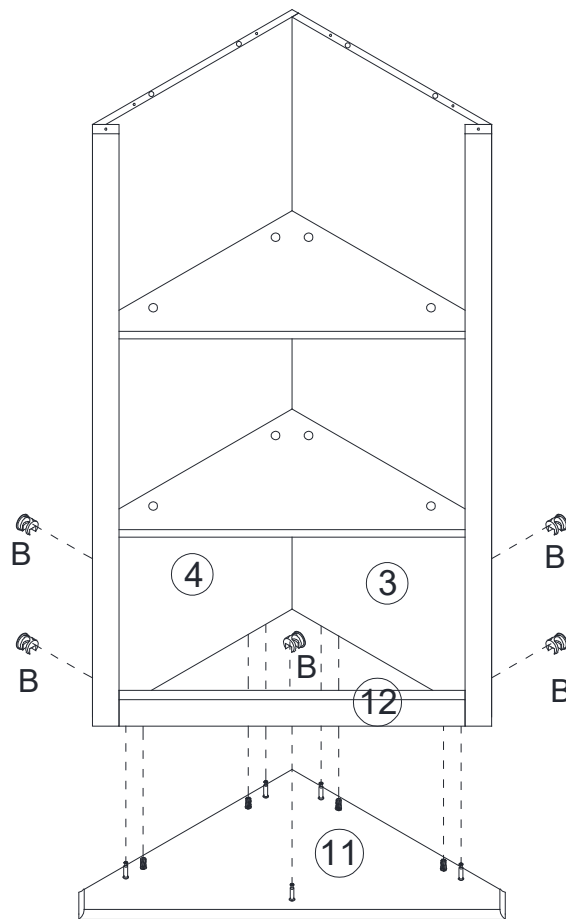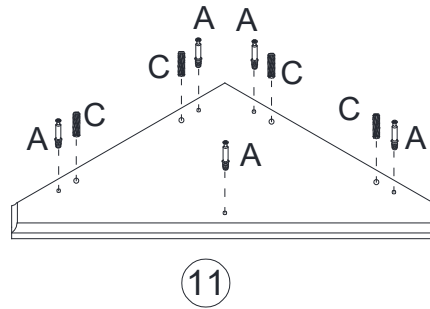



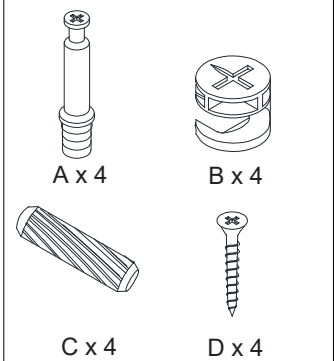
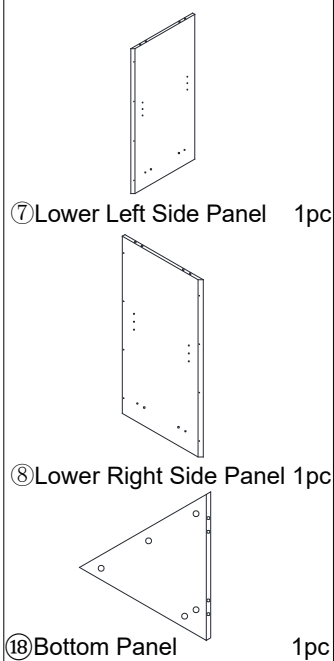


Step 4

1.Screw Cam Bolt (A) and put Wooden Dowel (C) into Lower Left Side Panel (7) and Lower Right Side Panel (8).

2.Attach Bottom Panel (18) to Lower Left Side Panel (7) , using Cam Lock (B).

1.Attach Lower Right Side Panel (8) to Lower Left Side Panel (7) and Bottom Panel (18) ,using Screw (D).

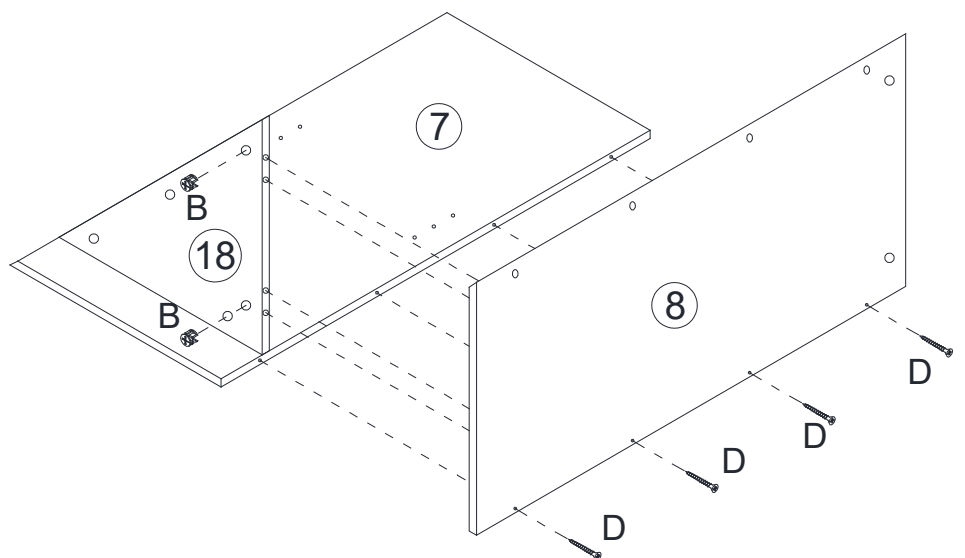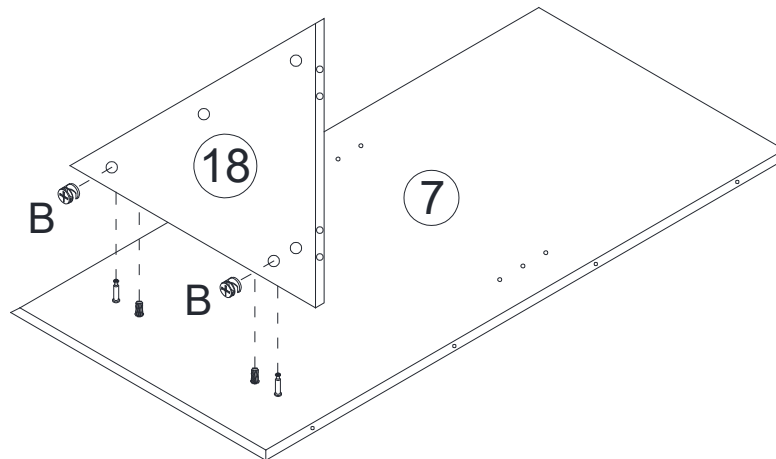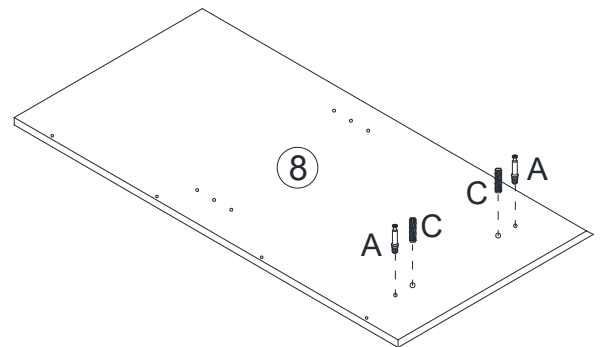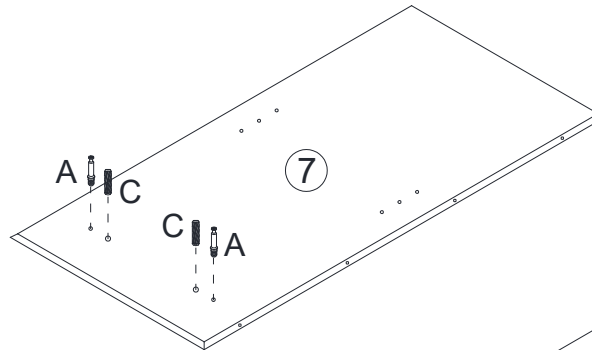

Step 5

1. Attach Wood Block (15) to Support Bar (16), using Screw (V).

2. Attach Magnet (H) to Wood Block (15), using Screw (F).

Tip: Install the Magnet (H) with the magnetic side facing downwards.

3. Attach Lower Left Front Panel (5) and Lower Right Front Panel (6) to Support Bar (16) and Front Bottom Bar (19), using Cam Bolt (A), Cam Lock (B) and Wood Dowel (C).

⑤ Lower Left Front Panel 1pc

⑥ Lower Right Front Panel 1pc

⑮ Wood Block 1pc

⑯ Support Bar 1pc

⑲ Front Bottom Bar 1pc

A x 5


B x 4



C x 4

V x 2

F x 2

H x 1

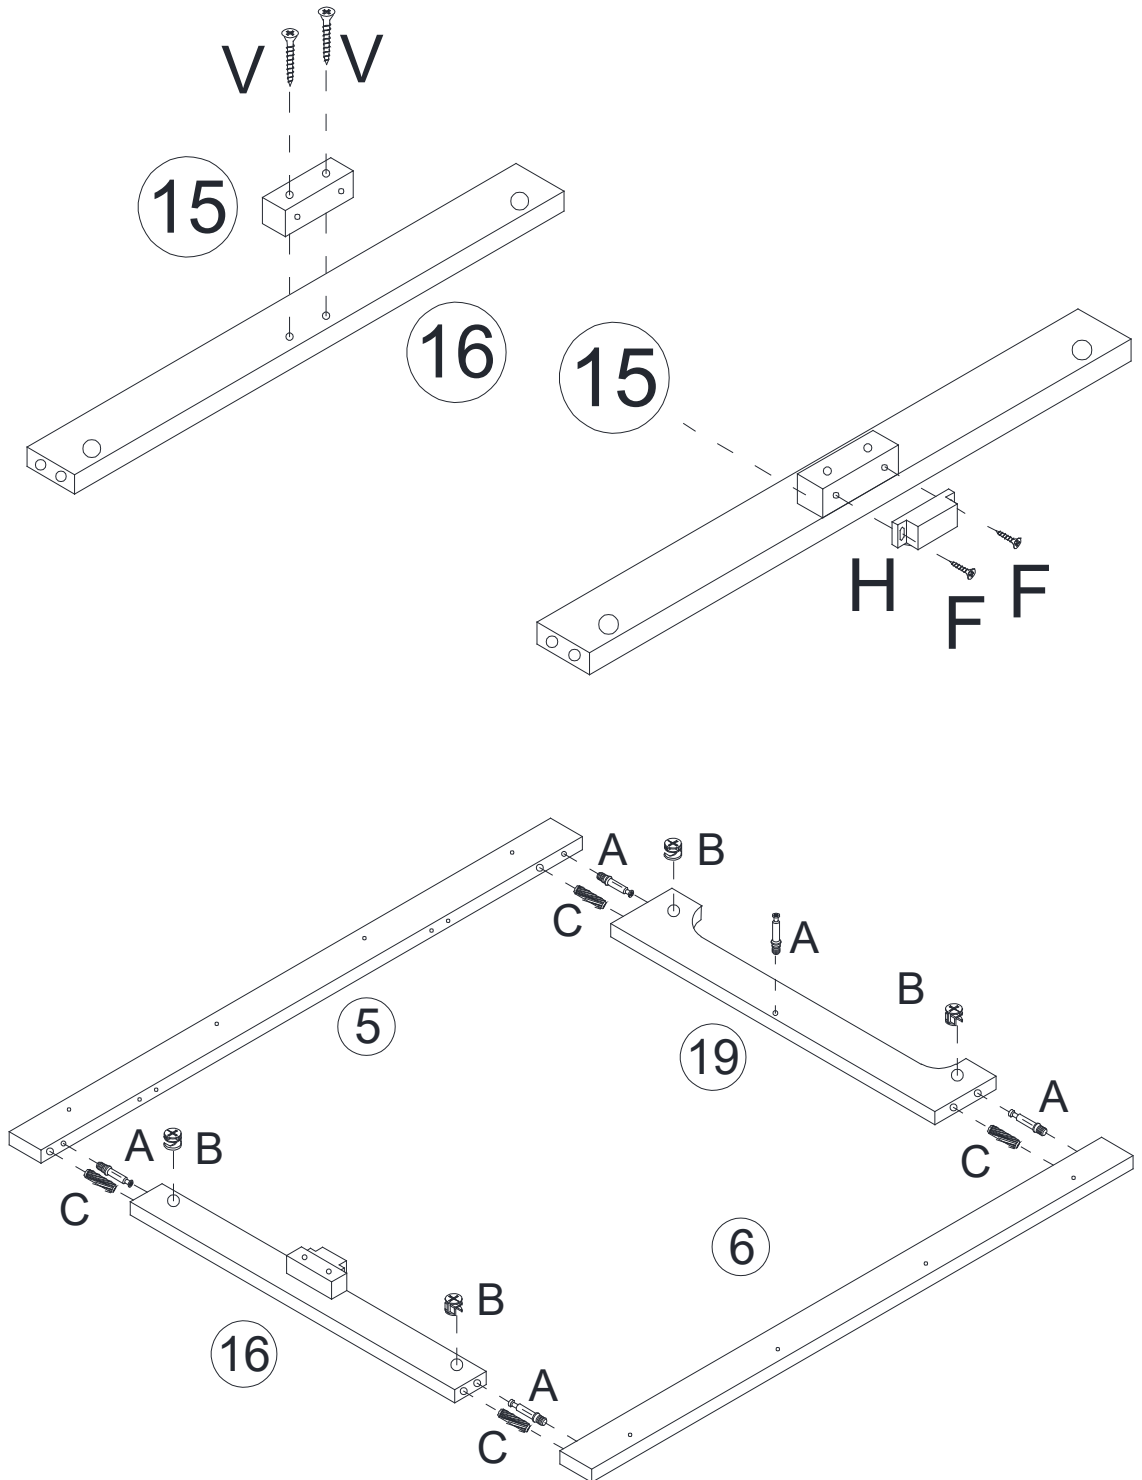






C x 4



E x 8


Step 6

- 1.As shown in the figure, merge the two parts together.
- 2.Attach Lower Left Front Panel (5), and Lower Right Front Panel (6) to Lower Left Side Panel (7) and Lower Right Side Panel (8) ,using Screw (E).
- 3.Screw Cam Bolt (A) and put Wooden Dowel (C) into Middle Shelf (14).

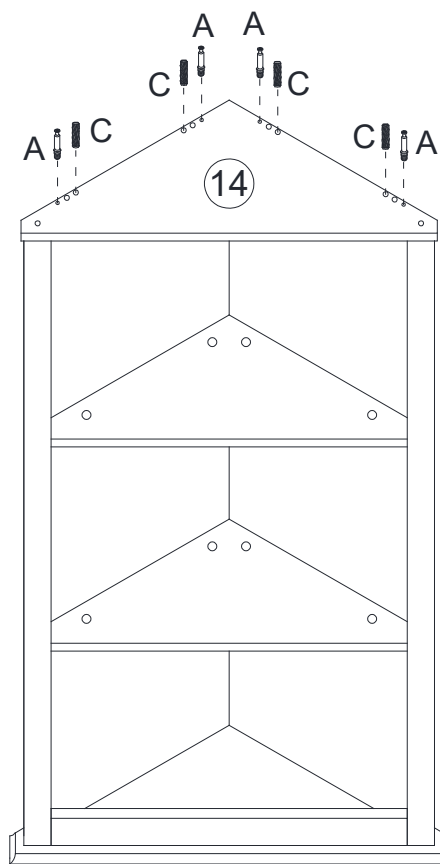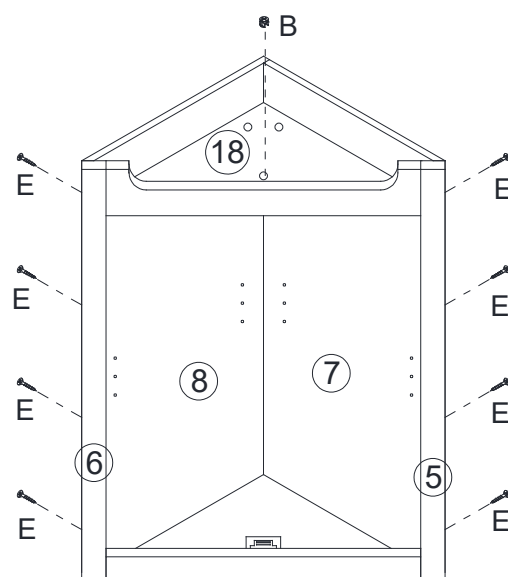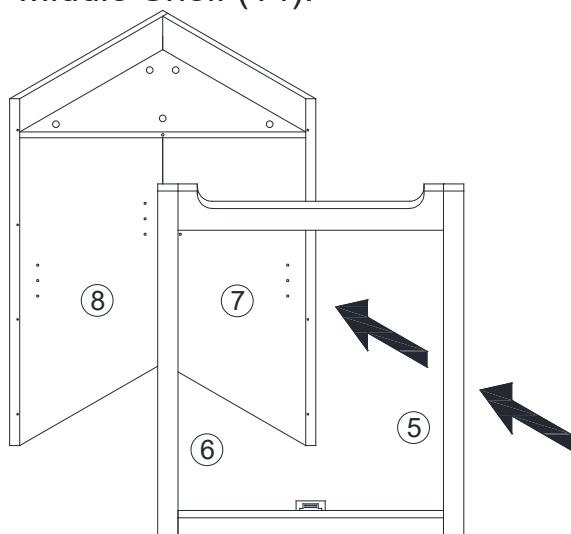


Step 7

1. Attach Middle Shelf (14) to Lower Left Side Panel (7) and Lower Right Side Panel (8), using Cam Lock (B).
2. Attach Handle (K) to Left Side Door (9) and Right Side Door (10), using Bolt (J).
3. Attach Metal Plate (I) to Left Side Door (9) and Right Side Door (10), using Screw (G).
4. Attach Hinge (L) to Left Side Door (9) and Right Side Door (10), using Screw (G).

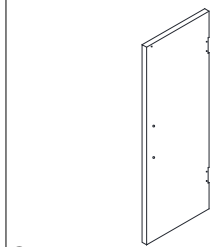

⑨ Left Side Door

1pc

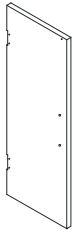

⑩ Right Side Door

1pc



B x 4



G x 10




I x 2







J x 4



K x 2

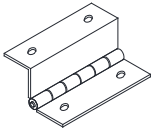

L x 4

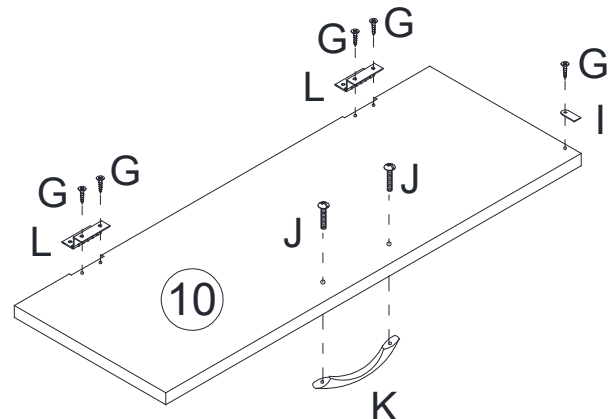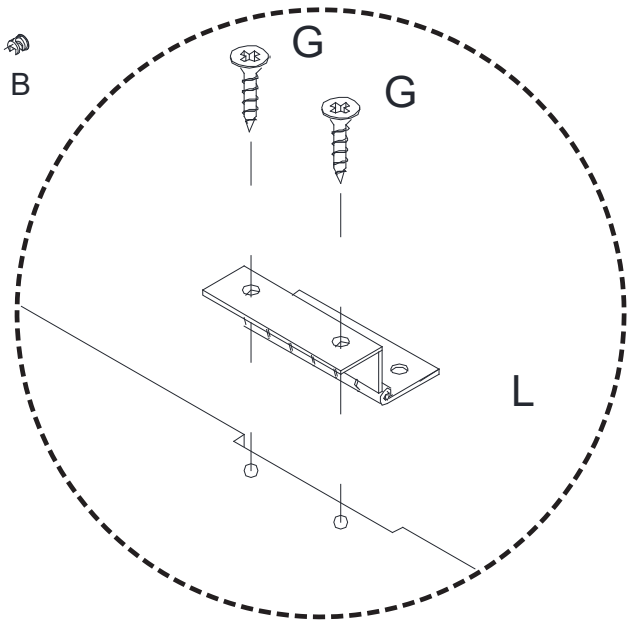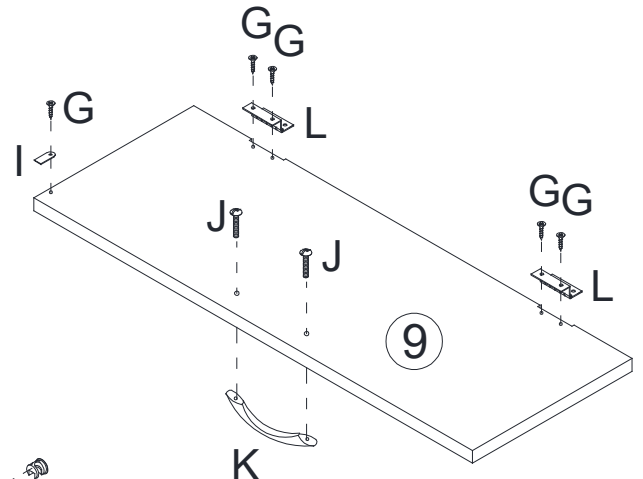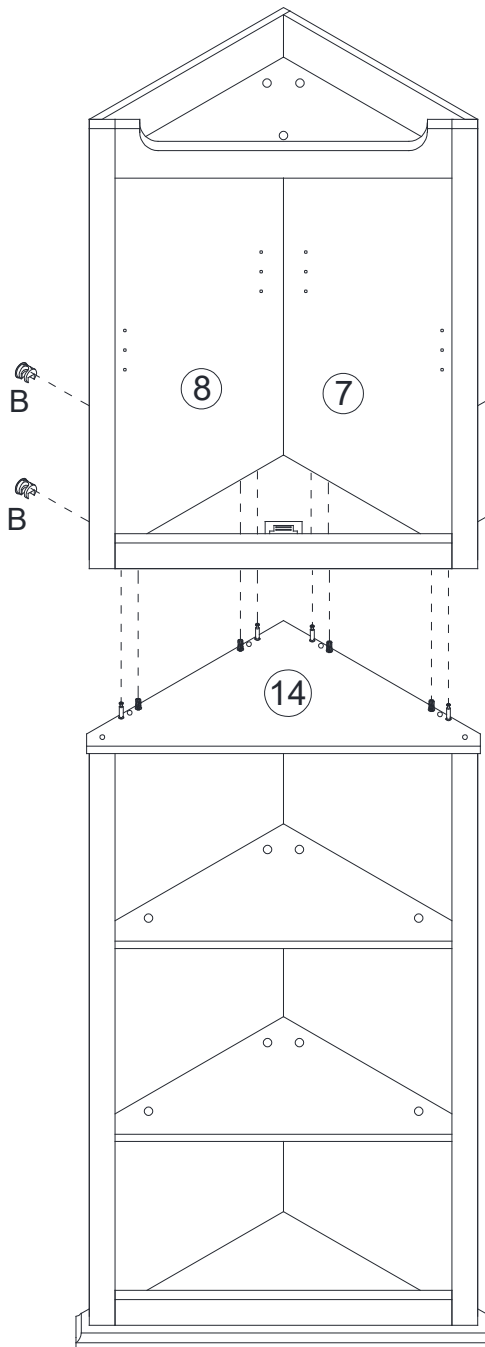




⑰ Adjustable Shelf 1pc





G x 8




M x 4


Step 8

1. Attach Left Side Door (9) to Lower Left Front Panel (7) using Screw (G).
2. Attach Right Side Door (10) to Lower Right Front Panel (8) using Screw (G).
3. Insert Adjustable Shelf (17) to the cabinet, using Shelf Supporter (M).

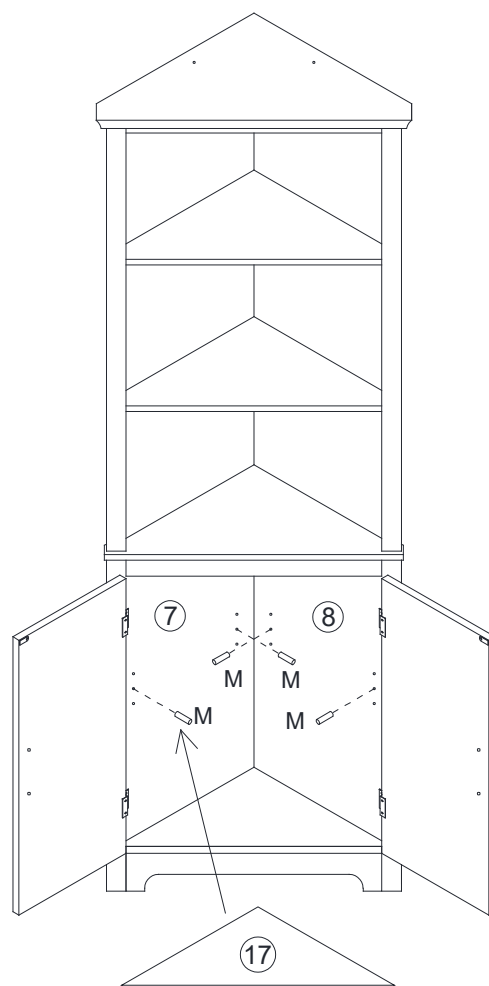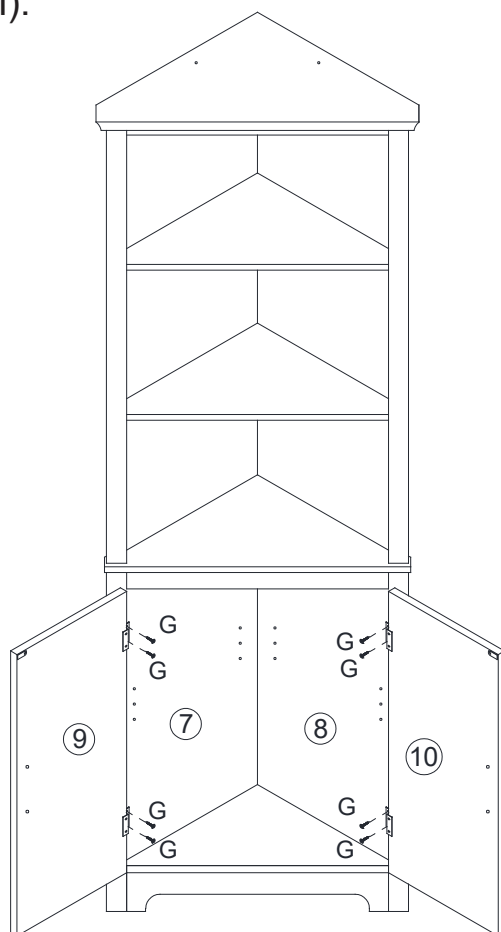

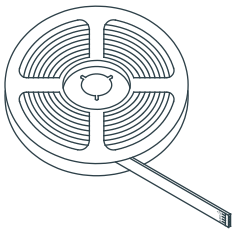


O x 1

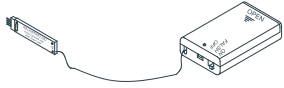





P x 1


Step 9

1. Open back cover of Battery Box (P), put in three 1.5v batteries, and close back cover .
2. Connect Light Strip (O) to Battery Box (P) .
3. Remove the tape from Light Strip (O) and stick Light Strip (O) to around Right Front Panel (2), Support Bar (12) and Left Front Panel (1).
4. Remove the tape from Battery Box (P) and stick Battery Box (P) to Middle Shelf (13).

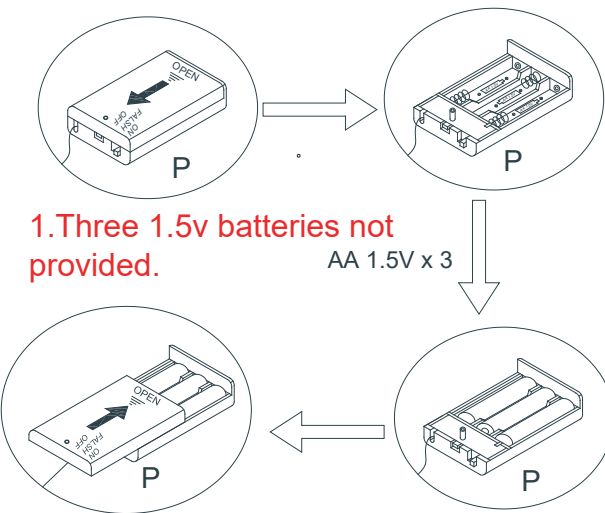

2. Connect the side with text on it.

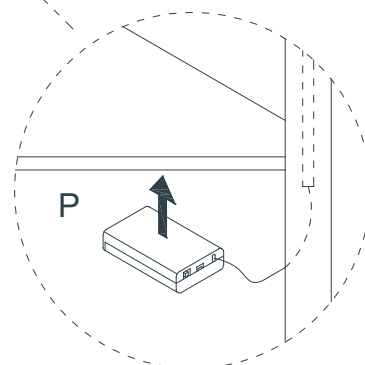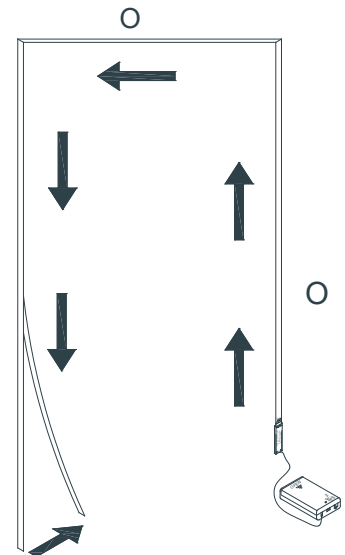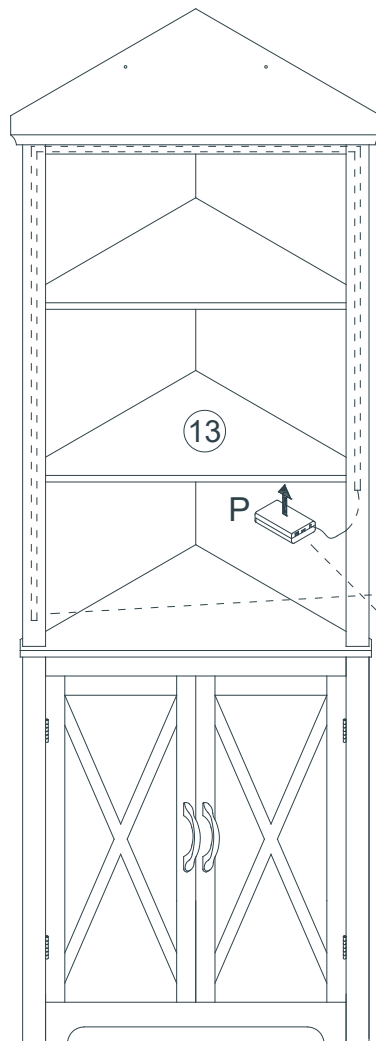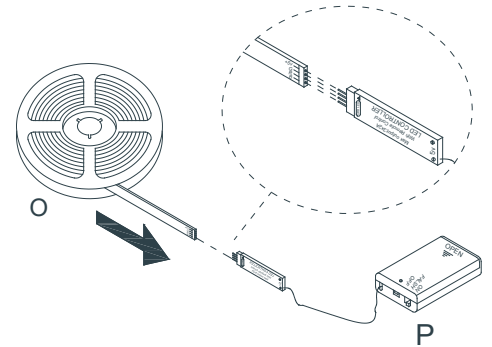


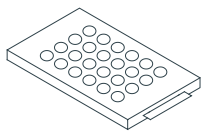

N x 1



Q x 2

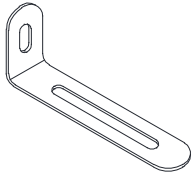

S x 2




Step 10


1. Attach Tilting Prevention Device (S) to Top Panel (11), using Crew (Q).

2. Take out thin sheet at bottom of Remote Control (N).

3. Turn on the switch on Battery Box (P).

Tip: When you need to turn on the light strip, you need to point the remote control in the direction of the battery box.

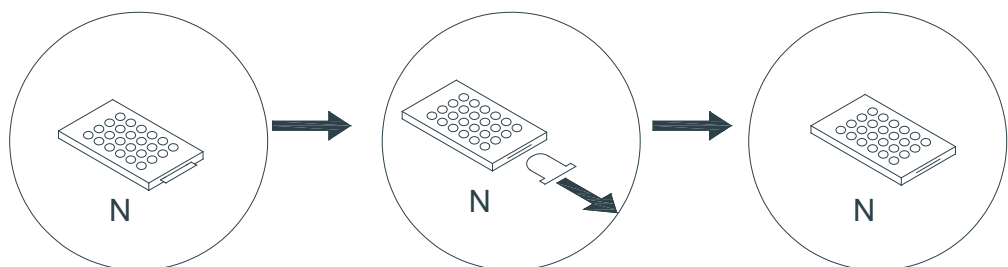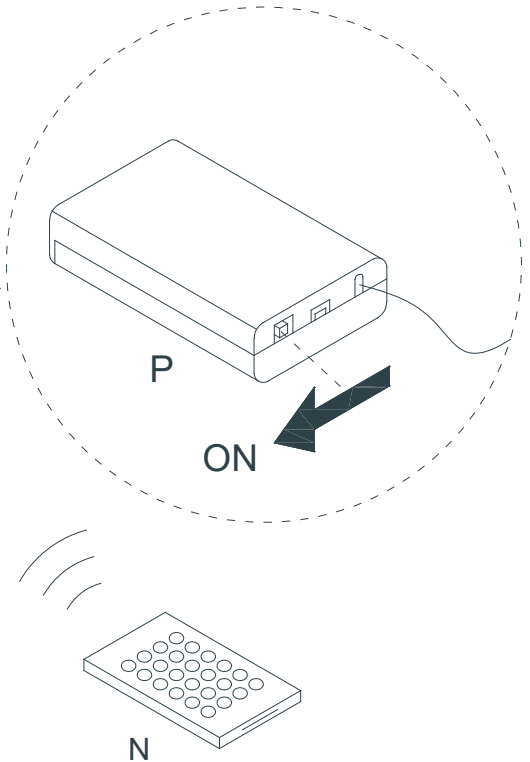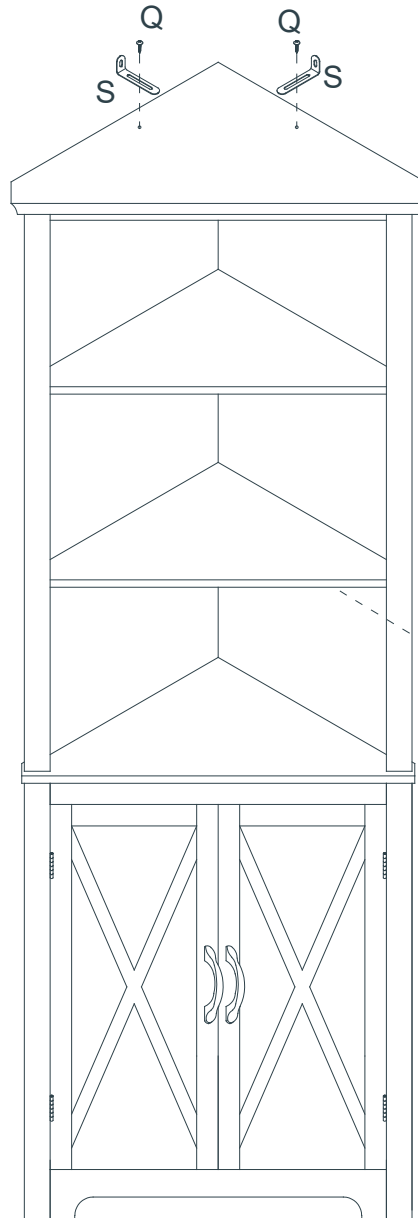

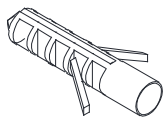

T x 2



Q x 2

Step 11

1. According to position of the holes in the Tilting Prevention Device (S), drill two holes smaller than Anchor (T).

2. Insert Anchor (T) in holes you'd drilled, then secure the cabinet by Screw (U).

