


BMC70TC


Assembly Instructions

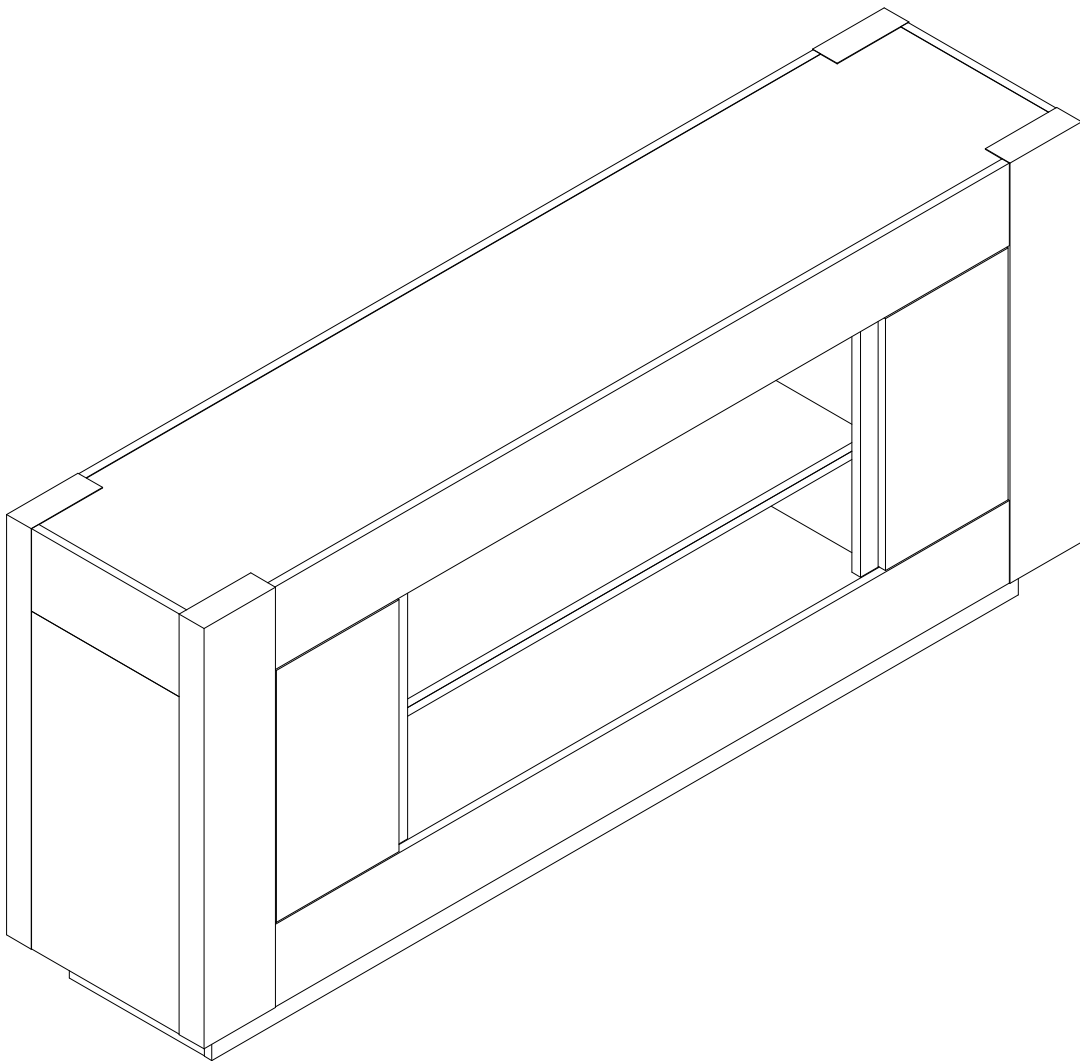


Date 2025-04-25 Rev.01-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- VI. A Phillips head screwdriver is required for the assembly of this product .

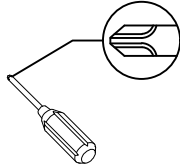


- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

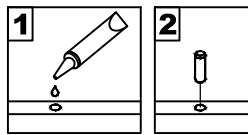


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

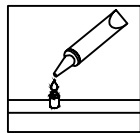



- VI. **HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS**
 - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
 - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
 - 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
 - 4.Use the sticker to conceal the Cam.

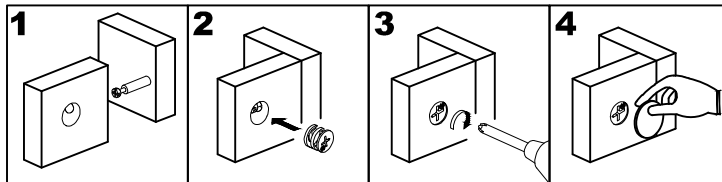





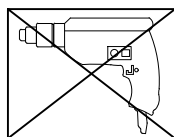




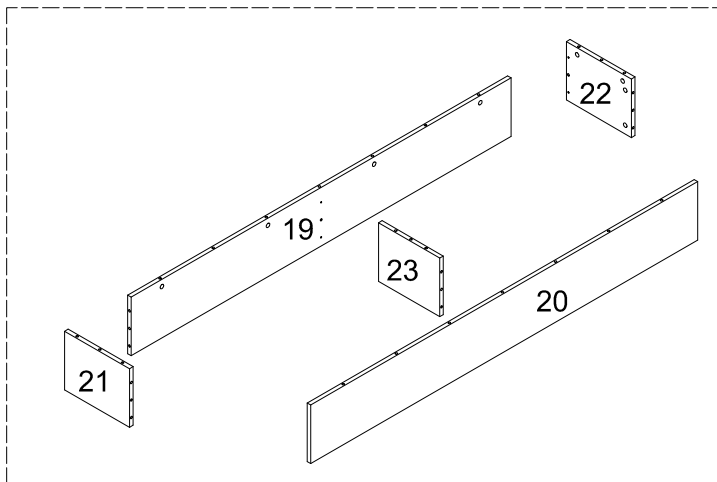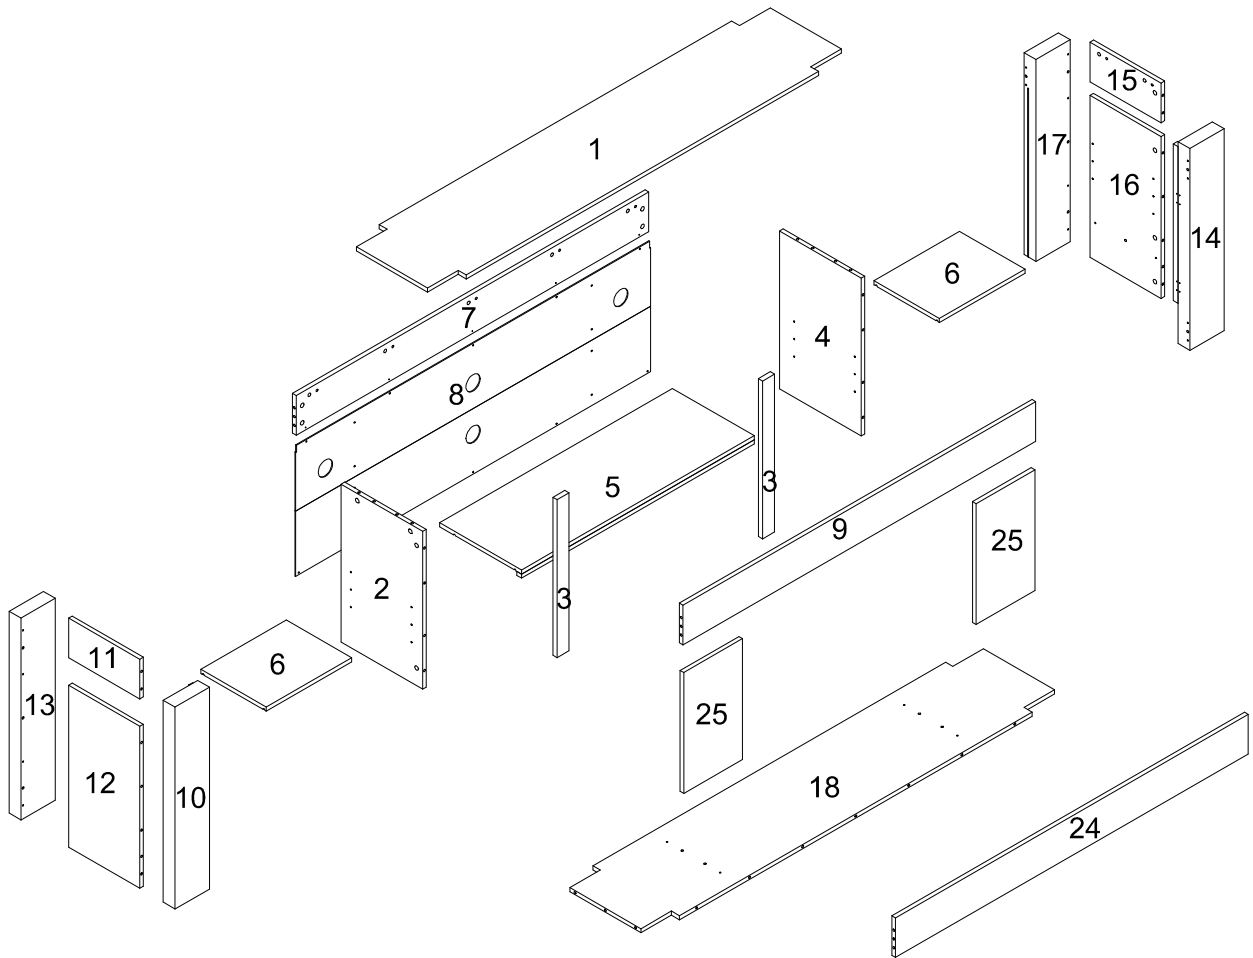








- VII. Power tools should not be used to assemble this product .




Parts List




Hardware List

A		Ø8x30mm	Dowel	54 pcs
B		Ø6x35mm	Cam Bolt	62 pcs
C		Ø15x12mm	Cam Lock	62 pcs
D		Ø30mm	Cam Cover	62 pcs
E			Connector	14 pcs
F		1/4x12mm	Bolt	28 pcs
G		Ø3x15mm	Screw	18 pcs
H		Ø5x70mm	Screw	8 pcs
I		Ø35	Europe Hinge	4 pcs
J		Ø3.5x14mm	Screw	24 pcs
K		M4	Allen Wrench	1 pc
L		Ø6x50mm	Screw	4 pcs
M		Ø8x5x16mm	Shelf support pin	12 pcs
N		Ø10.5x8mm	Plastic Cover	8 pcs
O			Tipping Restraint Hardware	2 sets
P			Glue Tube	1 pc
Q			Plastic Wedge	4 pcs
R		Ø3x17mm	Flat-head Screw	4 pcs

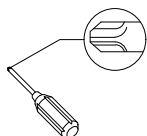


Philips head screwdriver required for assembly
(not included)



Step 1

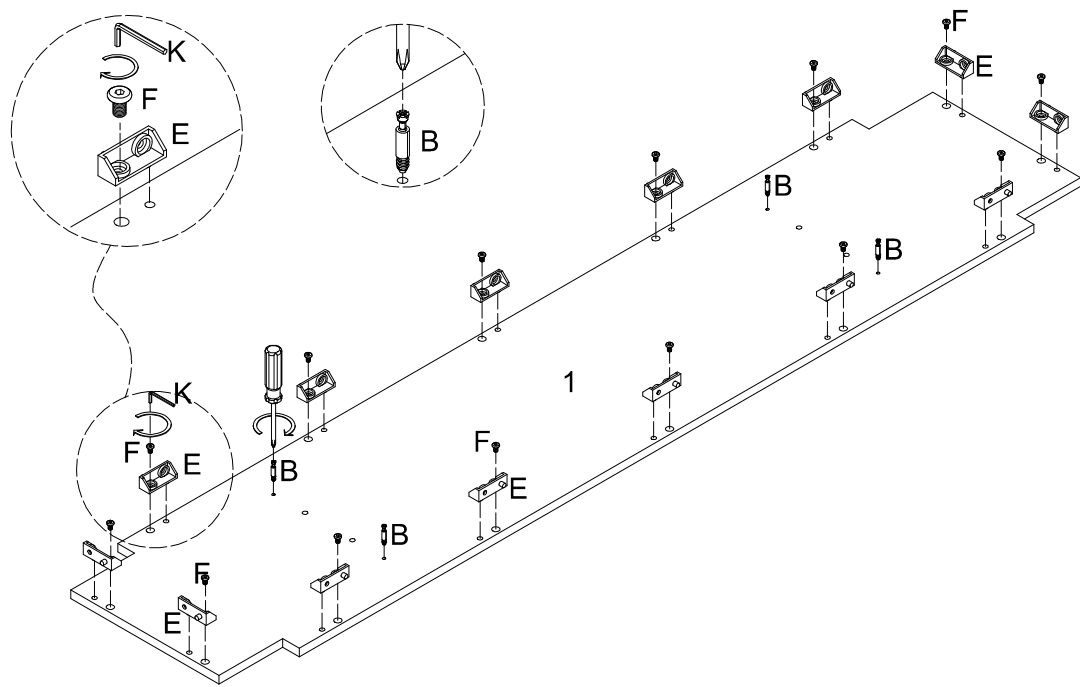


Step 2

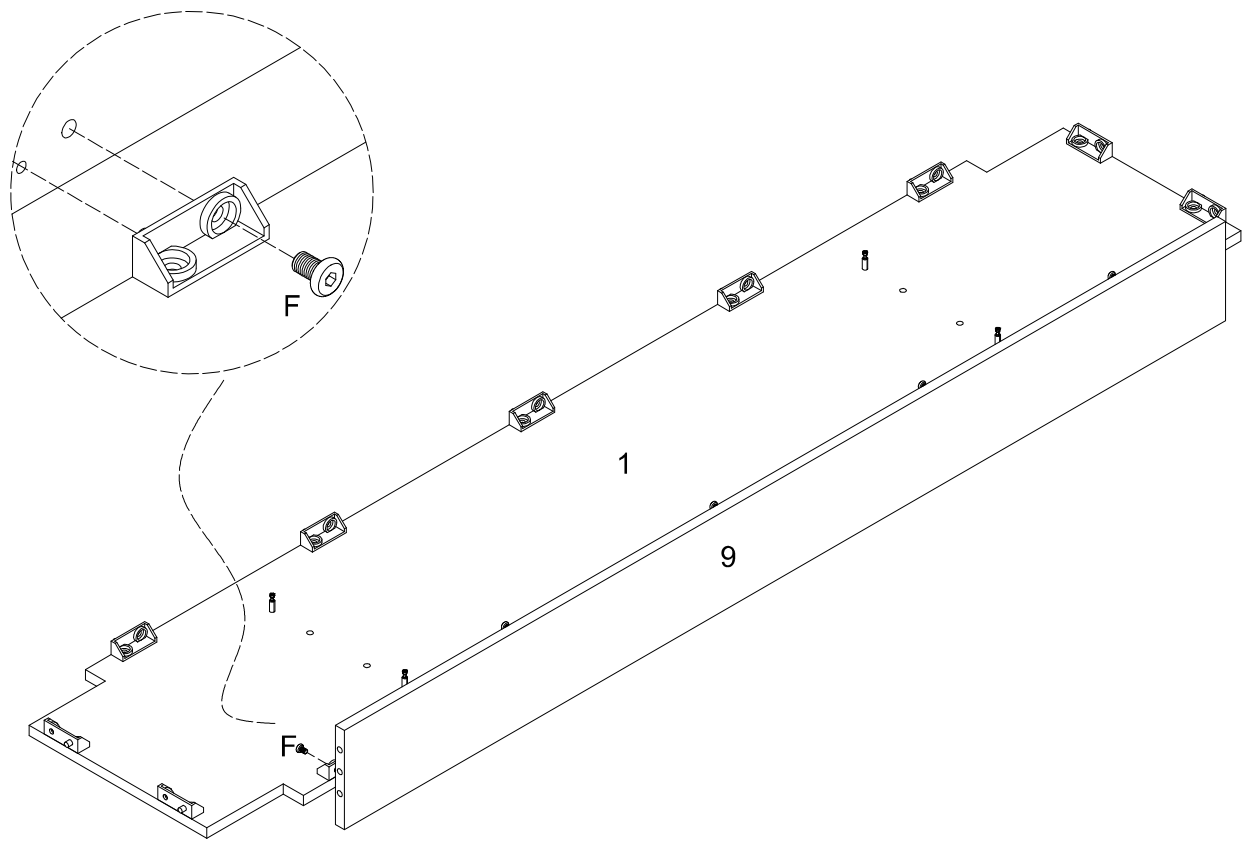


Step 3

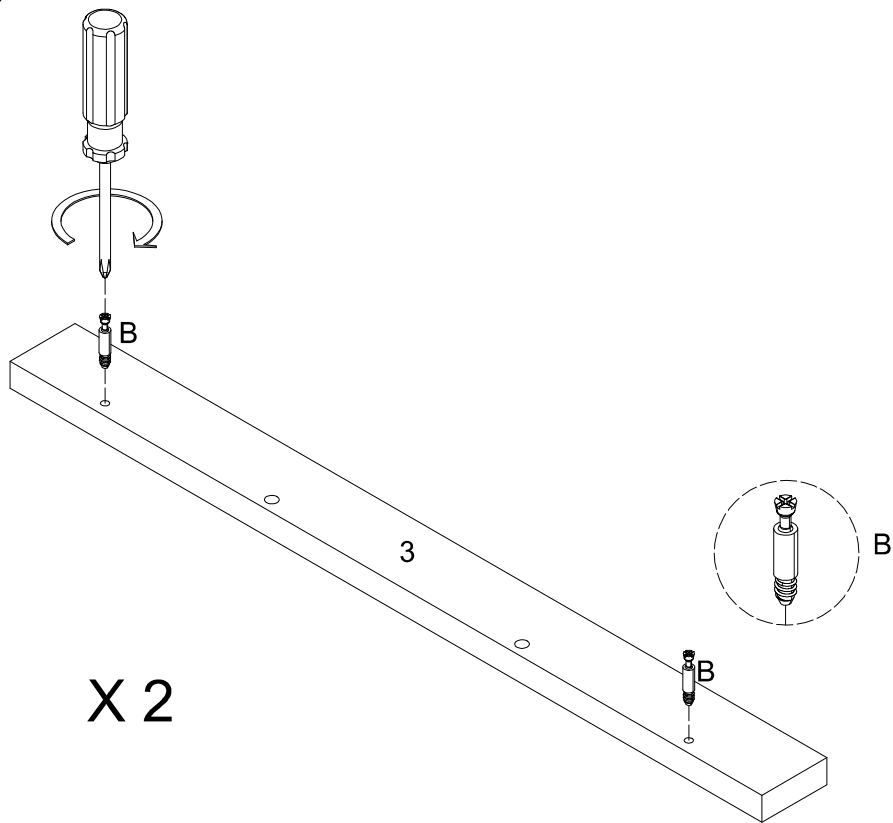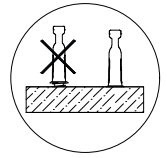


Step 4

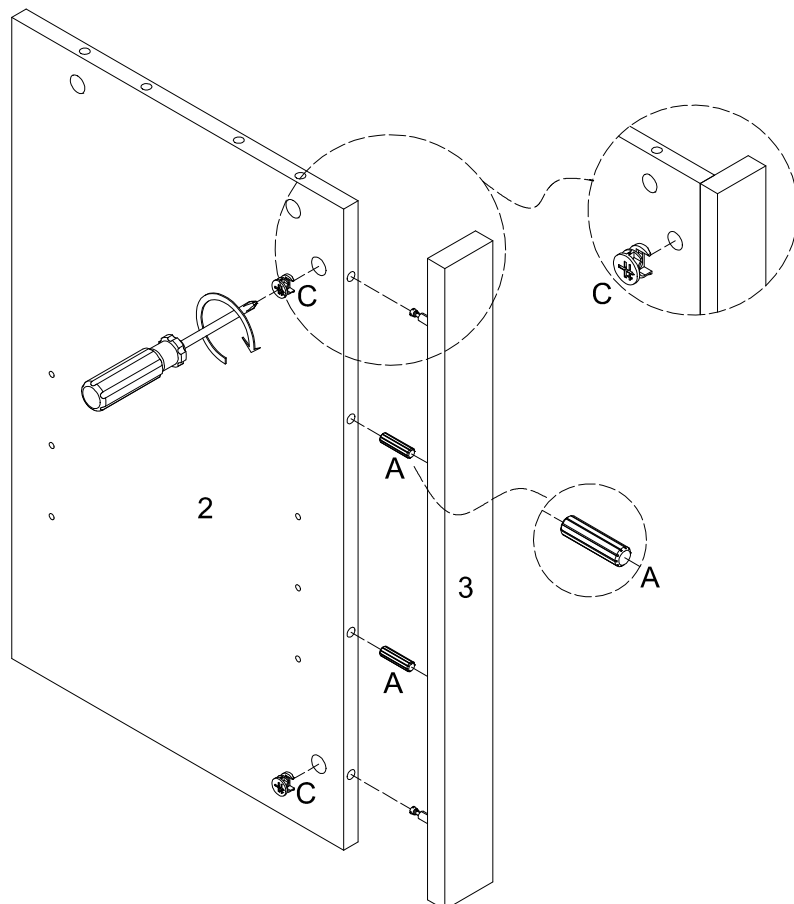


Step 5

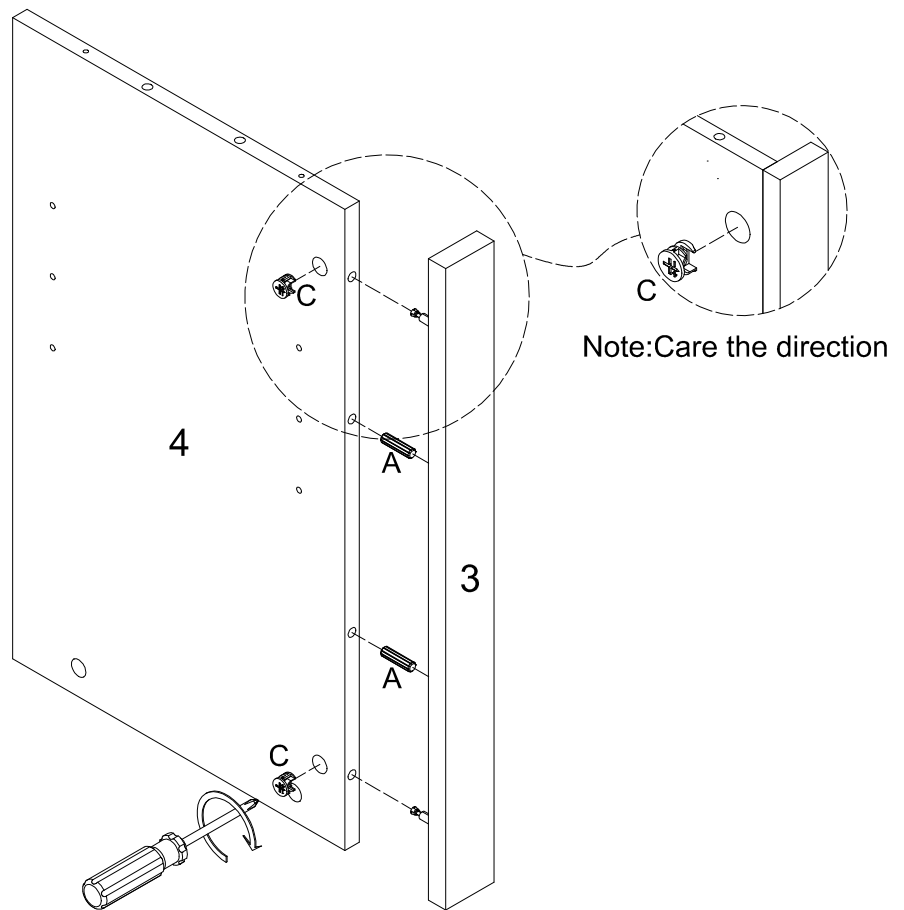


Step 6

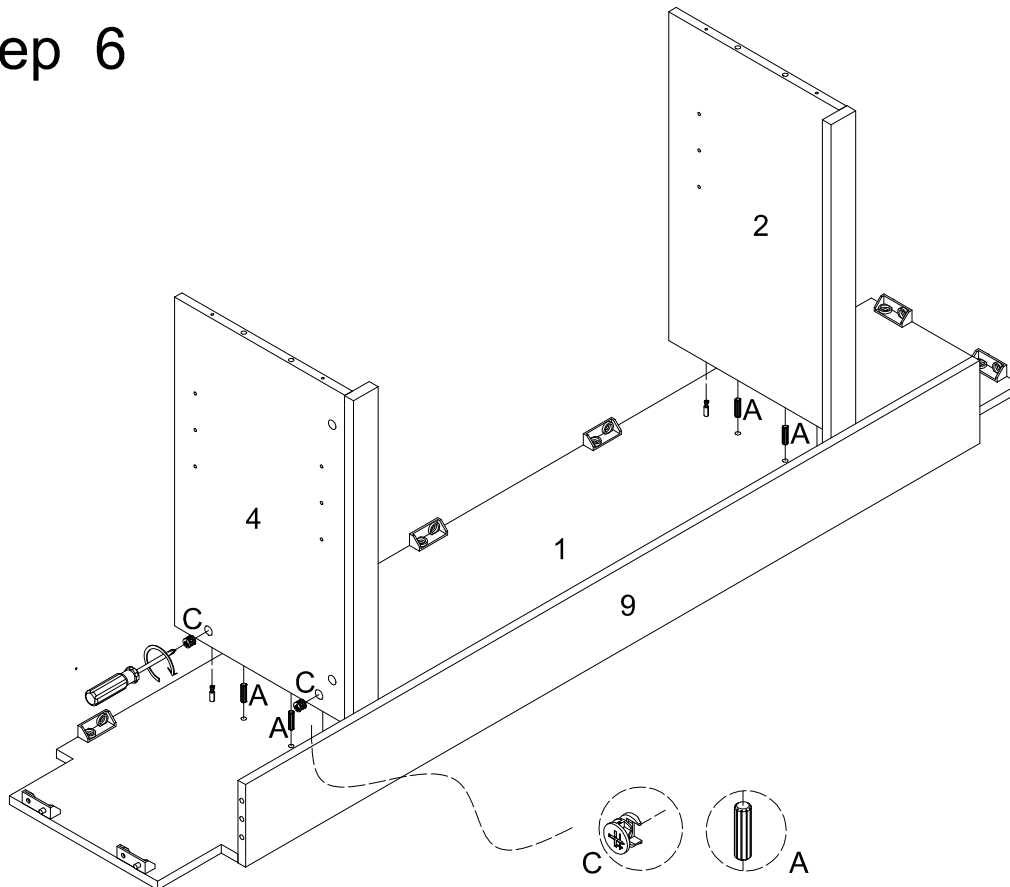



Step 7

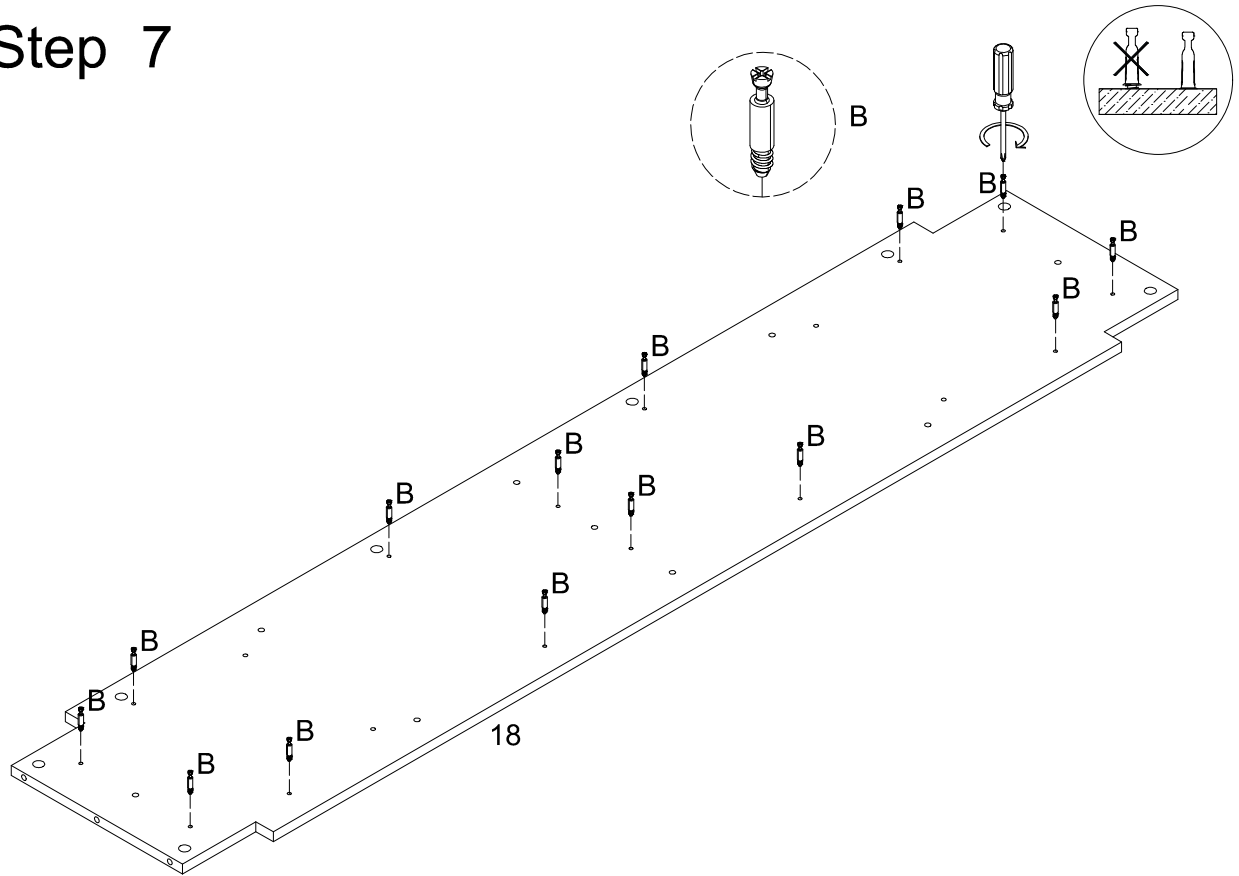



Step 8

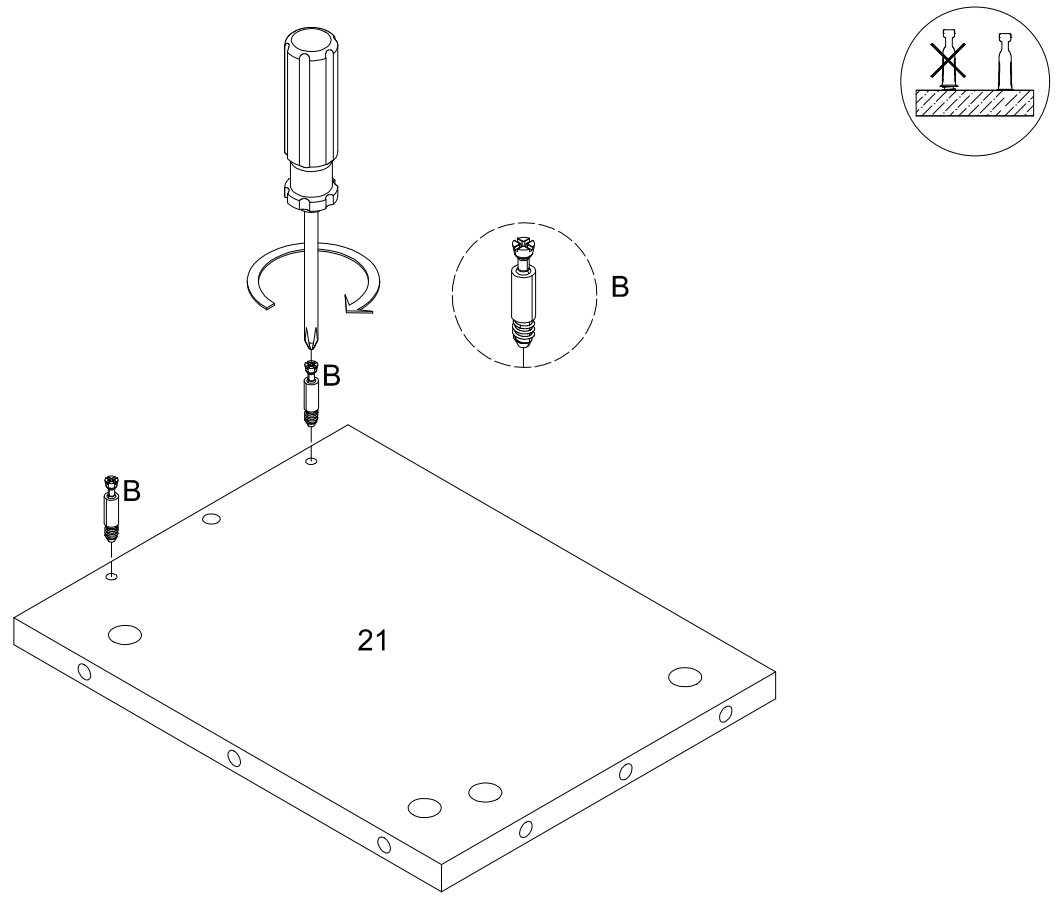


Step 9

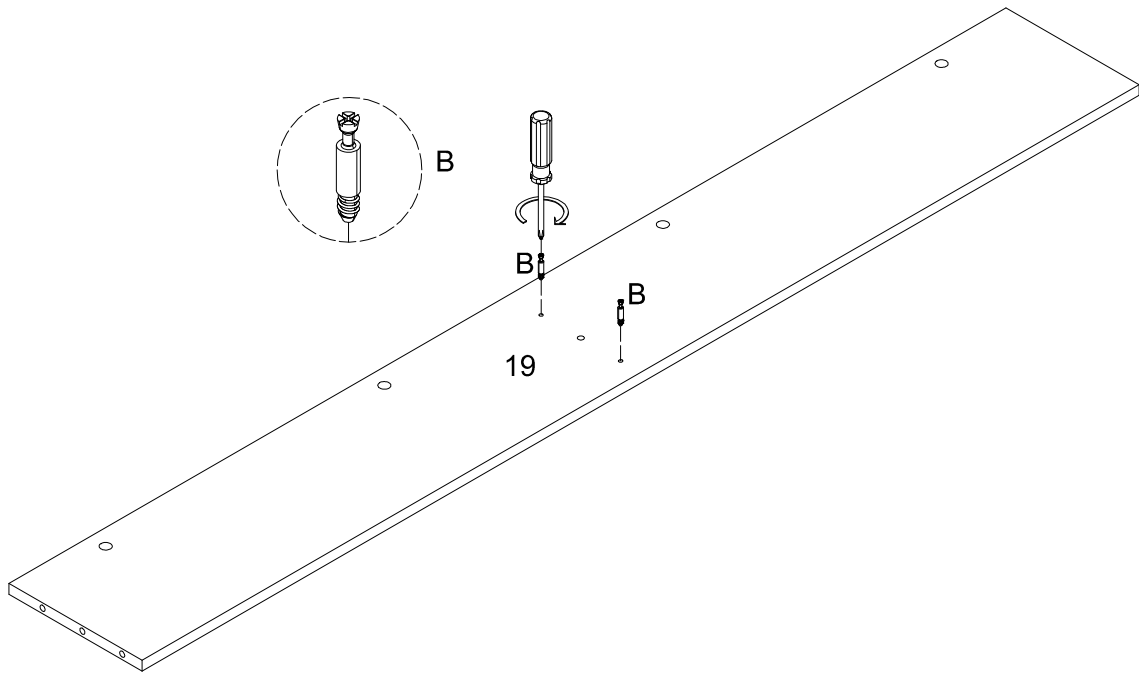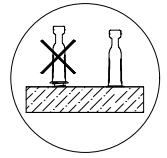


Step 10

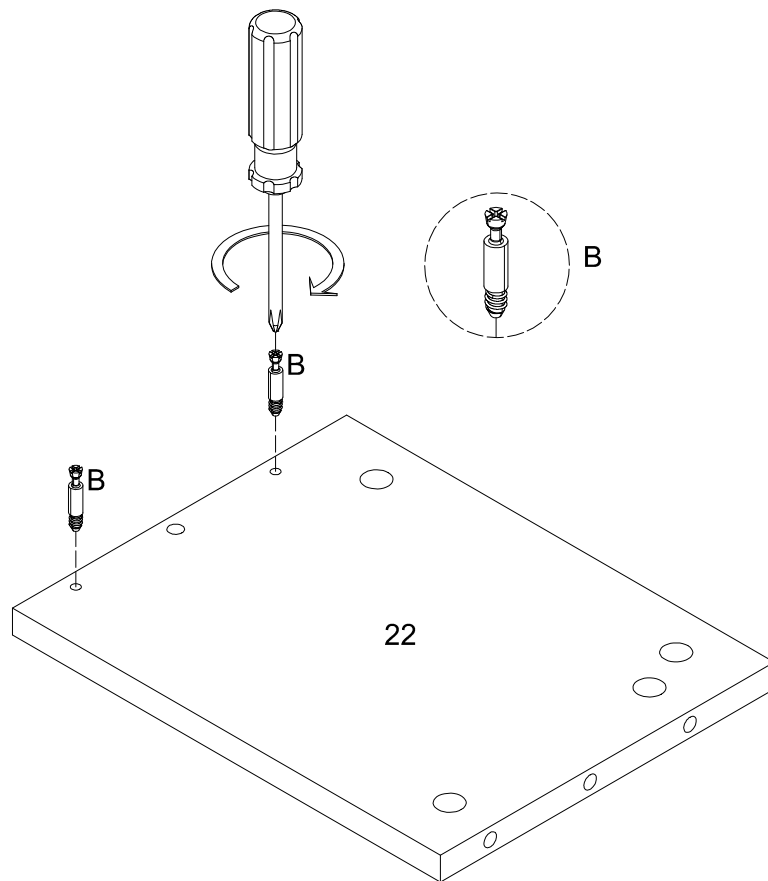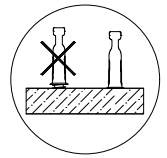


Step 11

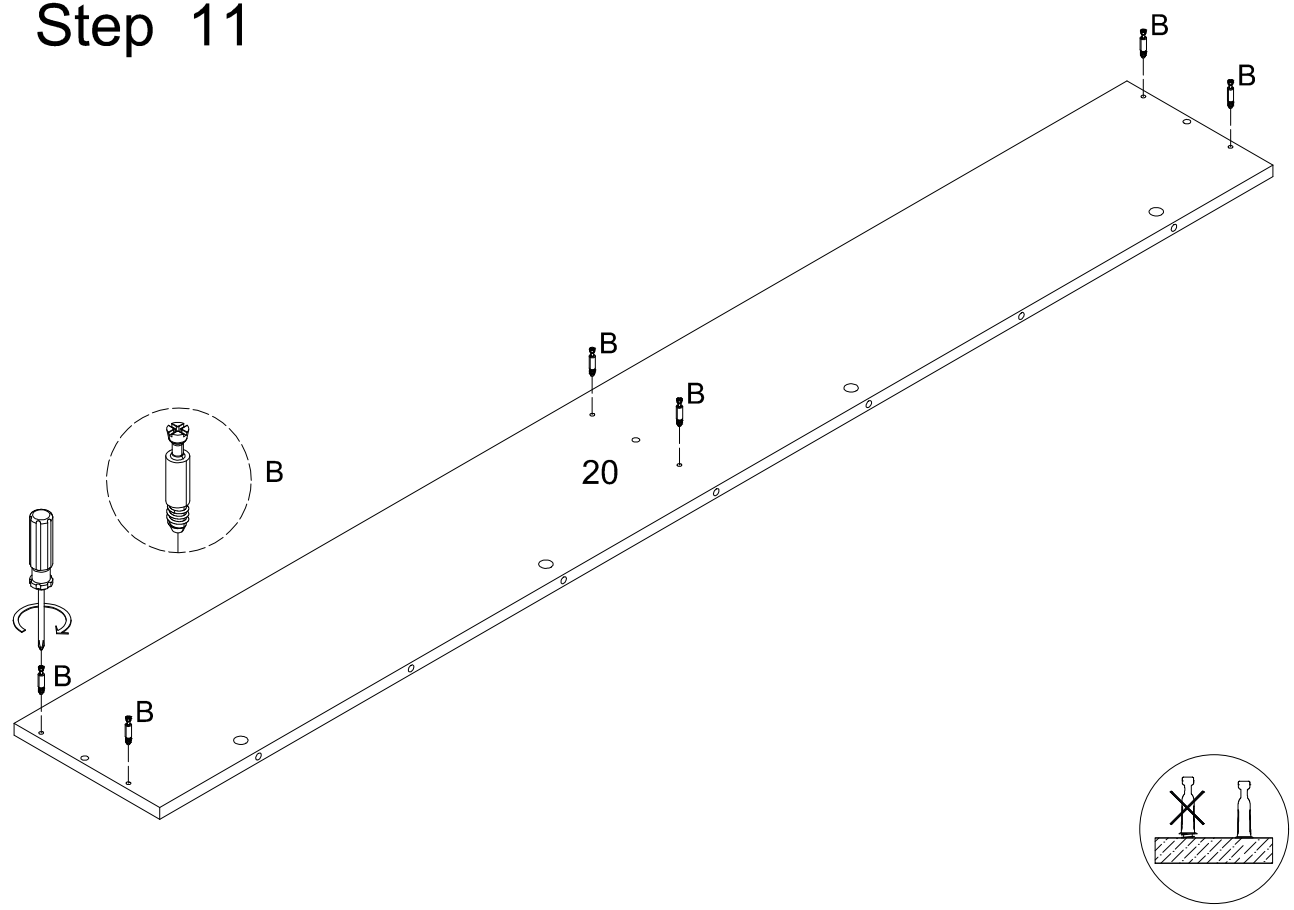


Step 12

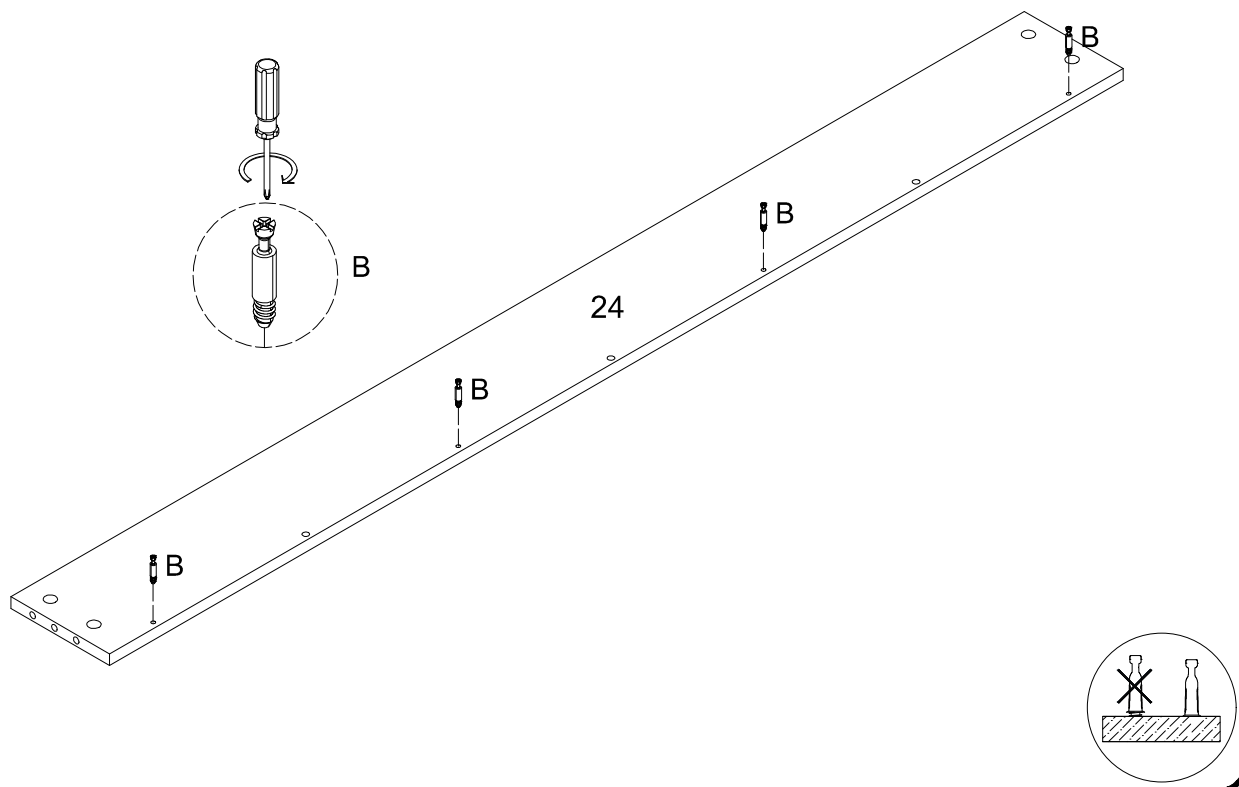


Step 13

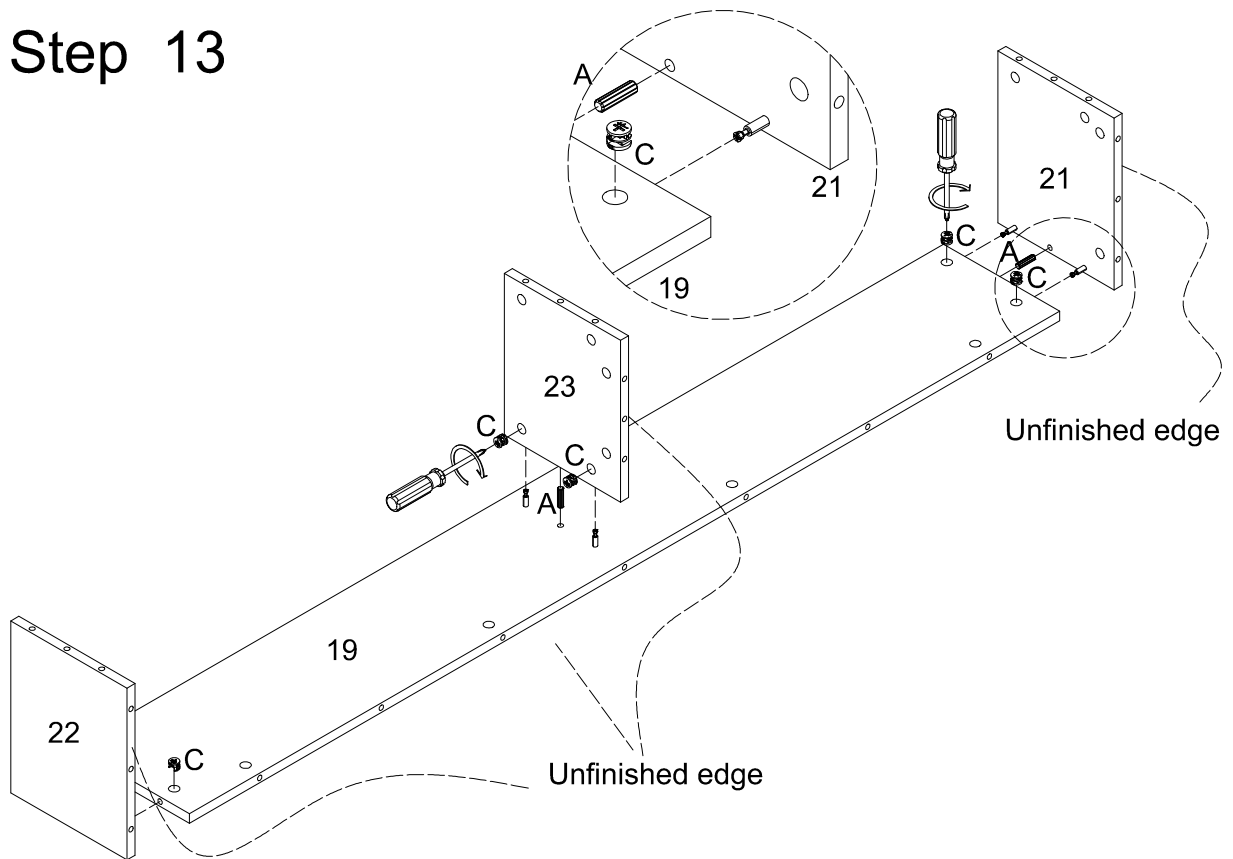


Step 14

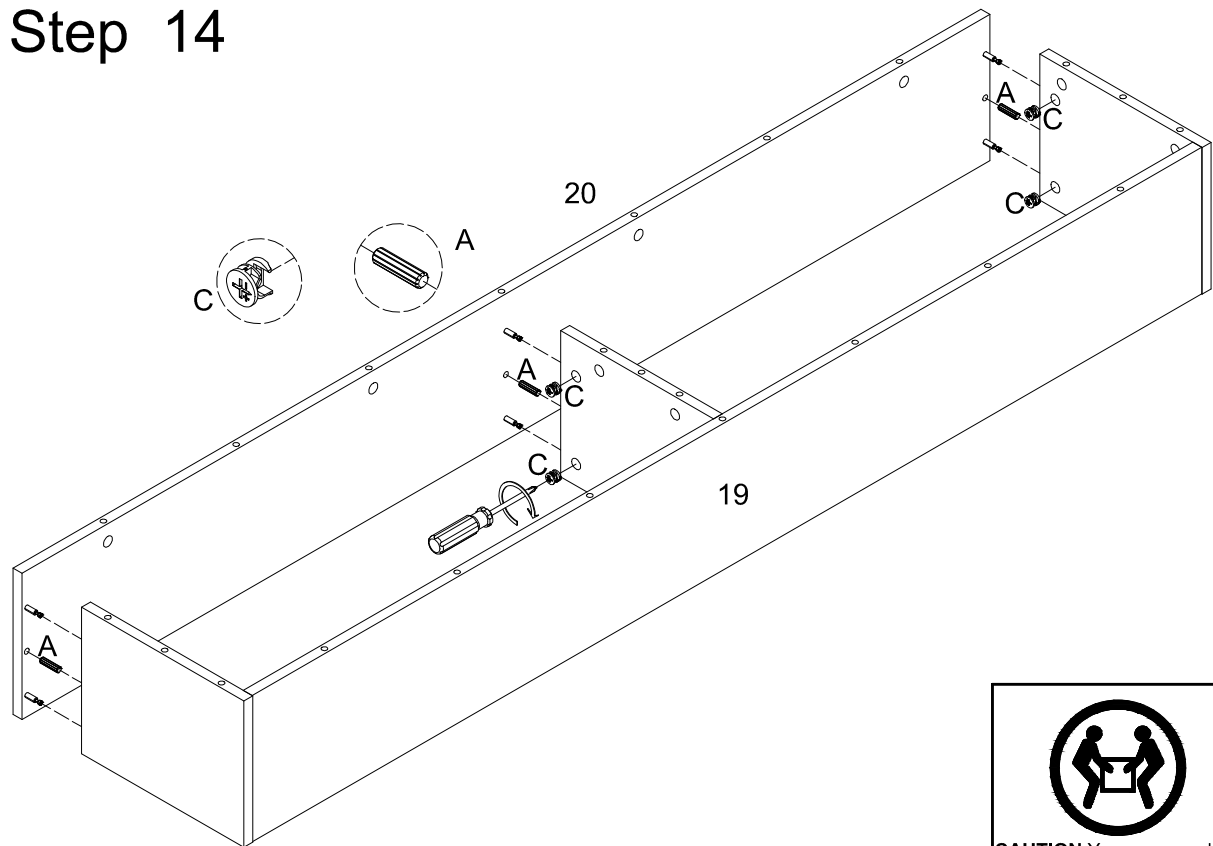


Step 15

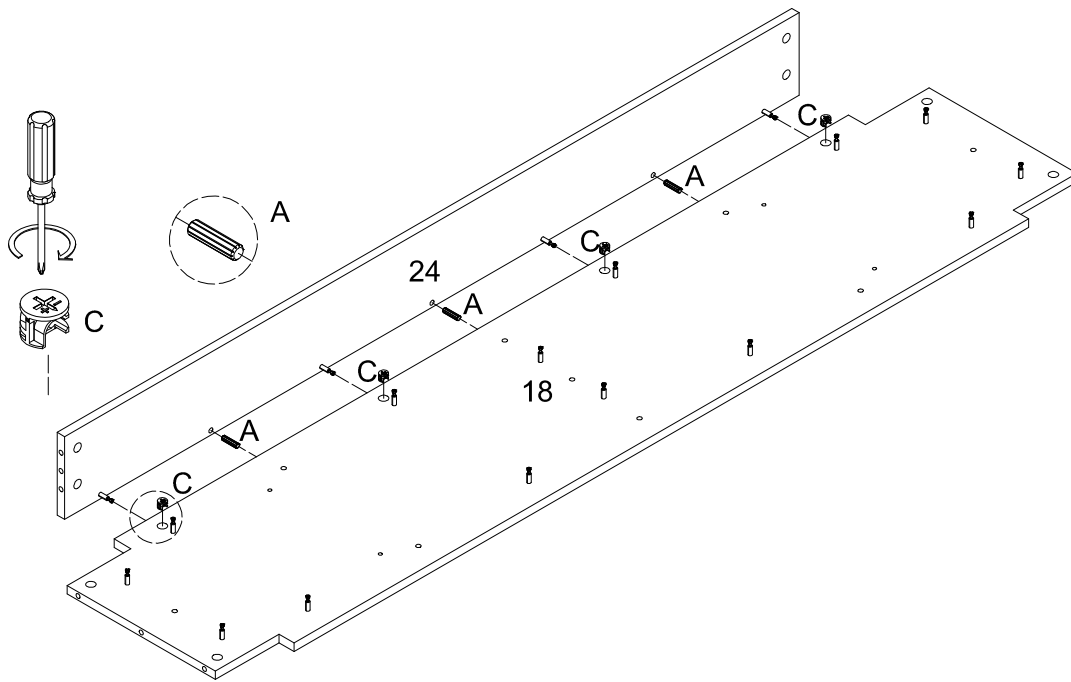


Step 16

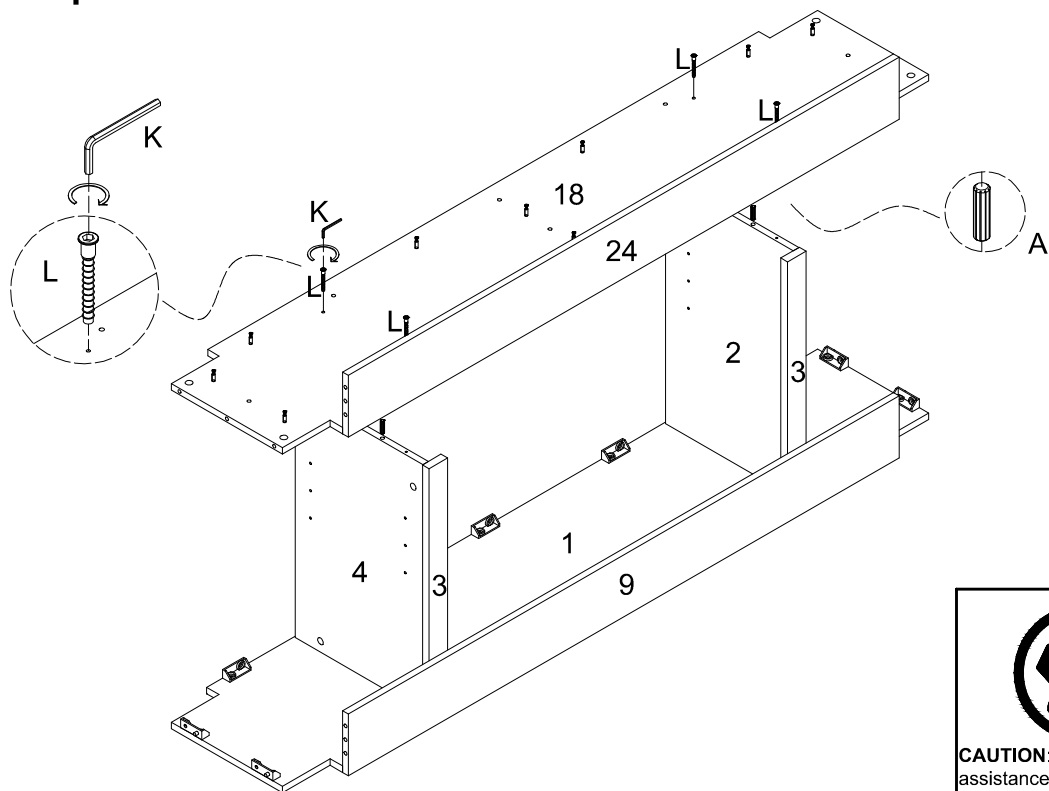



Step 17

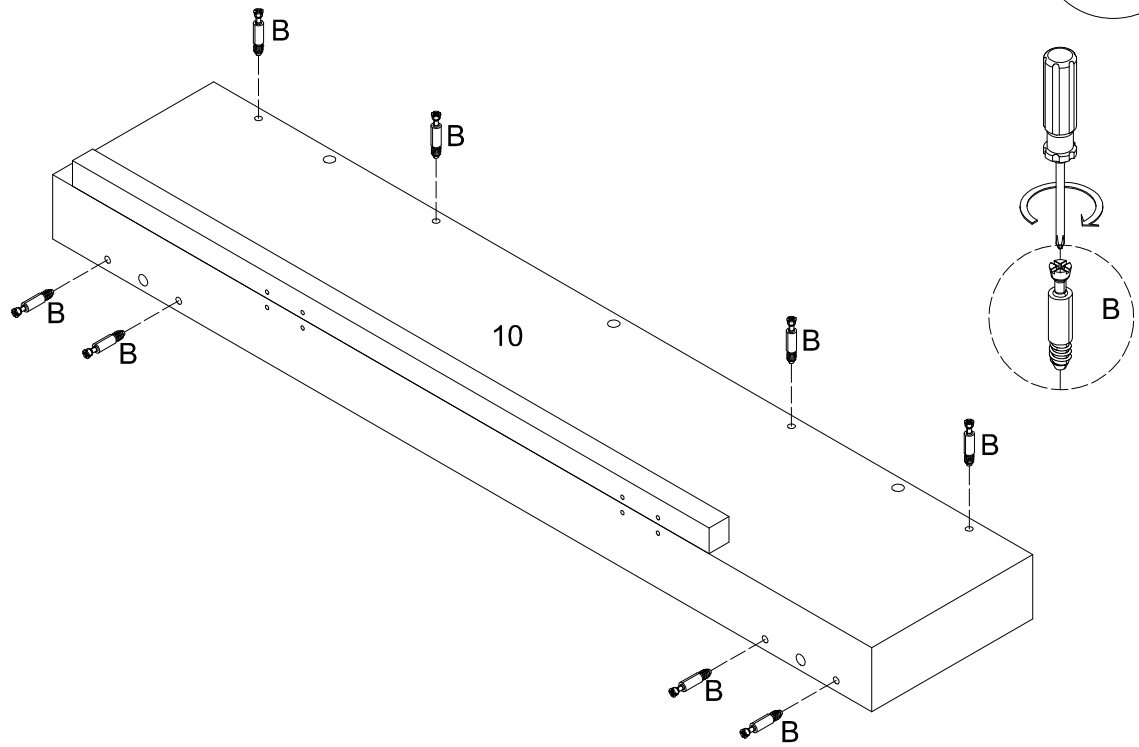



Step 18

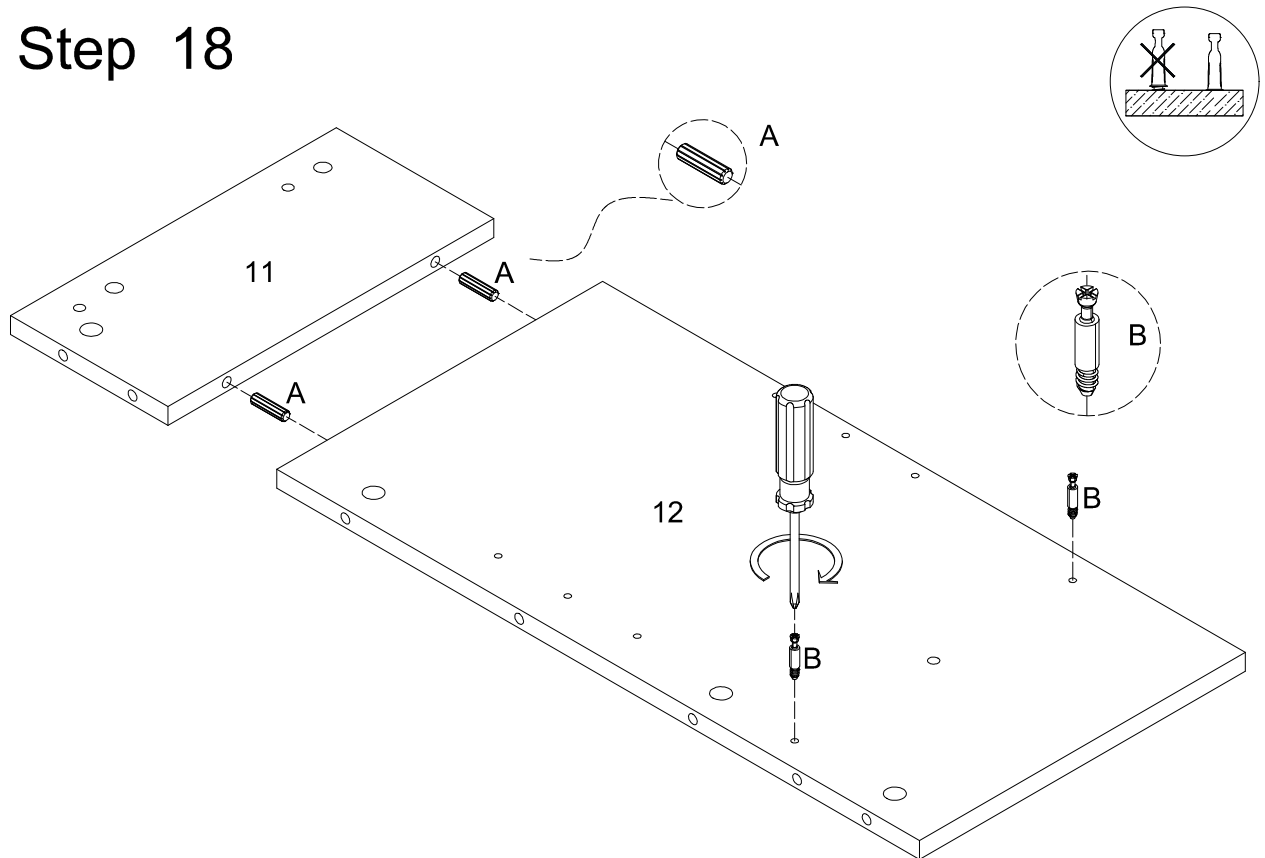


Step 19

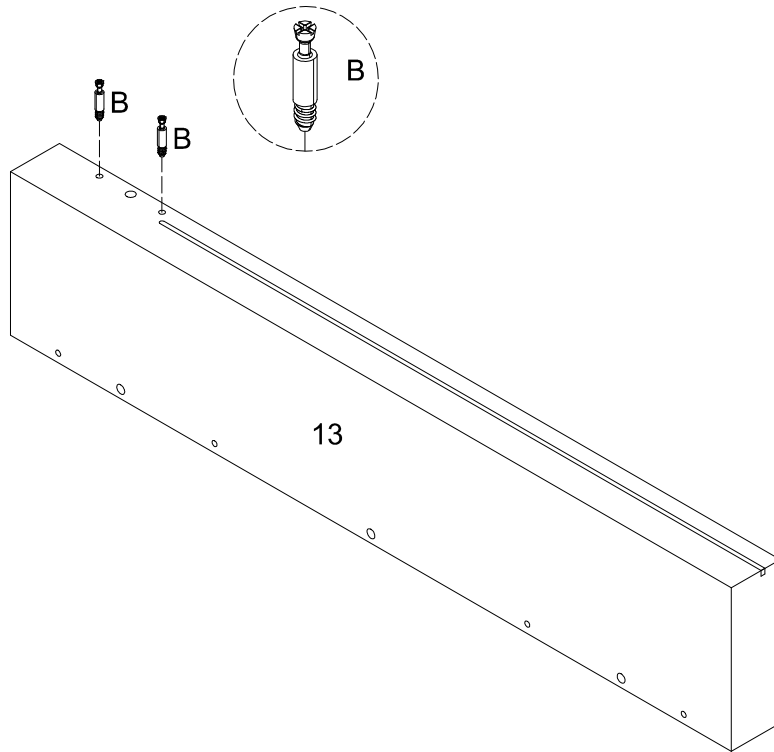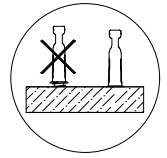


Step 20

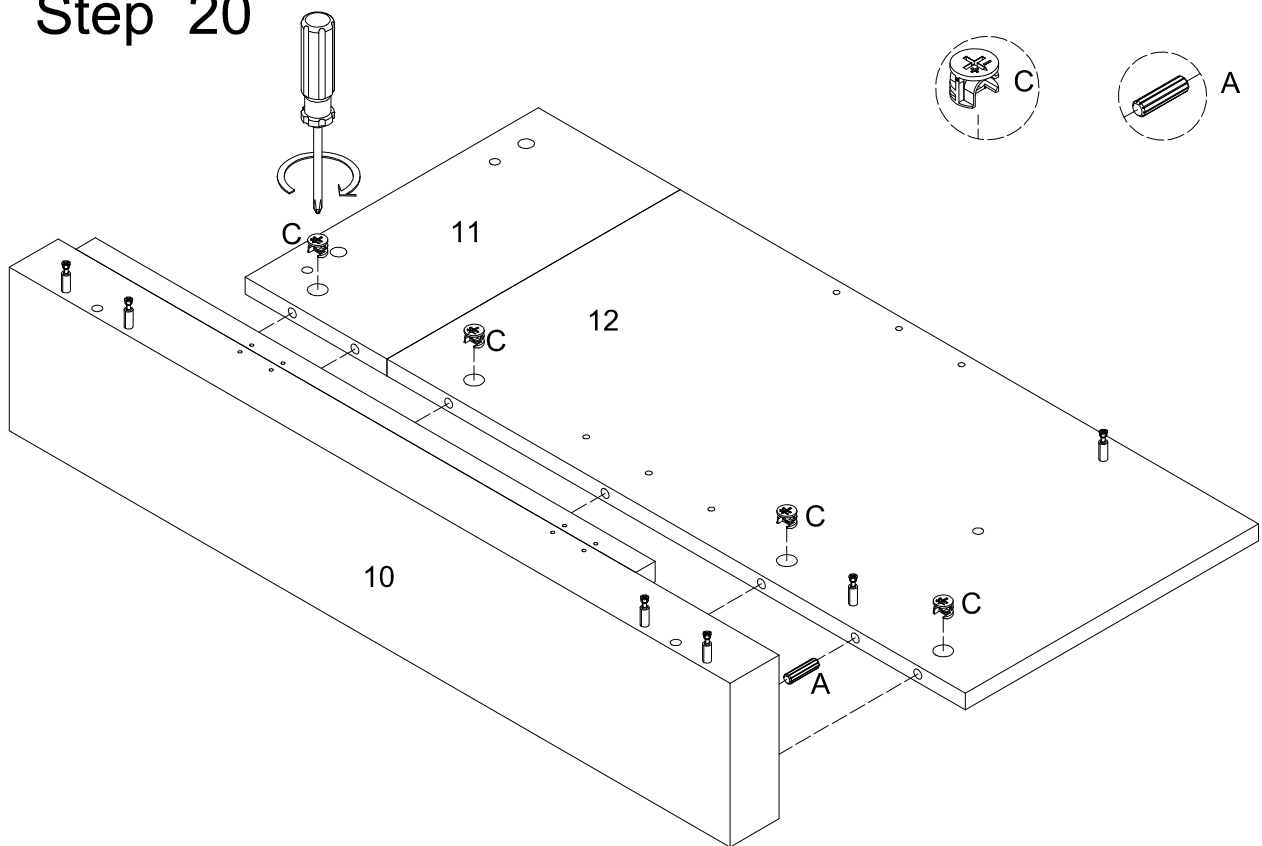


Step 21

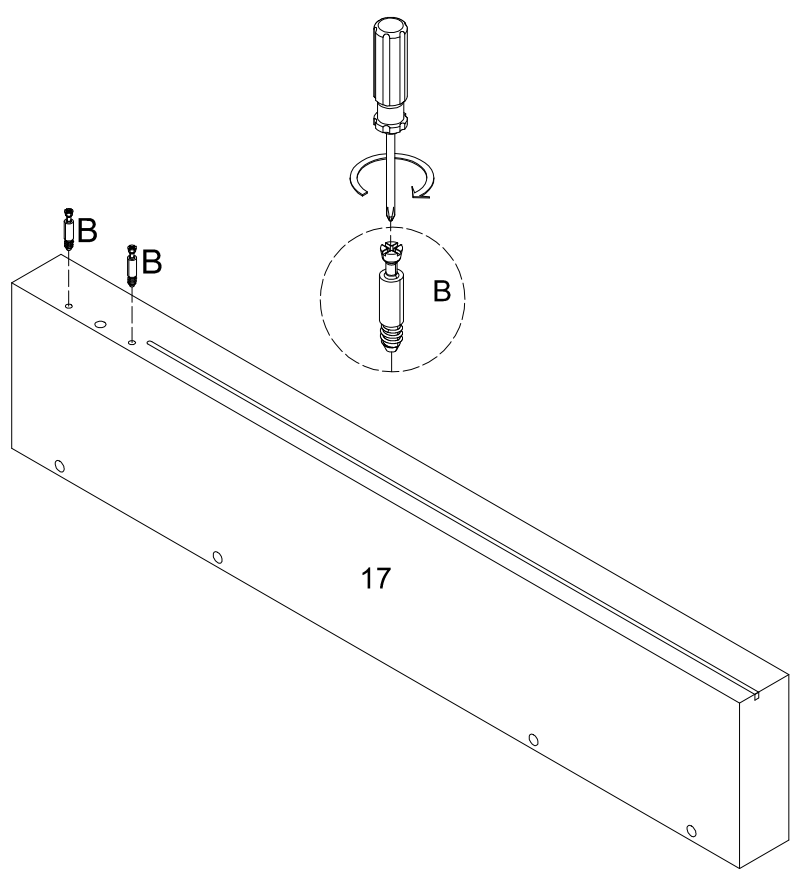


Step 22

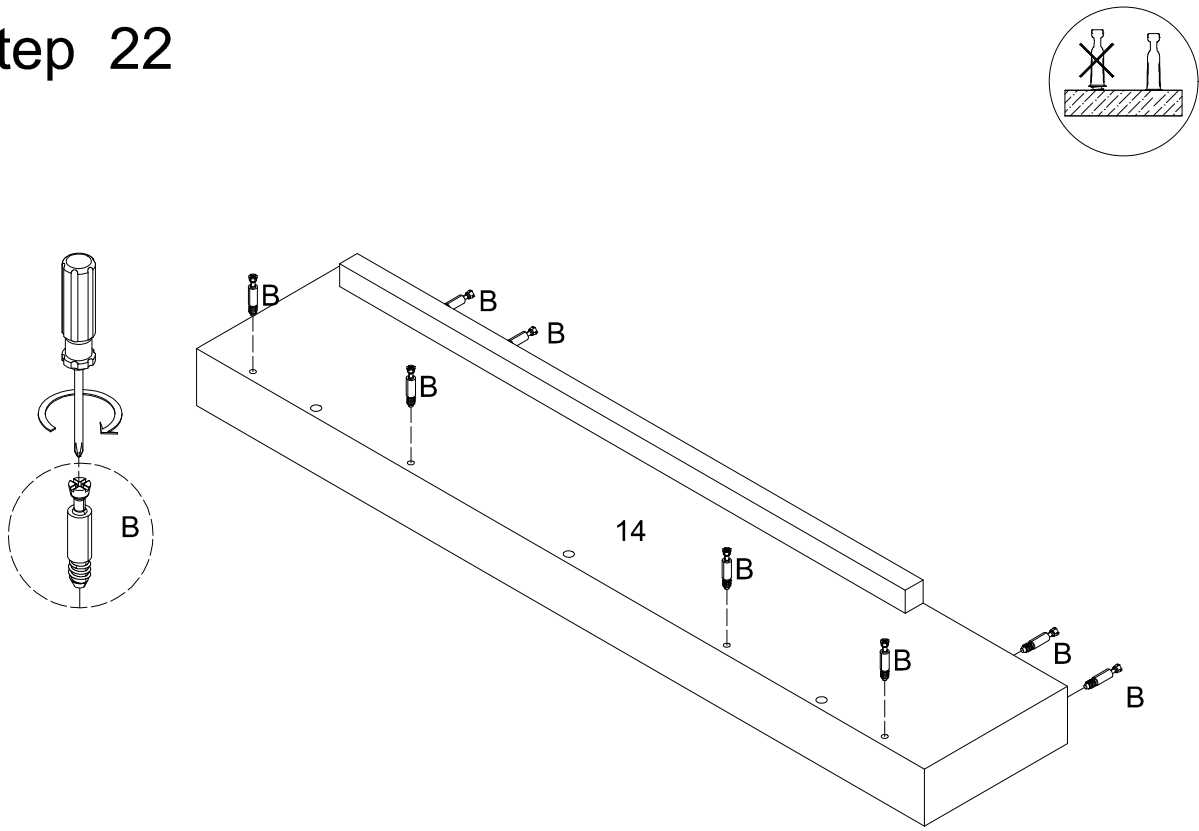


Step 23

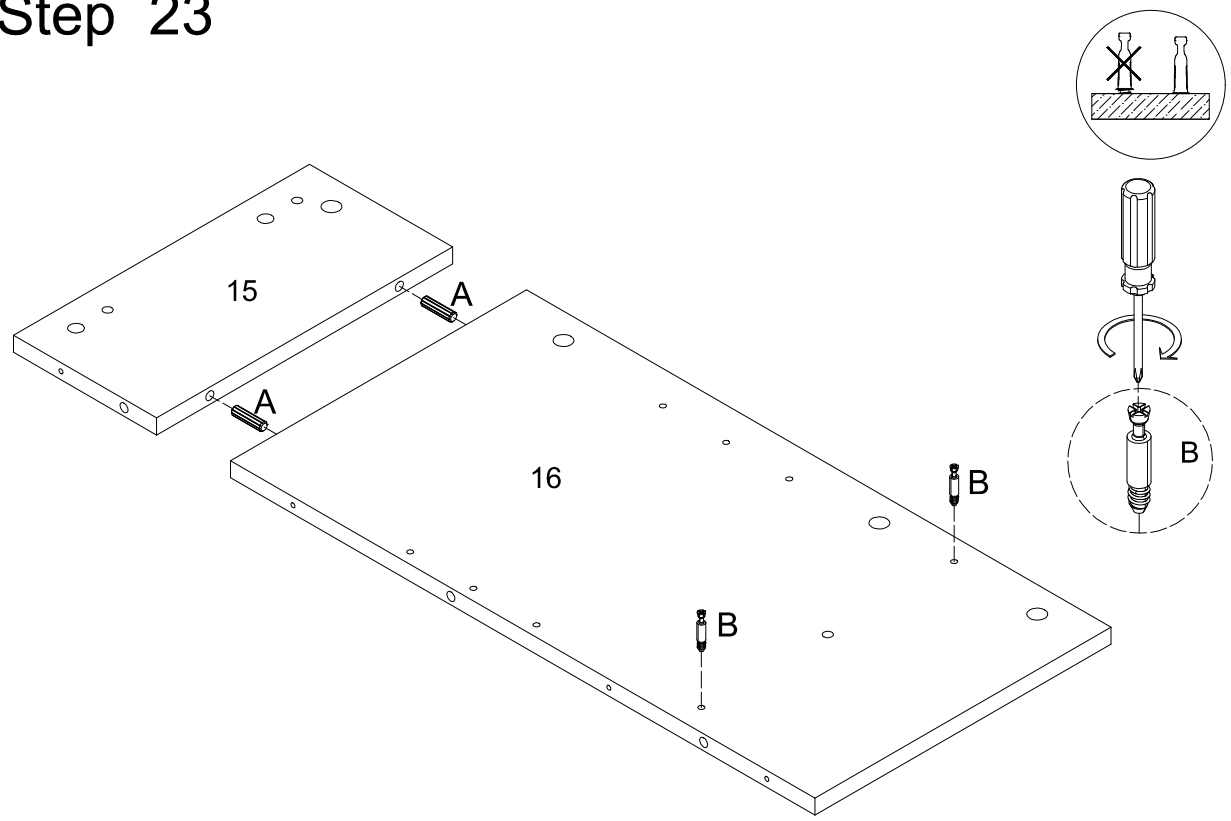


Step 24

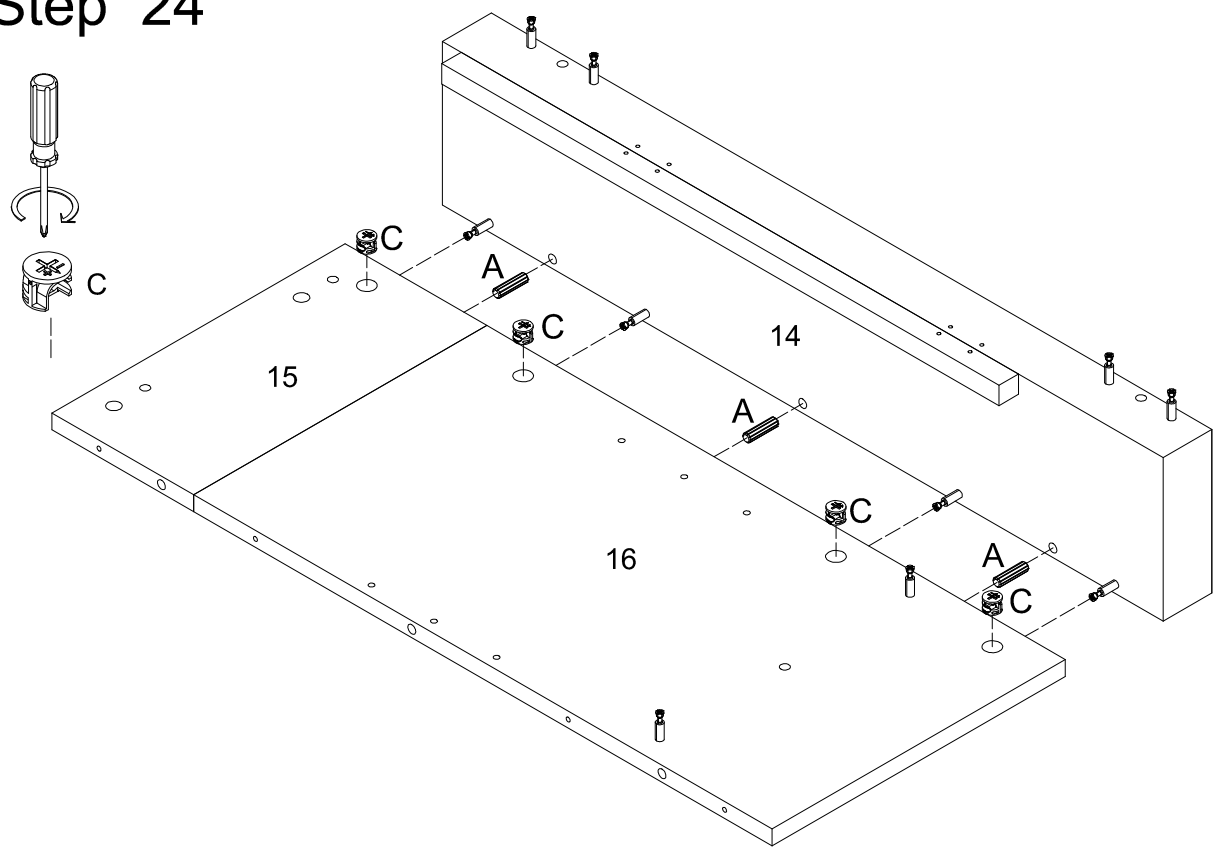


Step 25

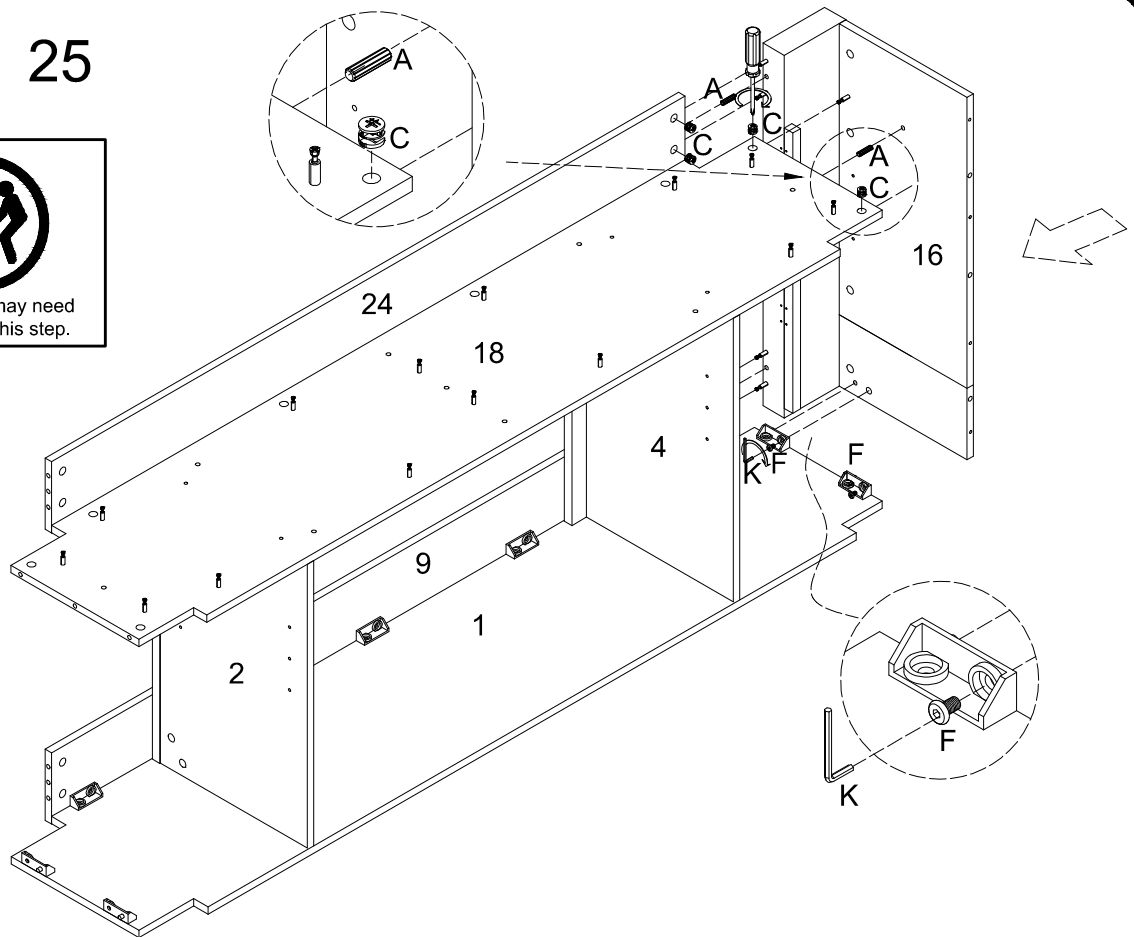


Step 26

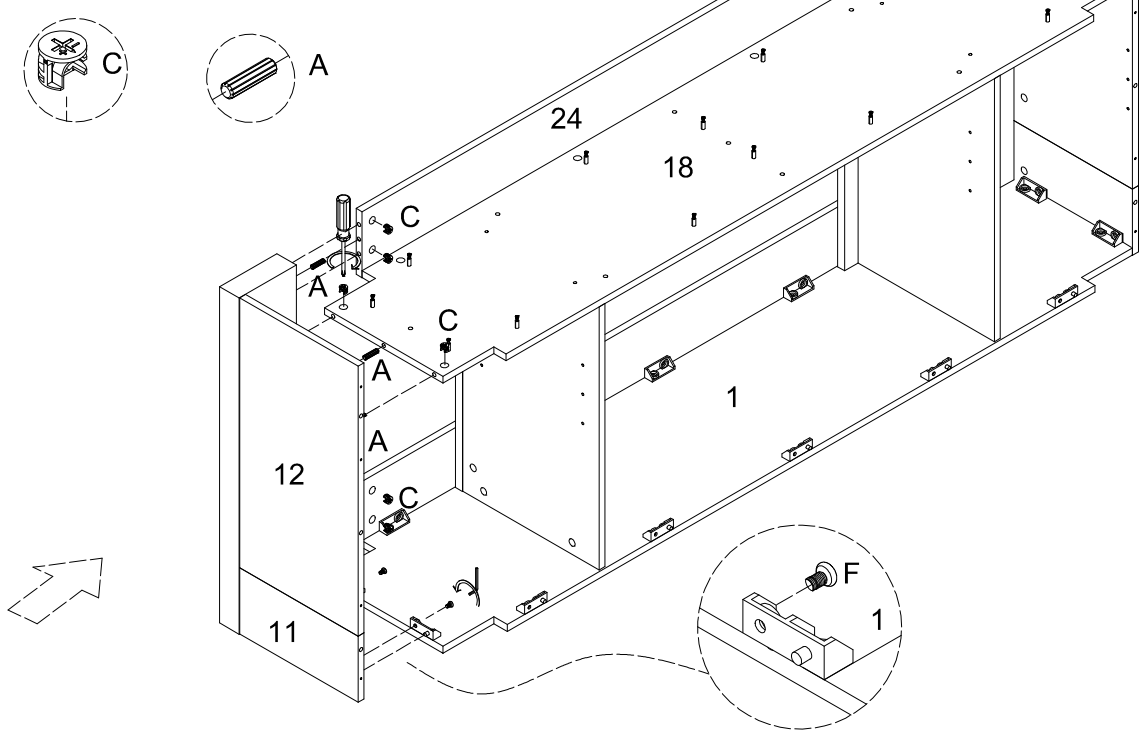

Step 27

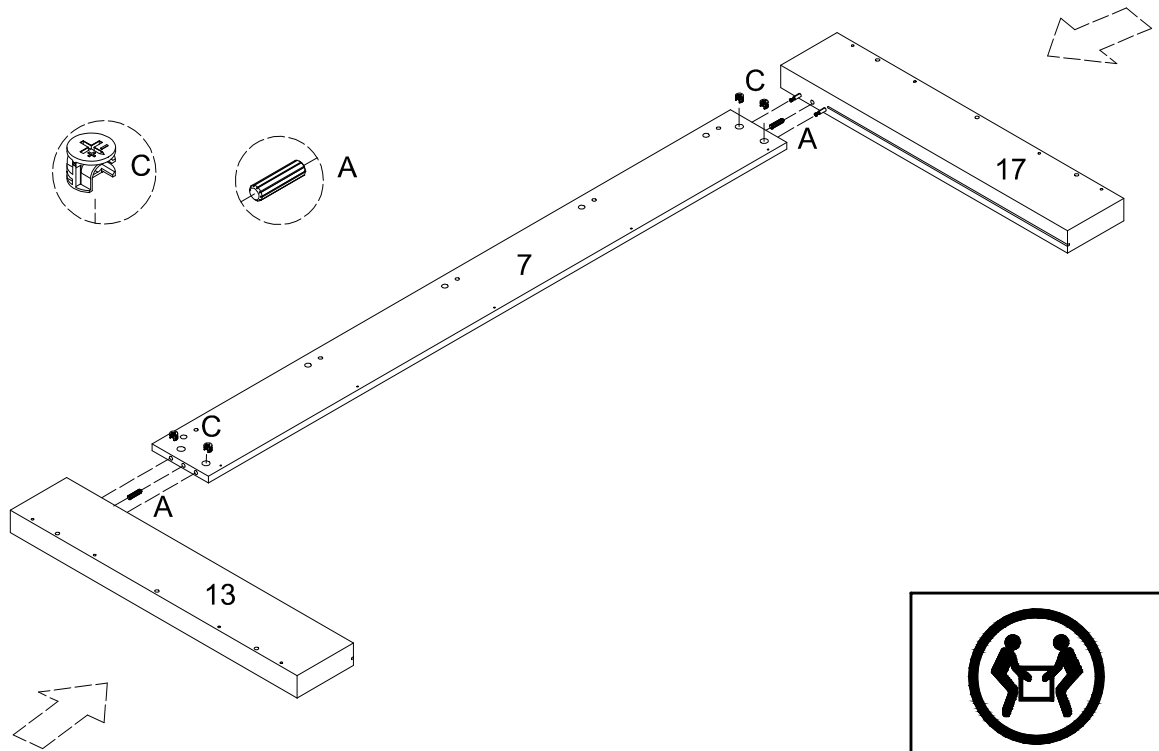


Step 28

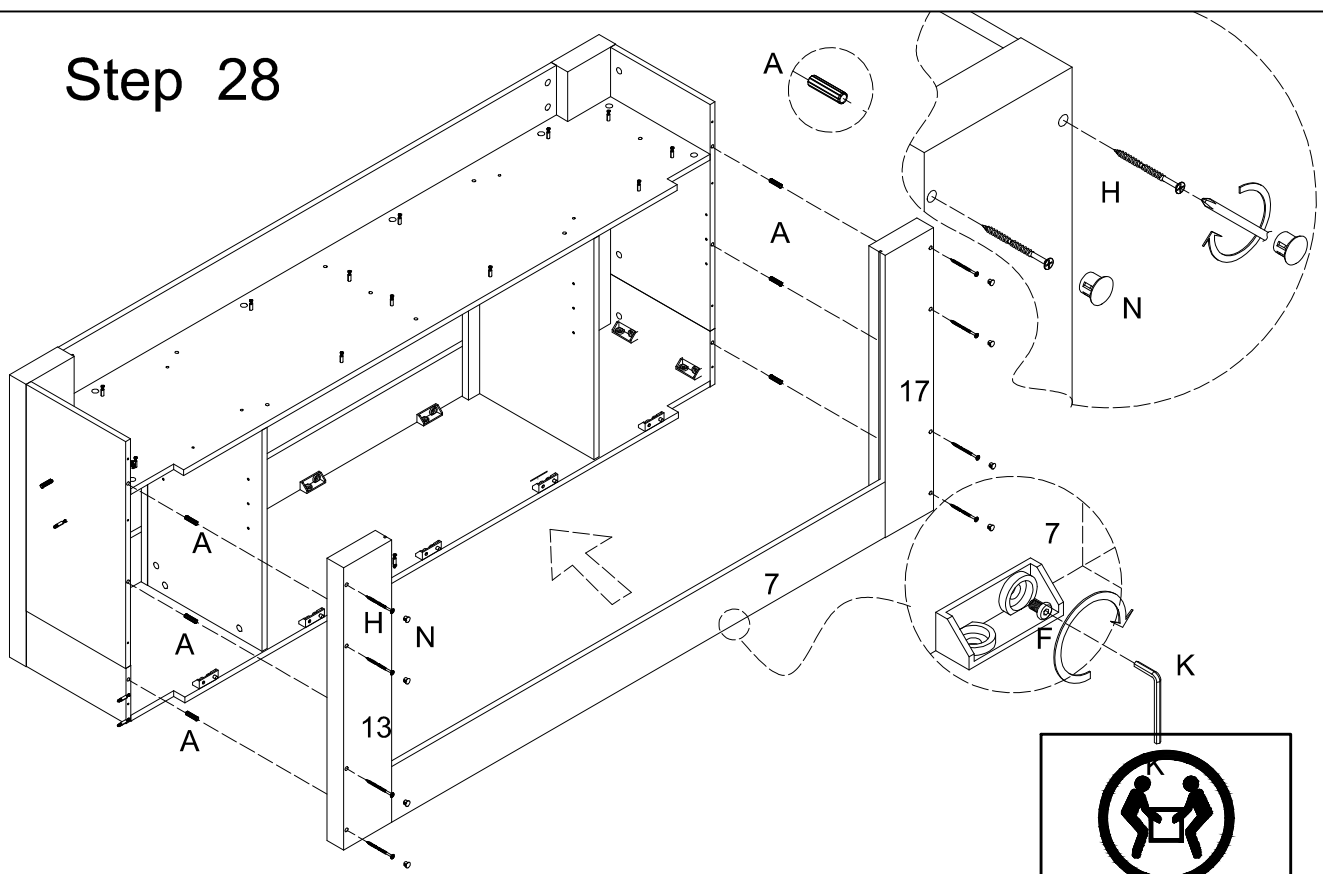


Step 29


Note: Care the direction

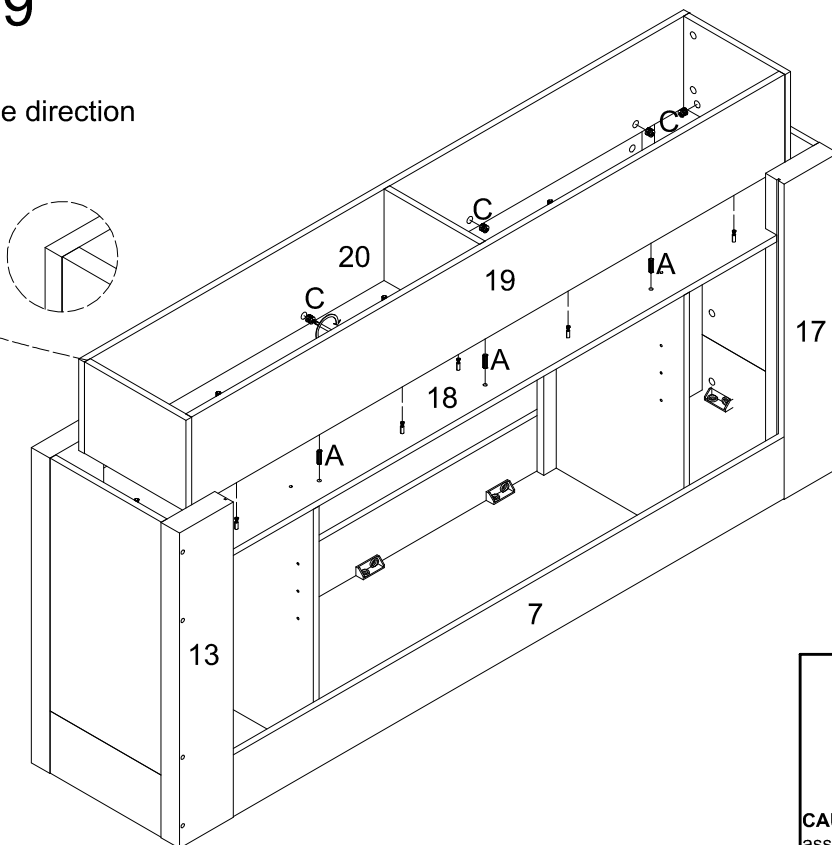


Step 30

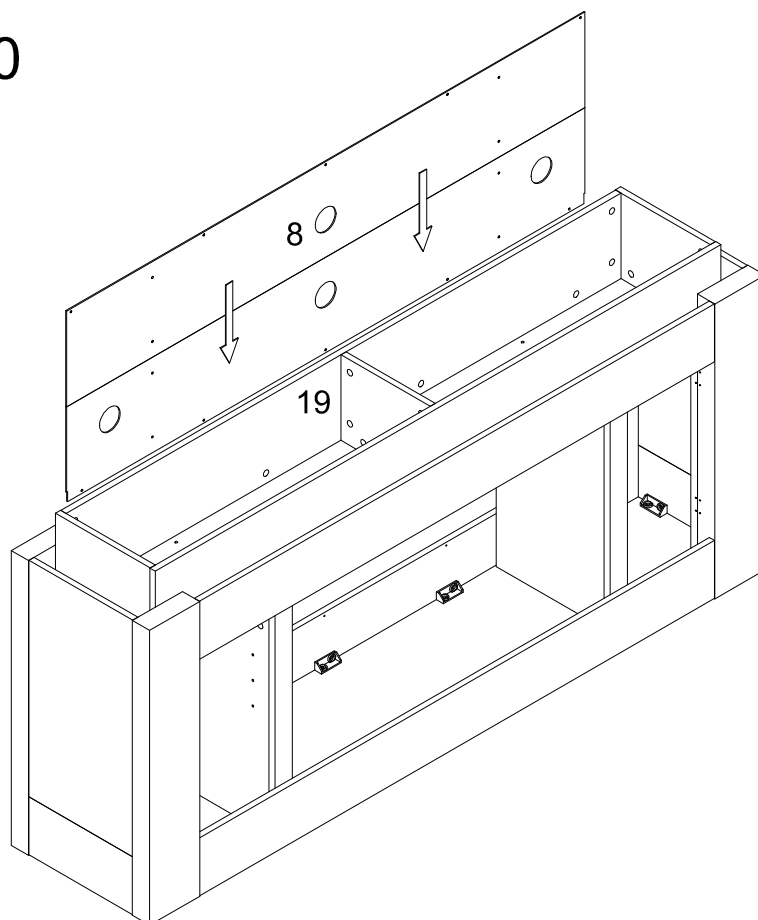


Step 31

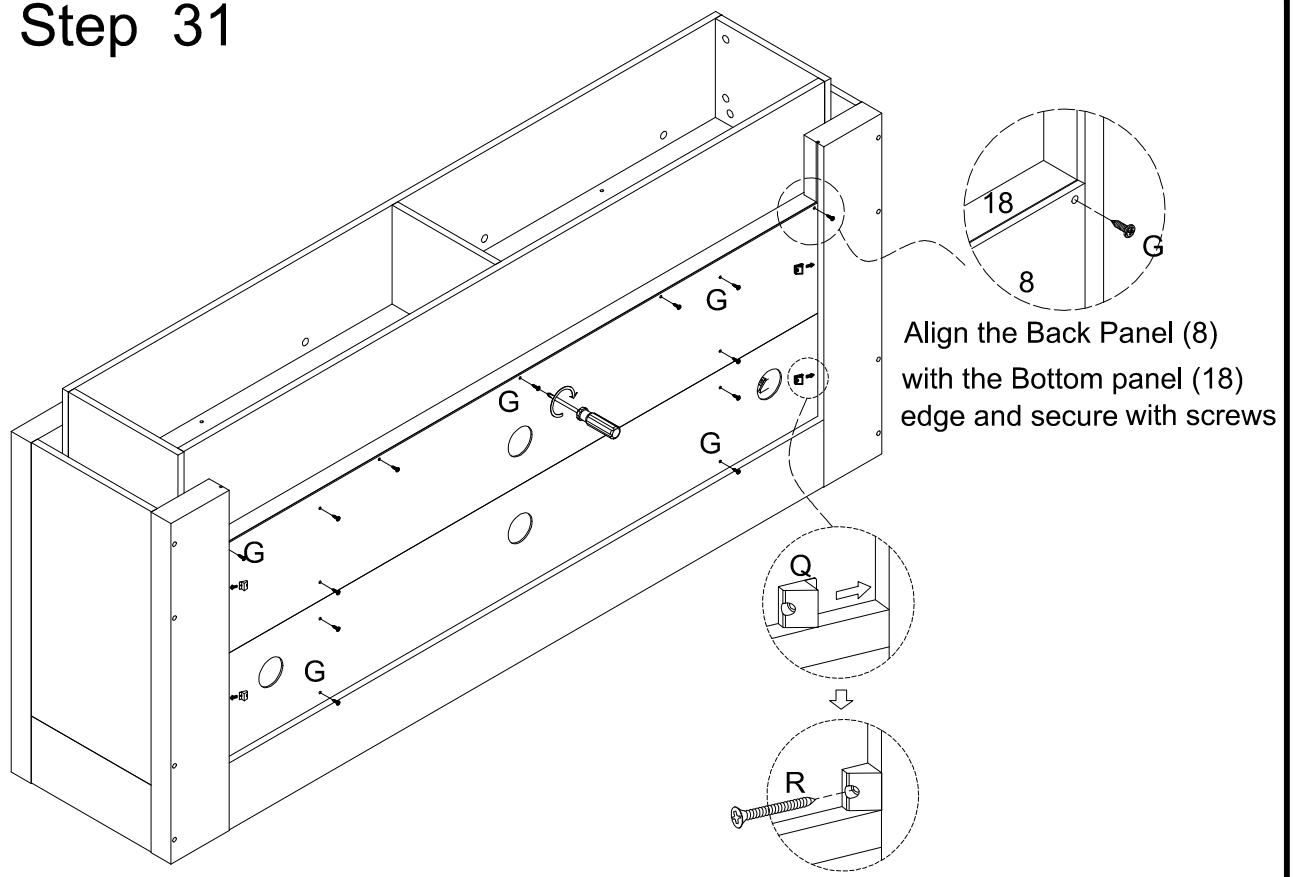


Step 32

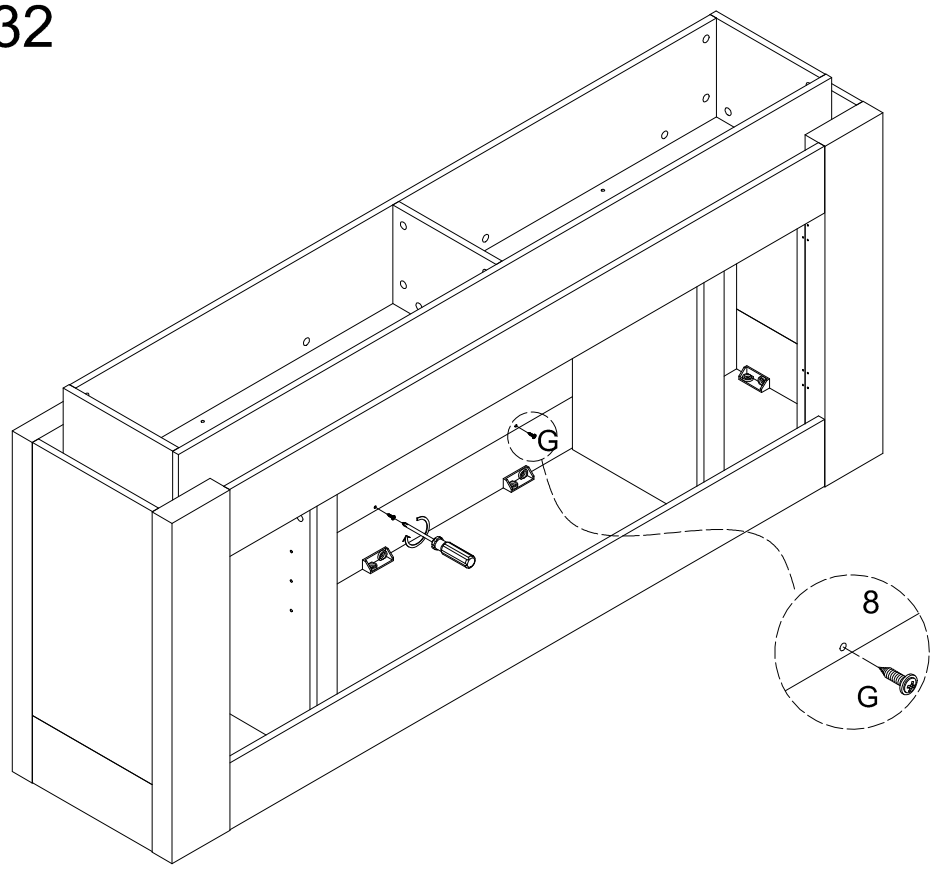


Step 33

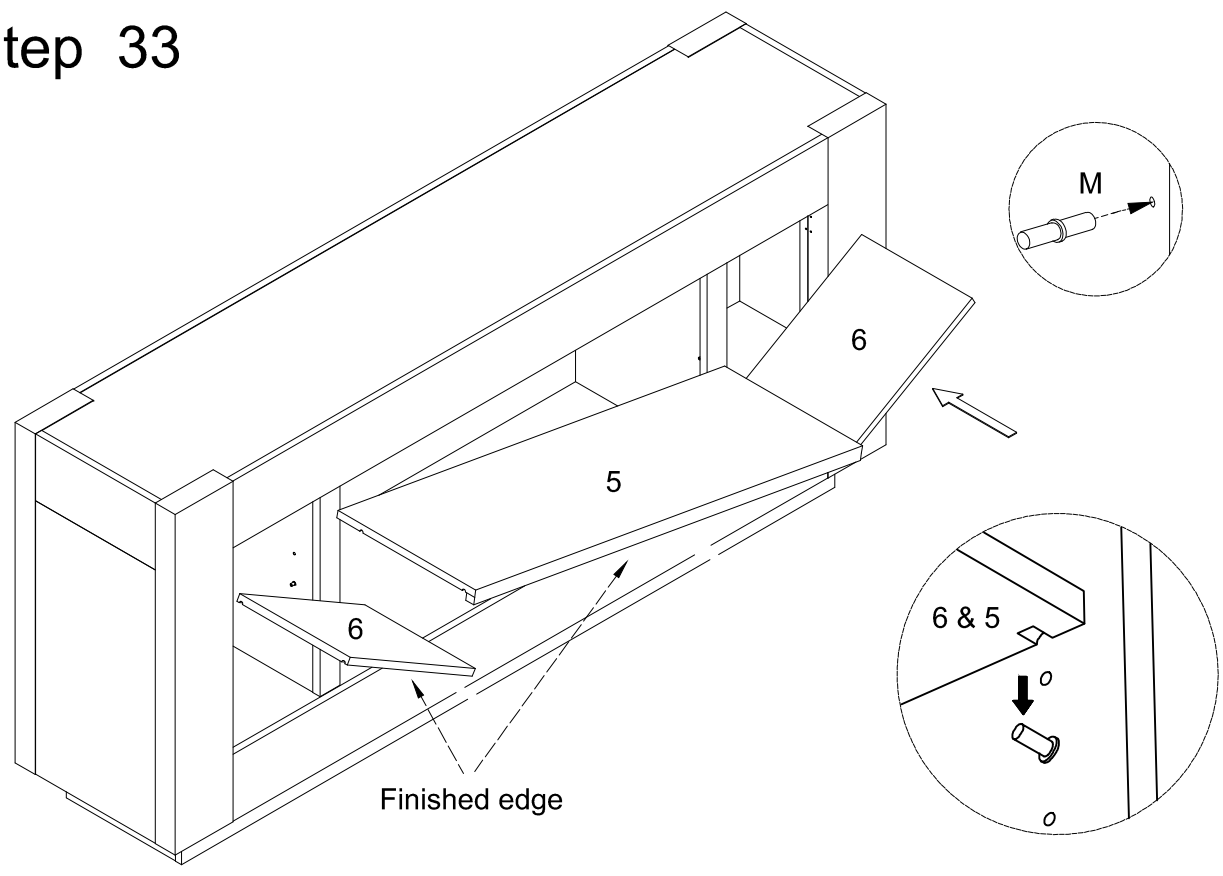


Step 34

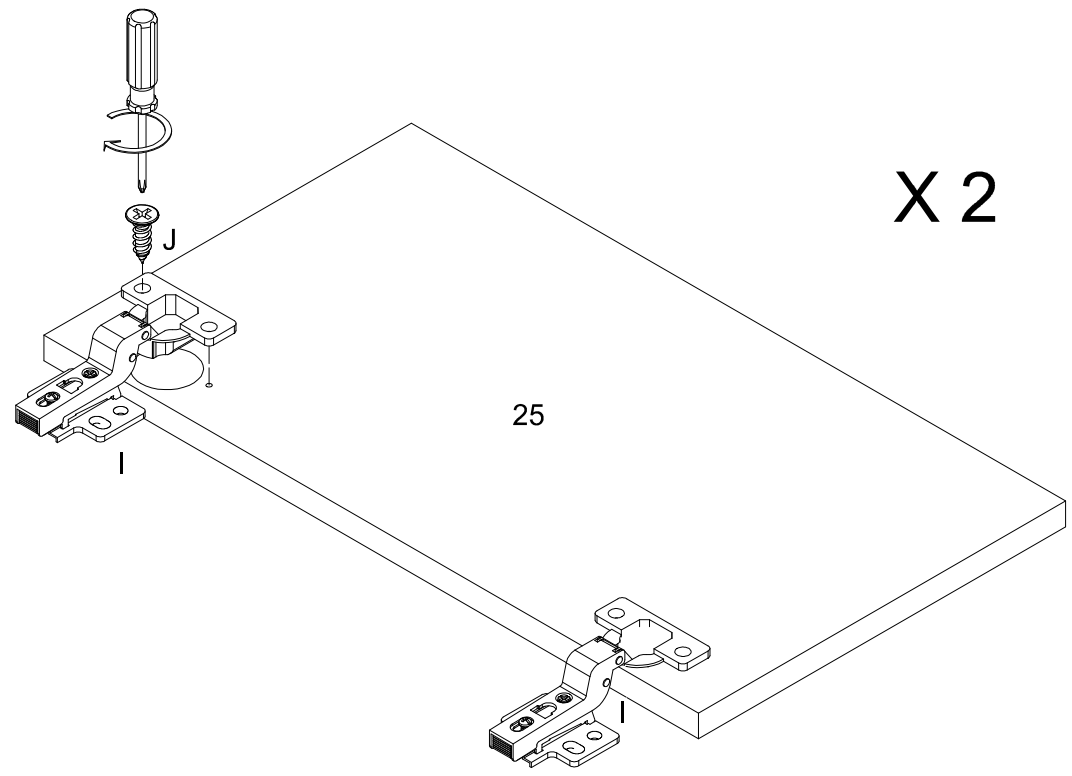


Step 35

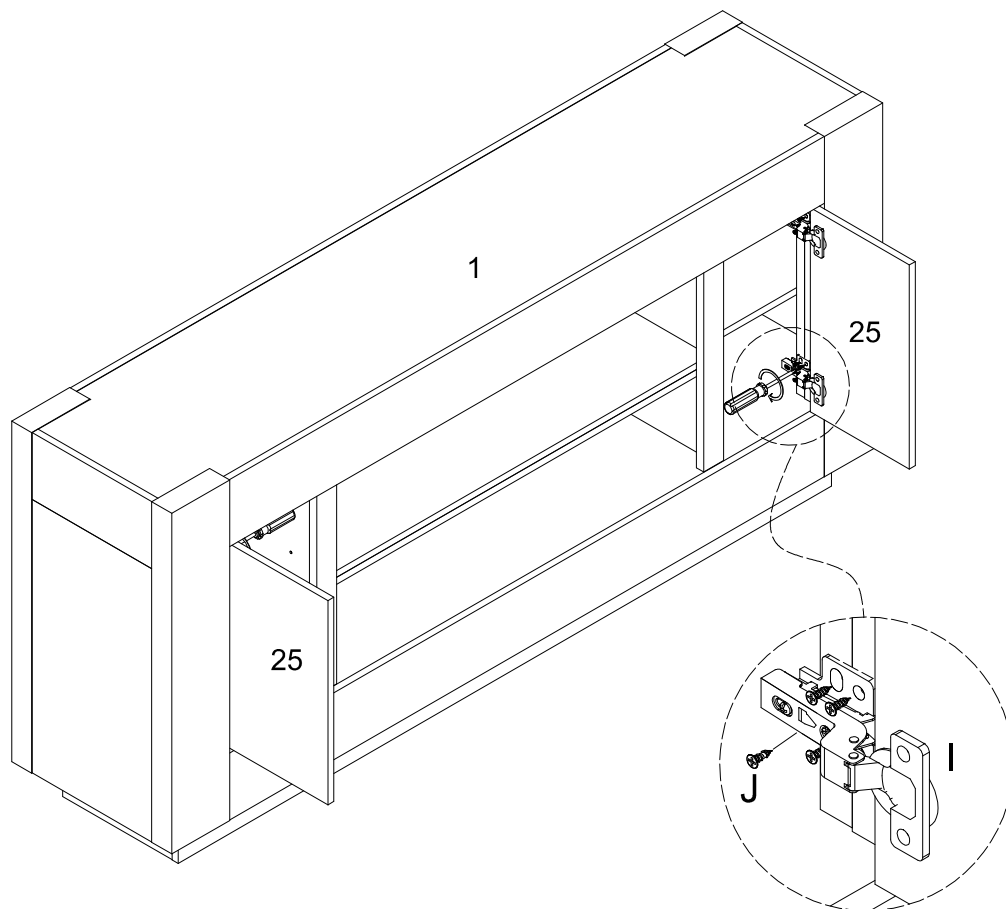


Concealed hinges are three-way adjustable.

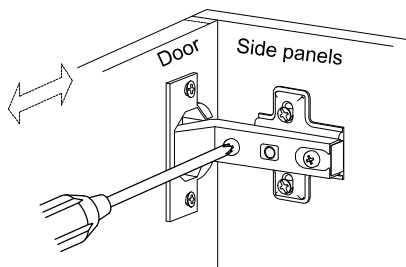

Horizontal
by screw adjustment

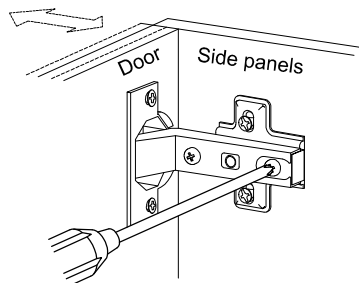


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment


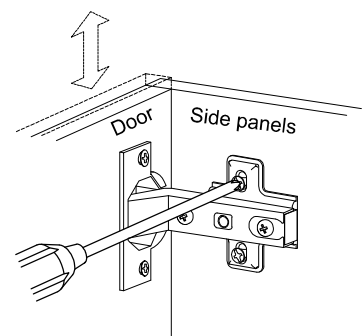


Vertical
Via slots in the mounting
plate or via cam adjustment


Step 36

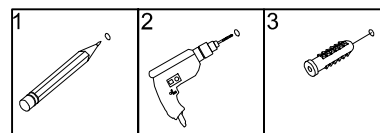

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

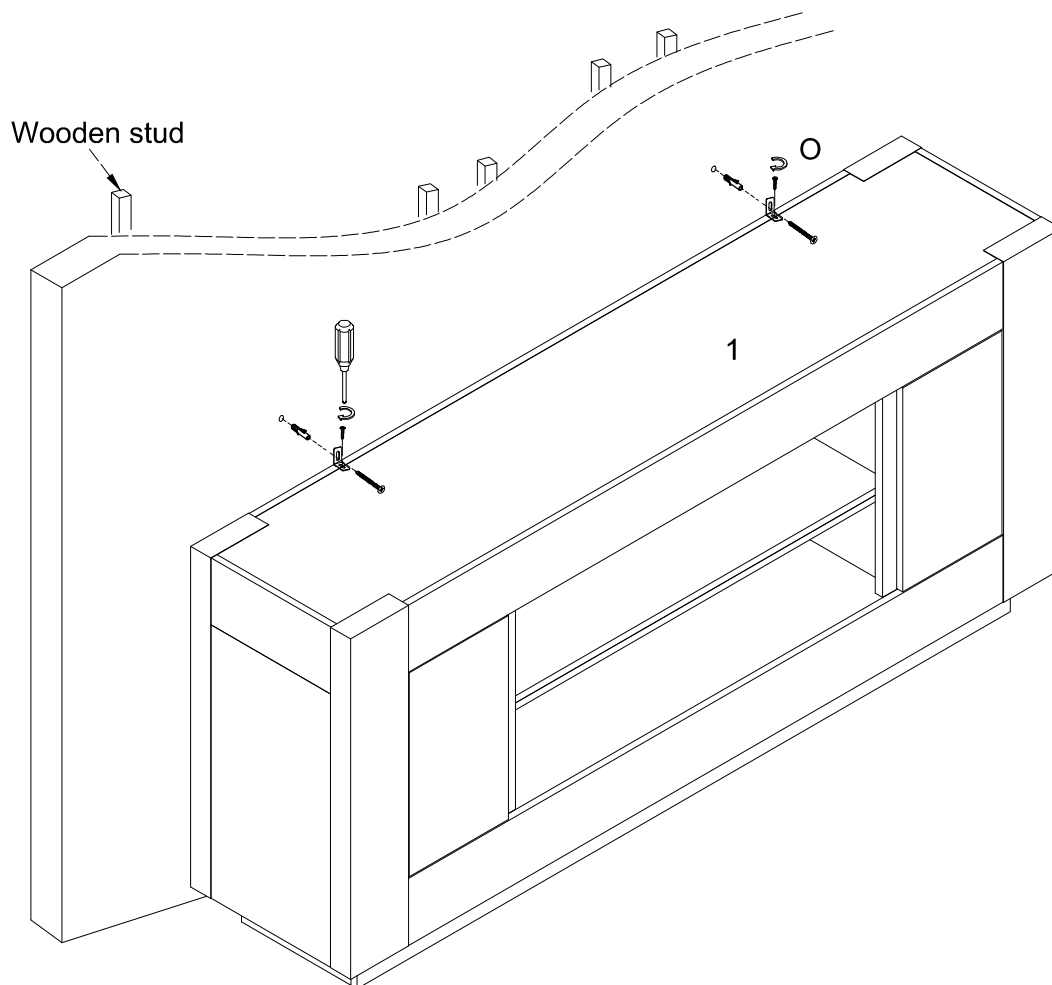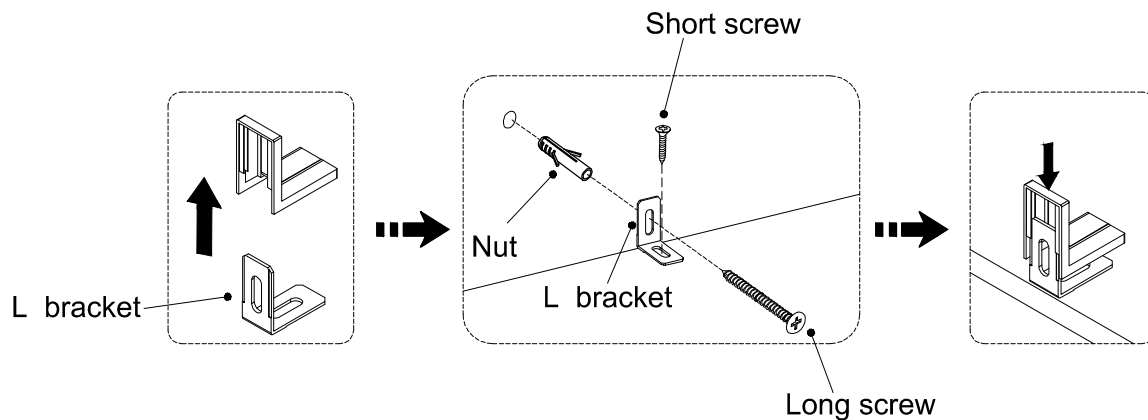

Step 37

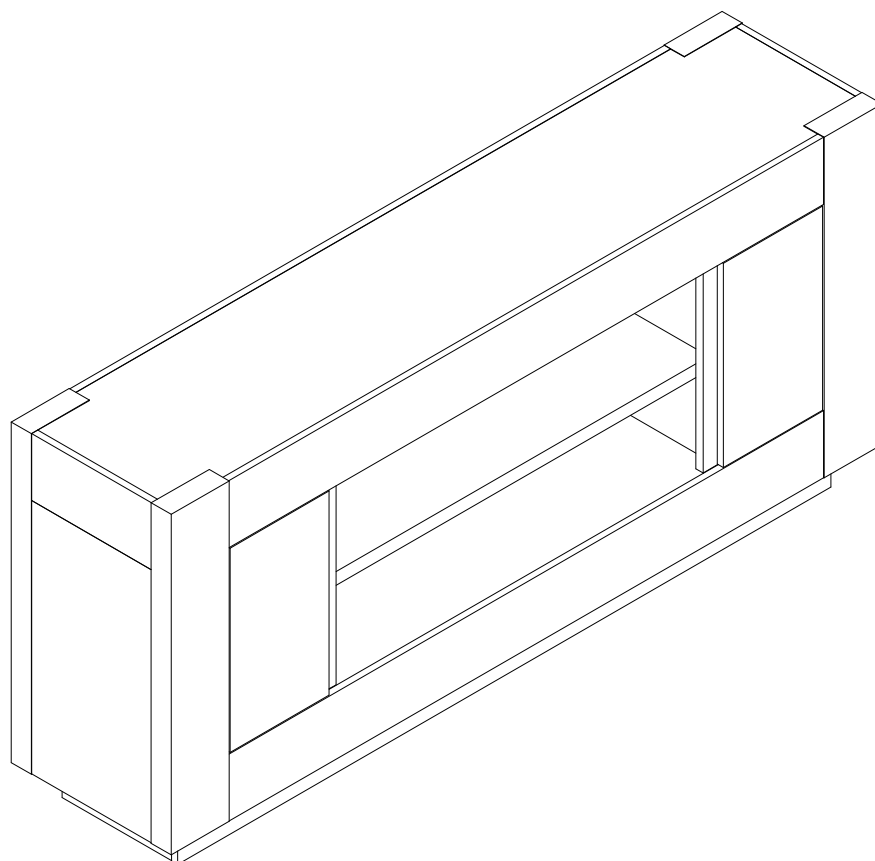

Final Assembly