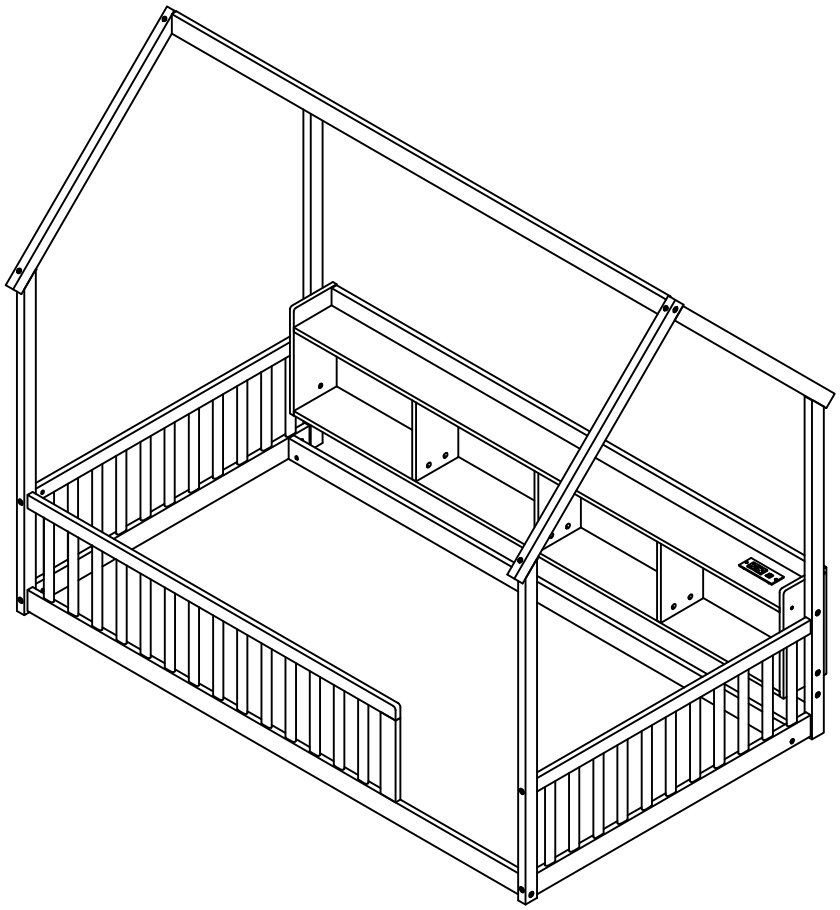
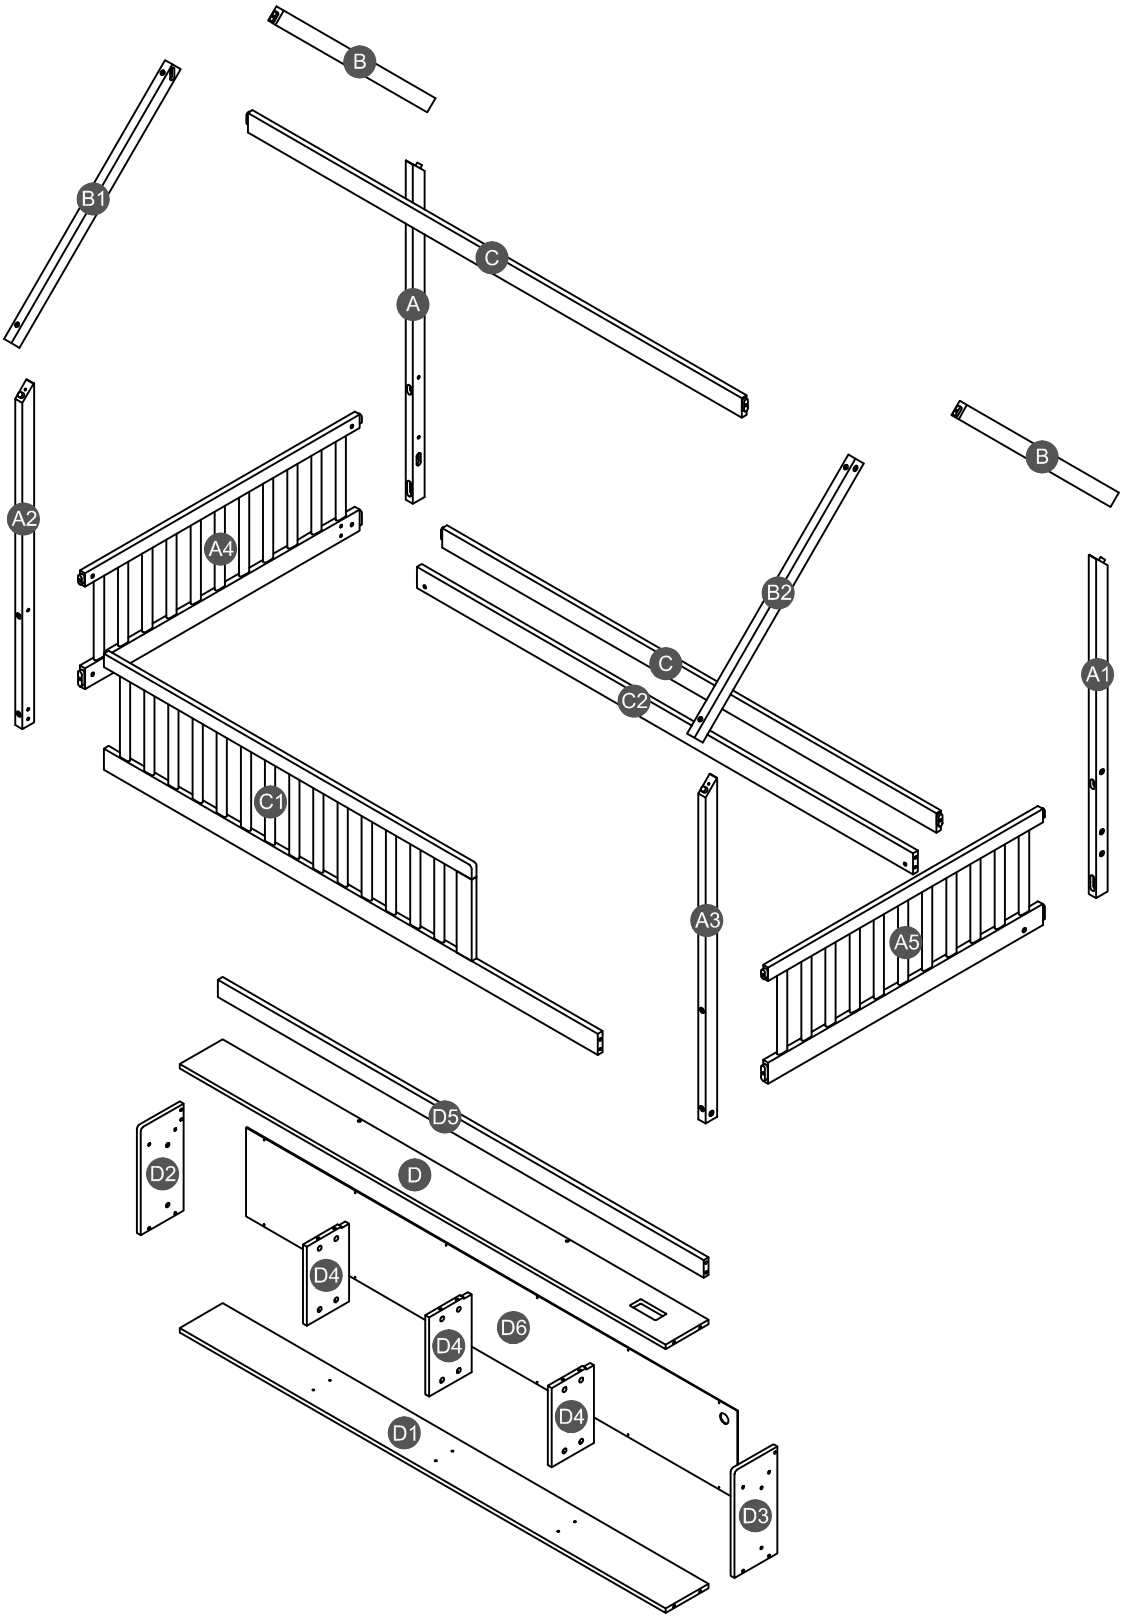
ASSEMBLY INSTRUCTIONS





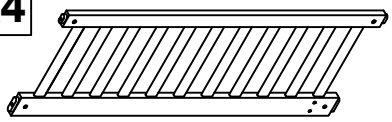
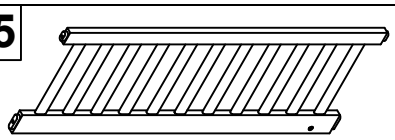












TWIN FLOOR HOUSE BED WITH STORAGE SHELVES







Detail View






Part List

A  Leg (Left back) - 1pc	**A1**  Leg (Right back) - 1pc	**A2**  Leg (Left front) - 1pc
A3  Leg (Right front) - 1pc	**A4**  Guard rail HB - 1pc	**A5**  Guard rail FB - 1pc
B  Upper bar (back) - 2pcs	**B1**  Upper bar (left front) - 1pc	**B2**  Upper bar (right front) - 1pc
C  Upper horizontal bar - 2pcs	**C1**  Guard rail (front) - 1pc	**C2**  Lower horizontal bar (back) - 1pc
D  Top panel - 1pc	**D1**  Bottom panel - 1pc	**D2**  Left side panel - 1pc
D3  Right side panel - 1pc	**D4**  Divider panel - 3pcs	**D5**  Upper horizontal bar - 1pc
D6  Back panel - 1pc		

Hardware List

1  Ø8*30mm	**2**  (Ø15)1/4"*80mm	**3**  (Ø12)1/4"*60mm
Wood dowel (6pcs)	Hex-Head bolts (17pcs)	Hex-Head bolts (10pcs)
4  (Ø12)1/4"*40mm	**5**  1/4"*15 (9.5mm)	**6**  (Ø12)1/4"*65mm
Hex-Head bolts (4pcs)	Horizontal-Hole bolts(27pcs)	Hex-Head Screws (6pcs)
7  (Ø12)1/4"*40mm	**8**  21*21*17*1.7mm	**9**  Ø3.5*15mm
Hex-Head Screws (2pcs)	Metal bracket (1pc)	Wood screws (4pcs)
10  Ø3*12mm	**11**  Ø7"*35mm	**12**  Ø14*9mm
Wood screws (13pcs)	Cam lock (12pcs)	Cam lock (12pcs)
13  1500*125*47*43mm	**14** L1900mm	**15**  L2000mm
Power outlet	Led light (1pc)	Adapter and wire strip (1pc)
16  22*10*6mm	**17**  (1/4")4.5*58mm	
Clamp plastic (1pc)	Allen key	

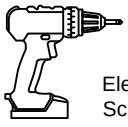
OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

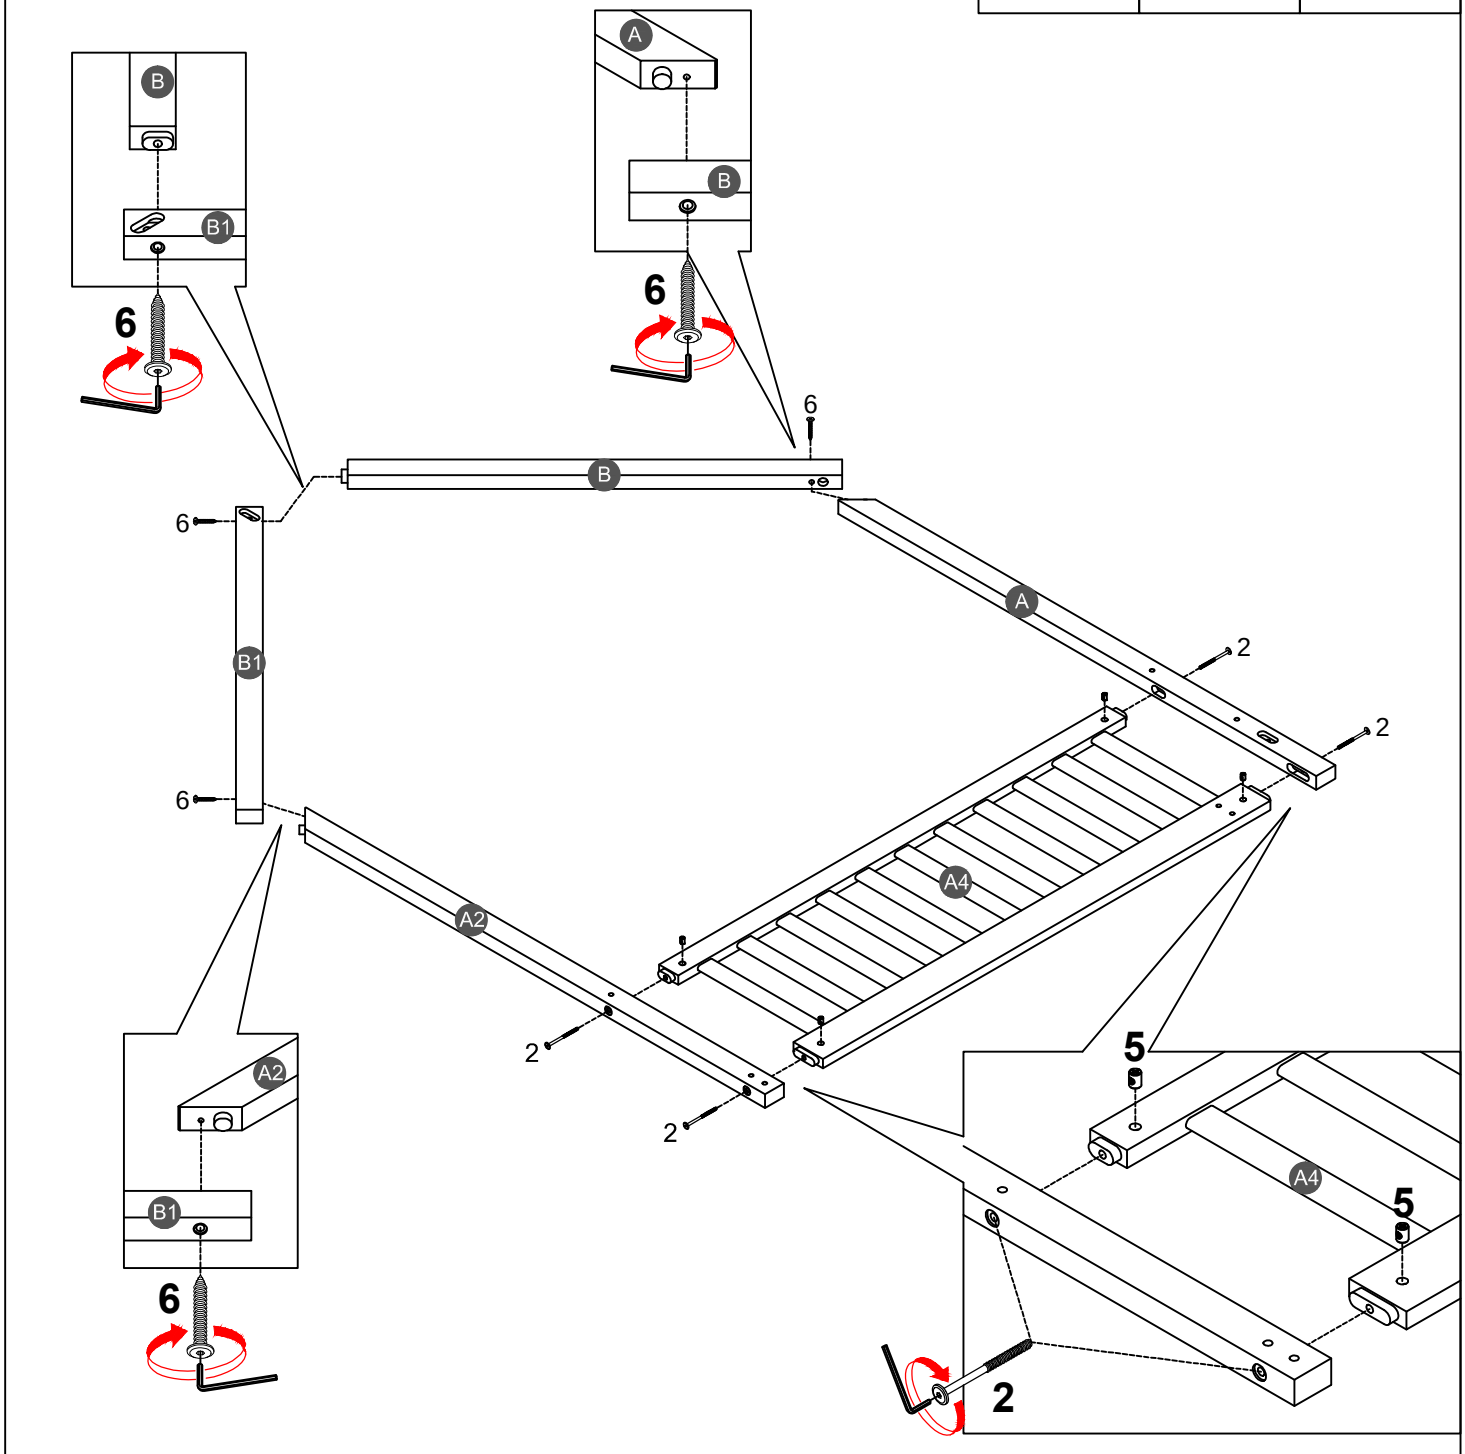STEP 1:

2	5	6
4PCS	4PCS	3PCS

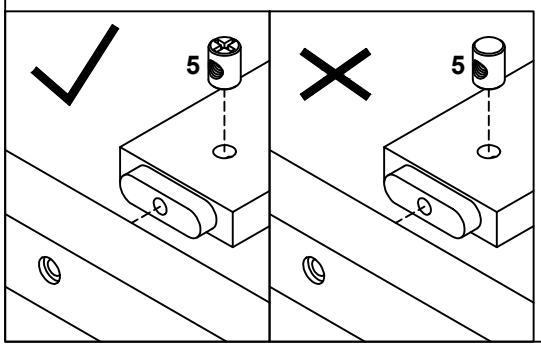




EN: Note: The side of part #5 with the "x" mark needs to be facing up, otherwise it cannot be tightened.

STEP 2:


2	5	6
4PCS	4PCS	3PCS

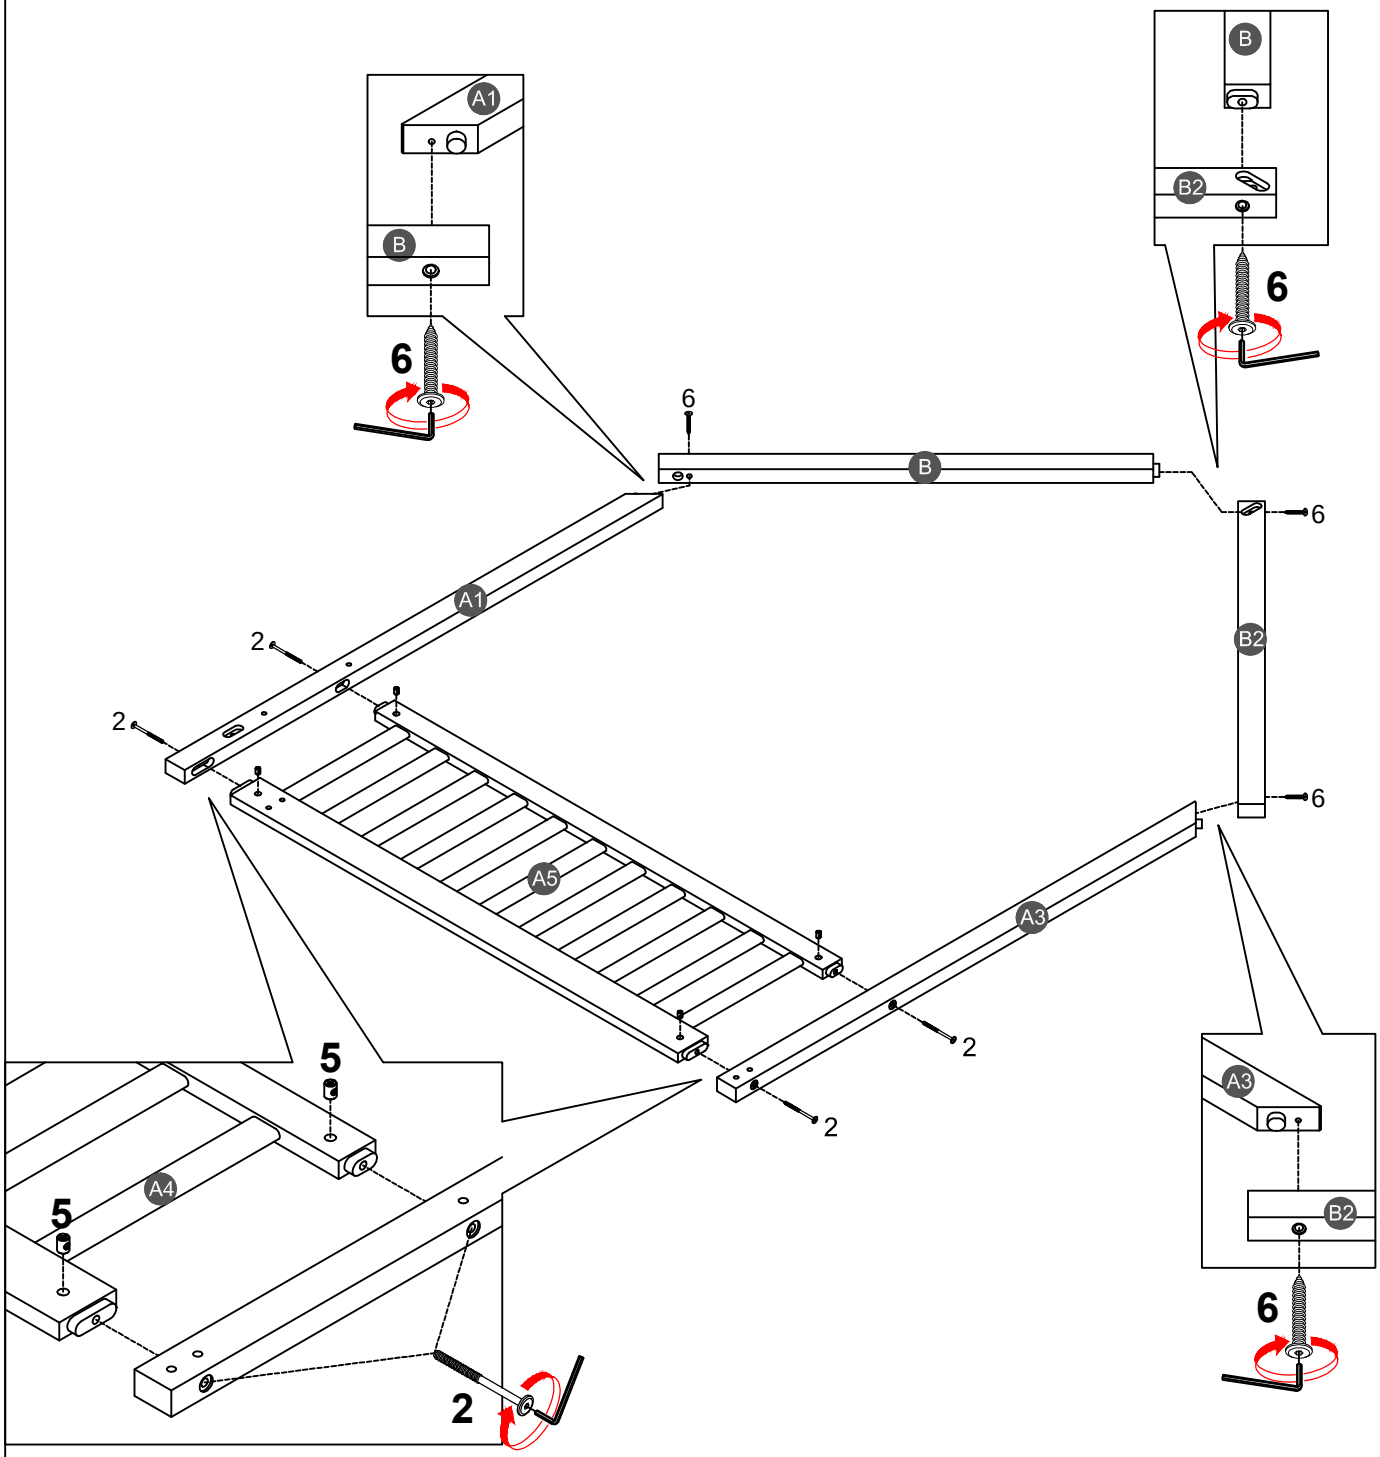

STEP 3:


1	2	5
4PCS	9PCS	9PCS

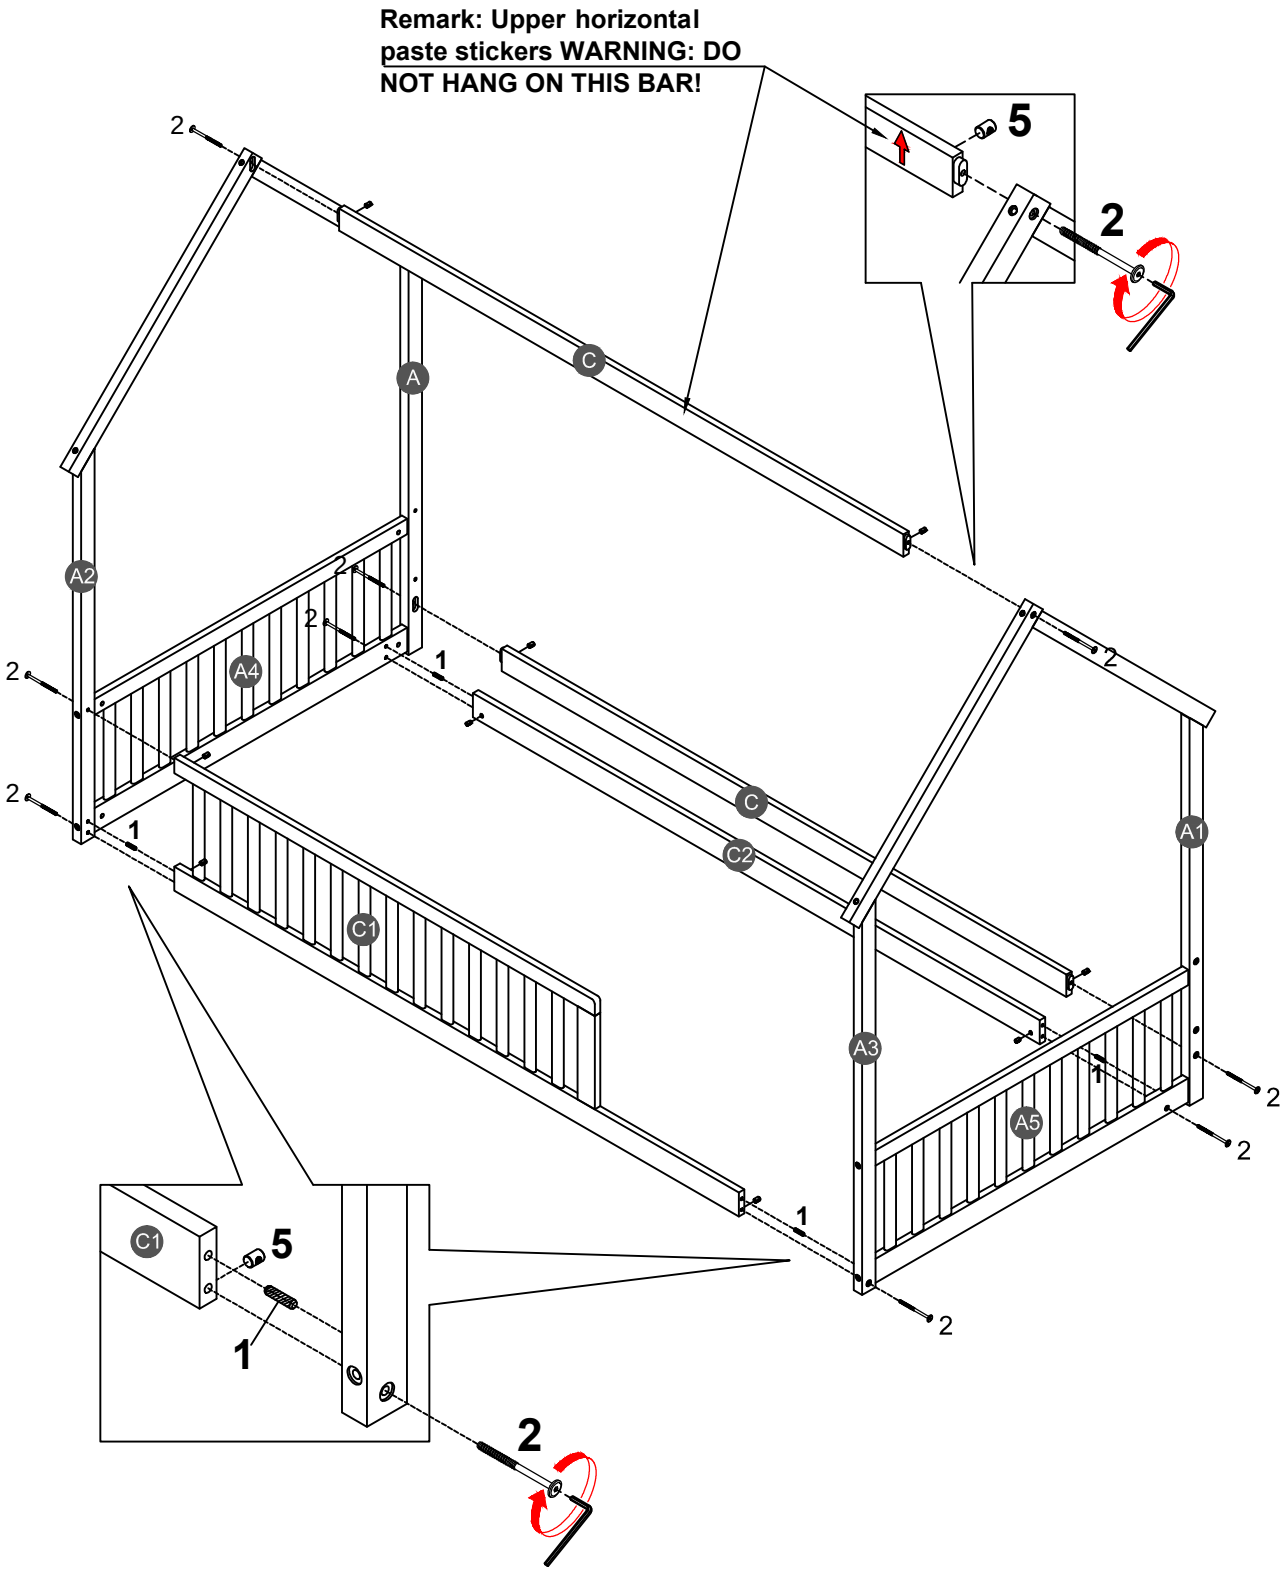Note: Not fully tighten until all bolts are started.





STEP 4:


8	9
	
1PC	2PCS

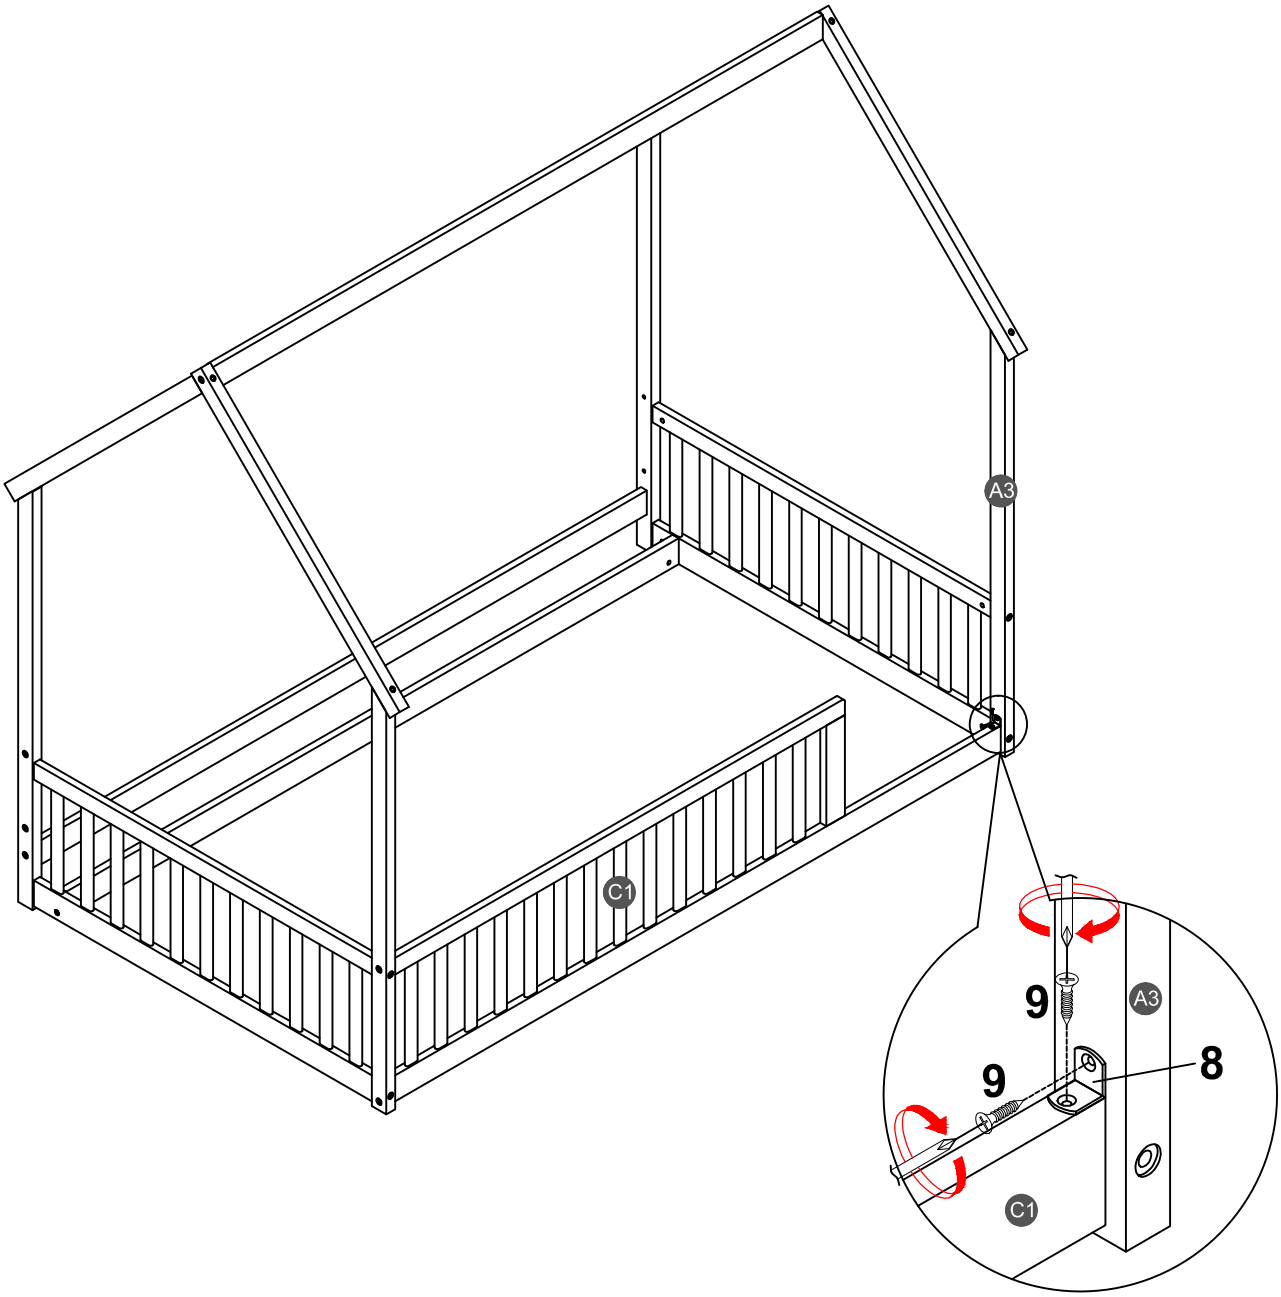

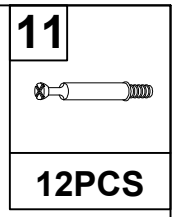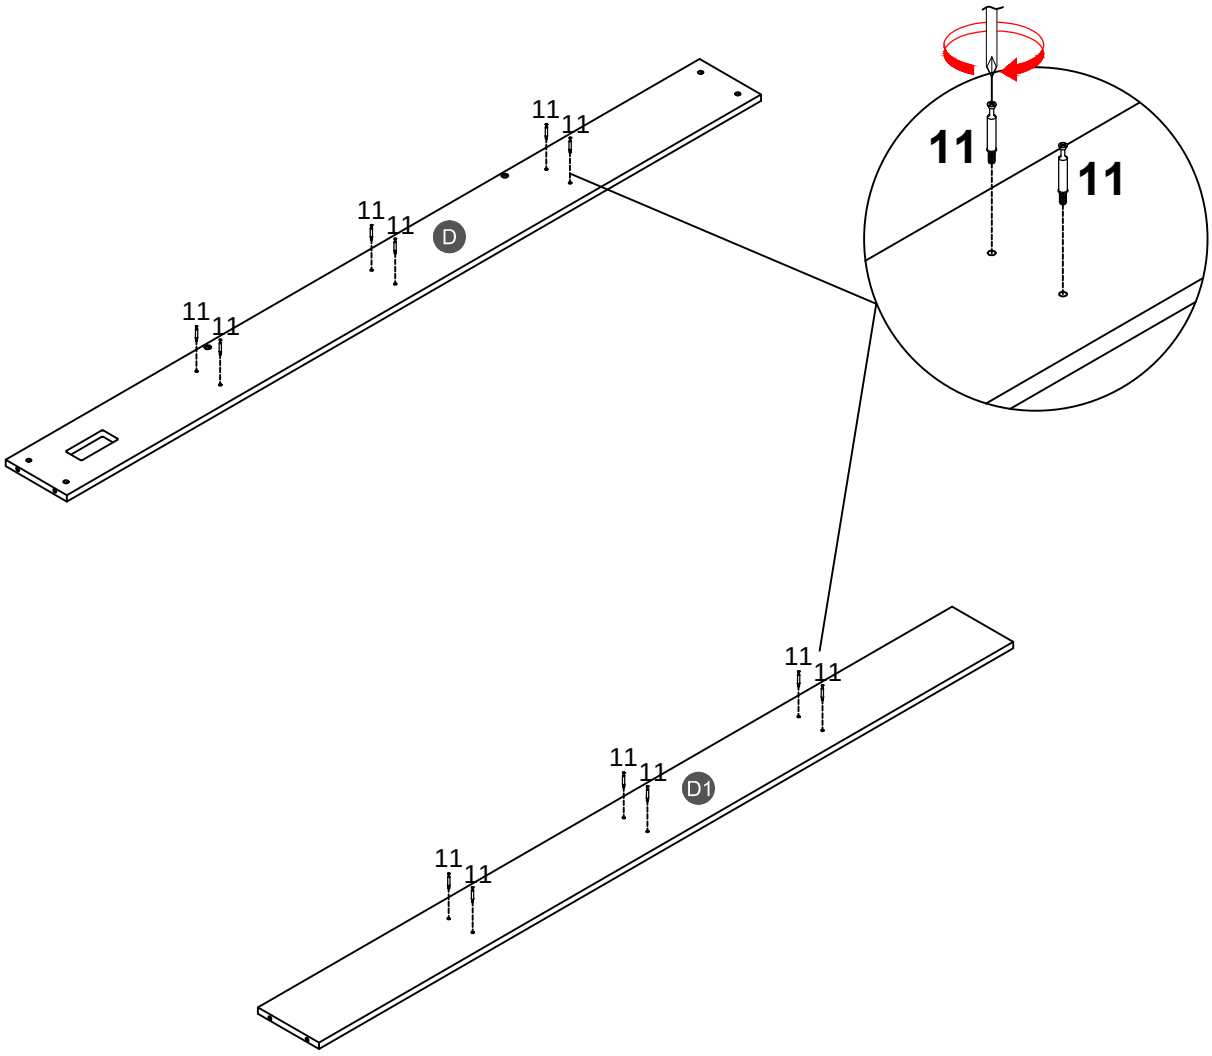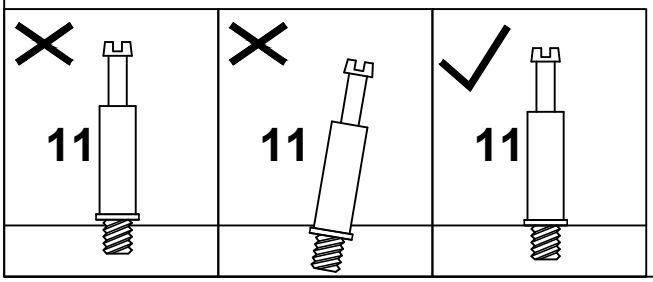STEP 5:









STEP 6:



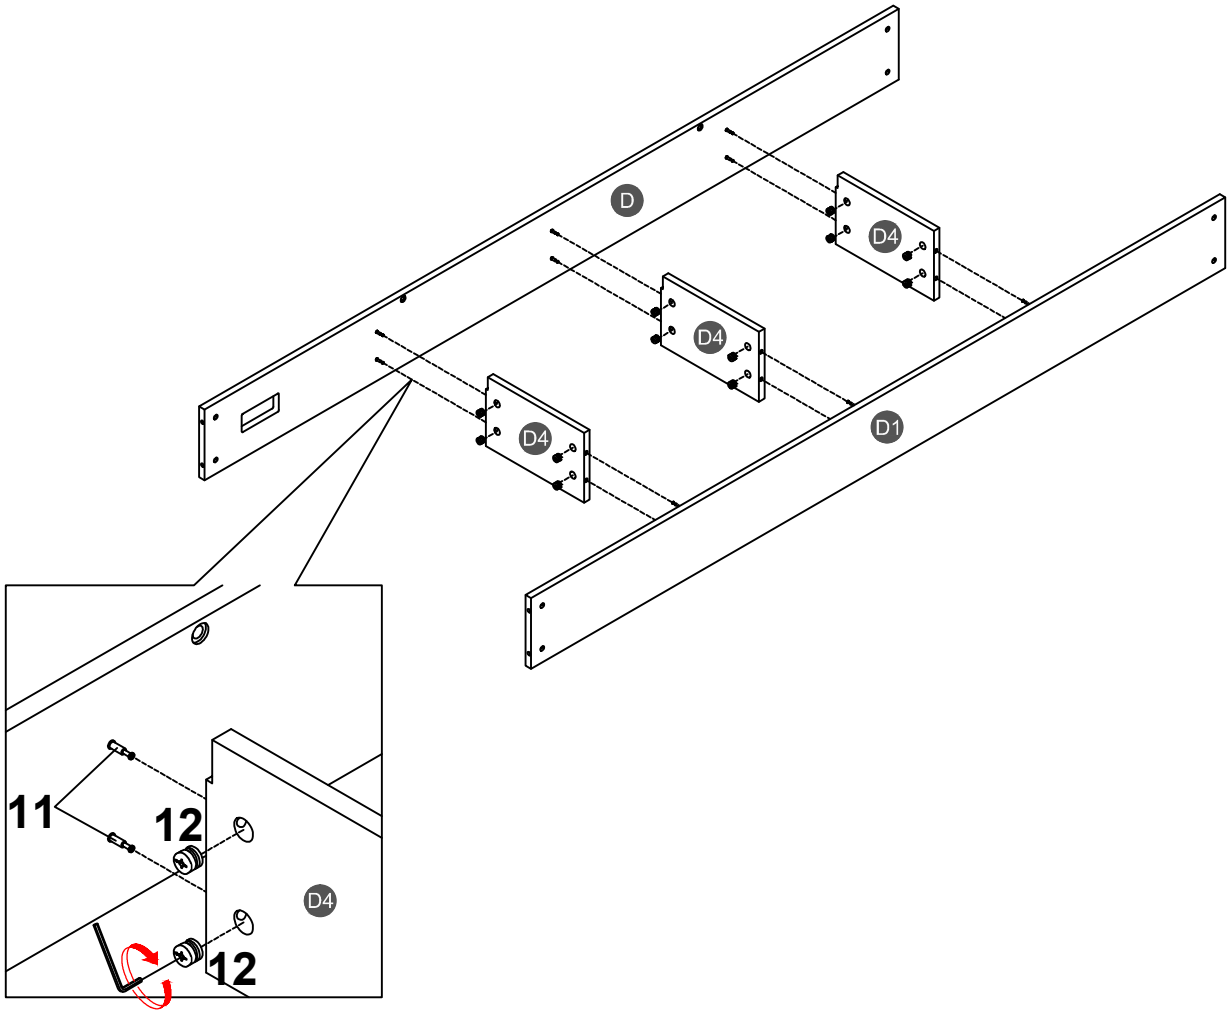
12PCS



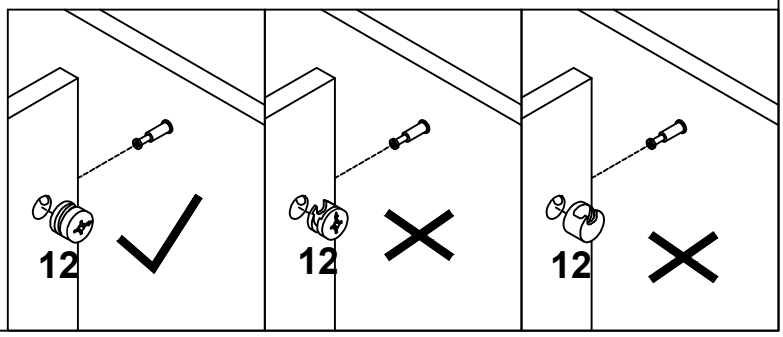Note: Place hardware #12 with the "X" face outward,
and make sure that the arrowhead is upward. Then, place hardware #12 into the hole of hardware #11 and tighten it clockwise with a hand screwdriver.
(Please do NOT use an electric screwdriver.)



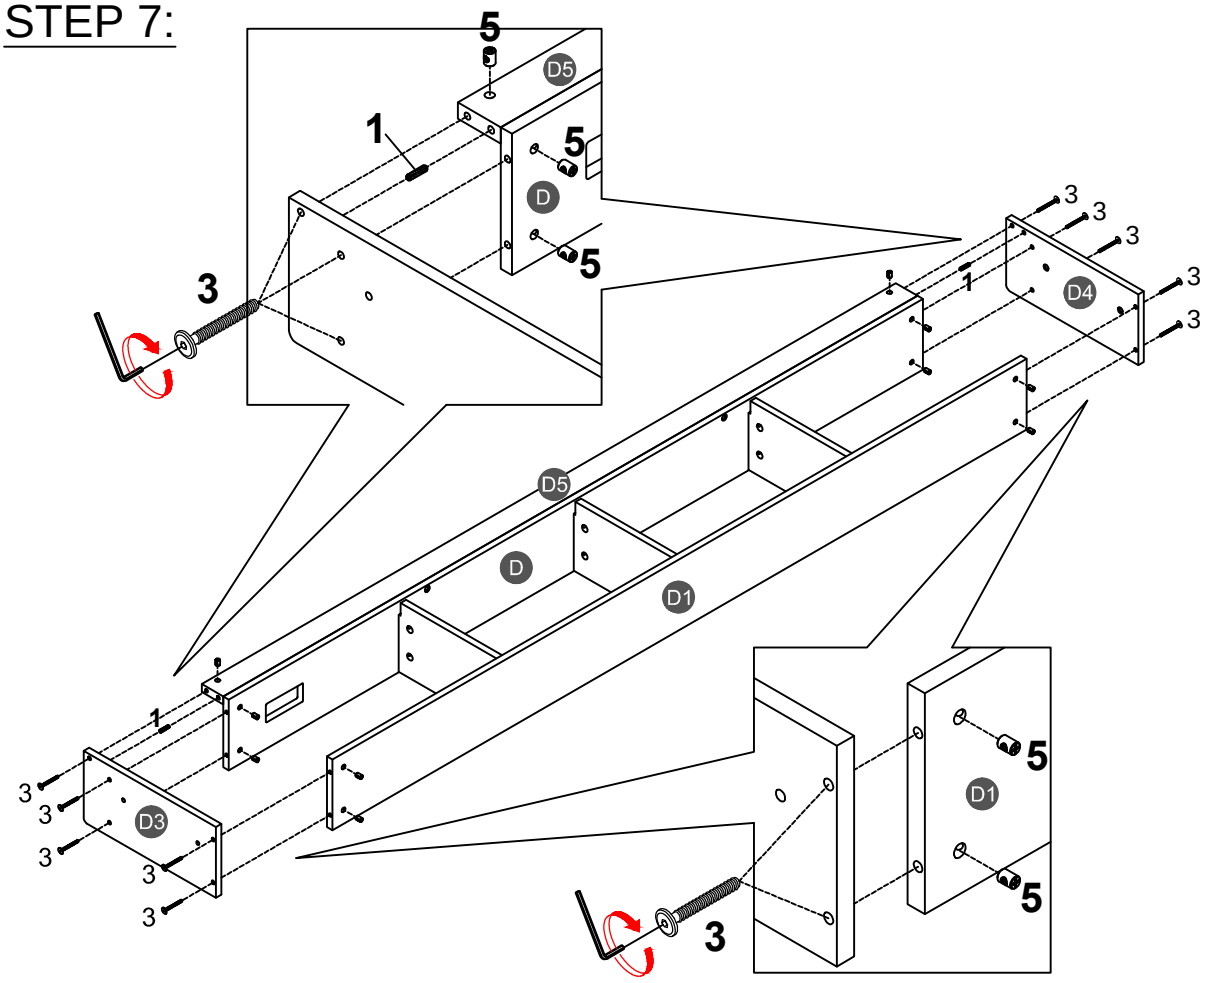
STEP 7:



1	2PCS
3	10PCS
5	10PCS


STEP 8:

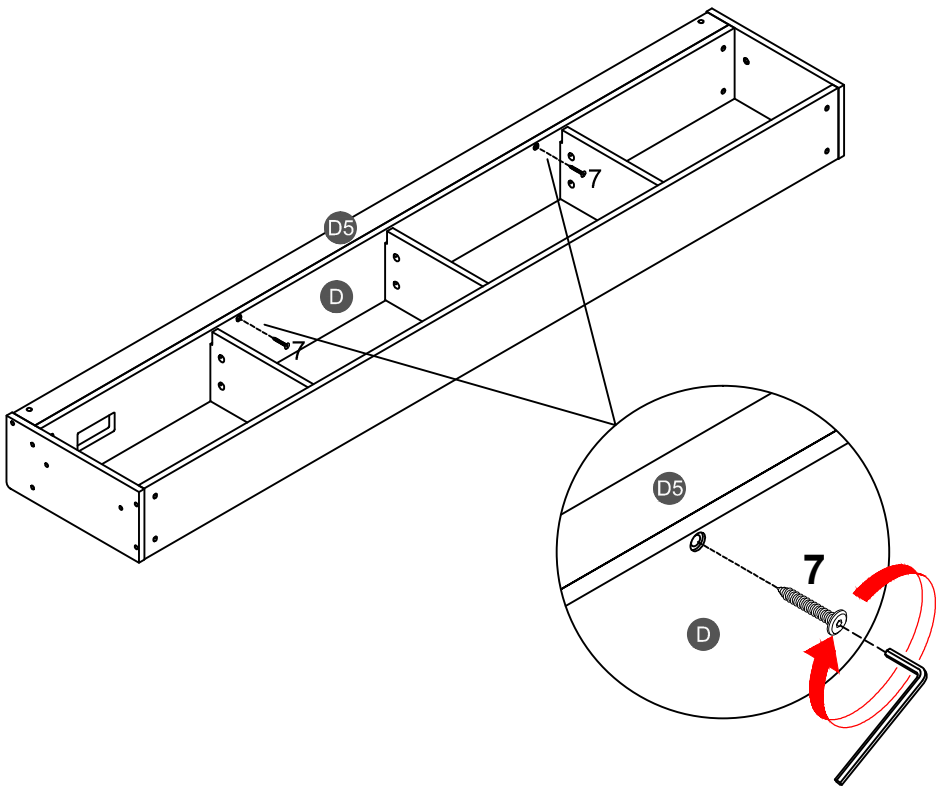ÉTAPE



7	2PCS

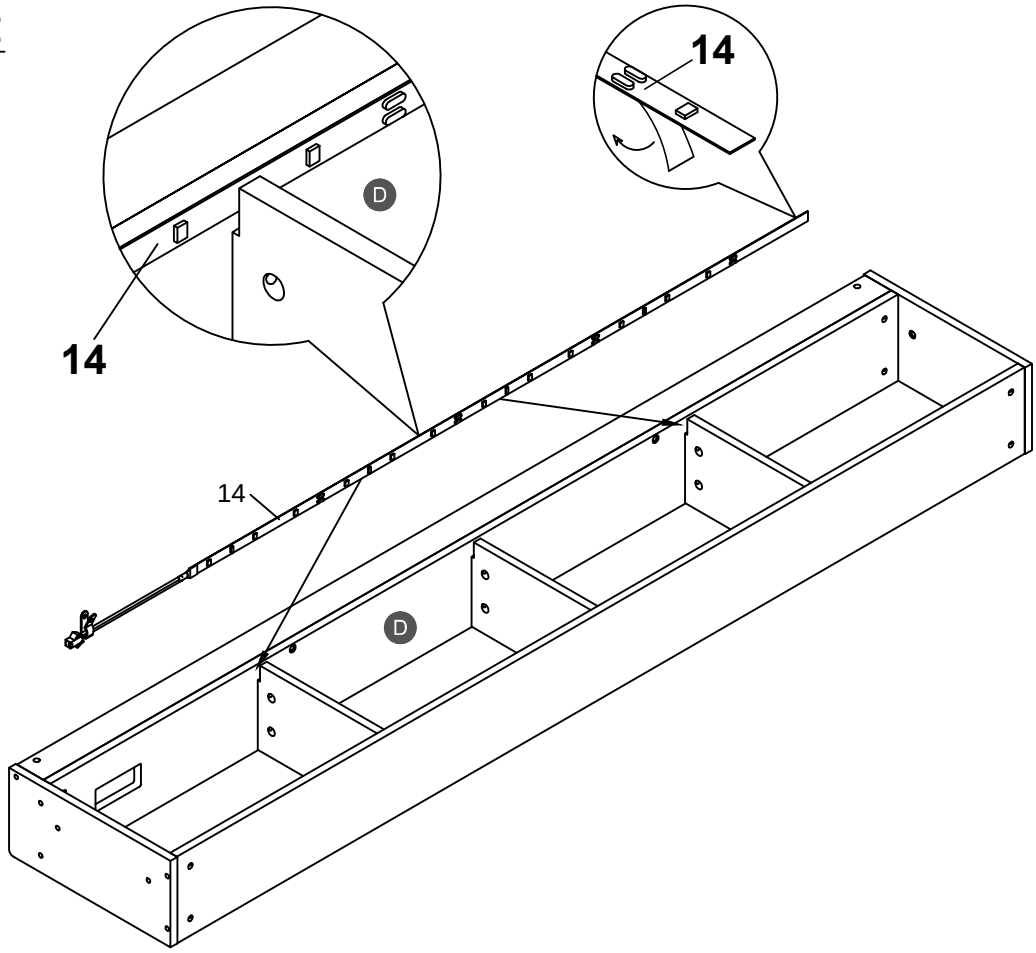STEP 9:




14

1PC

STEP 10:

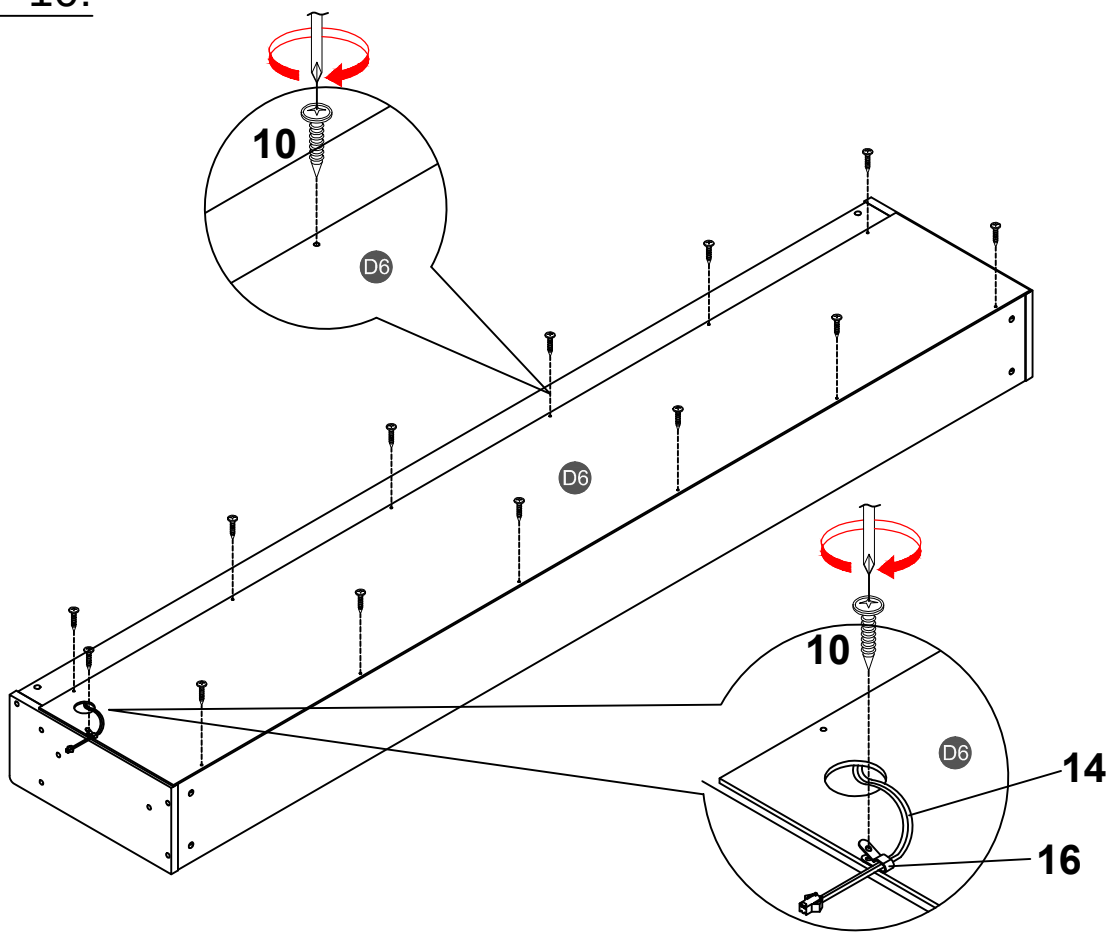ÉTAPE




10


13PCS

16

1PC

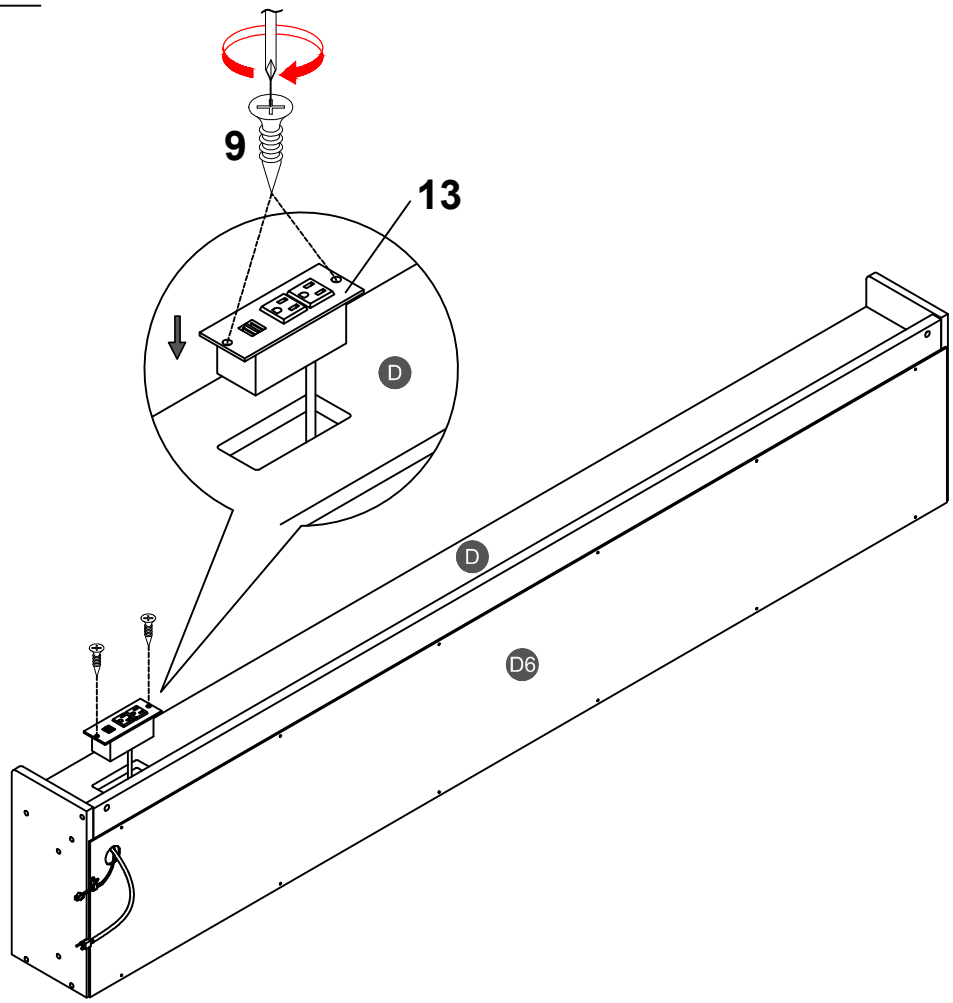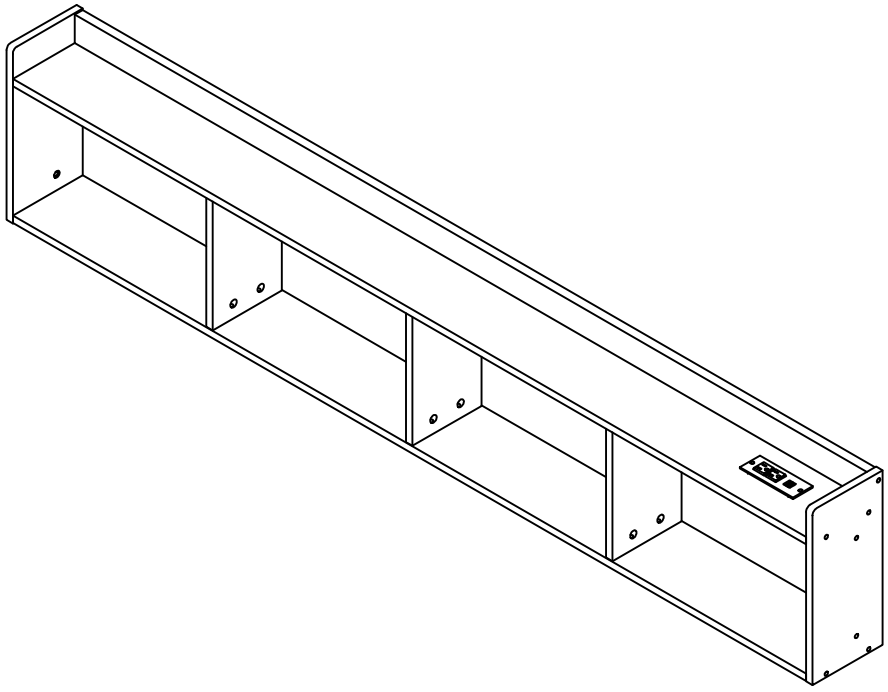STEP 11:





9	
2PCS	
13	
1PC	

STEP 12:

4	15
4PCS	1PC

