




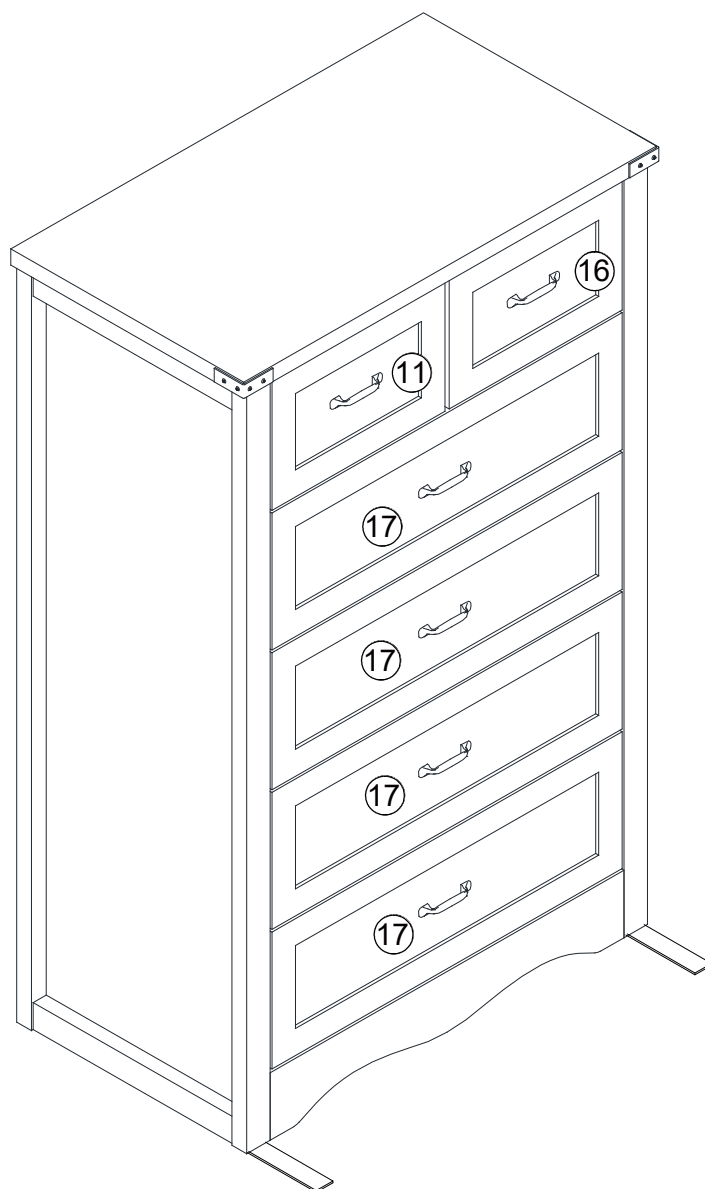


Please note: Items cannot be returned once assembled


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

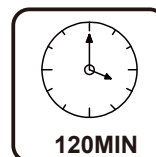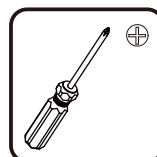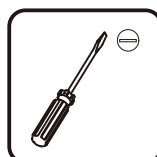


120MIN

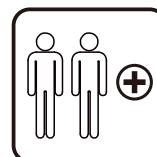


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

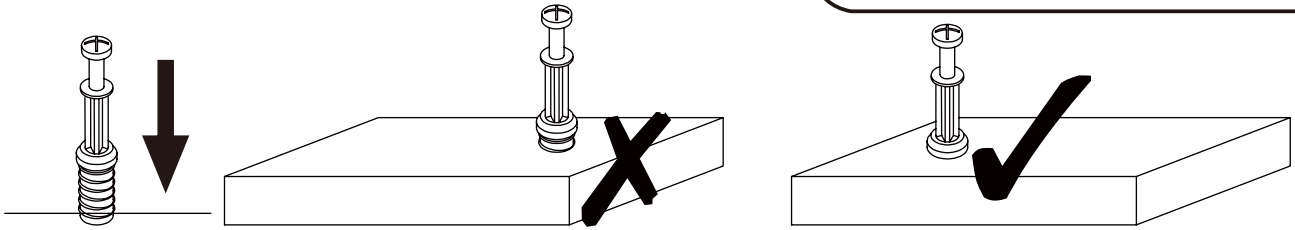


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

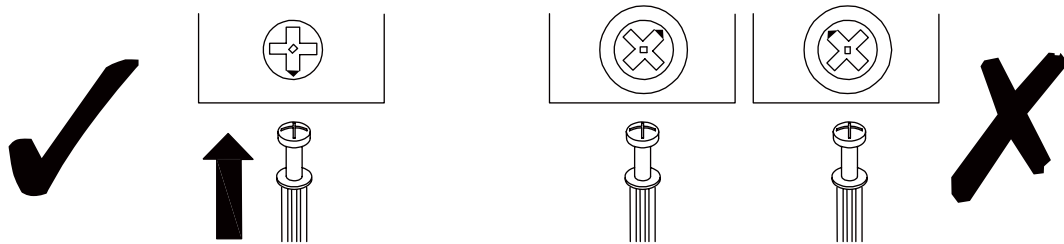











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










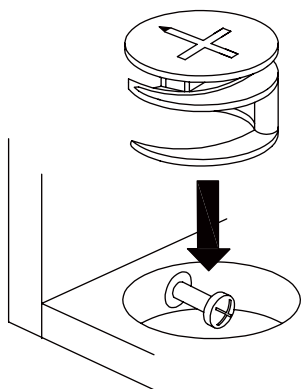



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

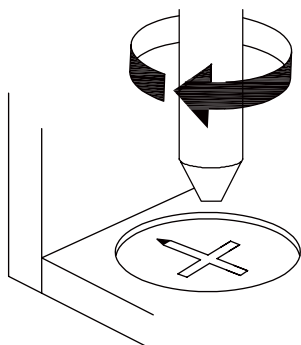




EN_Turn cam lock clockwise to tighten.

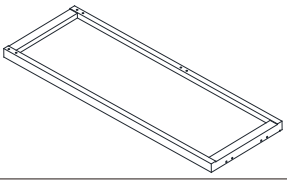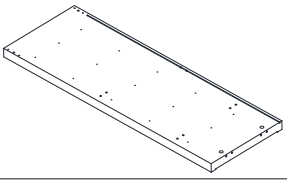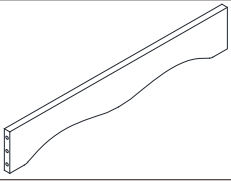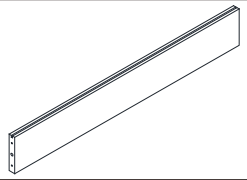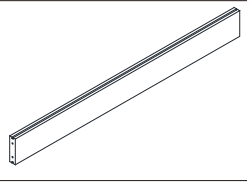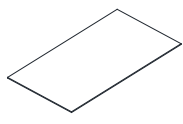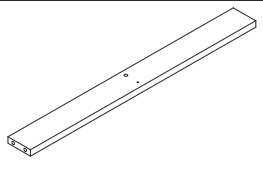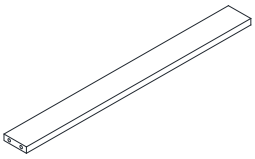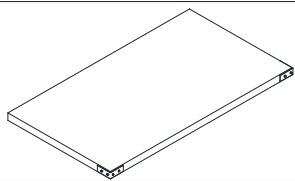NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x4	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	

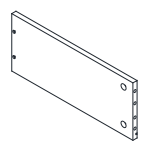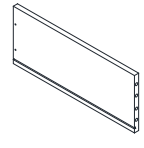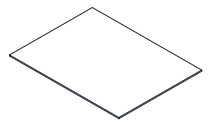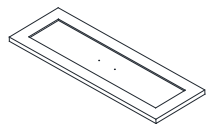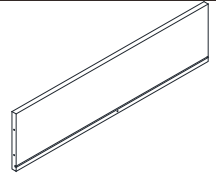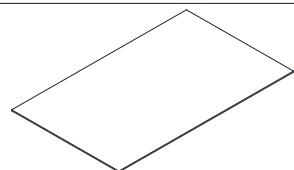NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x6	
⑬		x6	
⑭		x2	
⑮		x2	
⑯		x1	
⑰		x4	
⑱		x4	
⑲		x4	
⑳		x4	
㉑		x2	

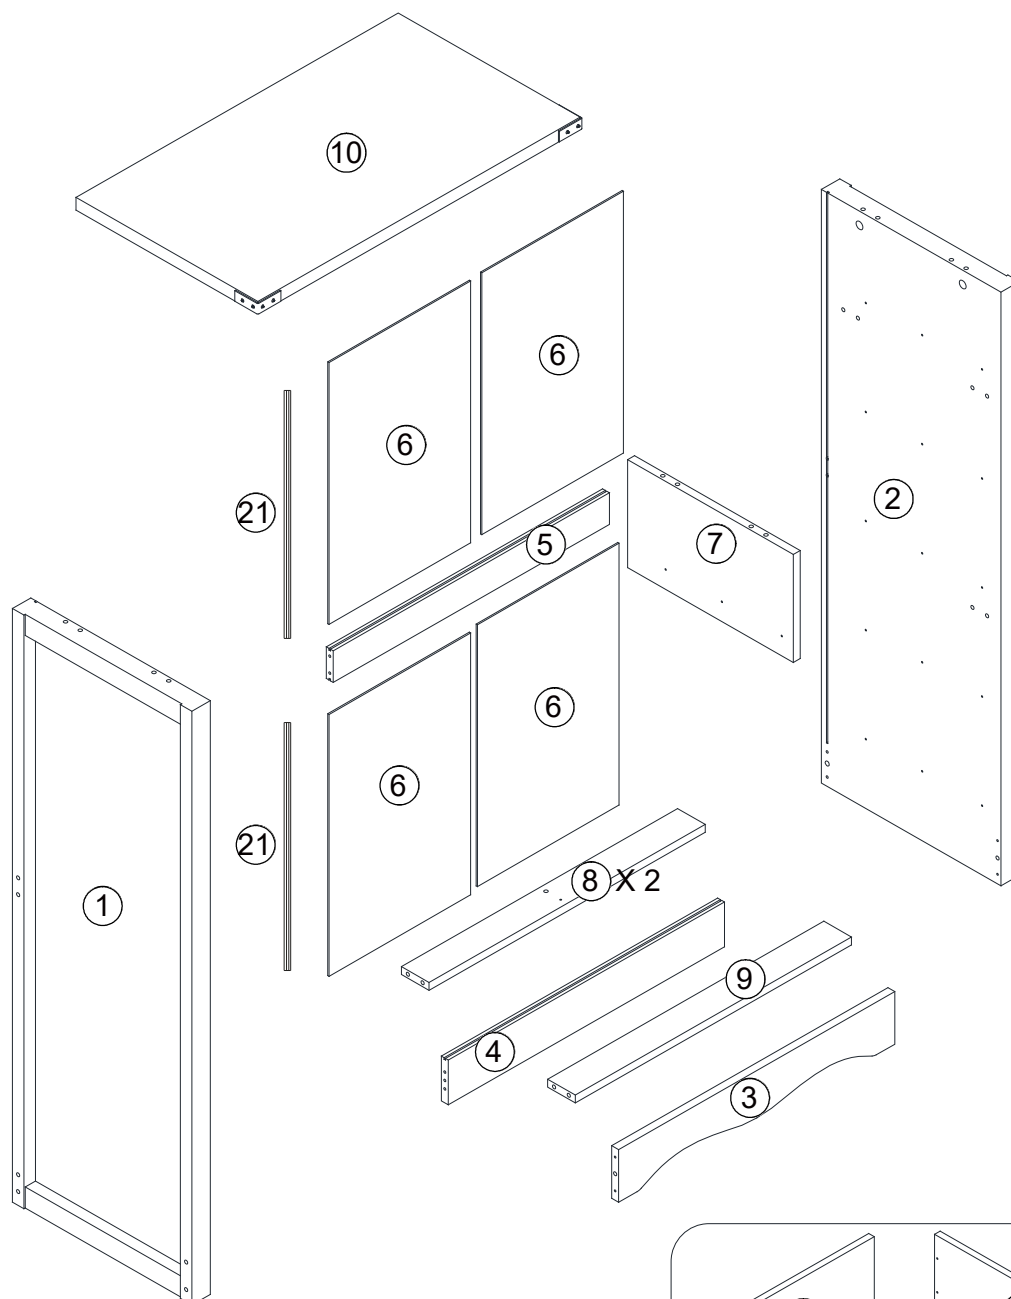


Hardware Kit

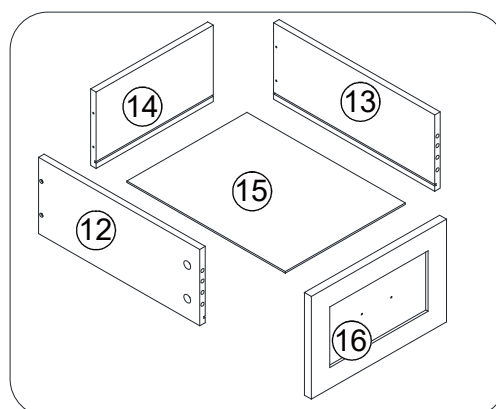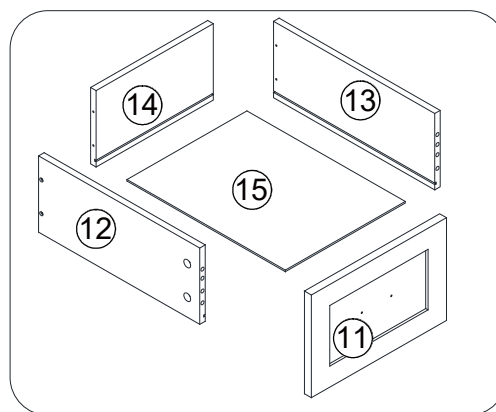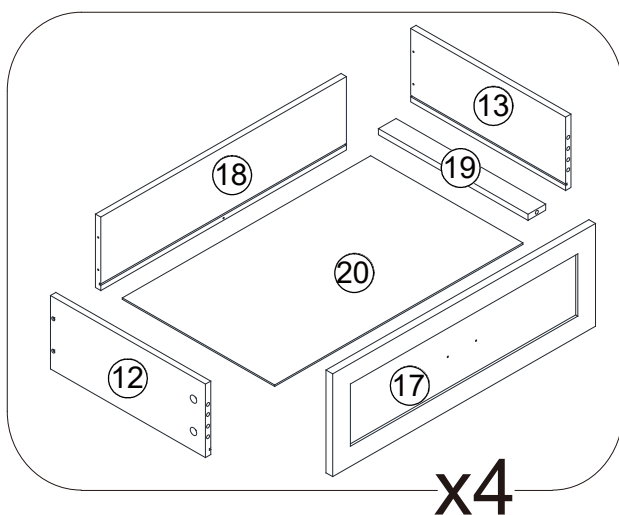


A x40 Ø6x35mm +2(spare)	B x40 Ø15x10mm +2(spare)	C x42 Ø6x30mm	D x32 Ø4x35mm +2(spare)	E x72 Ø3.5x12mm +3(spare)	F x6
G x8 +1(spare)	H x12 Ø5x50mm	I x12	J x2 Ø4x14mm	K x2	L x2 Ø6x30mm
CL x6 L330mm	CR x6 L330mm	DL x6 L330mm	DR x6 L330mm	M x2	N x4

E x30	CL x5	CR x5
--------------	--------------	--------------


01

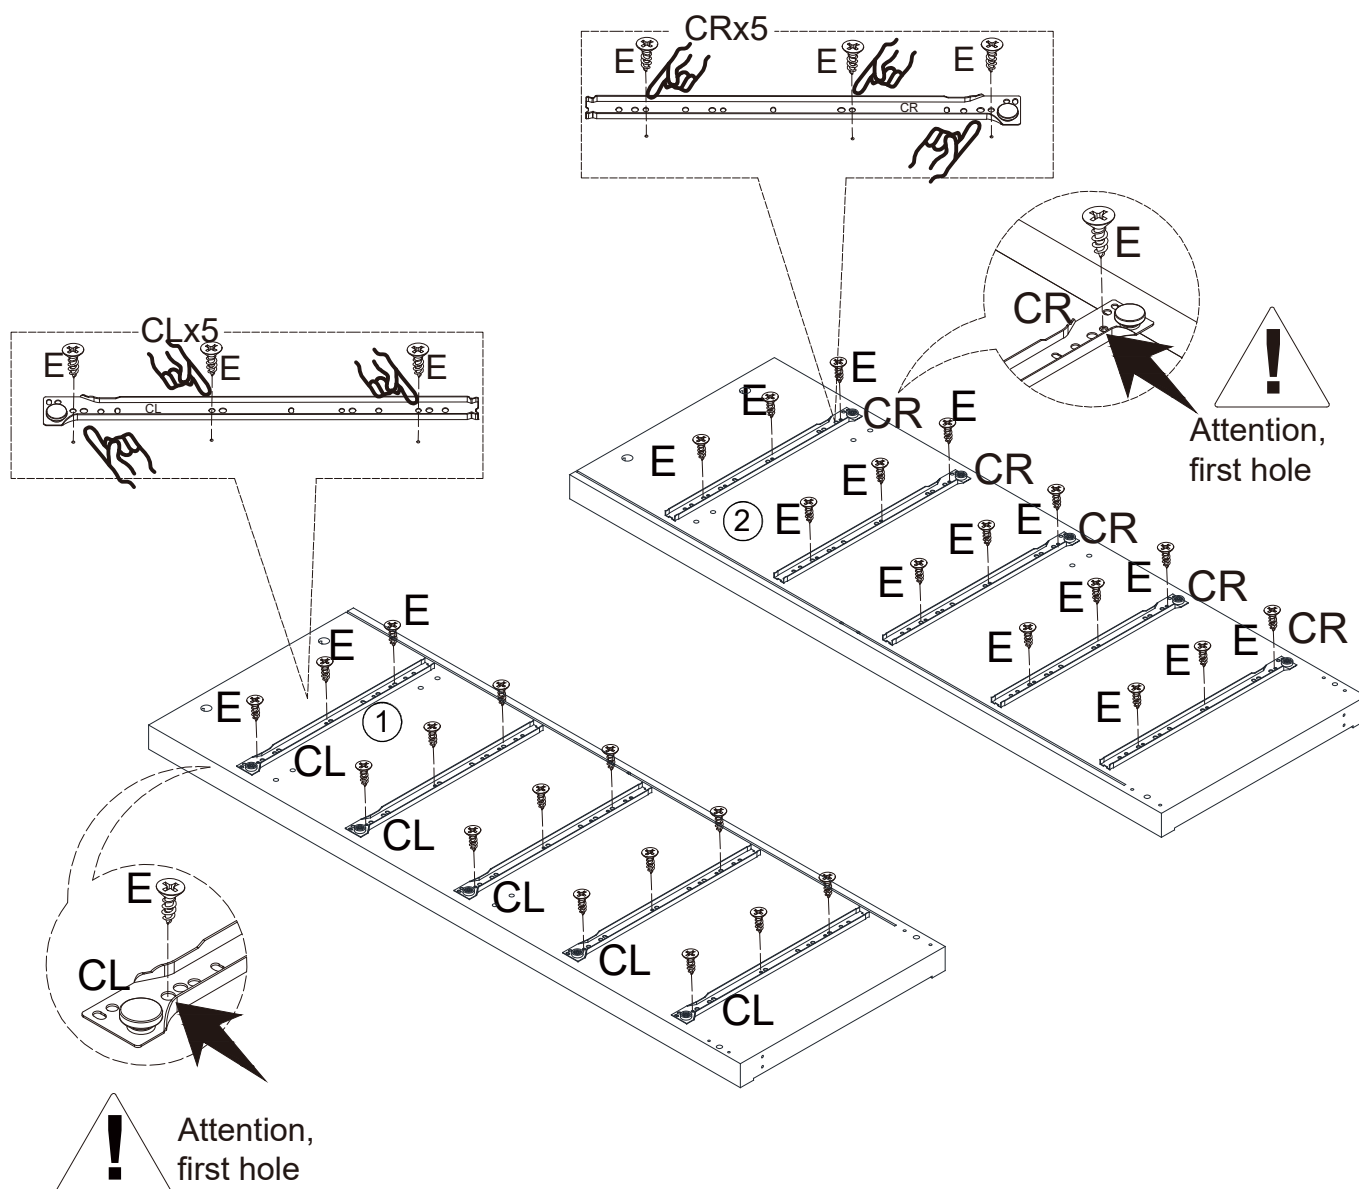


A x6

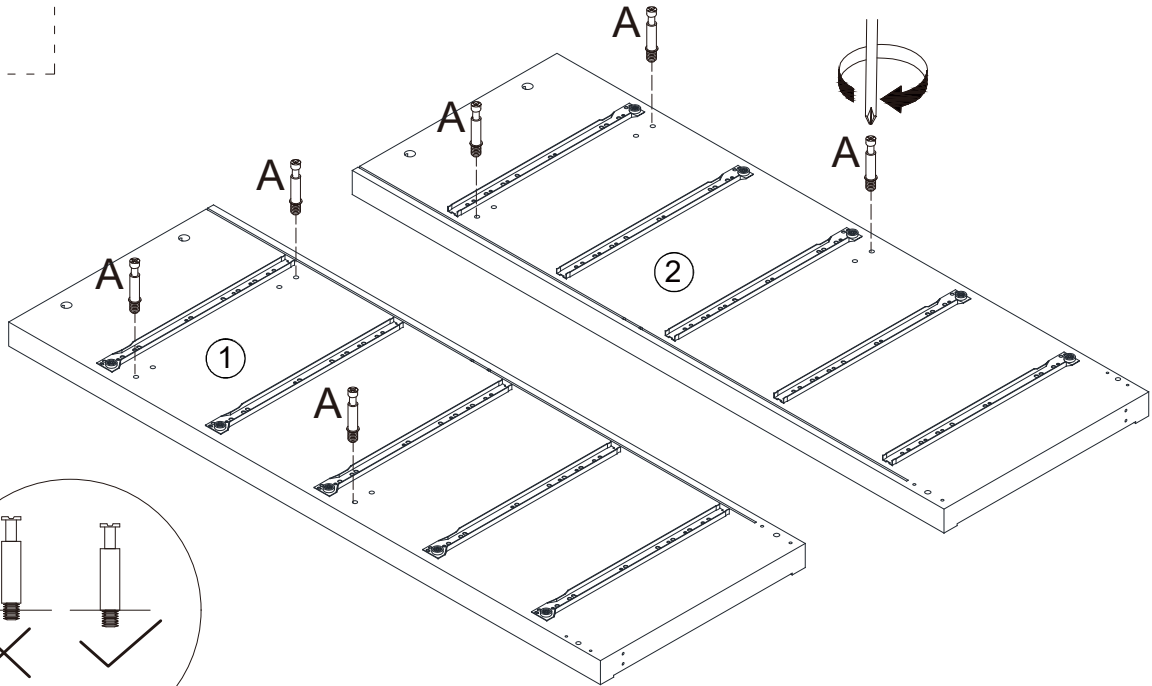


1

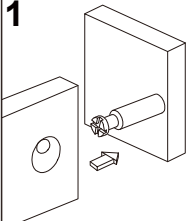

2

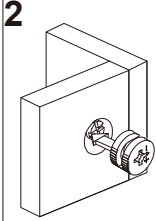



3




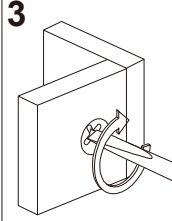


C x2




H x6

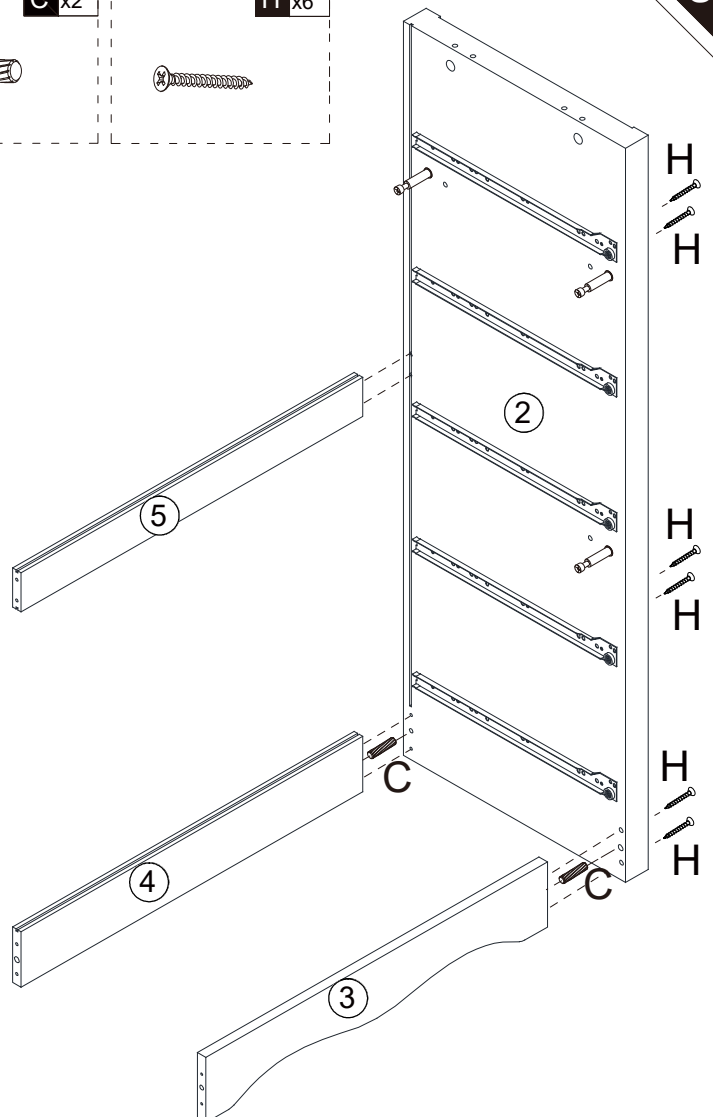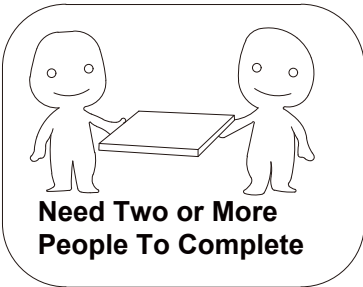

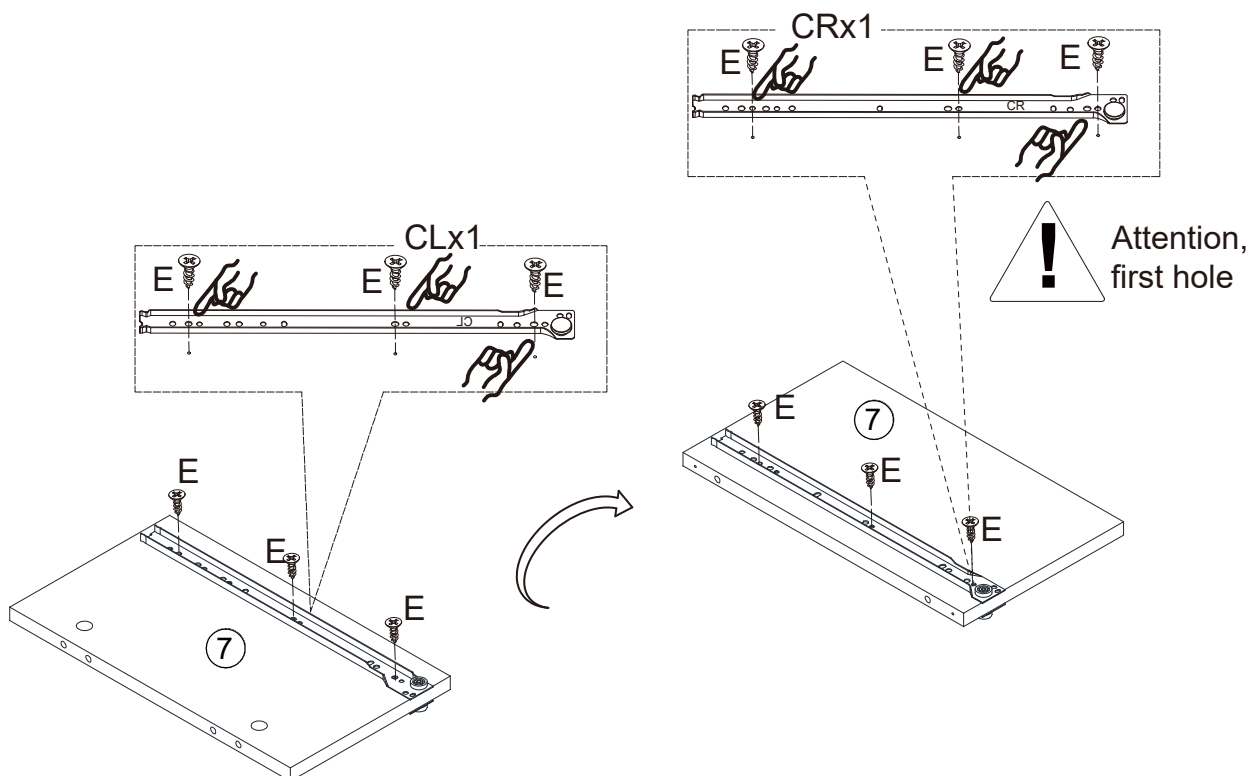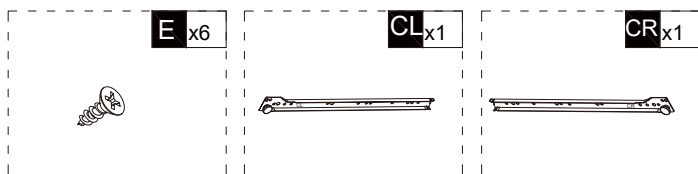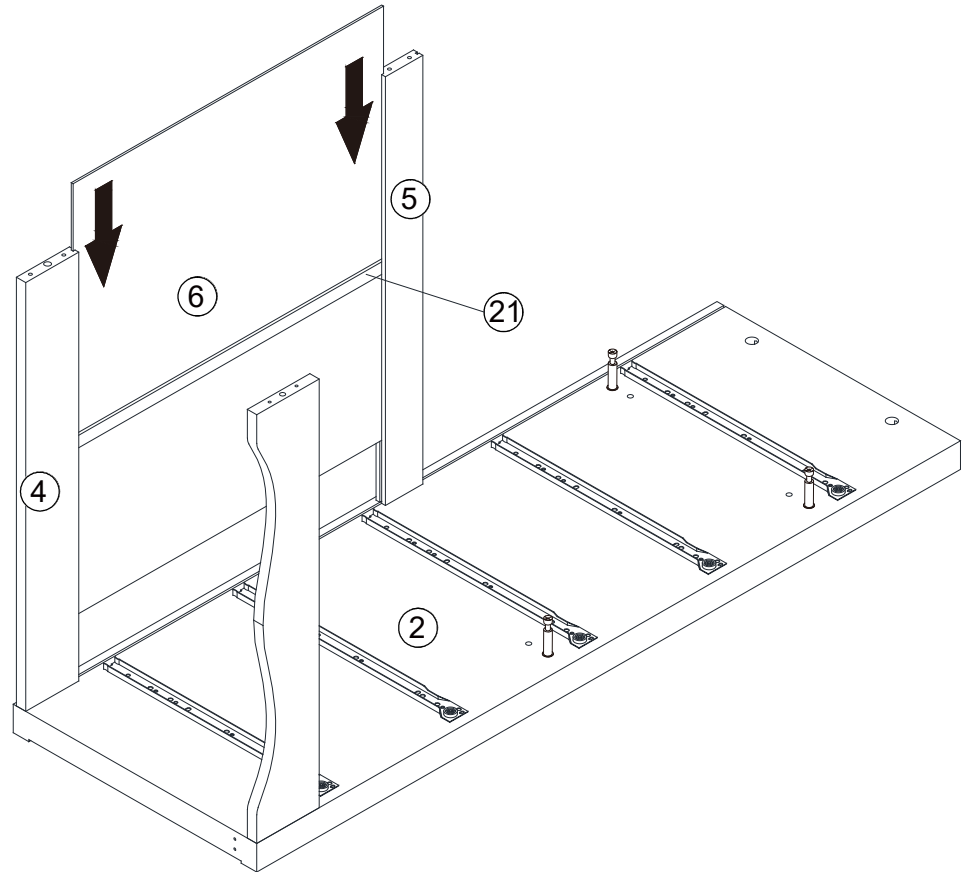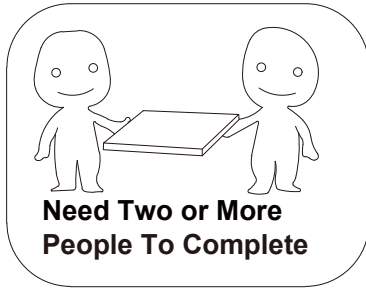

D x2




C x2


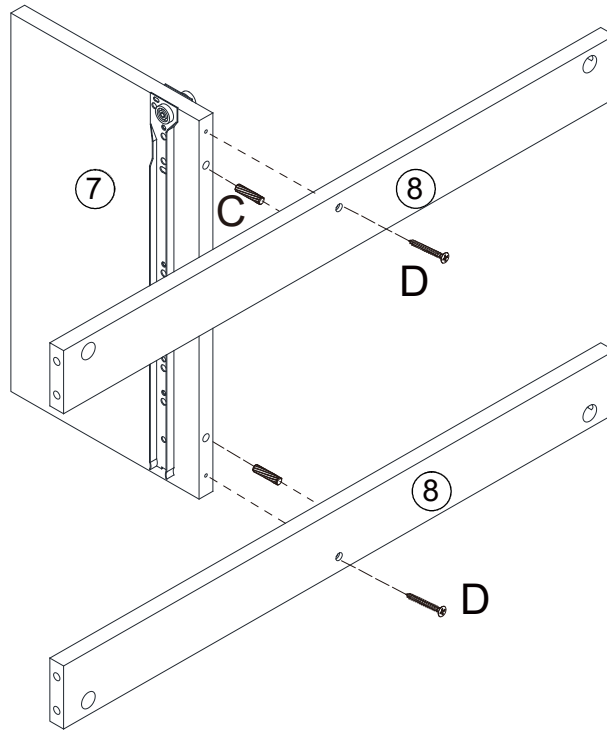


B x6



C x8

H x6

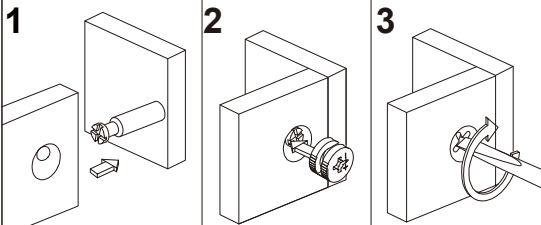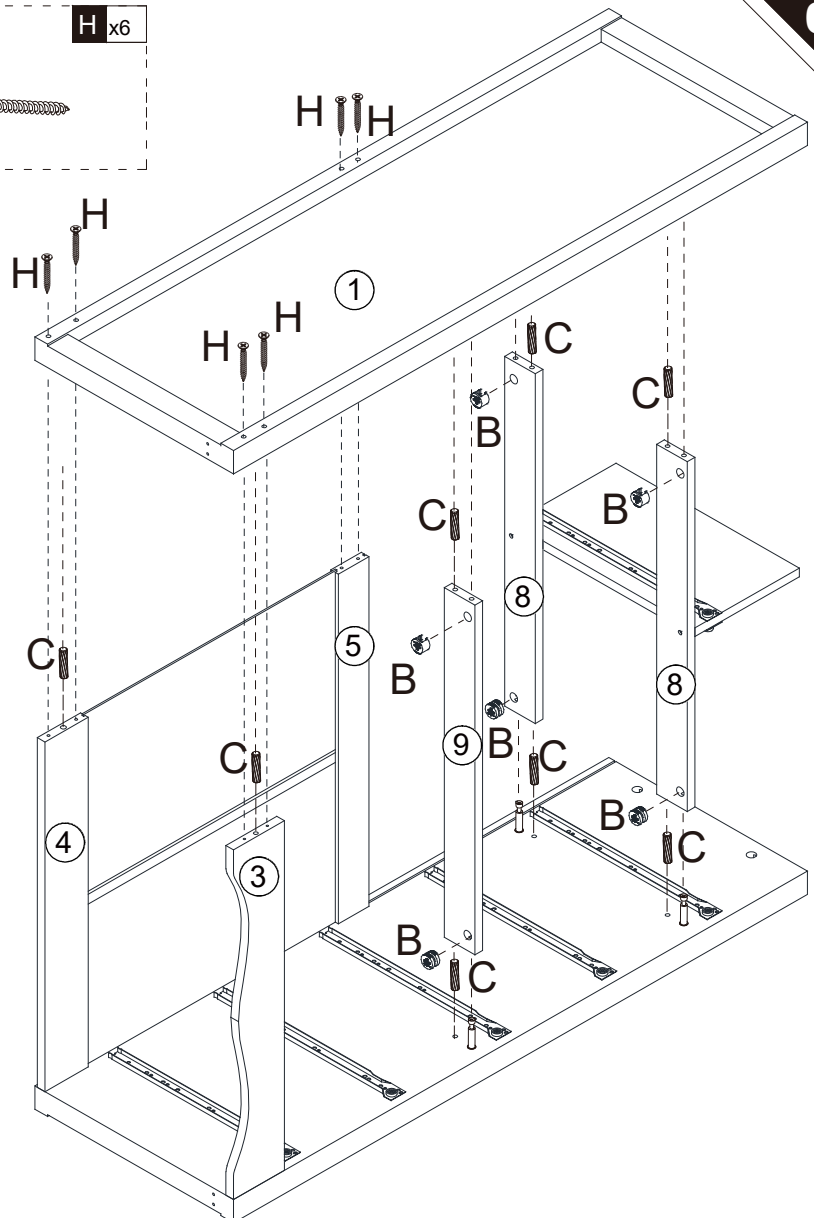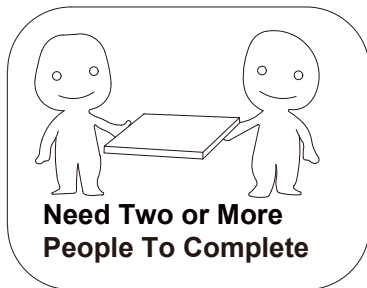

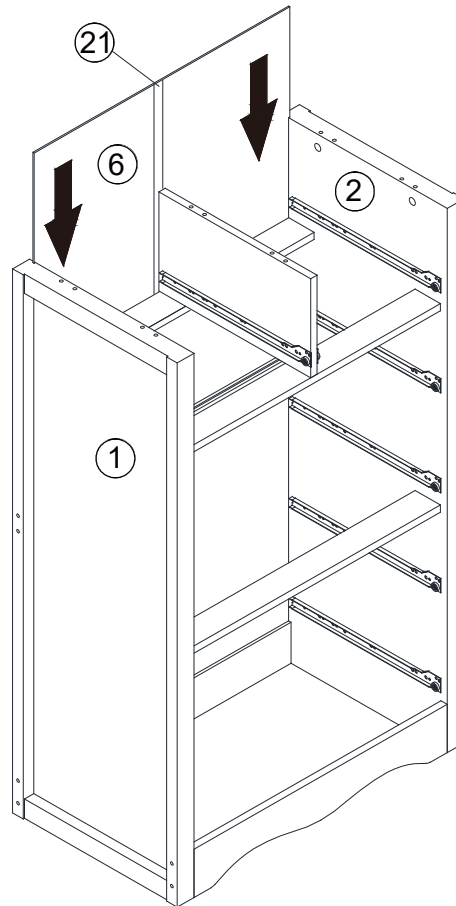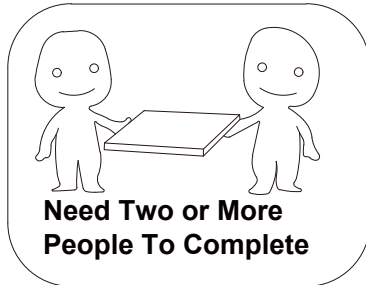


A x6

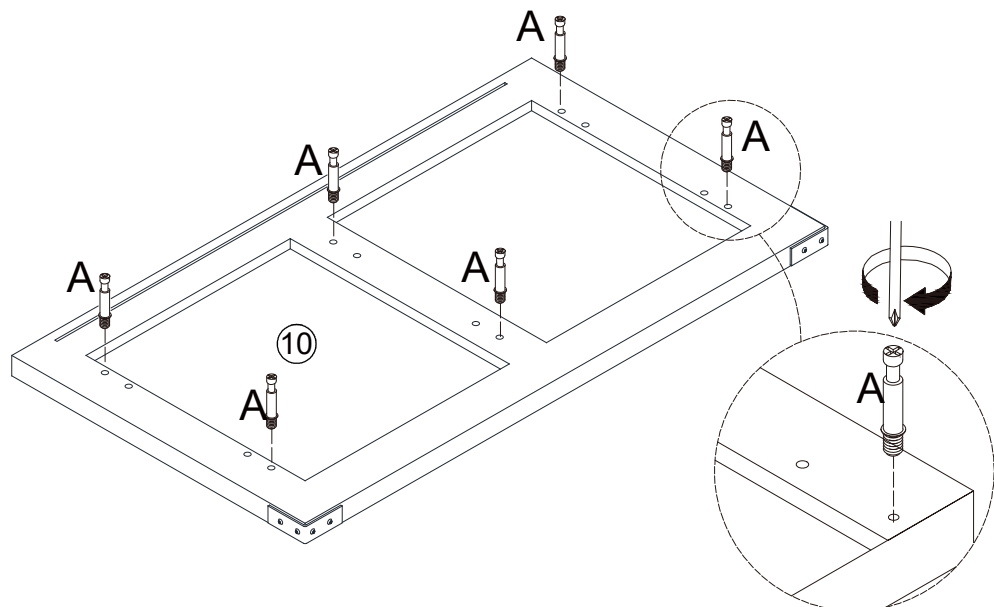
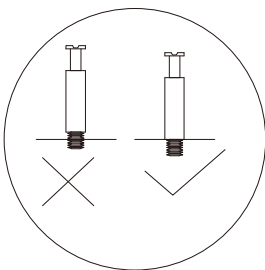


B x6


C x6

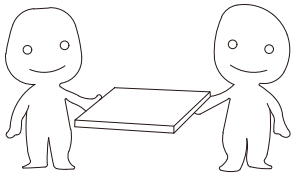


**Need Two or More
People To Complete**

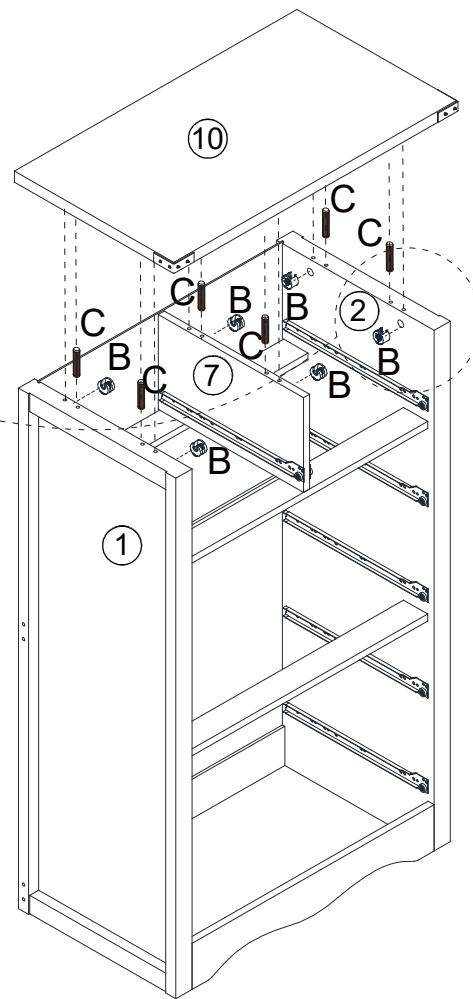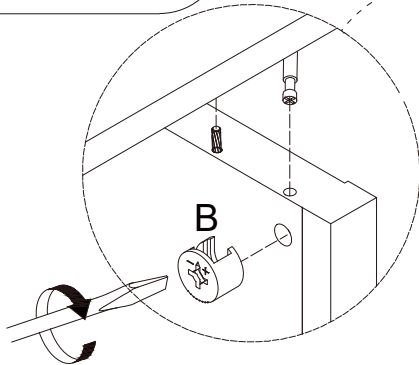


1

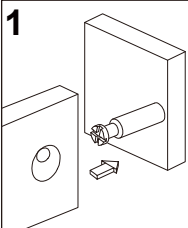

2

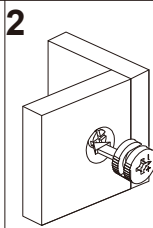


3

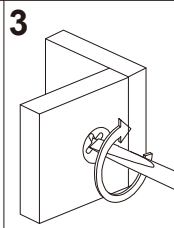

G x8



I x12

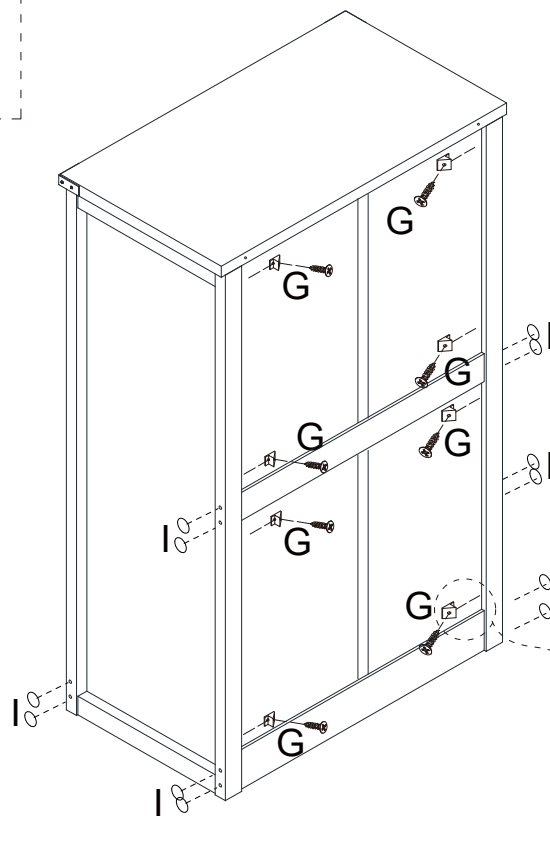

N x4



M x2

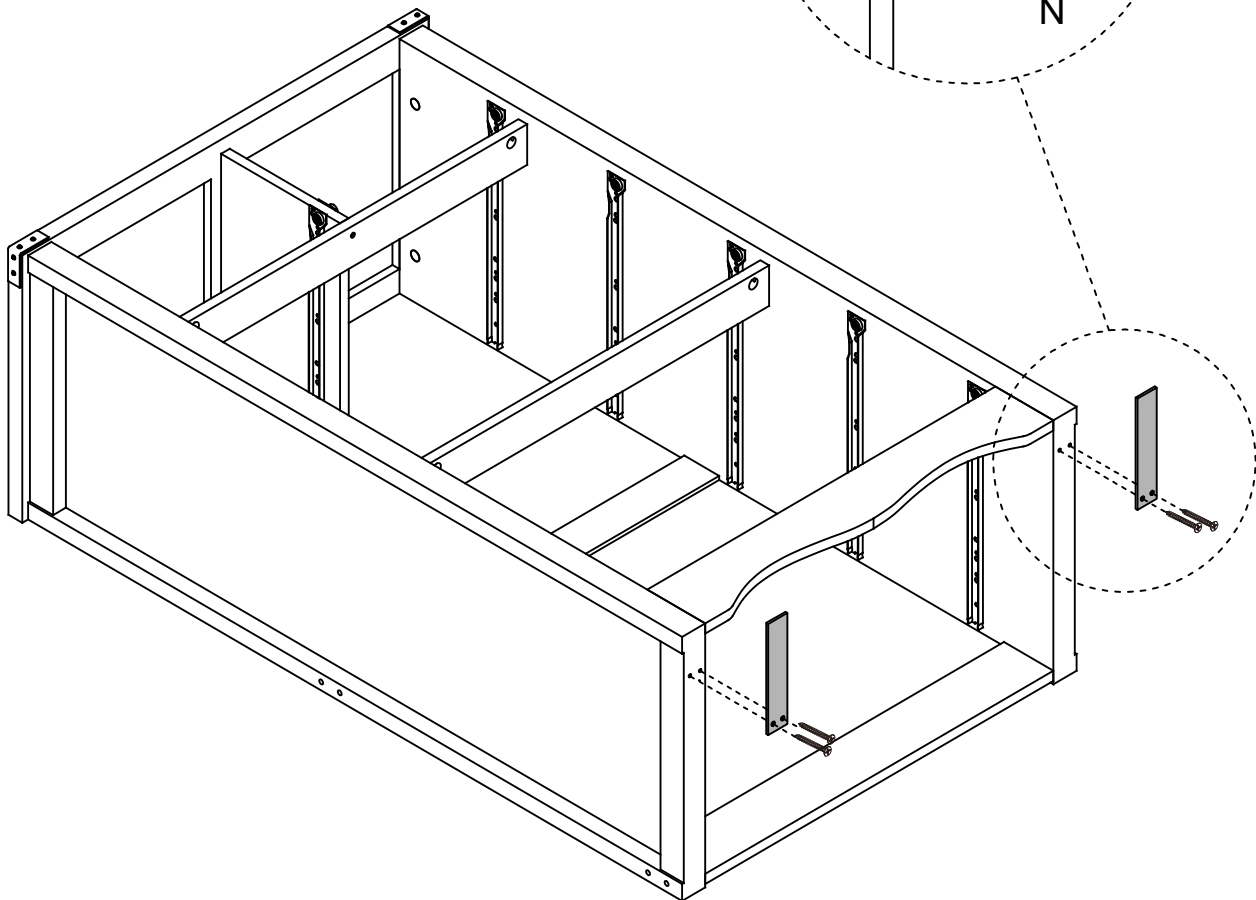



D x8



A x8




x2

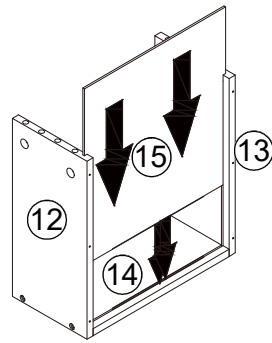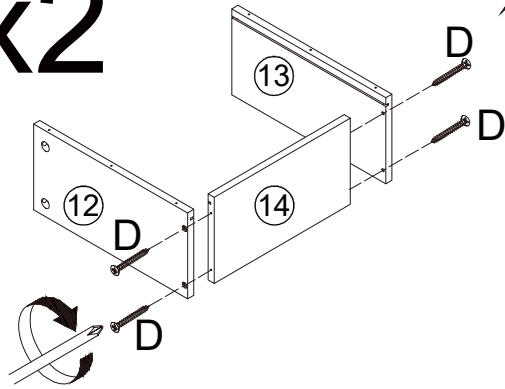


x2

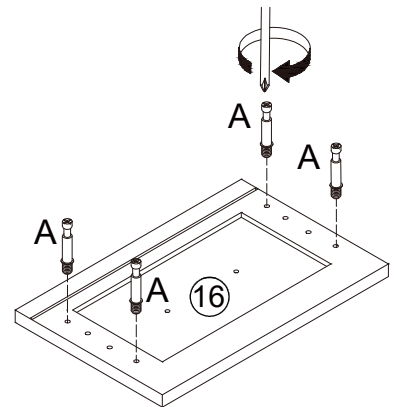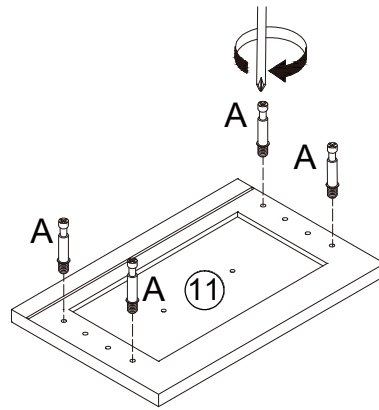


1

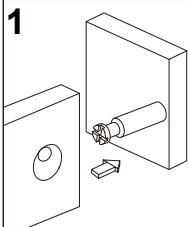

2


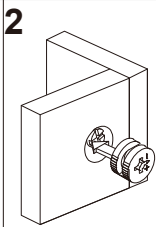


3



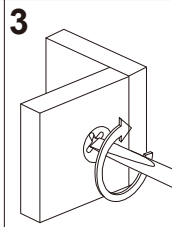


B x8

C x8

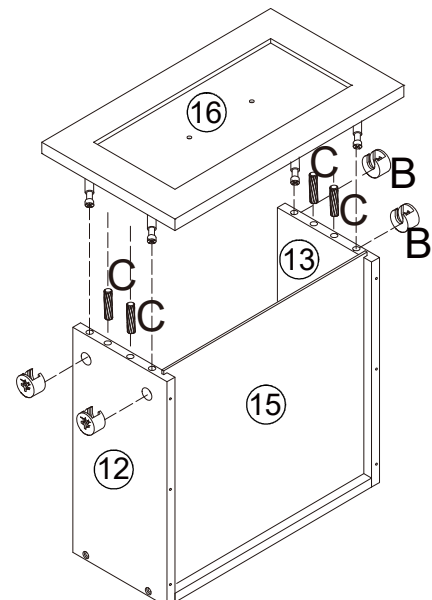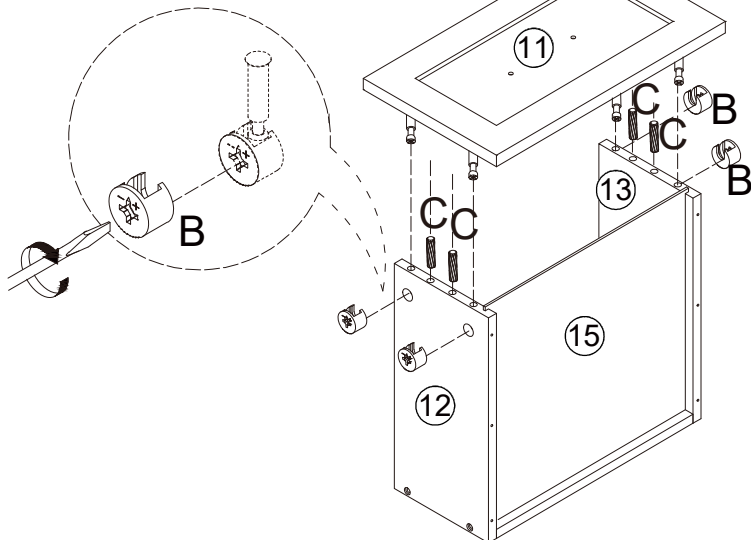




F x2

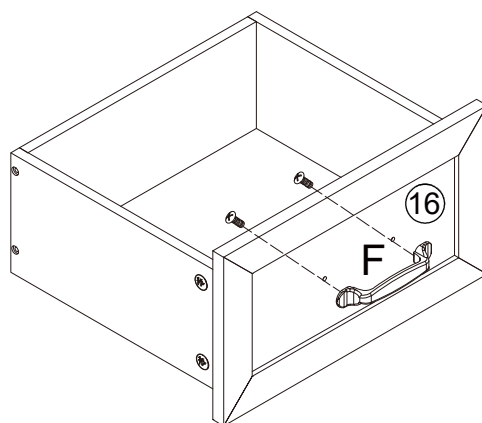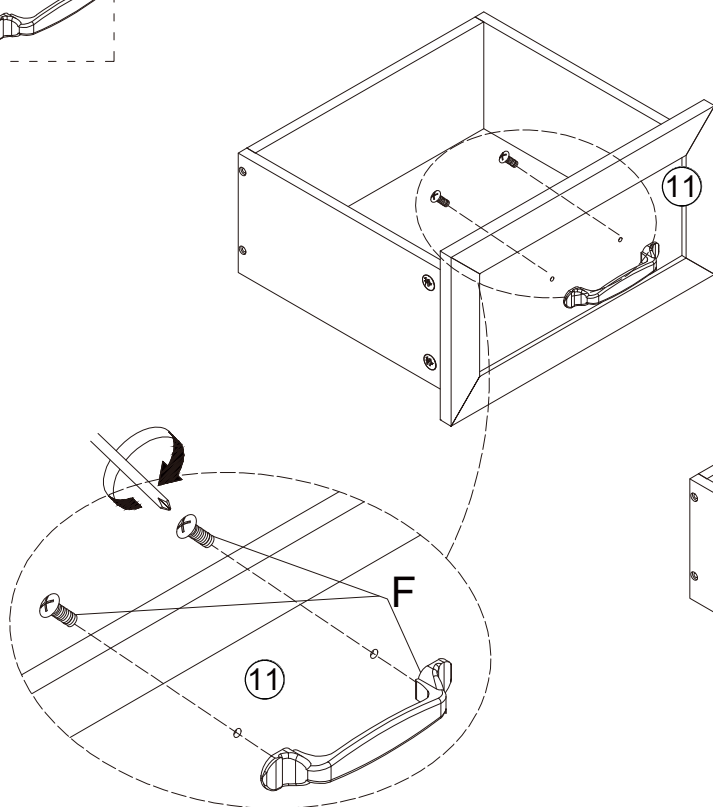

E x12

DL x2




DR x2

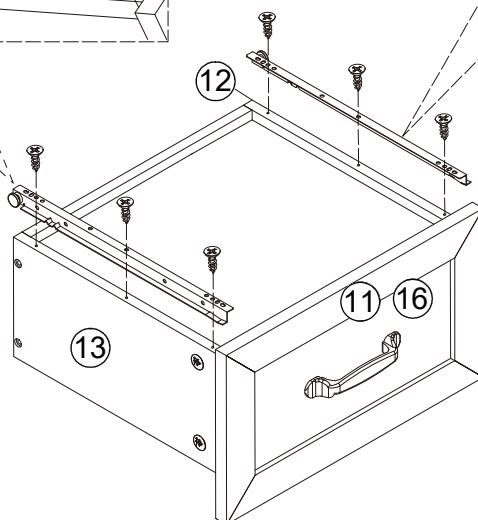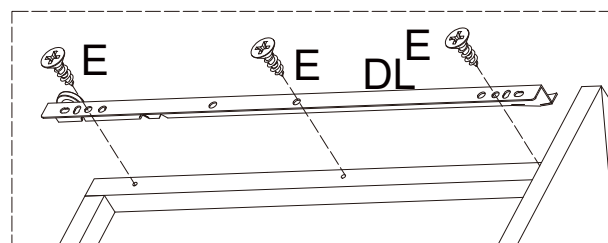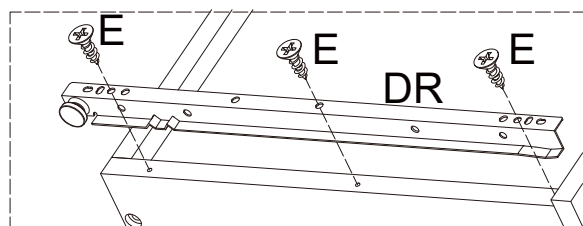


D x20

A x20


x4

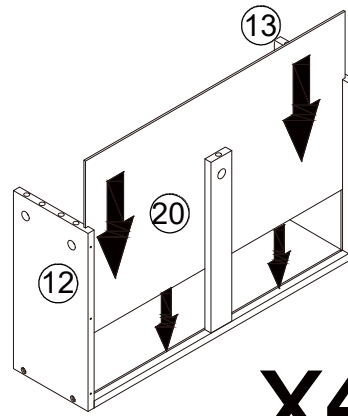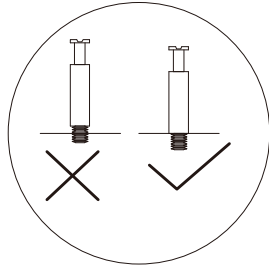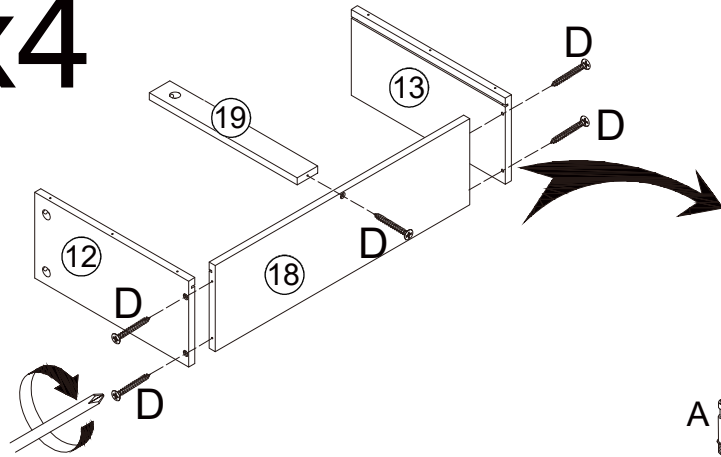

x4

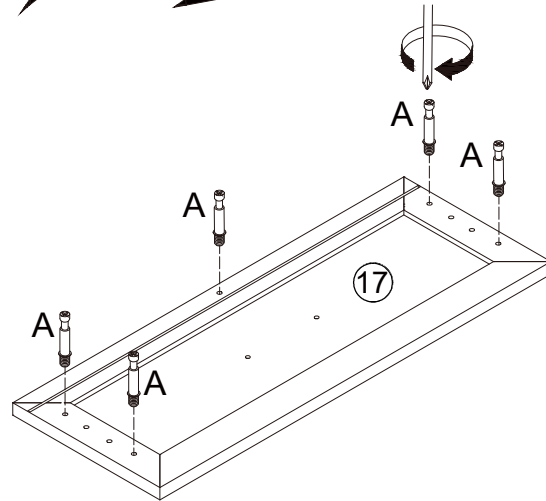


x4

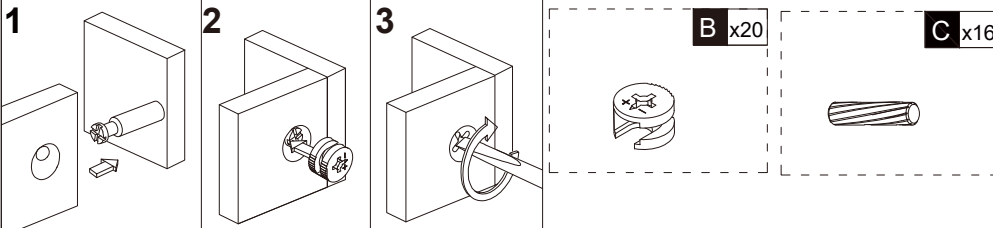




B x20

C x16

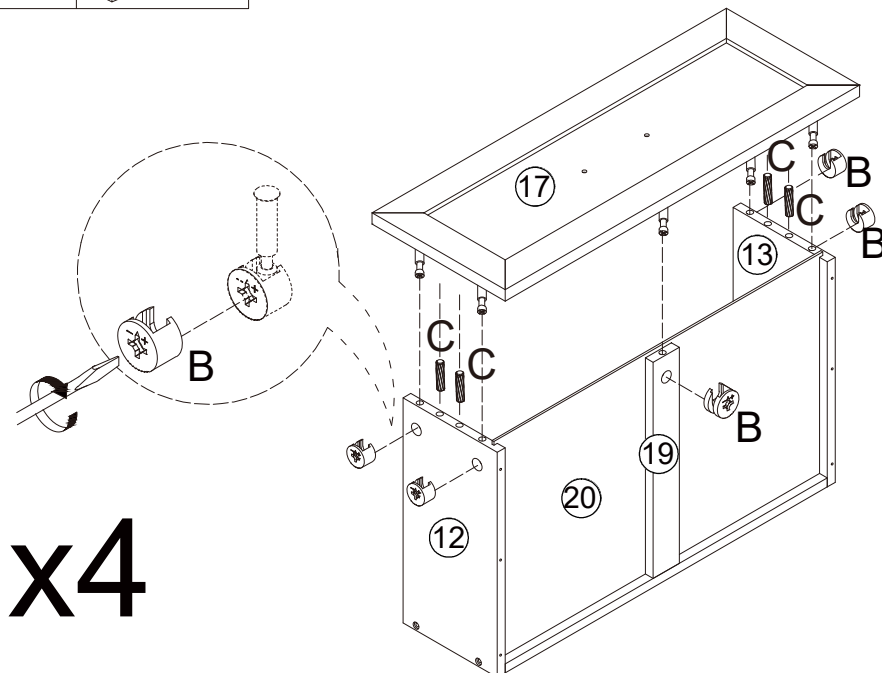

x4

F x4

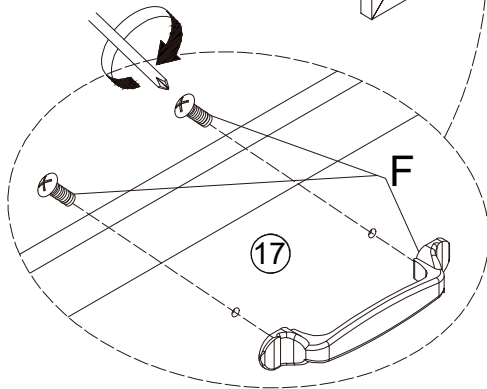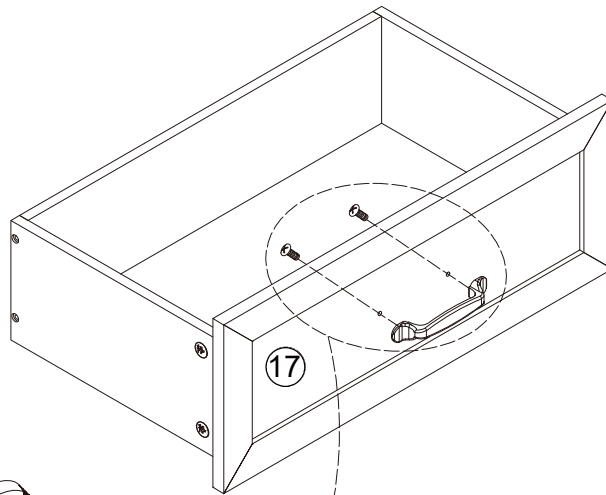

x4




E x24





DL x4



DR x4

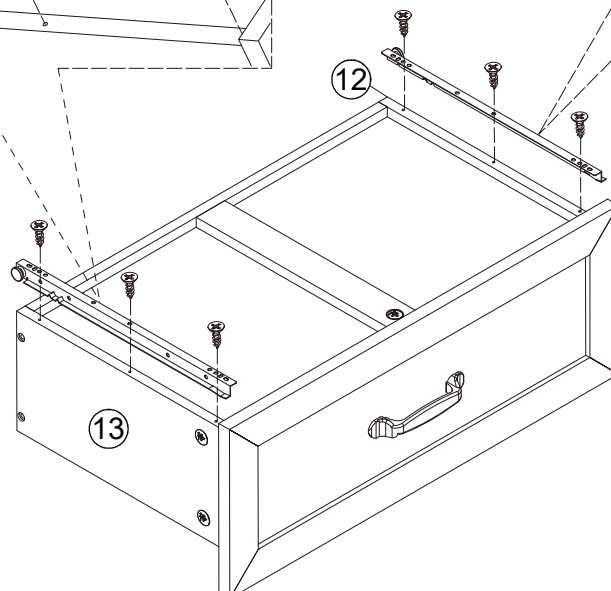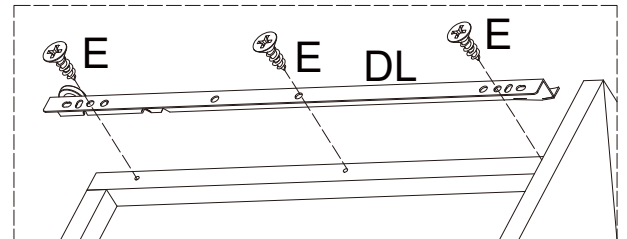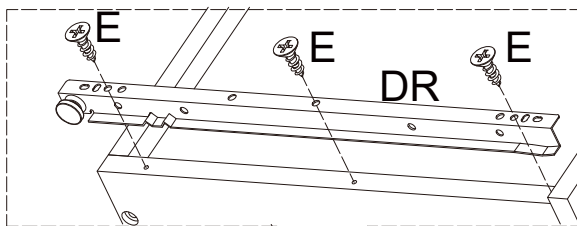

x4

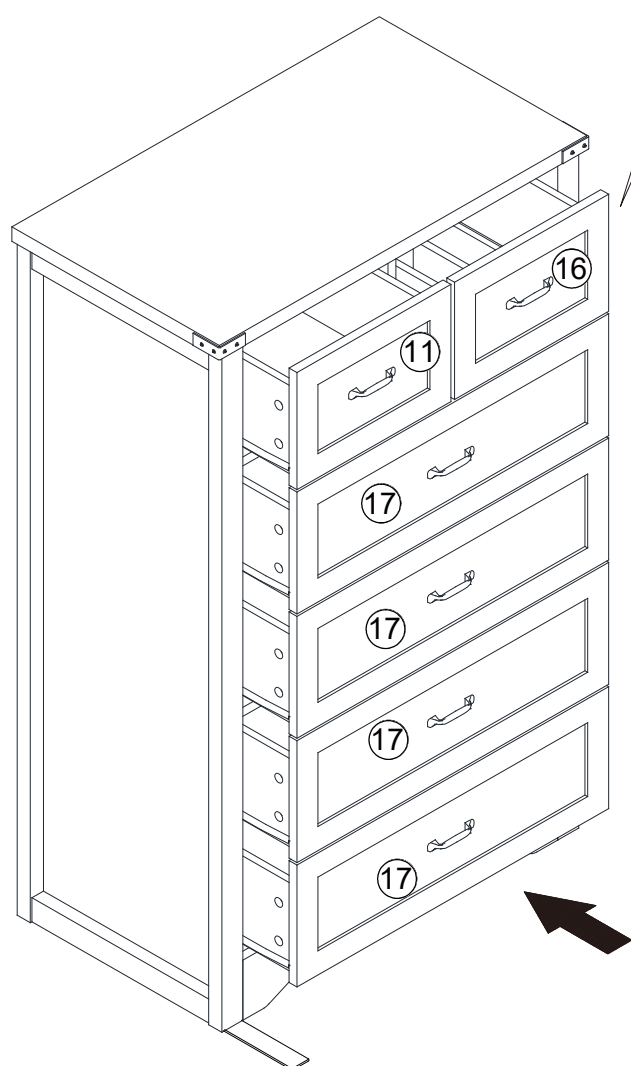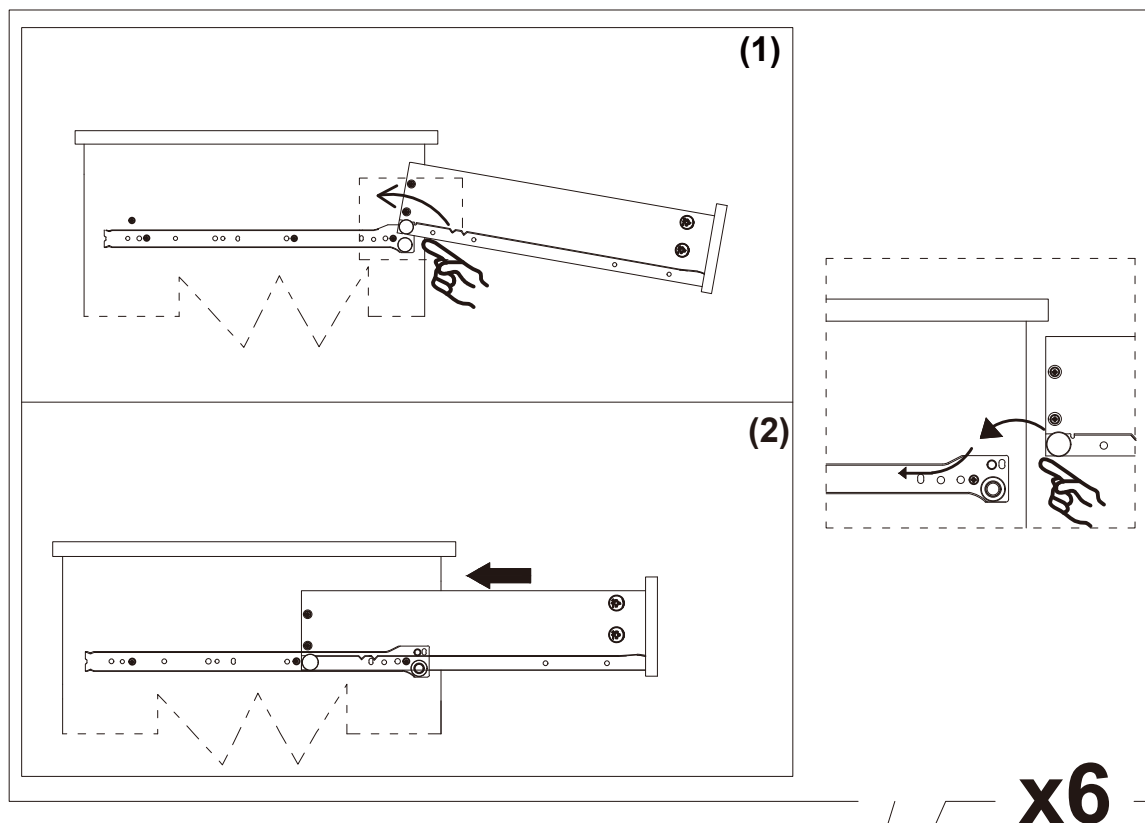

D x2



L x2



J x2



K x2




K

J

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL



Then, put the expansion bolt into the hole


(4)x2

WALL

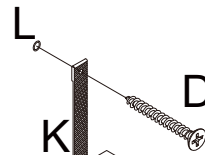

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

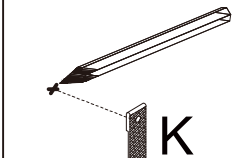

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

