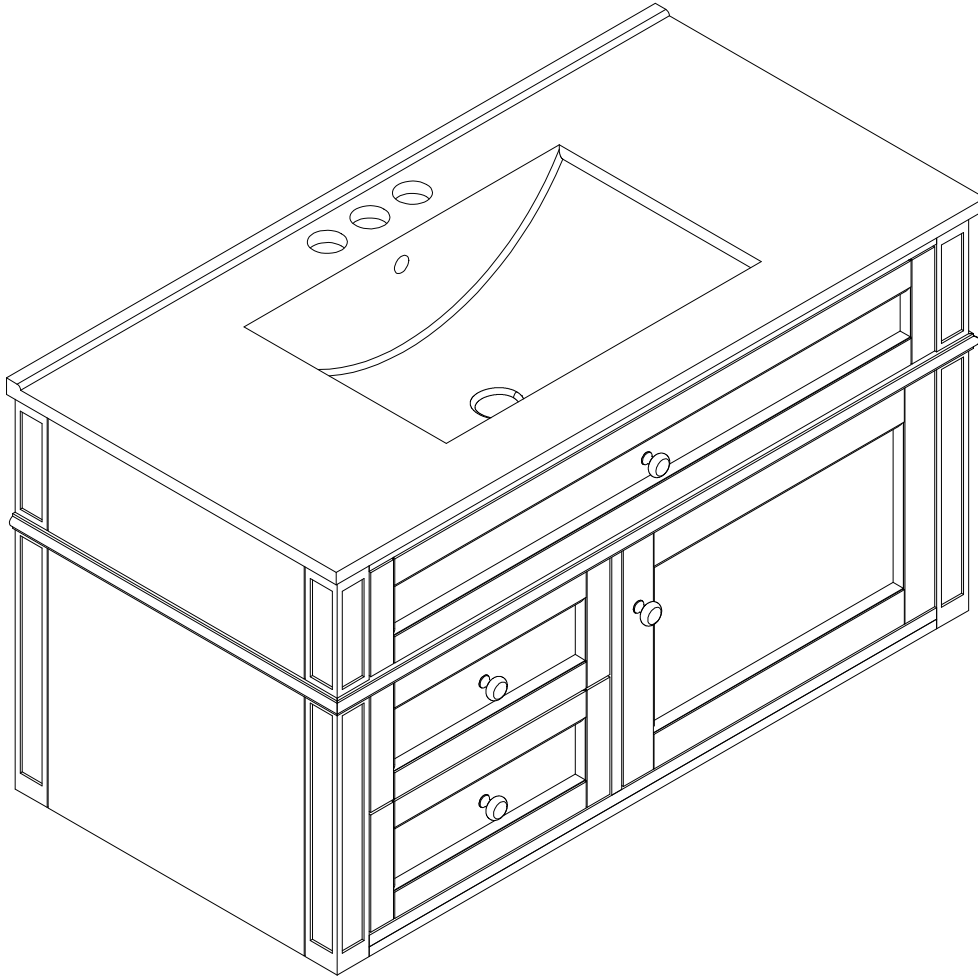


ASSEMBLY INSTRUCTIONS

36INCH BATH VANITY (COMBO)

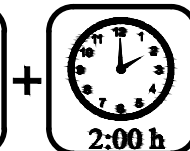
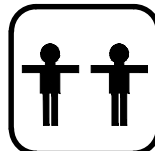
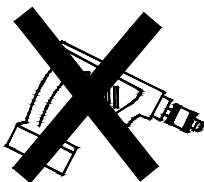


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**



Tools Required



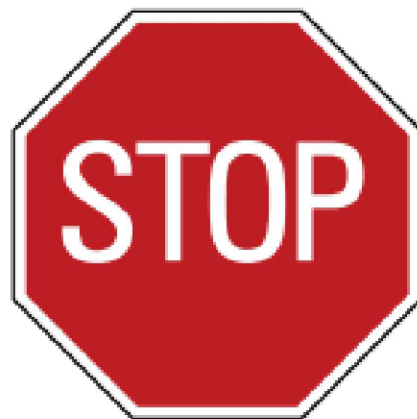
(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation





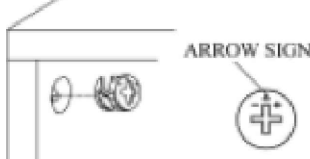
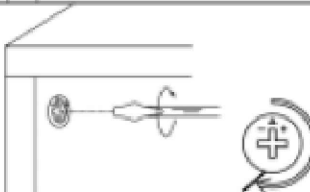
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

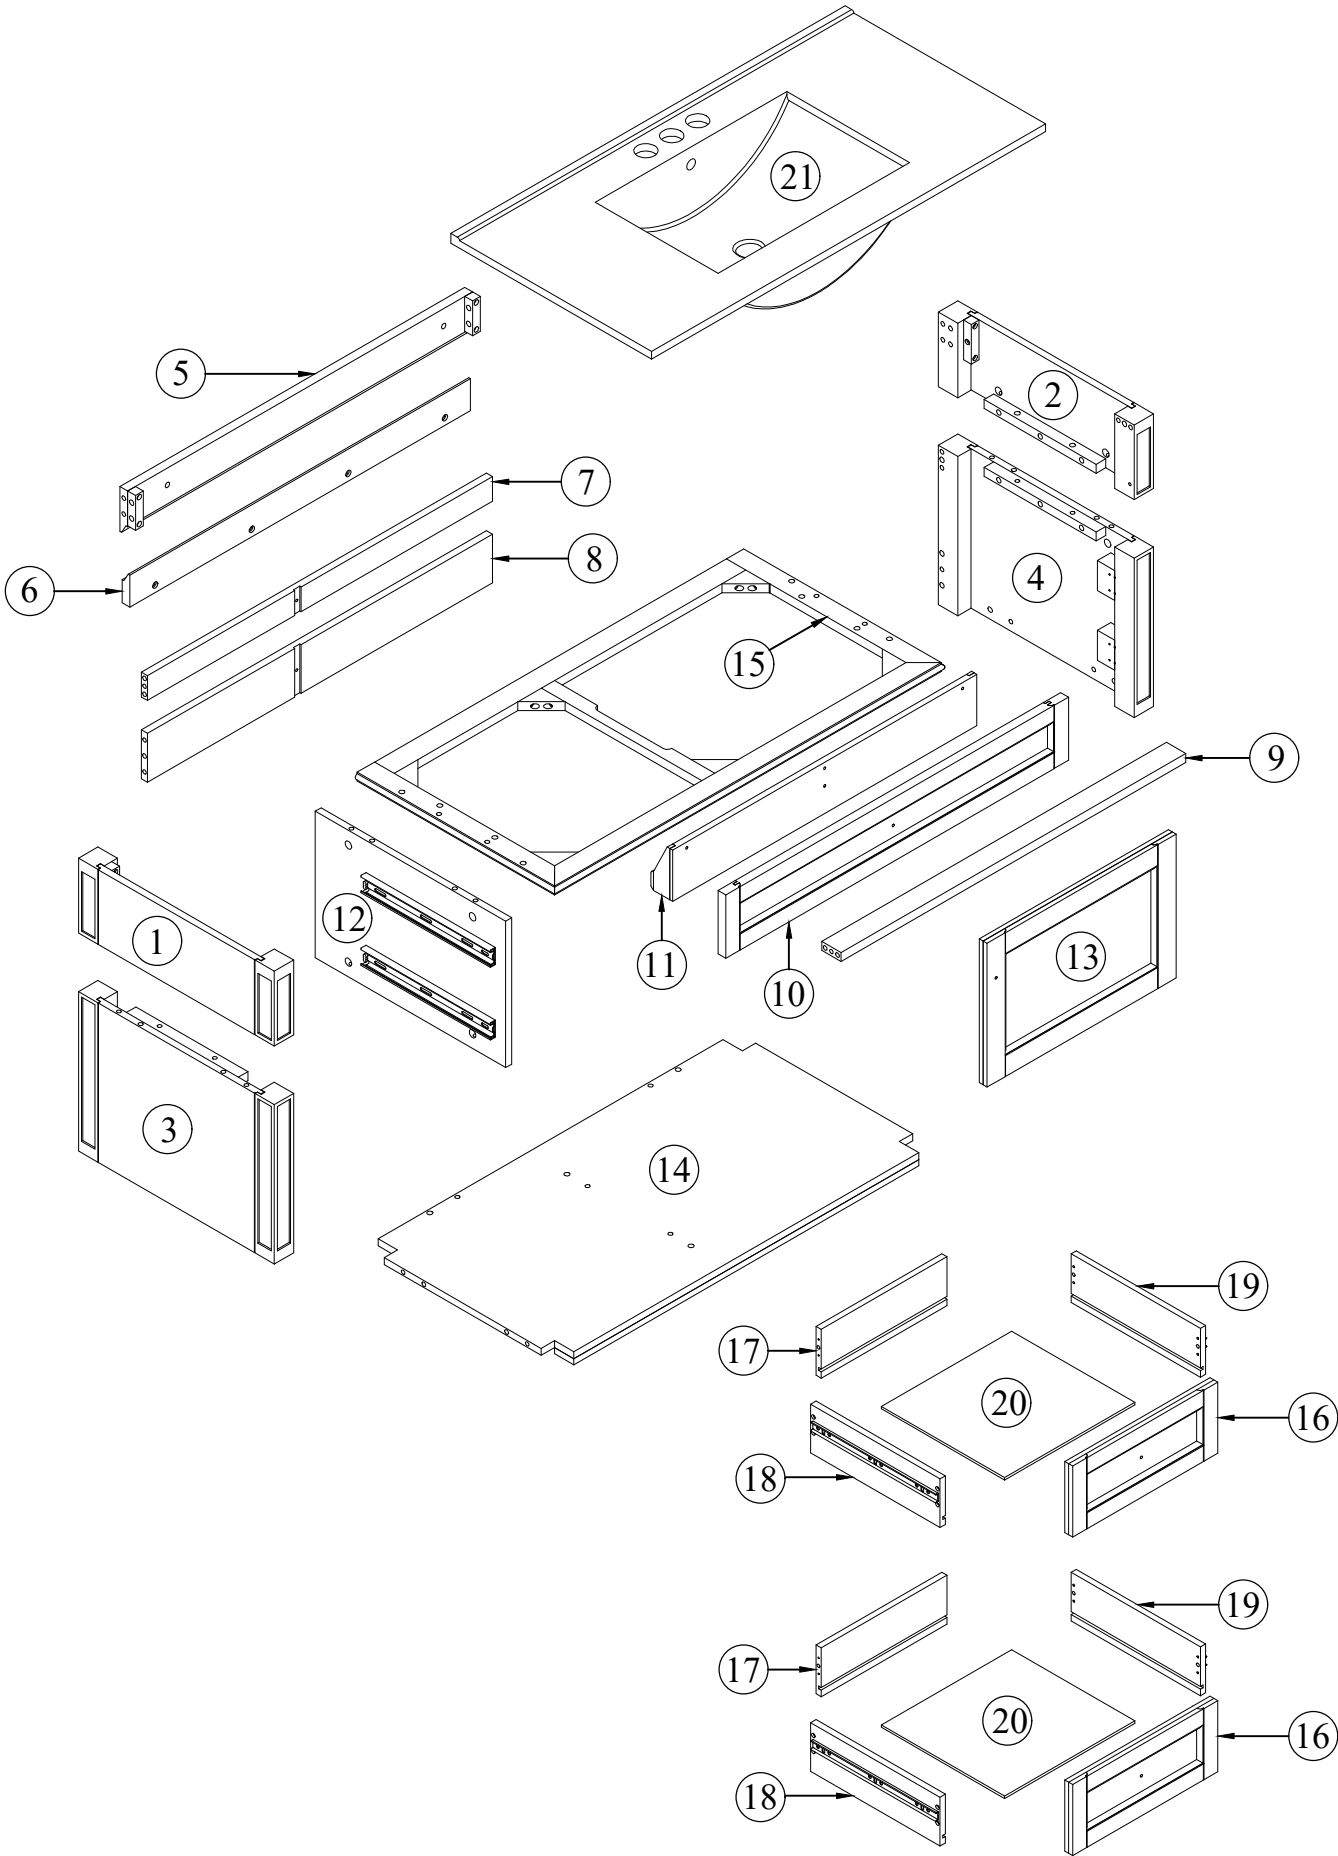
- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

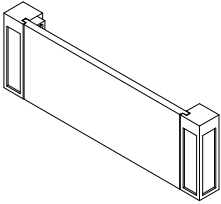
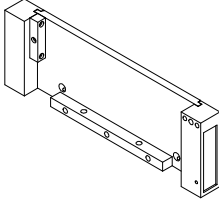
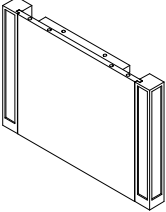
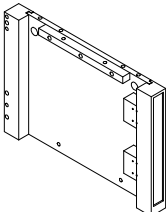
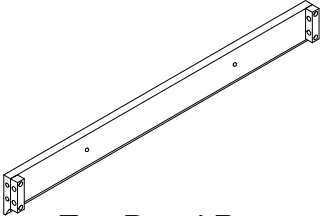
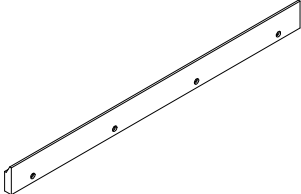
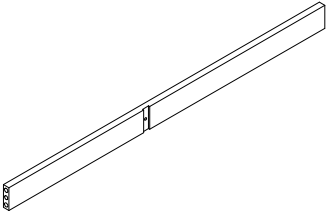
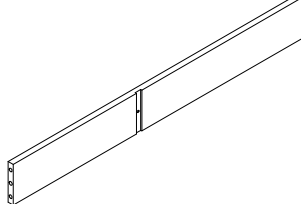
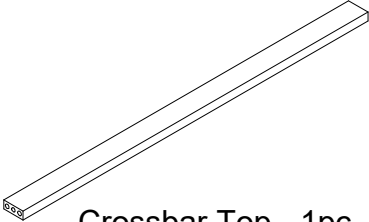
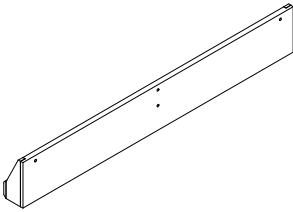
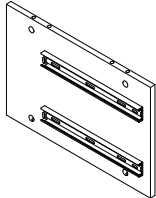
		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET

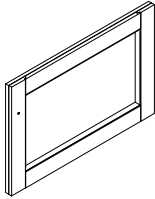
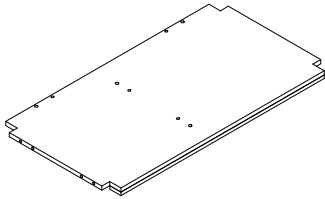
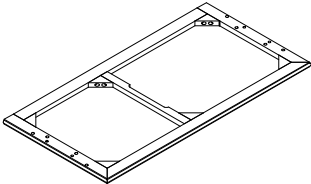
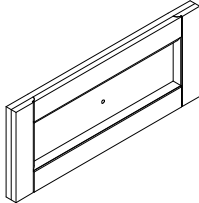
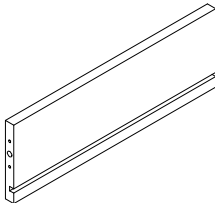
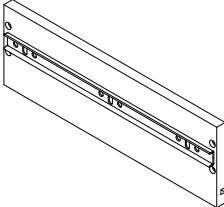
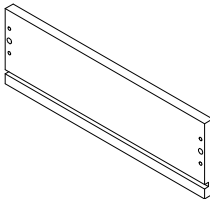
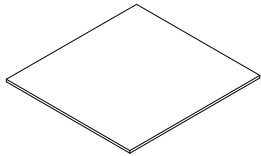
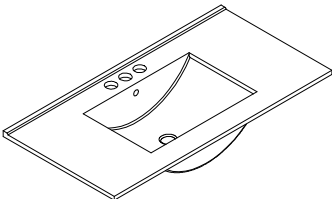


Identifying the Hardware-Identify the hardware using the illustrations below.



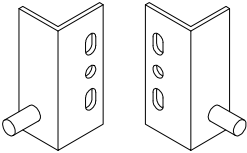






Part List

1		2	
	Side Panel Top (L) - 1pc		Side Panel Top (R) - 1pc
3		4	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
5		6	
	Top Panel Rear - 1pc		Connect Bar - 1pc
7		8	
	Mid Panel Rear - 1pc		Bottom Panel Rear - 1pc
9		10	
	Crossbar Top - 1pc		Flip Drawer Face - 1pc
11		12	
	Flip Drawer - 1pc		Mid Panel - 1pc

Part List


13	 Door - 1pc	14	 Bottom Panel - 1pc
15	 Frame Mid - 1pc	16	 Drawer Front - 2pcs
17	 Drawer Back Panel - 2pcs	18	 Drawer Side Panel (L) - 2pcs
19	 Drawer Side Panel (R) - 2pcs	20	 Bottom Drawer Panel - 2pcs
21	 Sink - 1pc		

Hardware List

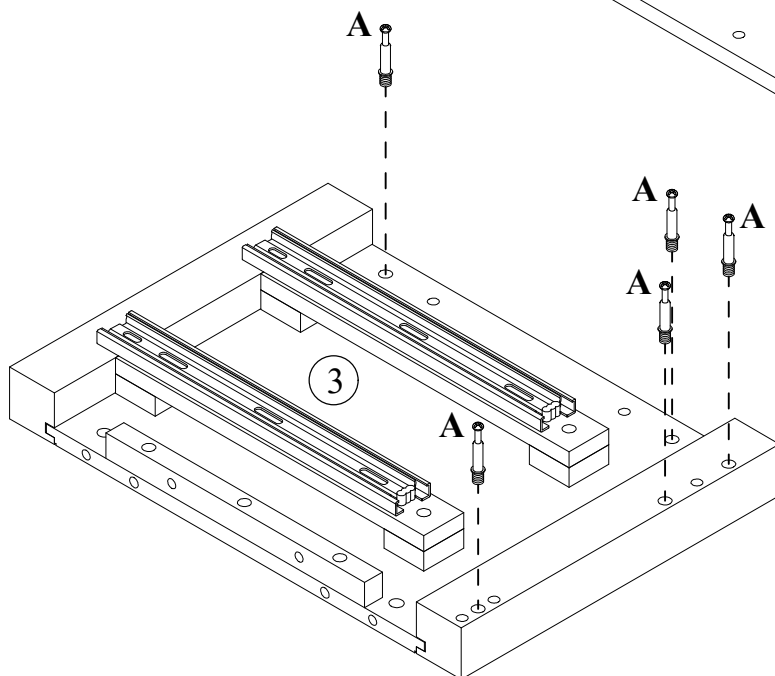
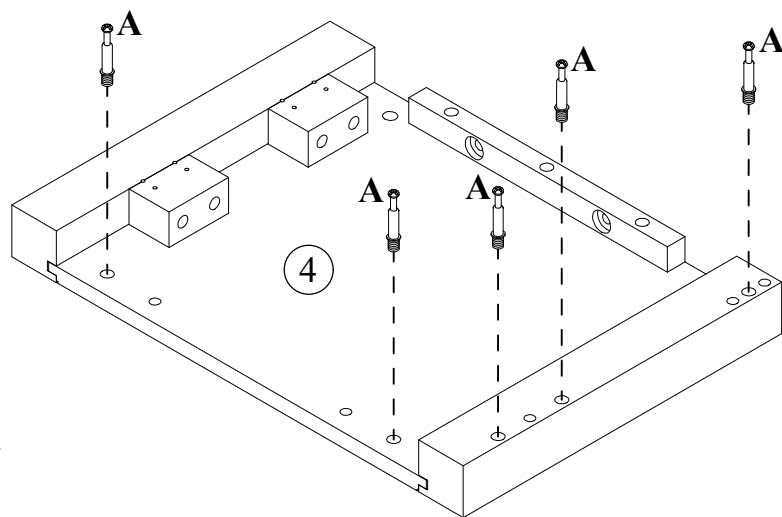
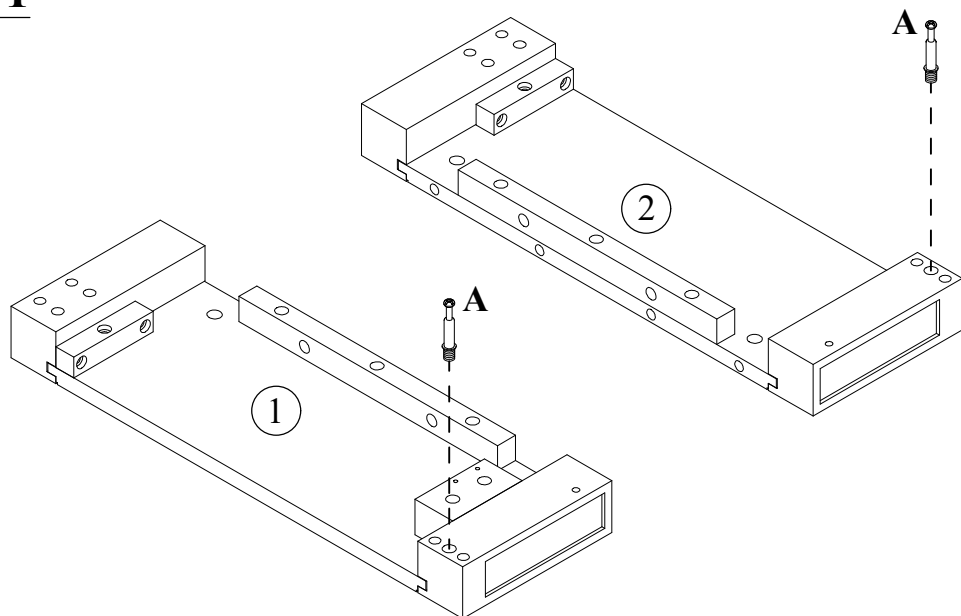
A  $\varnothing 6 \times 35 \text{mm}$	B  $\varnothing 14.5 \times 12 \text{mm}$	C  $\varnothing 8 \times 30 \text{mm}$
Three in one bolts(26pcs)	Three in one lock(26pcs)	Wood dowel(32pcs)
D 	E  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$	F  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$
Rotary Hinge (2pcs)	Round head screw(8pcs)	Flat head screw(12pcs)
G  $\varnothing 8 \times \varnothing 4 \times 20 \text{mm}$	H  $\varnothing 13 \times 1/4" \times 28 \text{mm}$	I  $\varnothing 1/4" \times 16 \times 1 \text{mm}$
Round head screw(5pcs)	Hex-Head bolts(4pcs)	Washer(10pcs)
J 	K 	L  $\varnothing 5/32" \times 28 \text{mm}$
Hinge(1pc)	Handle (4pcs)	Handle screw(3pcs)
M 	N  $\varnothing 5/32" \times 25 \text{mm}$	O  $\varnothing 6 \times 30 \text{mm}$
Damping hinge (2pcs)	Handle screw(1pc)	Wood dowel(8pcs)
P  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$	Q  $\varnothing 10 \times \varnothing 5 \times 60 \text{mm}$	R  $\varnothing 12 \times 55 \text{mm}$
Round head screw(16pcs)	Flat head screw (4pcs)	Plastic stopper (6pcs)
S  4mm	T  $\varnothing 13 \times 1/4" \times 70 \text{mm}$	U  $\varnothing 1/4" \times 10 \times 1.2 \text{mm}$
Allen key - 1pc	Hex-Head bolts(4pcs)	Lock Washer - 4pcs
V  $\varnothing 10 \times \varnothing 5 \times 50 \text{mm}$		
Round head screw(2pcs)		

STEP: 1

A



12PCS



Don't lean




Don't over tighten

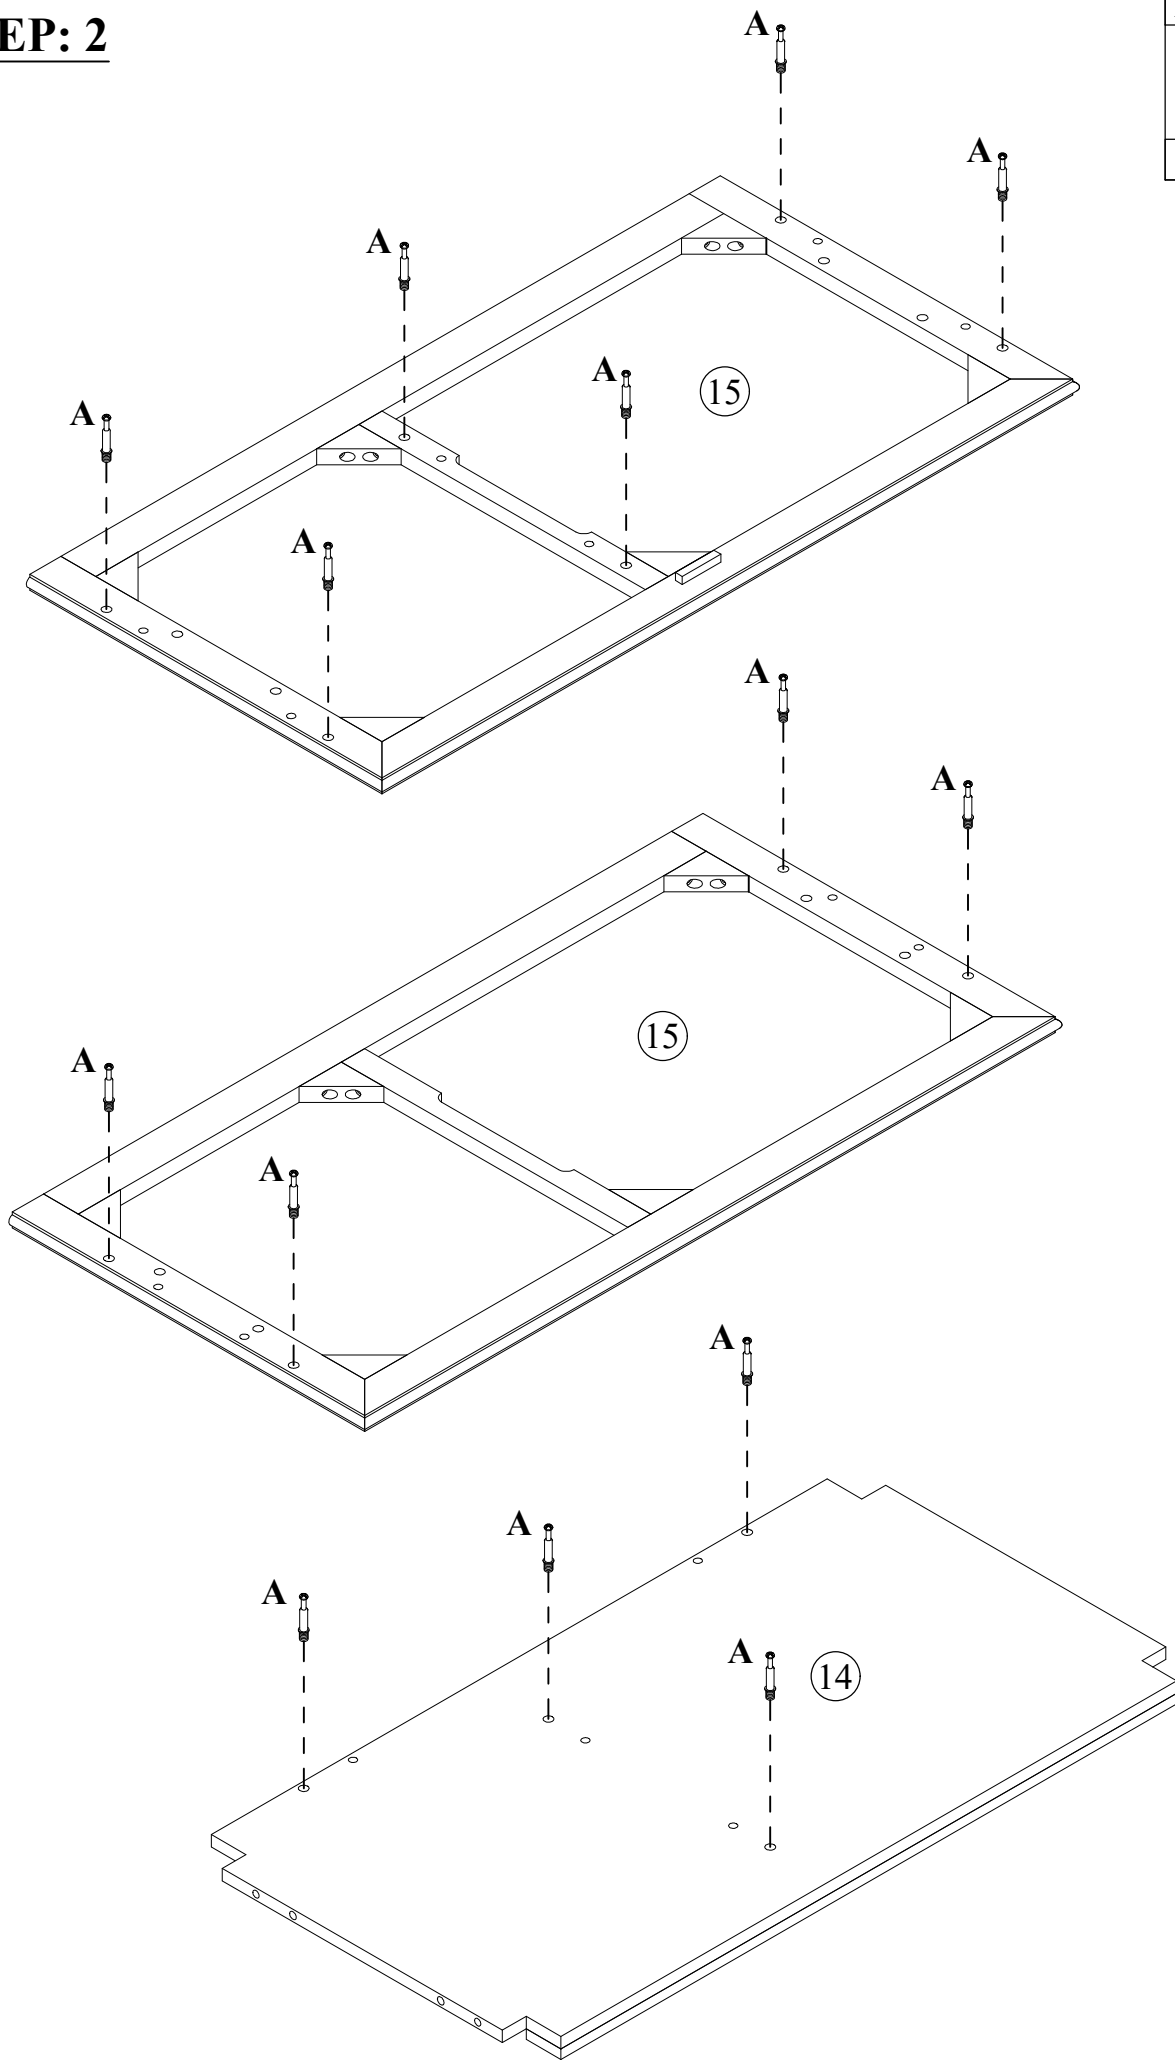


STEP: 2


A

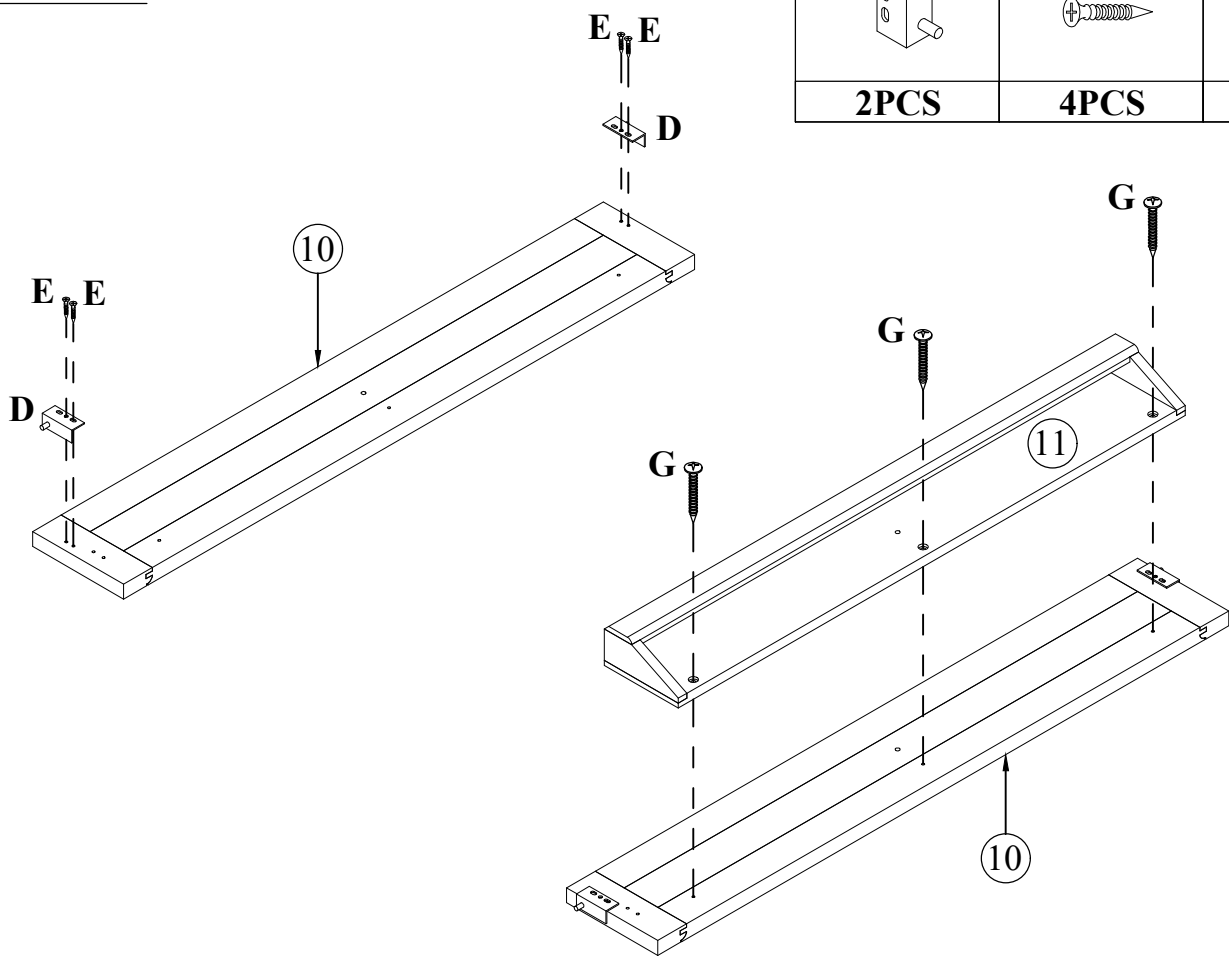


14PCS




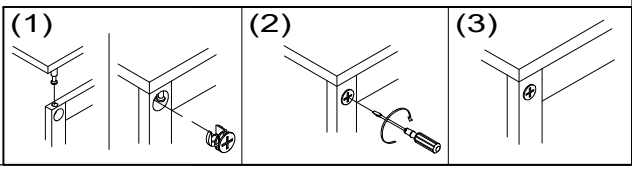
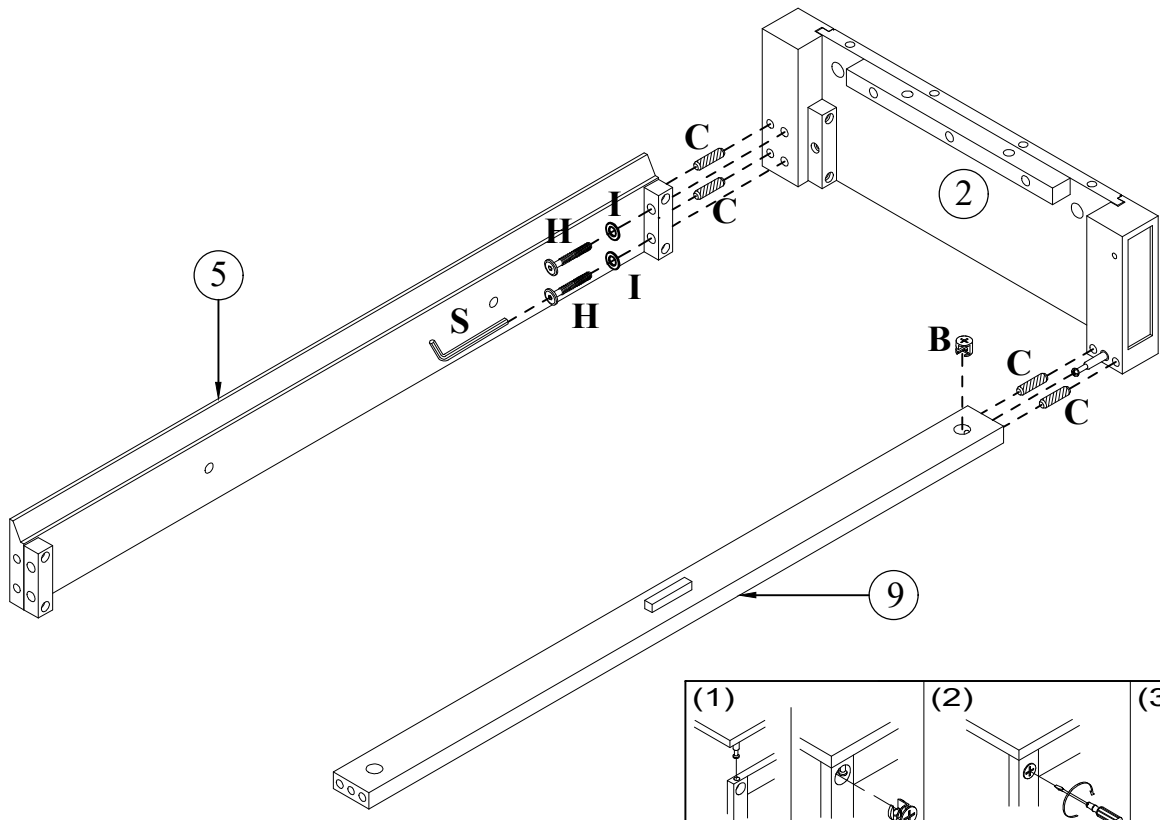
STEP: 3

D 	E 	G 
2PCS	4PCS	3PCS



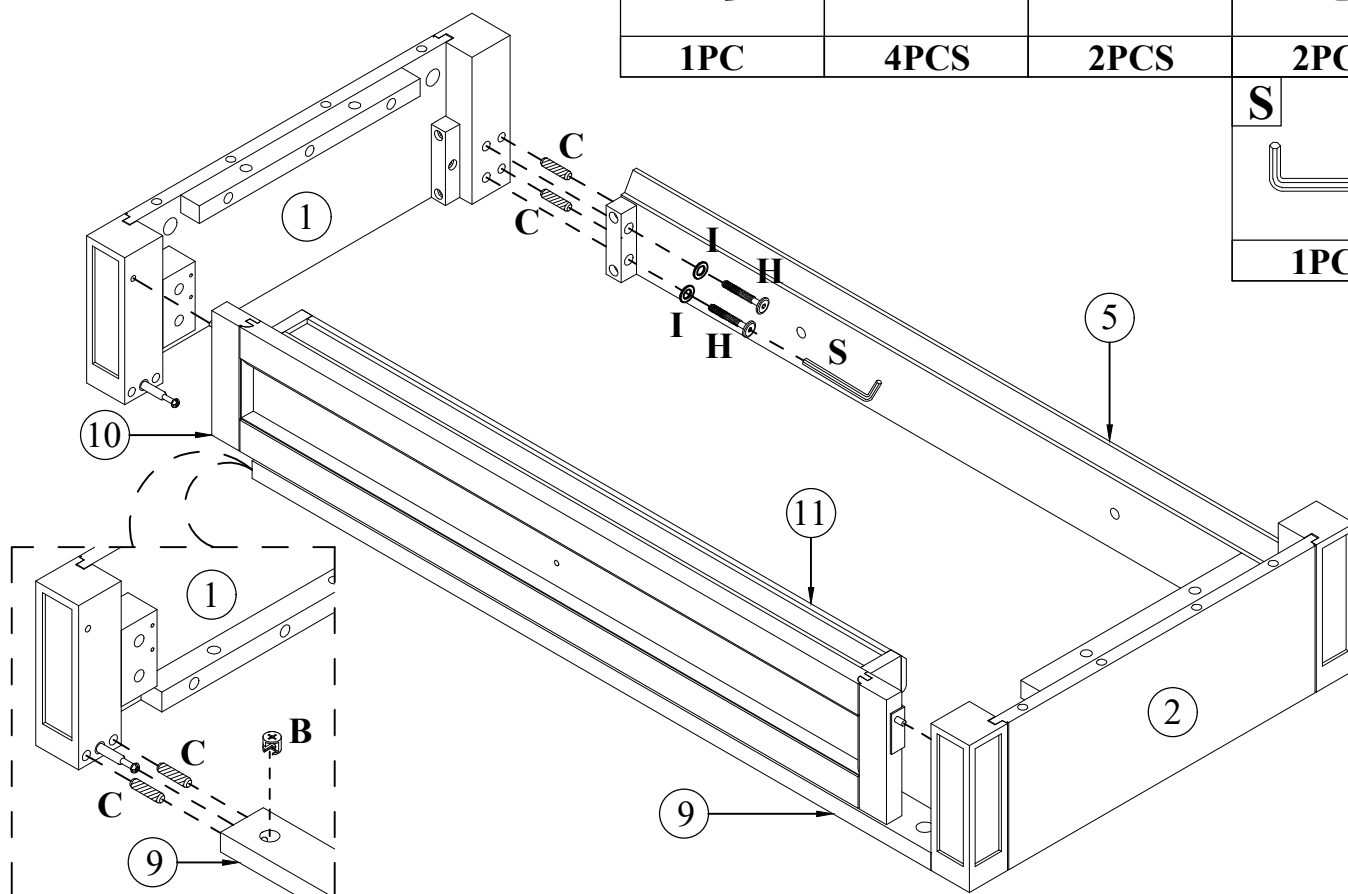
STEP: 4

B 	C 	H 	I 	S 
1PC	4PCS	2PCS	2PCS	1PC




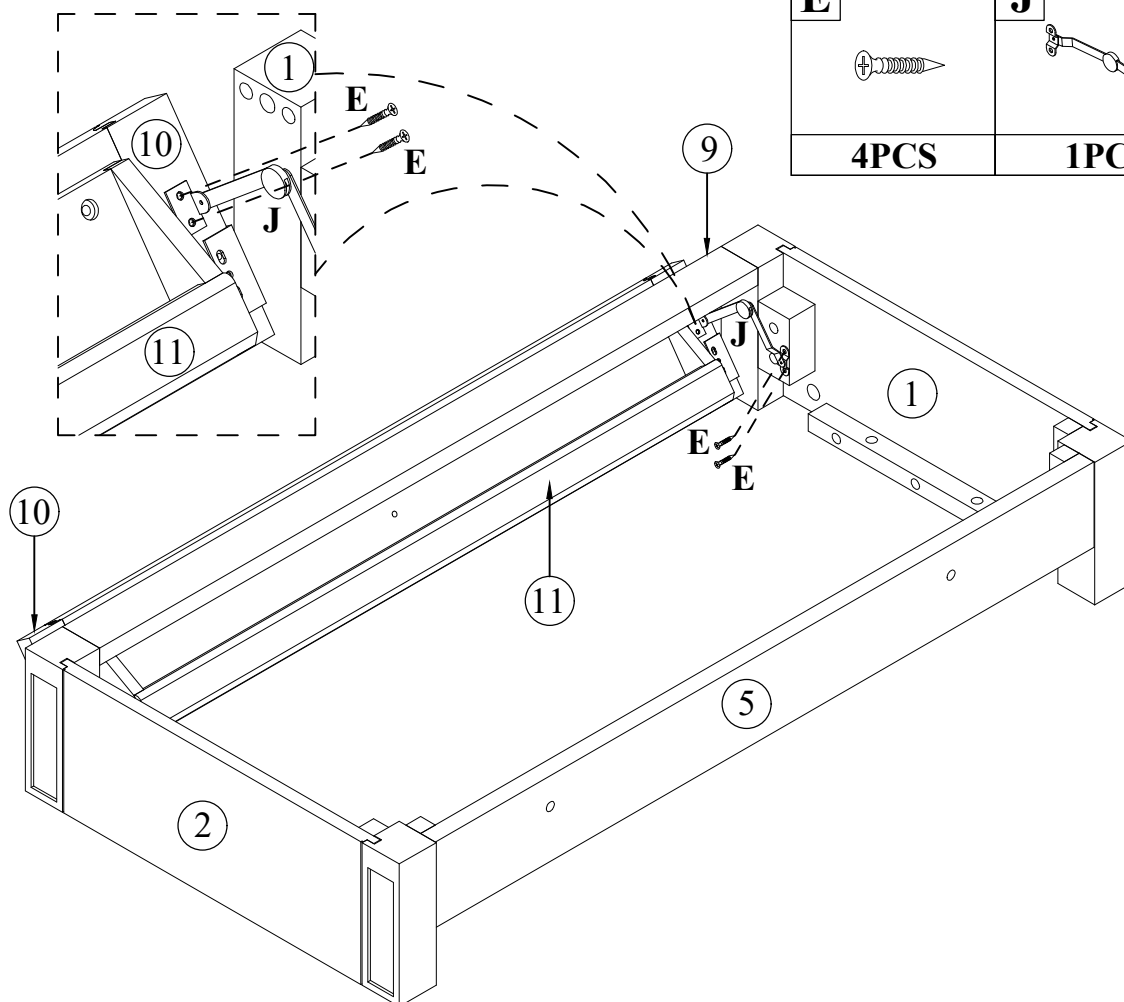
STEP: 5

B		C		H		I	
1PC		4PCS		2PCS		2PCS	
							S
							
							1PC




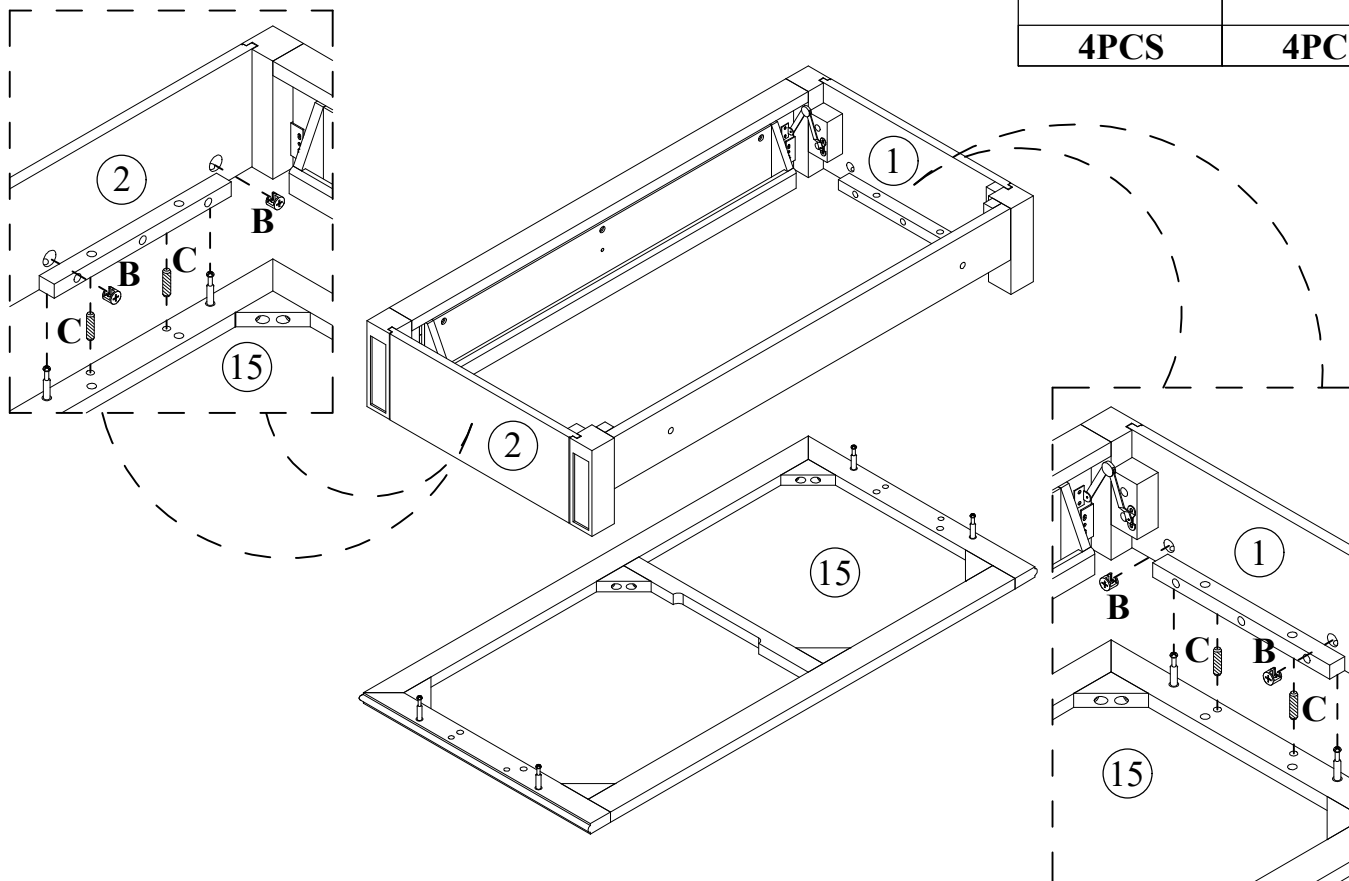
STEP: 6

E		J	
4PCS		1PC	




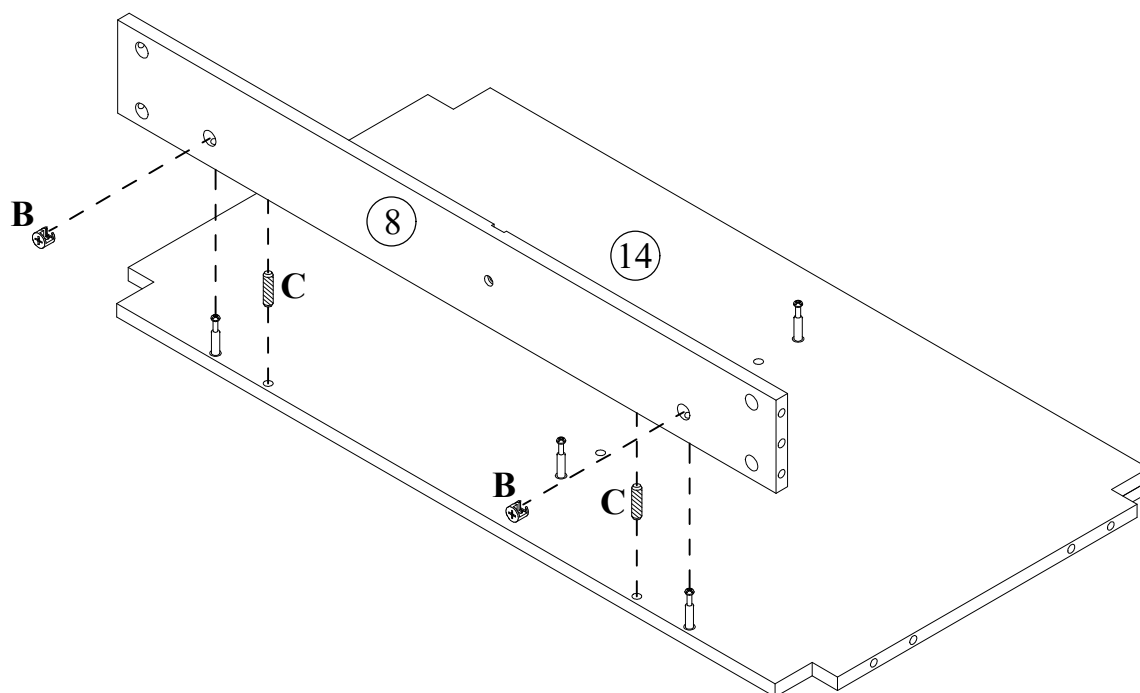
STEP: 7

B	C
	
4PCS	4PCS

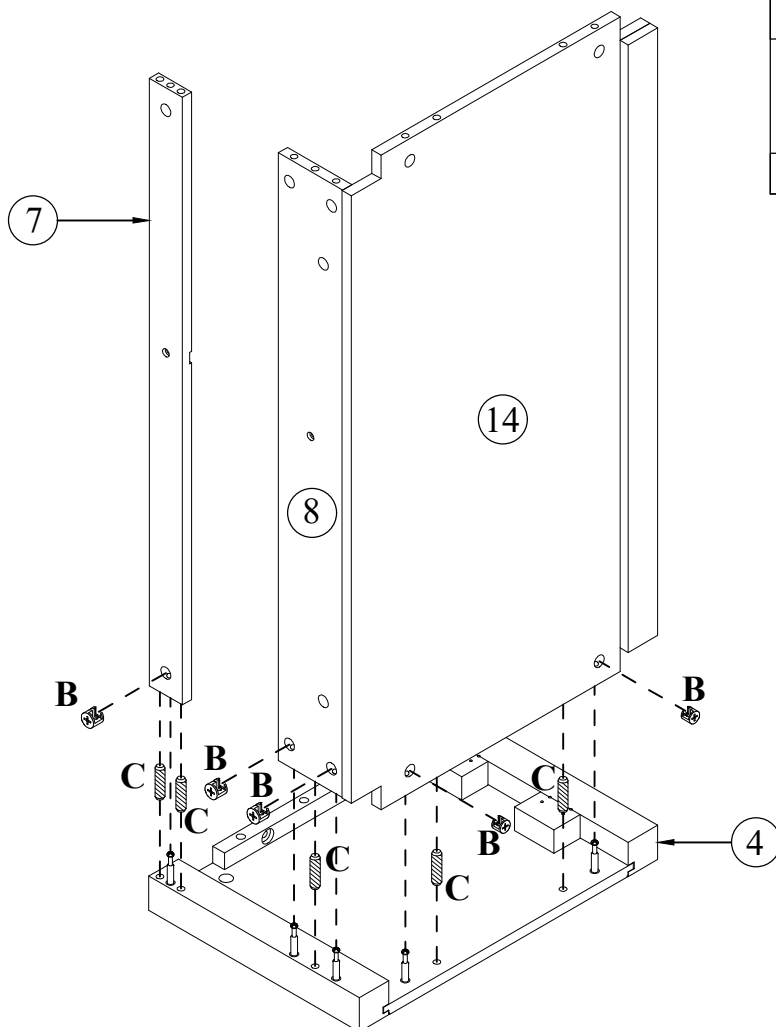



STEP: 8

B	C
	
2PCS	2PCS

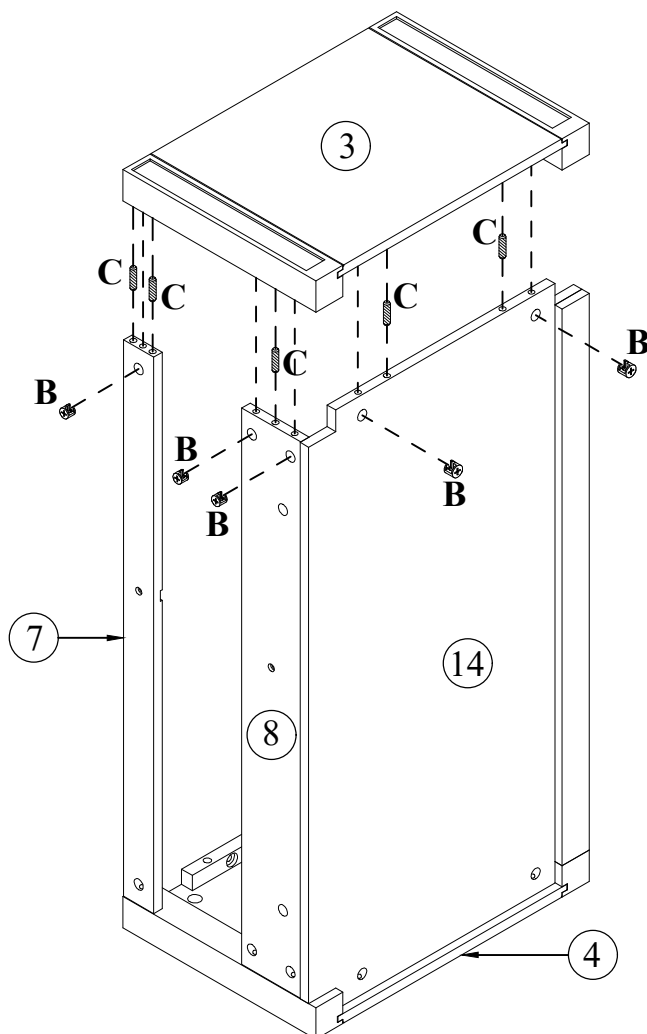



STEP: 9




B	C
	
5PCS	5PCS

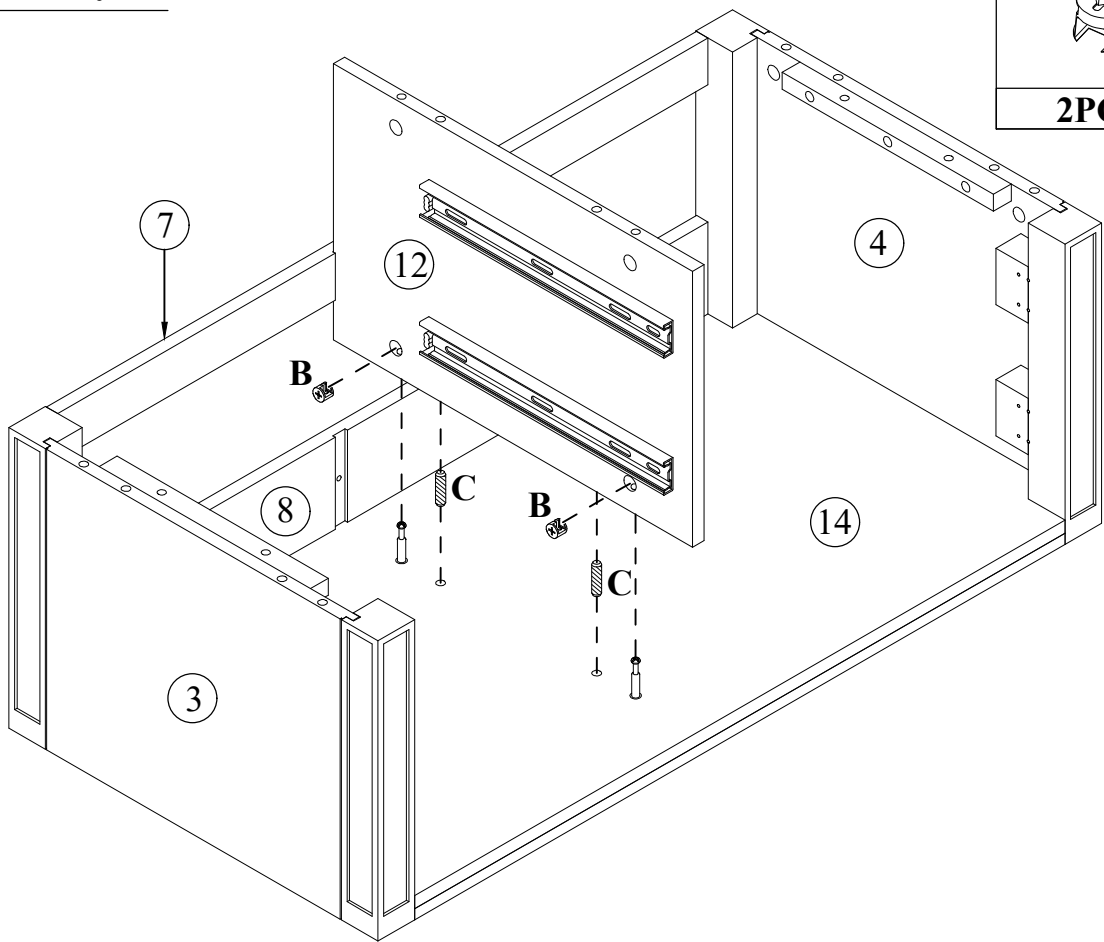
STEP: 10



B	C
	
5PCS	5PCS

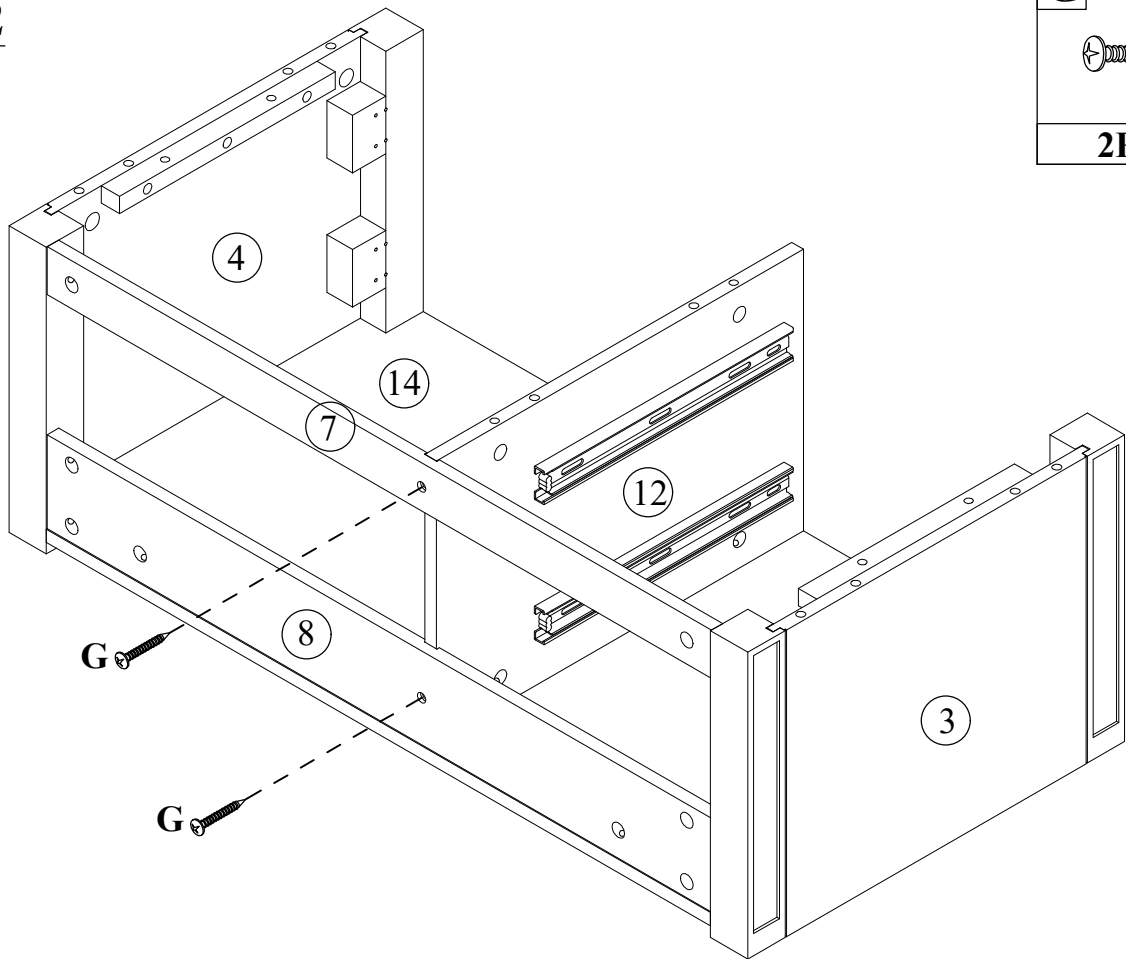
STEP: 11

B		C	
2PCS		2PCS	

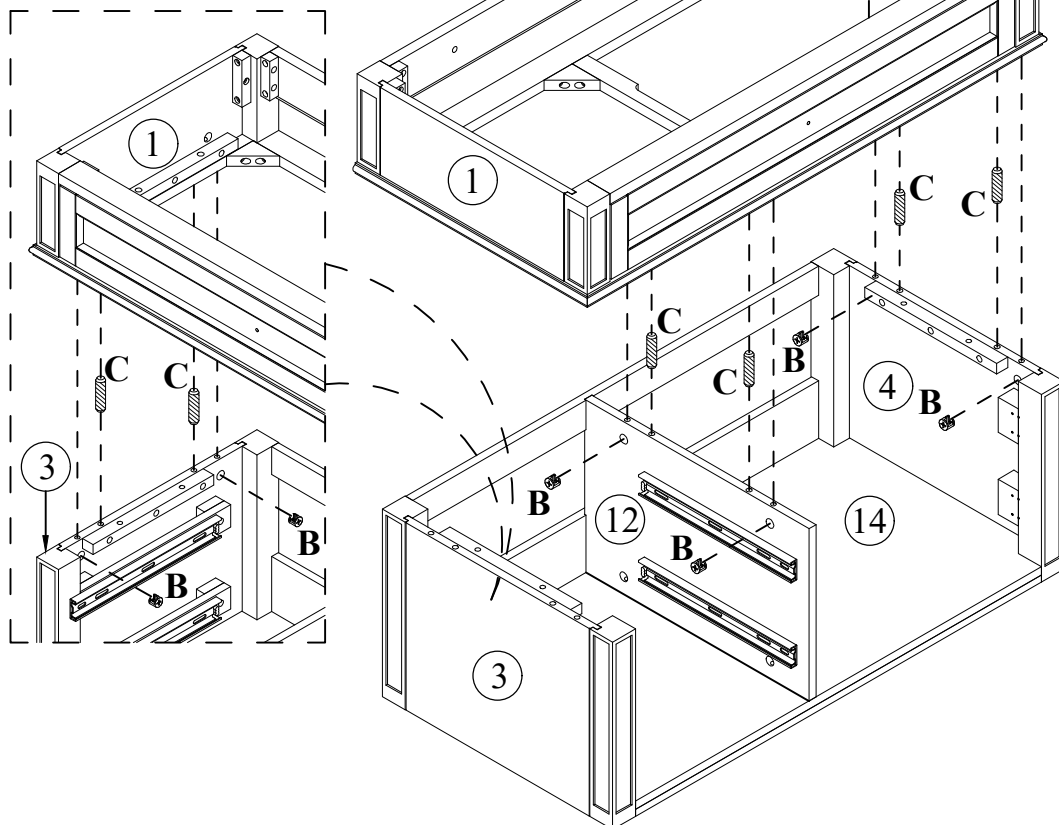



STEP: 12

G	
2PCS	

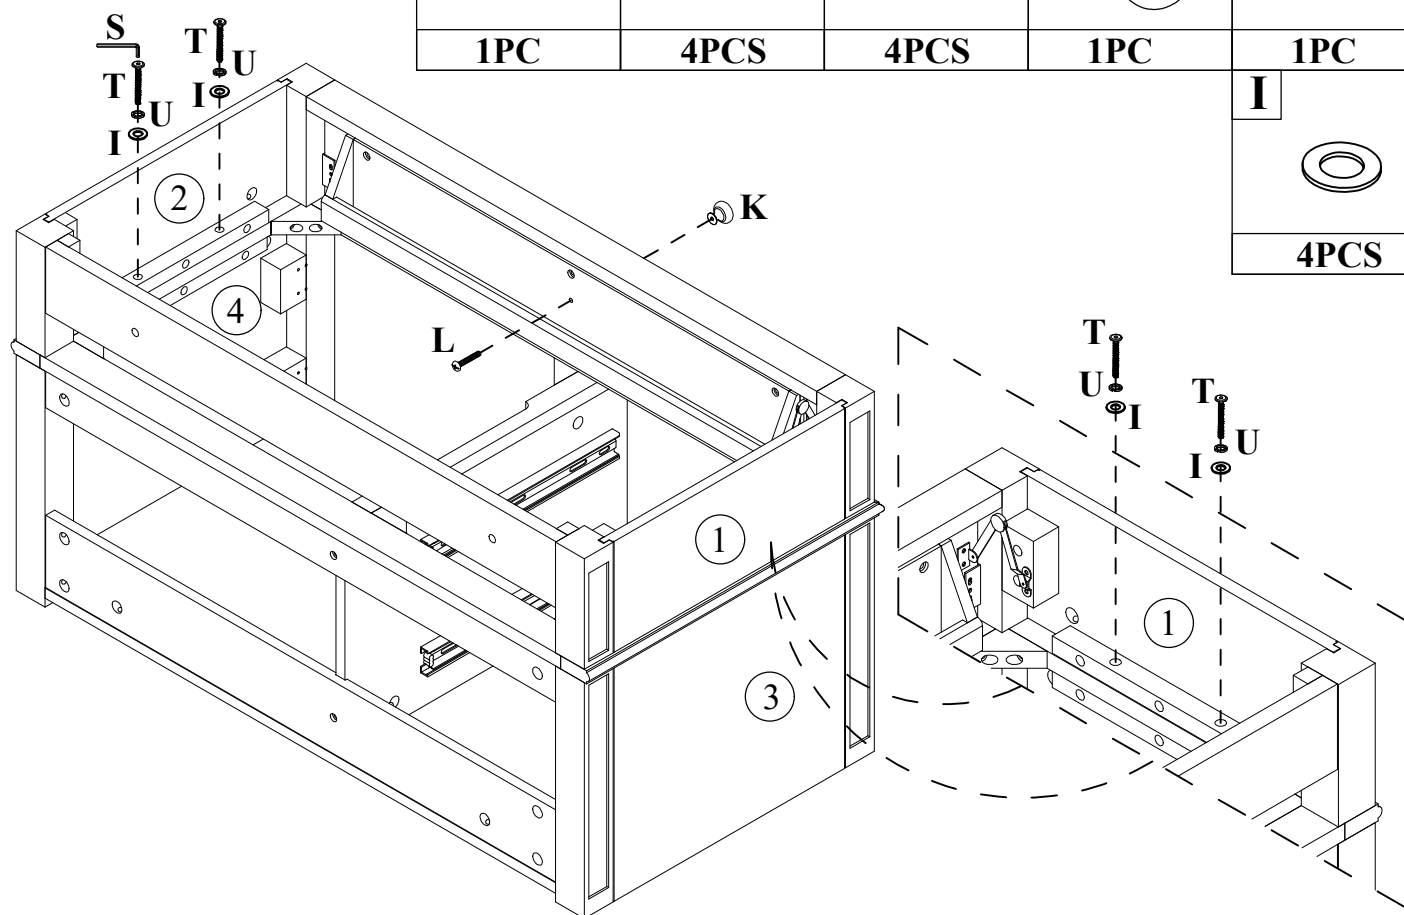


STEP: 13



B	C
	
6PCS	6PCS

STEP: 14

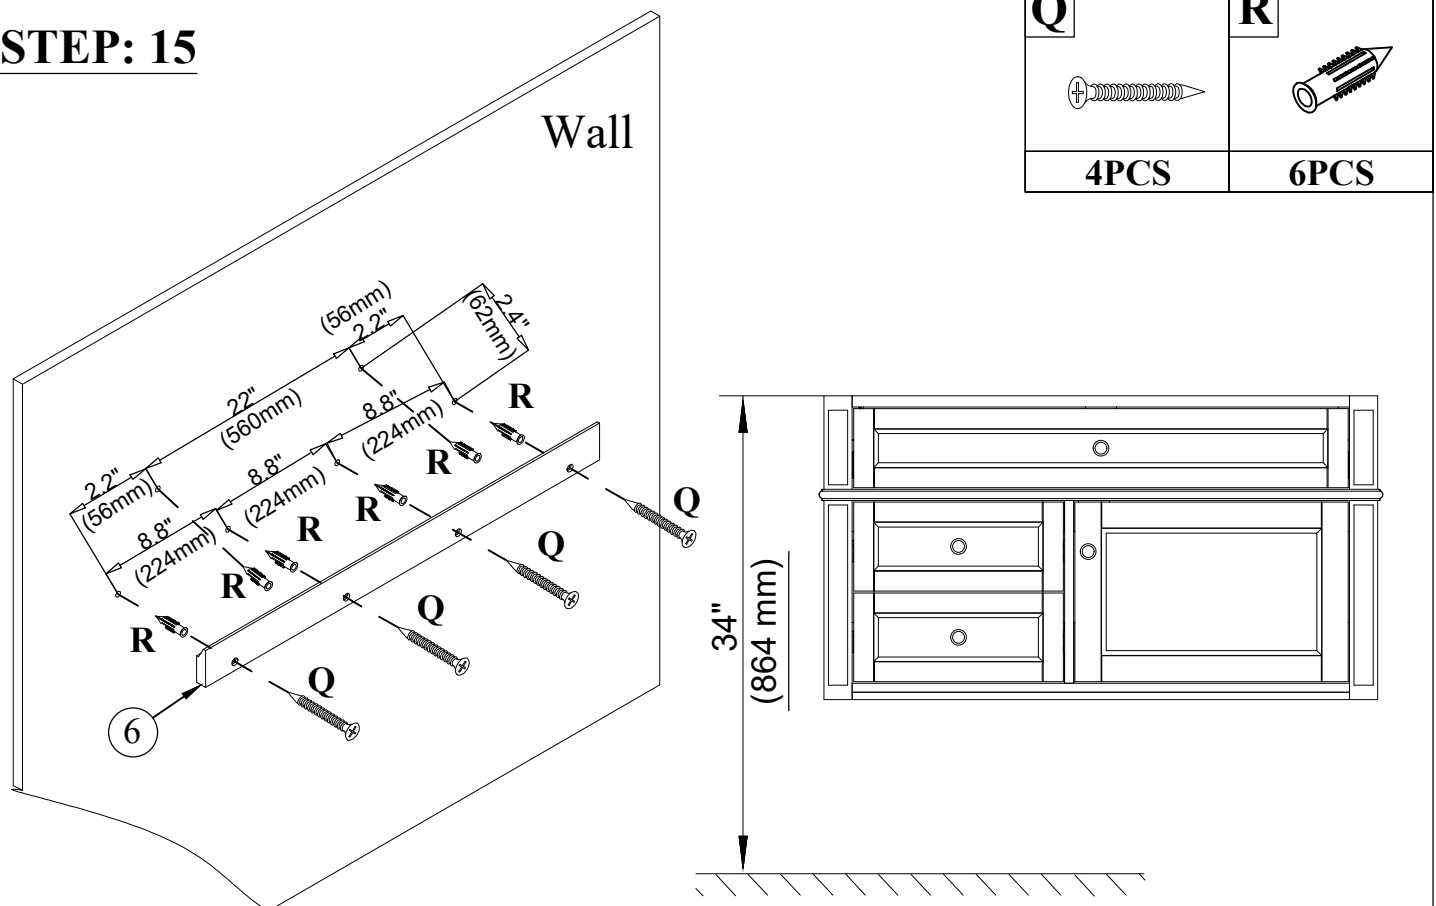


S	T	U	K	L
				
1PC	4PCS	4PCS	1PC	1PC

I

4PCS

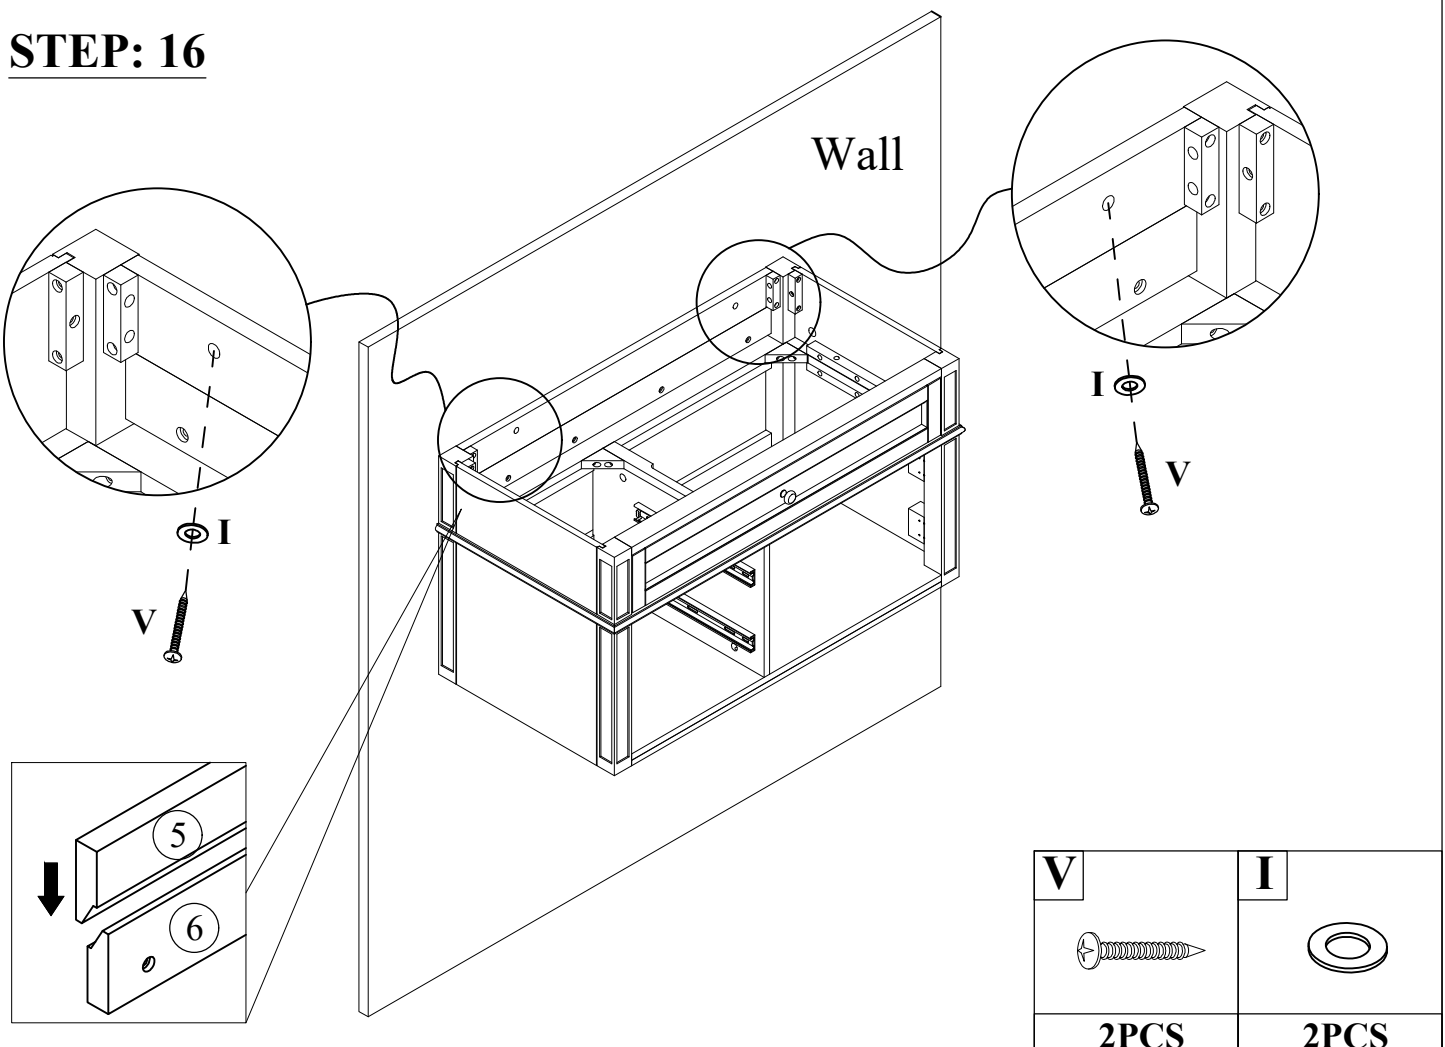
STEP: 15



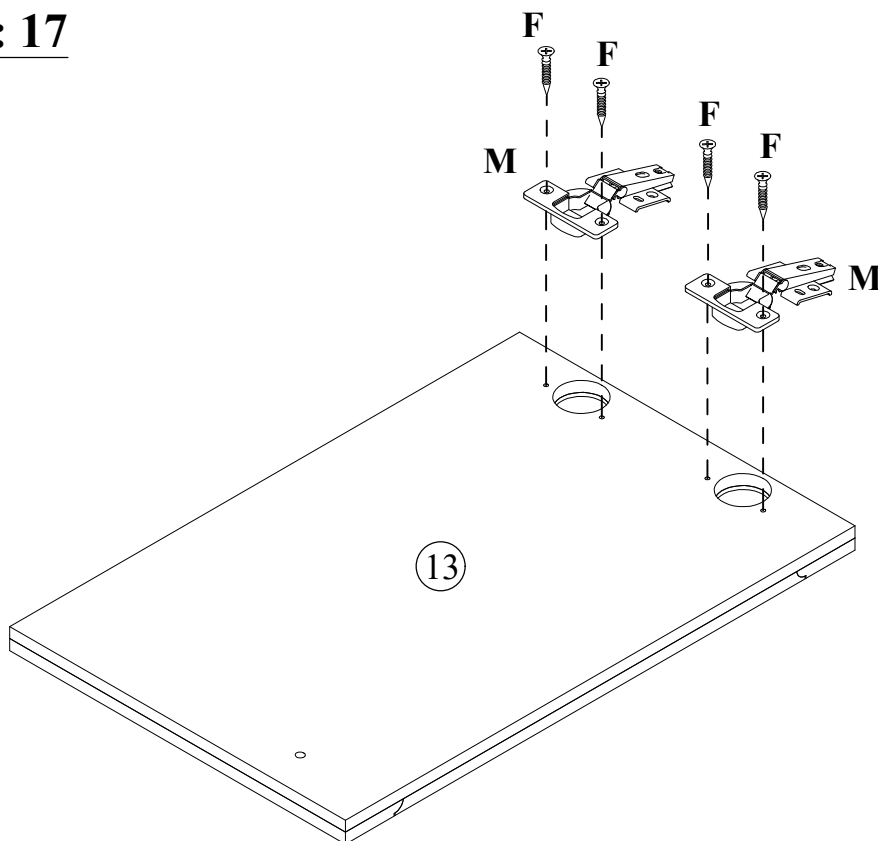
Draw the spacing between the walls and the No.6, punch holes in the wall, and fix the No.6 to the wall with screws.


Note: Appropriate distance from the top of sink to the ground is 34".

STEP: 16

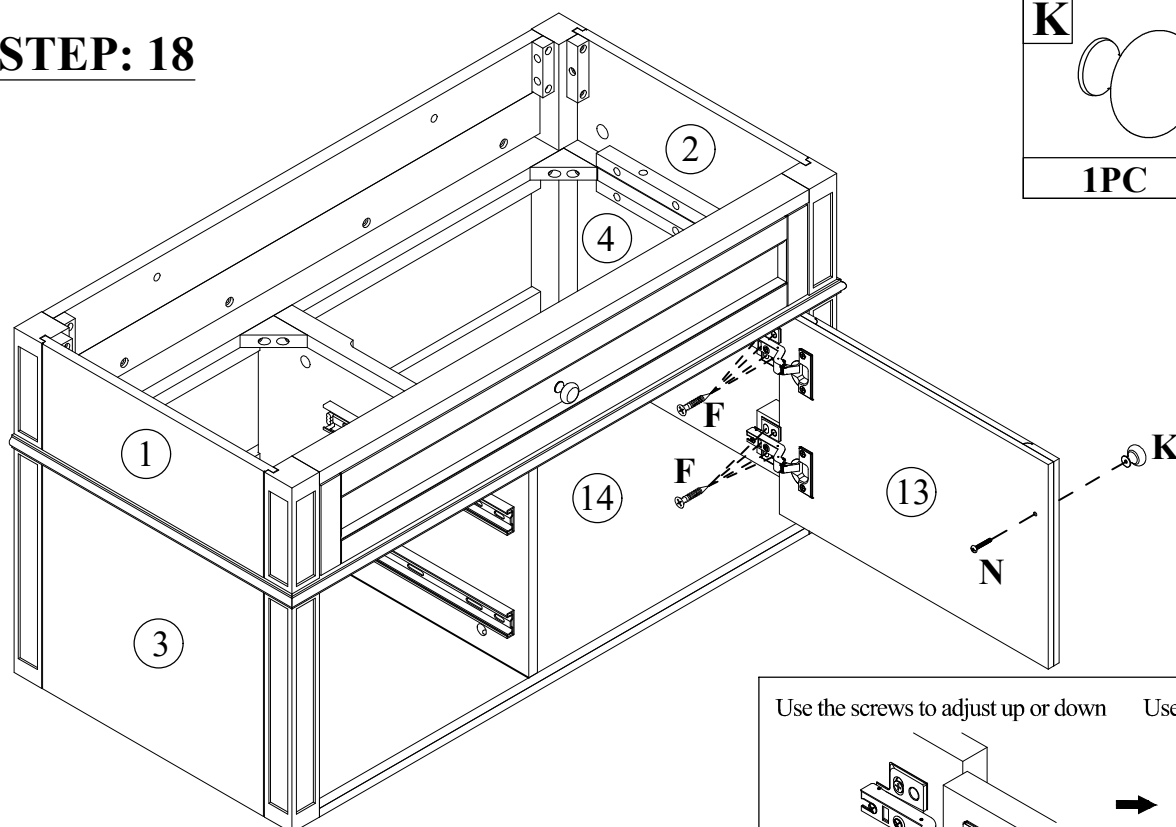




STEP: 17



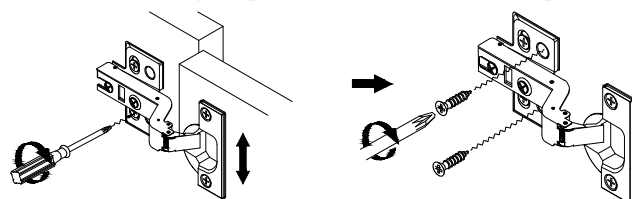
M	F
	
2PCS	4PCS

STEP: 18

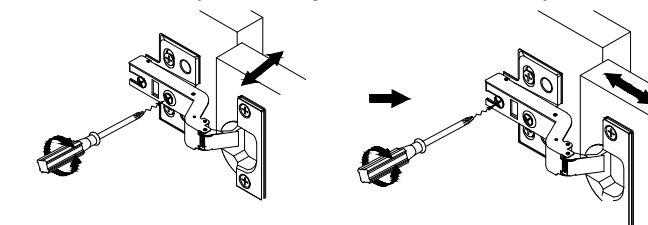


K	N
	
1PC	1PC
	F
	
	8PCS



Use the screws to adjust up or down Use the screws to permanent

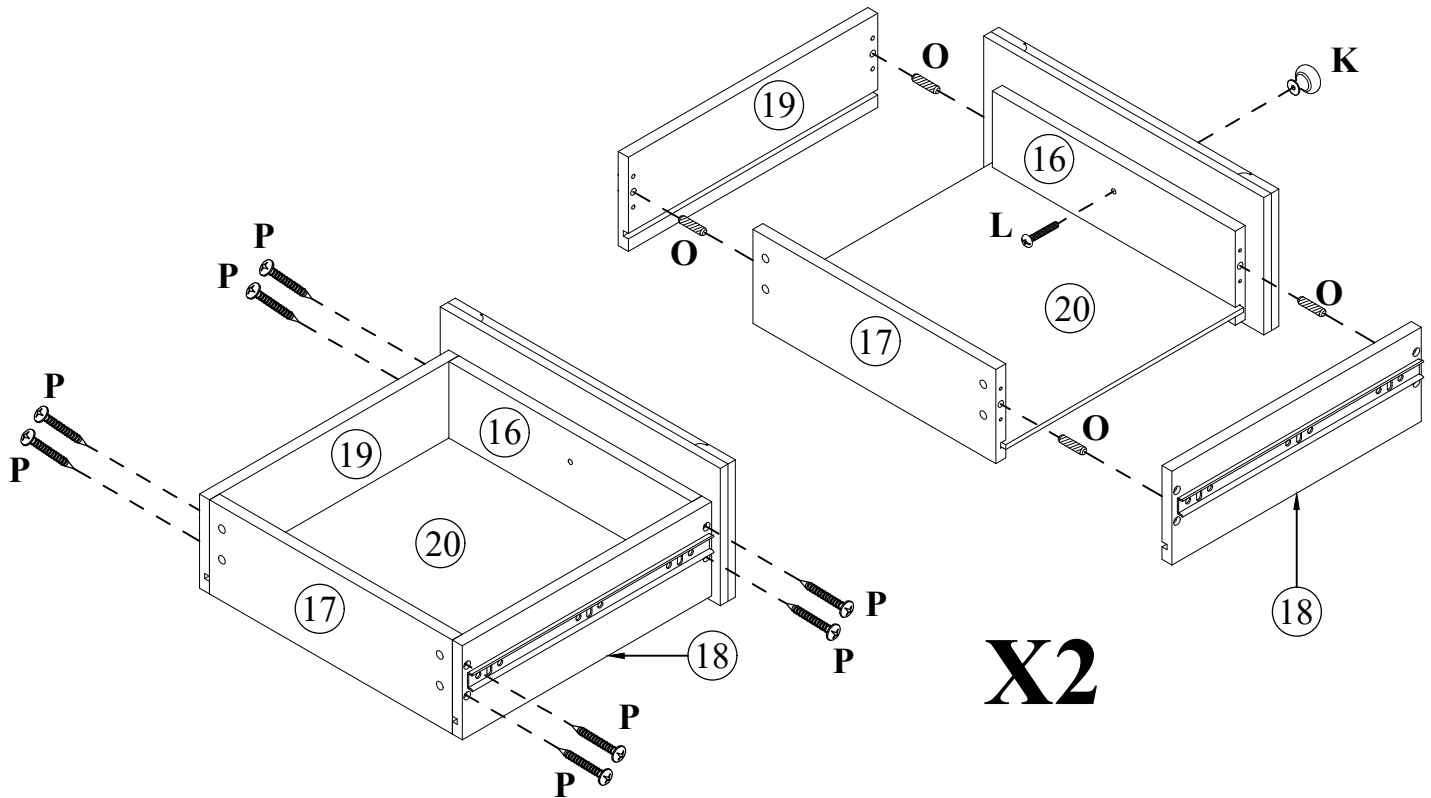


Use the screws to adjust left or right Use the screws to adjust in or out

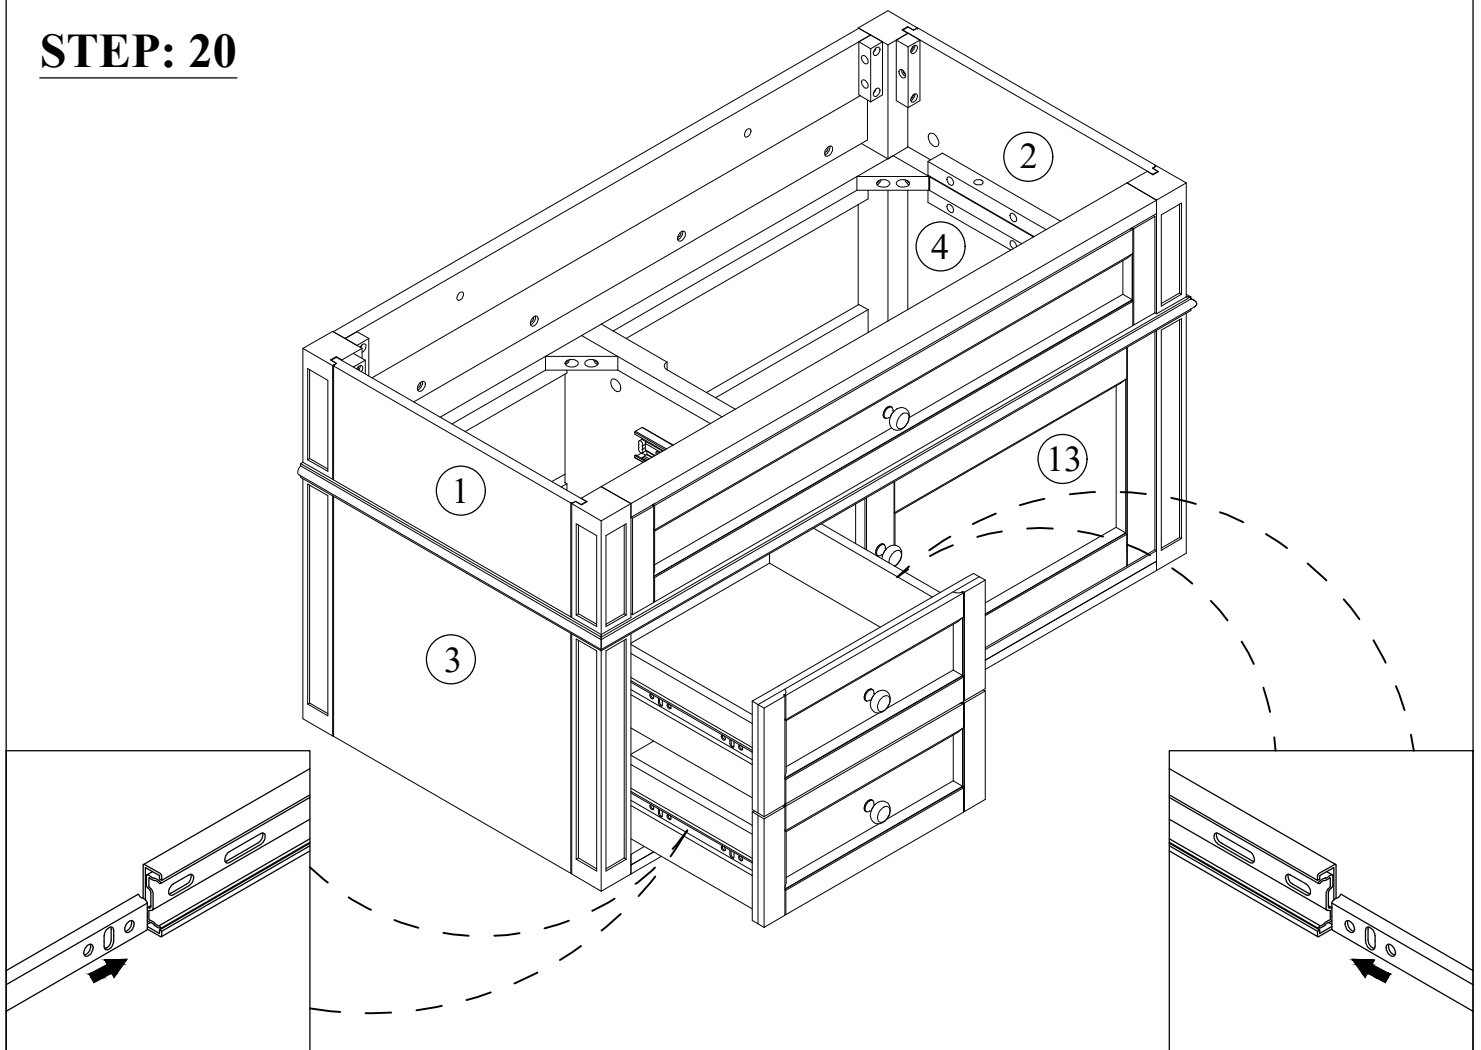


STEP: 19

P	O	L	K
			
16PCS	8PCS	2PCS	2PCS

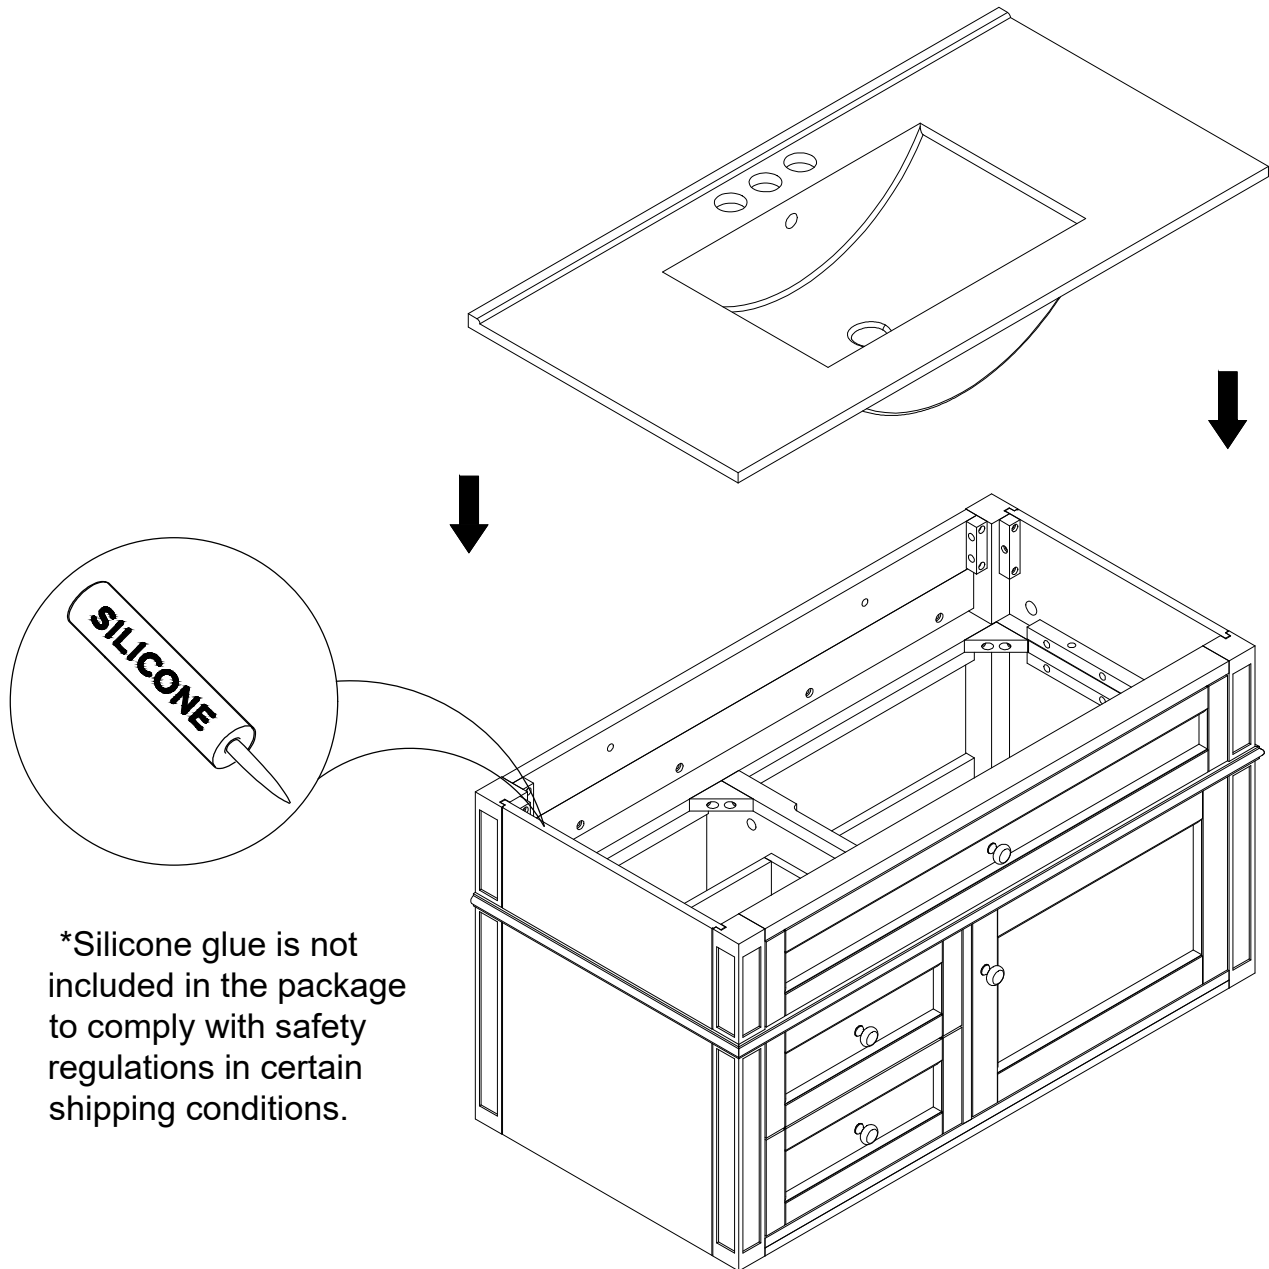


STEP: 20



STEP: 21

Install the sink on the cabinet with glue.
Let stand for 24 hours



*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 22

