RYVYR™

INSTALLATION INSTRUCTIONS


BAMBU™

VANITY


V-BAMBU-30DB | V-BAMBU-36DB

THANK YOU FOR CHOOSING RYVYR

Please take a few minutes to review this manual before you start installation. If you encounter any installation problems, please don't hesitate to contact us. Before you begin, please observe all local building codes. Unpack the new product and inspect for damage. Please ensure the finished wall is straight and plumb and the floor is flat and perpendicular to the finished wall.

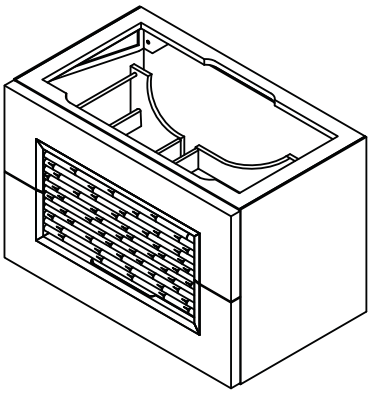

SUGGESTED TOOLS AND MATERIALS



Phillips Screwdriver



Level



Drill




Tape Measure



Safety Glasses

ROUGH-IN DIMENSIONS

Model #	Width
V-BAMBU-30DE	x = 30" y= [762mm]
V-BAMBU-36DE	x = 36" y= [914mm]

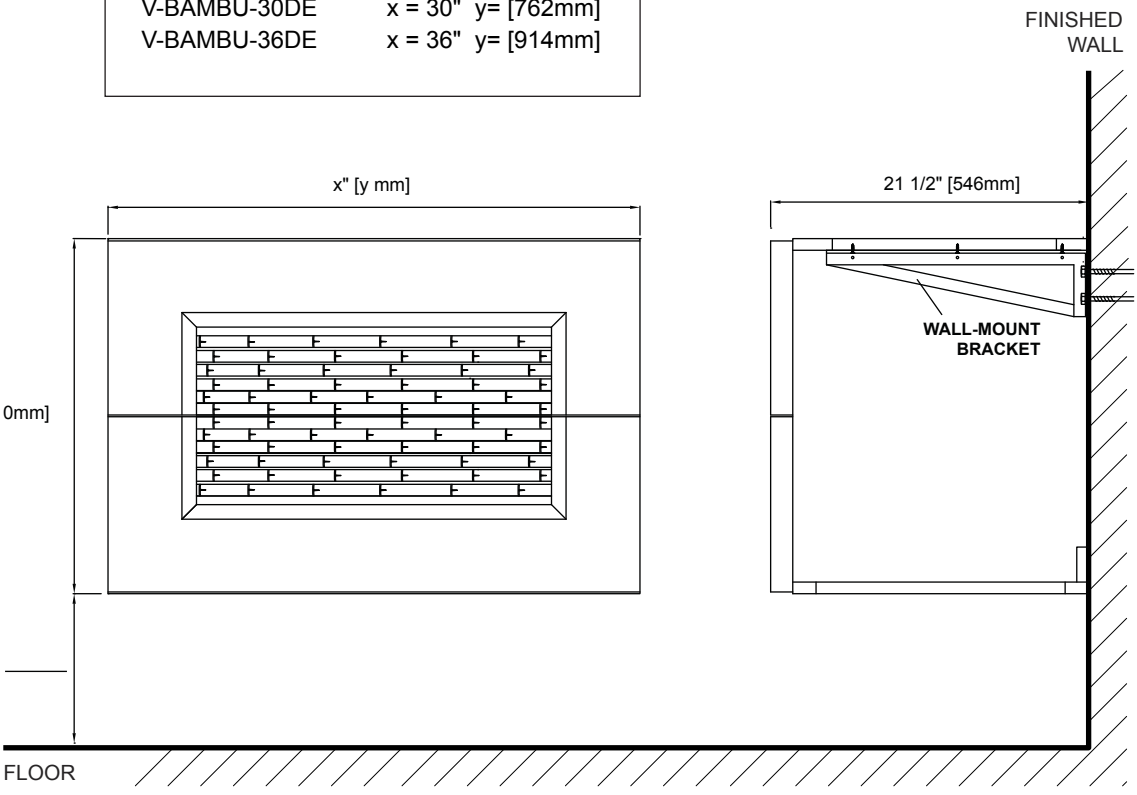


Consider the thickness of the sink top, or vessel top with vessel, when determining the height to install your vanity.


Common finished height to top, used on floor mounted vanities, is 34".

06.2015

WALL PREPARATION

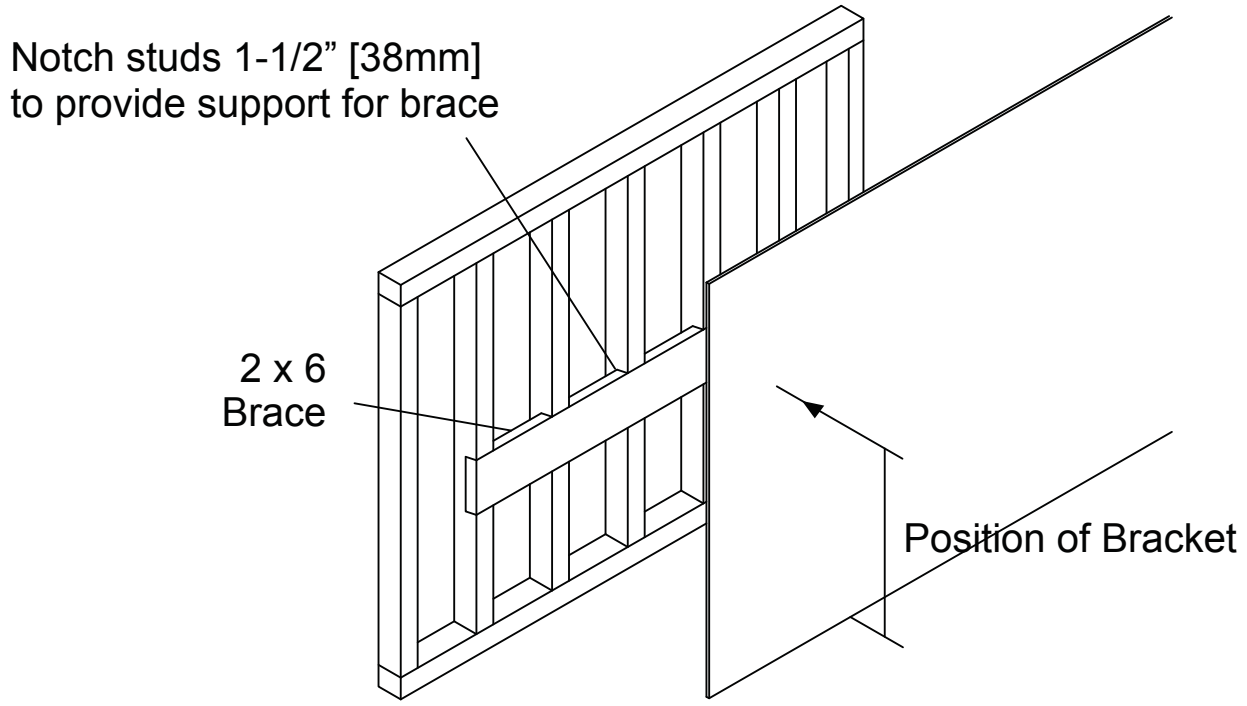


REMOVE WOOD SUPPORTS

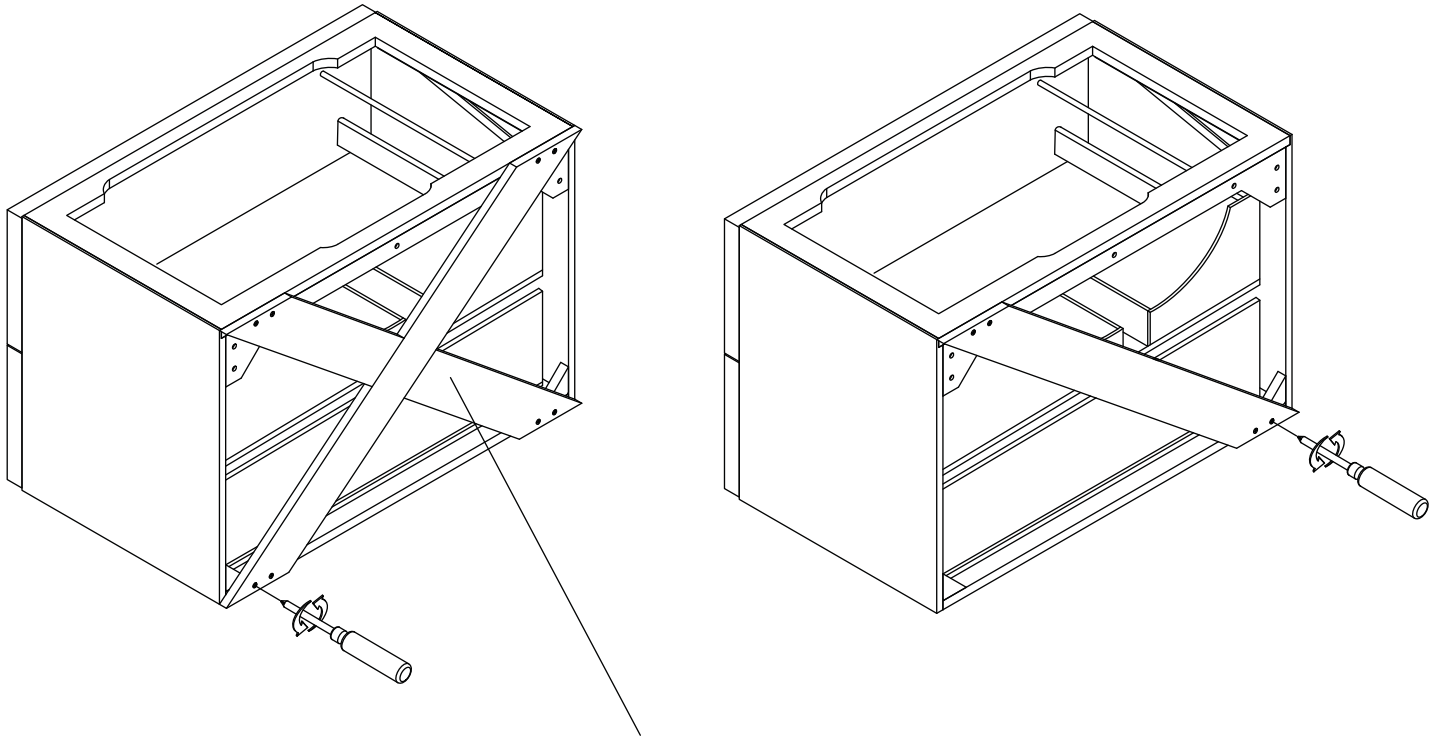

10.2014

INSTALLATION INSTRUCTIONS

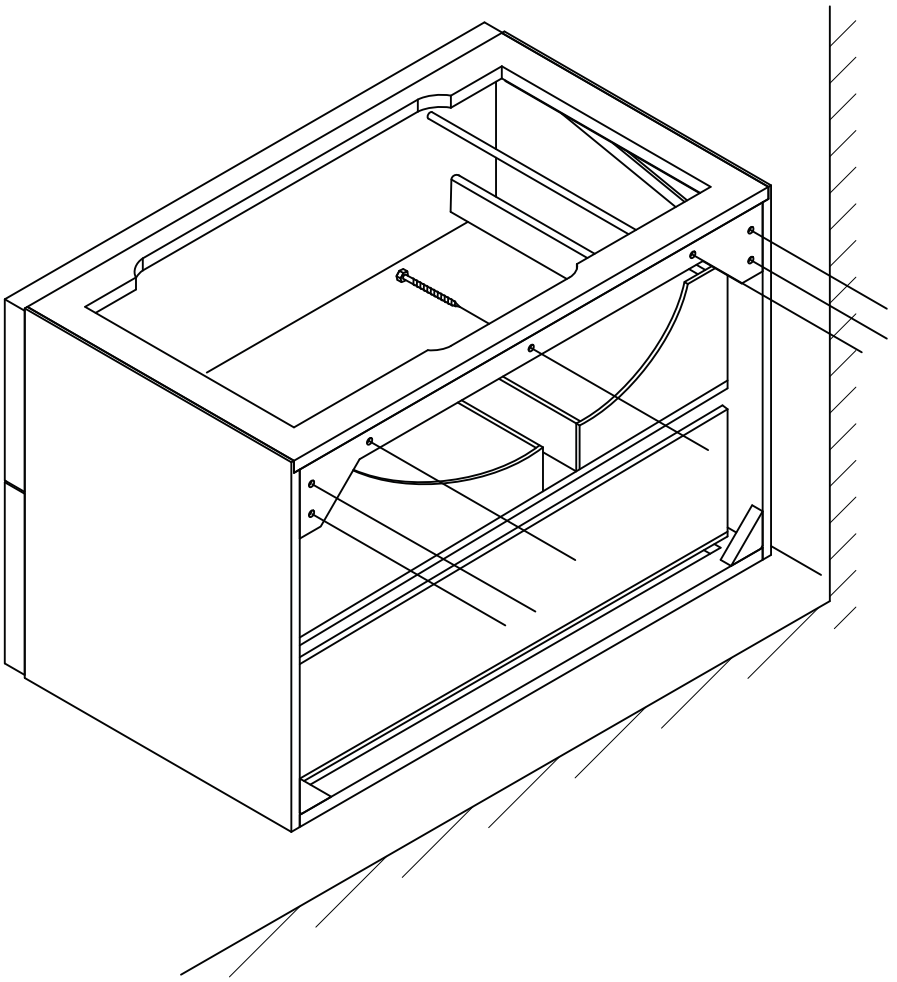


- Installation requires 2 people.
- Position the vanity against the finished wall.
- With the screws provided, mount the mounting brackets onto the 2 x 6 brace.

CARE AND CLEANING


- To maintain the beauty of the finish, avoid placing the furniture in direct sunlight, as sunlight causes fading. Also avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents, and air conditioning units. Avoid placing furniture directly under windows.
- Dust the vanity frequently with a clean, soft, dry, lint-free cloth, as well as polish it on a regular basis. Clean the surface by rubbing in the direction of the grain. Avoid using silicone cleaners and waxes.
- Clean up excess water and spills immediately. Use blotting rather than a wiping motion. Water left over a long period of time will cause white spots in the finish Please note that some chemicals may damage the finish.

ADJUSTMENT

SIDE

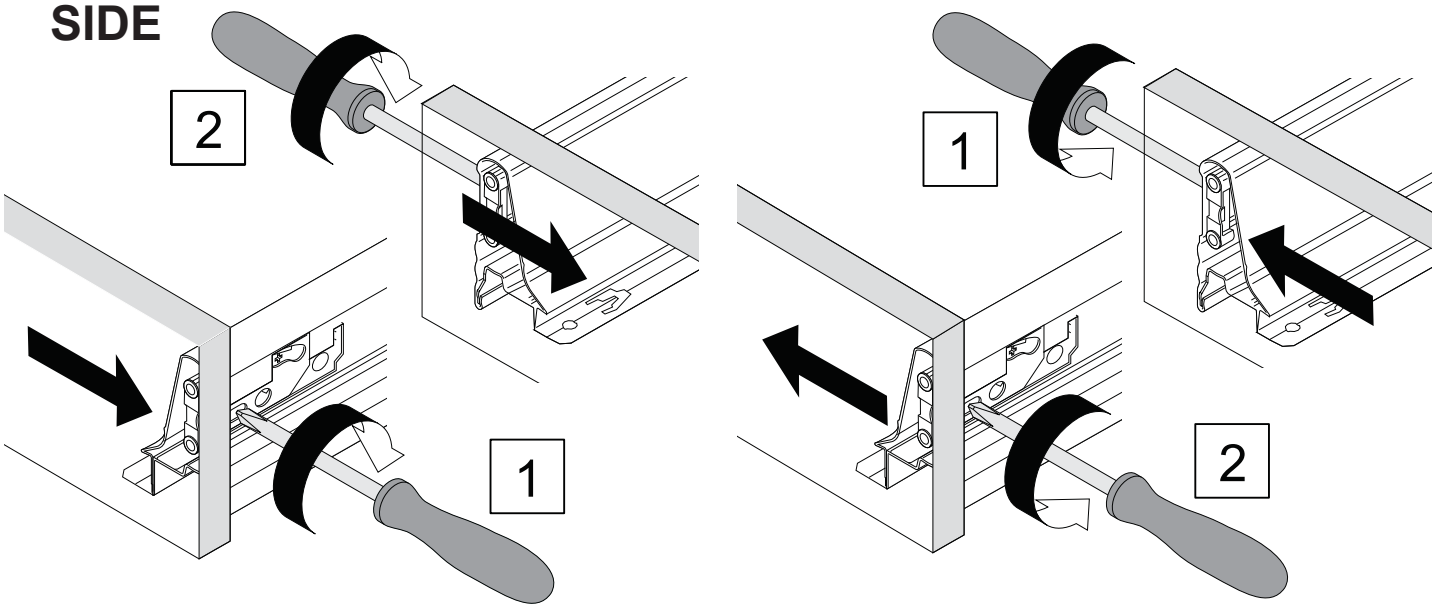

CAM HEIGHT

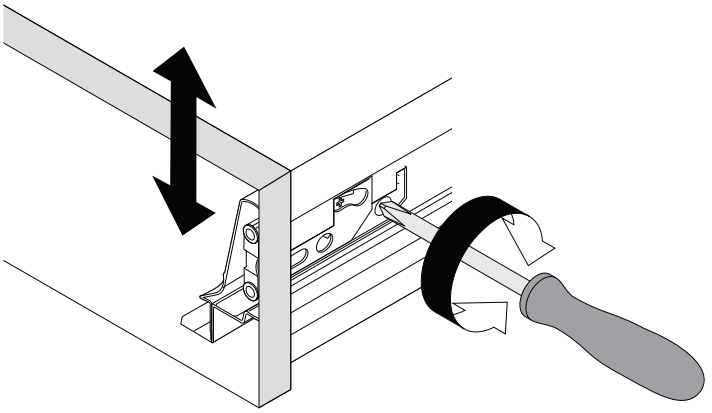

TILT

