
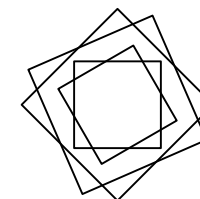


THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

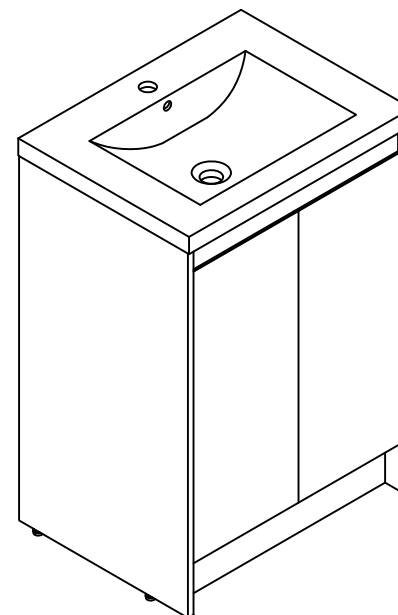

Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 D24


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	44	H	 Bracket (19x19x35mm)	2
B	 Two-in-one connector	24	I	 Hinges(Internal hiding)	4
C	 Two-in-one connector	24	J	 Adjustable feet	4
D	 Wood plug	4	K	 Movable laminate support	4
E	 Plastic anchor(Ø10mm)	2	L	 Anti-collision gasket	4
F	 Screws for fix on the wall	2	M	 Screwdriver	1
G	 Bracket (53x70x44mm)	2			


Recommended tools

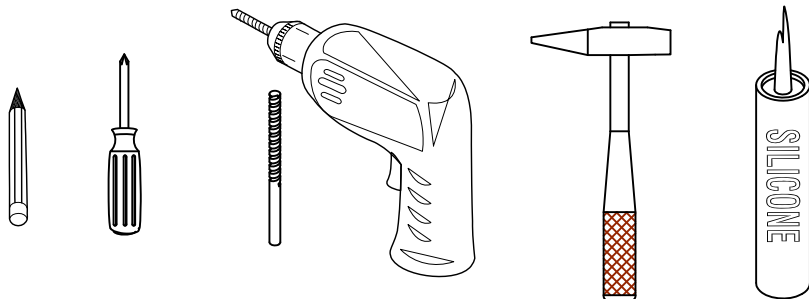


Dimensions

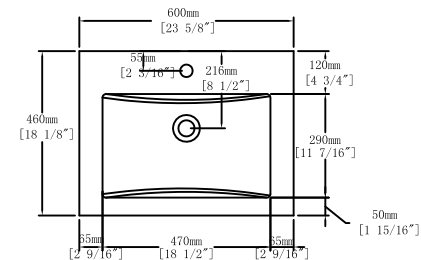

Top View

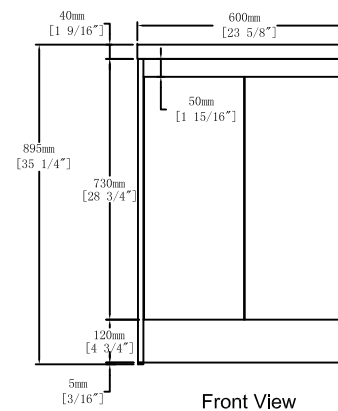

Front View

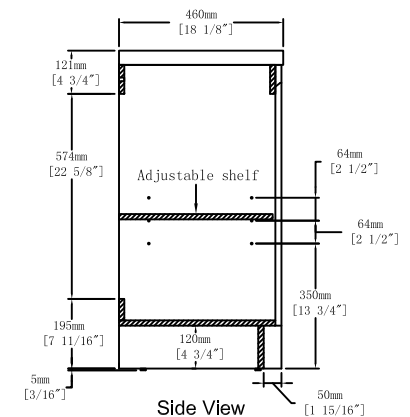

Side View

CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Step 14

Notes:


The installation position can be selected according to the required height.

 x4
K


 K x 4

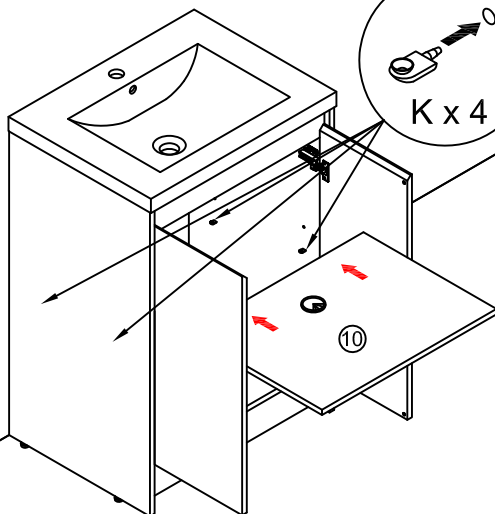


Dimensions

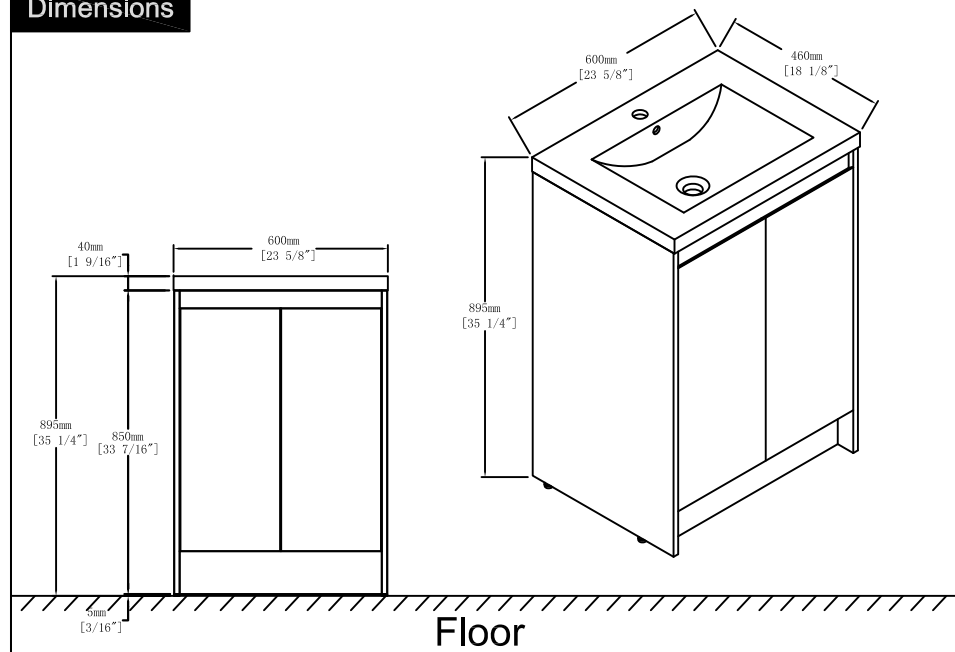

Finished


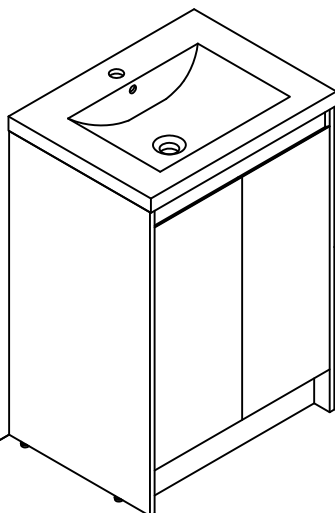


Components

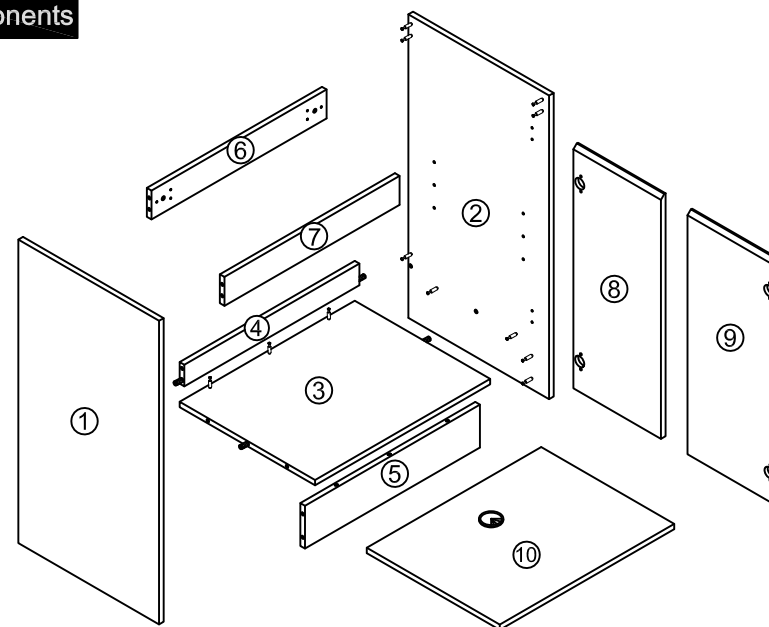


Step 1

-  x3
-  x3
-  M


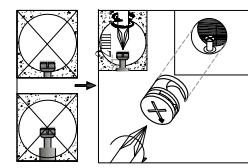
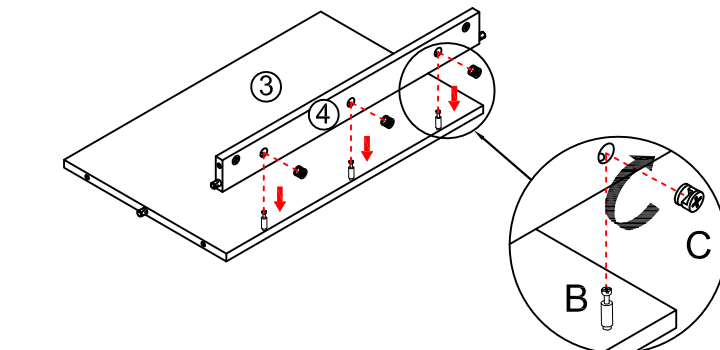


Notes: Screw installation depth as shown

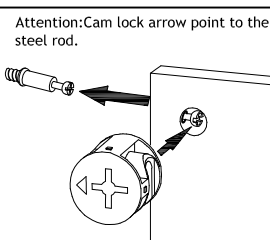



Step 2

-  x3
-  x3
-  M

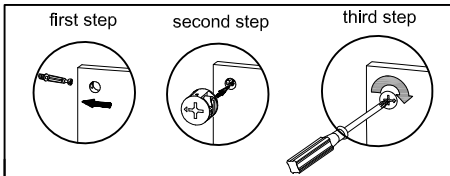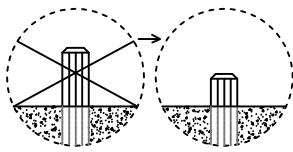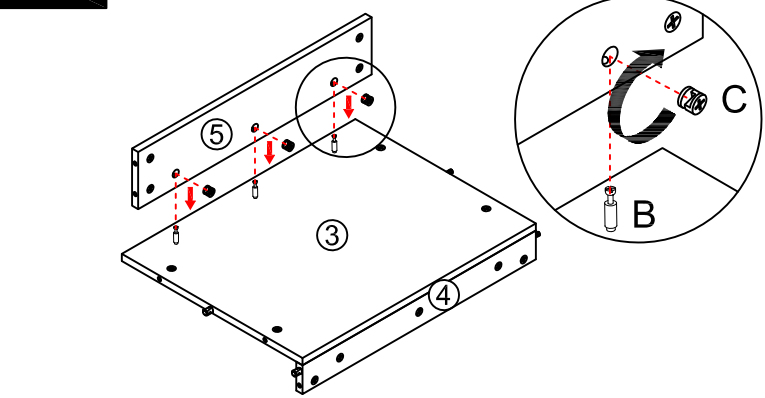






Step 12

-  x2
-  Tool

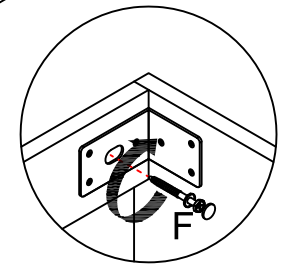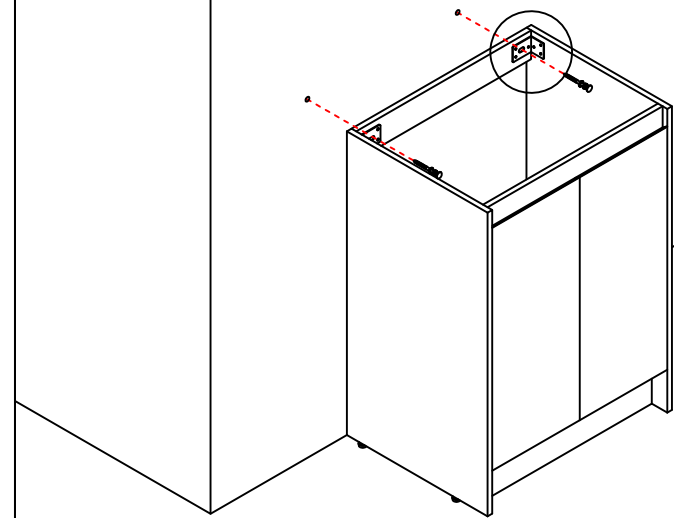


Step 13

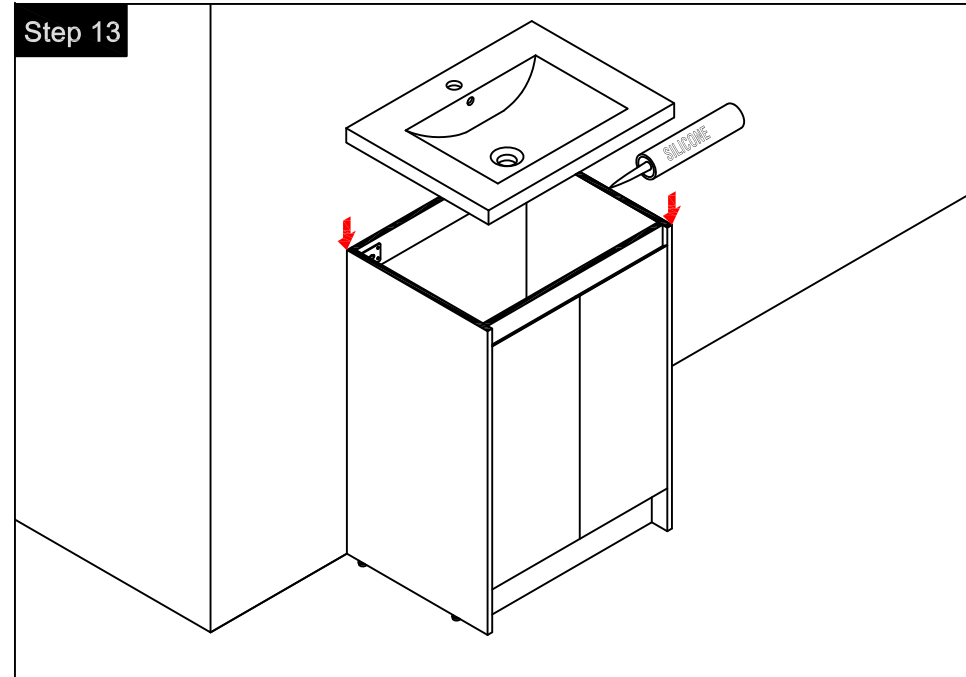


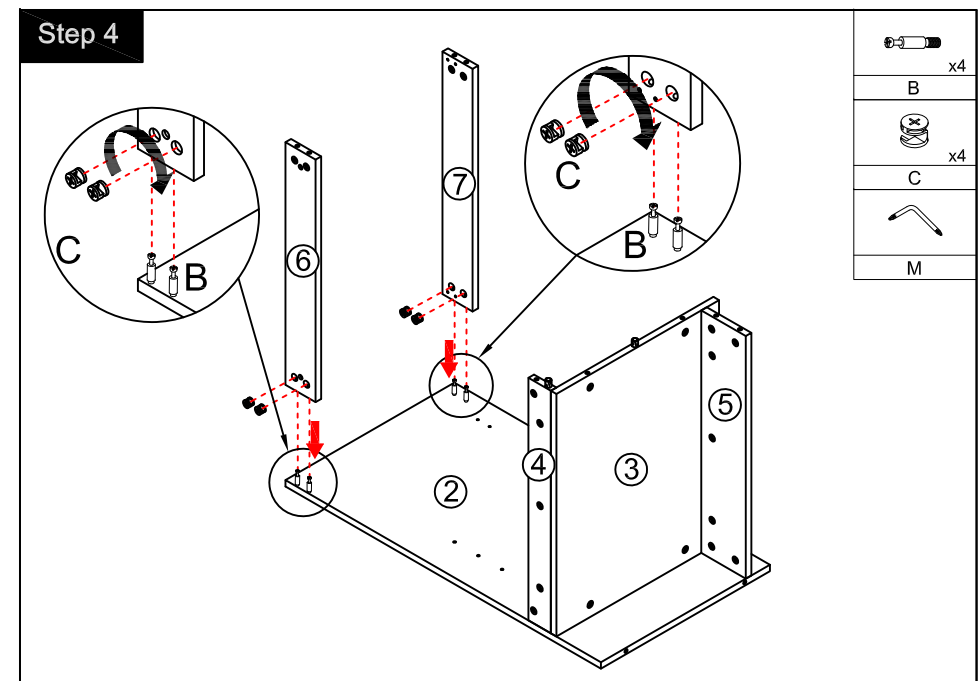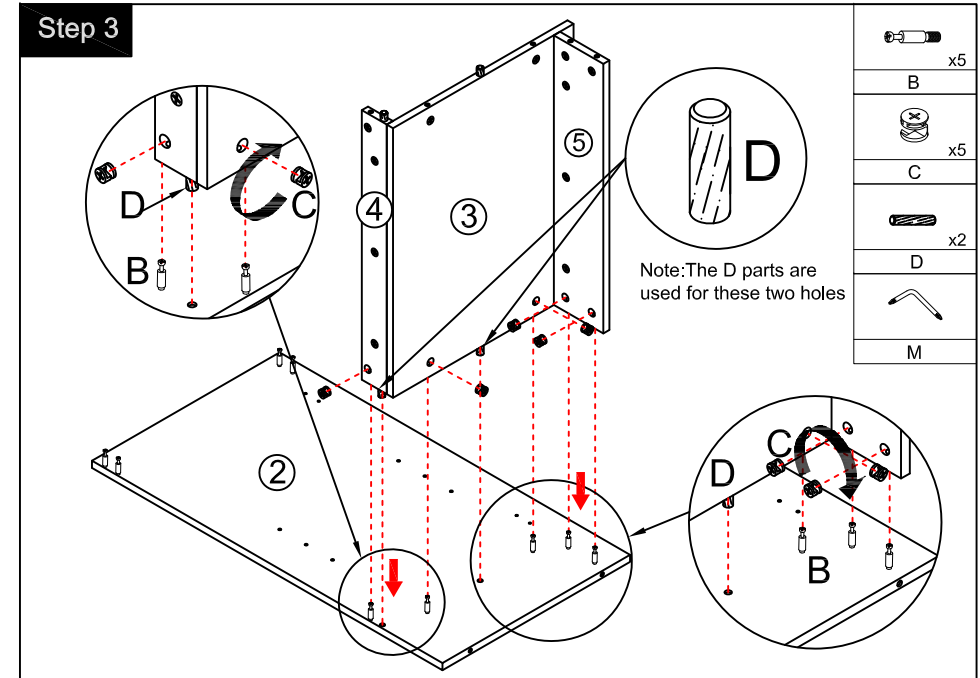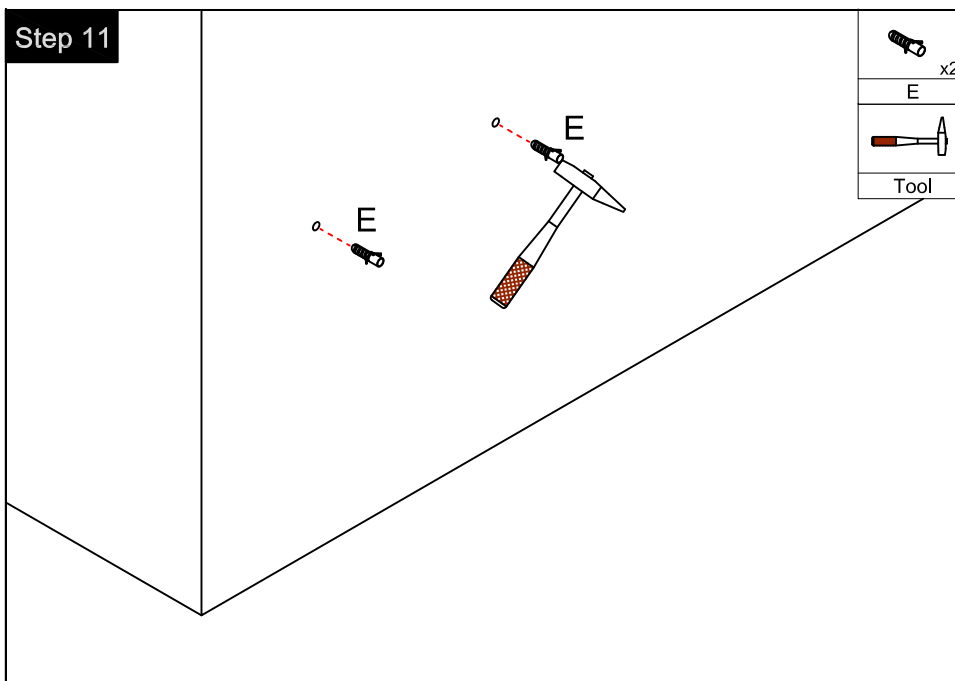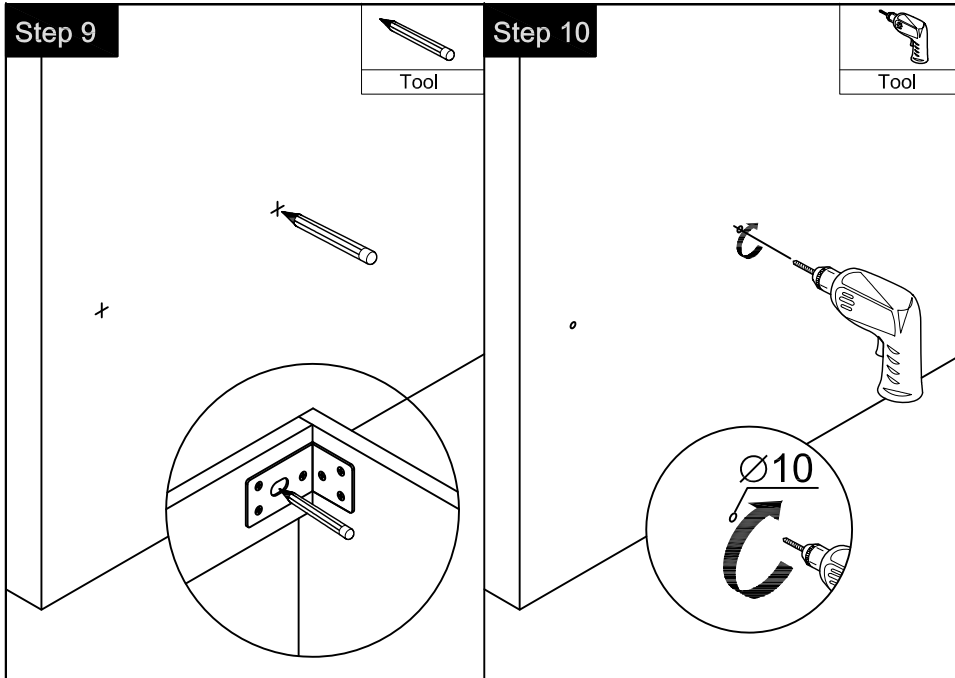


Step 5

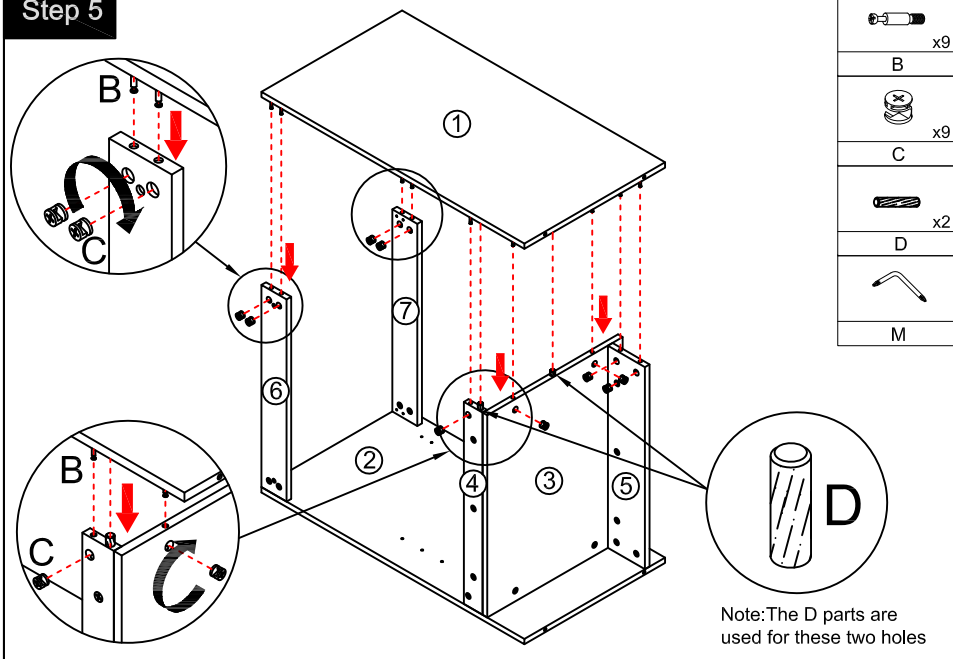


Step 7

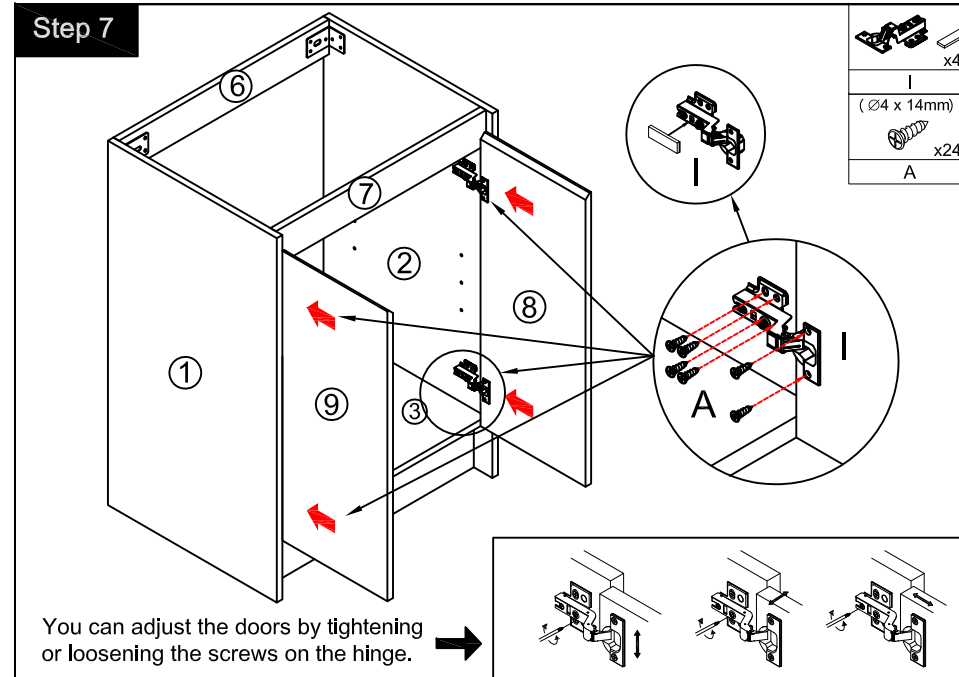

Step 6


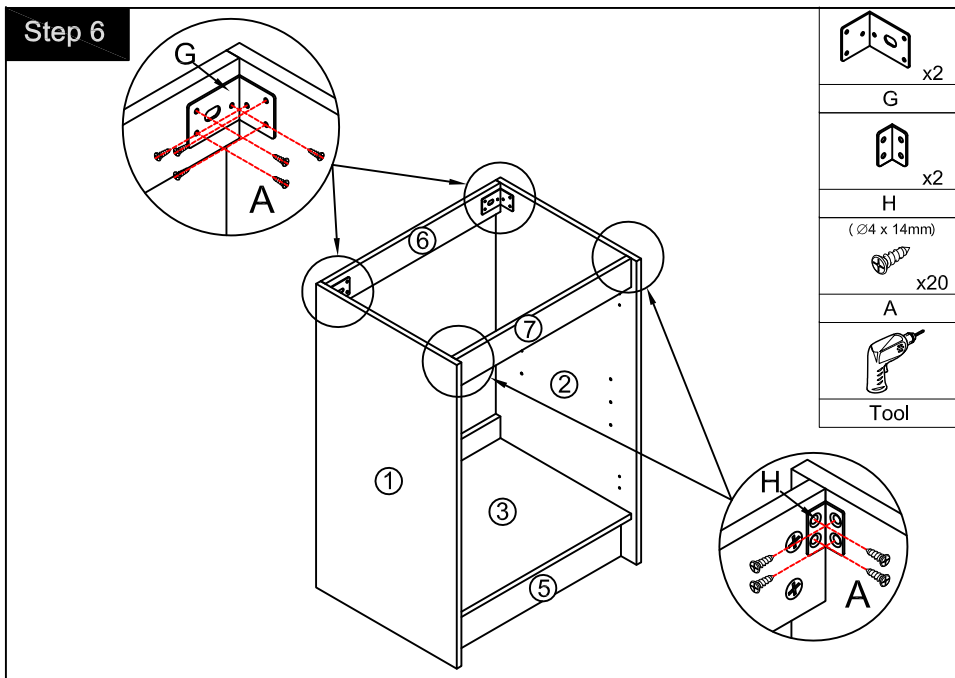


Step 8

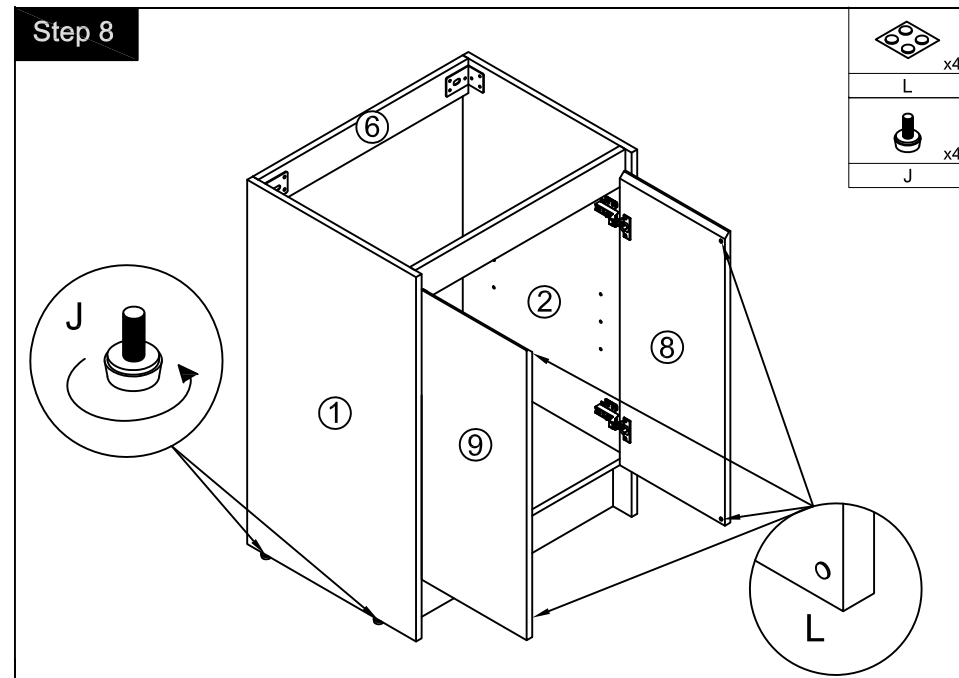

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

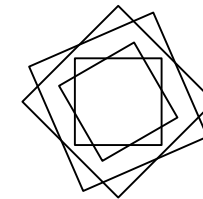
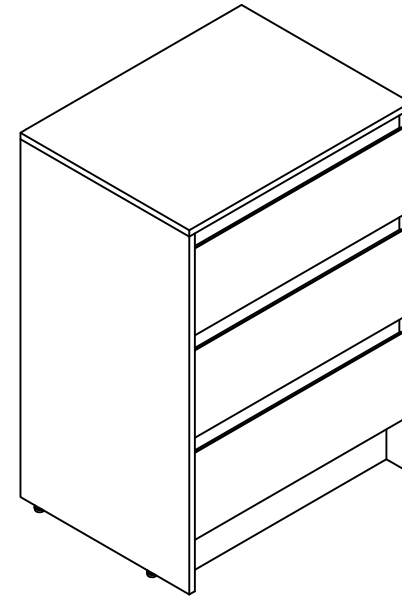


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 E24B


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	30	G	 Screws Ø4x20mm	12
B	 Two-in-one connector	64	H	 Adjustable feet	4
C	 Two-in-one connector	64	I	 Track	3
D	 Wood plug	8	J	 Anti-collision gasket	12
E	 Plastic anchor(Ø10mm)	2	K	 Screwdriver	1
F	 Screws for fix on the wall	2			


Recommended tools

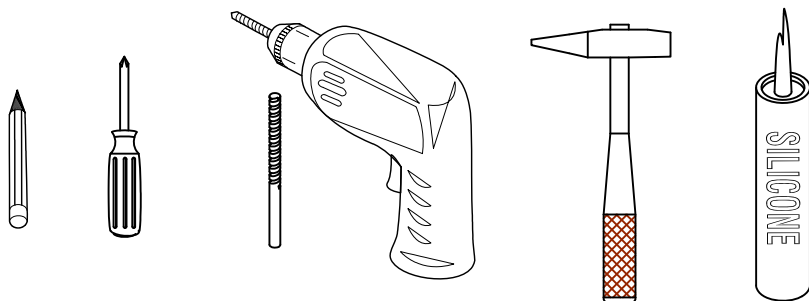


Dimensions

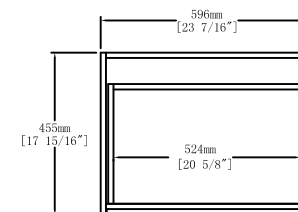

Top View

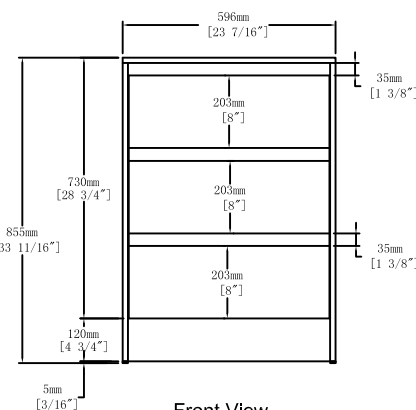

Front View

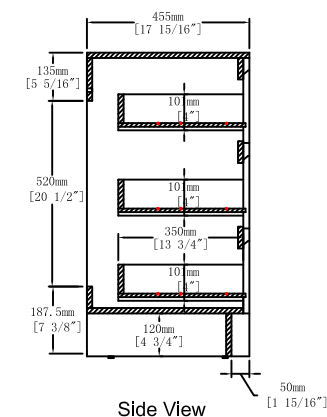


Side View


CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

Finished

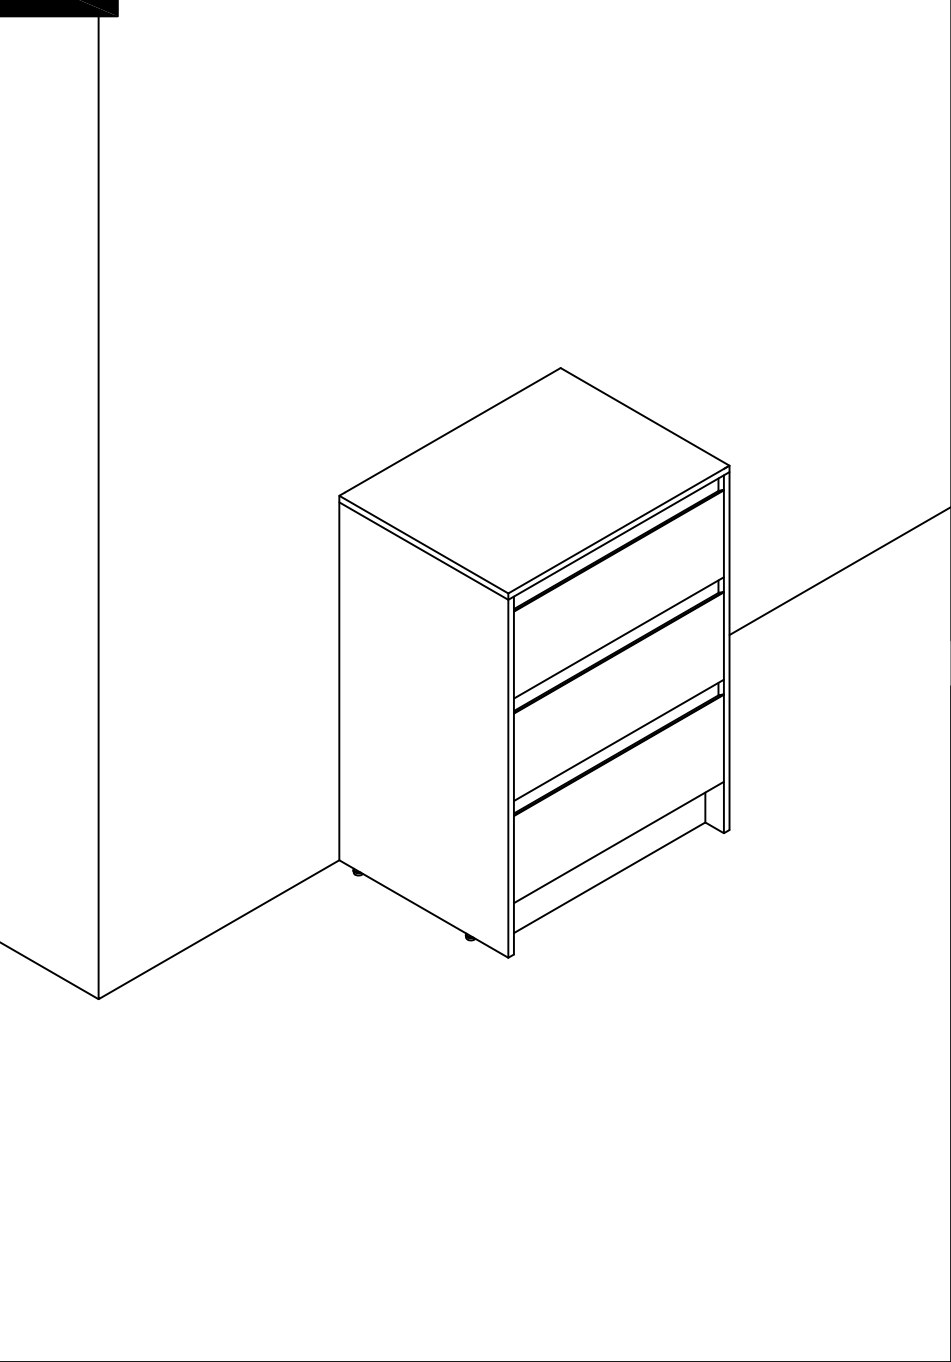


Dimensions

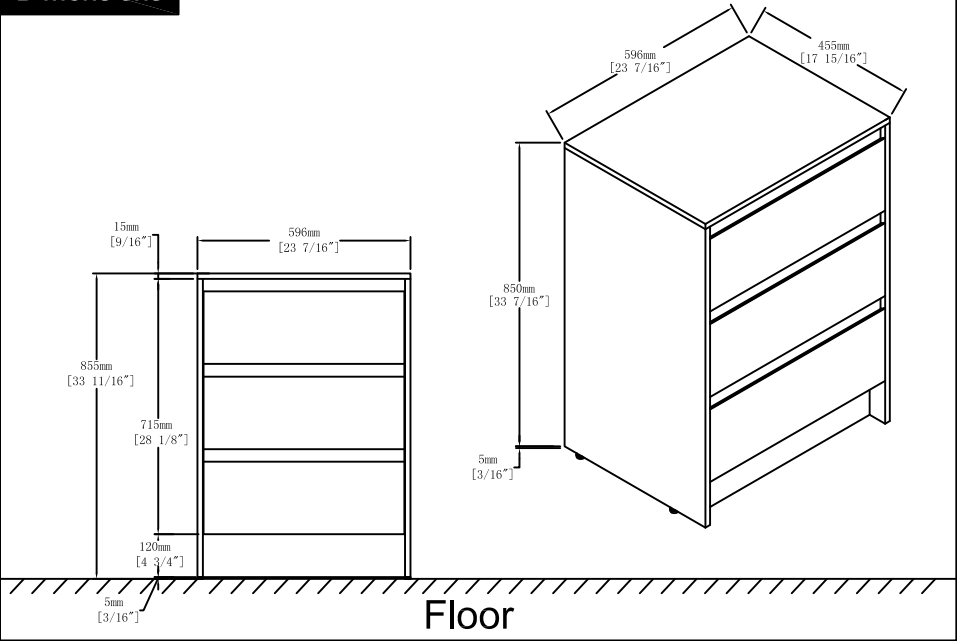




Floor

Components


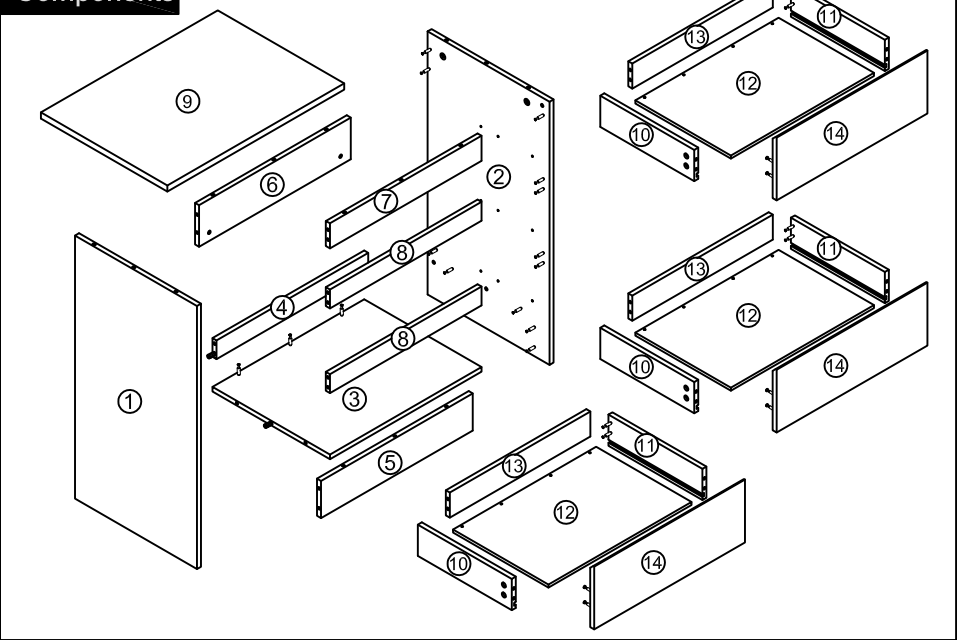


Step 1


Note: Follow the holes positions exactly.

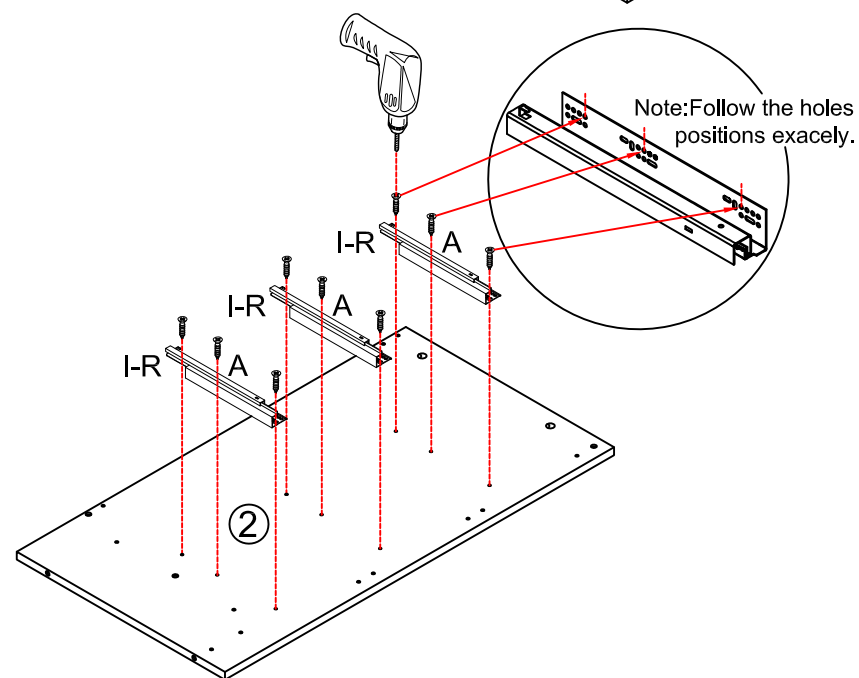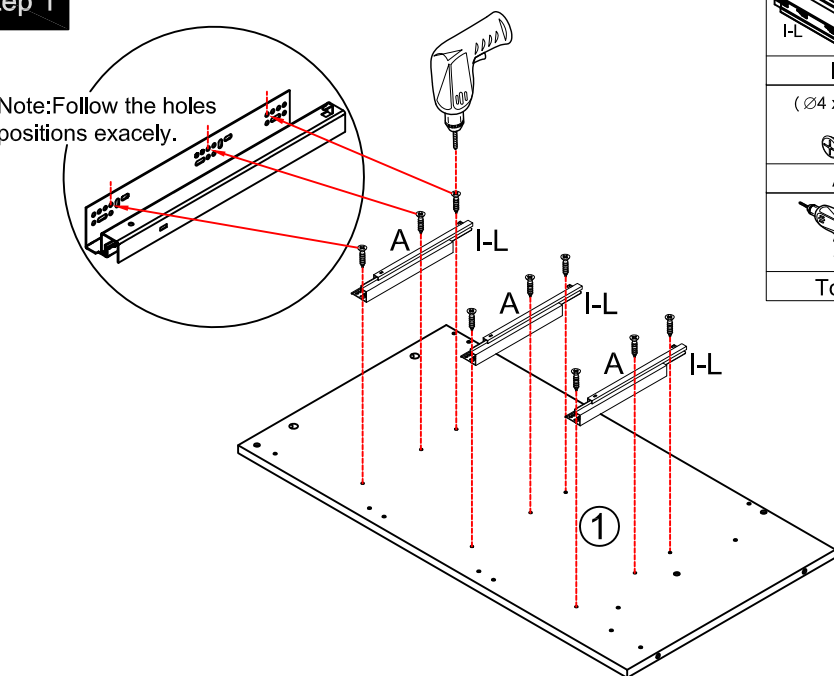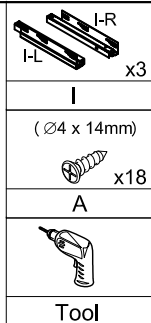


Step 16

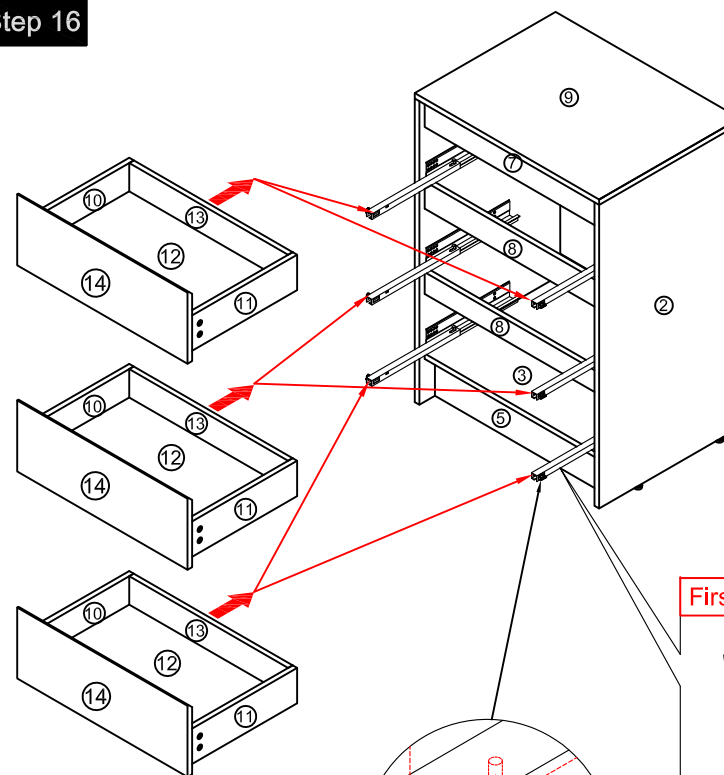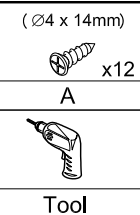



First

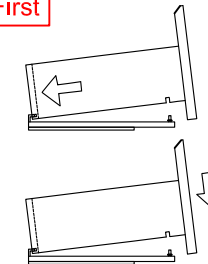

Third step: The bottom of the rail is fixed with screw A.



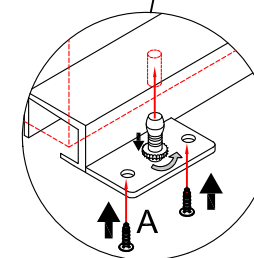


Second step: Tuck the rear holes.




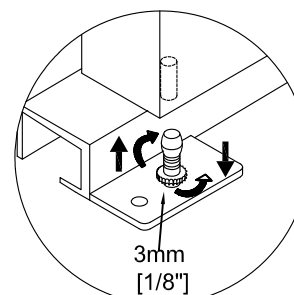
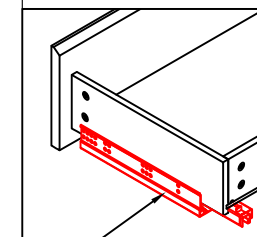


Note: The rails adjust their height 3mm.

Step 15

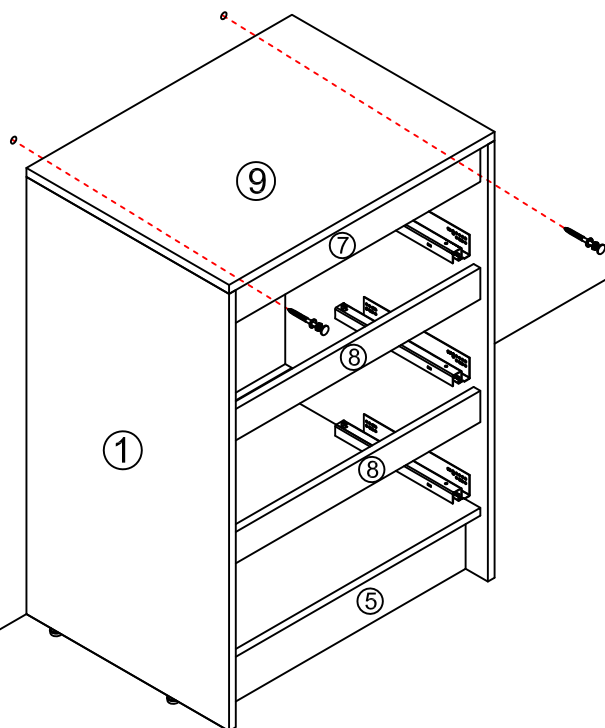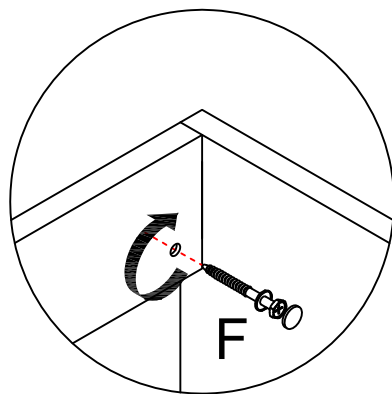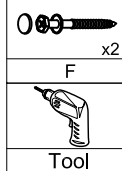


Step 2

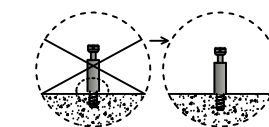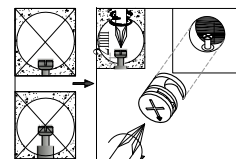
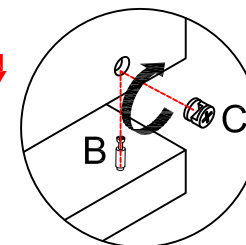
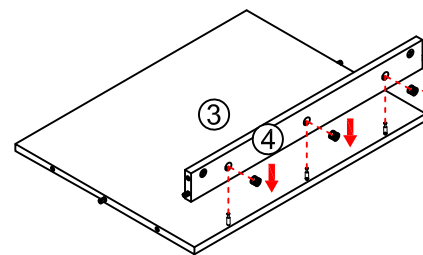
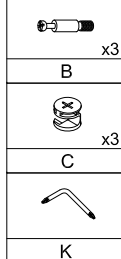


Notes: Screw installation depth as shown

Attention: Cam lock arrow point to the steel rod.

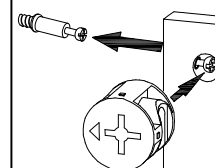



Step 3

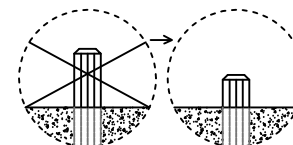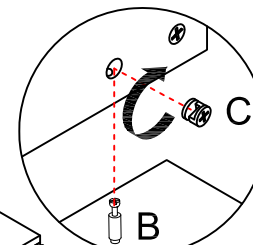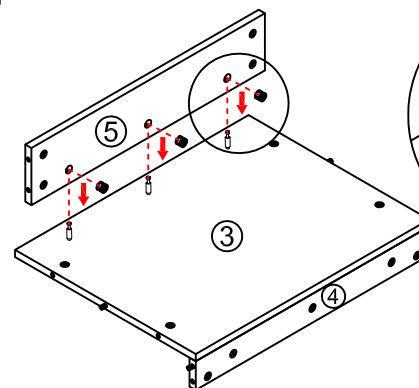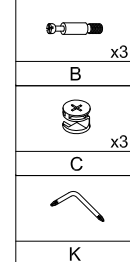


first step

second step

third step




Step 4

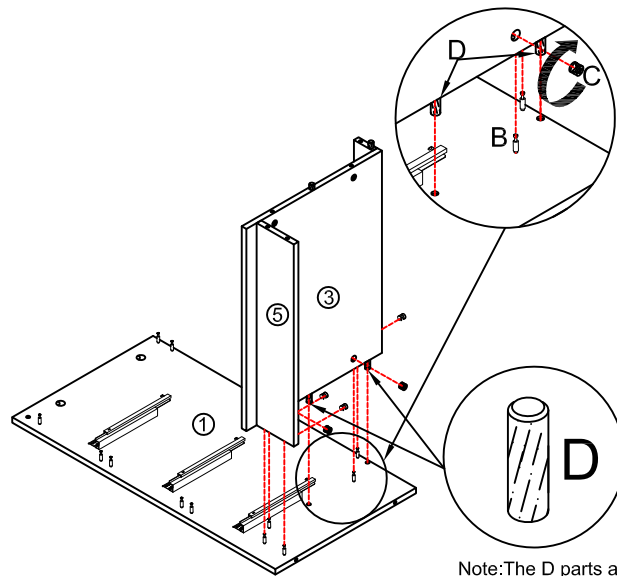

	x5
	x5
	x2


Note: The D parts are used for these two holes

Step 13

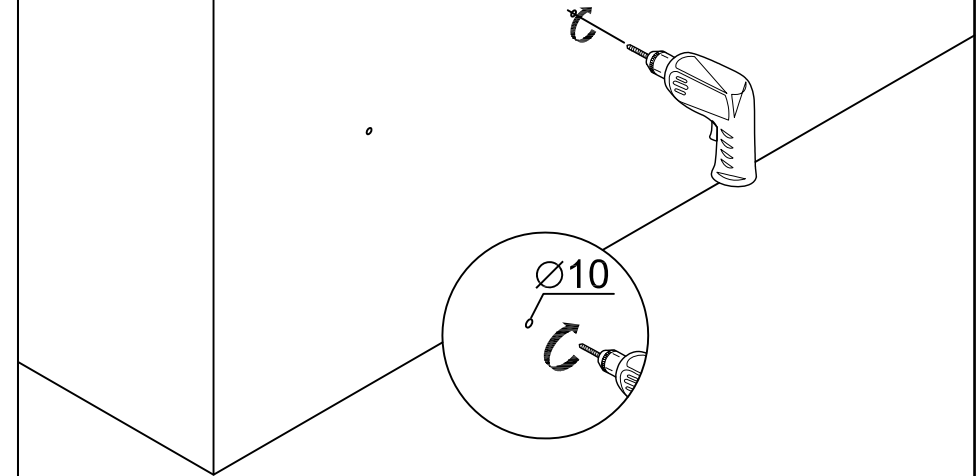

	Tool
--	------


Step 5

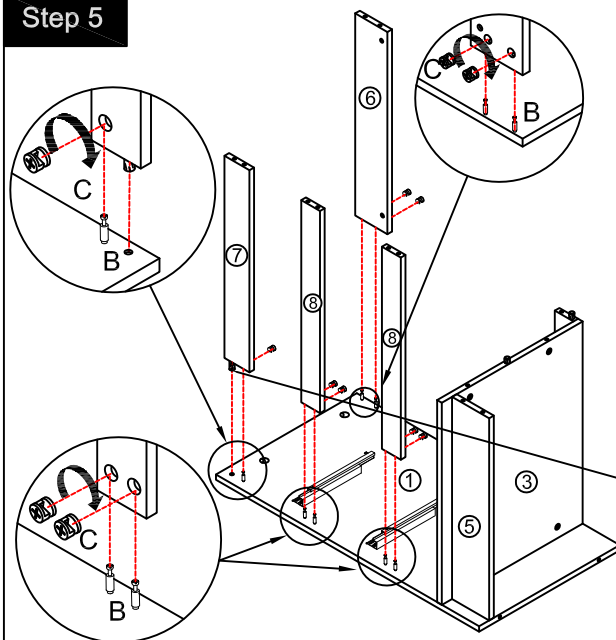

	x7
	x7
	x1



Note: The D parts are used for these this hole

Step 14

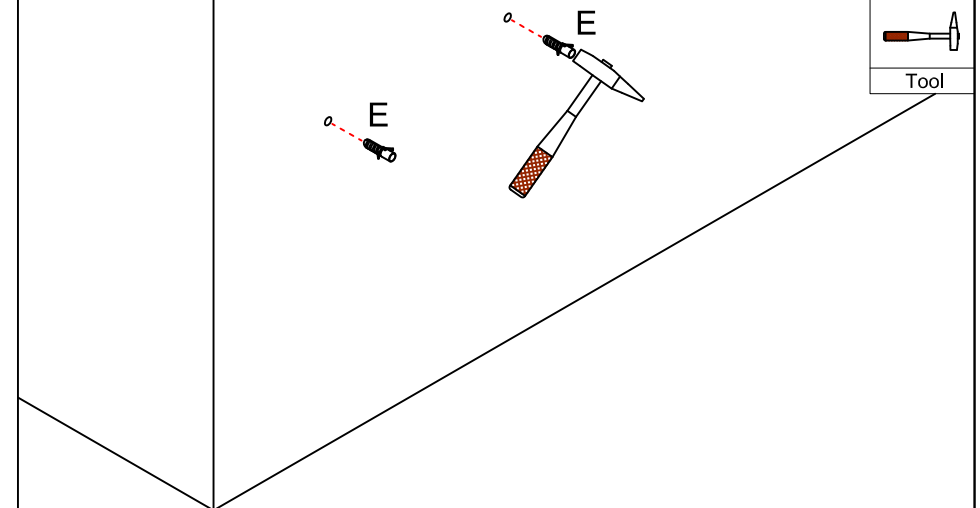



	x2
	Tool

Step 11


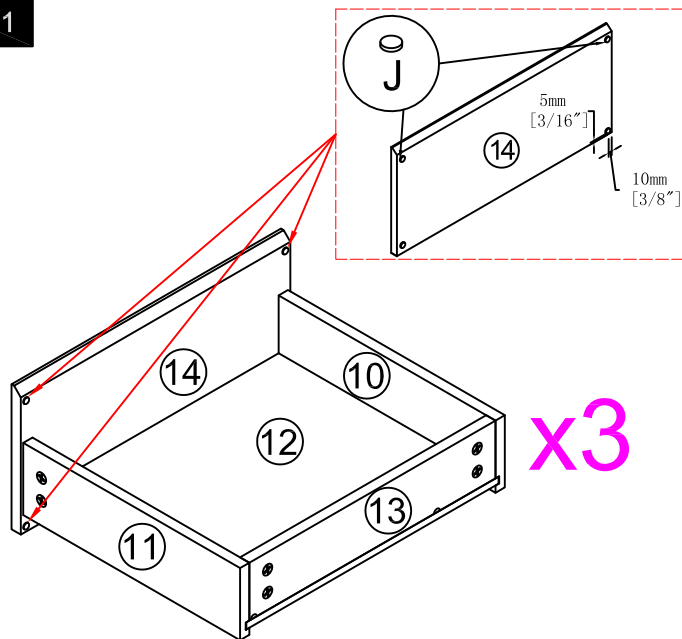


x3

Step 12

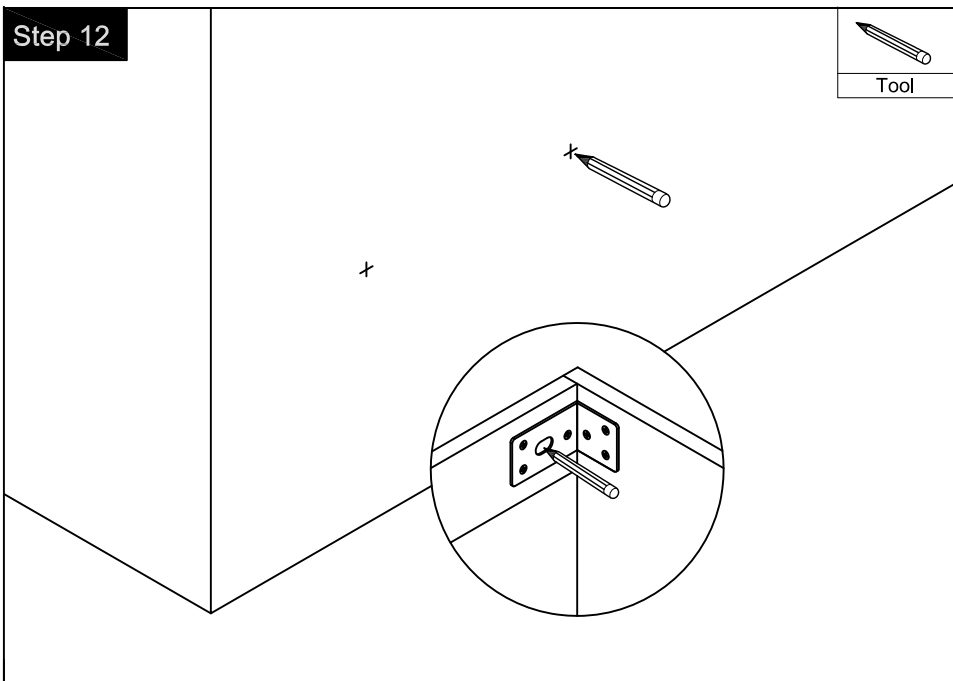


Step 6

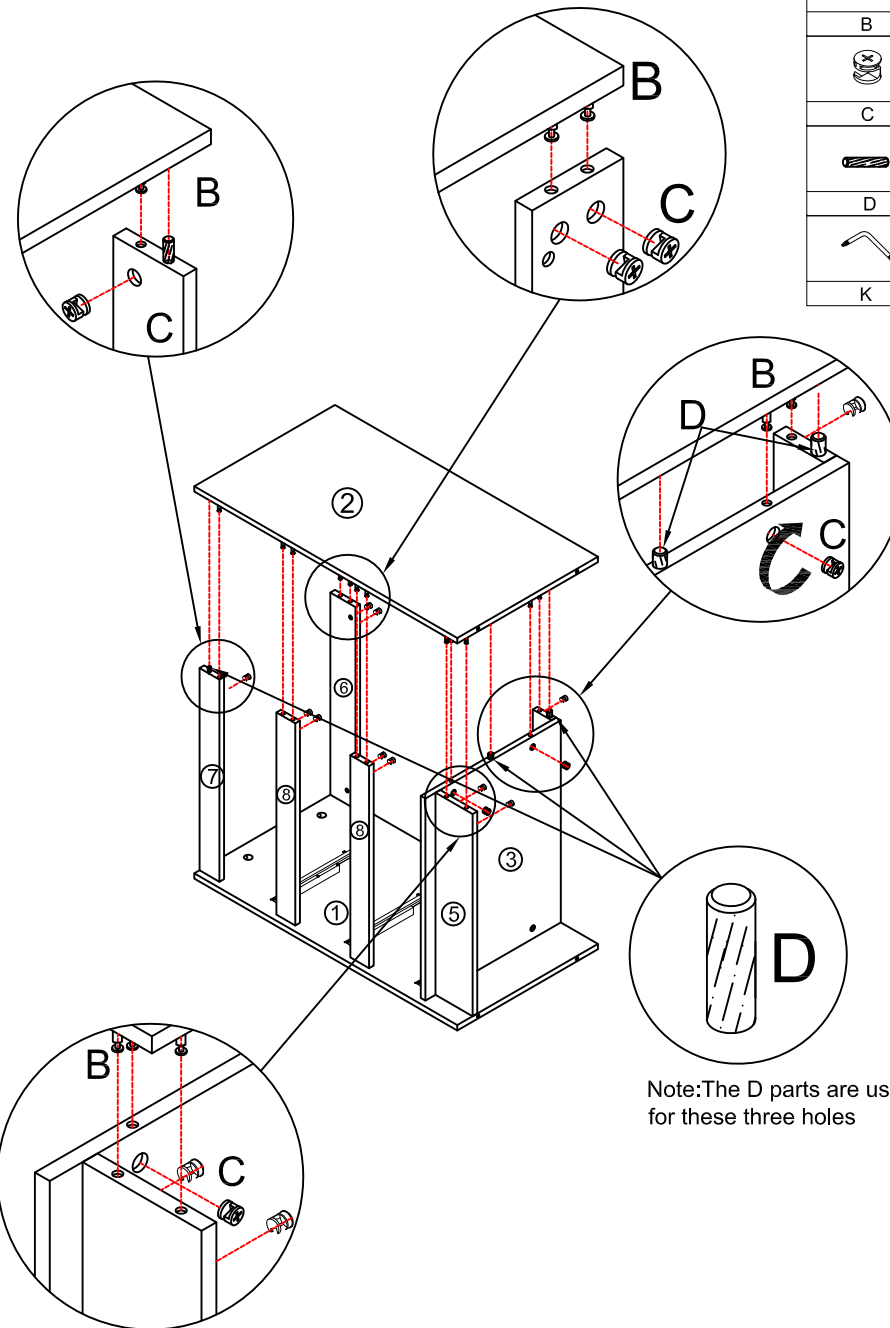


Note: The D parts are used for these three holes


Step 7

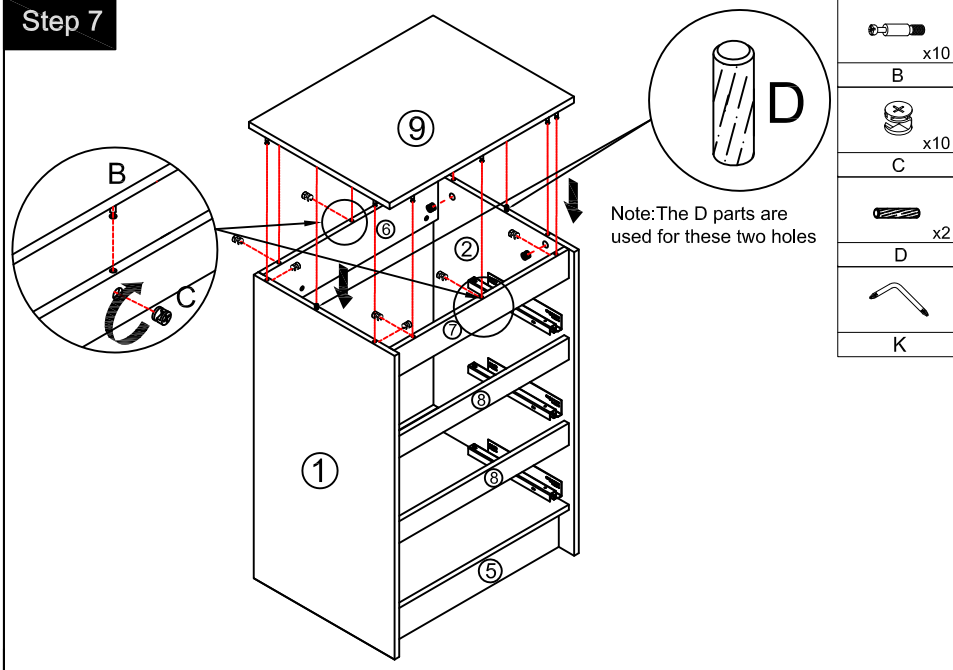

Step 8

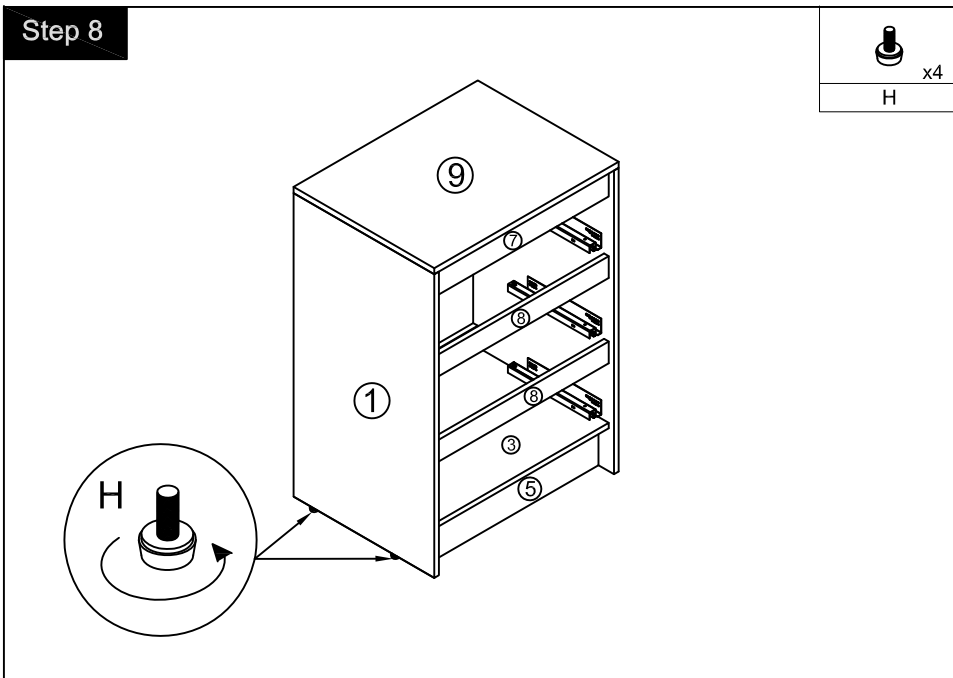

Step 9

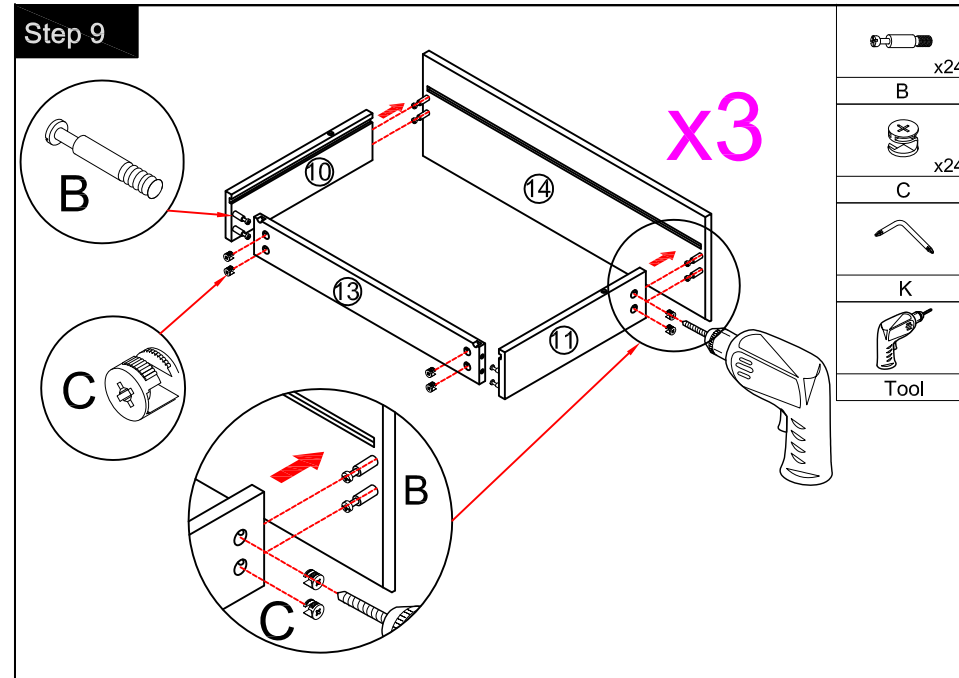

Step 10

