


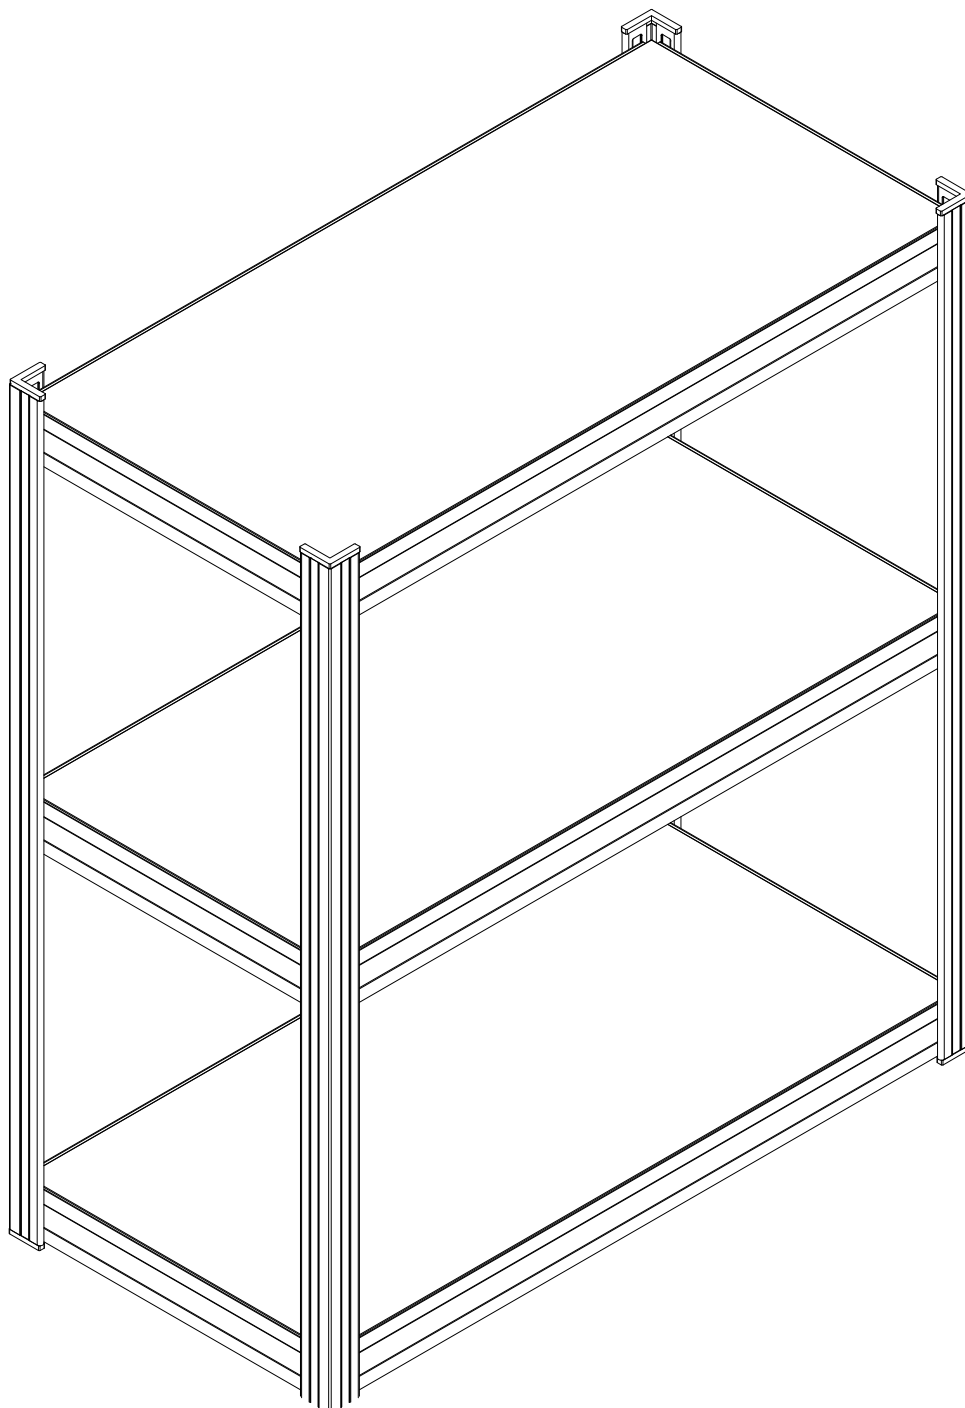
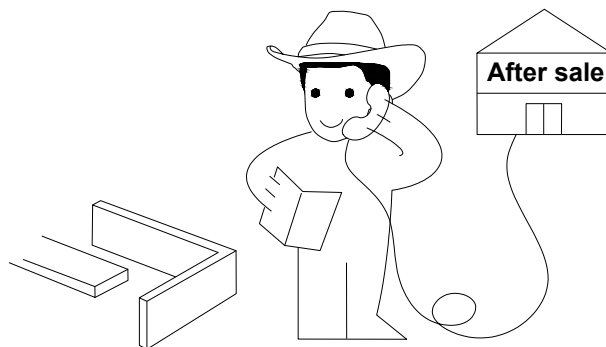
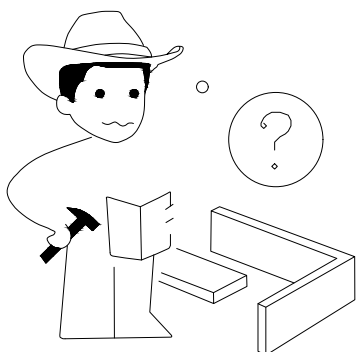
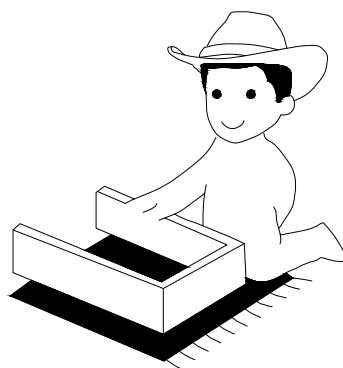
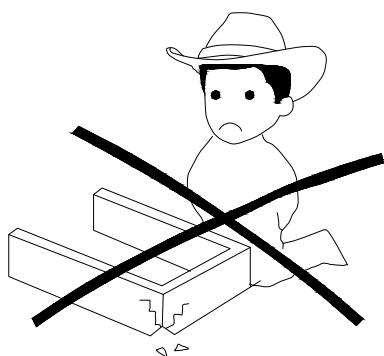
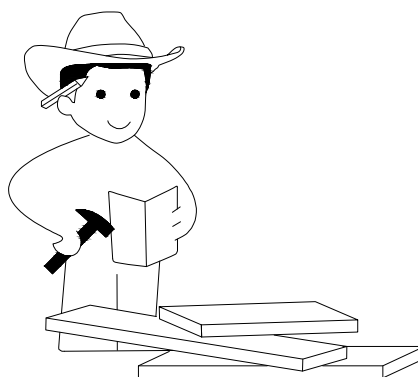
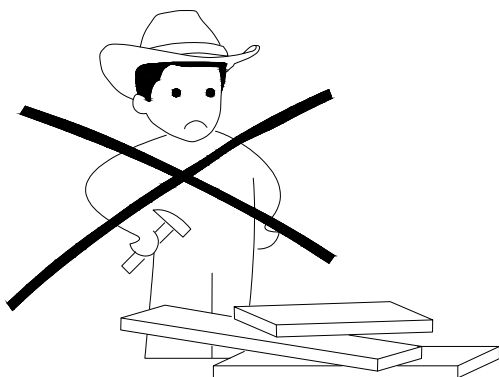


Installation & Assembly




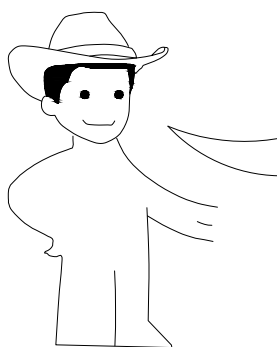


1×6pcs

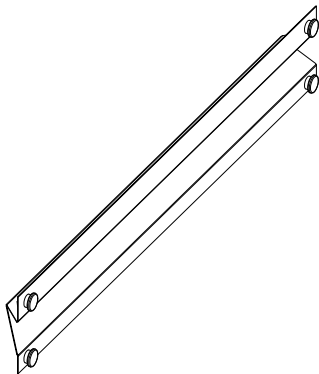


2×6pcs

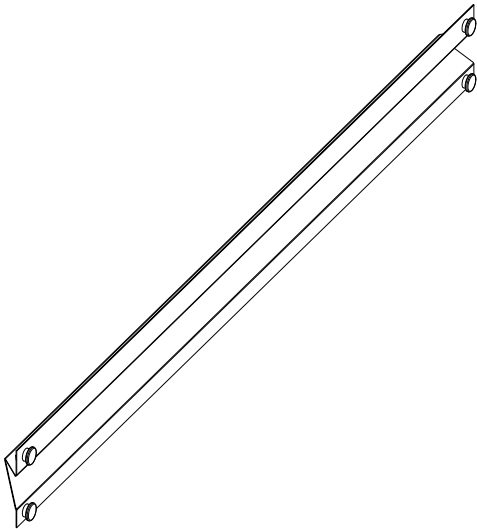


3×3pcs

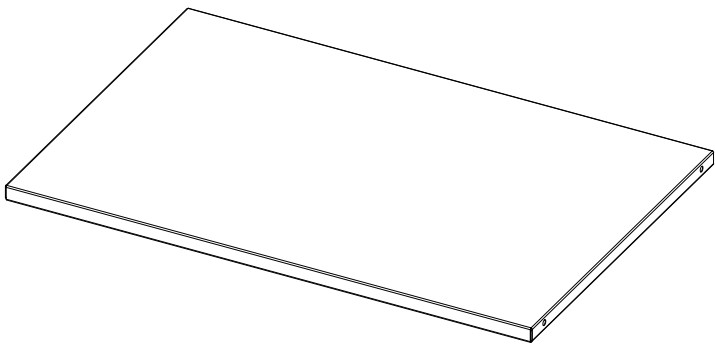


4×4pcs

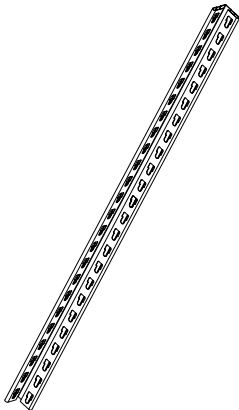


A×8pcs



B×2pcs





C×2pcs





1


Using a small hammer, tap the flat surface of part #1 (with the flat surface facing up) so that the circular slot in part #1 is completely inside the hoist hole in part #4 (as shown), and note that the hoist hole in part #4 has the large opening facing up and the small opening facing down.

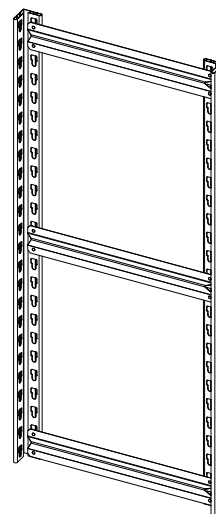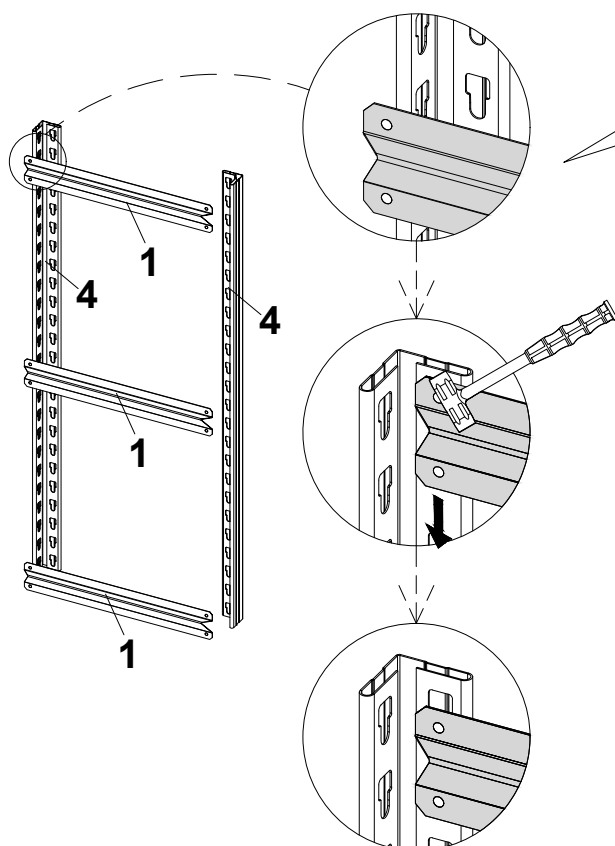

2

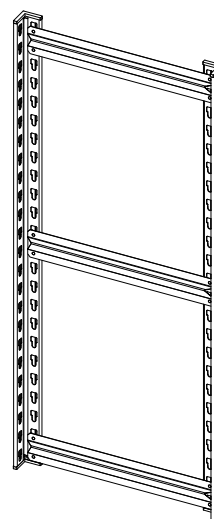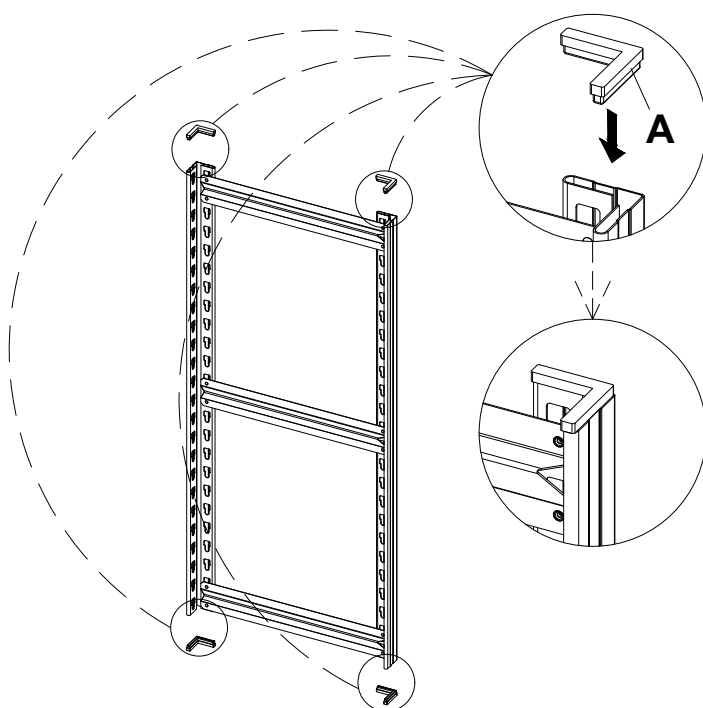


3

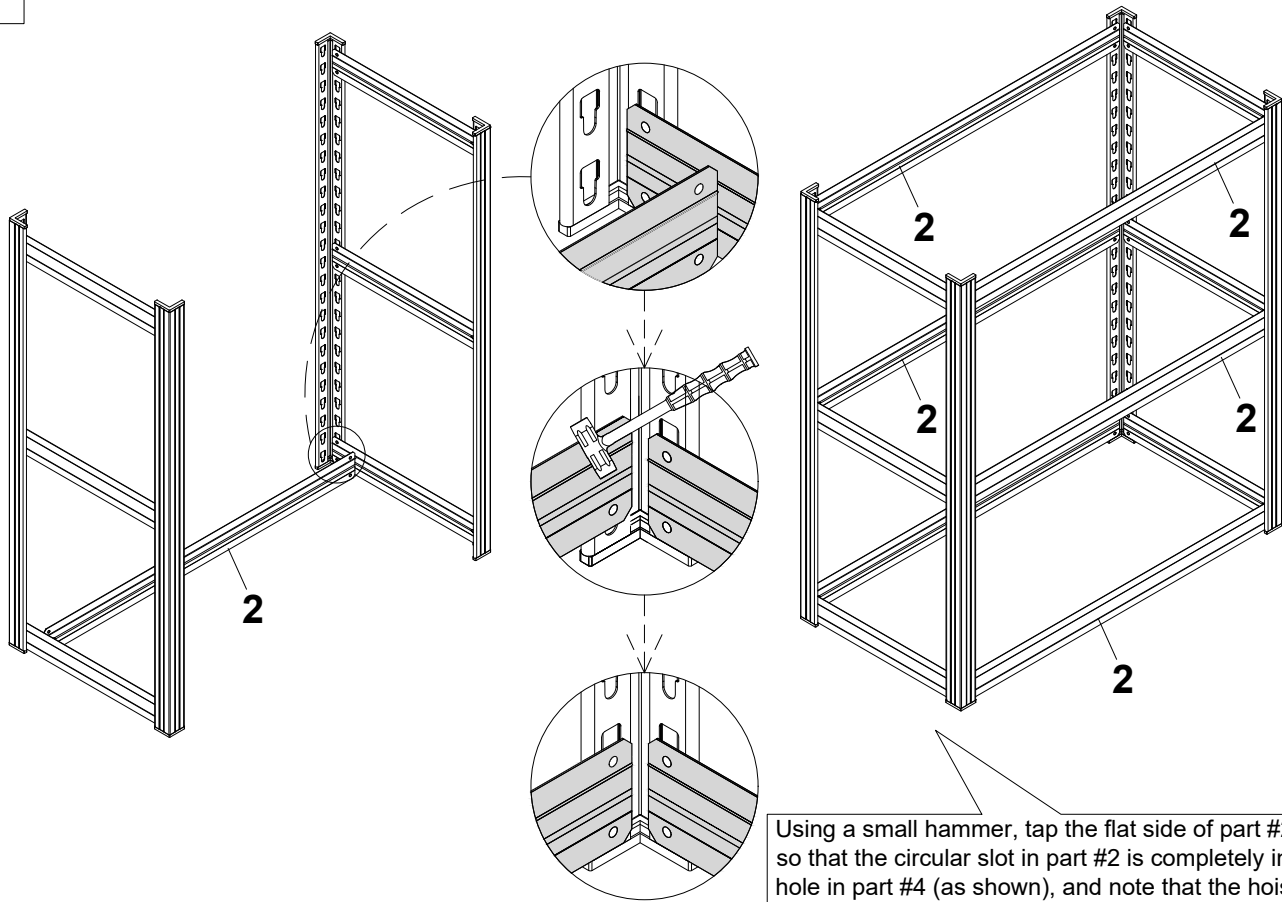


Using a small hammer, tap the flat side of part #2 (flat side up) so that the circular slot in part #2 is completely inside the hoist hole in part #4 (as shown), and note that the hoist hole in part #4 has the large opening facing up and the small opening facing down.

4

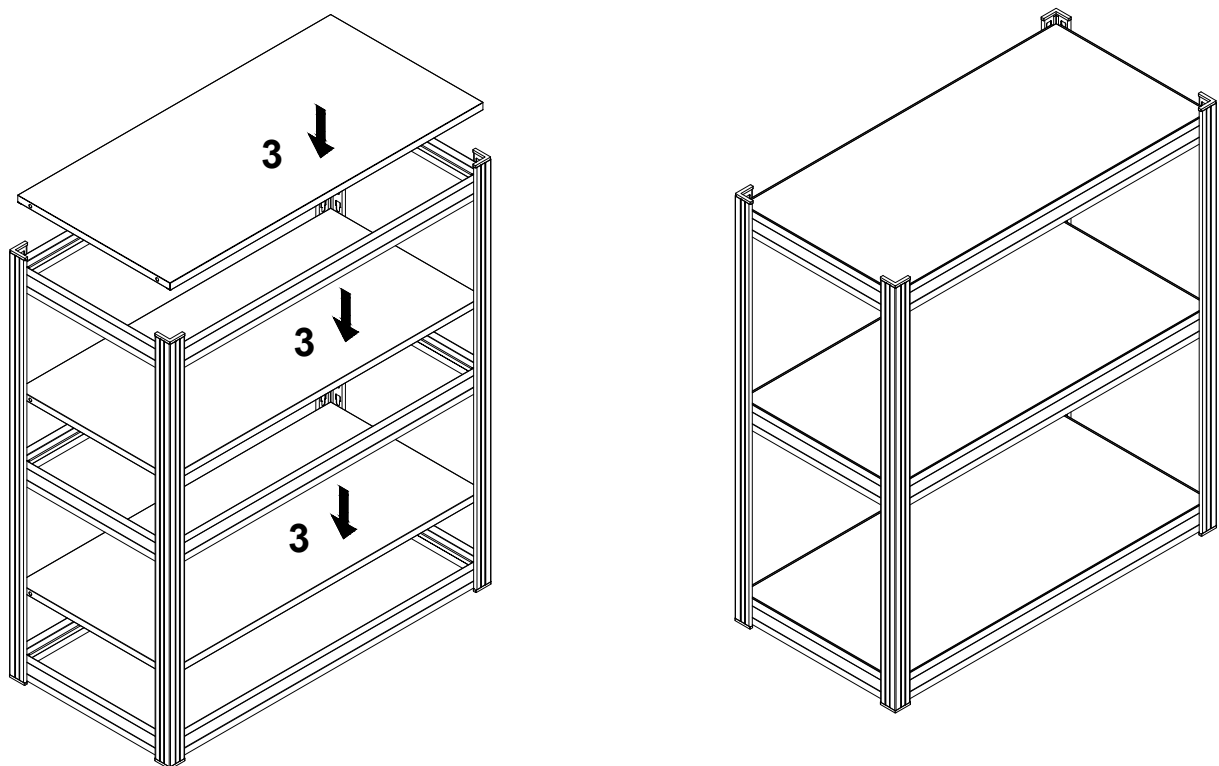


5

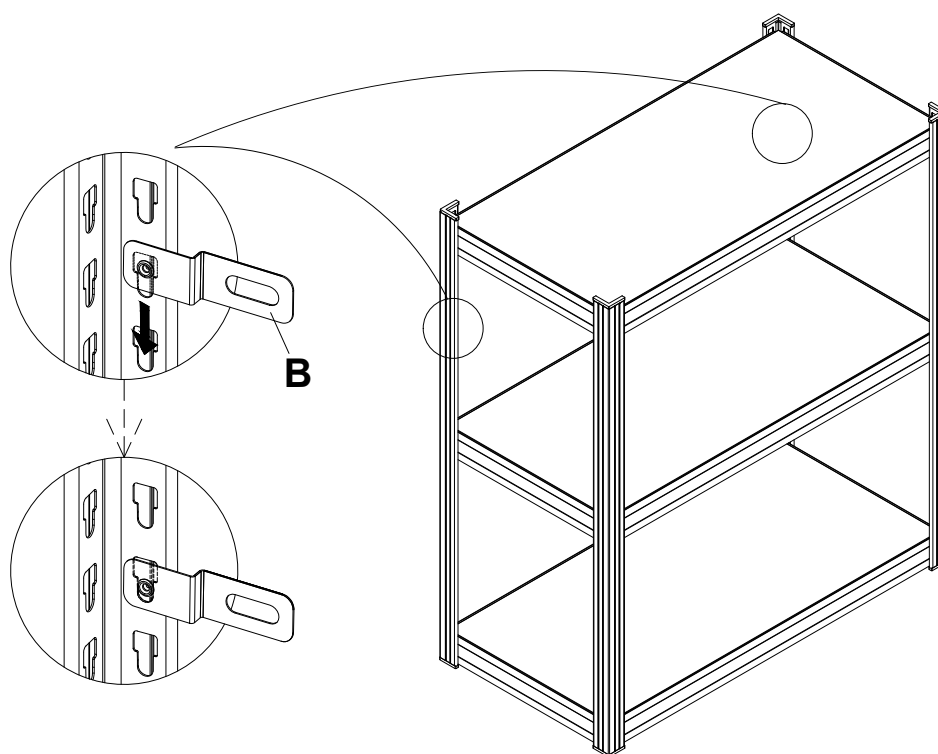

 **B×2**

6

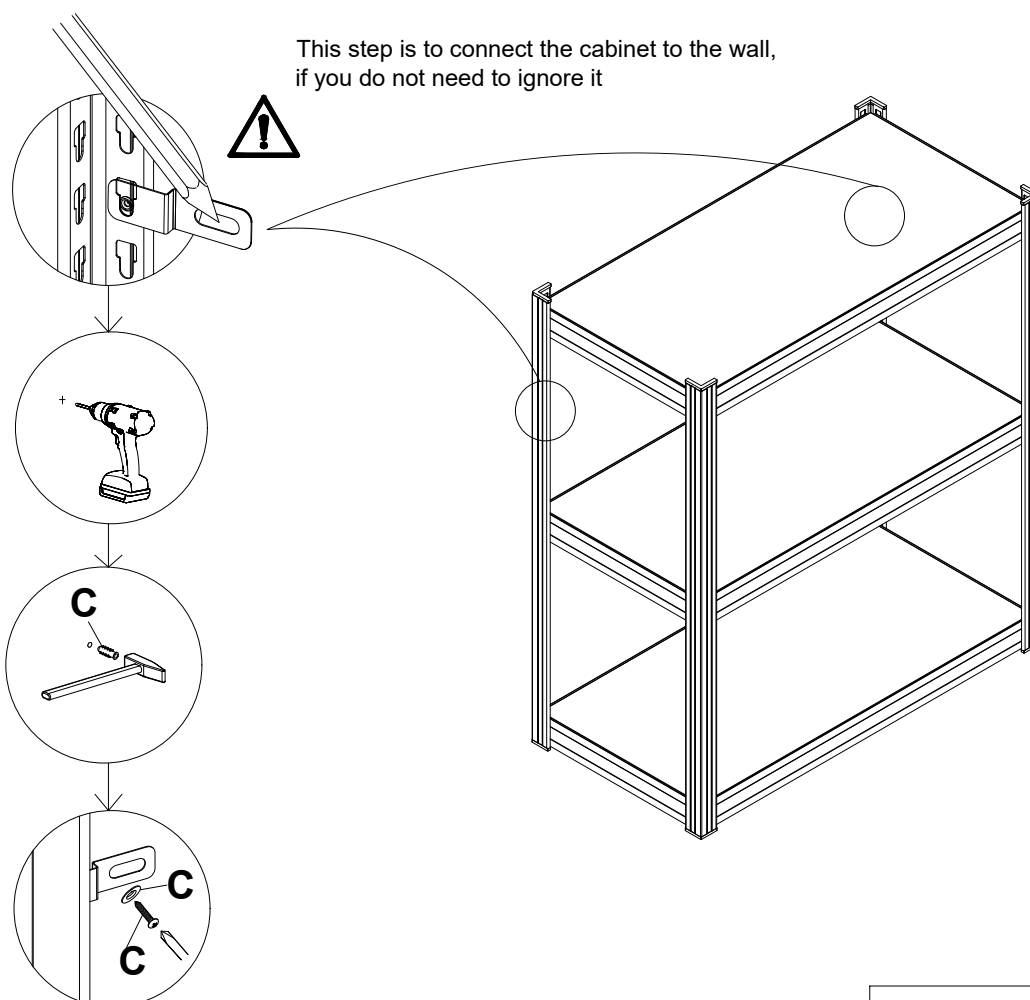

 **C×2**