



Assembly Instruction

SKU CODE : N820P182220 / N820P182221

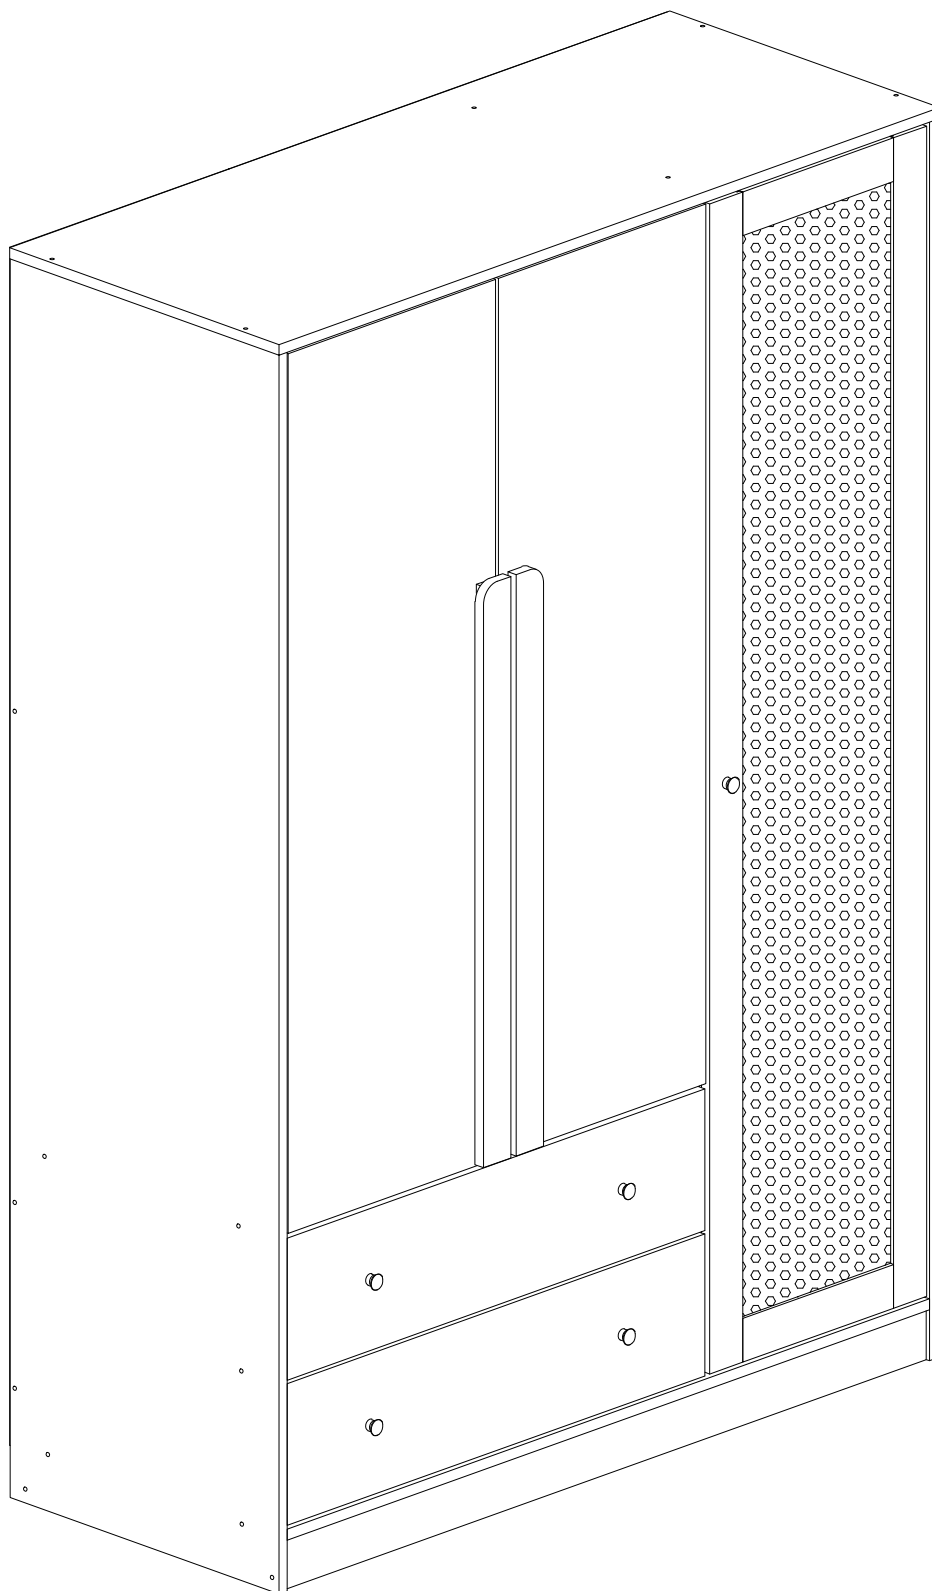

Assembly Instruction


Detail :

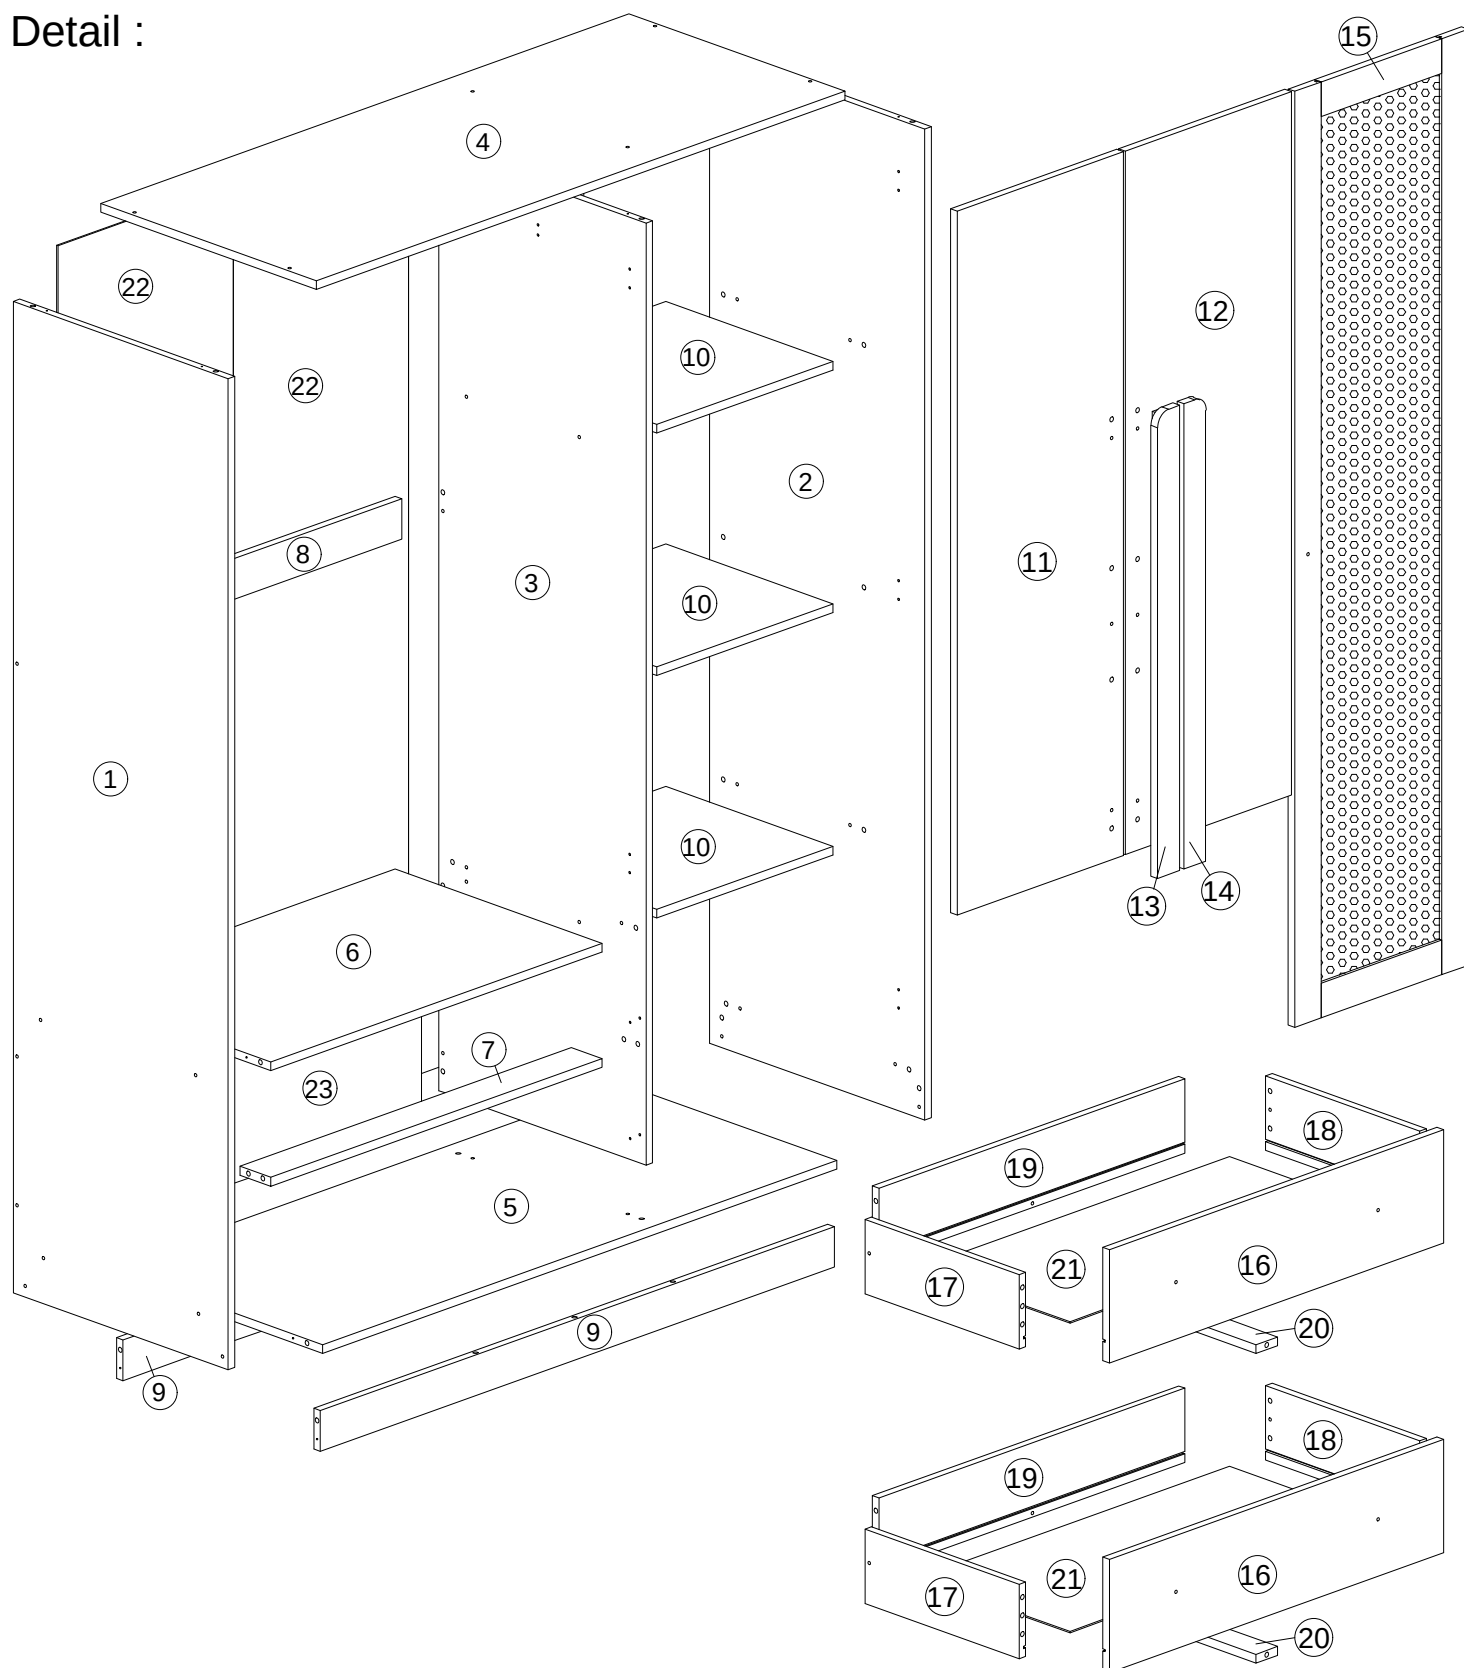

Assembly Instruction


Part List (N820P182220)

① X 1

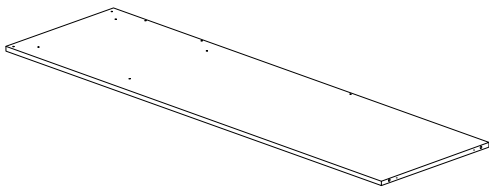


Side Panel Left

② X 1

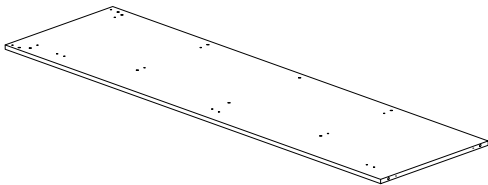


Side Panel Right

③ X 1

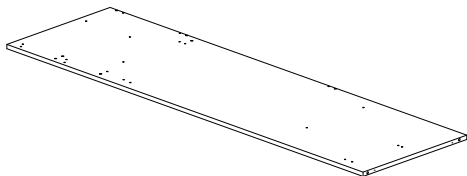


Center Panel

⑮ X 1

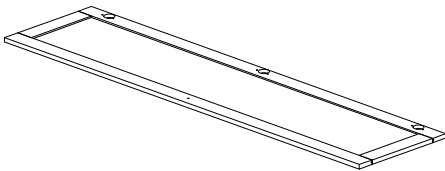

Door Panel Right Big













⑳ X 3

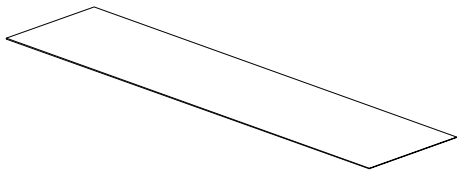

Back Panel





Assembly Instruction

Part List (N820P182221)

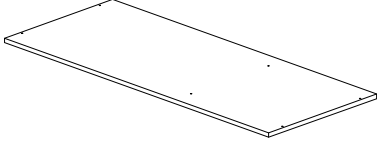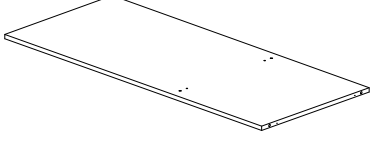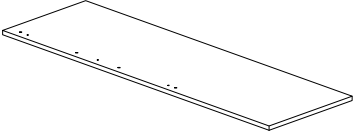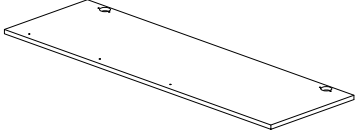④ X 1  Top Panel	⑤ X 1  Bottom Panel
⑥ X 1  Partition Panel Big	⑦ X 1  Front Support Panel
⑧ X 1  Back Support Panel	⑨ X 2  Bottom Support Panel
⑩ X 3  Partition Panel Small	⑬ X 1  Door Handle Left
⑭ X 1  Door Handle Right	⑯ X 2  Drawer Front Panel
⑰ X 2  Drawer Side Panel Left	⑱ X 2  Drawer Side Panel Right
⑲ X 2  Drawer Back Panel	⑳ X 2  Drawer Support Panel
㉑ X 2  Drawer Bottom Panel	㉓ X 1  Back Panel Small
⑪ X 1  Door Panel Left	⑫ X 1  Door Panel Right

Assembly Instruction

Hardware List (N820P182221)

No.	SHAPE	DESCRIPTION	Qty.
A		8x25mm Dowel (Wood)	70Pcs
B		15mm Myfix Minifix	8Sets
C		M3.5x16mm Screw	77Pcs
D		M4x45mm Screw	40Pcs
E		M3.5x12mm Screw	12Pcs
F		V Bracket	2Pcs
G		Handle 209	5Pcs
H		M4x28mm Screw	5Pcs
I		M4x38mm Screw	6Pcs
J		2 Pin Stopper	3Pcs
K		Hinges 7/8	5Pcs
L		Hinges 5/8	2Pcs
M		5/8 Nail With Pin	6Pcs
N		6/8 Power Pin	50Pcs
O		Drawer Slide (350mm)	2Sets
P		Aluminium Pipe(745mm)	1Pc
Q		L Bracket	4Pcs
R		Sticker	17Pcs


Anti Tipping Hardware (Box)

No.	SHAPE	DESCRIPTION	Qty.
a		Mounting Bracket	2Pcs
b		TP 6# x 5/8" Screw	1Pc
c		TP 8# x 2" Screw	1Pc
d		Restraint Strap	1Pc

Assembly Instruction


Left Drawer Silde (O)

Flat Shaped - Left

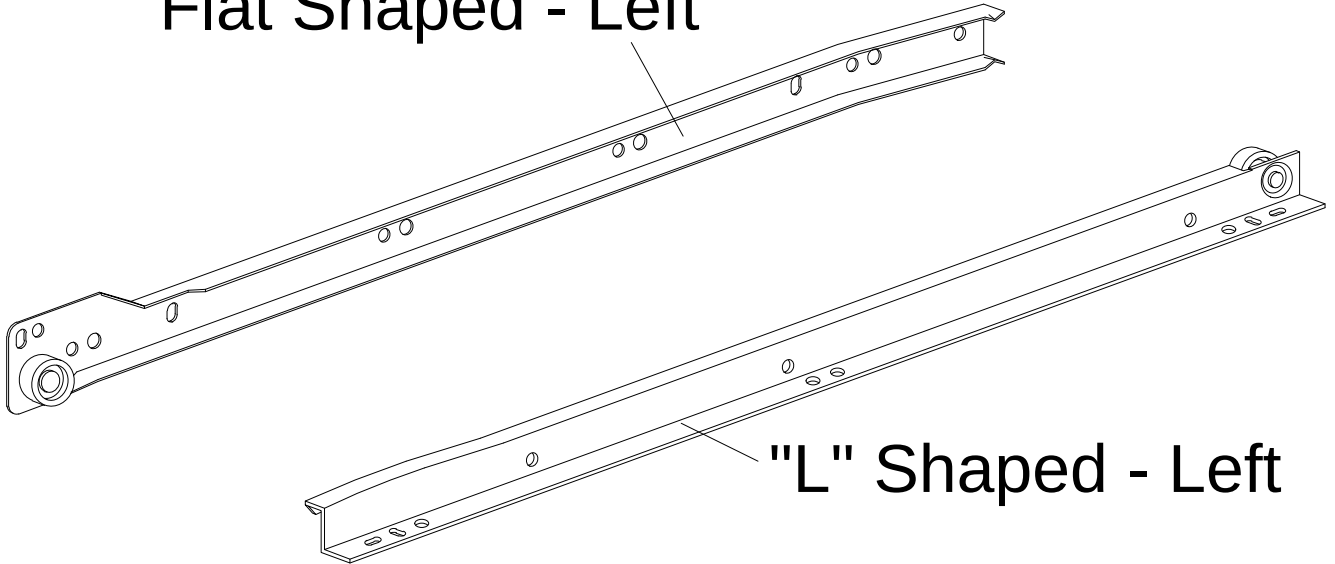

Right Drawer Silde (O)


"L" Shaped - Right

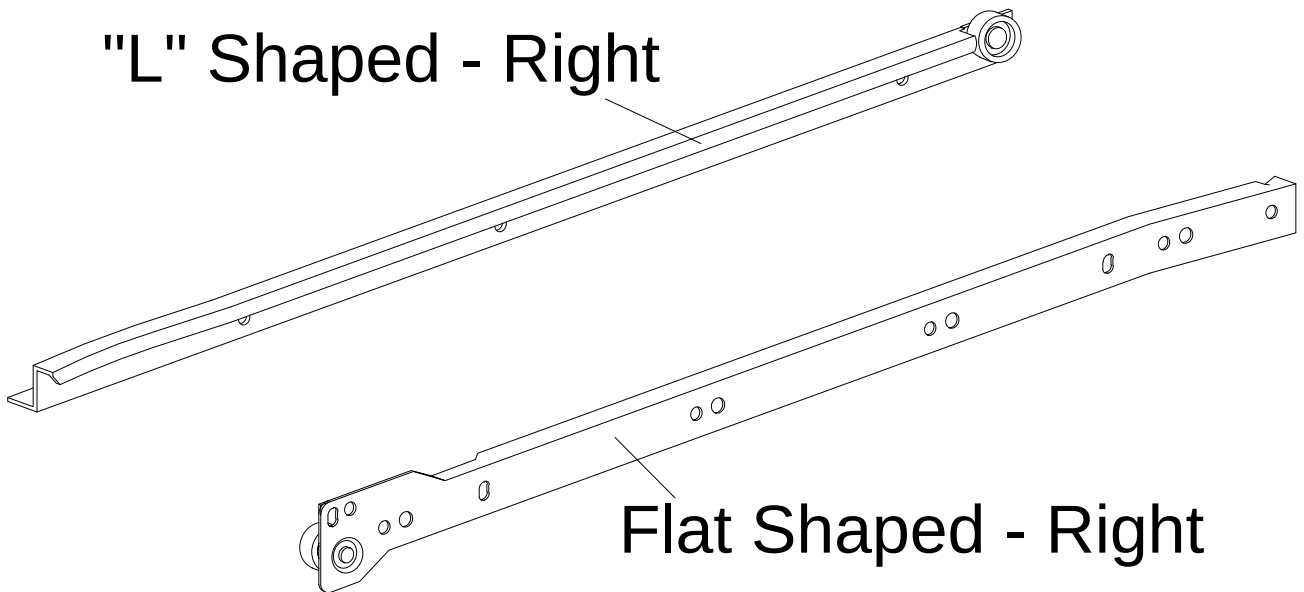

Assembly Instruction

Step 1

A		8x25mm Dowel (Wood)	70Pcs
---	---	---------------------	-------

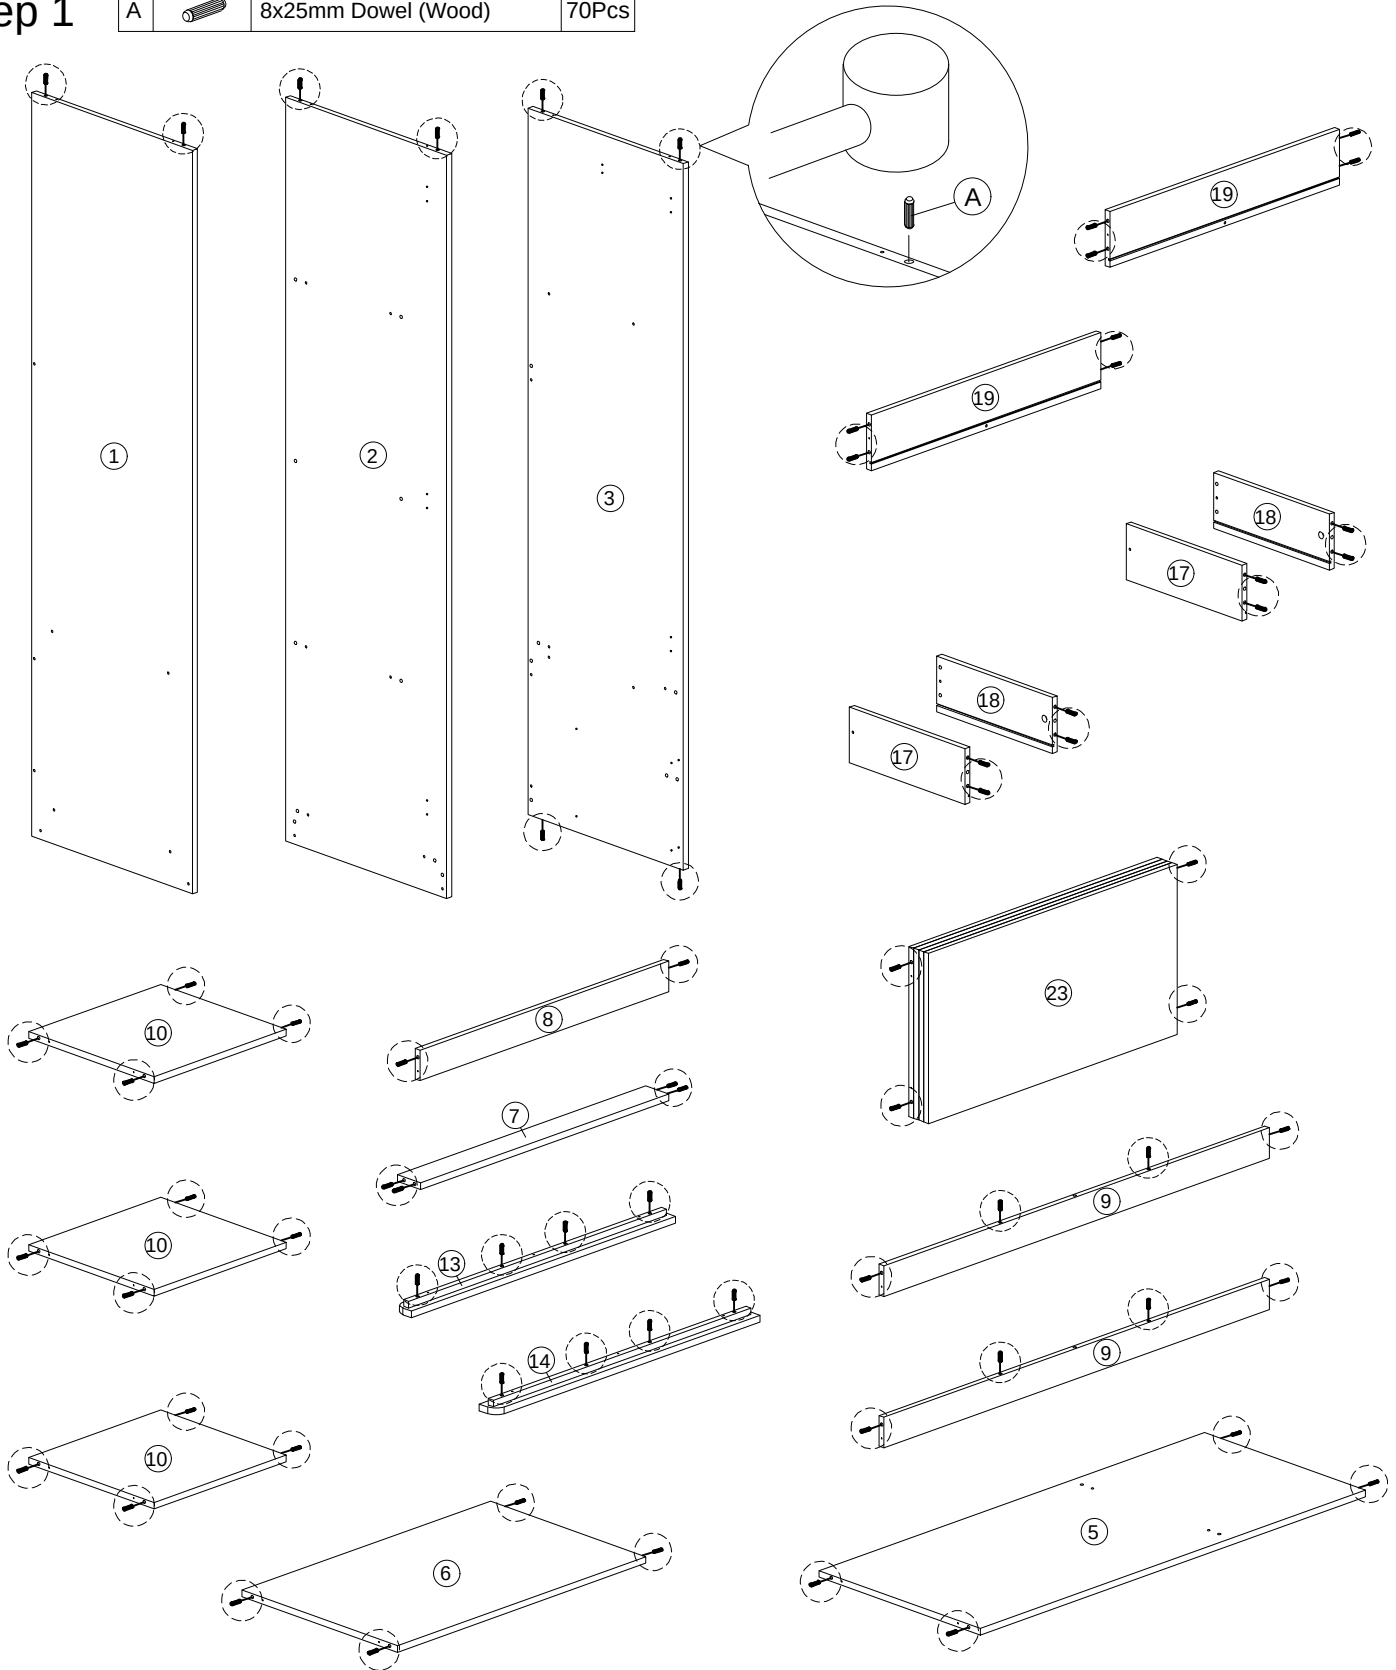


Assembly Instruction

Step 2

C		M3.5x16mm Screw	4Pcs
---	---	-----------------	------


F		V Bracket	2Pcs
---	---	-----------	------

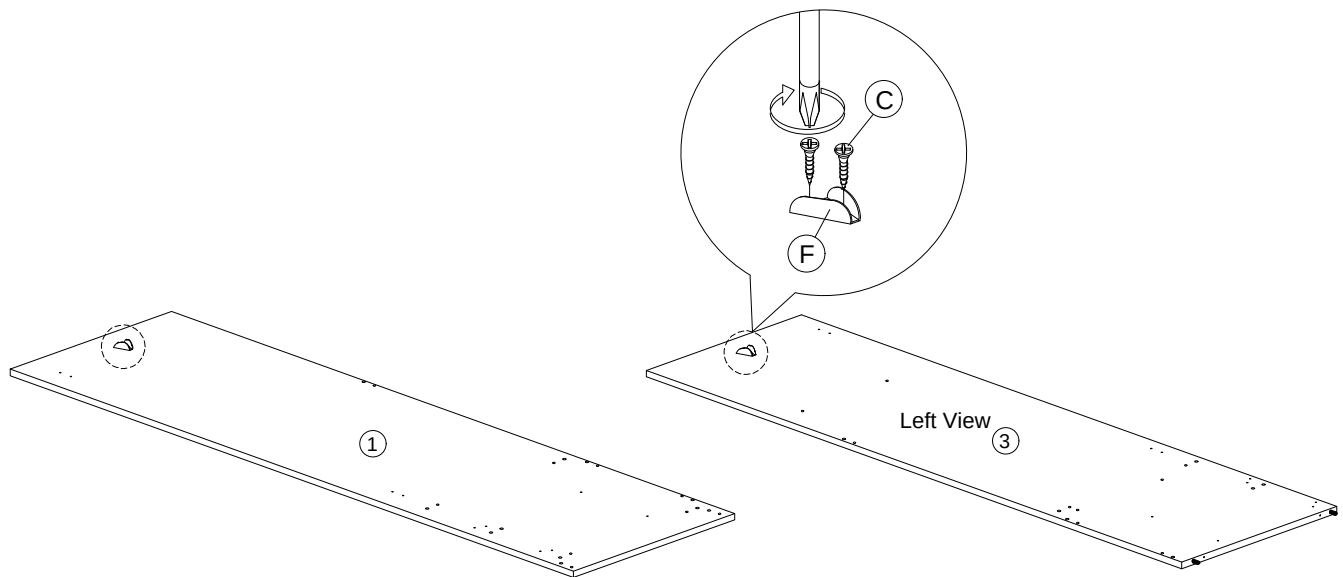

Step 3

E		M3.5x12mm Screw	12Pcs
O		Drawer Slide 350mm - R	2Pcs


O		Drawer Slide 350mm - L	2Pcs
---	---	------------------------	------

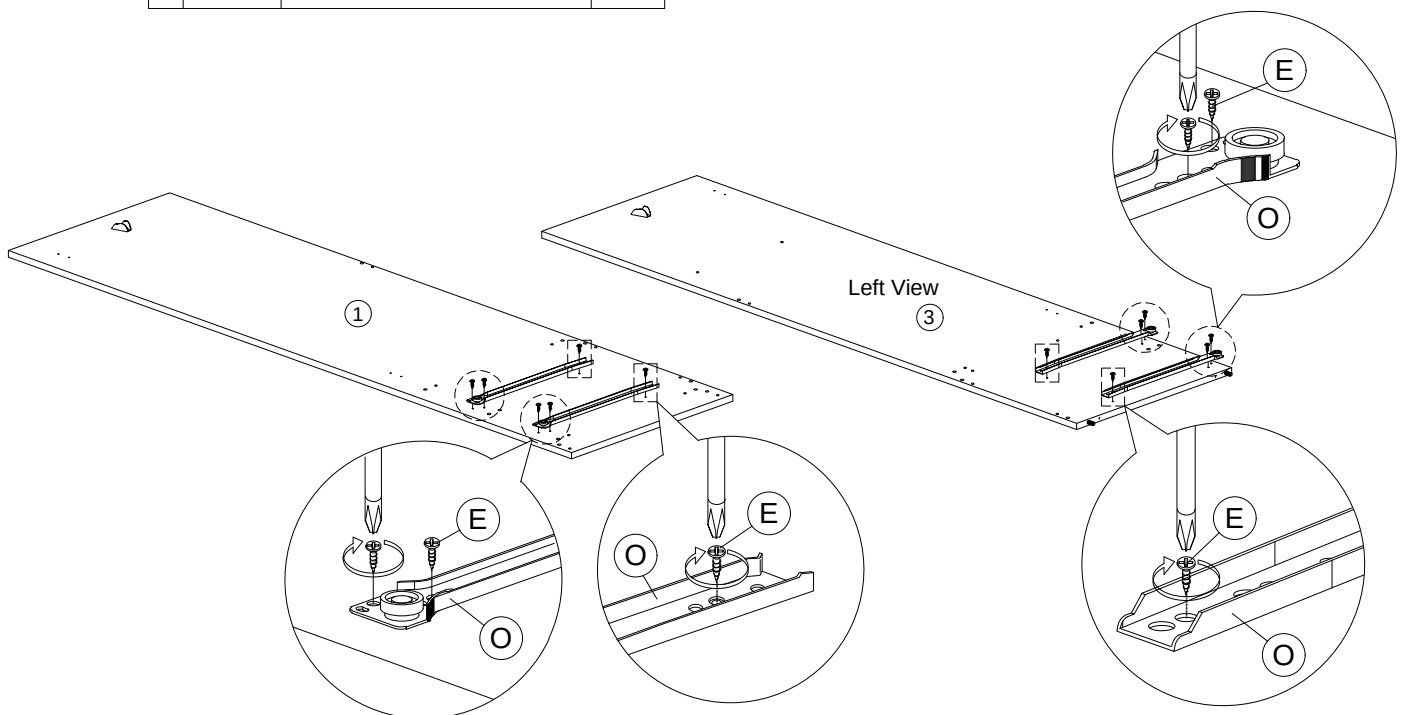

Assembly Instruction


Step 4

B		Myfix	8Pcs
---	---	-------	------

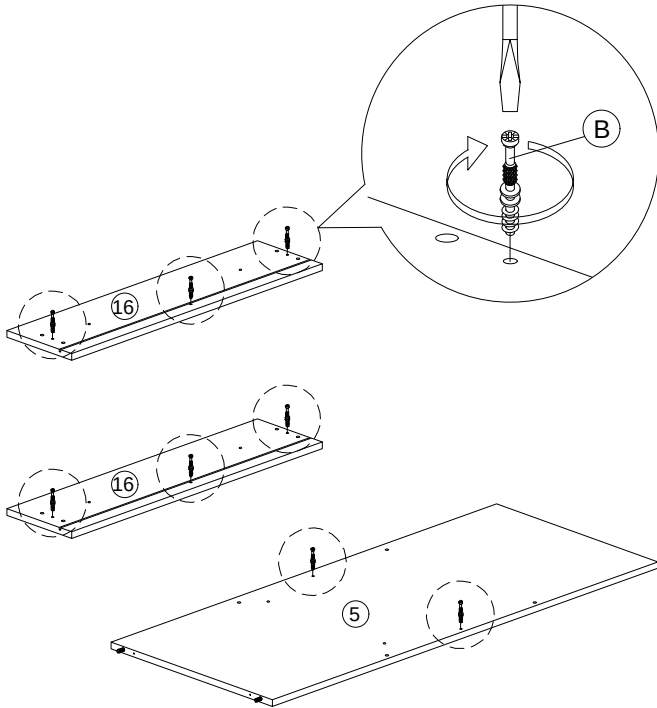


Step 5

C		M3.5x16mm Screw	3Pcs
J		2 Pin Stopper	3Pcs

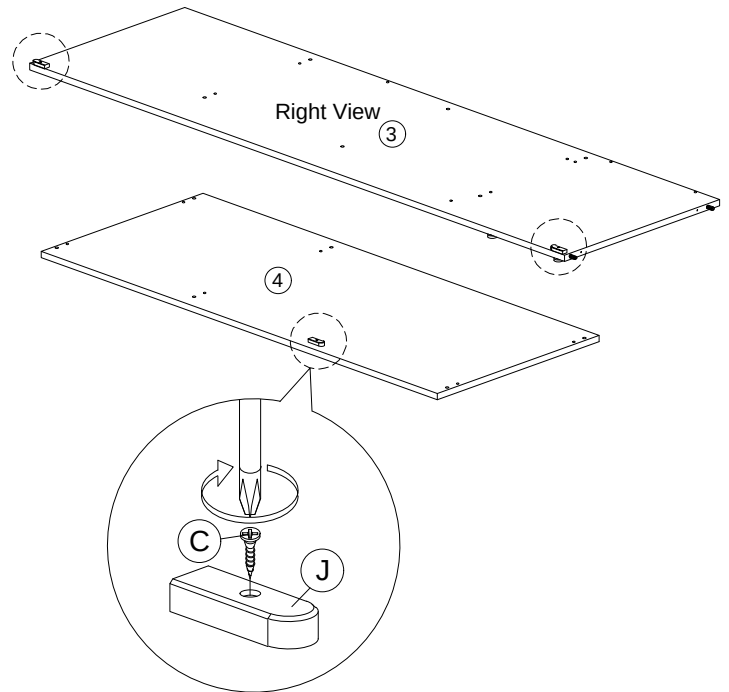


Step 6

B		Minifix	2Pcs
---	---	---------	------

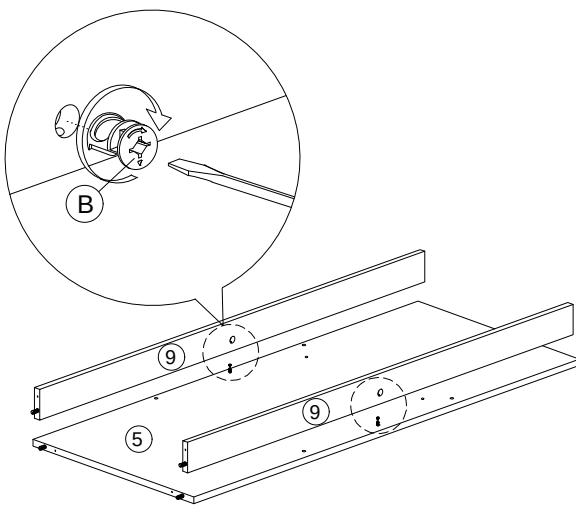

Step 7


D		M4x45mm Screw	4Pcs
---	---	---------------	------

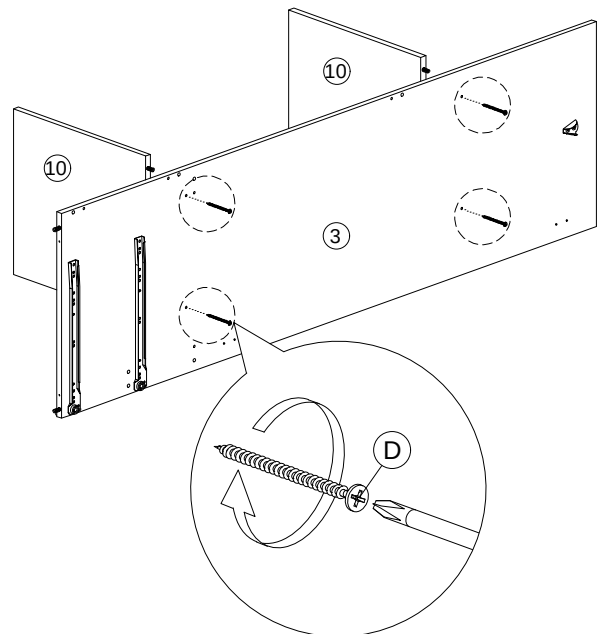


Assembly Instruction

Step 8

D		M4x45mm Screw	3Pcs
---	---	---------------	------

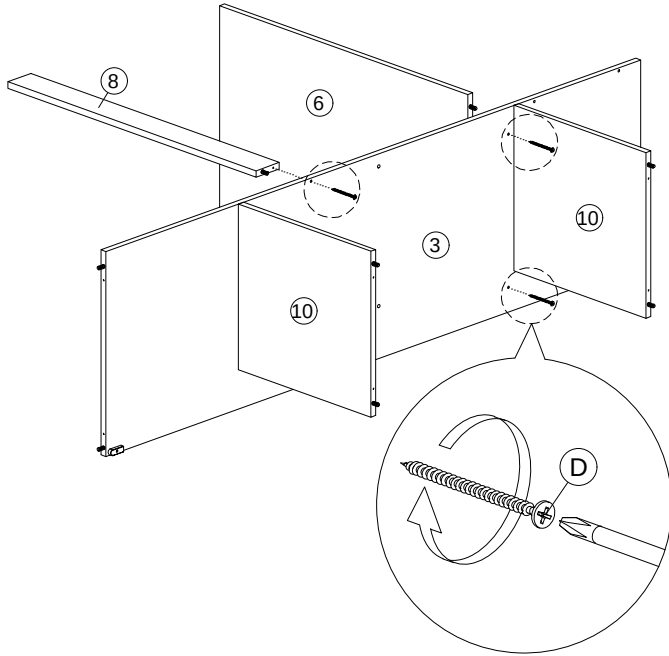


Step 9

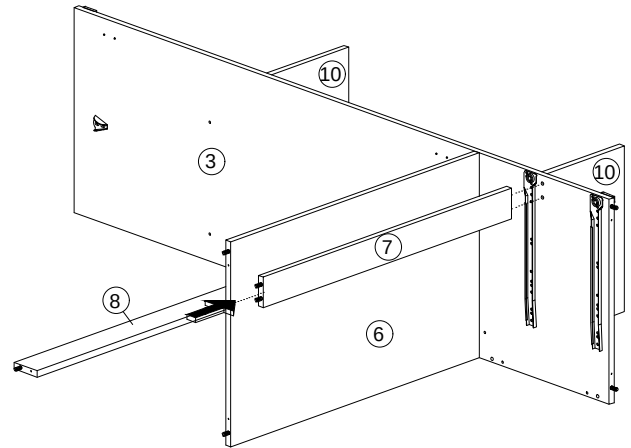

Step 10


D		M4x45mm Screw	2Pcs
---	---	---------------	------

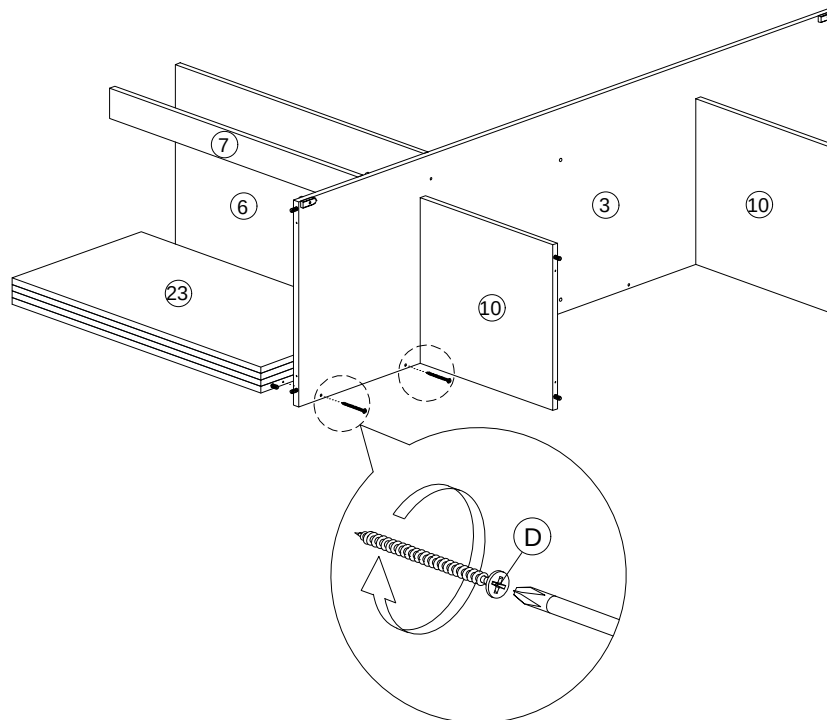


Assembly Instruction

Step 11

D		M4x45mm Screw	2Pcs
---	---	---------------	------

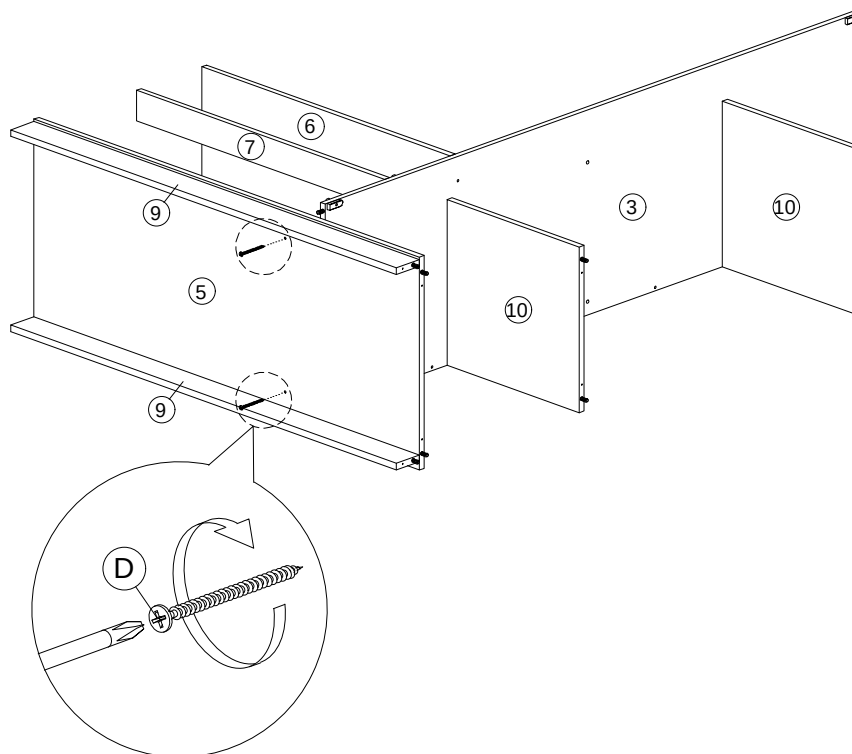

Step 12

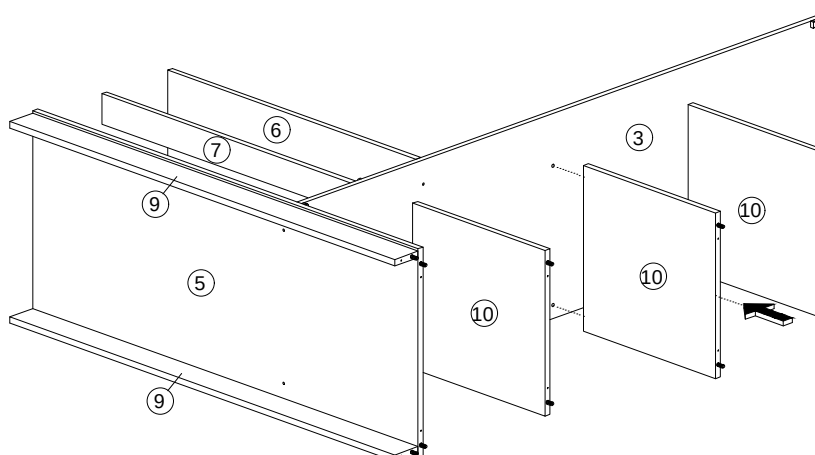


Assembly Instruction

Step 13

D		M4x45mm Screw	8Pcs
---	---	---------------	------


R		Sticker	8Pcs
---	---	---------	------

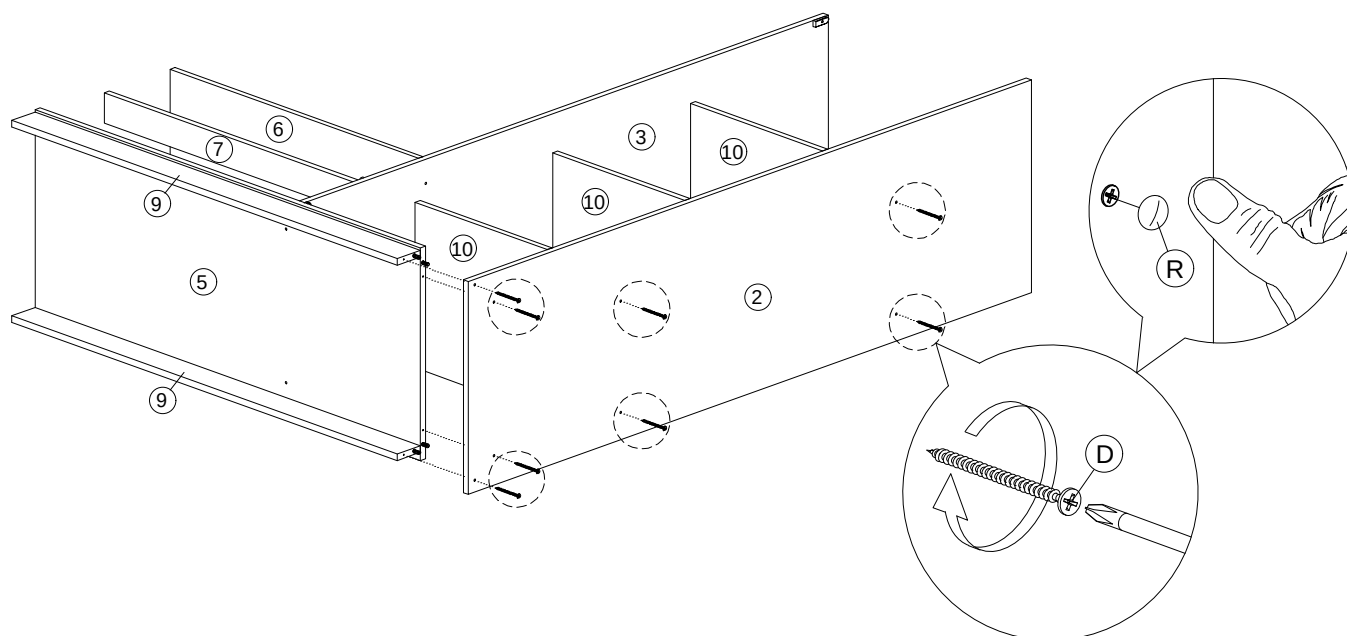

Step 14

D		M4x45mm Screw	9Pcs
---	---	---------------	------


R		Sticker	9Pcs
---	---	---------	------

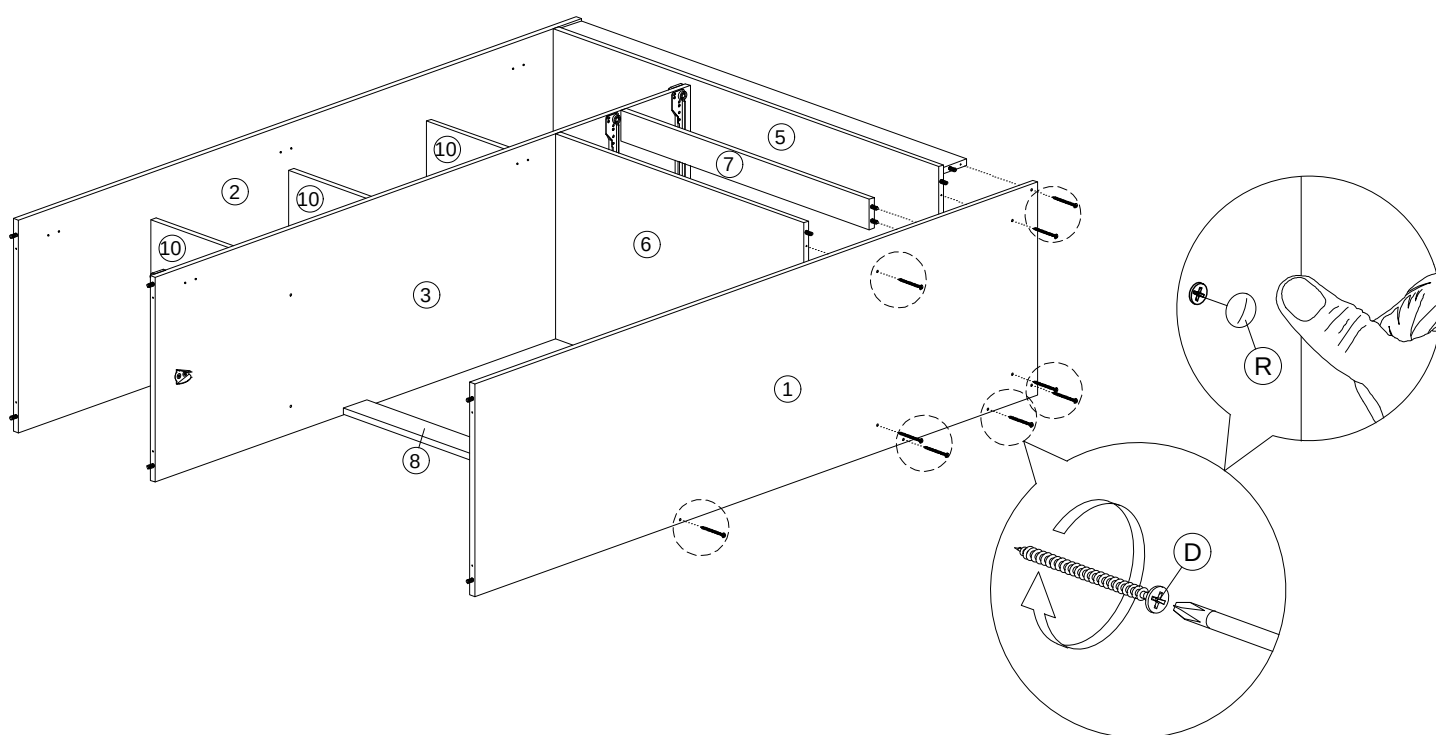

Assembly Instruction

Step 15


D		M4x45mm Screw	6Pcs
---	---	---------------	------

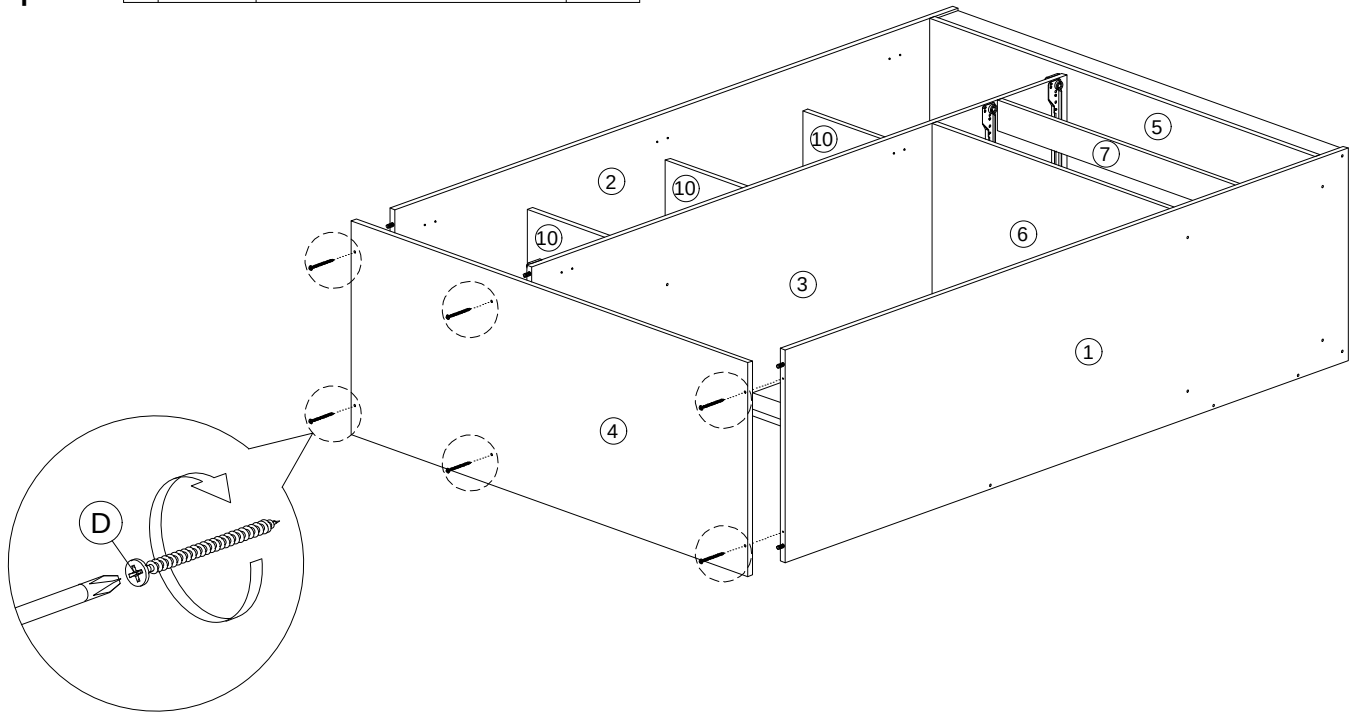

Step 16

N		6/8 Power Pin	50Pcs
---	---	---------------	-------

* Flip to the back view

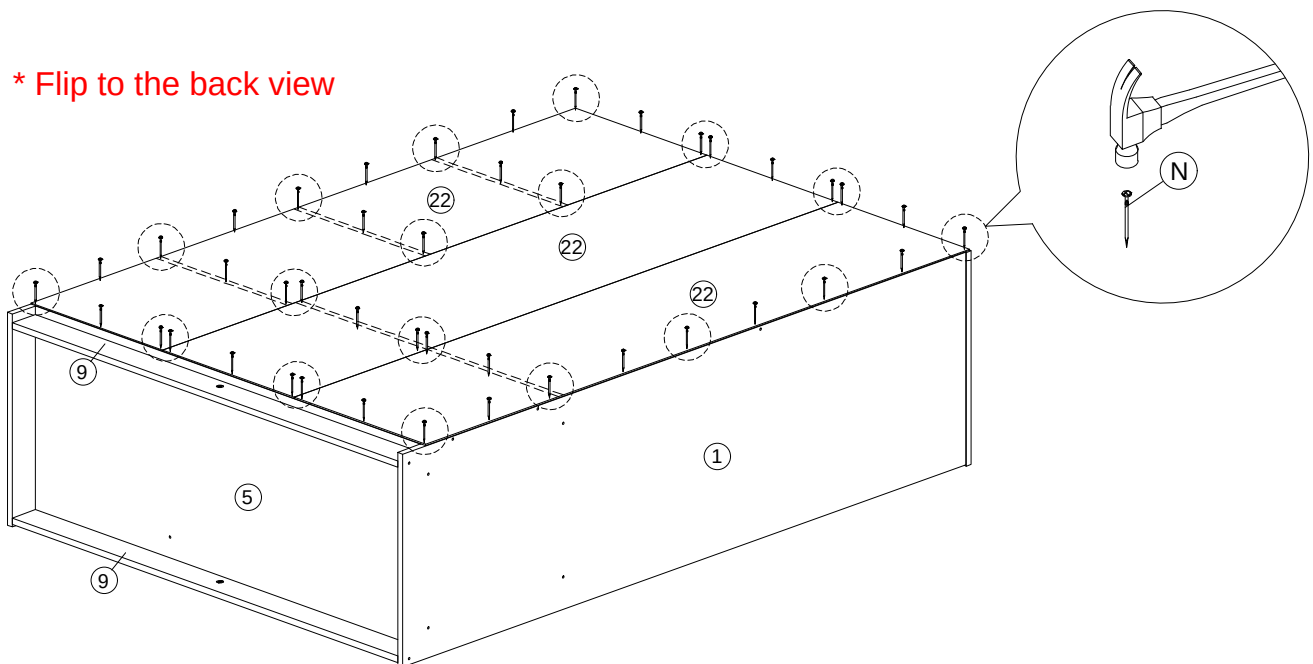


Assembly Instruction

Step 17


C		M3.5x16mm Screw	16Pcs
---	---	-----------------	-------

Q		L Bracket	4Pcs
---	---	-----------	------

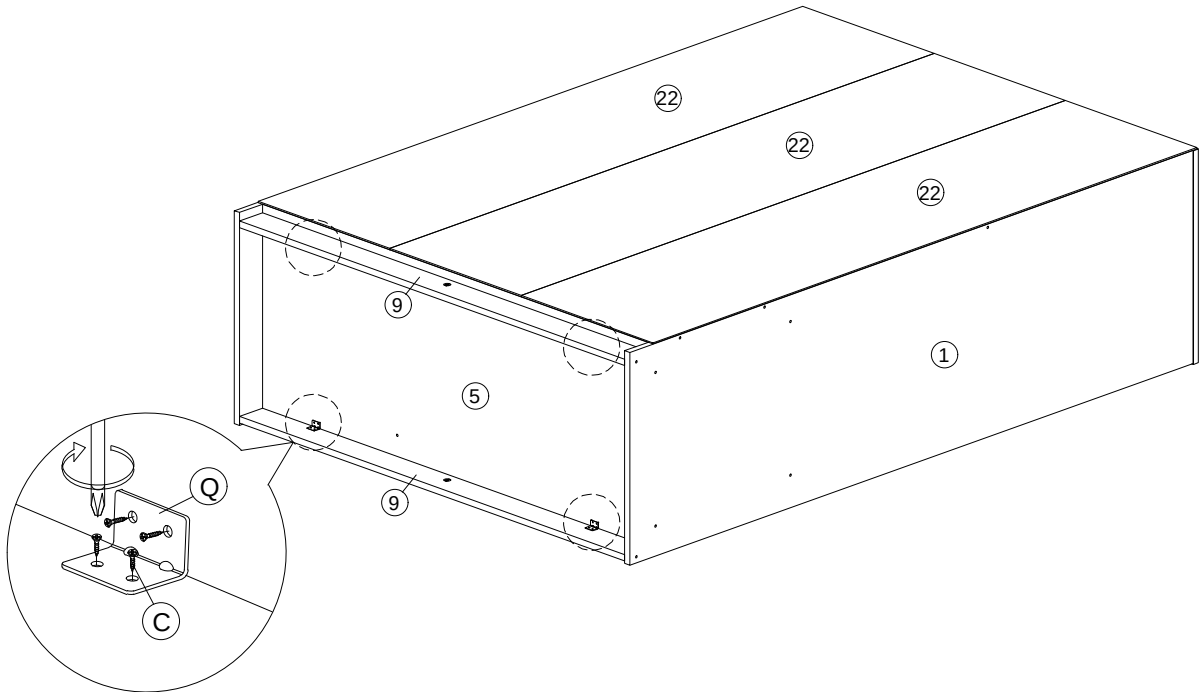

Step 18


M		5/8 Nail With Pin	6Pcs
---	---	-------------------	------

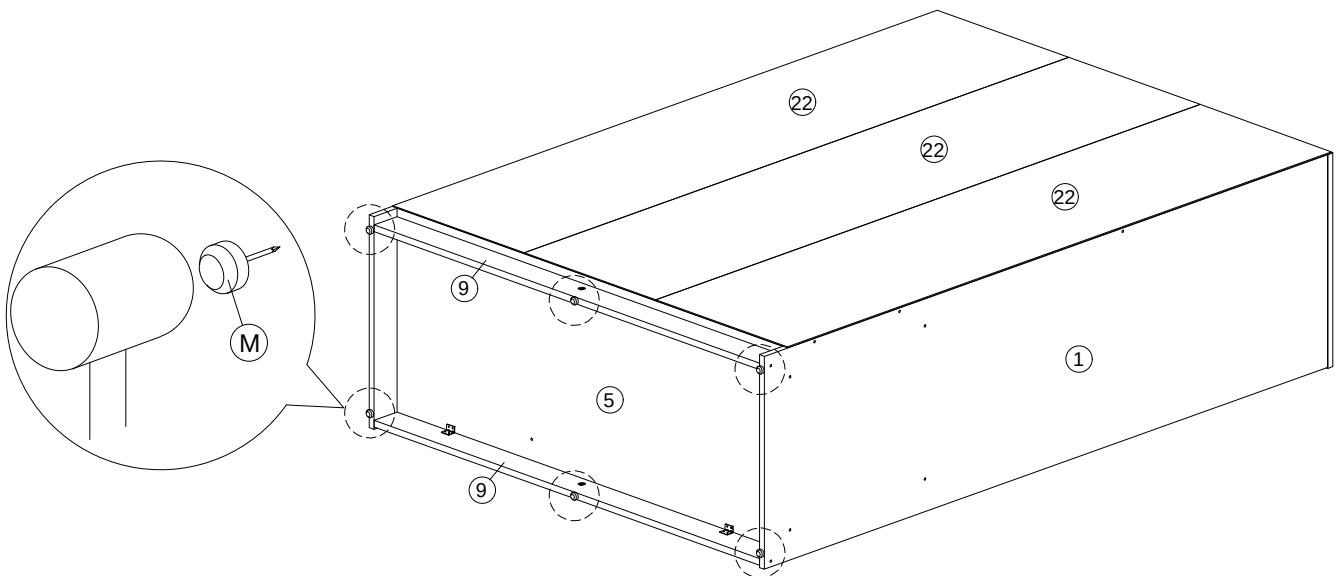

Assembly Instruction

Step 19

P		Aluminium Pipe 745mm	1Pc
---	---	----------------------	-----

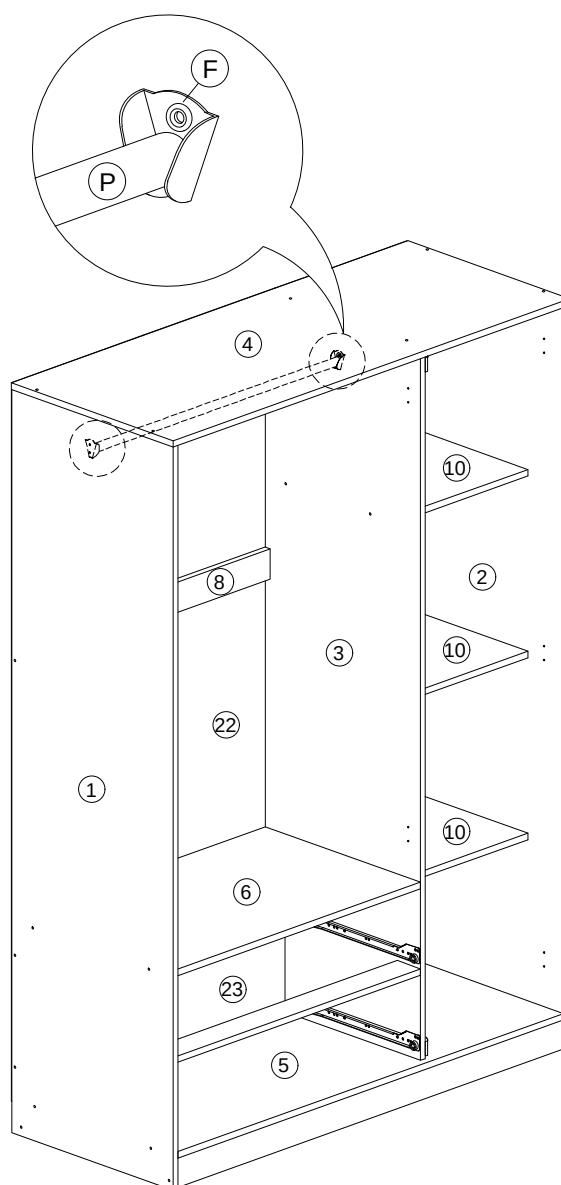


Assembly Instruction

Step 20

C		M3.5x16mm Screw	18Pcs
---	---	-----------------	-------

K		Hinges 7/8	3Pcs
---	---	------------	------

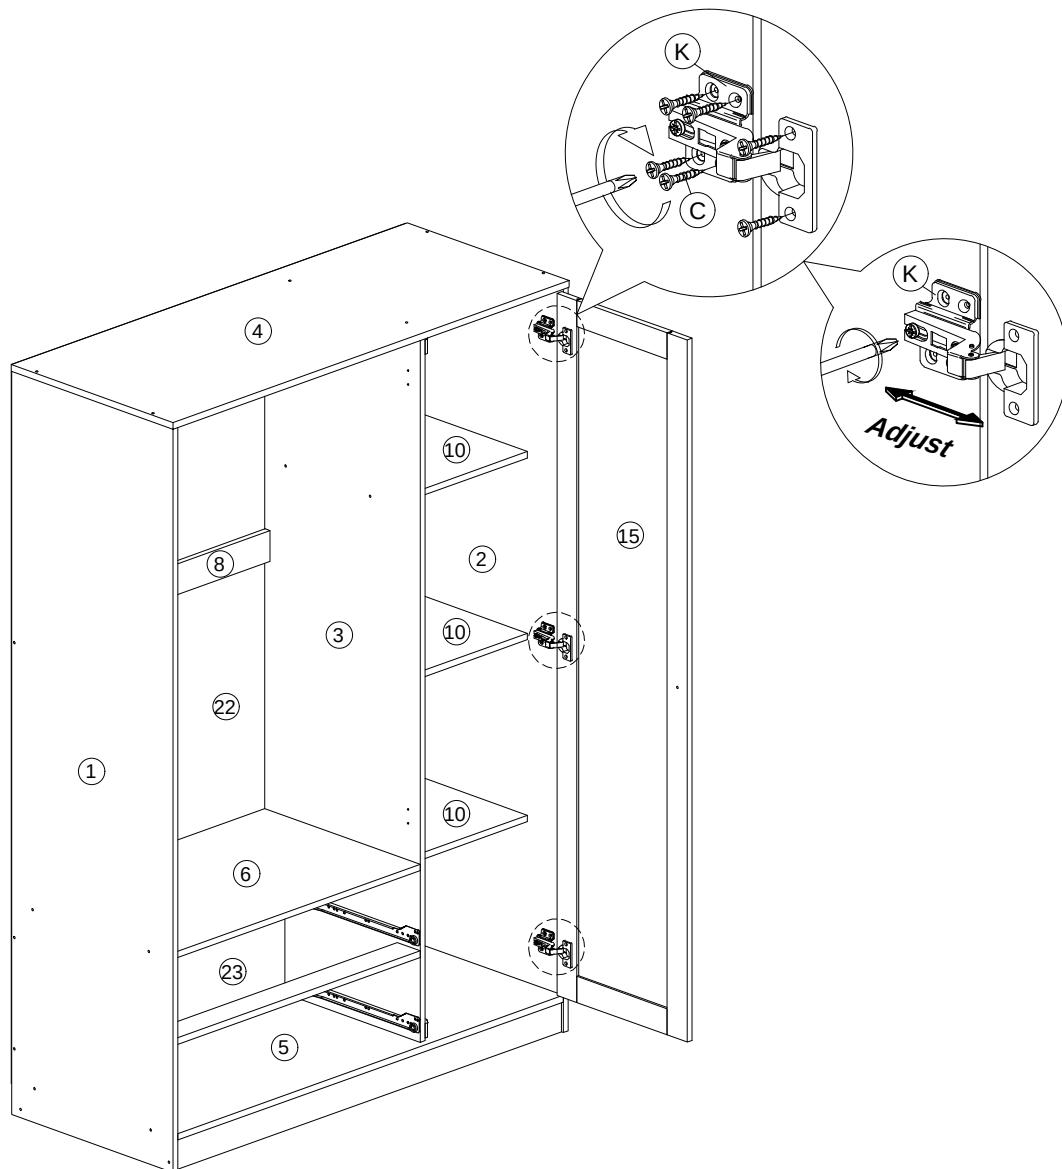


Assembly Instruction

Step 21

G		Handle 209	1Pc
---	---	------------	-----

H		M4x28mm Screw	1Pc
---	---	---------------	-----

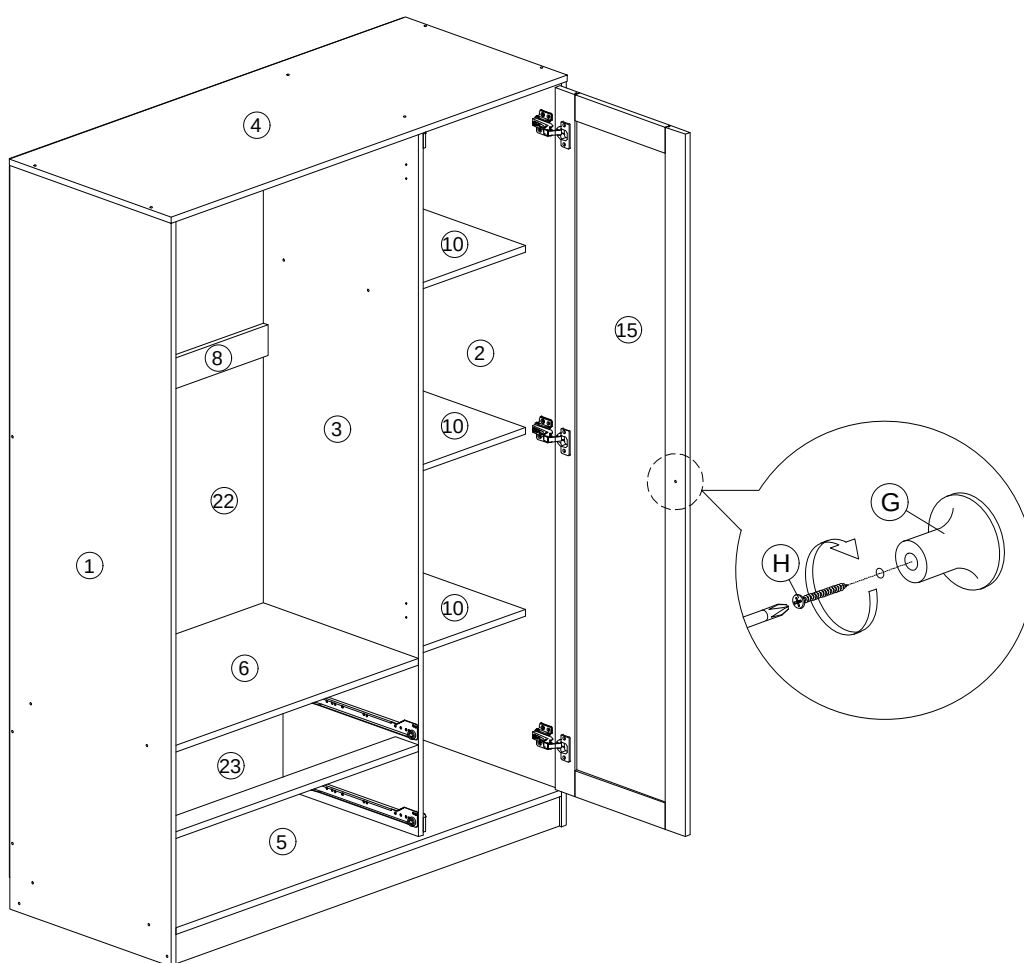


Assembly Instruction

Step 22

C		M3.5x16mm Screw	12Pcs
---	---	-----------------	-------


L		Hinges 5/8	2Pcs
---	---	------------	------

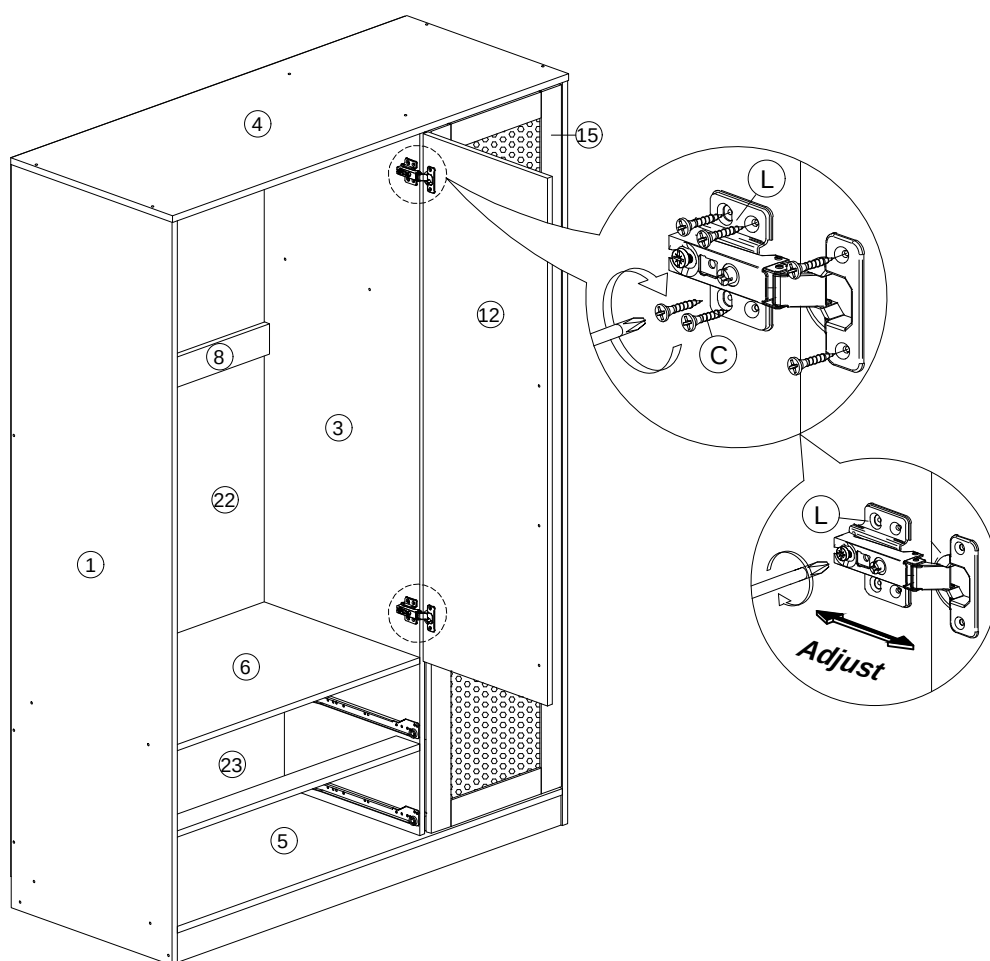

Assembly Instruction

Step 23

I		M4x38mm Screw	3Pcs
---	---	---------------	------

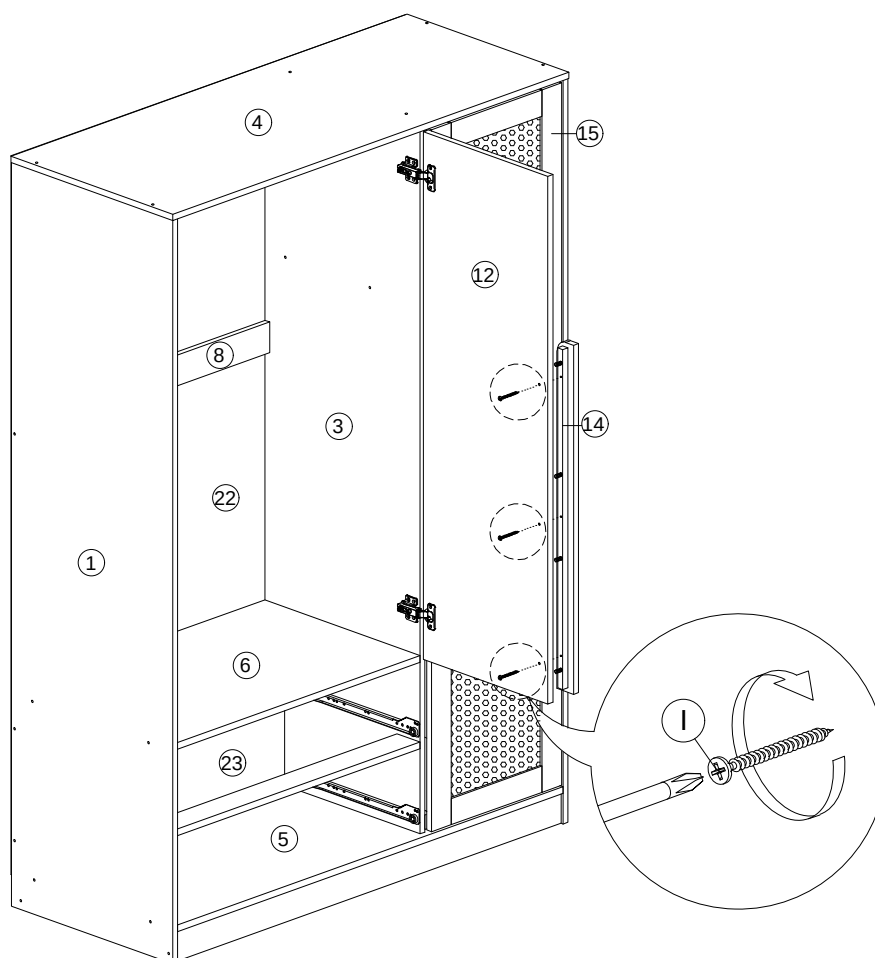


Assembly Instruction

Step 24

C		M3.5x16mm Screw	12Pcs
---	---	-----------------	-------


K		Hinges 7/8	2Pcs
---	---	------------	------

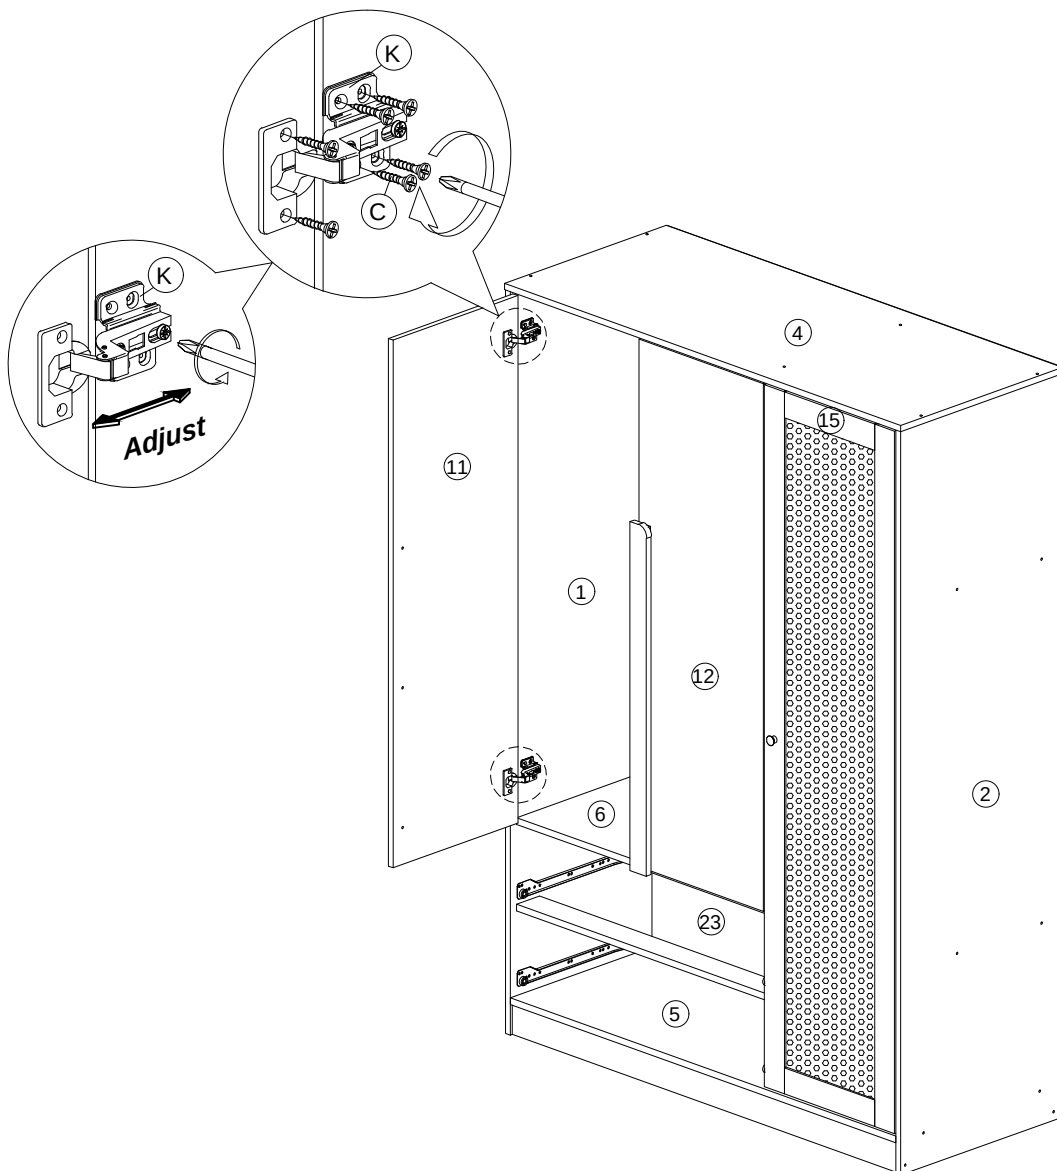

Assembly Instruction

Step 25


I		M4x38mm Screw	3Pcs
---	---	---------------	------

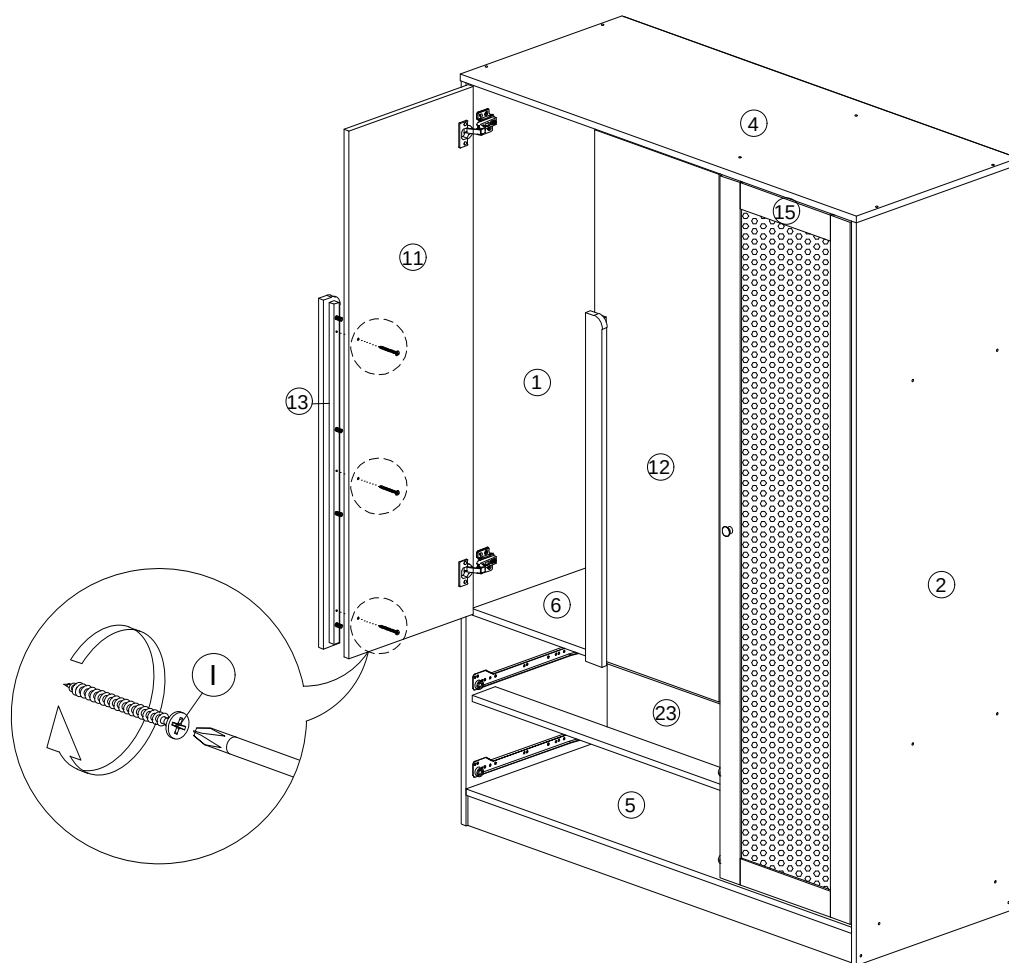

Assembly Instruction


Step 26

D		M4x45mm Screw	2Pcs
---	---	---------------	------

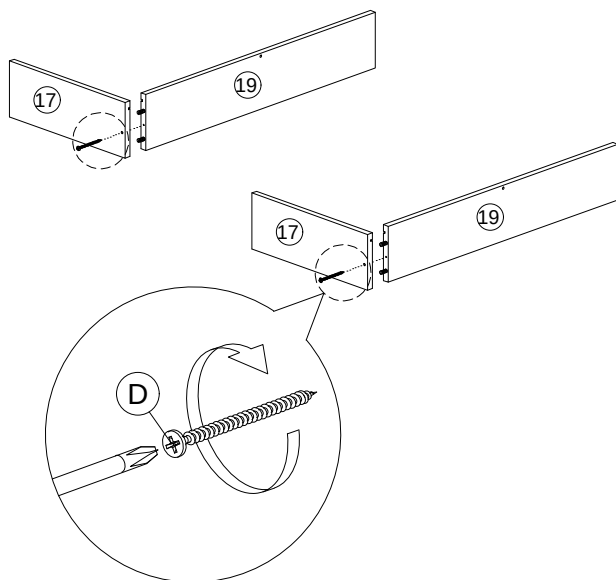


Step 27

D		M4x45mm Screw	2Pcs
---	---	---------------	------

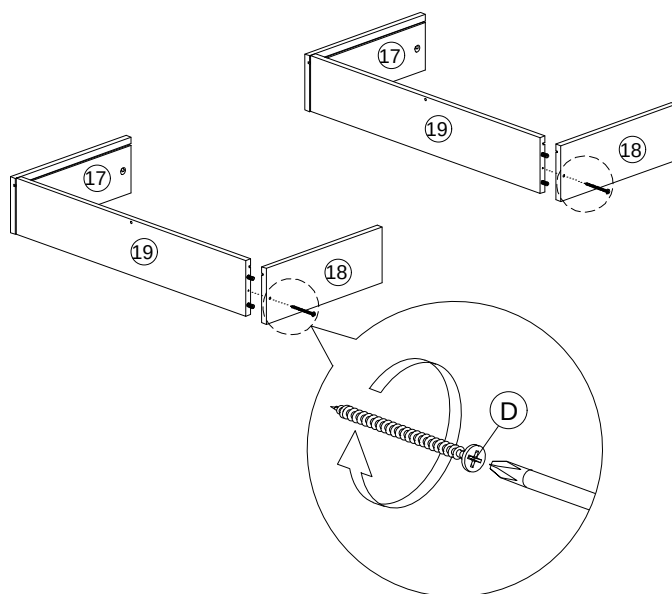


Step 28

D		M4x45mm Screw	2Pcs
---	---	---------------	------

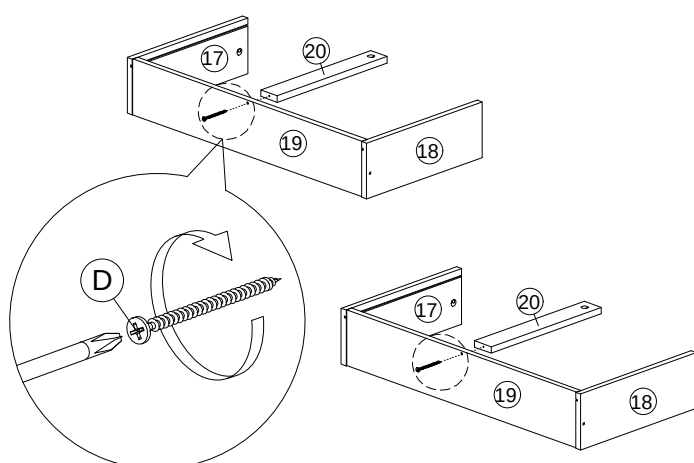


Step 29

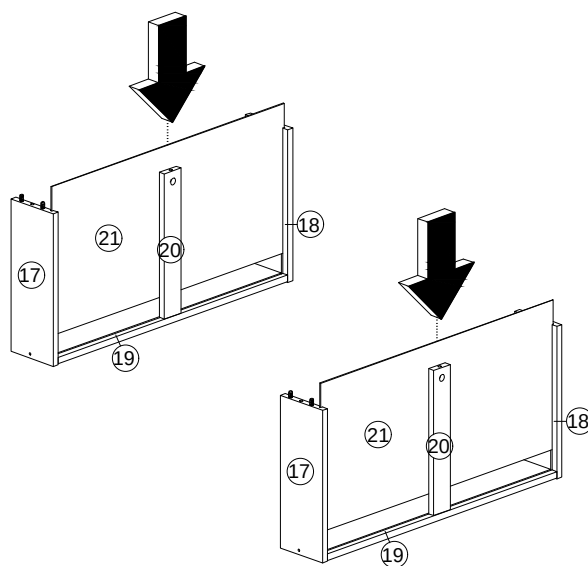

Assembly Instruction


Step 30

B		Minifix	2Pcs
---	---	---------	------

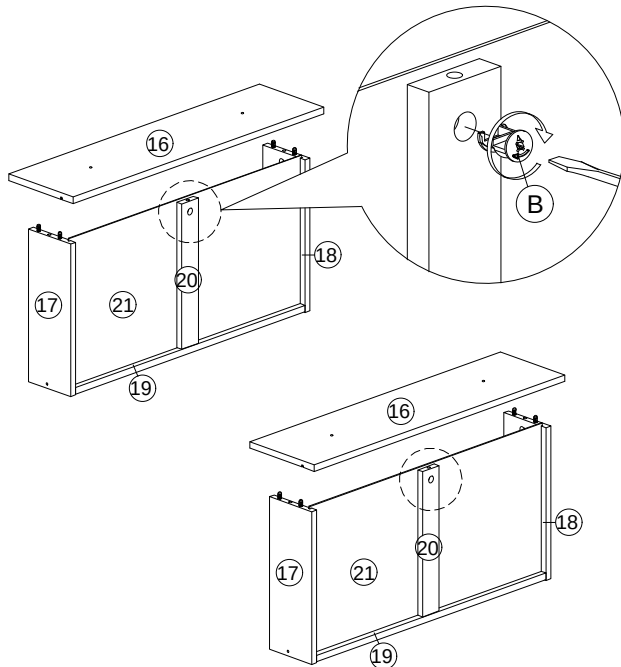


Step 31

B		Minifix	2Pcs
---	---	---------	------

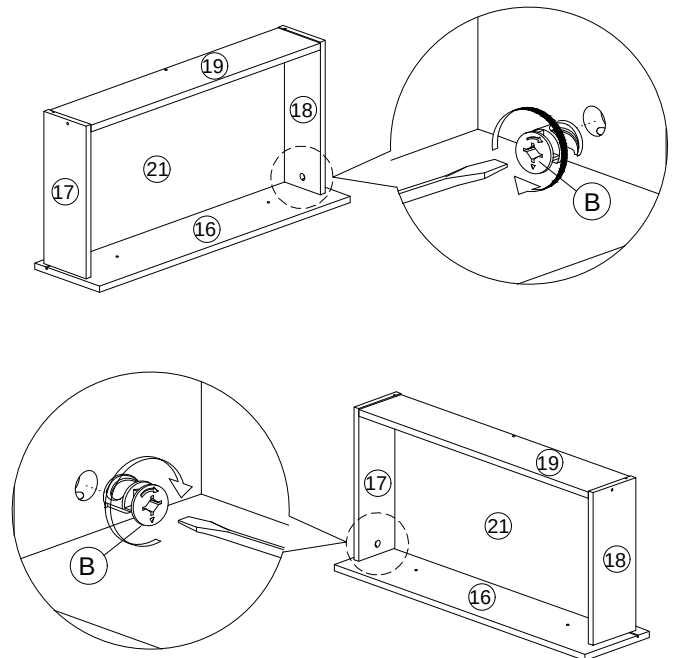


Step 32

B		Minifix	2Pcs
---	---	---------	------

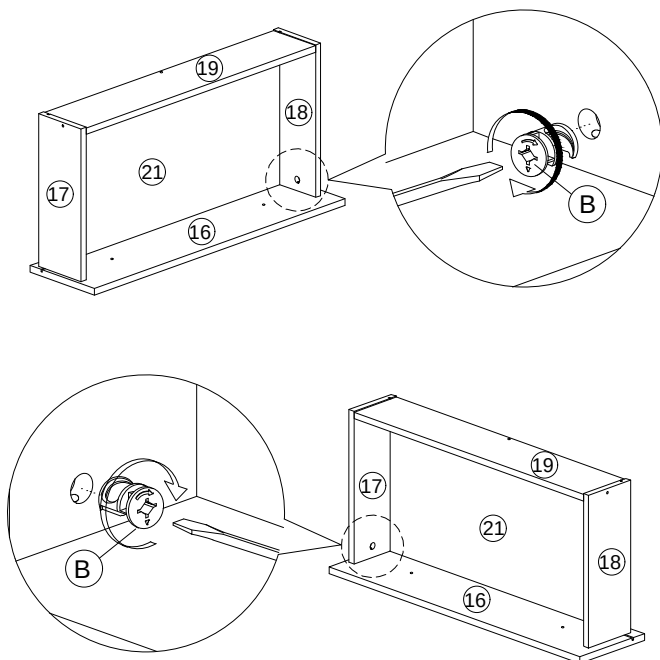

Step 33


G		Handle 209	4Pcs
H		M4x28mm Screw	4Pcs

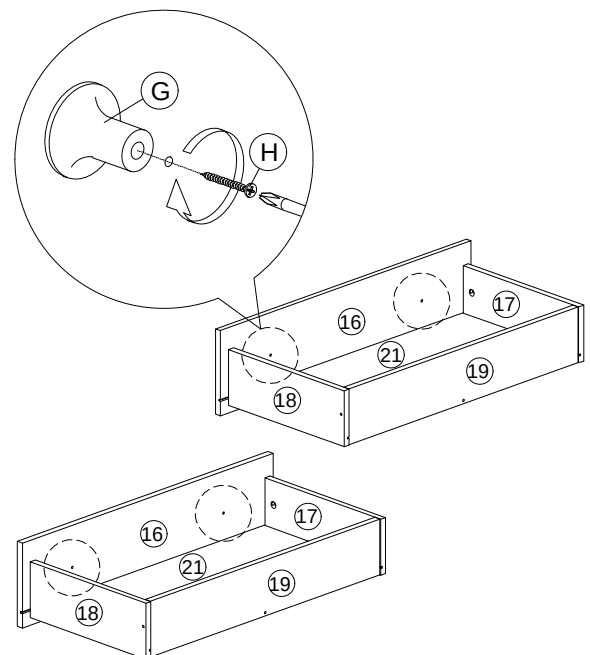

Assembly Instruction


Step 34

C		M3.5x16mm Screw	3Pcs
O		Drawer Slide 350mm - L	1Pc

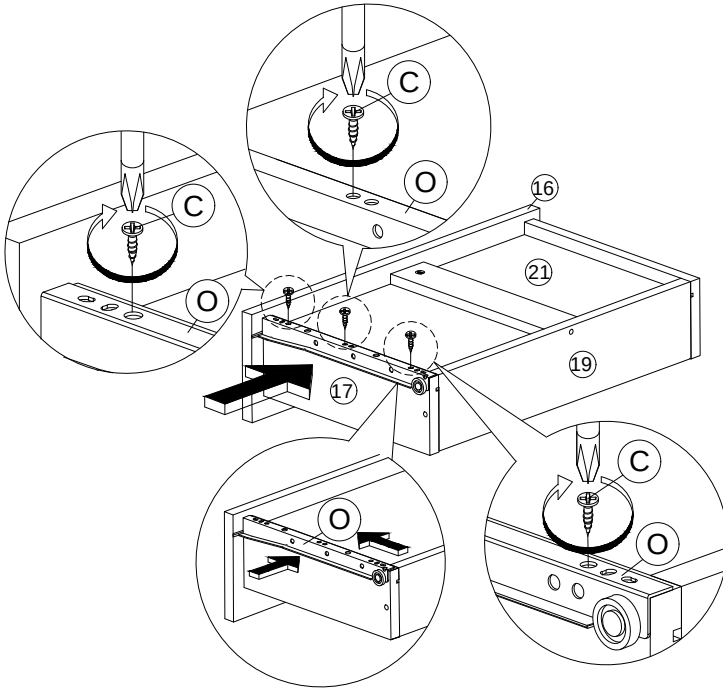


Step 35

C		M3.5x16mm Screw	3Pcs
O		Drawer Slide 350mm - R	1Pc

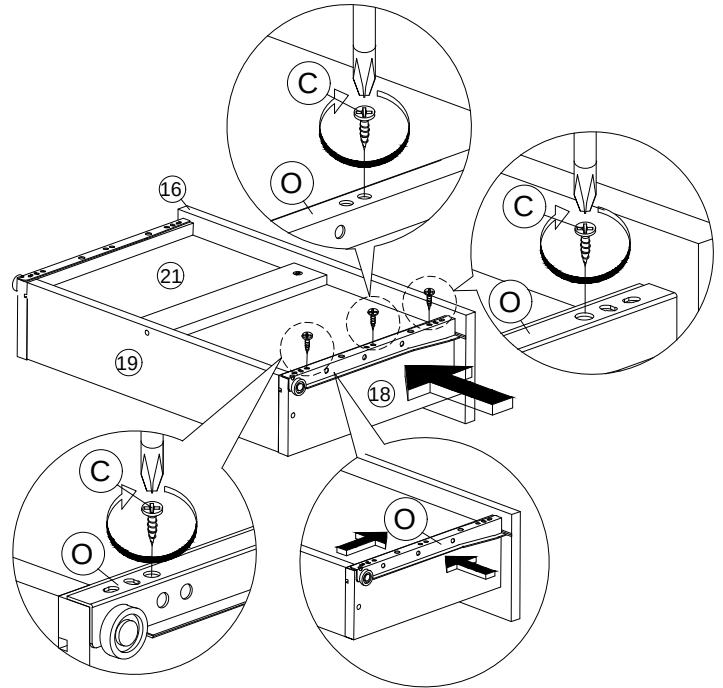


Step 36

C		M3.5x16mm Screw	3Pcs
O		Drawer Slide 350mm - L	1Pc

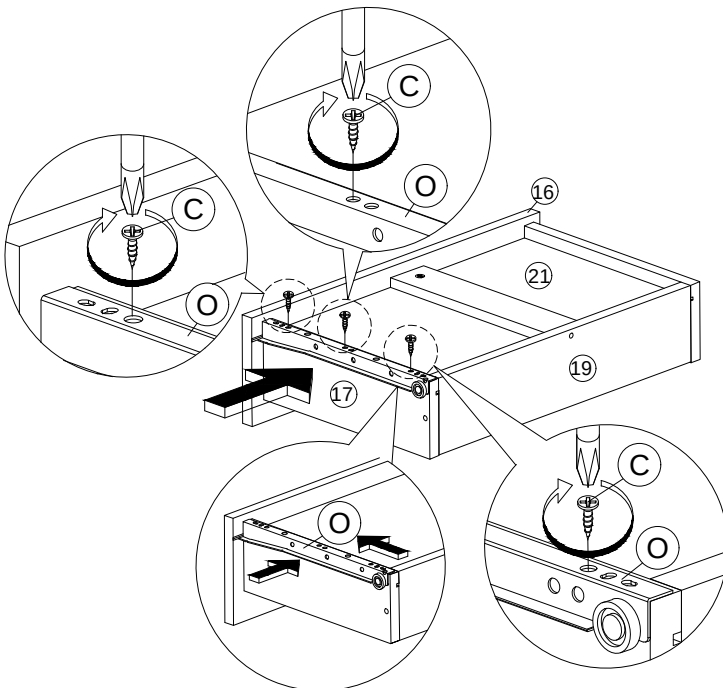


Step 37

C		M3.5x16mm Screw	3Pcs
O		Drawer Slide 350mm - R	1Pc

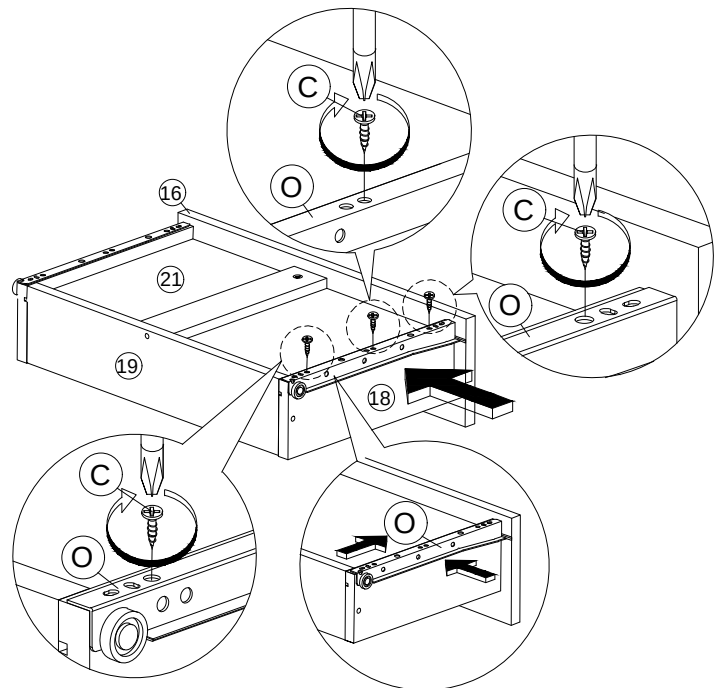

Assembly Instruction

Step 38

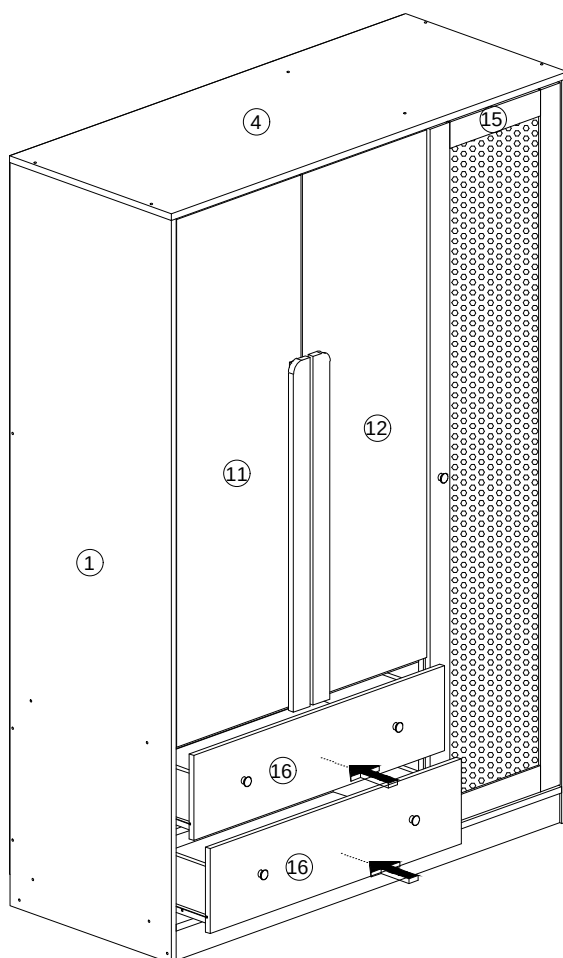

FITTING OF ANTI-TIP SAFETY STRAP

STEP 1:

- Attach the mounting bracket (a) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (b) through the smallest hole of (a).

STEP 2:

- Locate a stud in behind the have to
- Place the other mounting bracket (a) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (c) through the smaller hole of (a).

STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

