


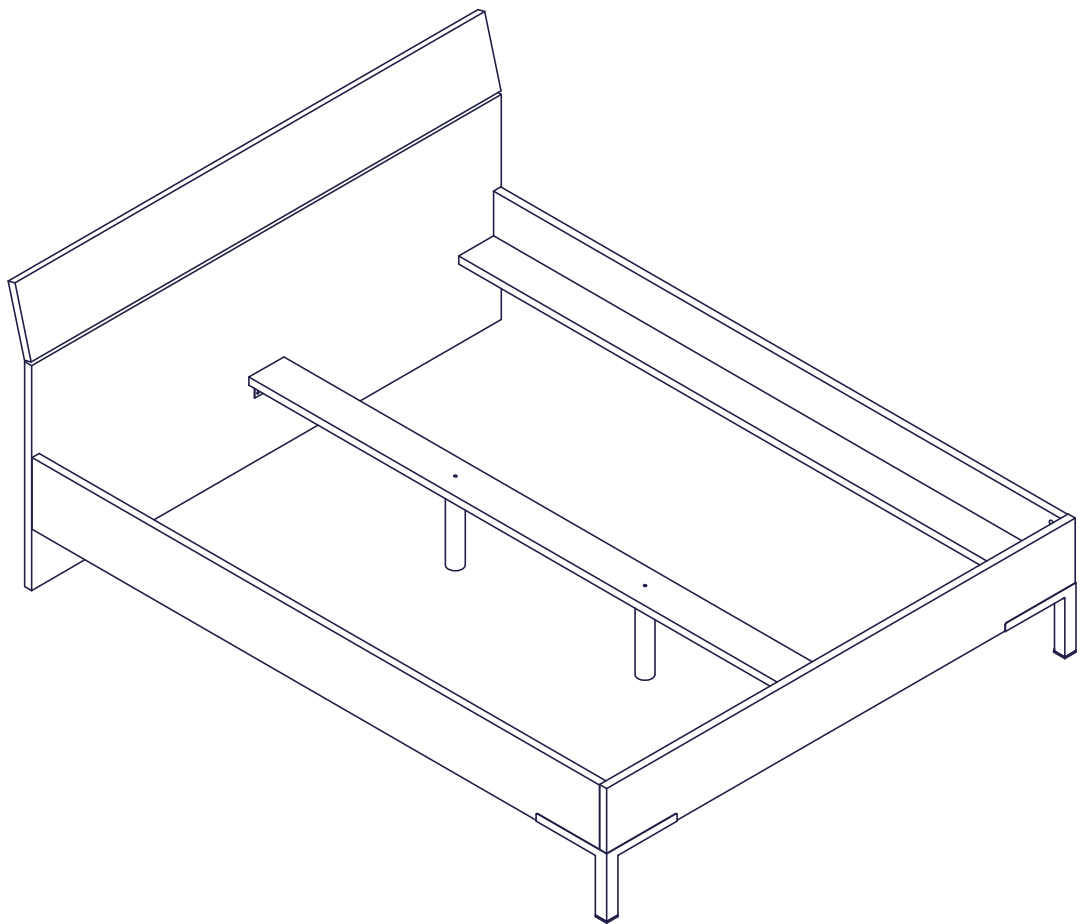
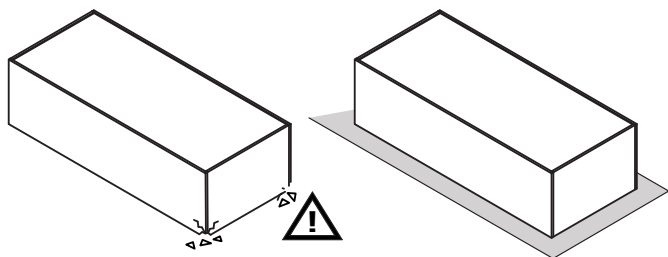


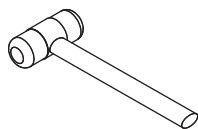


BU2875

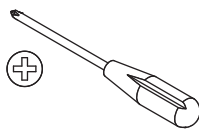


H1
x16



T28
x8




T92
x8



V57
x10



V10
x44




P16
x3




H15
x6

CF0282

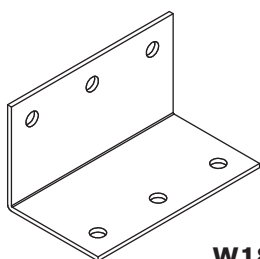

W186
x6

CF0159

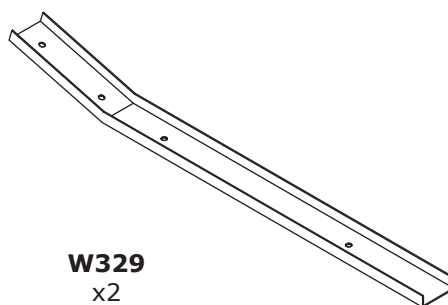


W329
x2



W344
x2

CF1823B14004


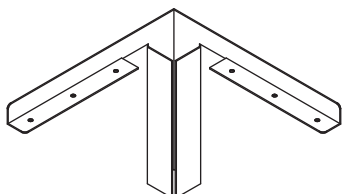


W327
x2

BU2684



V59
x12

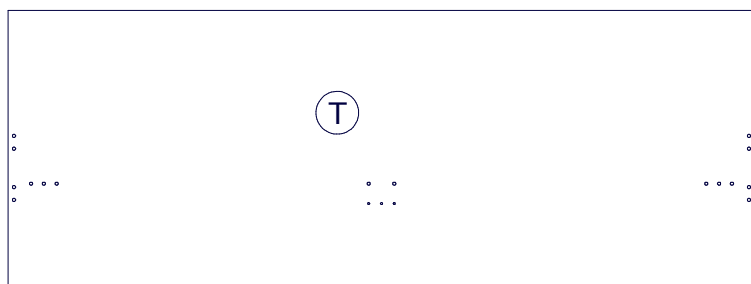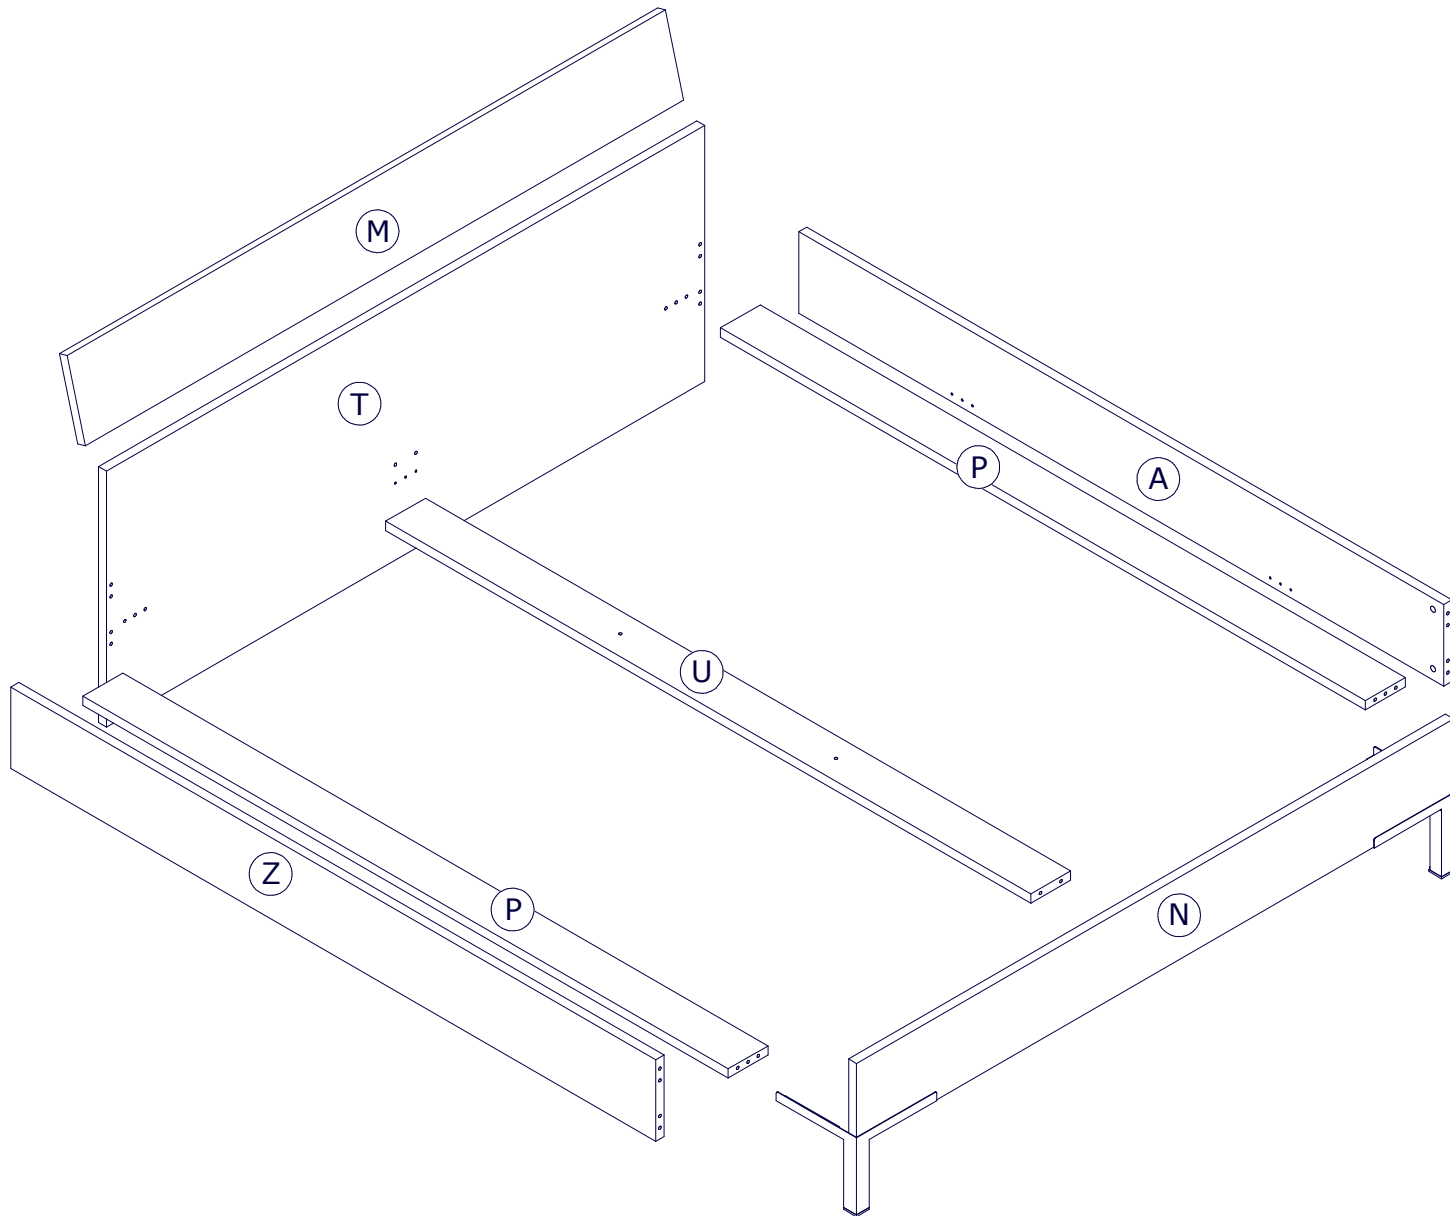

• **TE0247**
1664x690x25mm




• **PE0116**
1660x222x25mm



• **TE0249**
1664x222x25mm



• **SP0387**
2010x220x25mm





• **SP0385**
2010x220x25mm






• **FS2208**
2010x124x25mm






• **FS2211**
2010x124x25mm



1	 P16 x 3	 H15 x 6	
------------	---	--	--

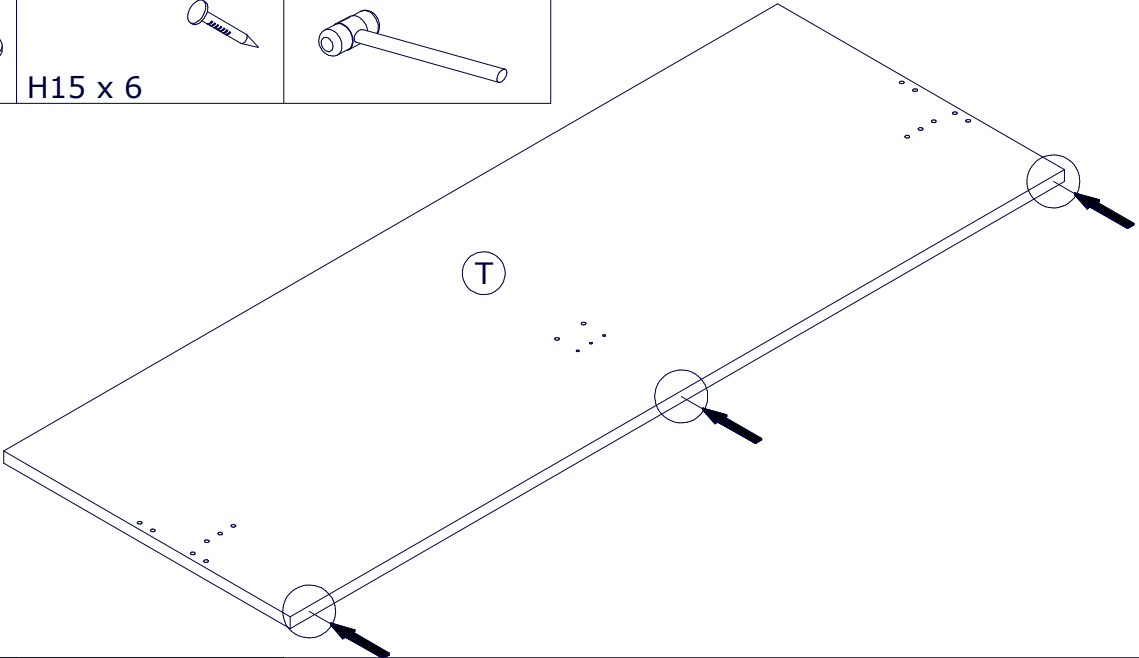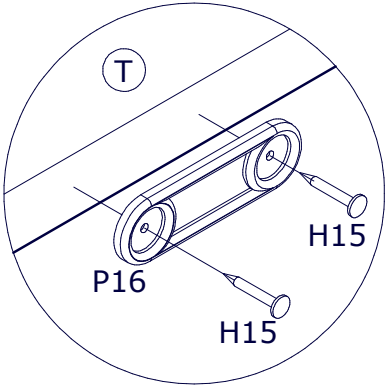

2	 T28 x 8	
------------	--	---

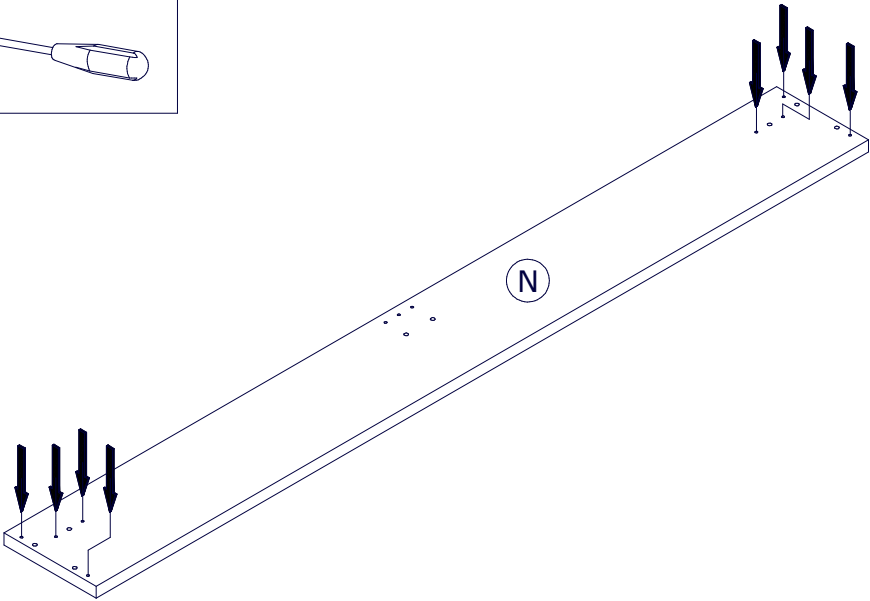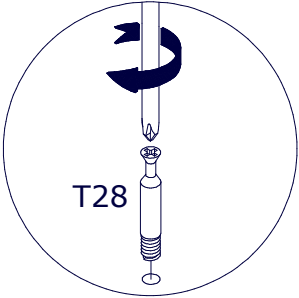

3	 H1 x 16	
------------	--	---






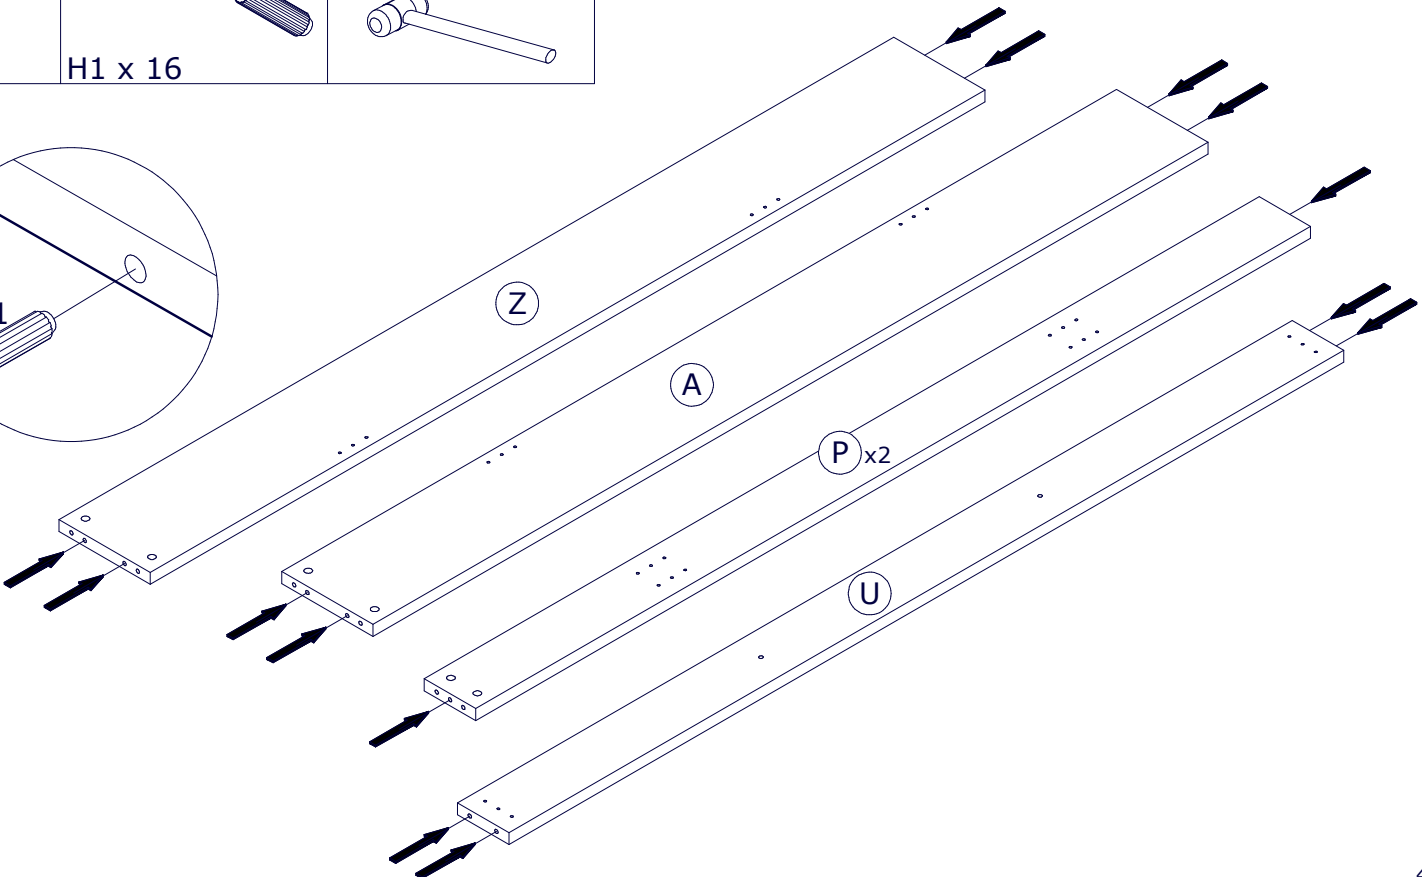
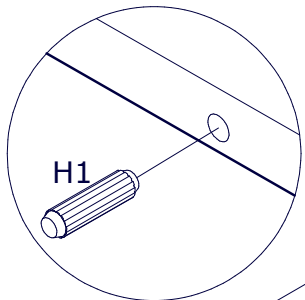


4

W186 x 6




V10 x 18

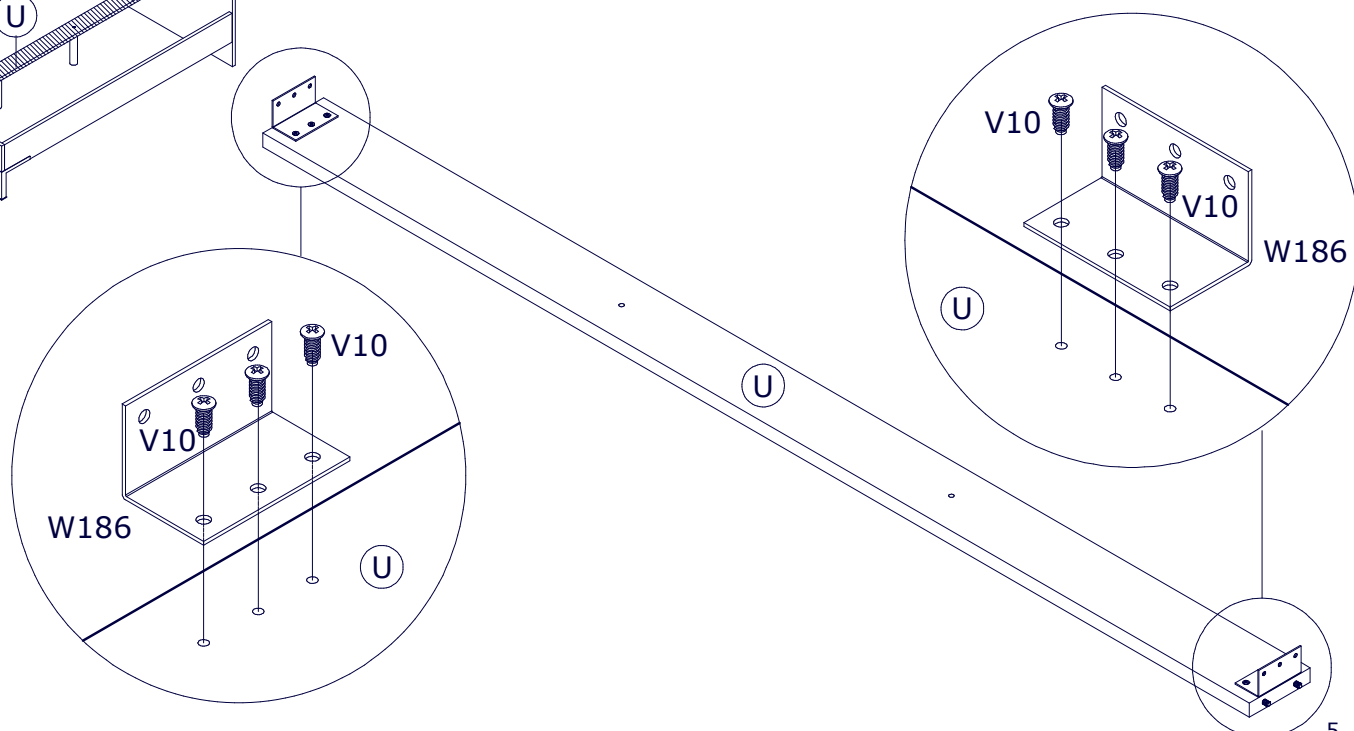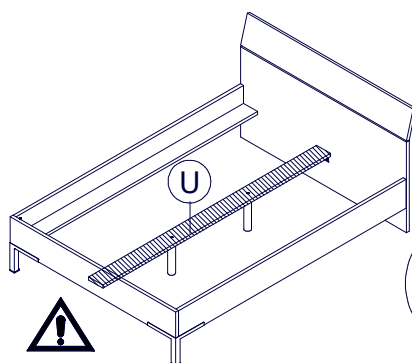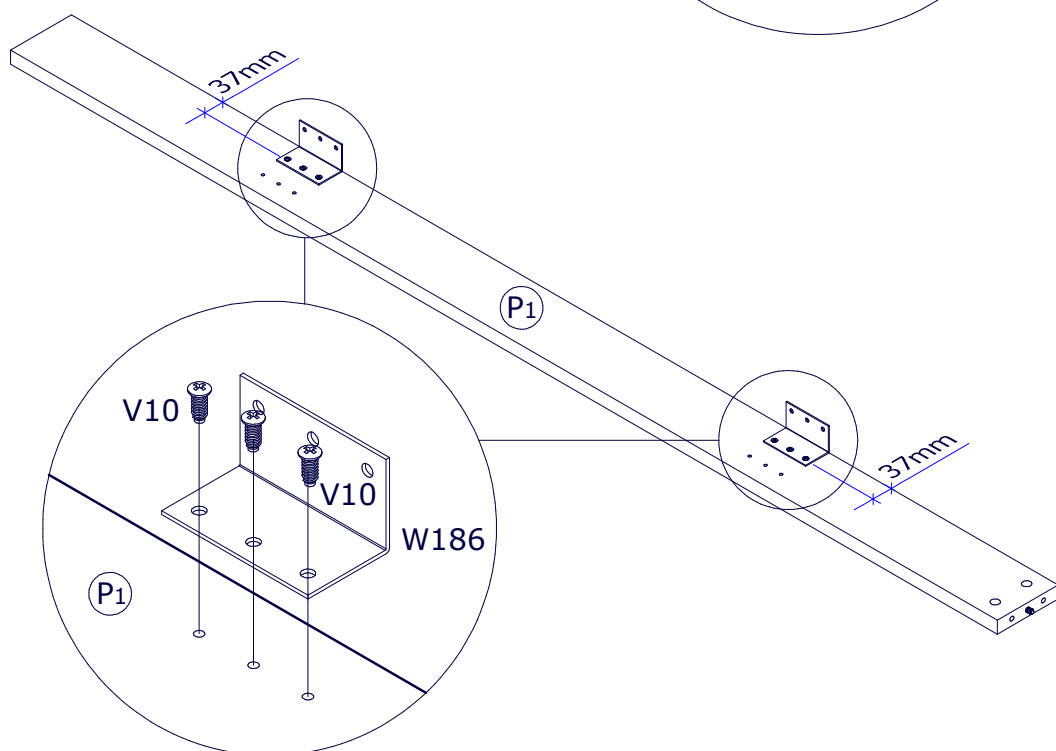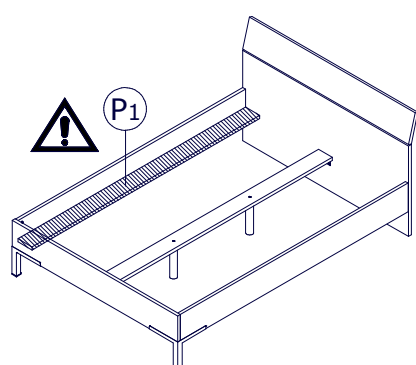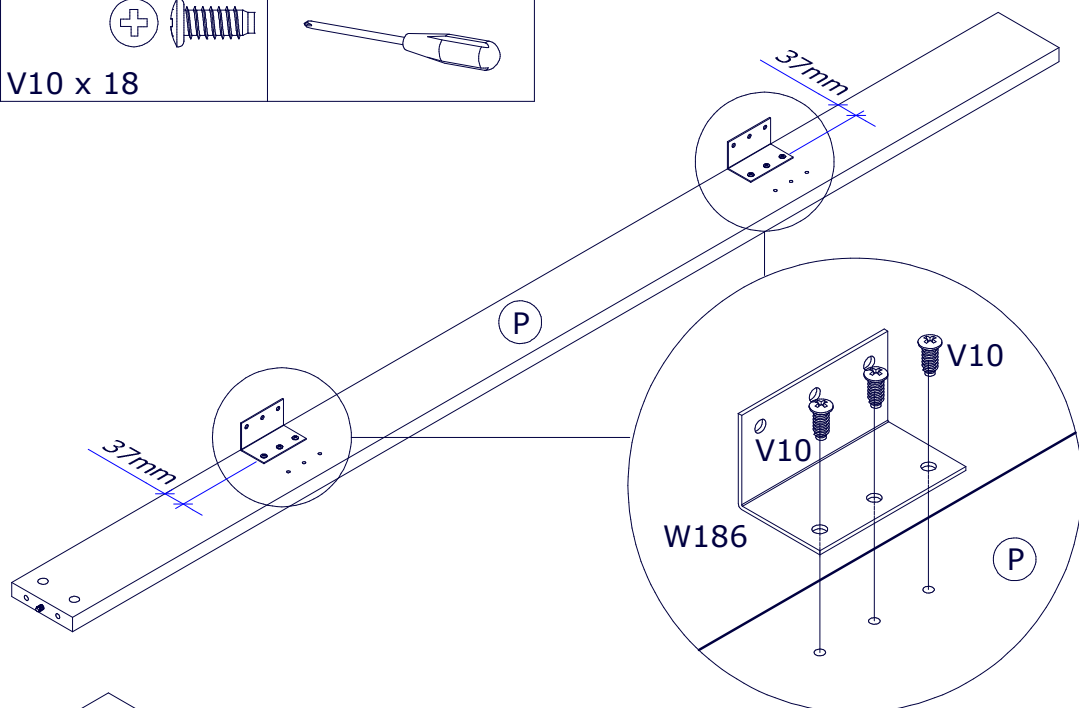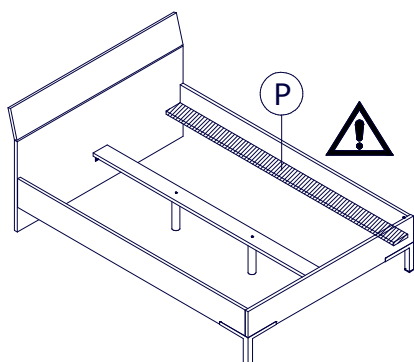



5

W344 x 2





V57 x 2

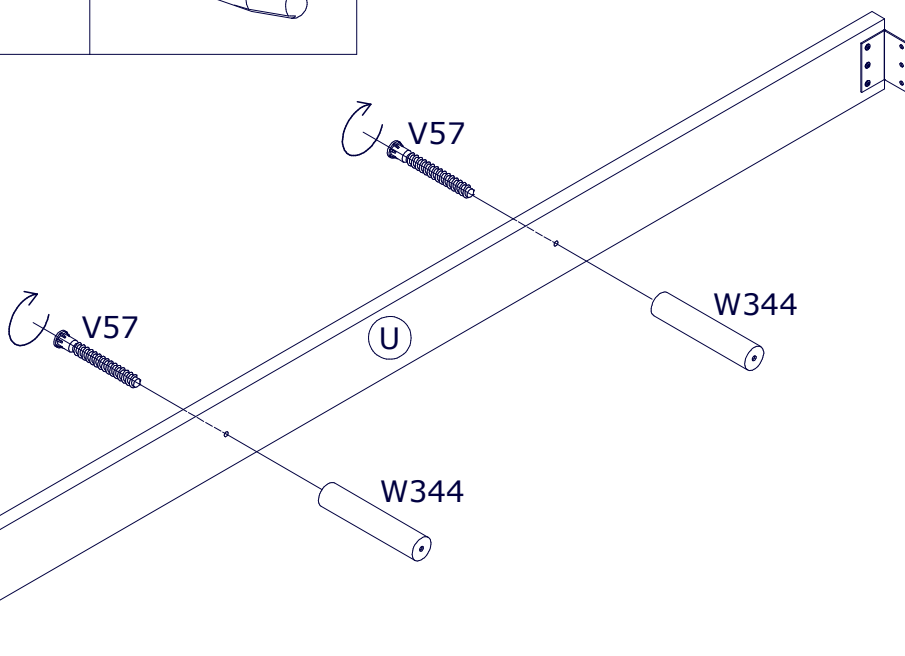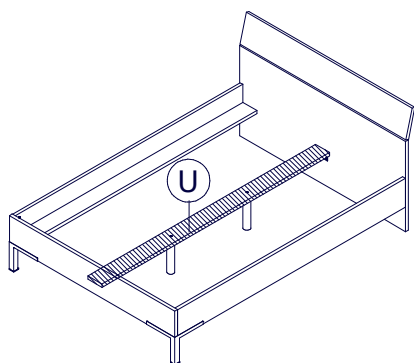

6




V10 x 12

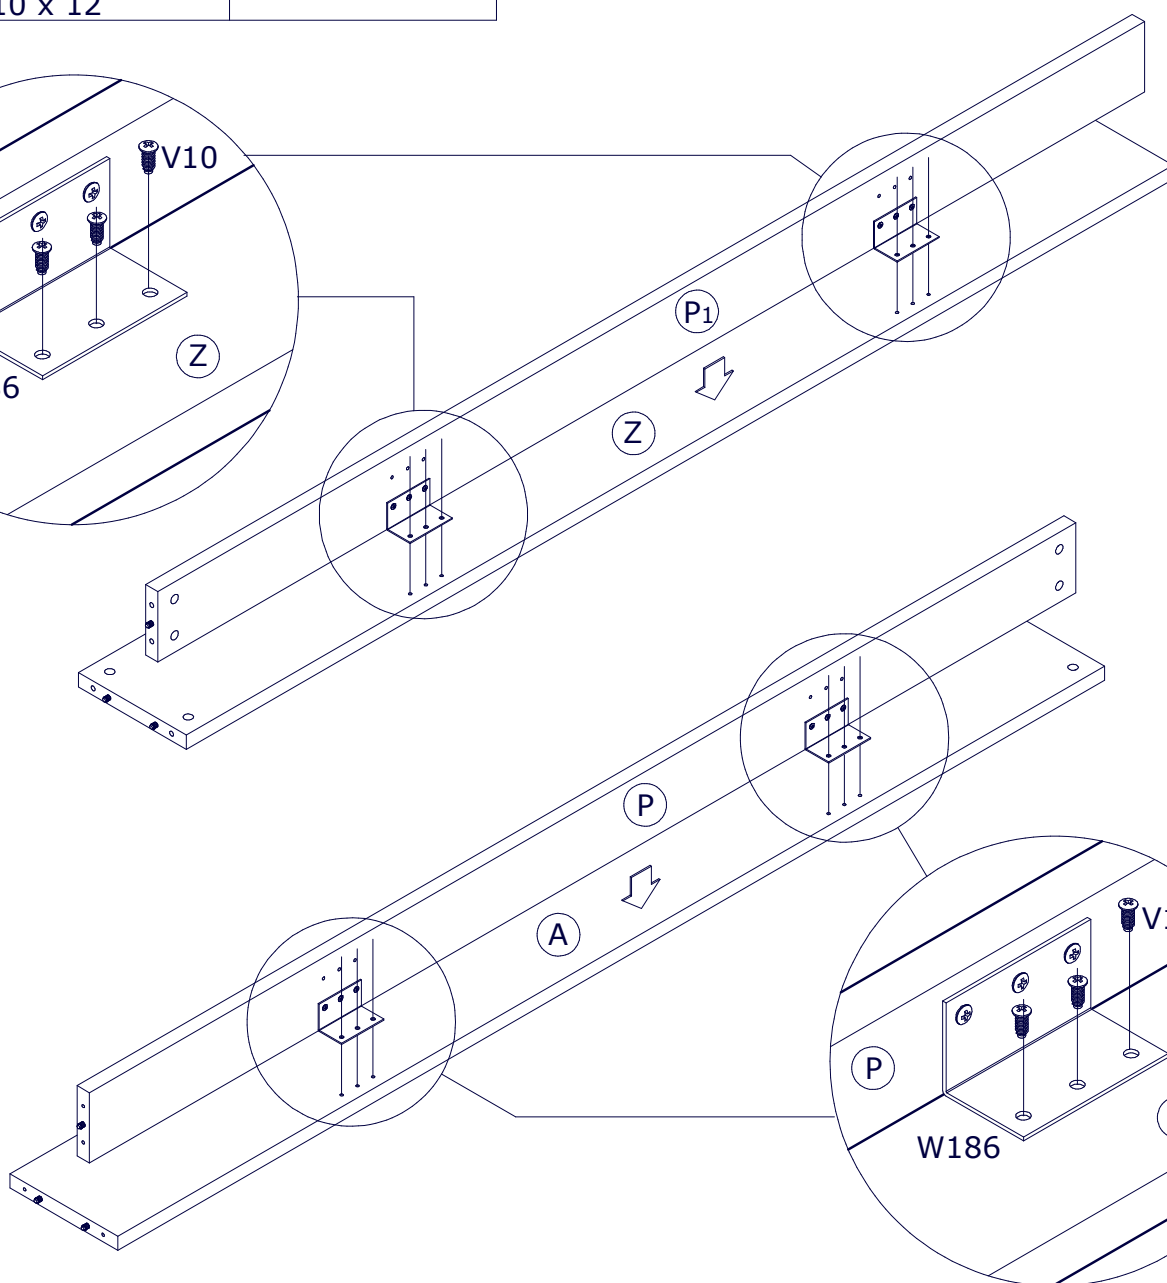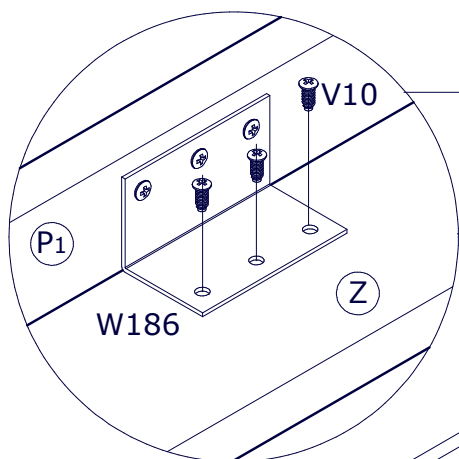


7

T92 x 4

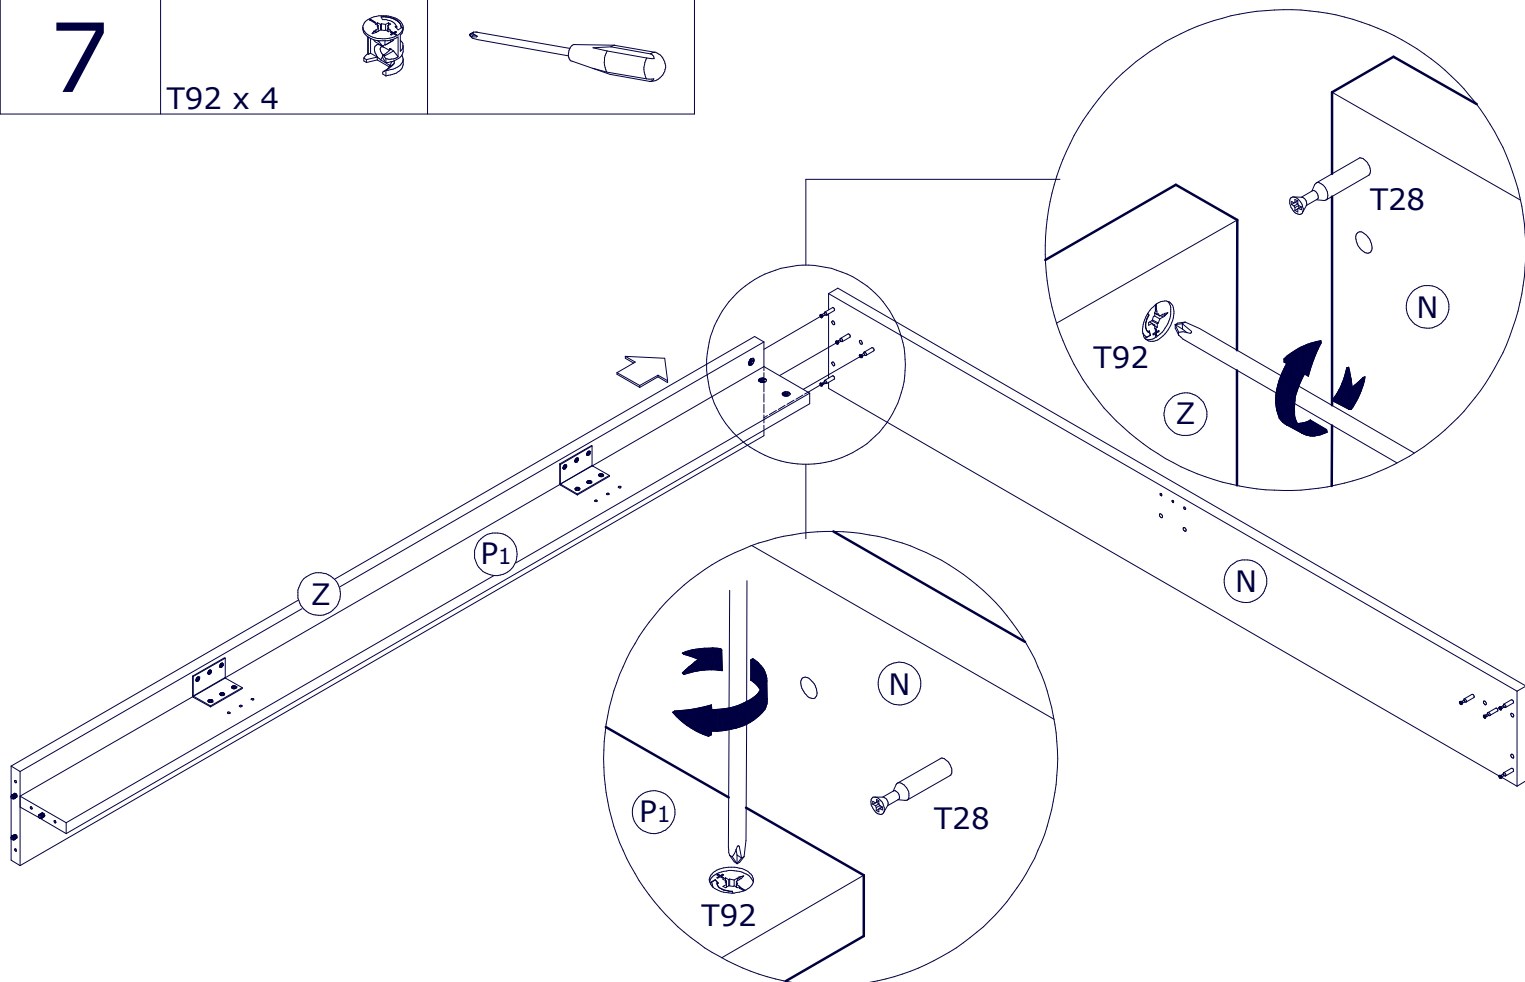


8

T92 x 4

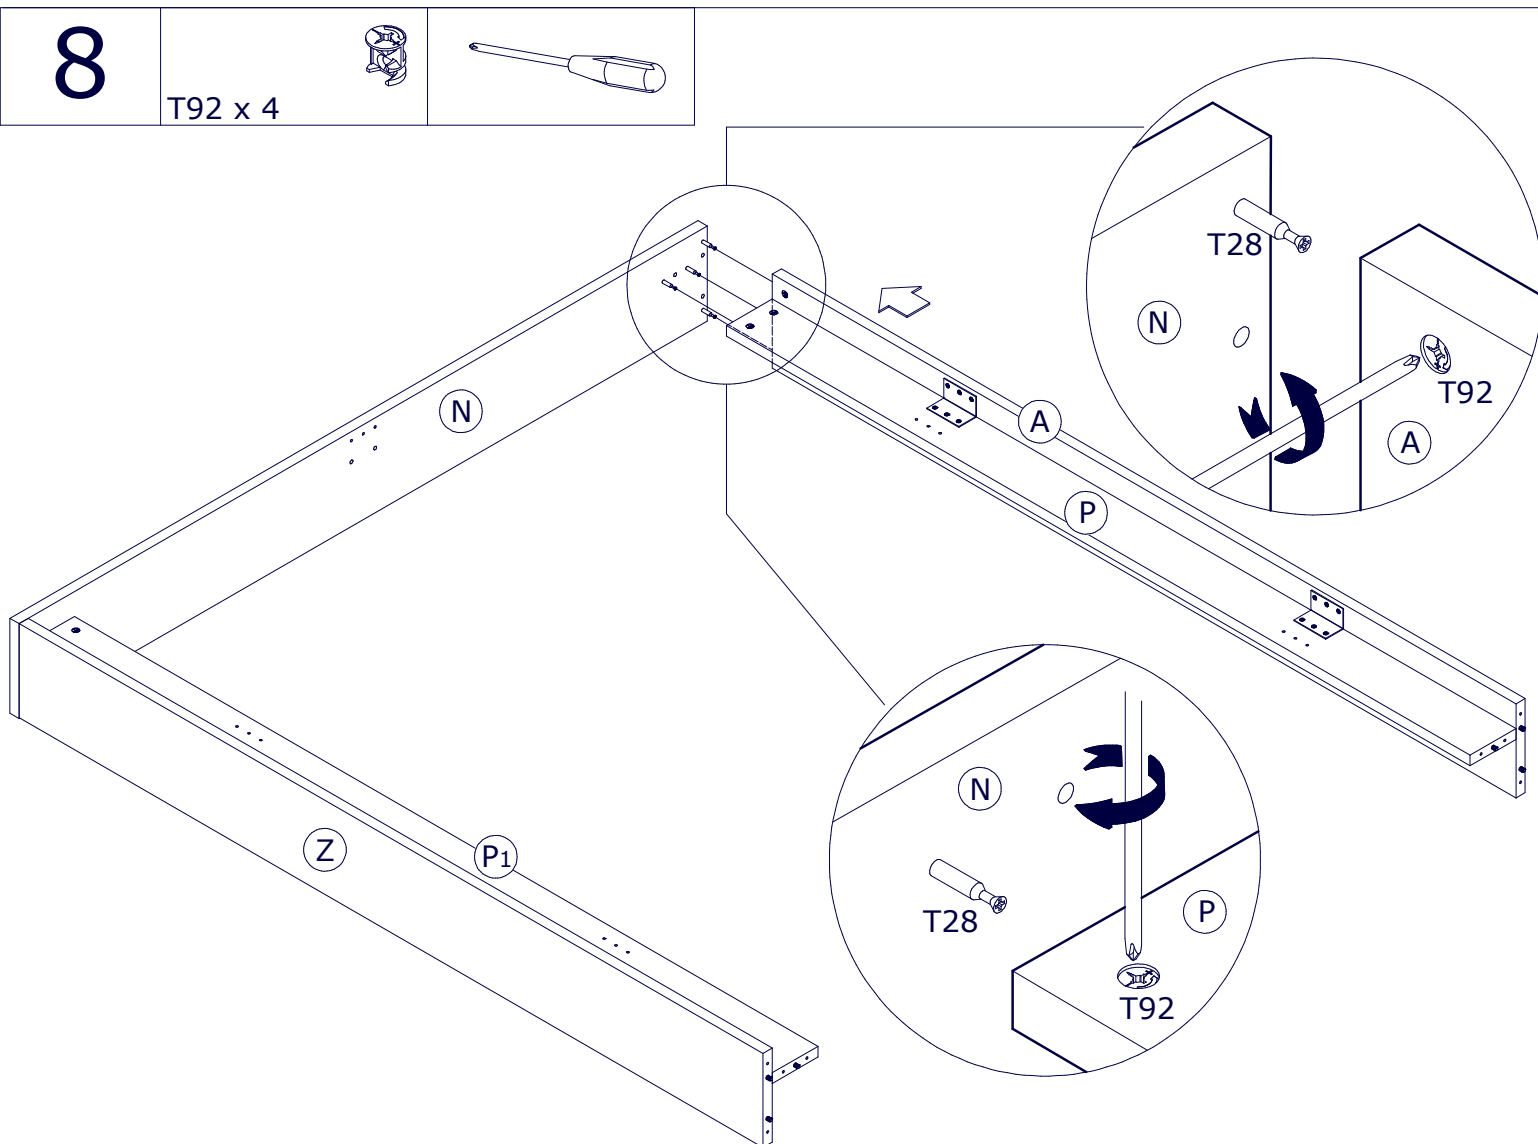


9


W327 x 2








V59 x 12

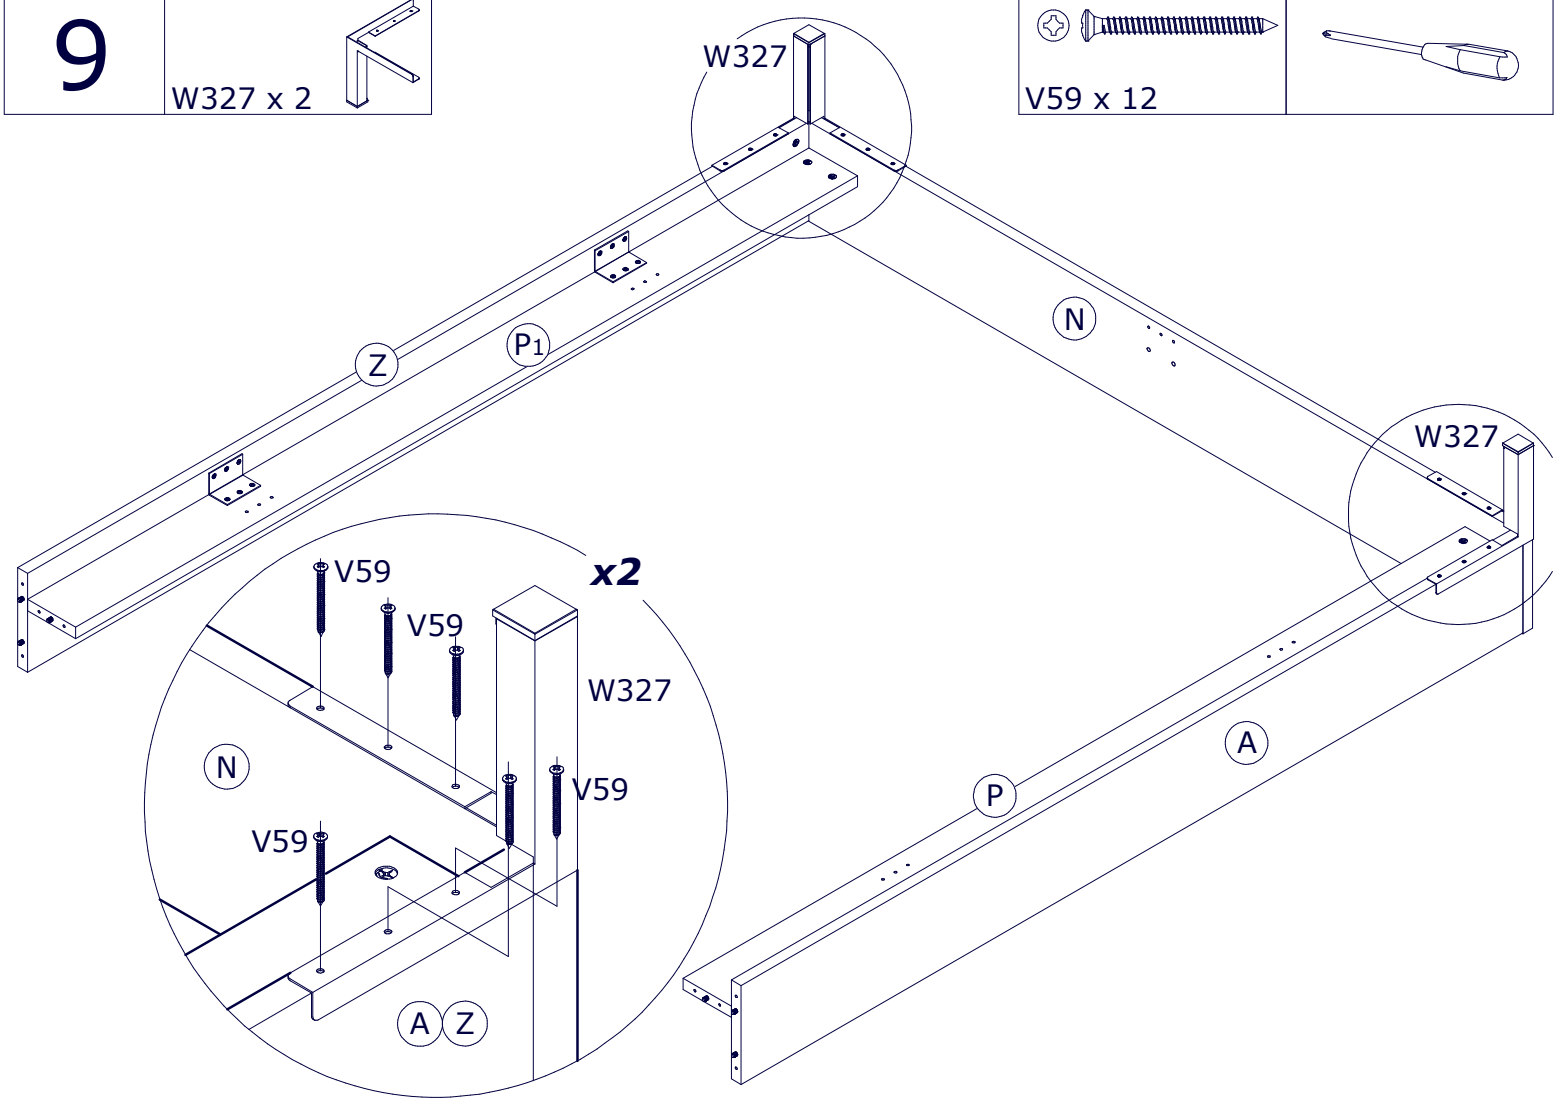


10


V10 x 3






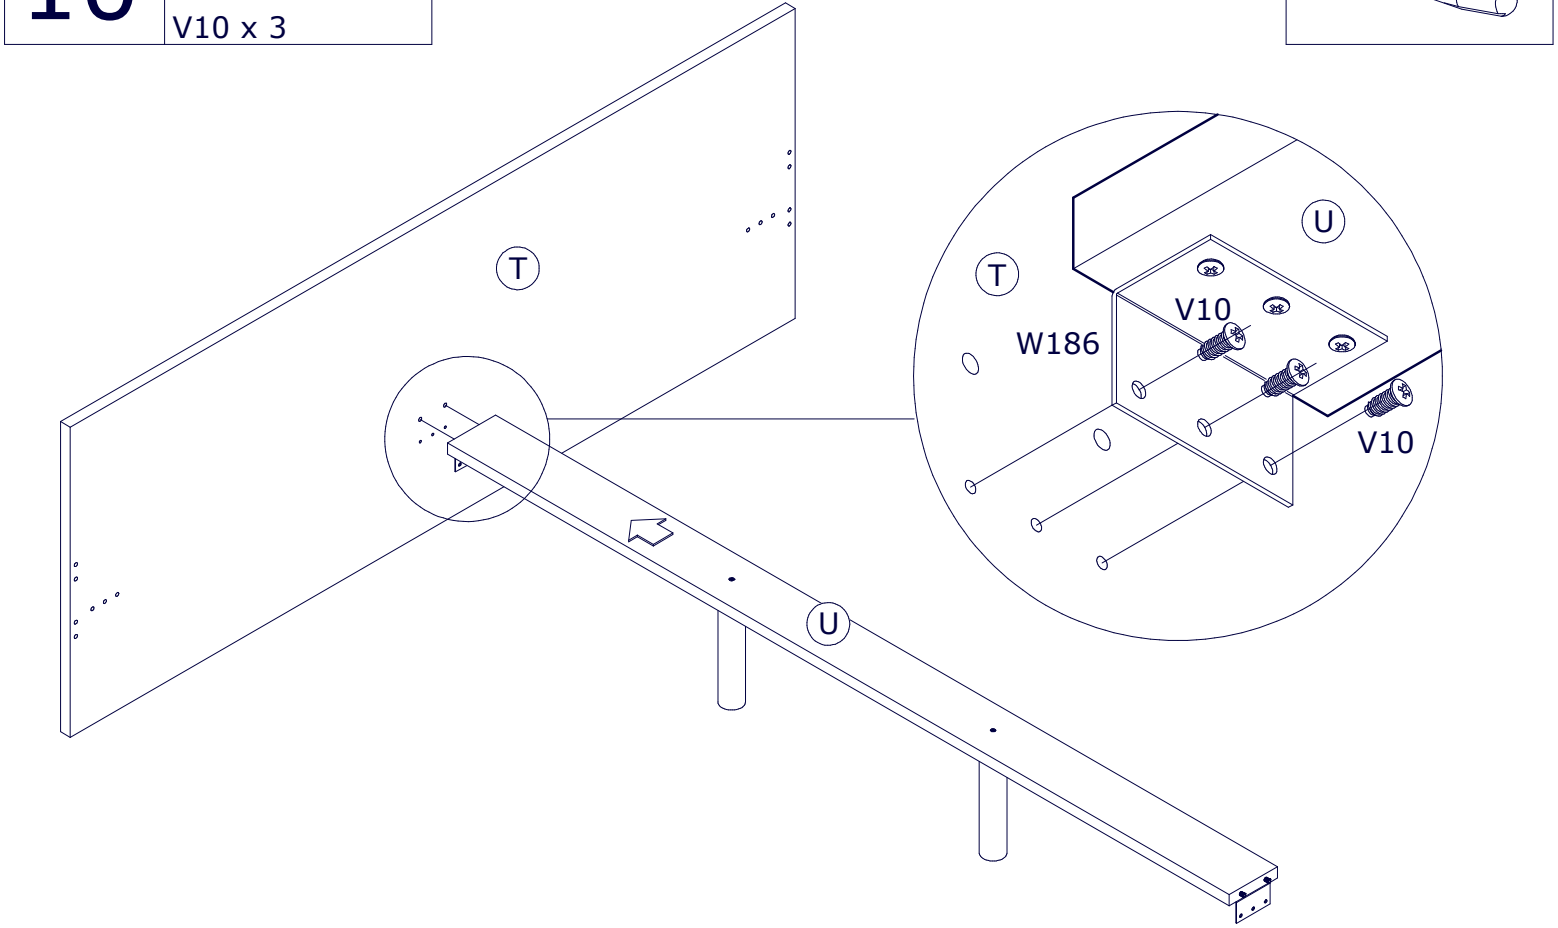


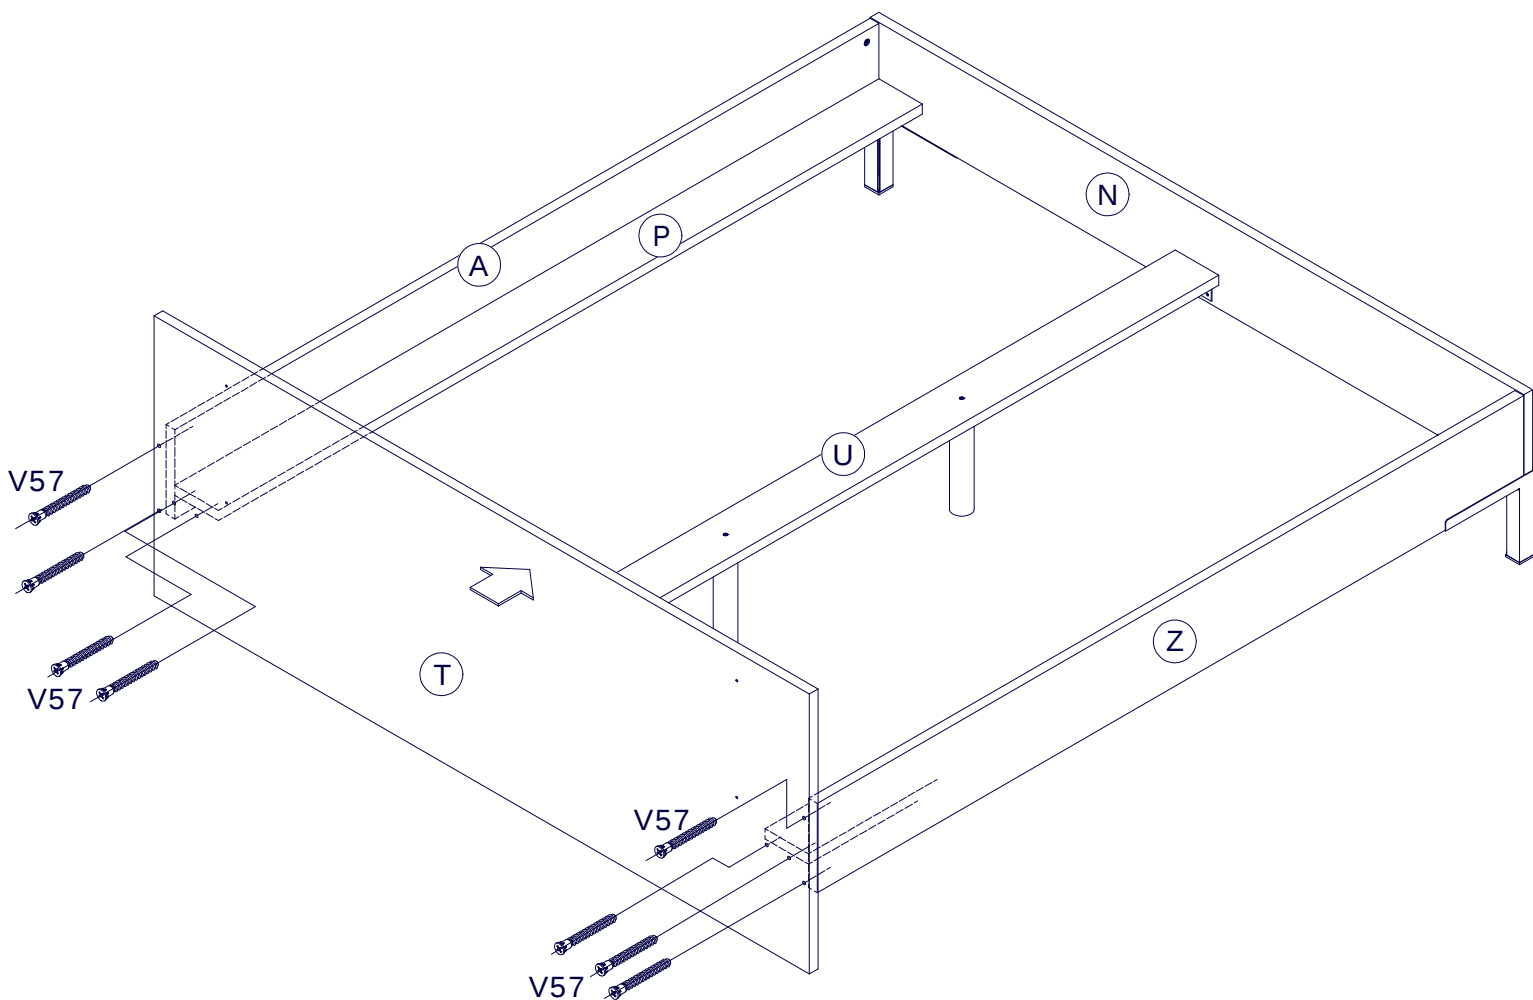
11

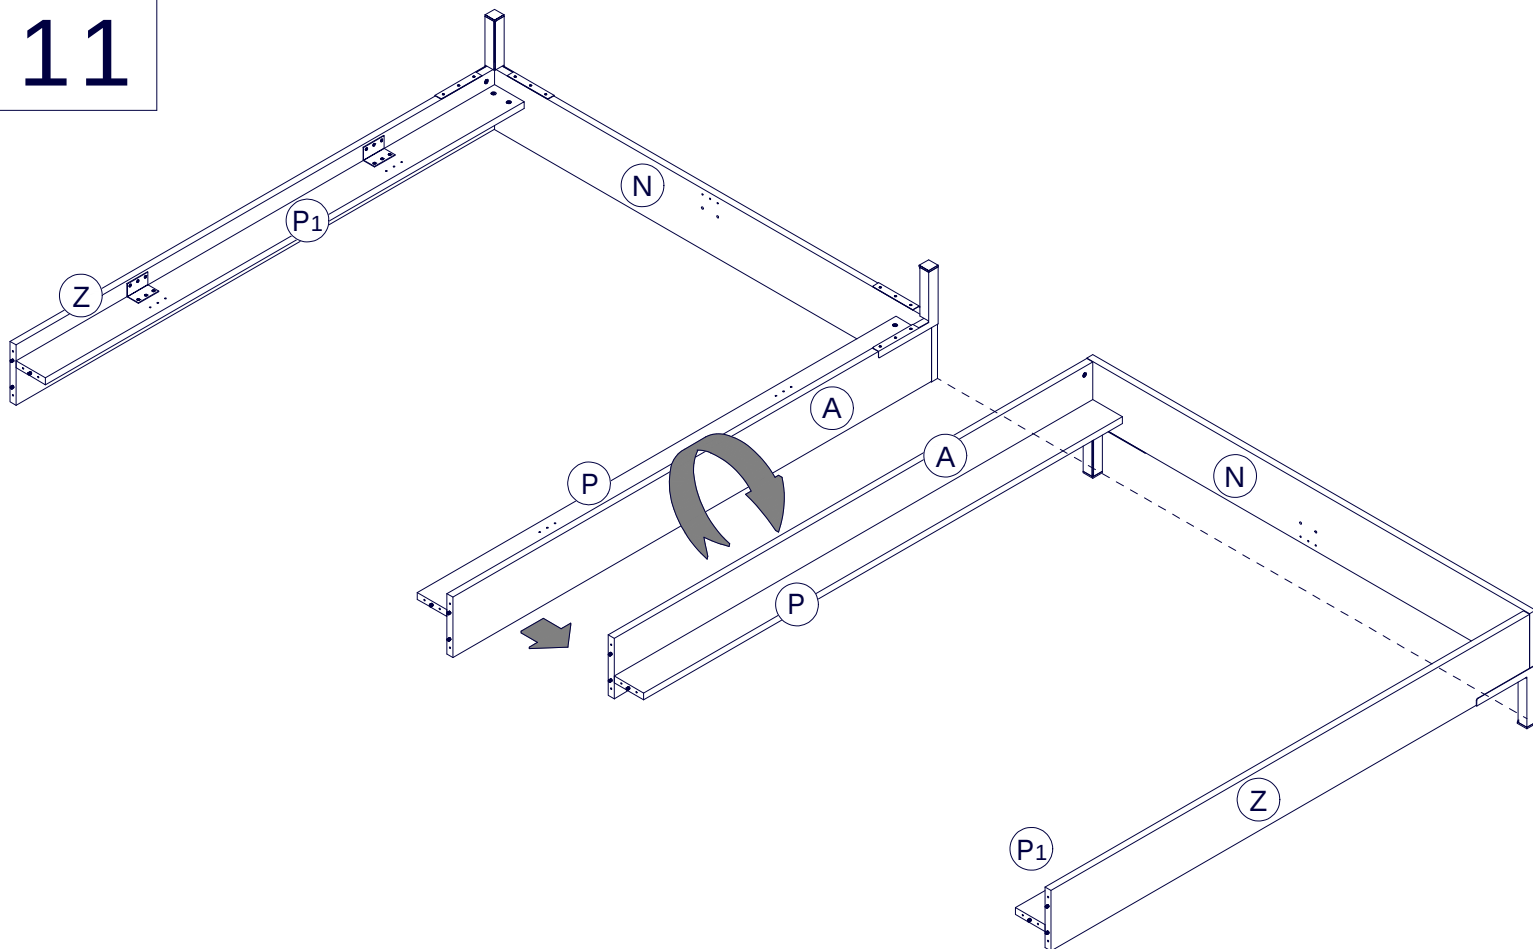


12





V57 x 8



13



V10 x 3

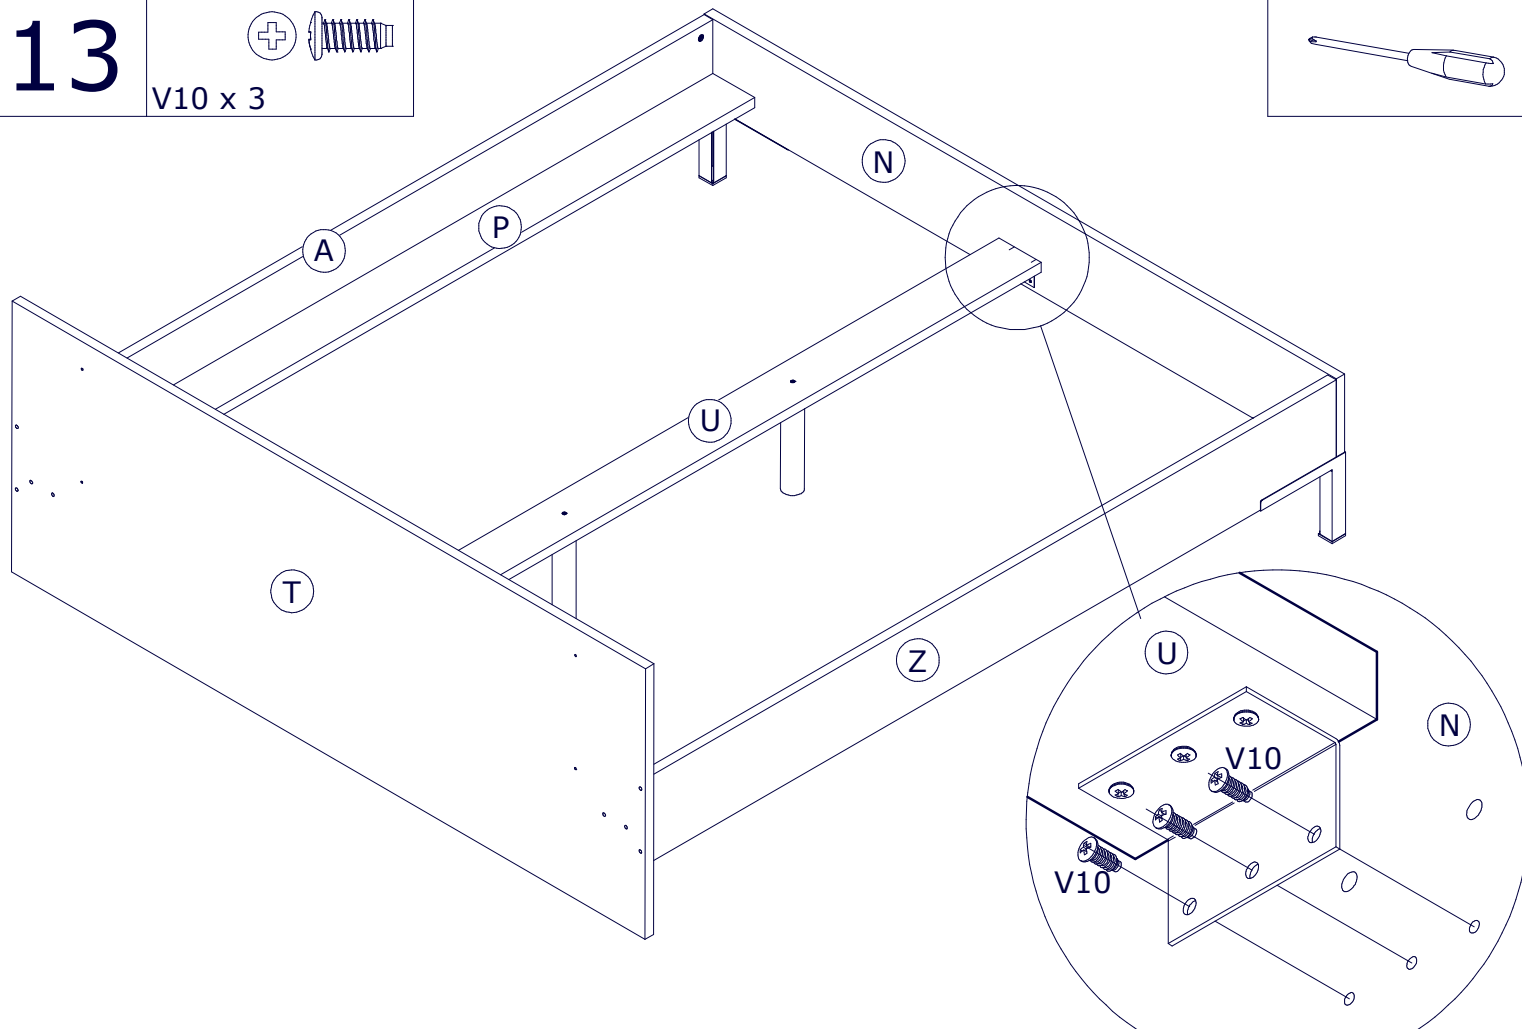



14



W329 x 2



V10 x 4

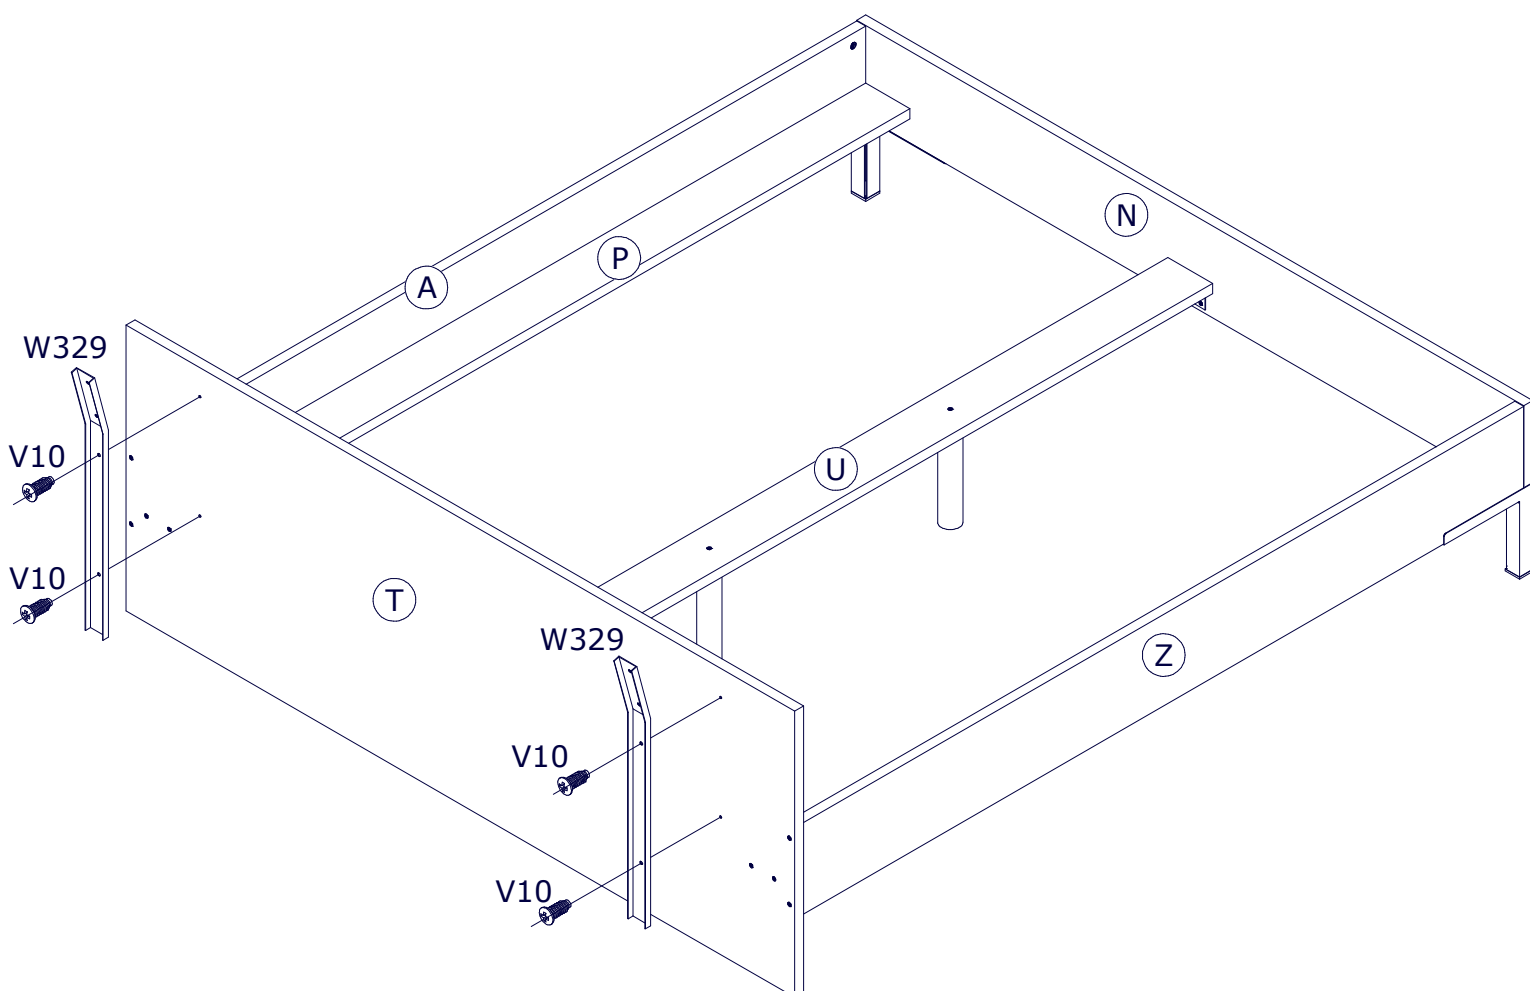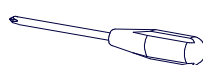

15

V10 x 4

This diagram illustrates the 15th step of assembling a bed frame. It shows a partially constructed frame with side rails A, P, N, U, and Z, and a central support rail M. The base of the frame is labeled T. Two side panels, labeled T and Z, are being attached to the side rails. Each panel is secured by two brackets, labeled W329, which are mounted to the side rails. The brackets are held in place by four screws, labeled V10, two on each bracket. An arrow points to the side panel T, indicating its position relative to the frame. The diagram is an isometric view showing the 3D structure of the bed frame.

11