

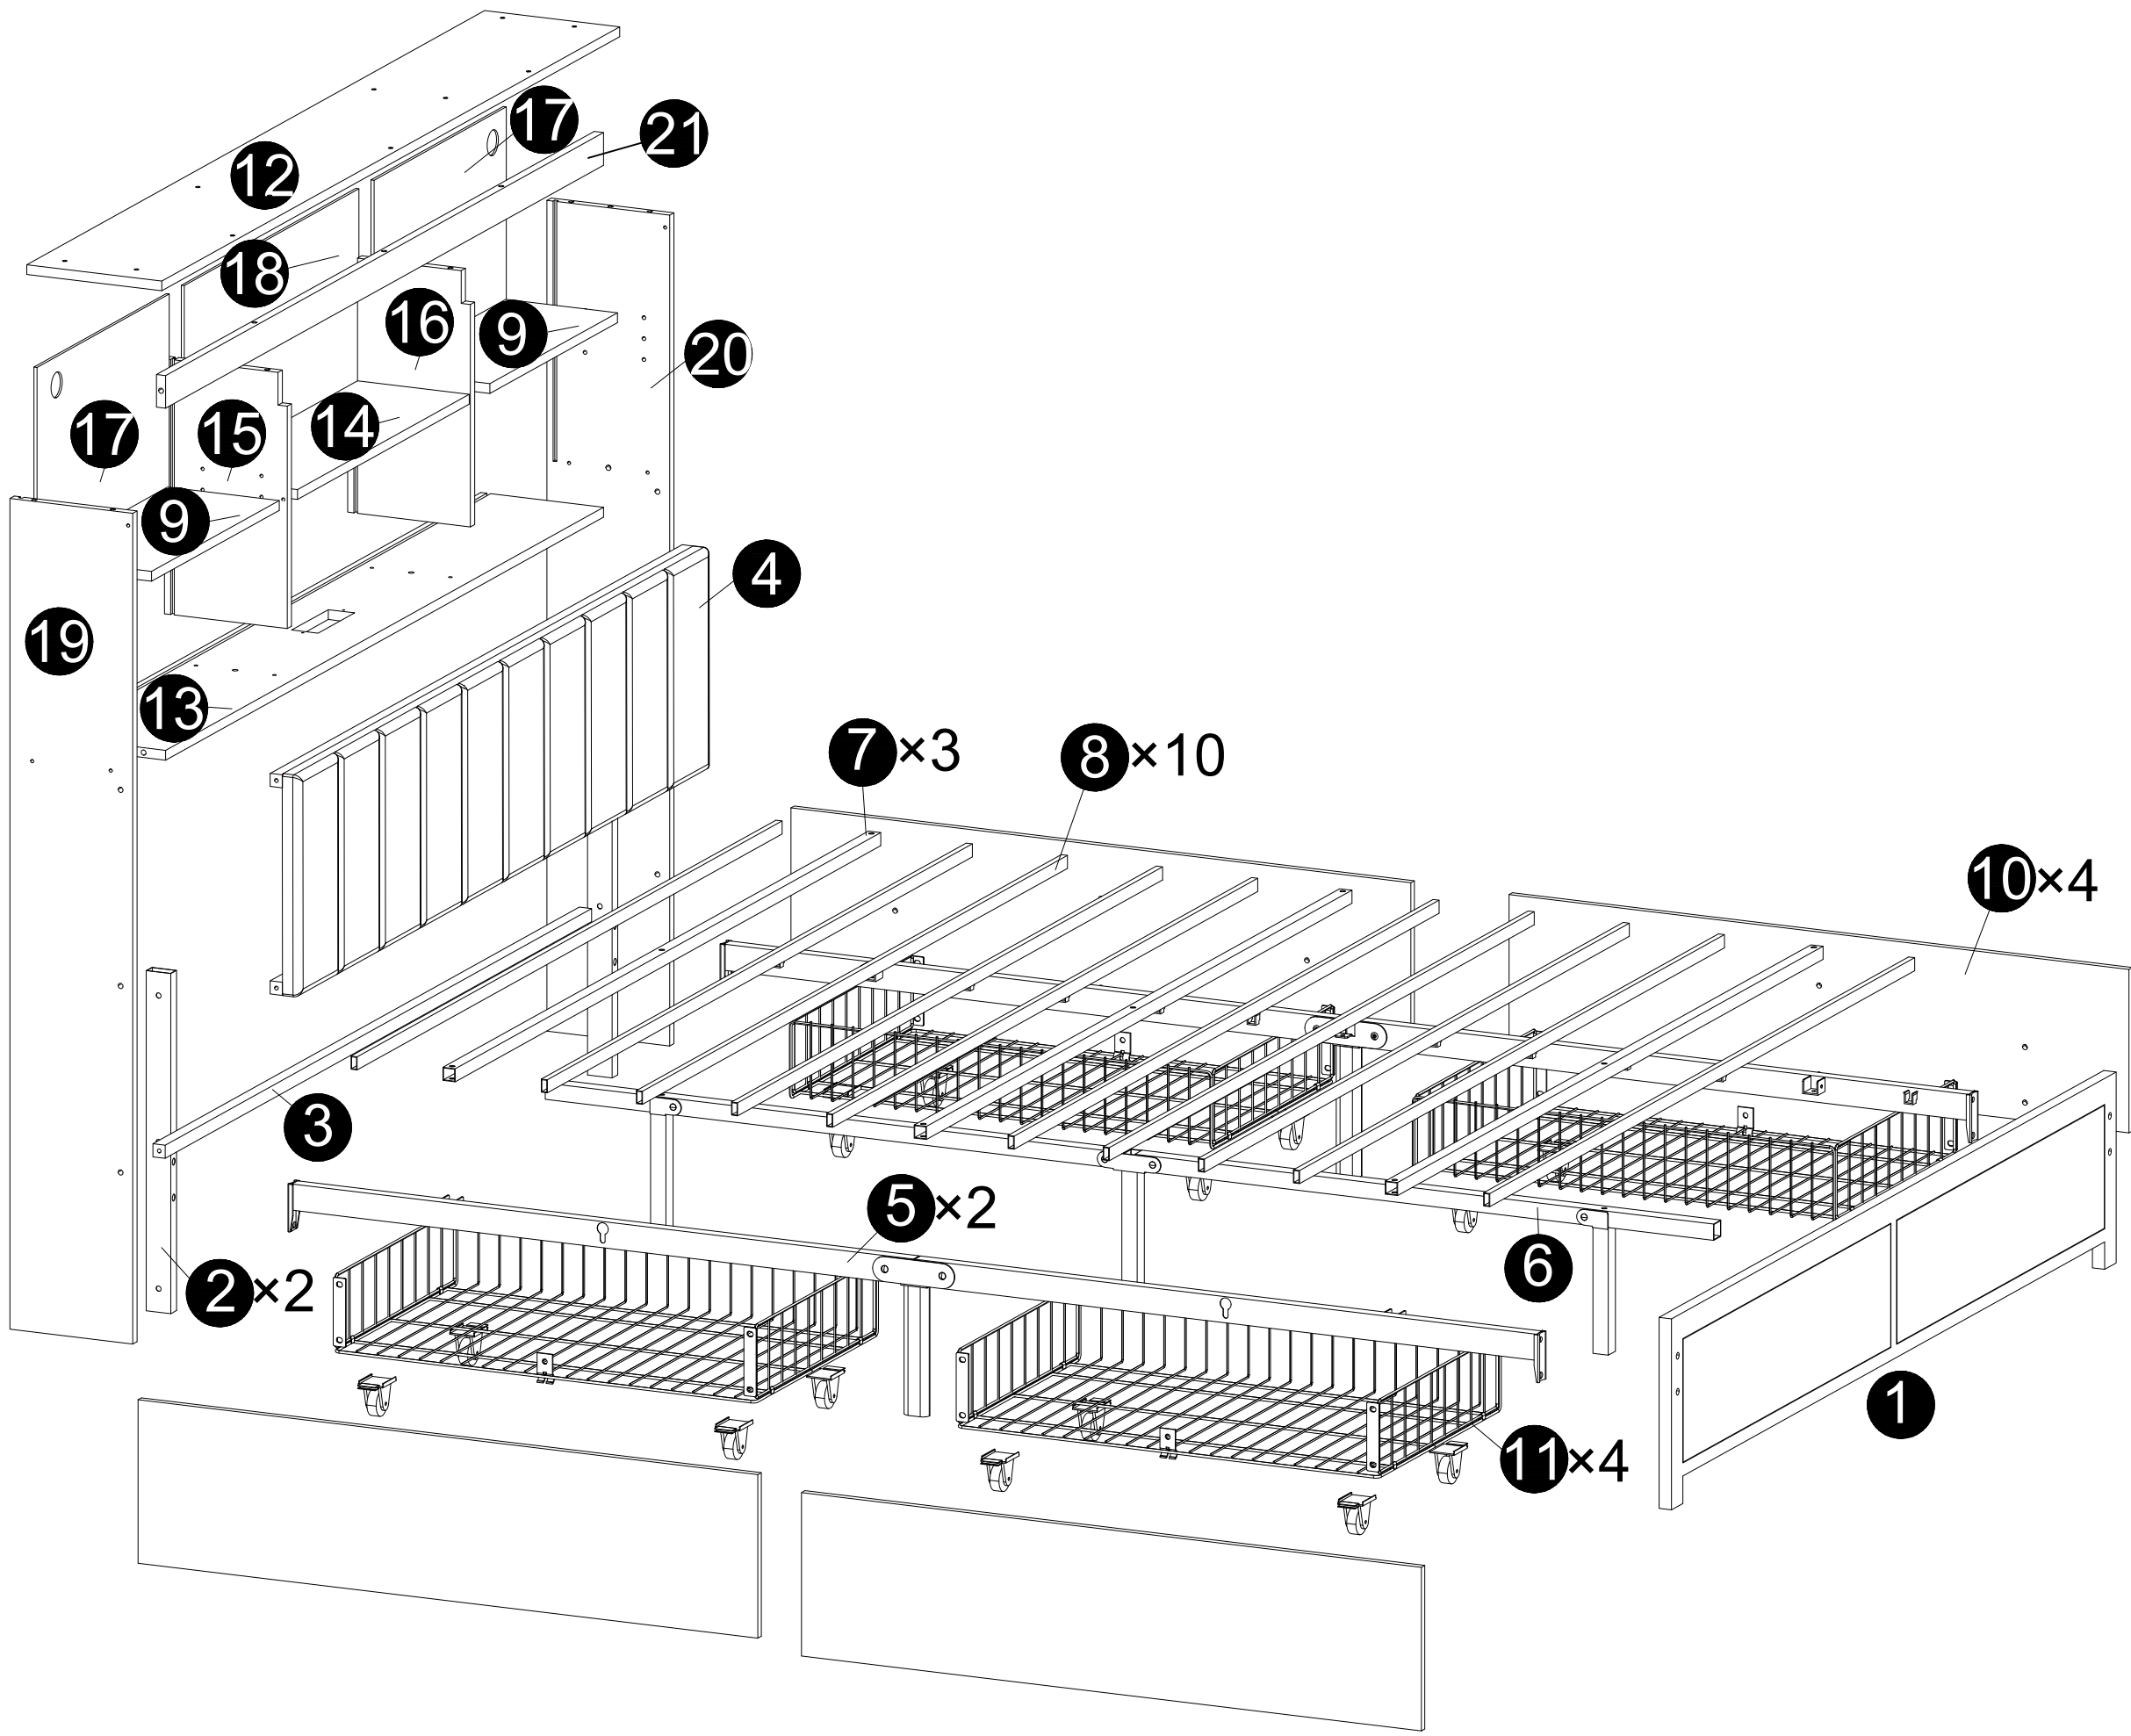
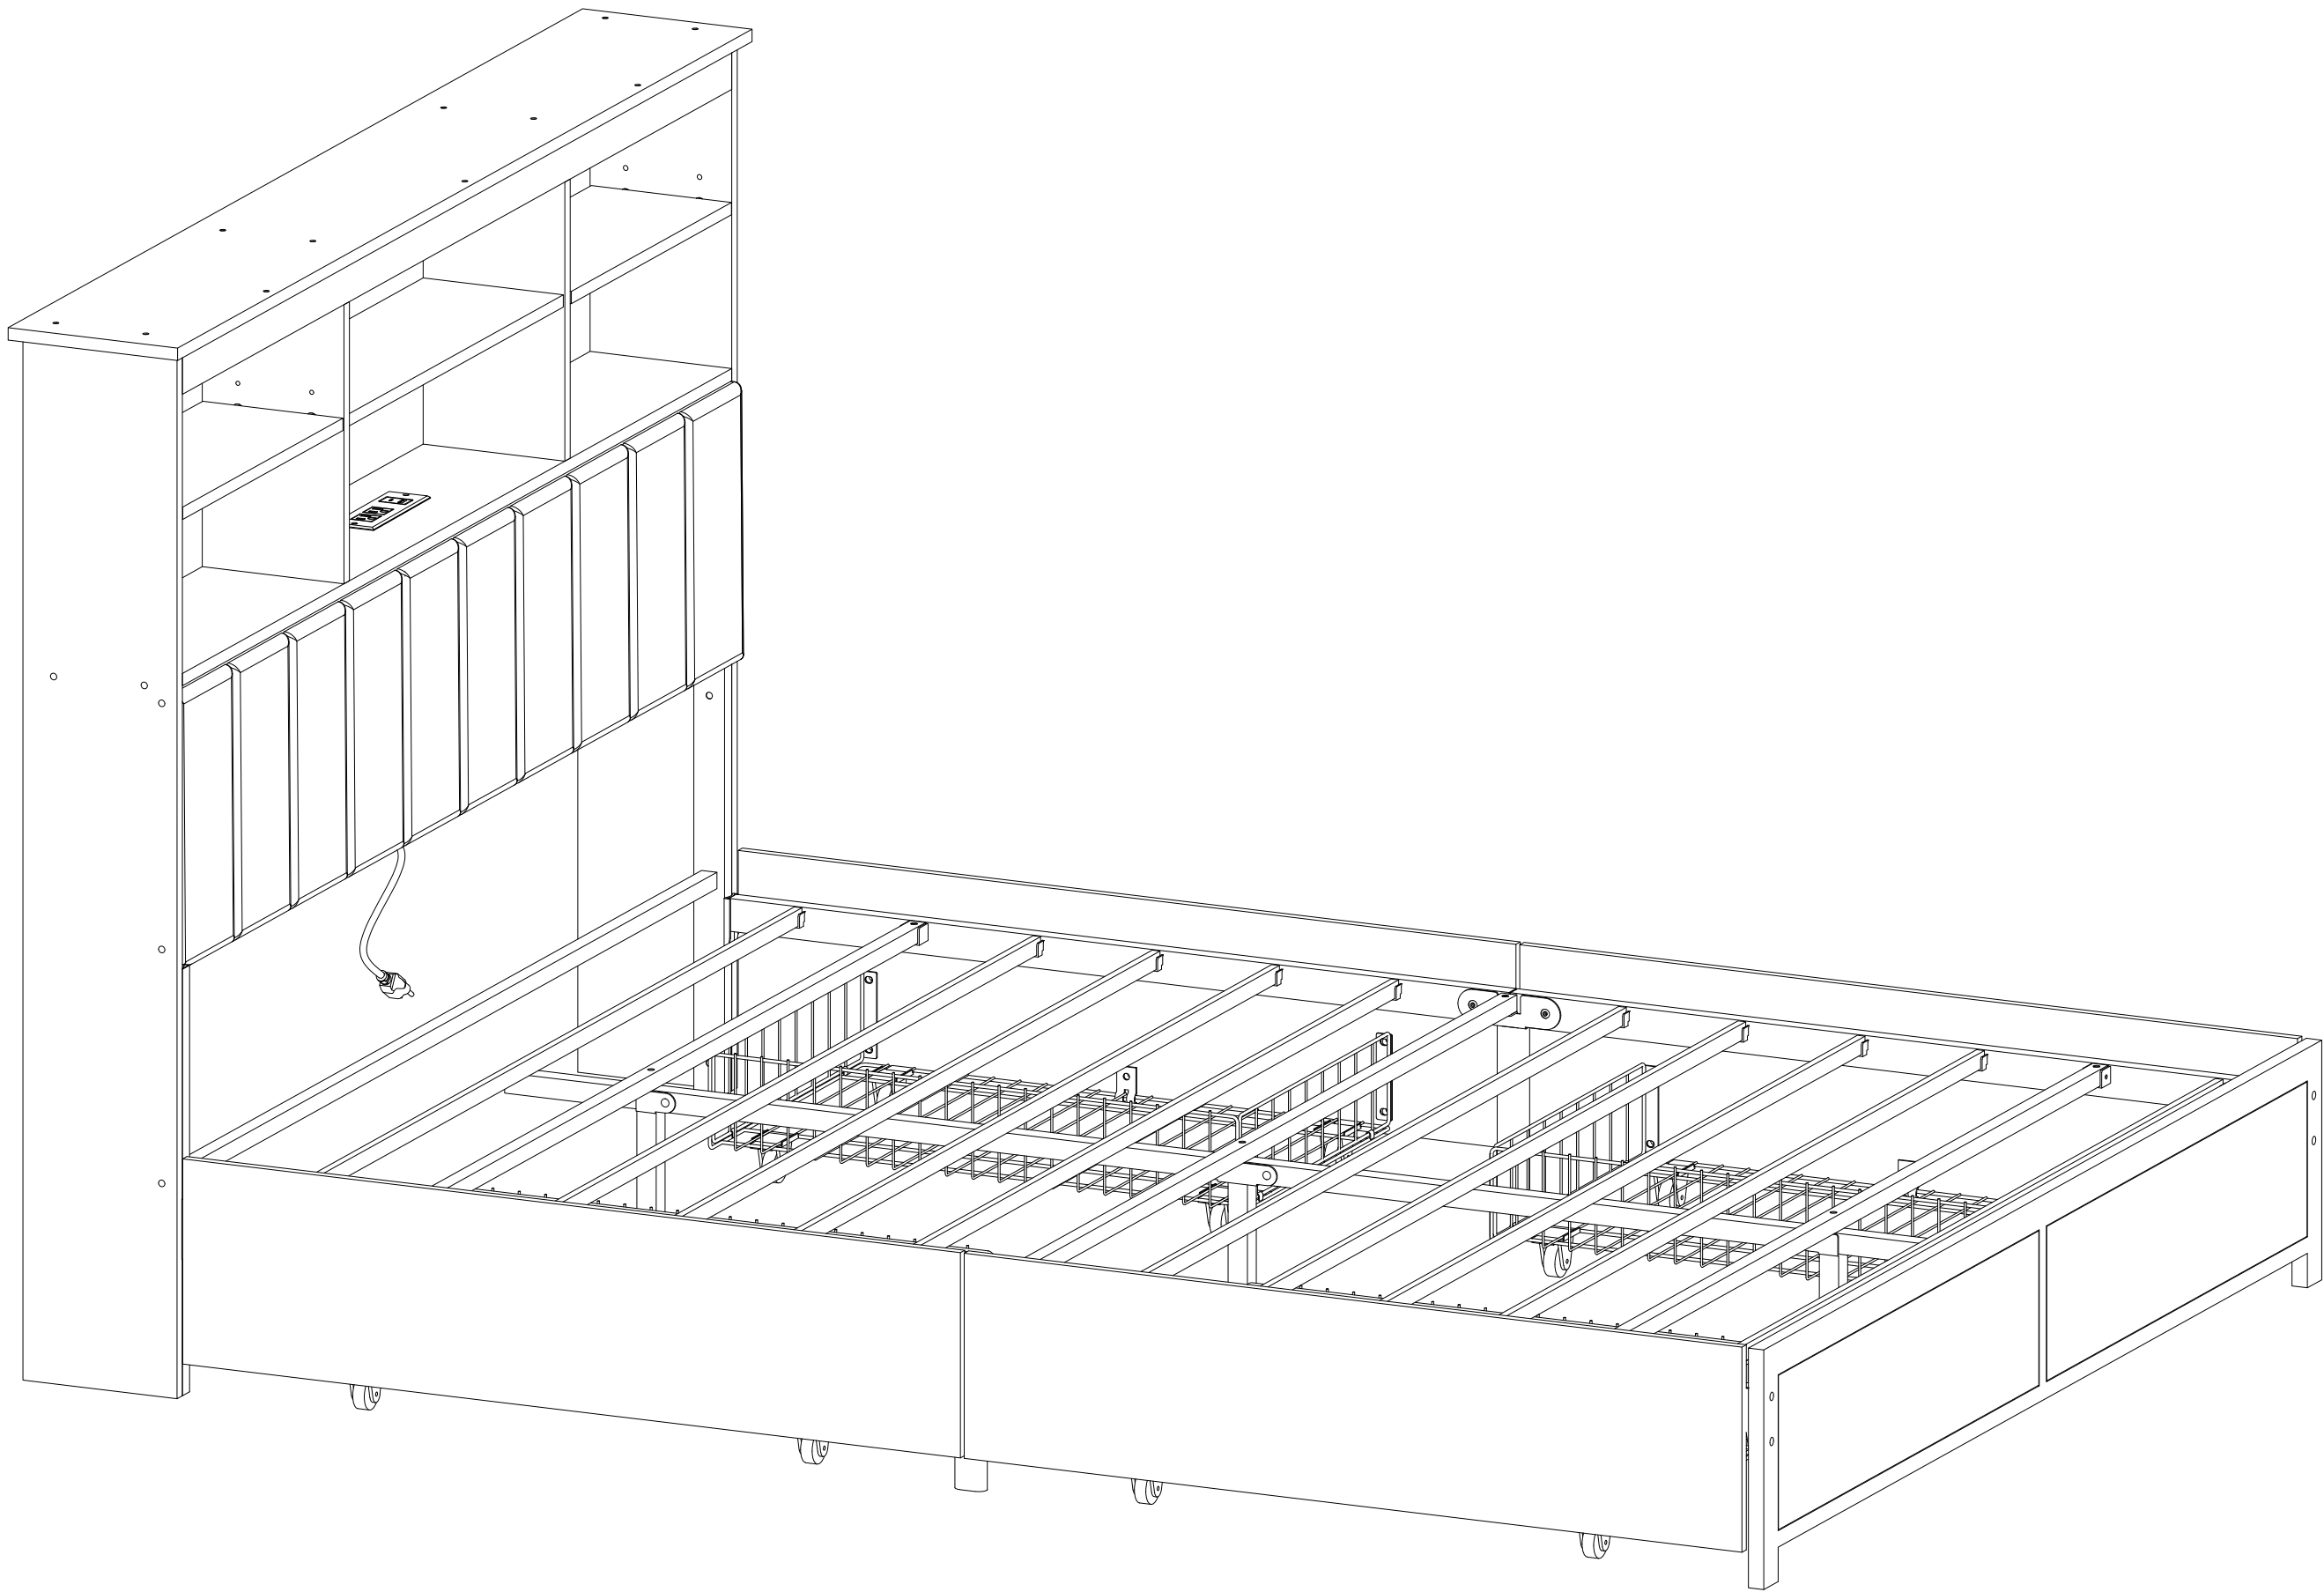
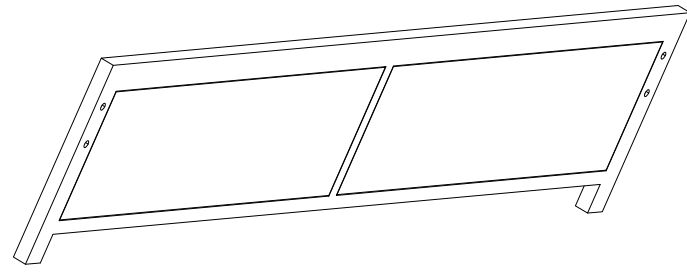
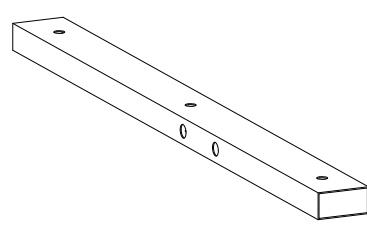
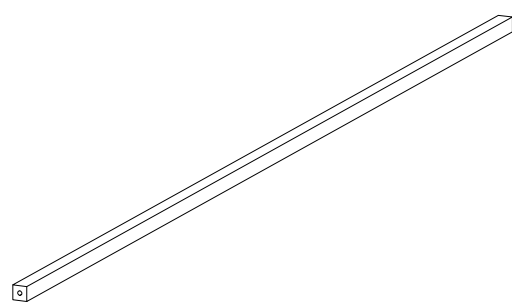
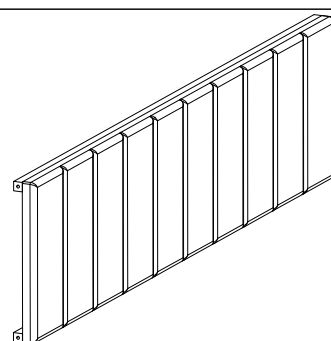
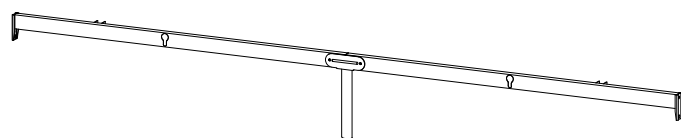
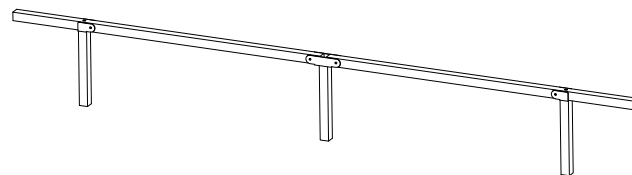
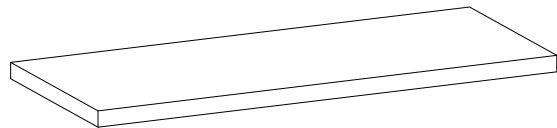
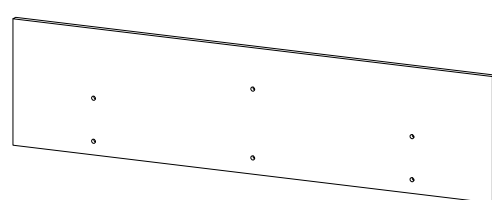
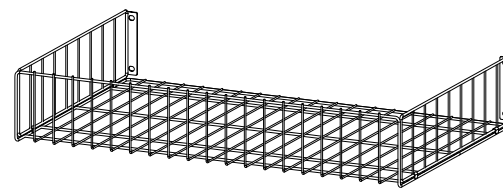
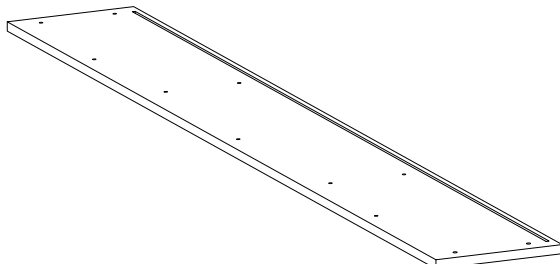
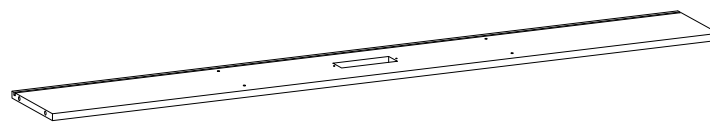
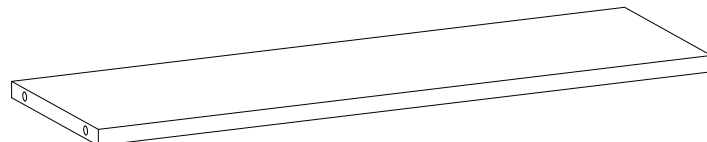
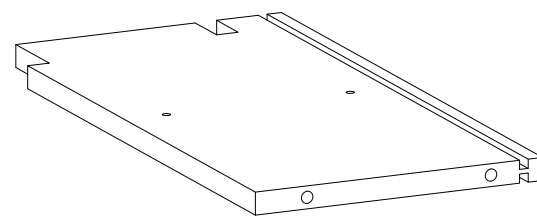
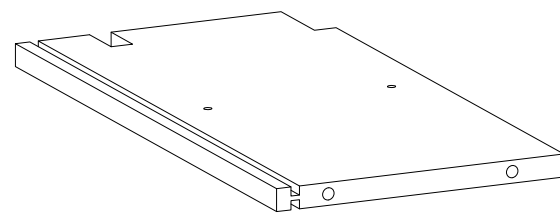
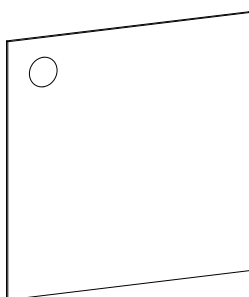
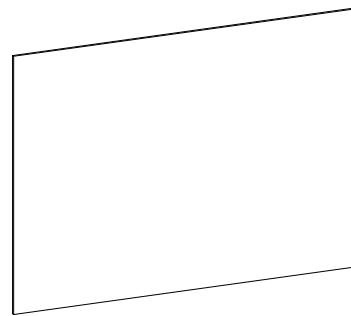
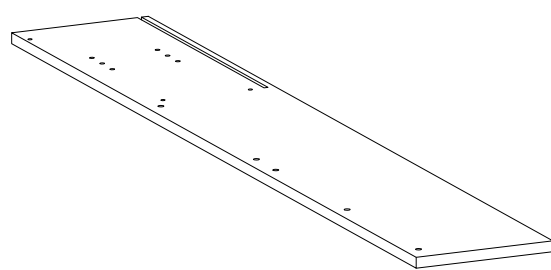
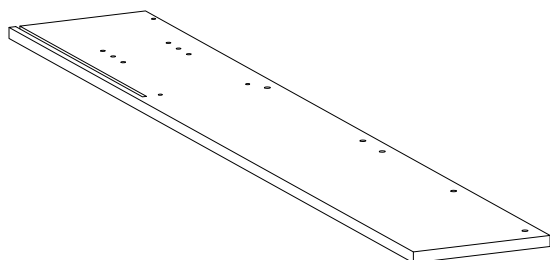
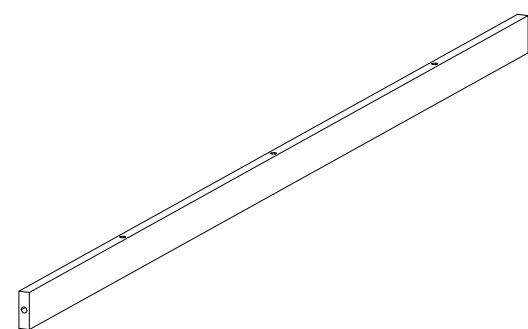








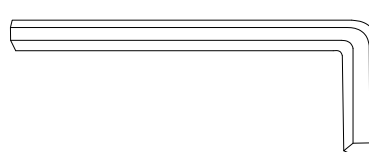


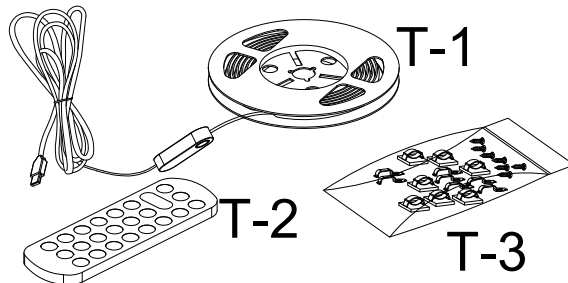
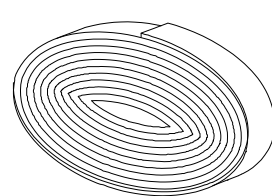
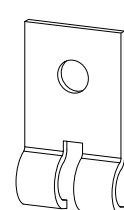
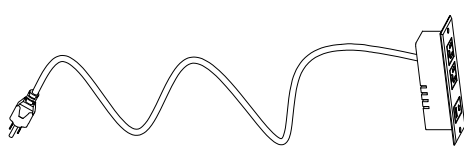
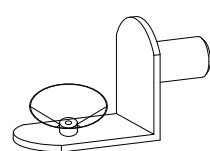
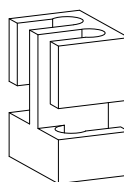


Installation Manual

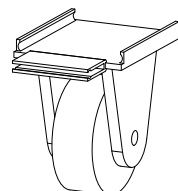


 ① × 1pc	 ② × 2pcs	 ③ × 1pc	 ④ × 1pc	
 ⑤ × 2pcs	 ⑥ × 1pc	 ⑦ × 3pcs	 ⑧ × 10pcs	
 ⑨ × 2pcs	 ⑩ × 4pcs	 ⑪ × 4pcs	 ⑫ × 1pc	
 ⑬ × 1pc	 ⑭ × 1pc	 ⑮ × 1pc	 ⑯ × 1pc	
 ⑰ × 2pcs	 ⑱ × 1pc	 ⑲ × 1pc	 ⑳ × 1pc	 ㉑ × 1pc
 M8×40mm ①A × 4pcs+1pc	 M6×55mm ①B × 5pcs+1pc	 M6×40mm ①C × 4pcs+1pc	 M6×30mm ①D × 10pcs+1pc	 M6×10mm ①E × 20pcs+2pcs
 Ø3.5×12mm ①F × 2pcs+1pc	 ①G × 14pcs+1pc	 M8×24mm ①H × 4pcs+1pc	 ①I × 1pc	 ①J × 1pc
 Ø7×48mm ①K × 25pcs+1pc	 M8×55mm ①L × 4pcs+1pc	 T-1 T-2 T-3 ①M × 1pc	 ①N × 1pc	 ①O × 4pcs+2pcs
 ①P × 1pc	 ①Q × 8pcs+1pc	 ①R × 8pcs+2pcs	 ①S × 16pcs	

1





Ø7×48mm


K × 4pcs

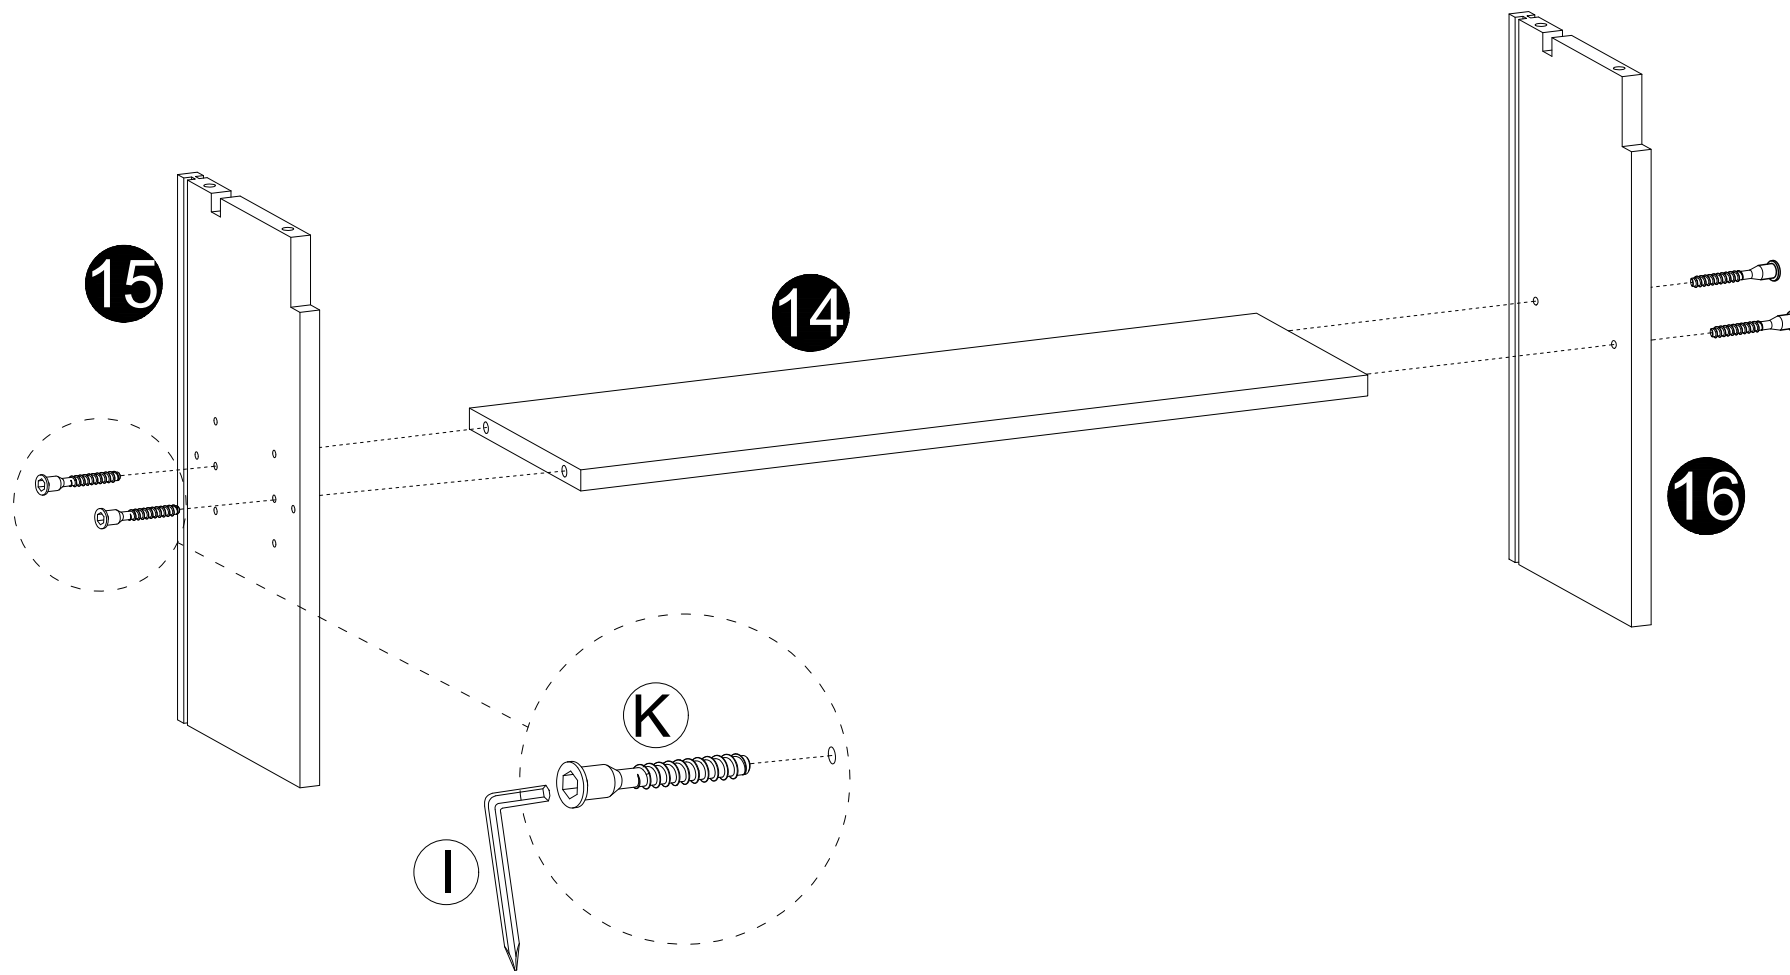

2

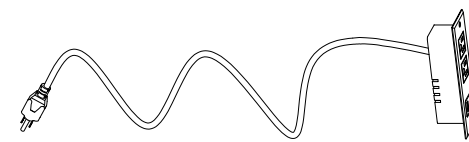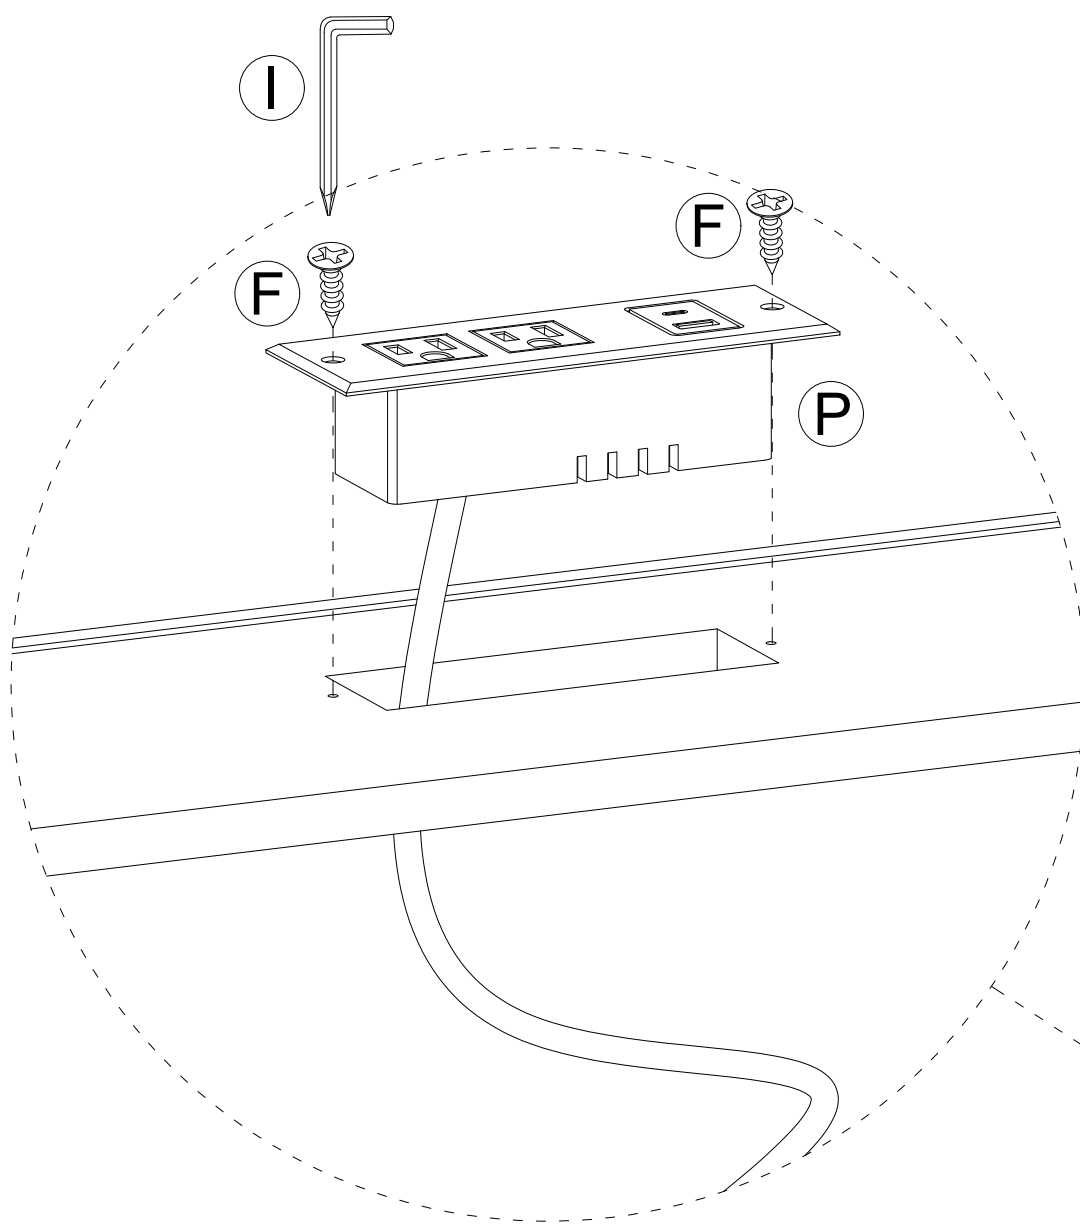


P × 1pc




Ø3.5×12mm

F × 2pcs

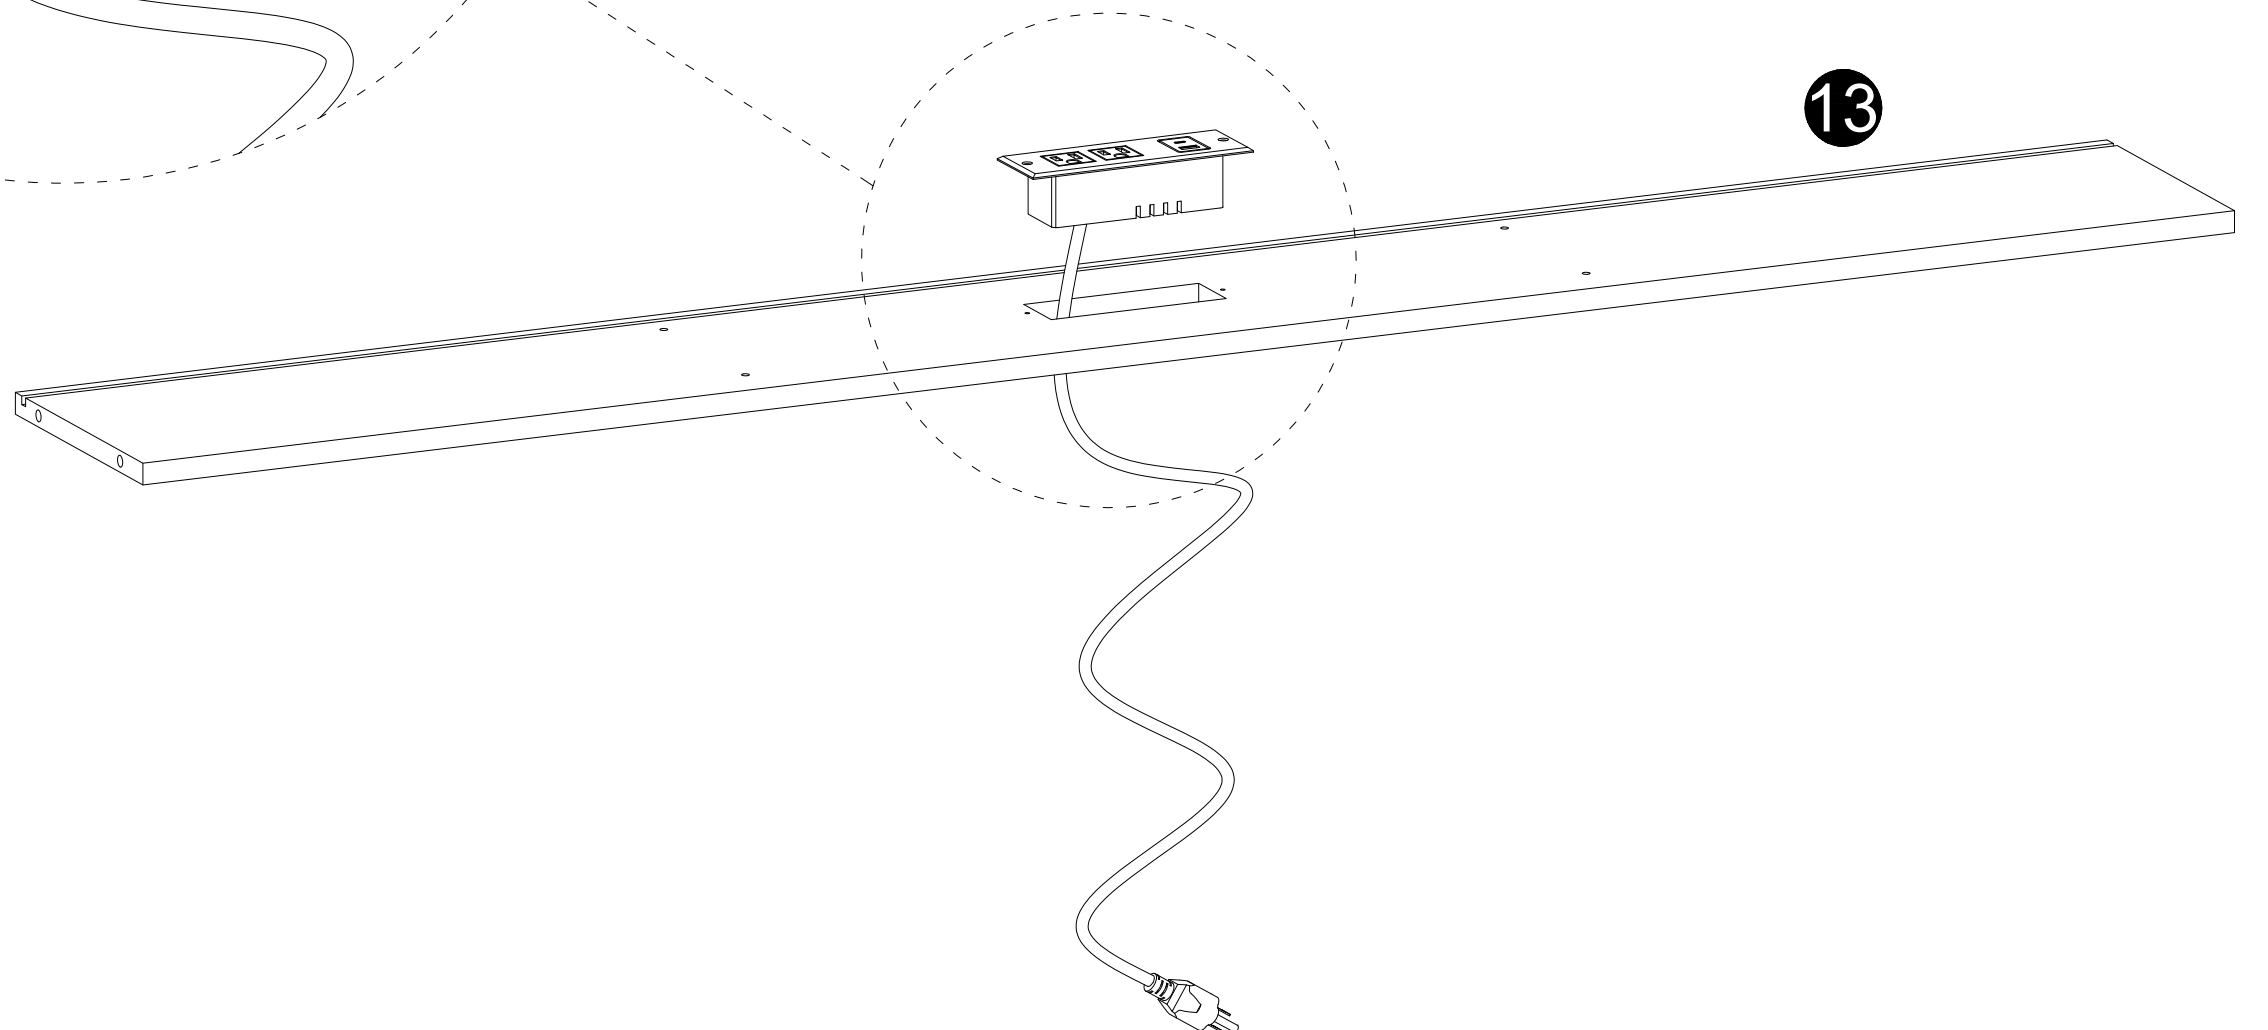


3




Ø7×48mm

K × 4pcs

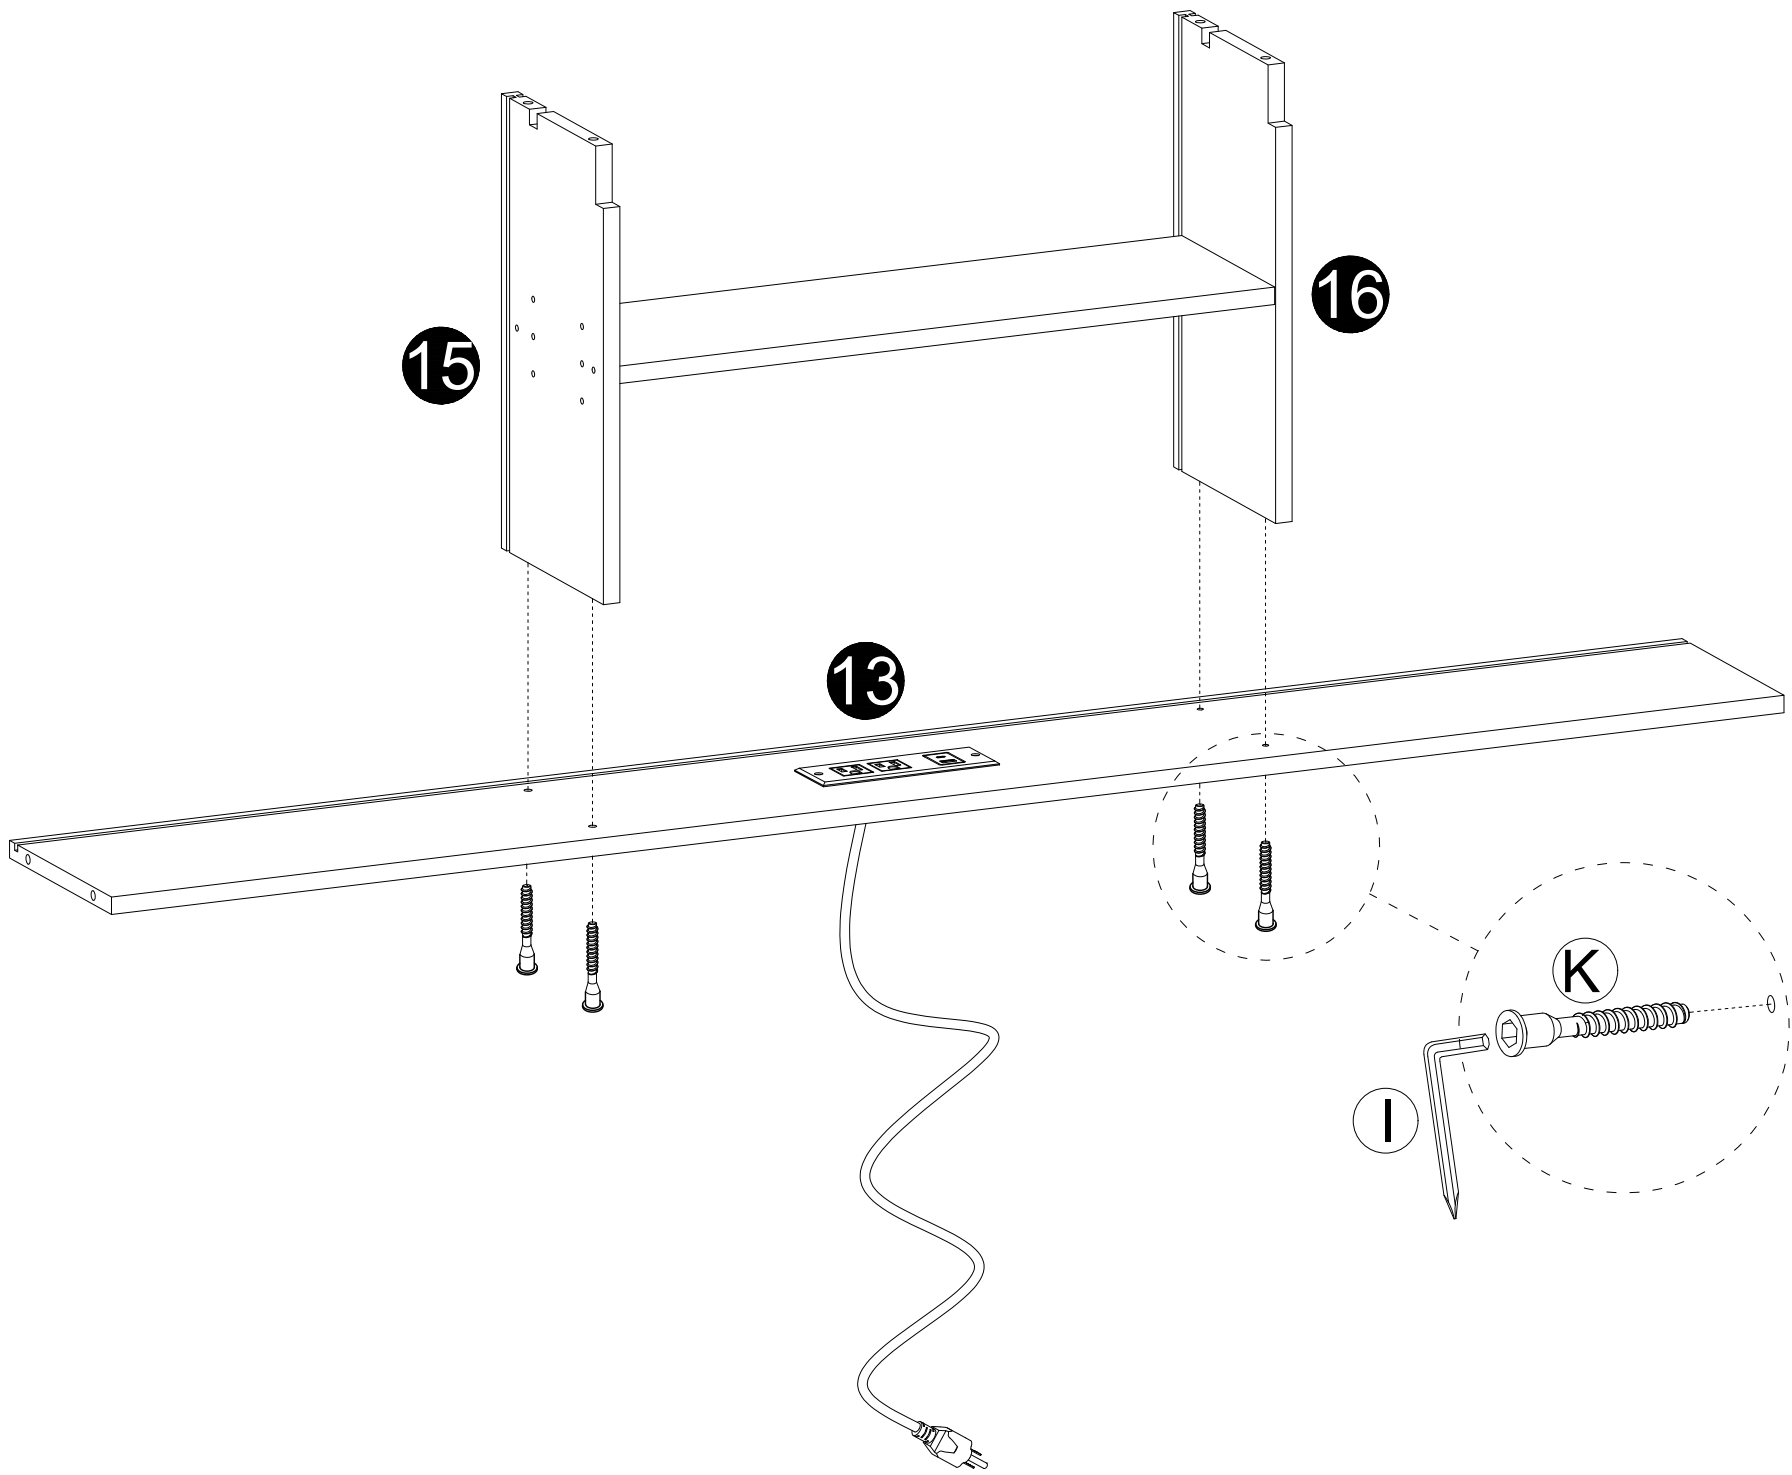


4




M6×30mm

D × 4pcs

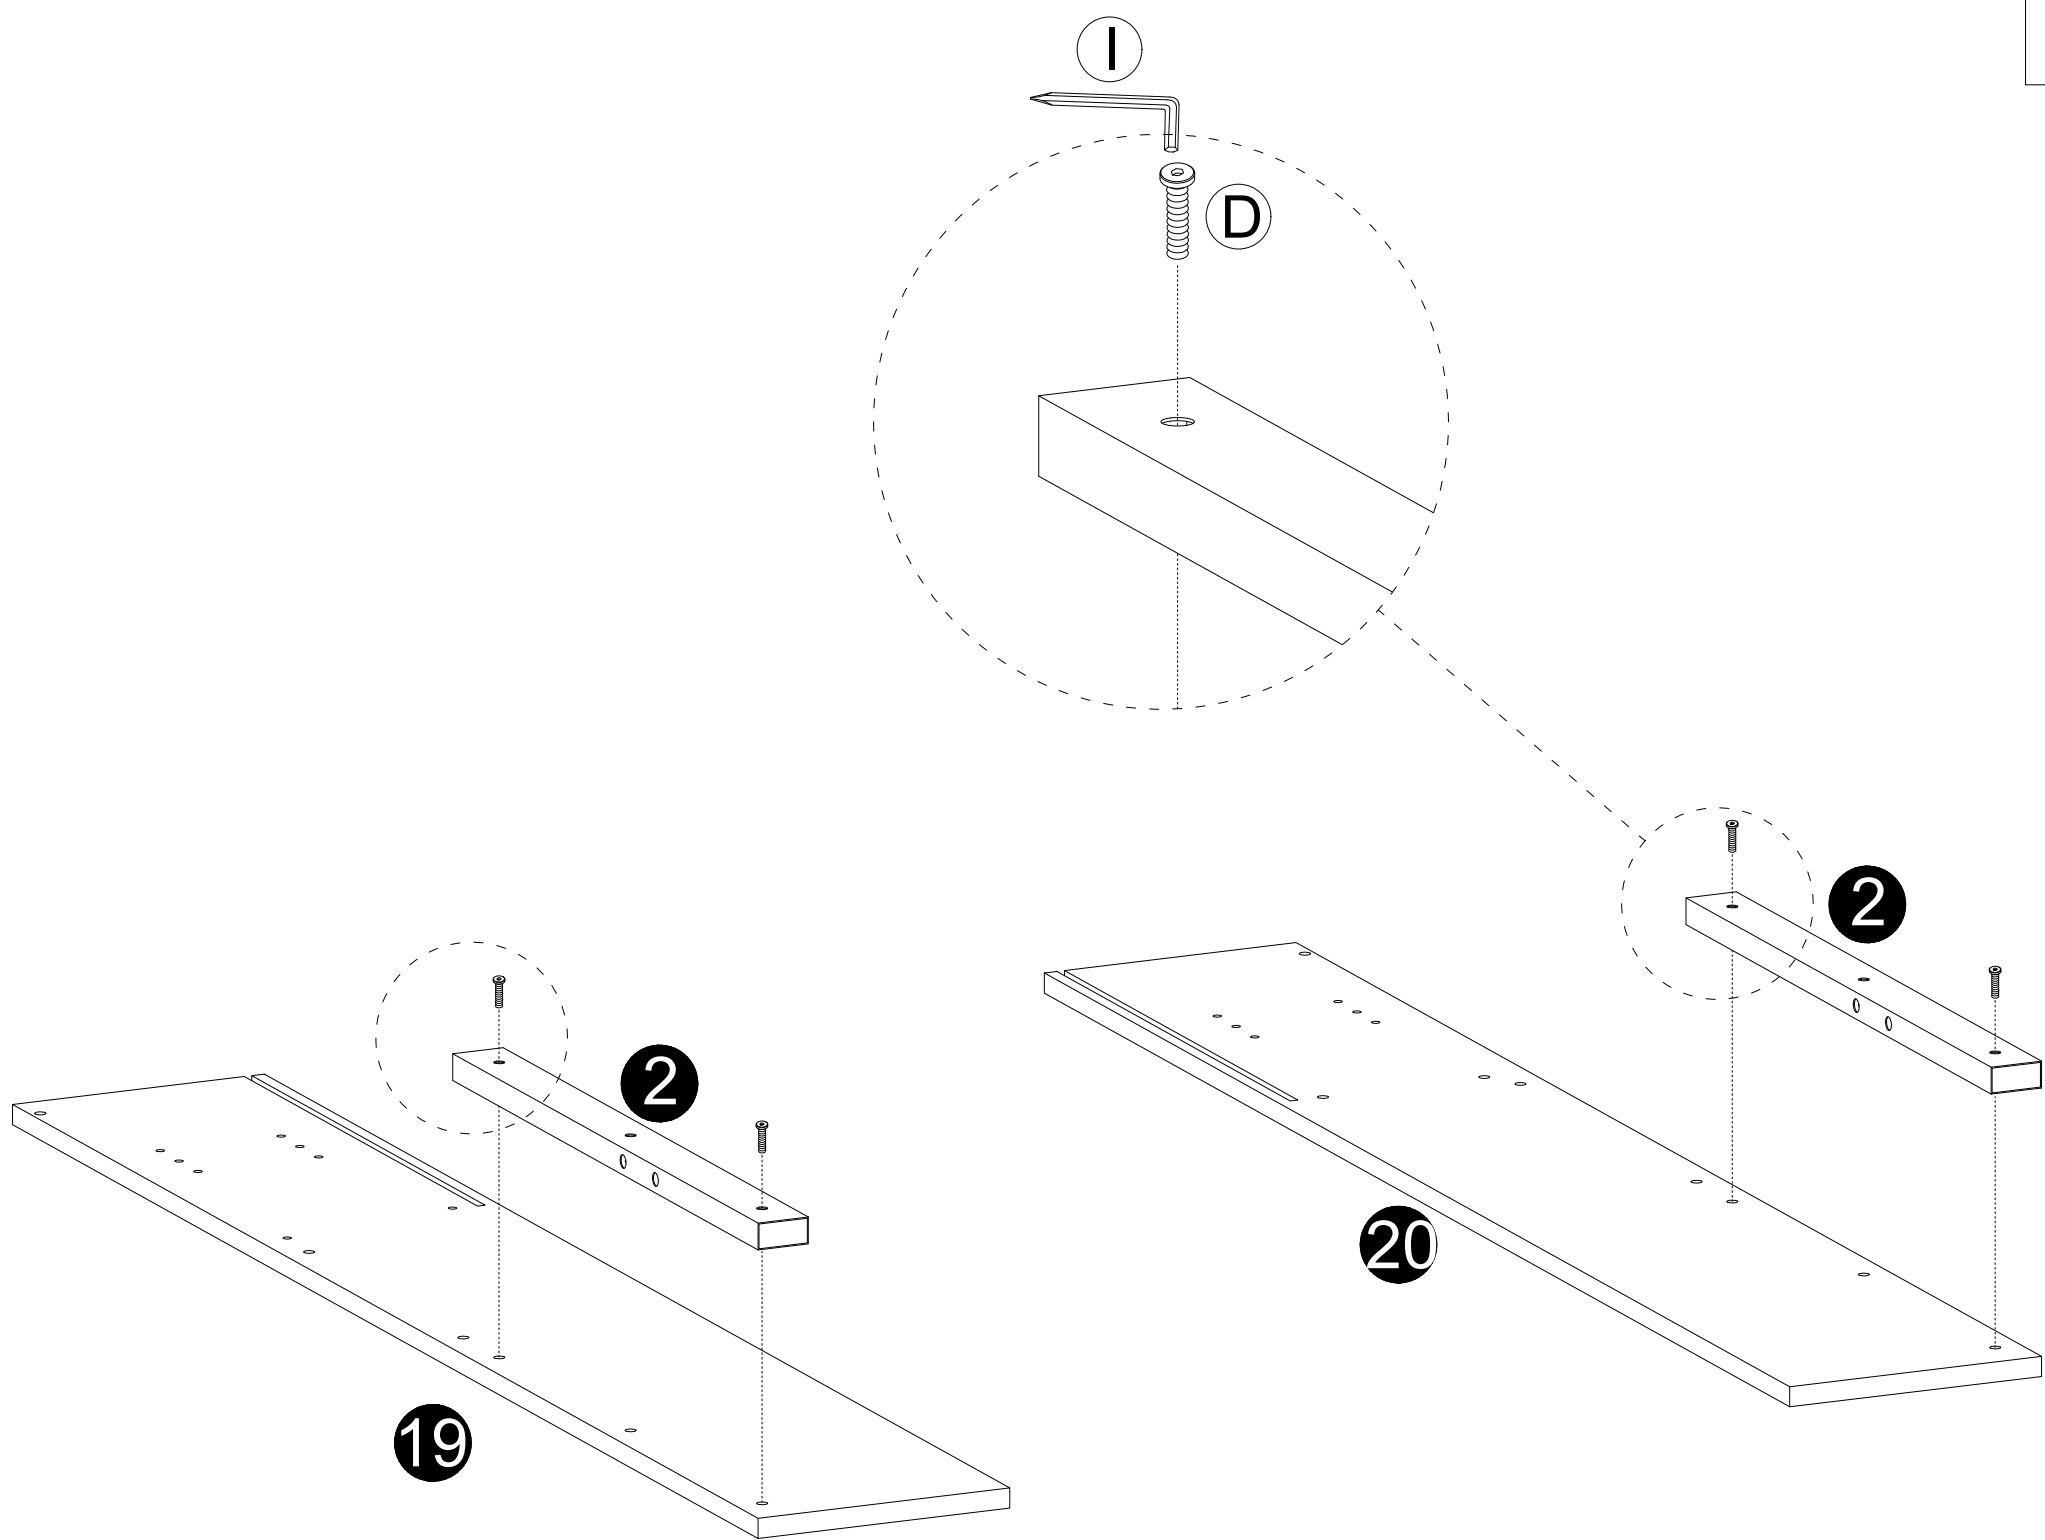


5




Ø7×48mm

K × 3pcs

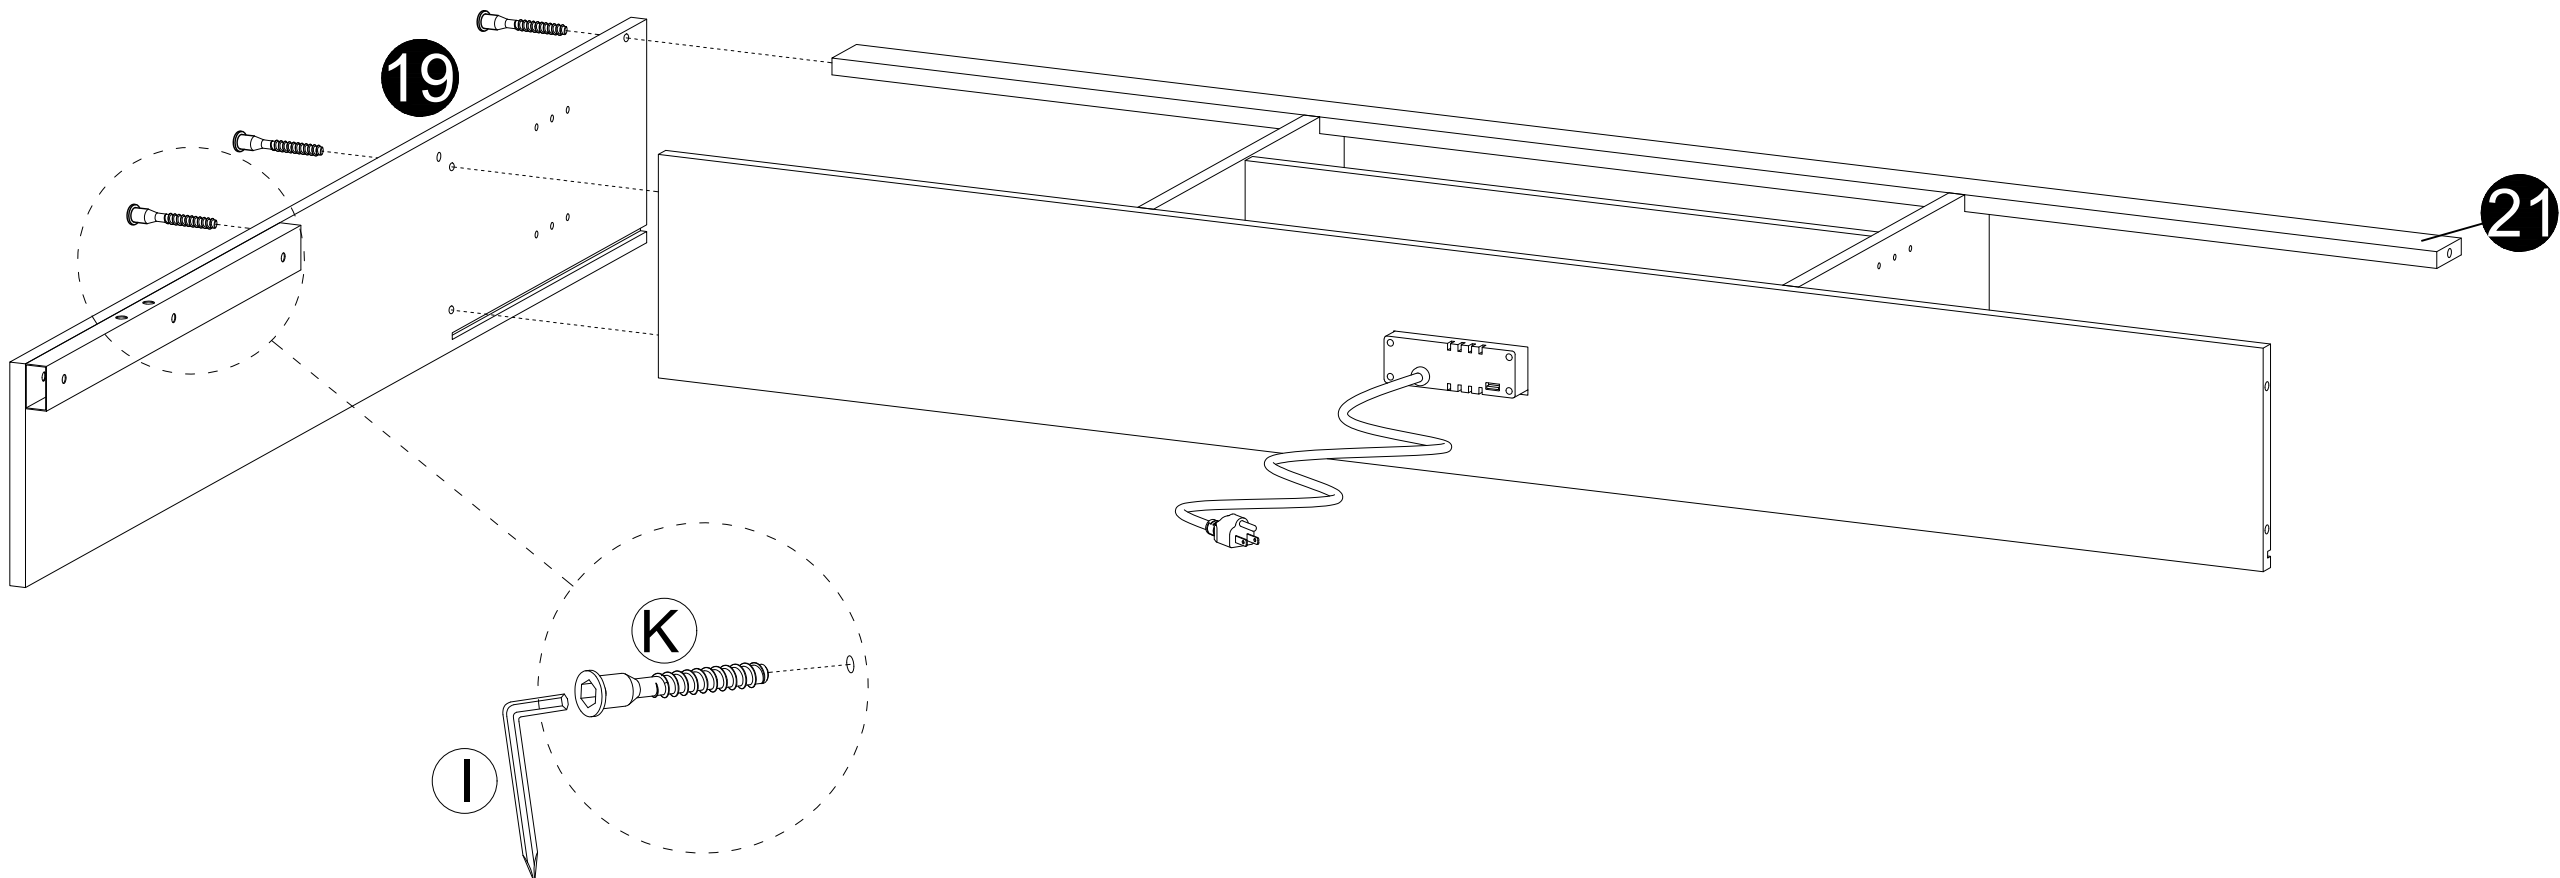


6




Ø7×48mm


K × 3pcs

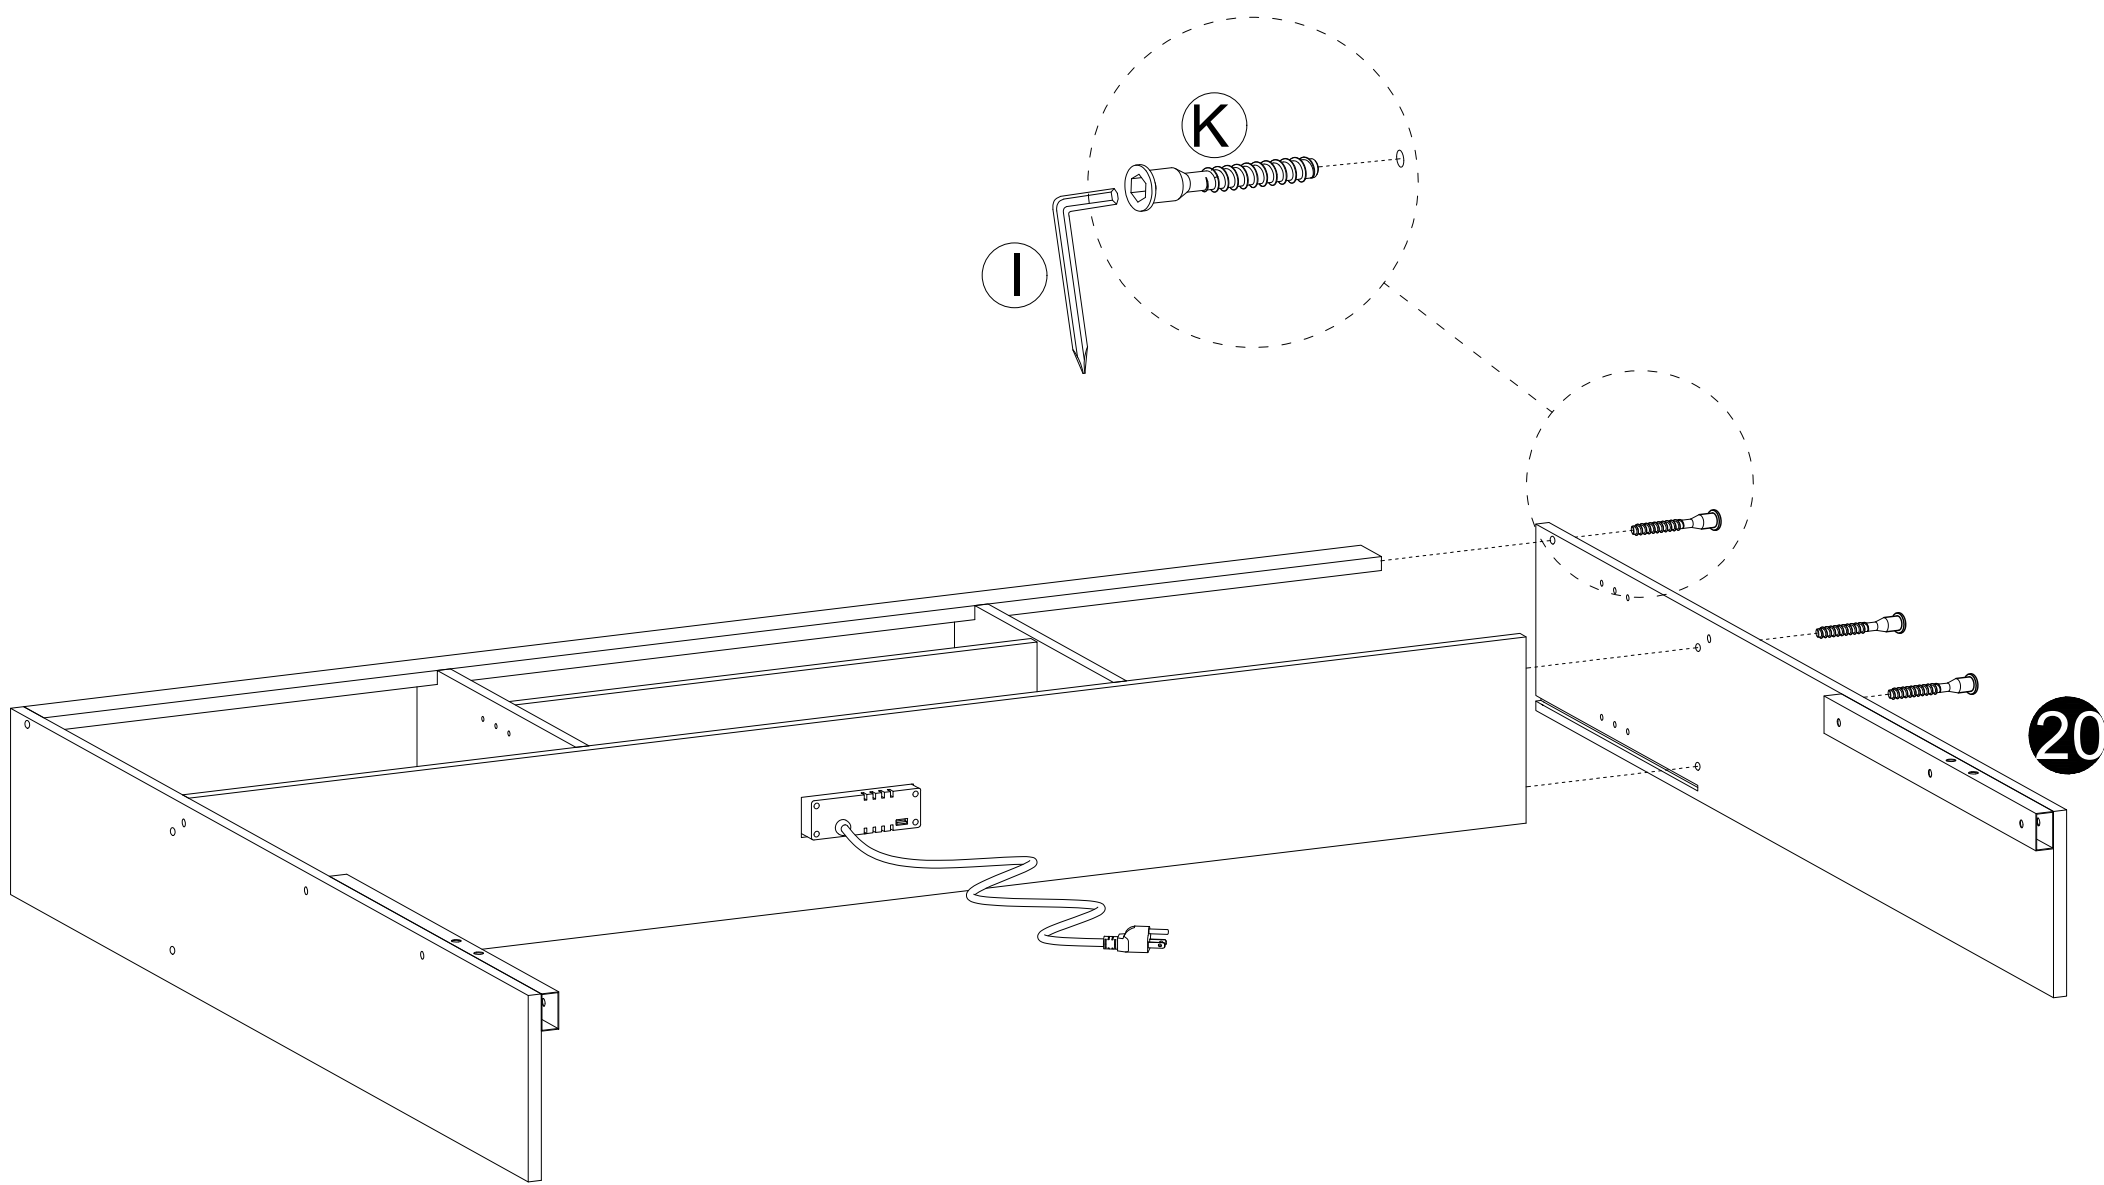


7

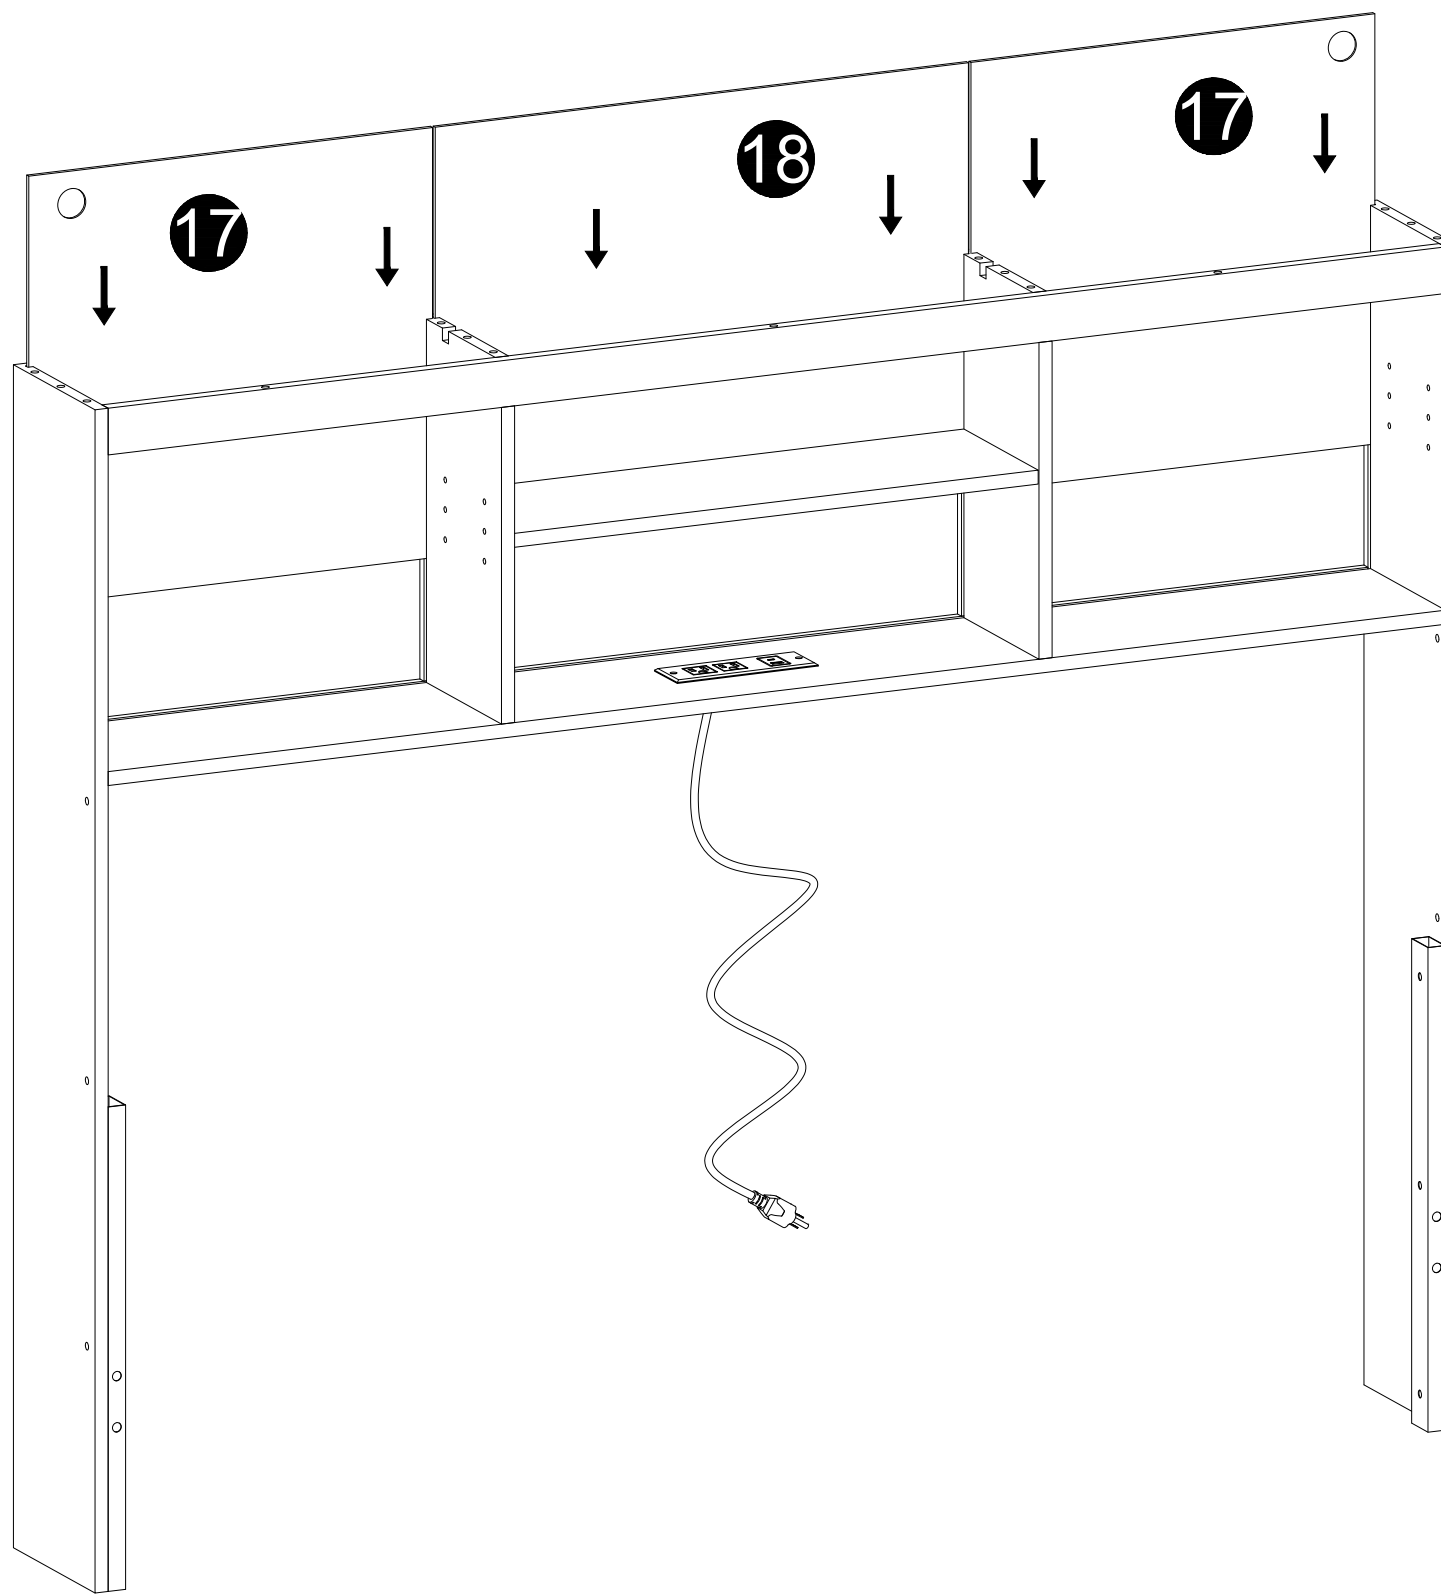


8

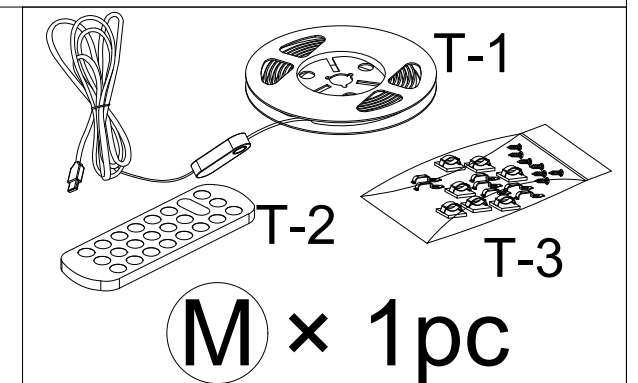

Tape T-3-3 to both ends of part 12 for later use

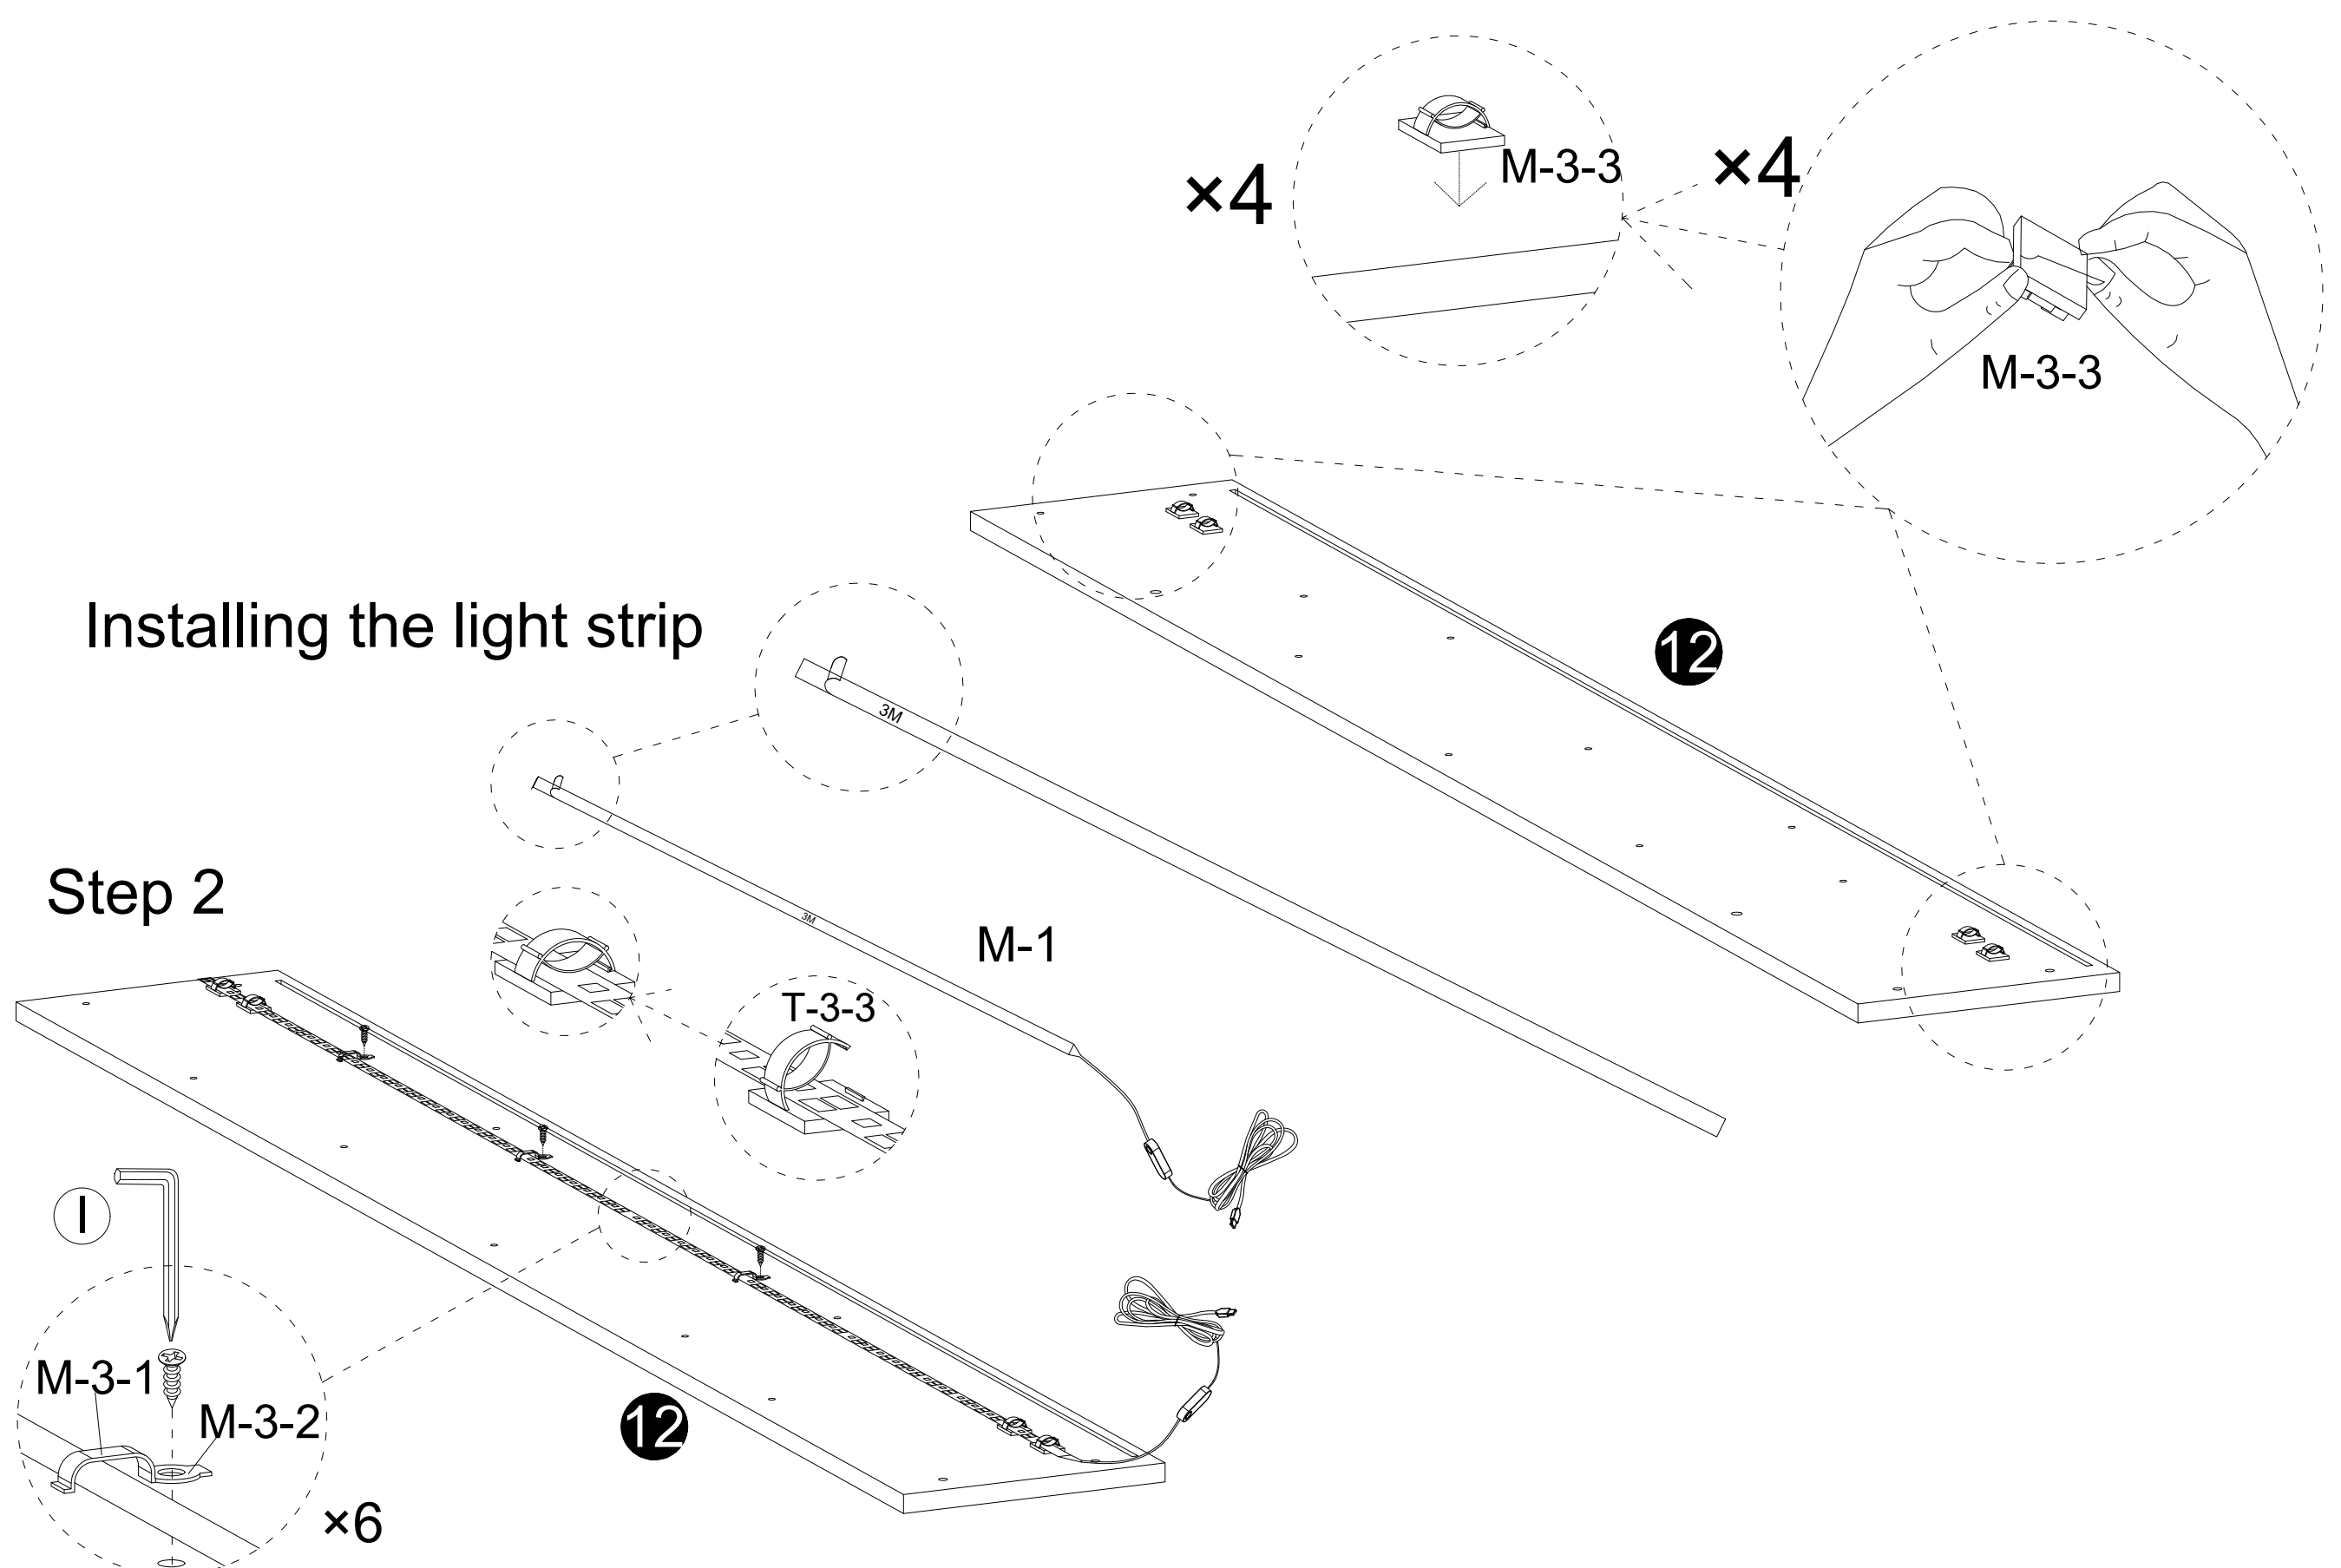

9





Ø7×48mm

K × 11pcs




Ø8×30mm

M × 6pcs

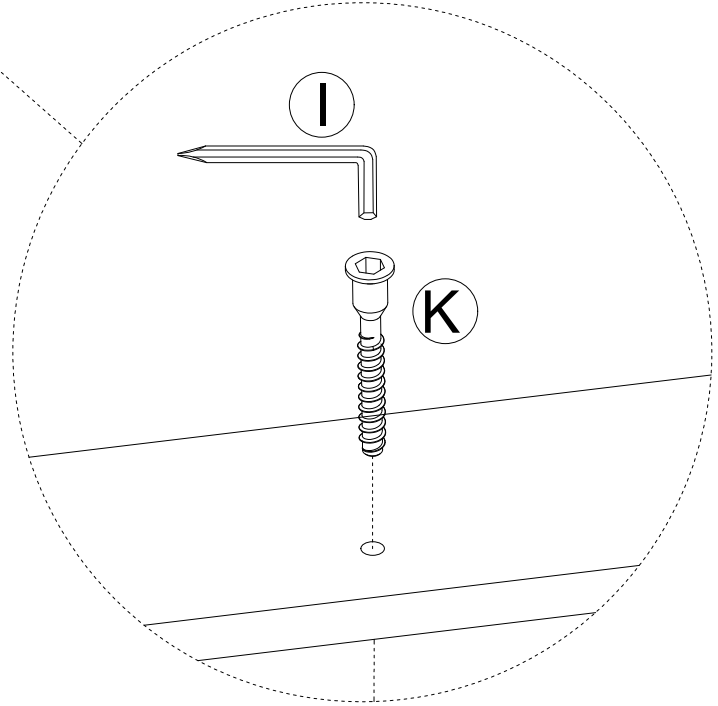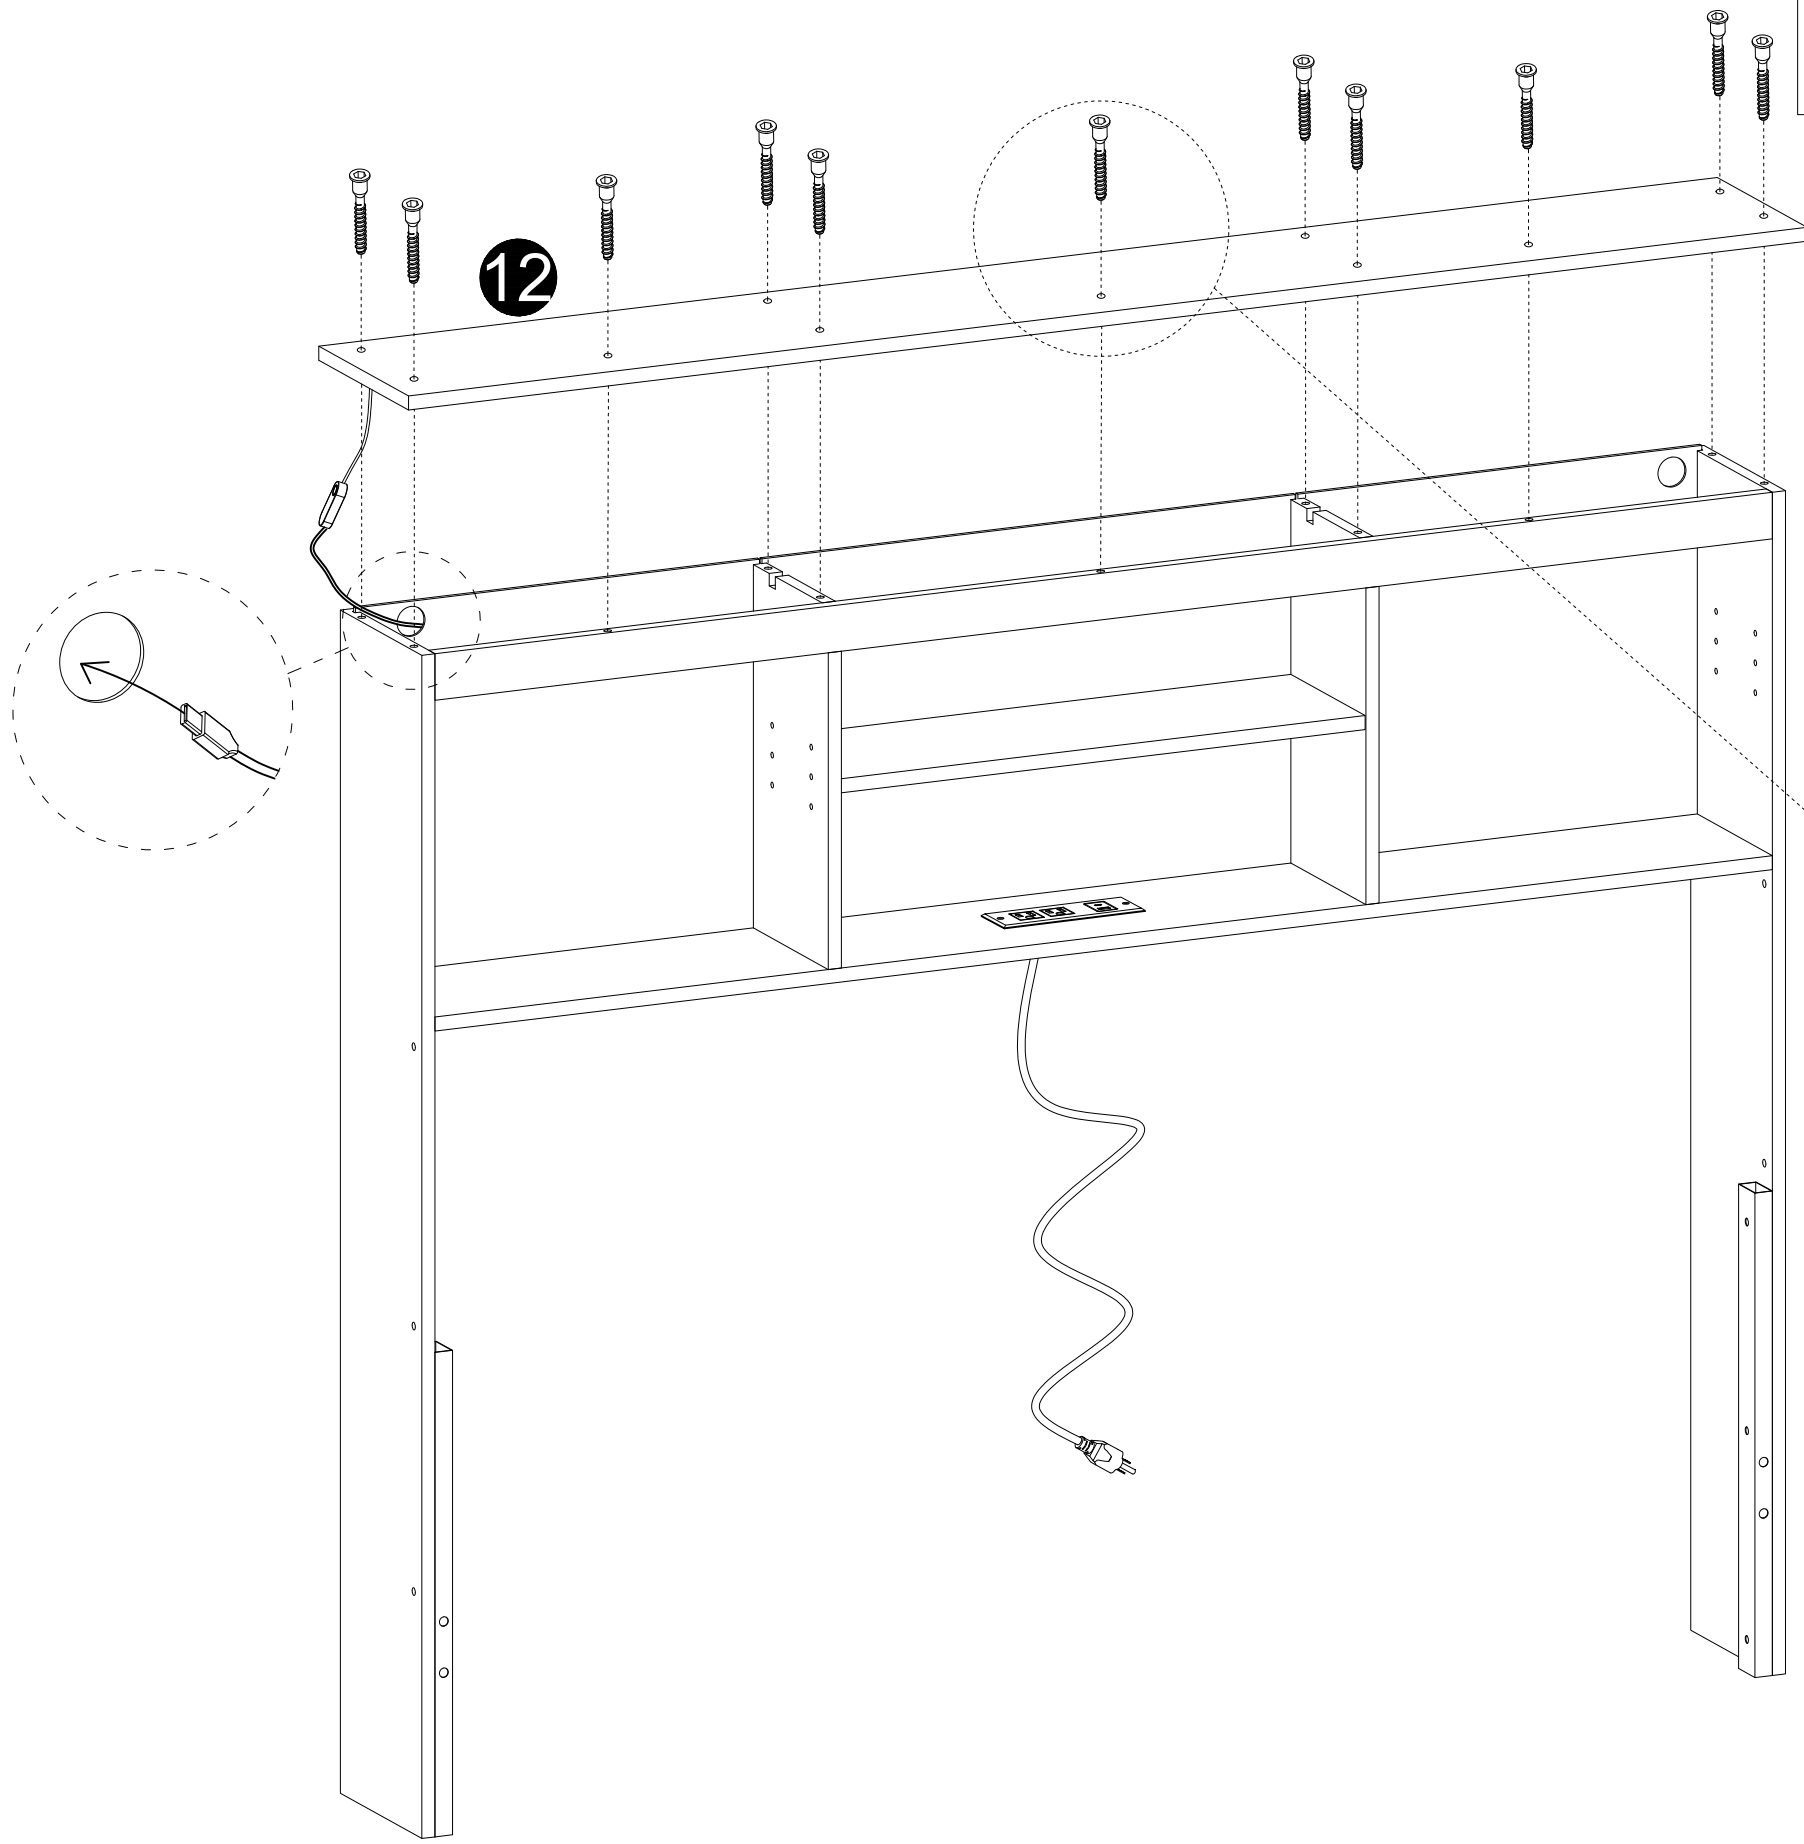


10




M6×55mm

B × 2pcs






M6×40mm


C × 4pcs





G × 6pcs

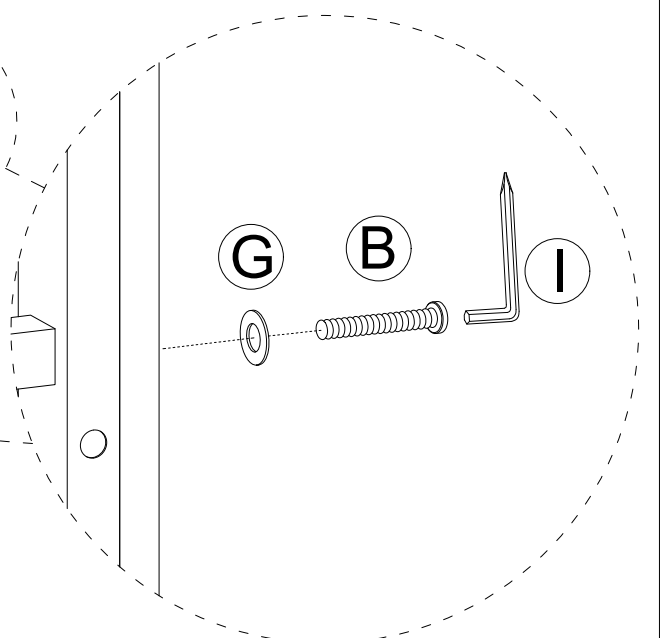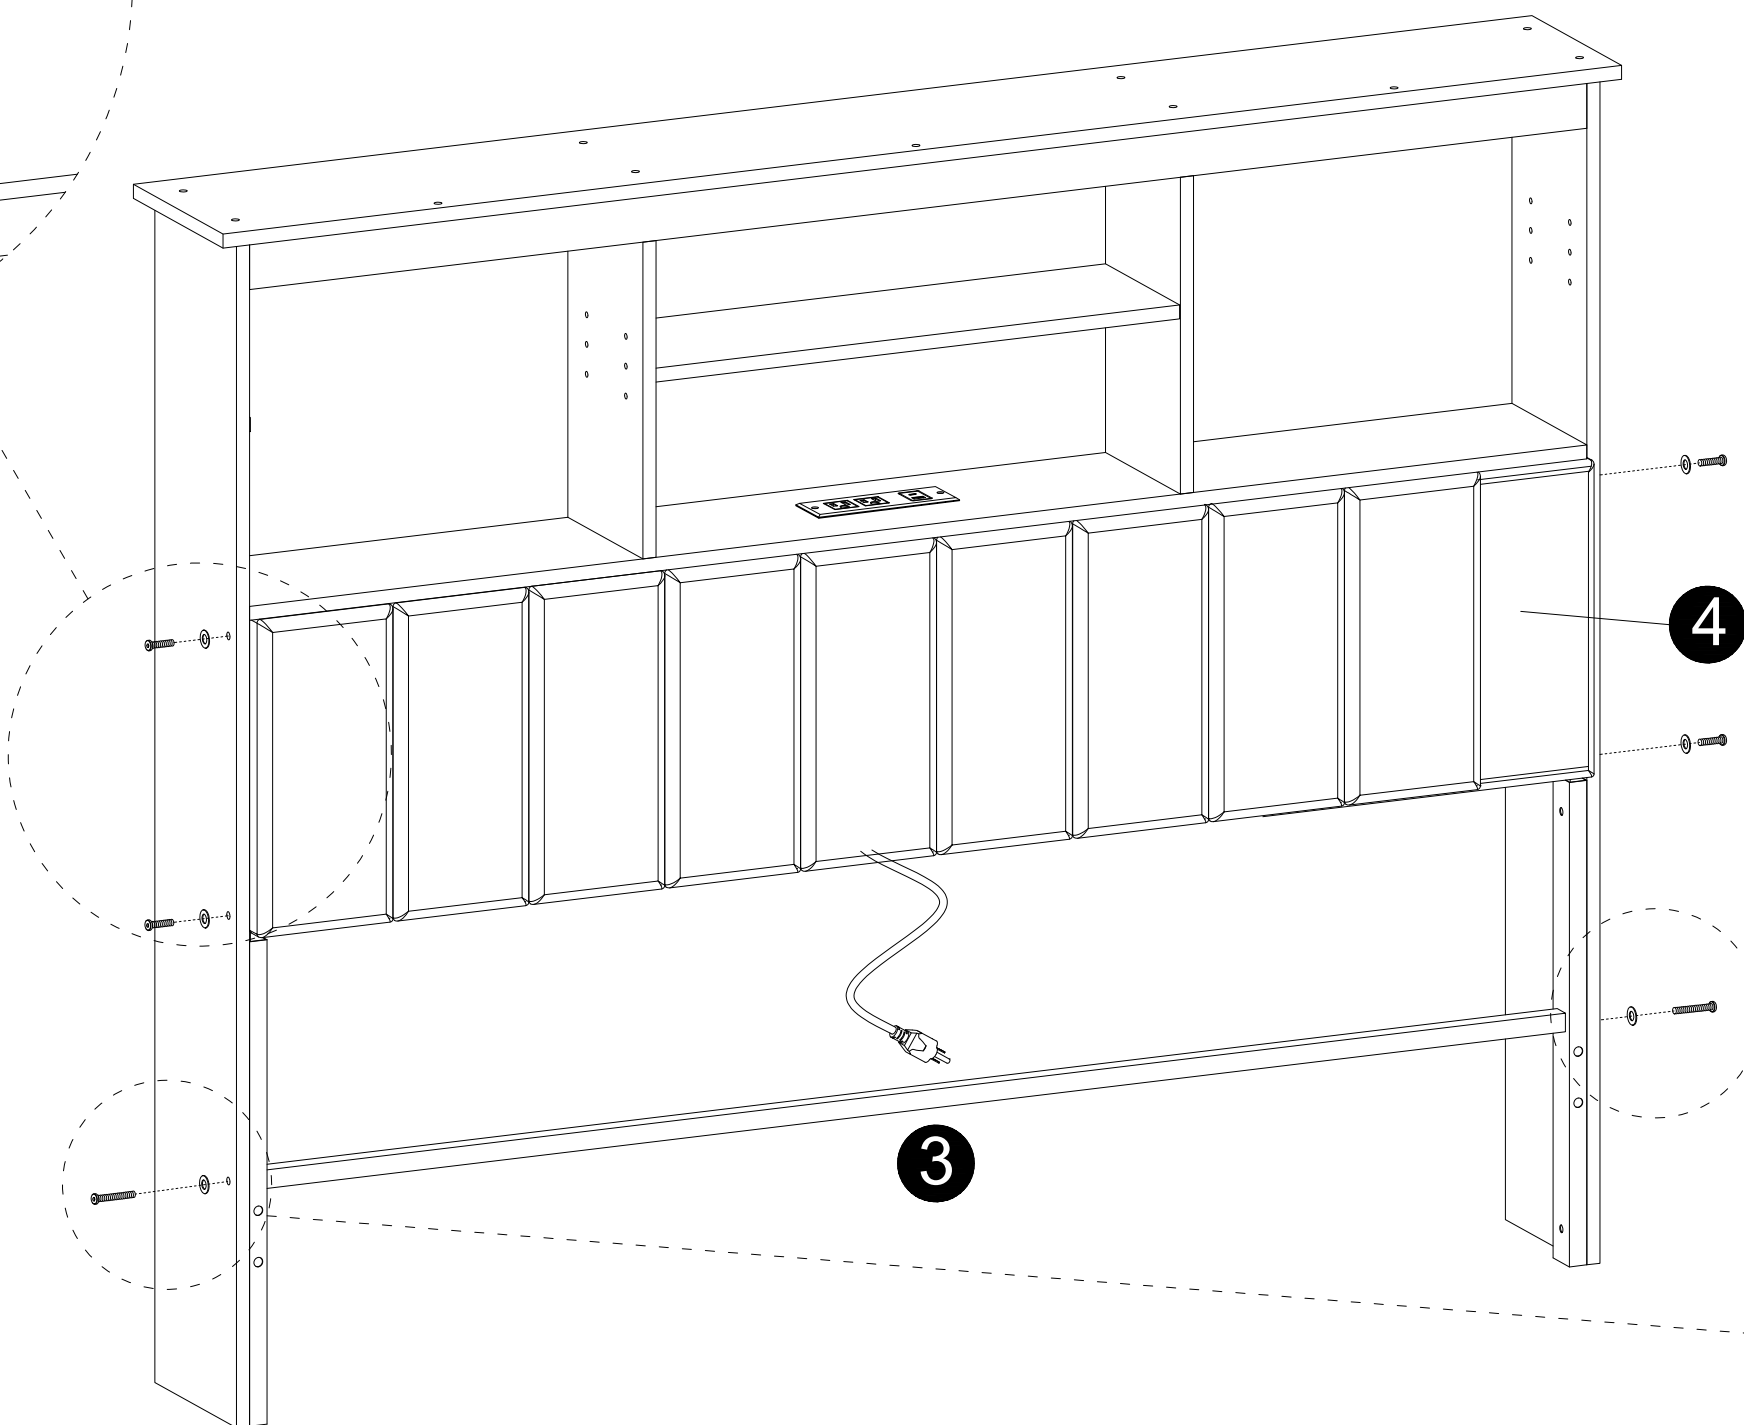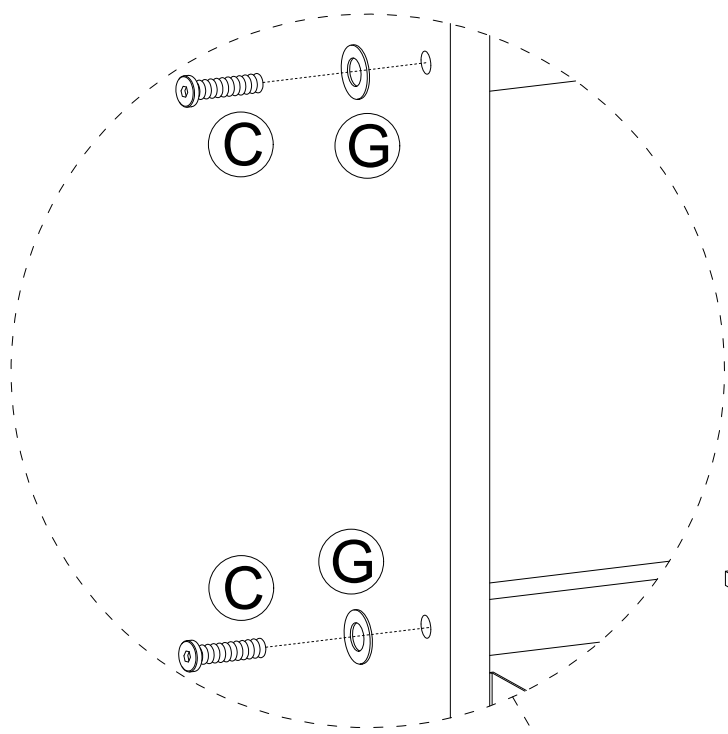


11

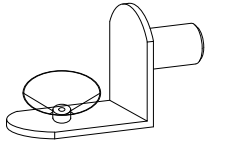


Q × 8pcs

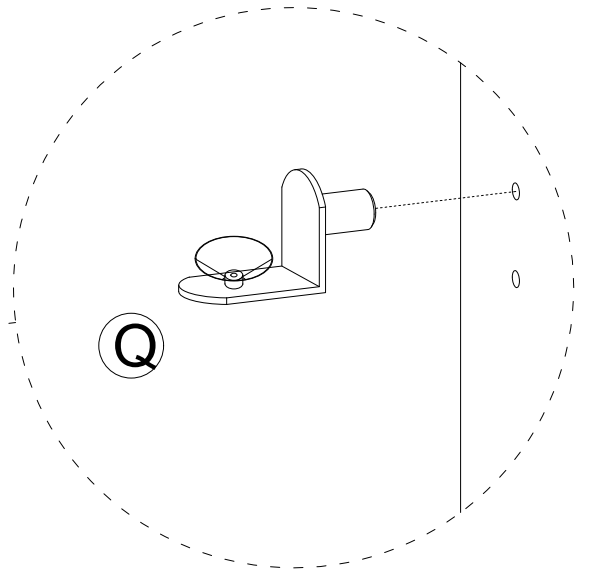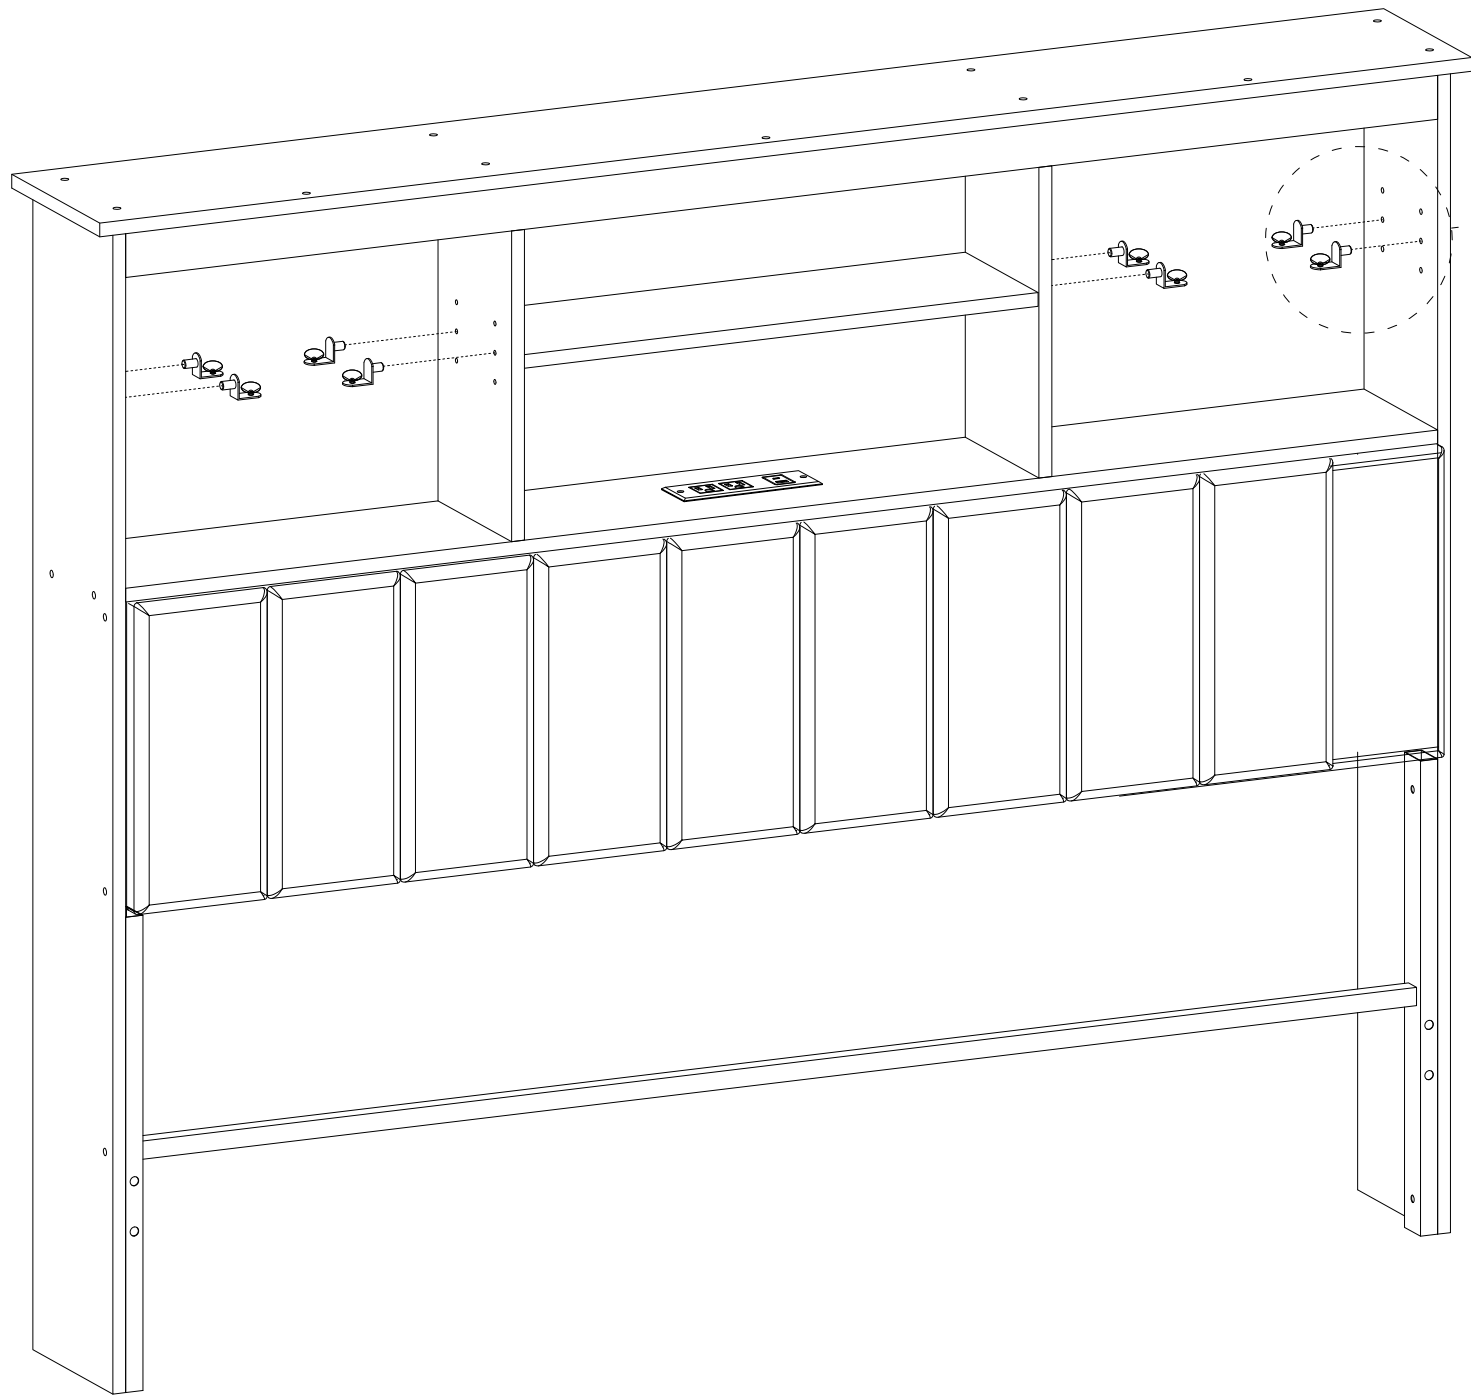


12

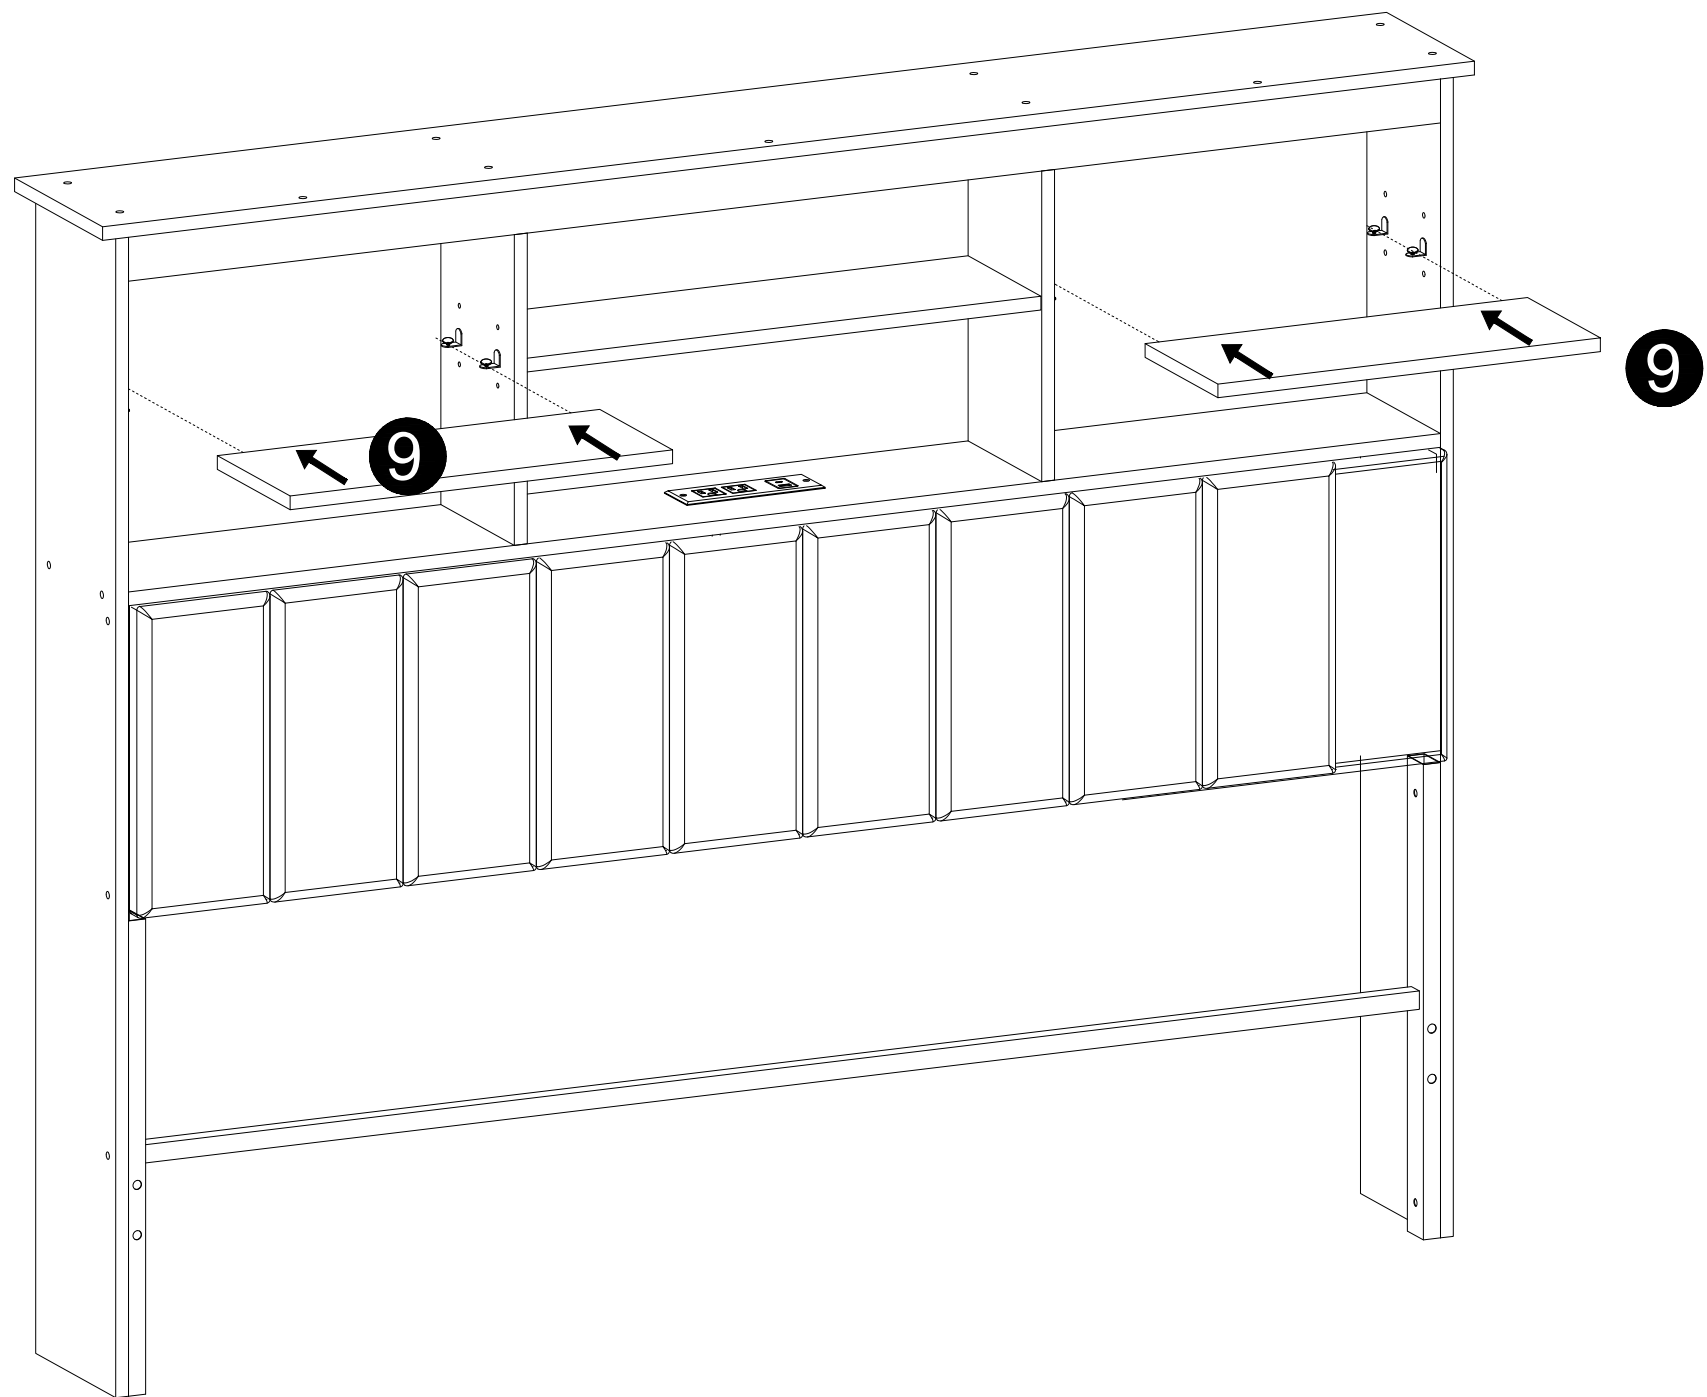

13

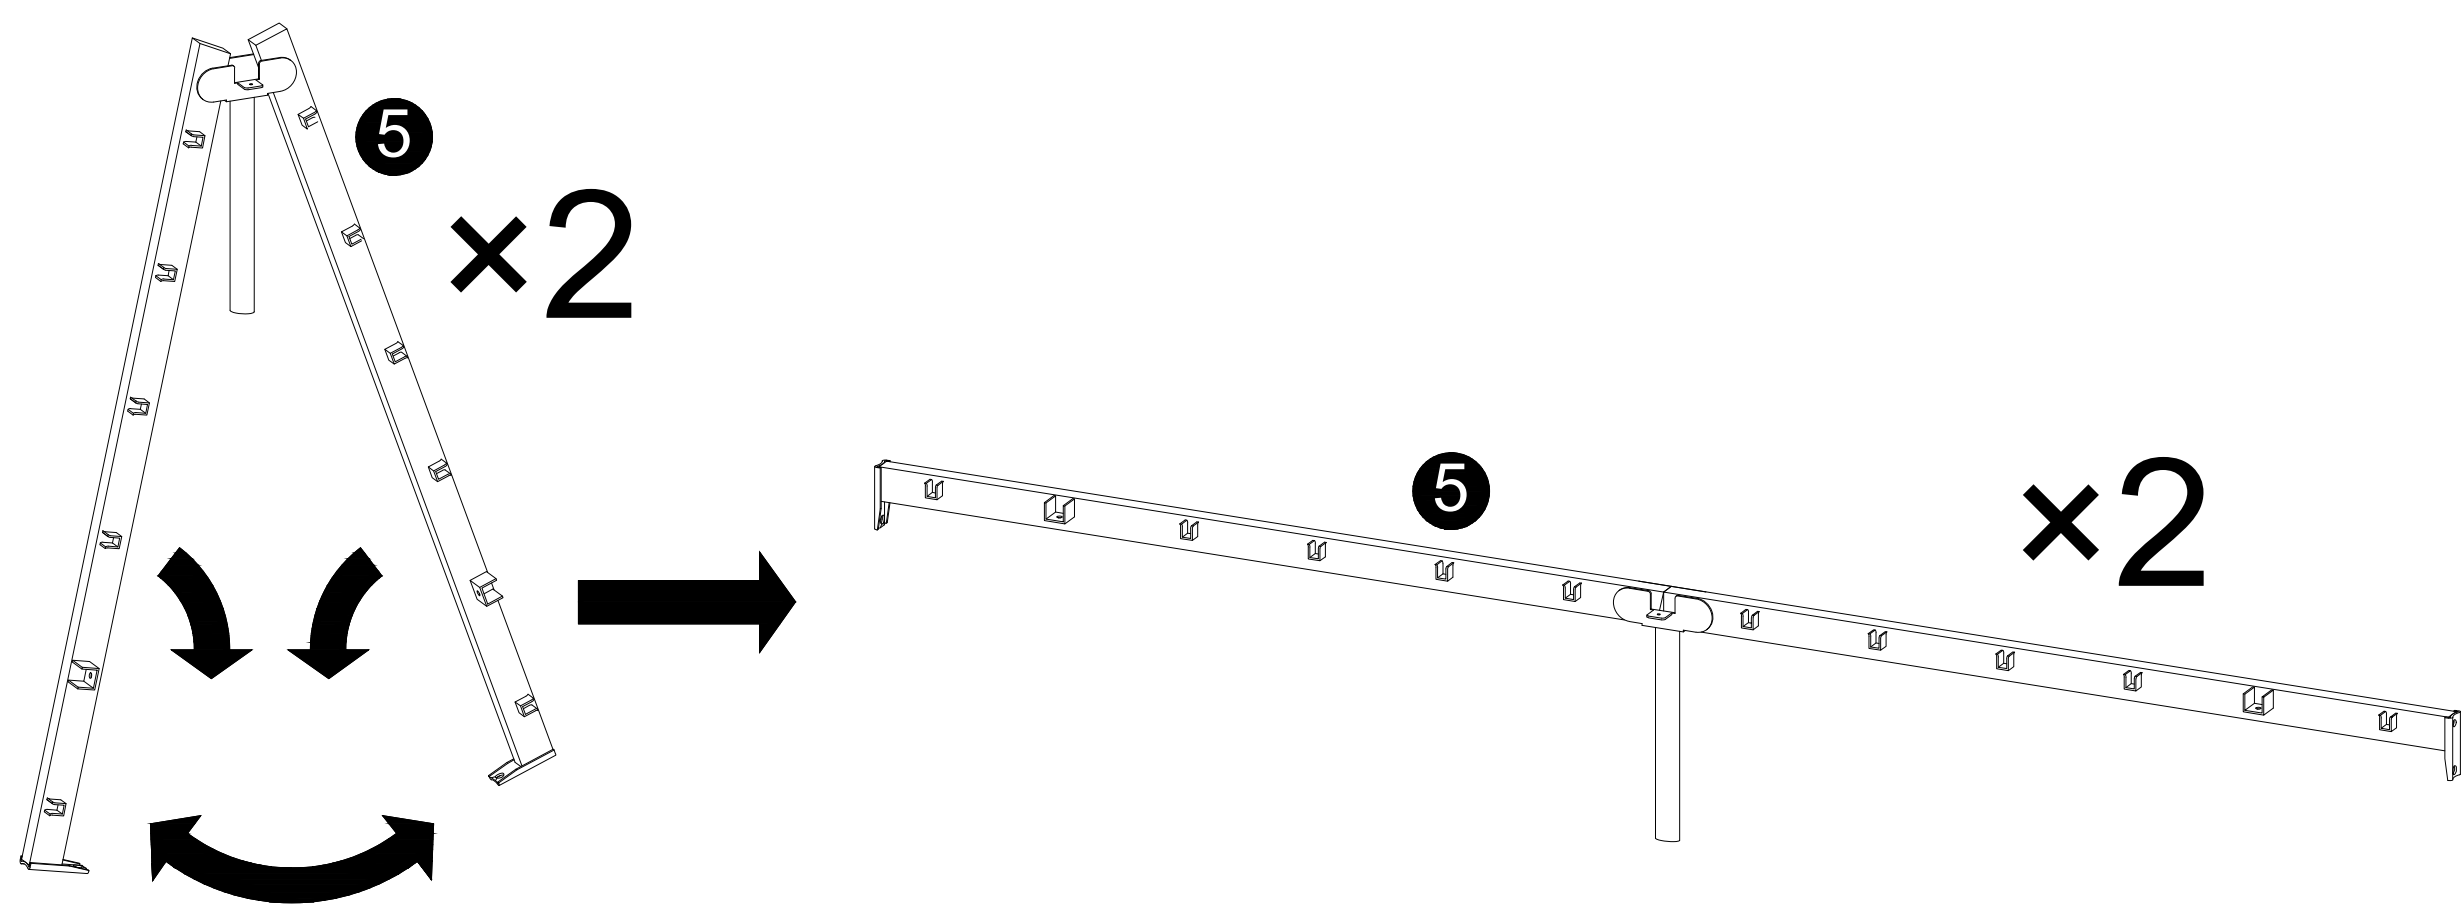


14




M8x55mm


L x 4pcs




G x 4pcs

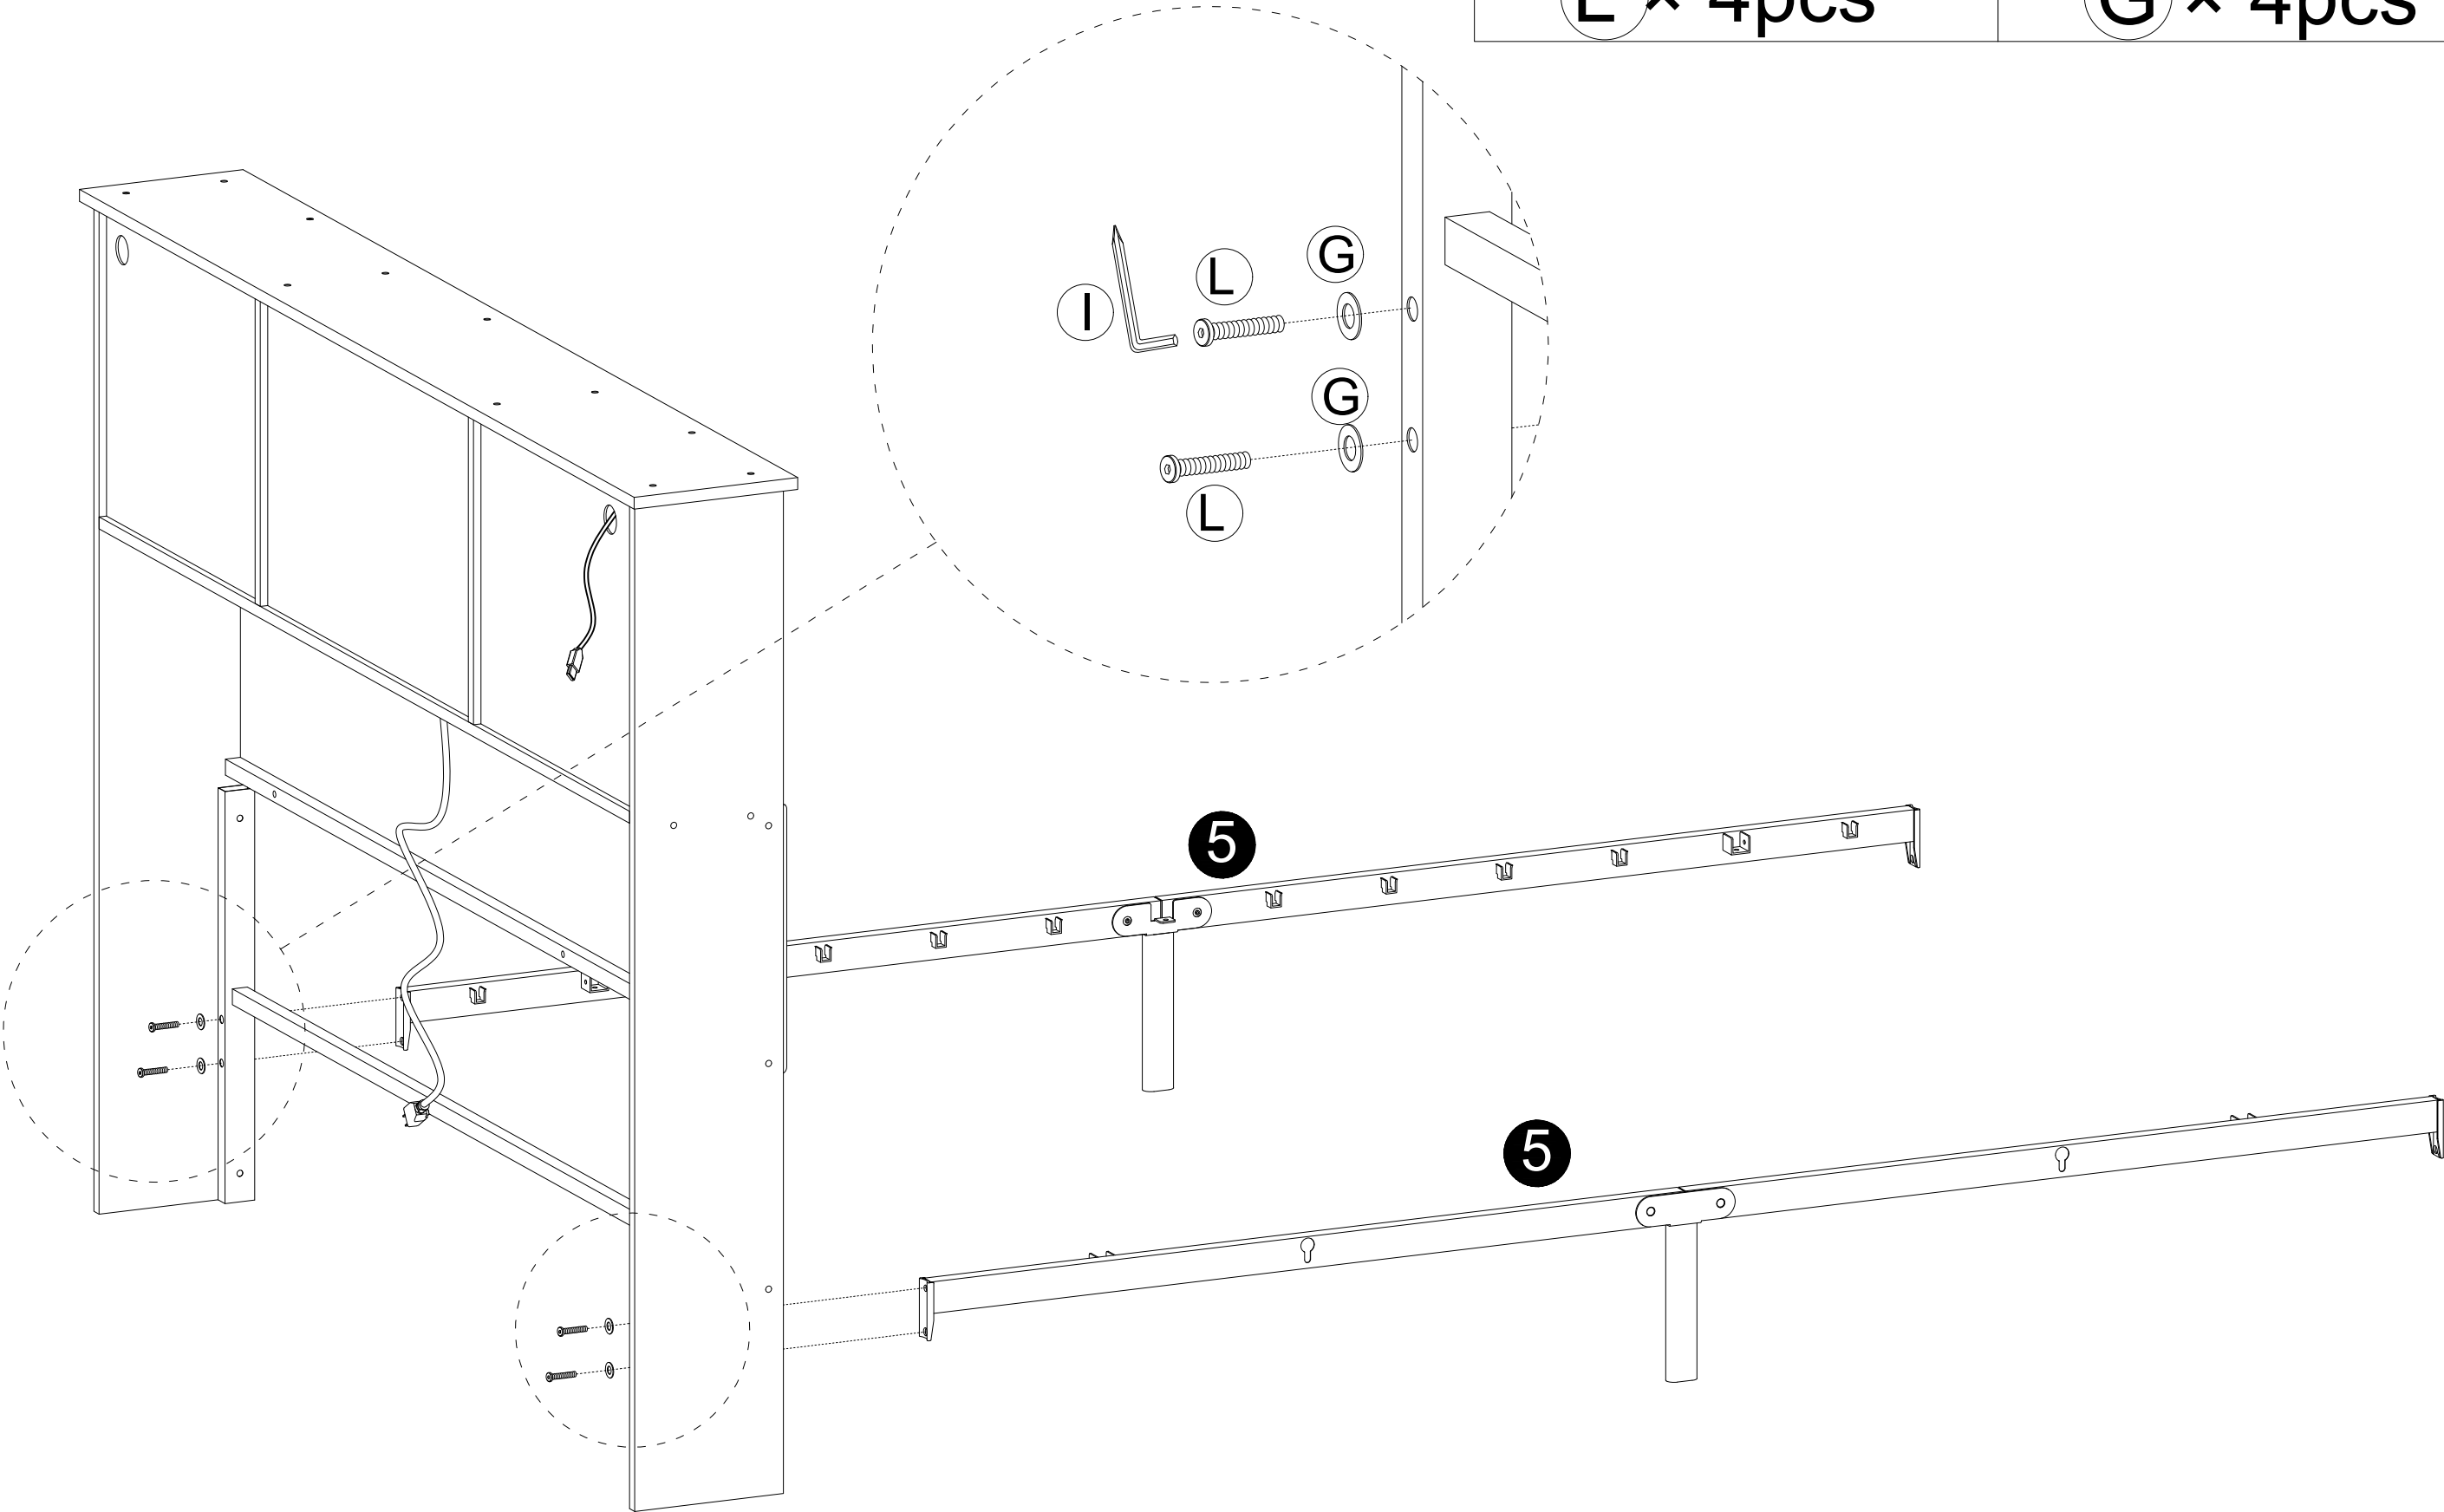


15

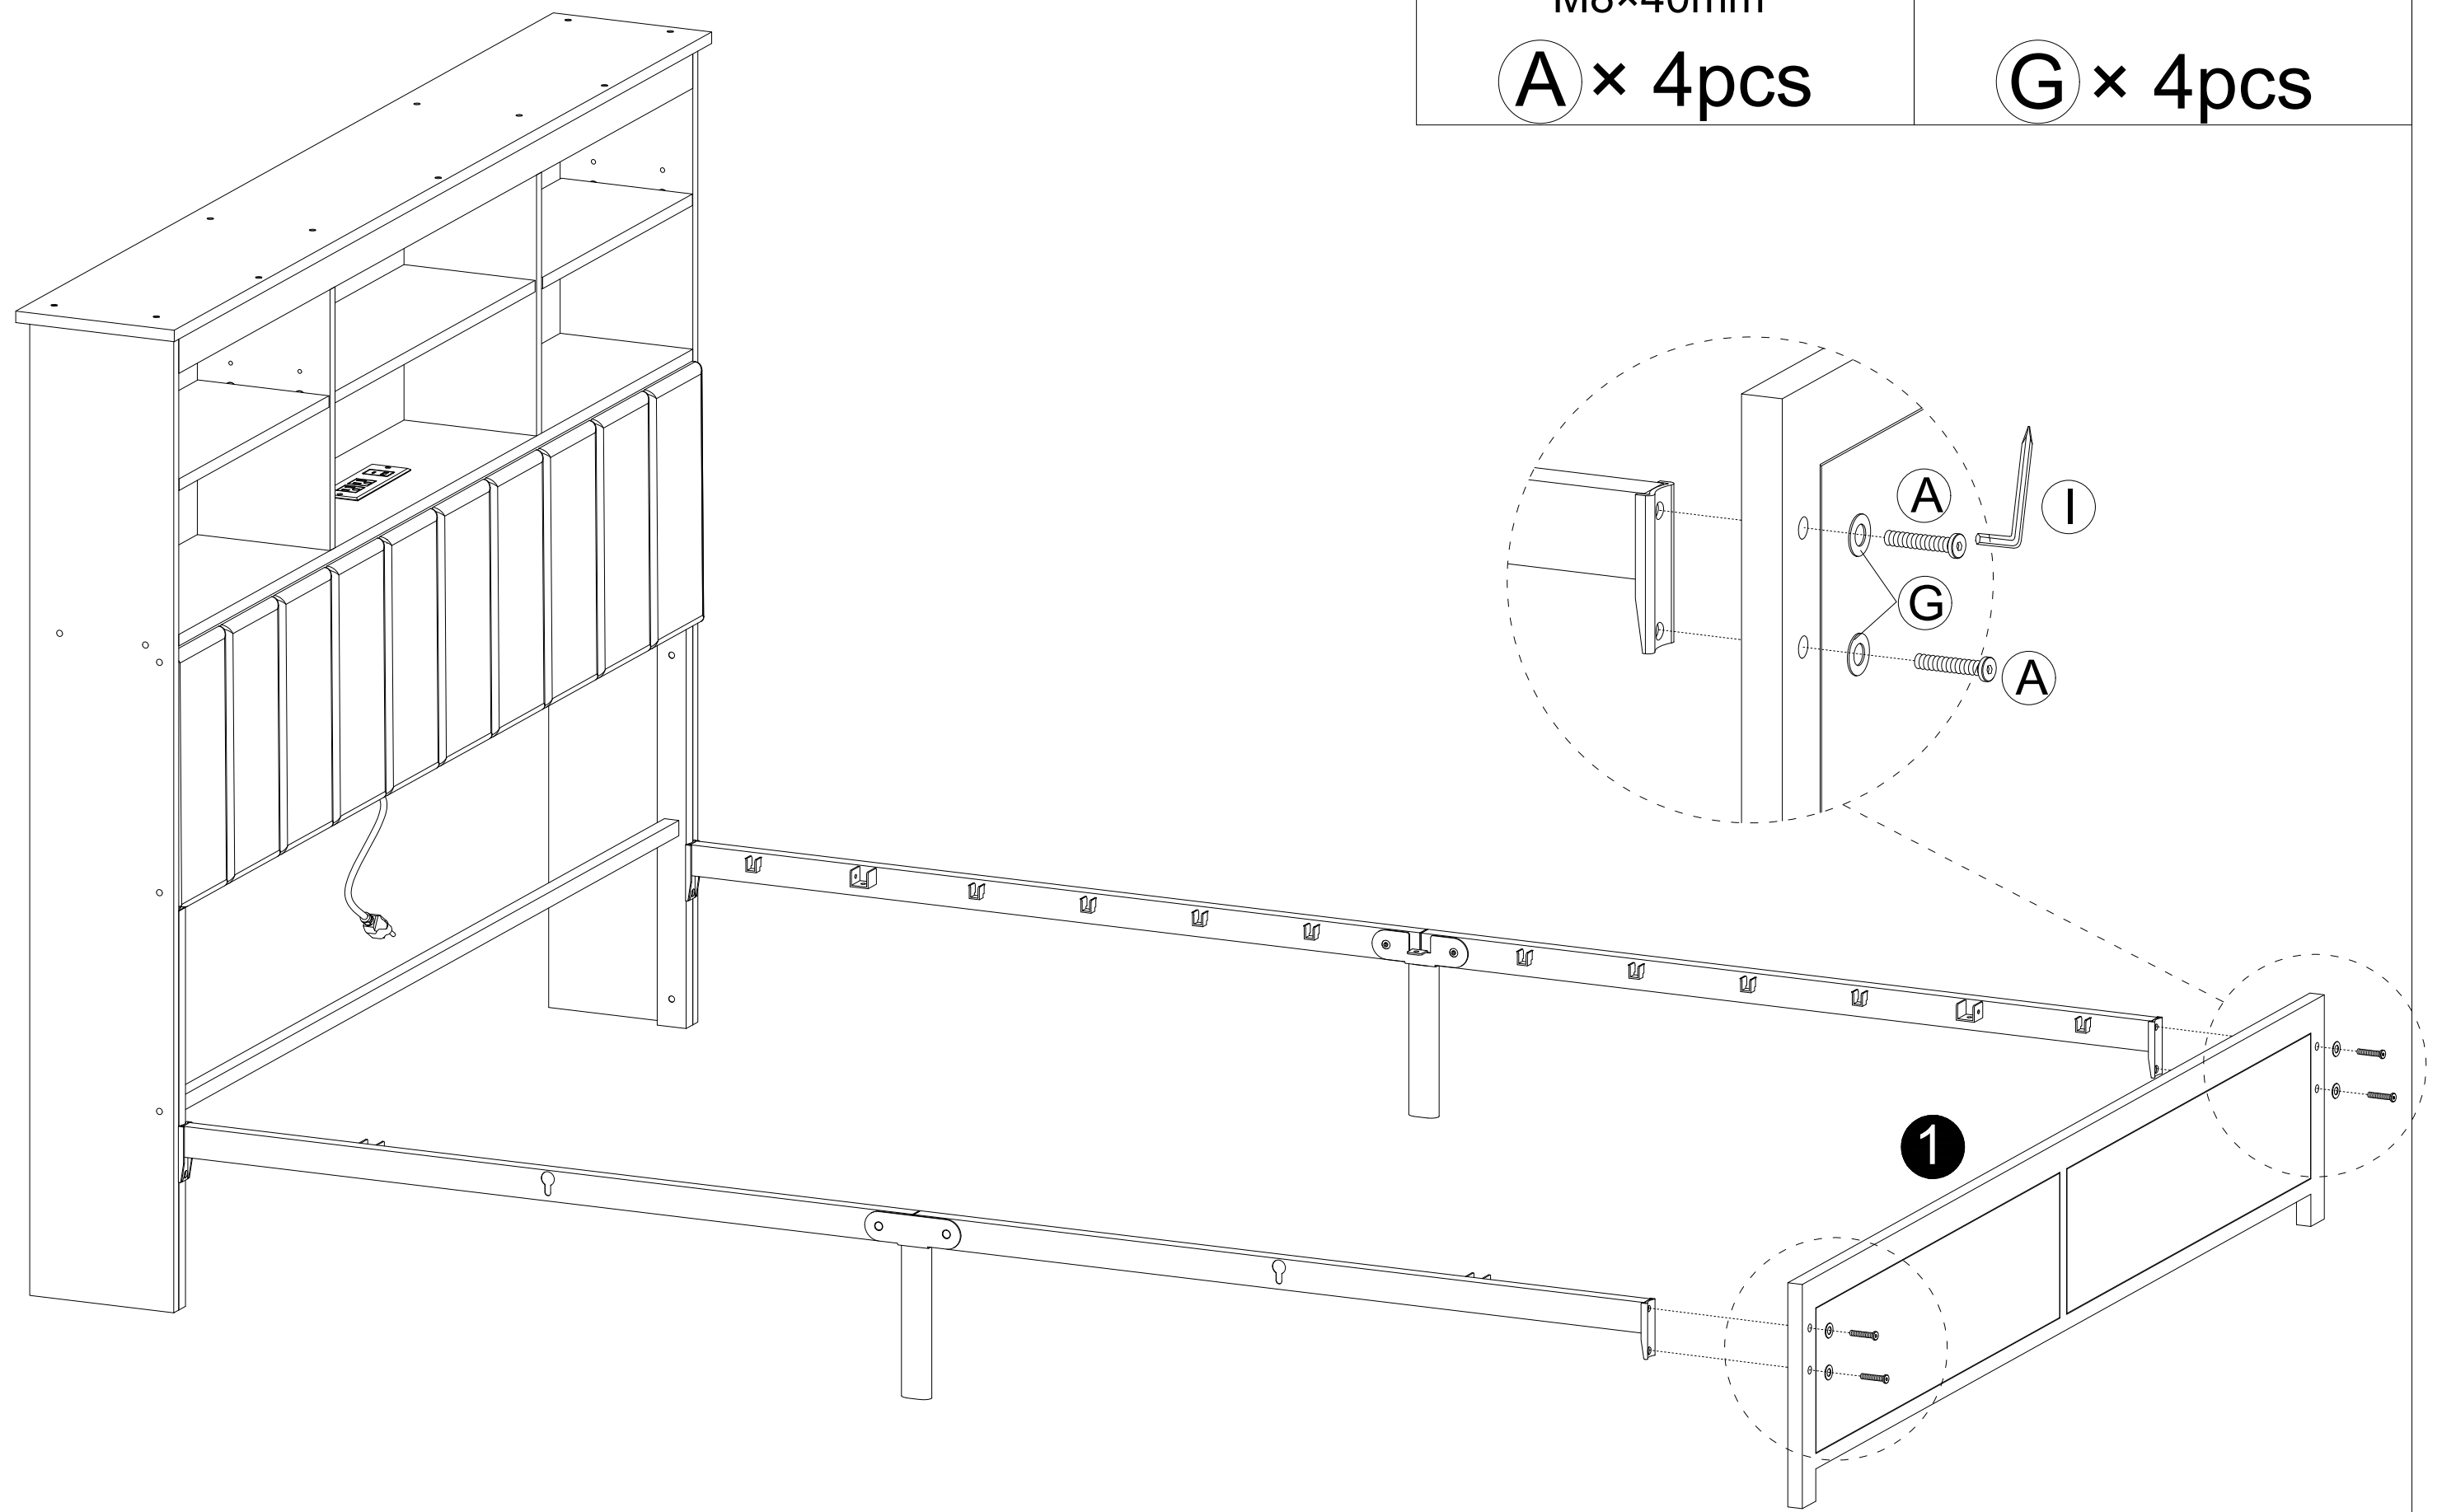


16

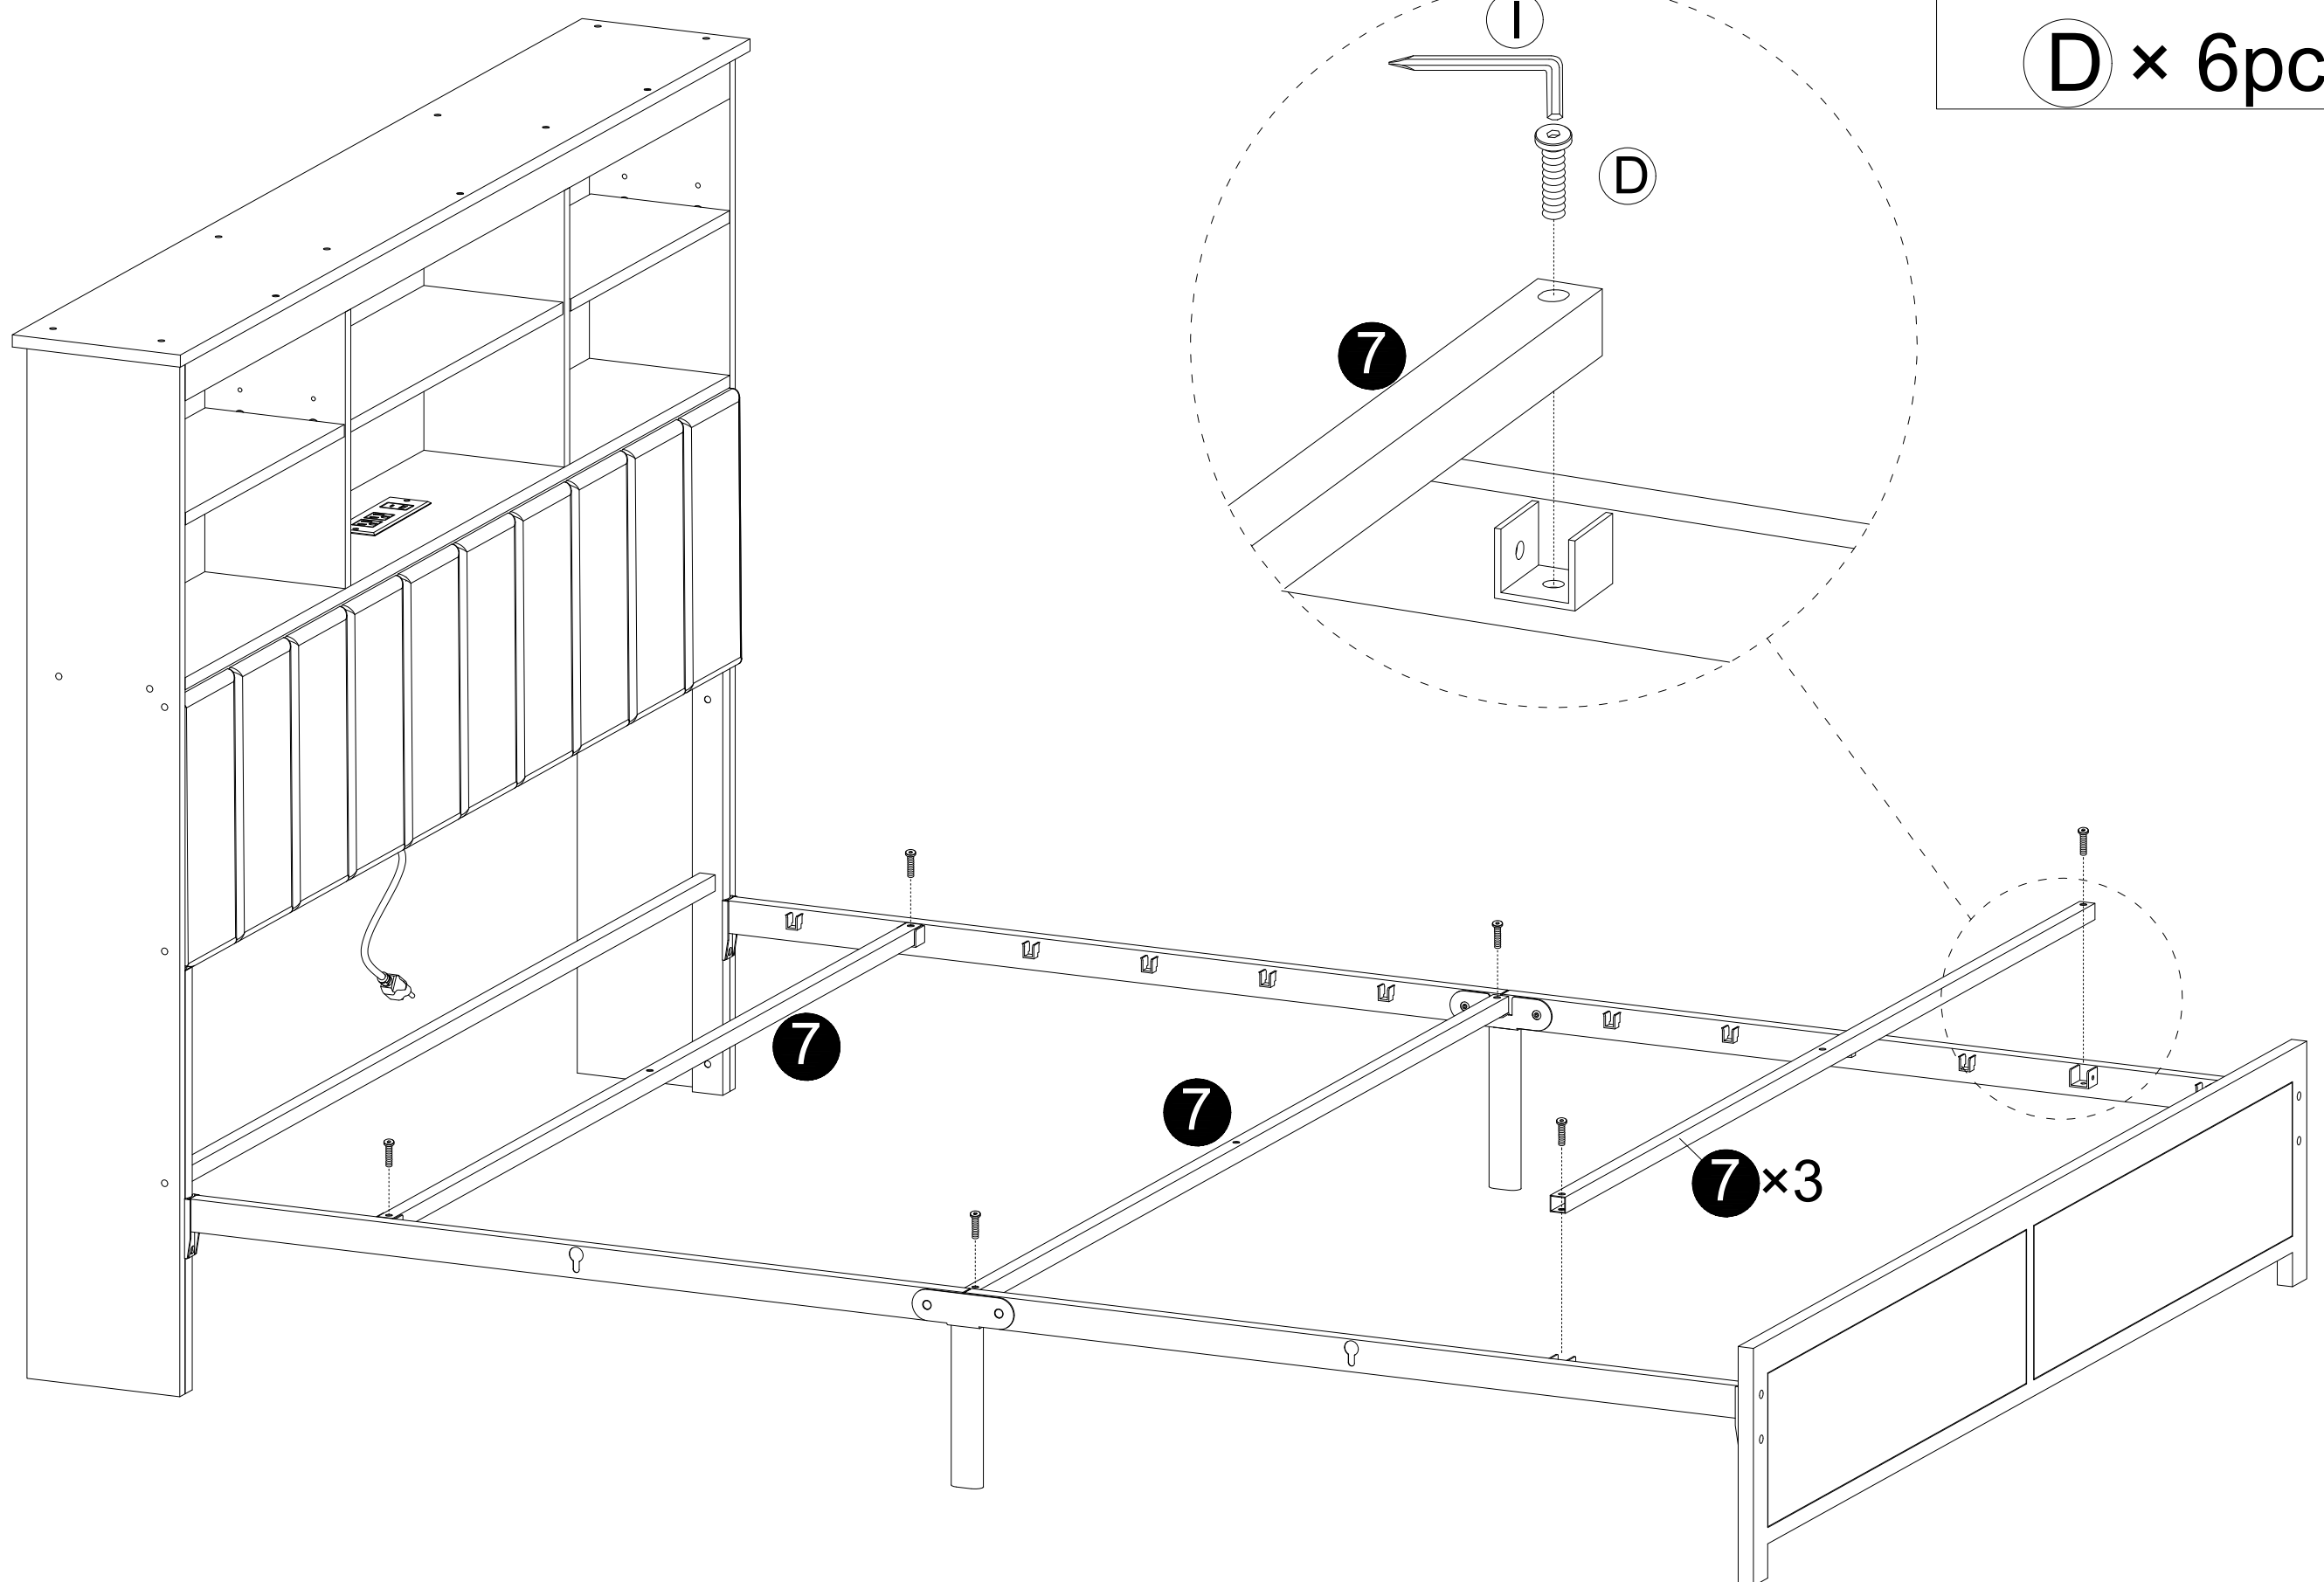

17

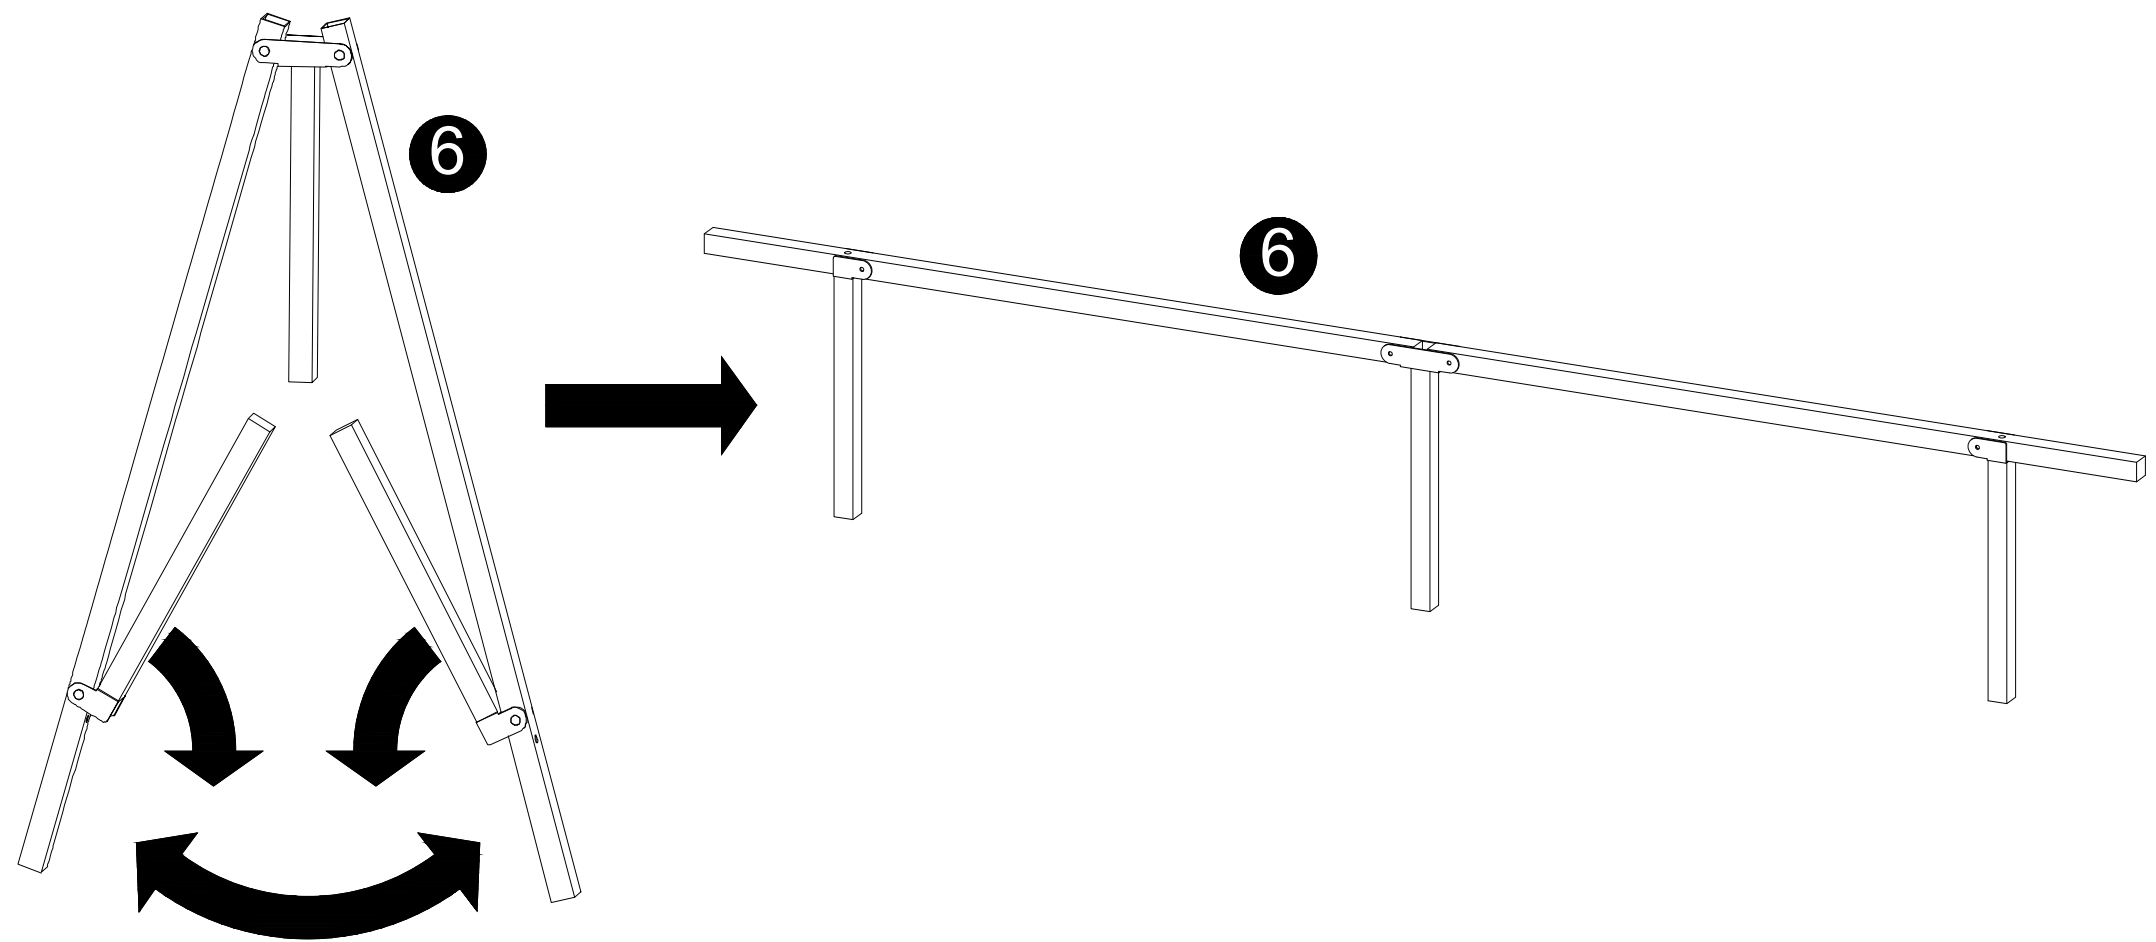


18



M6×55mm


Ⓑ × 3pcs

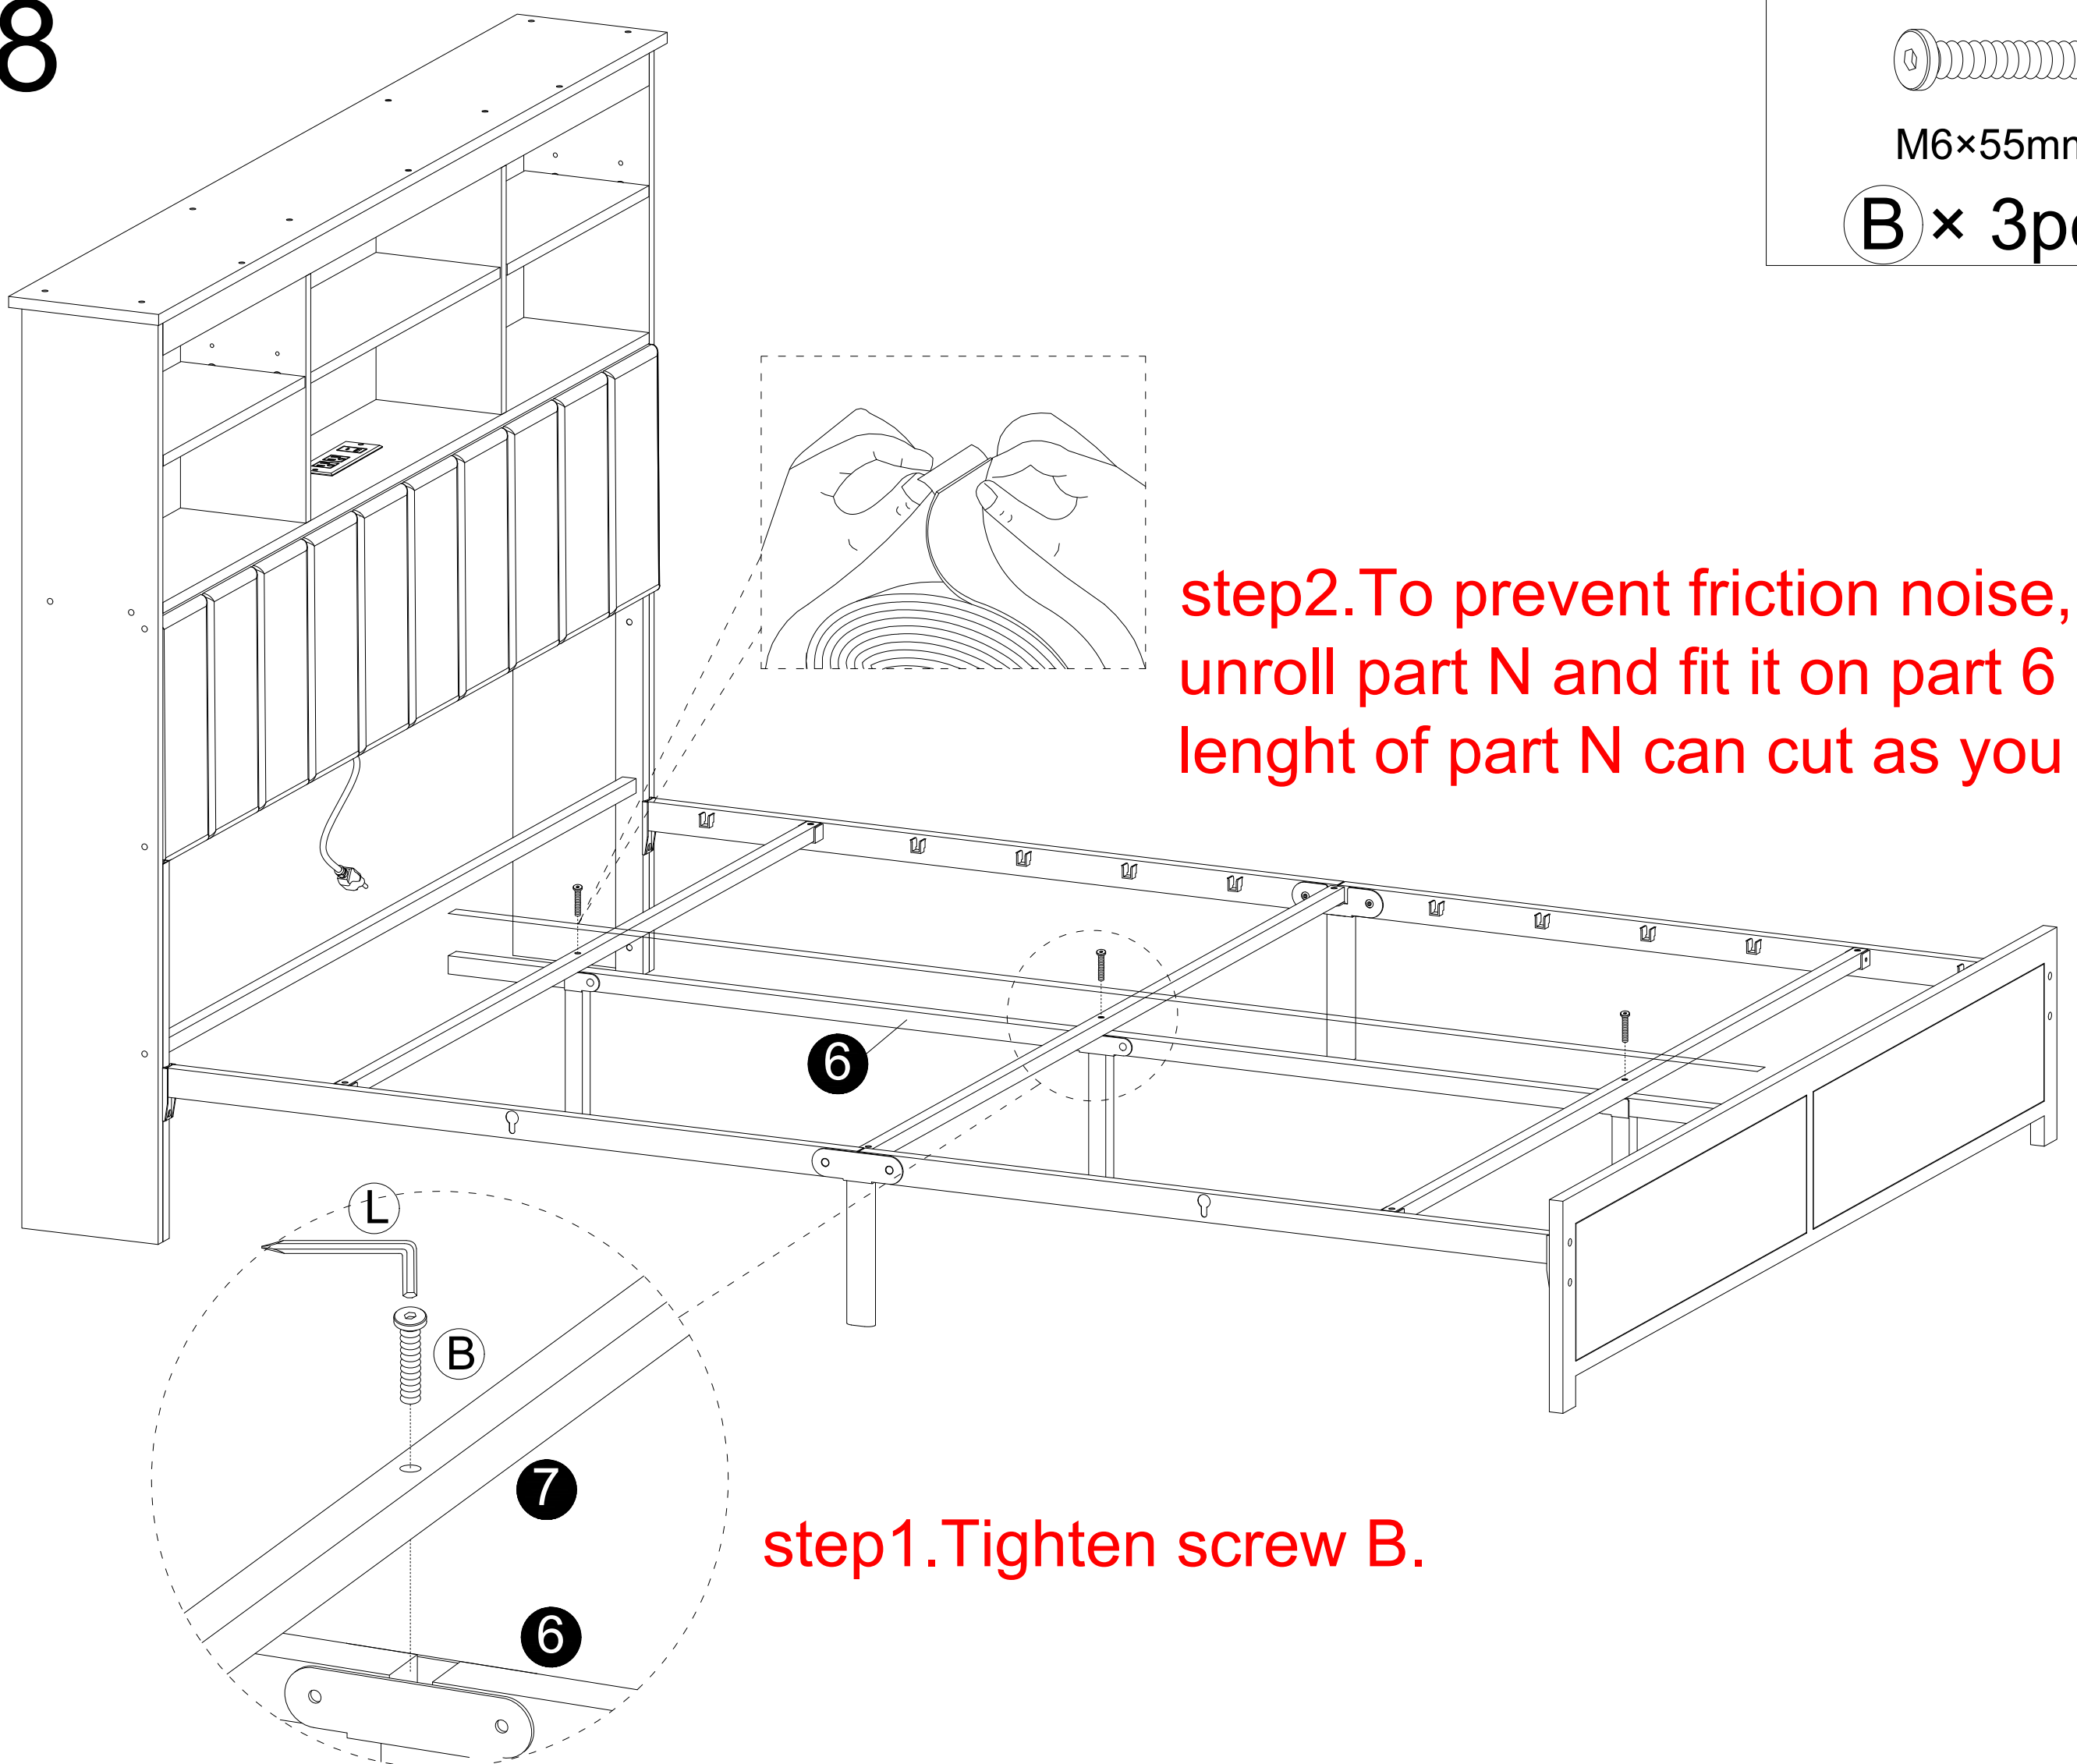


step2.To prevent friction noise,
unroll part N and fit it on part 6 ,the
lenght of part N can cut as you will.

step1.Tighten screw B.



19

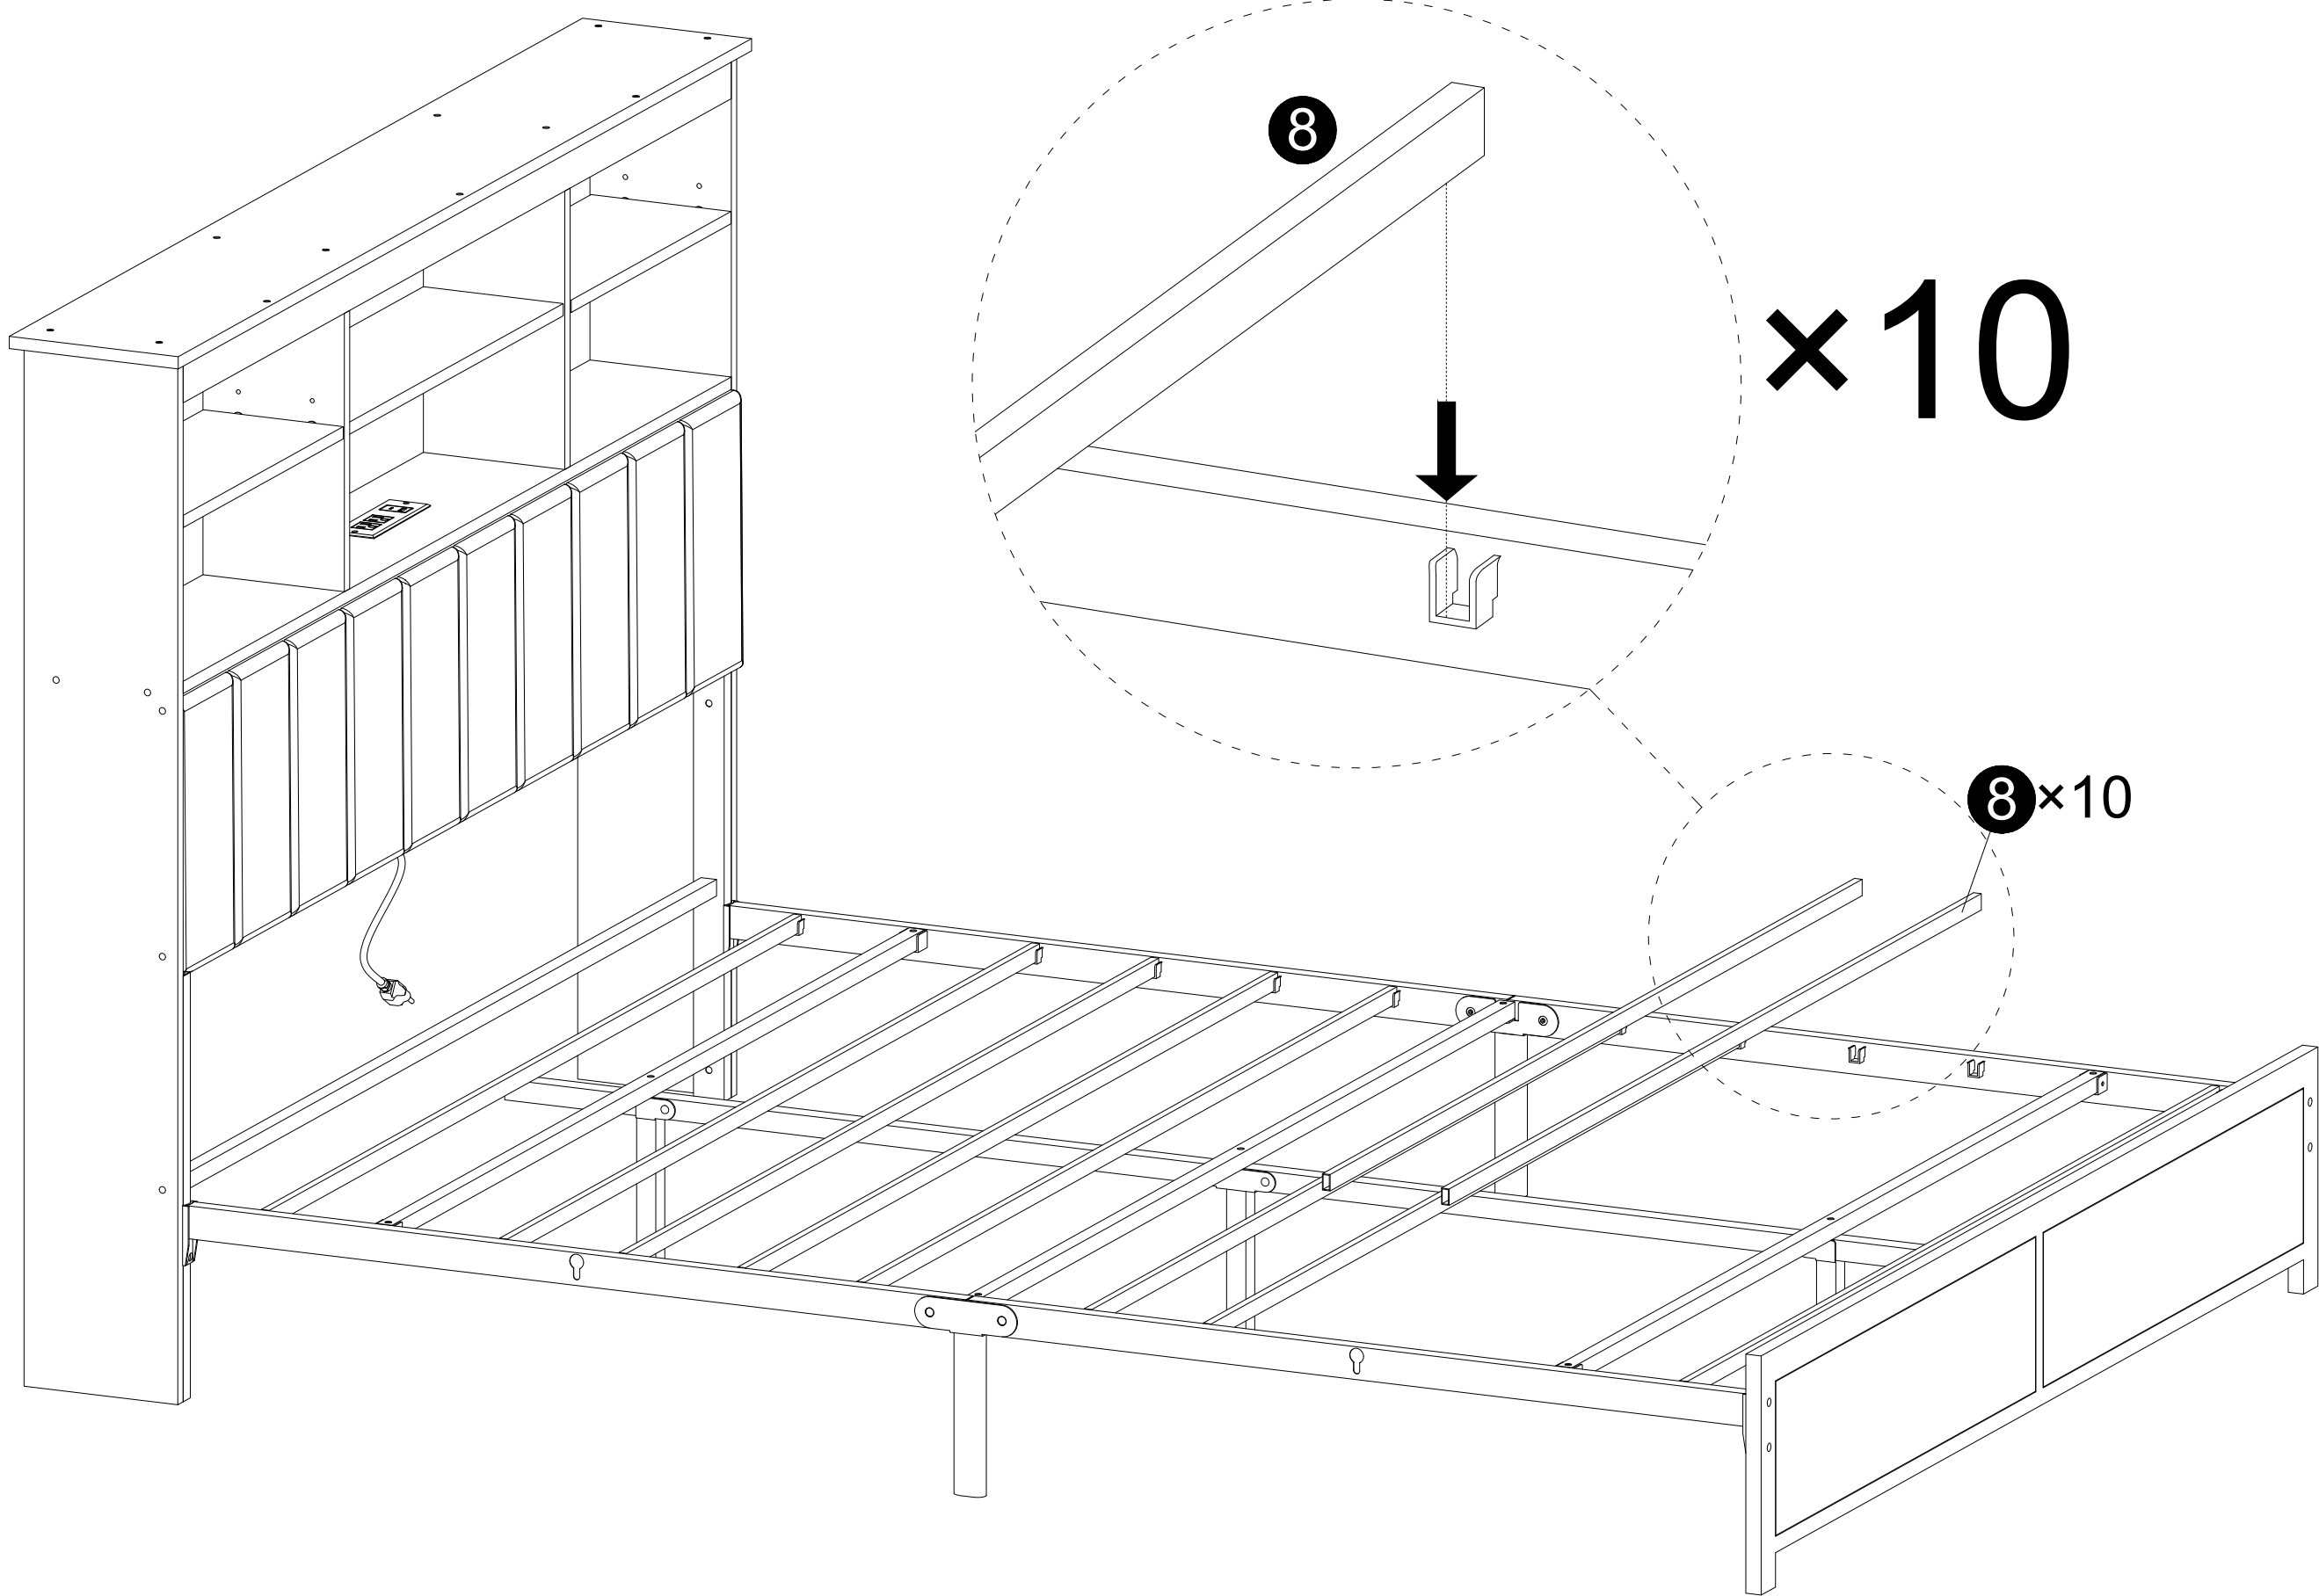


20

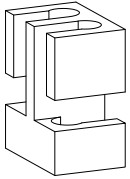


R x 8pcs

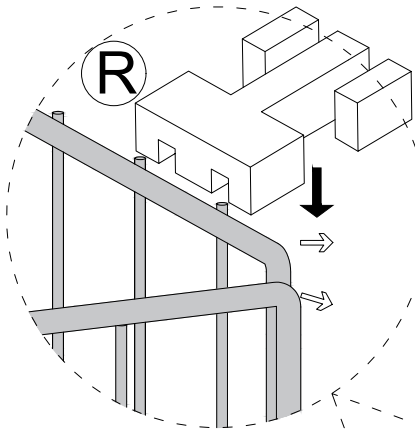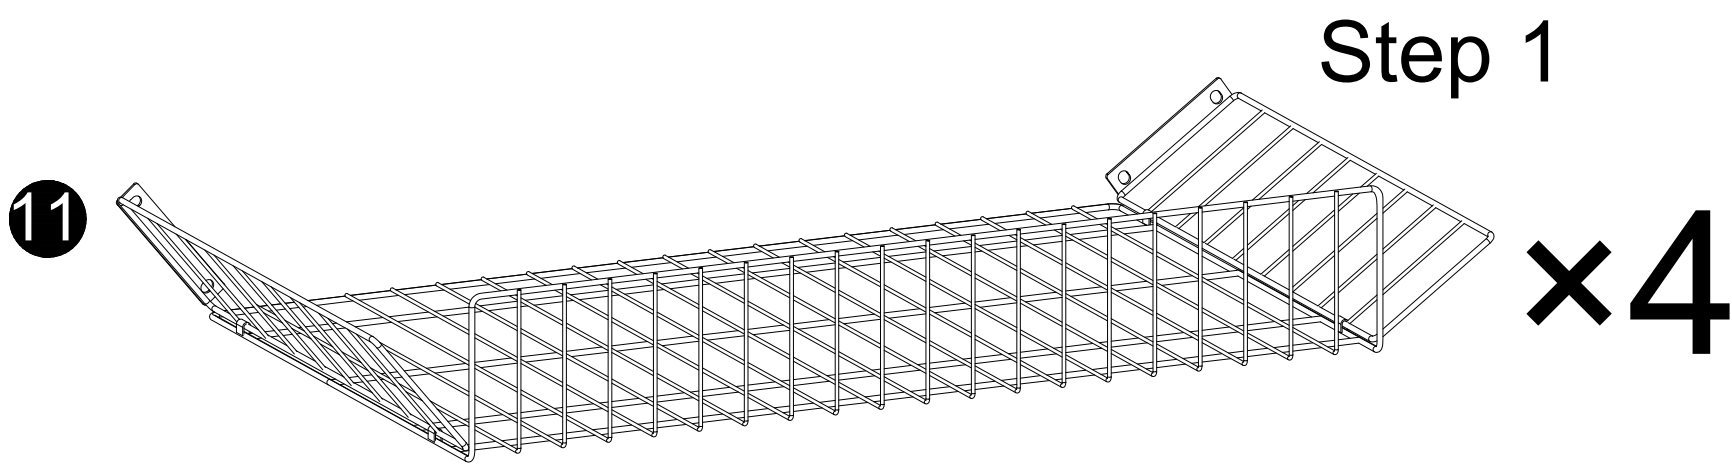


Step 2

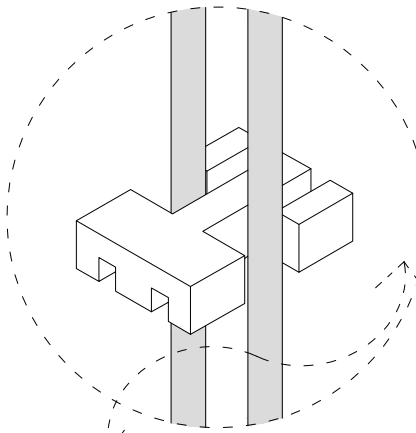


Step 3

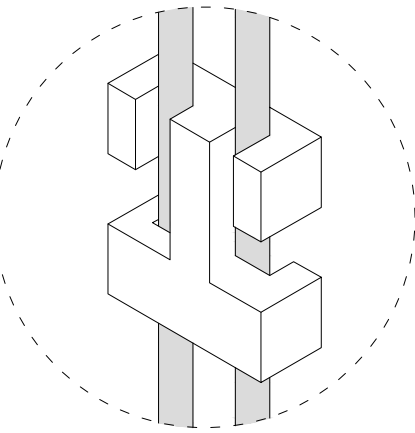

Step 4

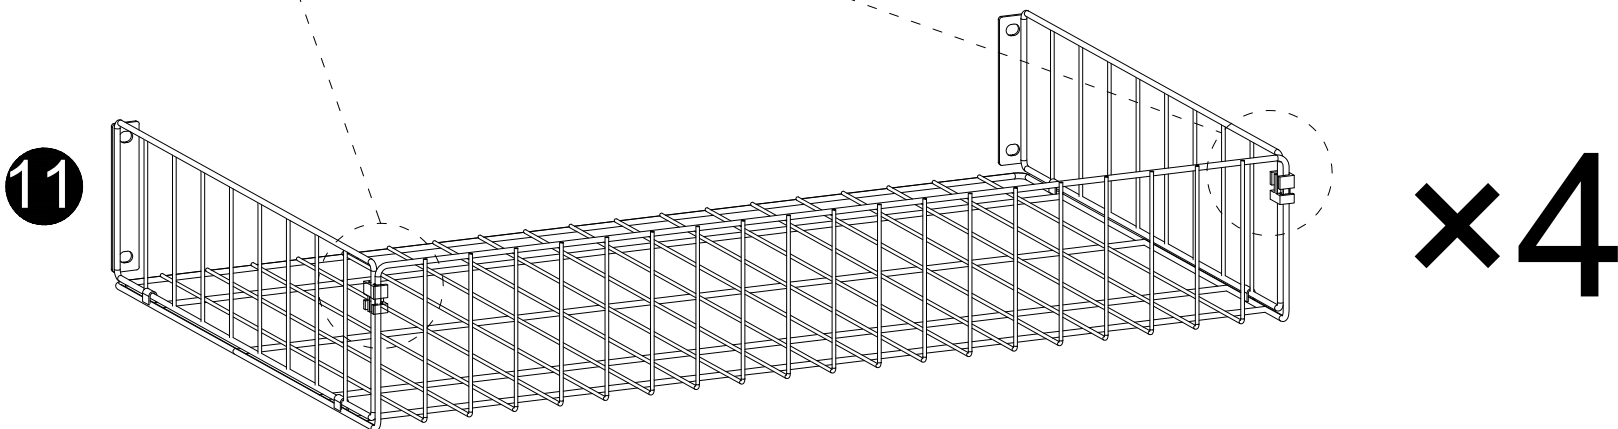


21





M6×10mm


E × 20pcs

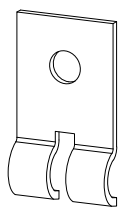


O × 4pcs

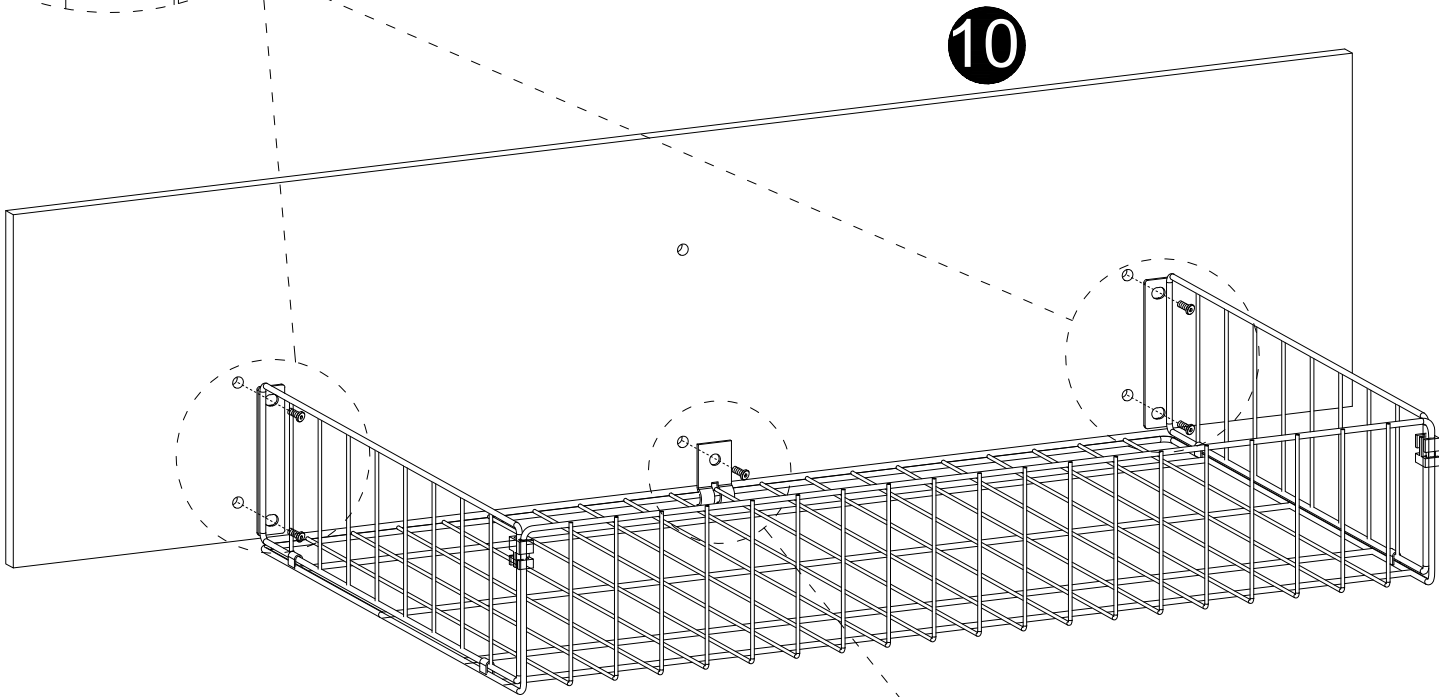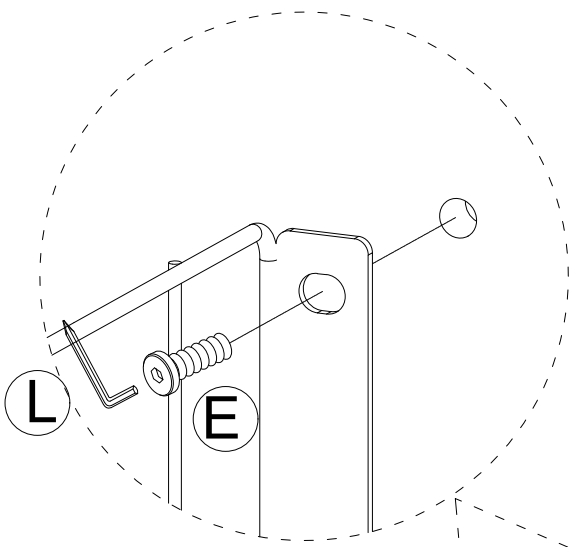

×4

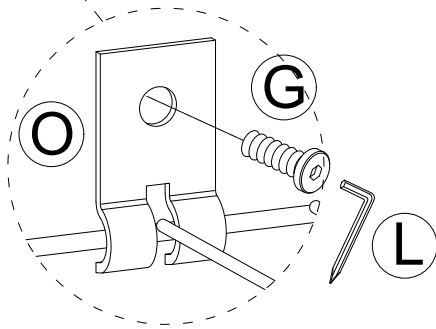


22

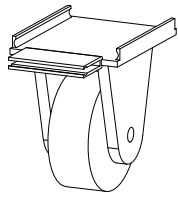


S × 16pcs

Clamp the wire with the opening of the front end of the wheel and press down to tighten the wire.



Step 1

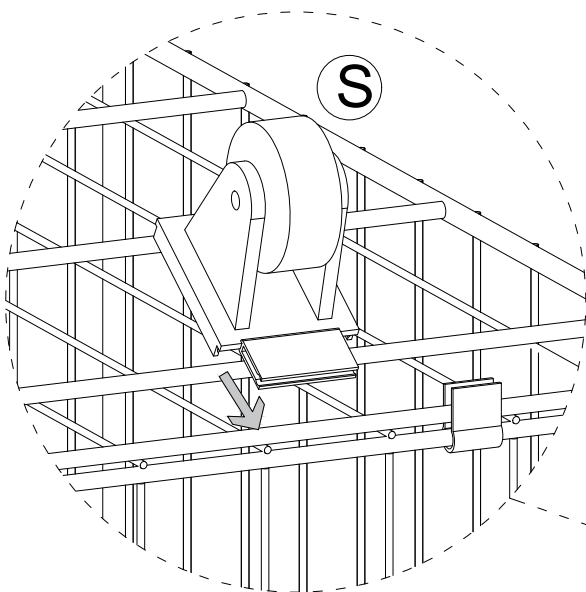

Step 2

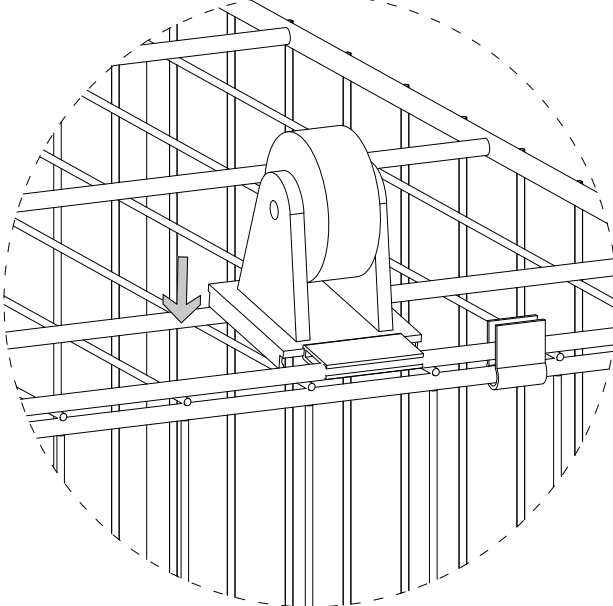


Step 3

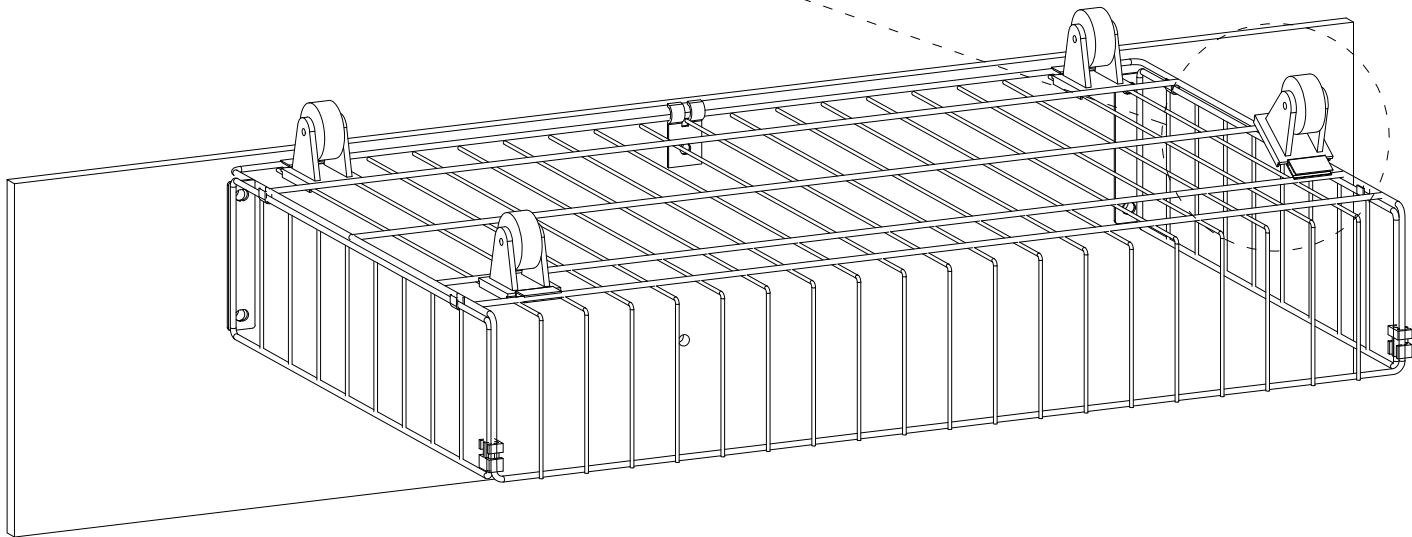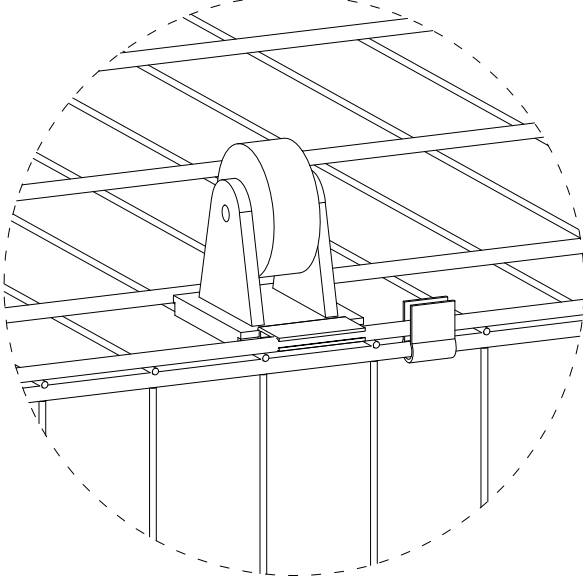


×4

23

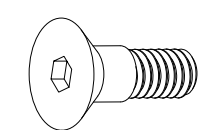

M8×24mm

H × 4pcs

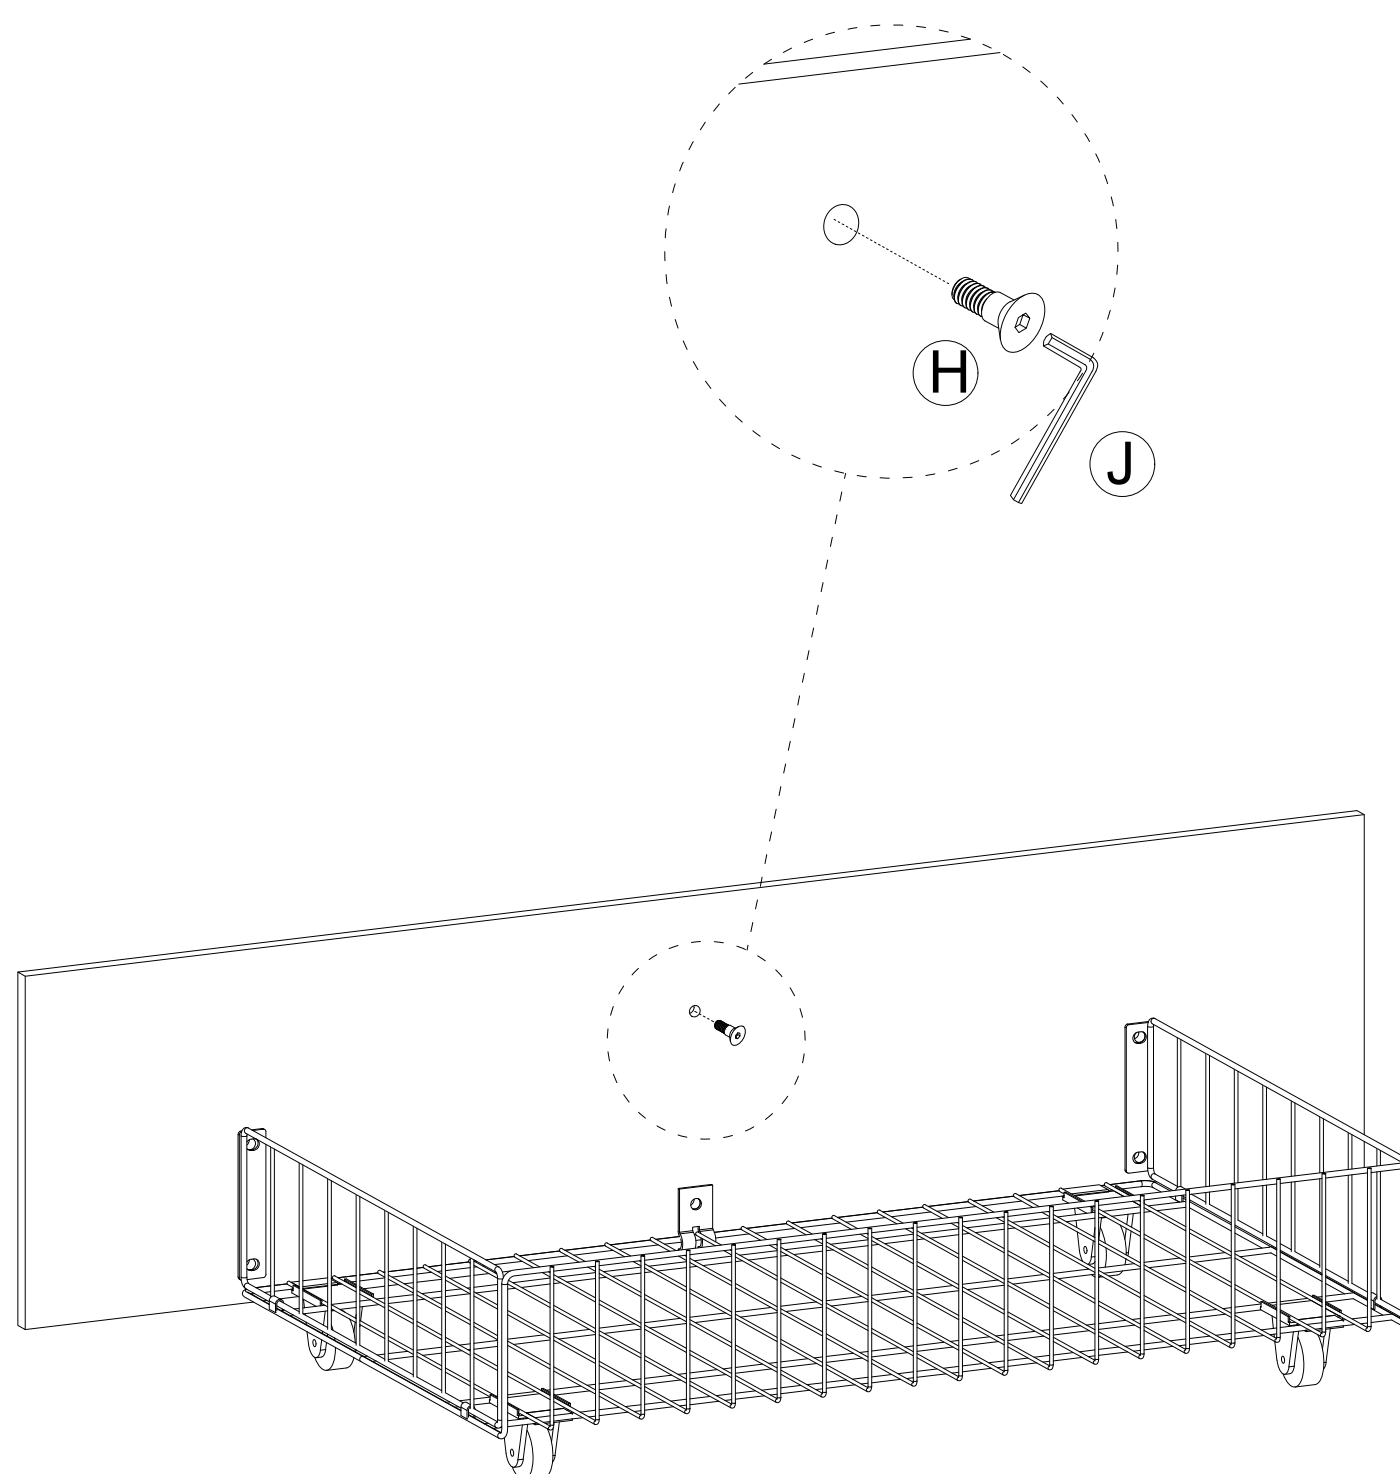

×4

24

**Carefully lift the drawer as you push it in.
Please align the screw with the hole on the
iron pipe and hang it up**

