

DA0386--0FA

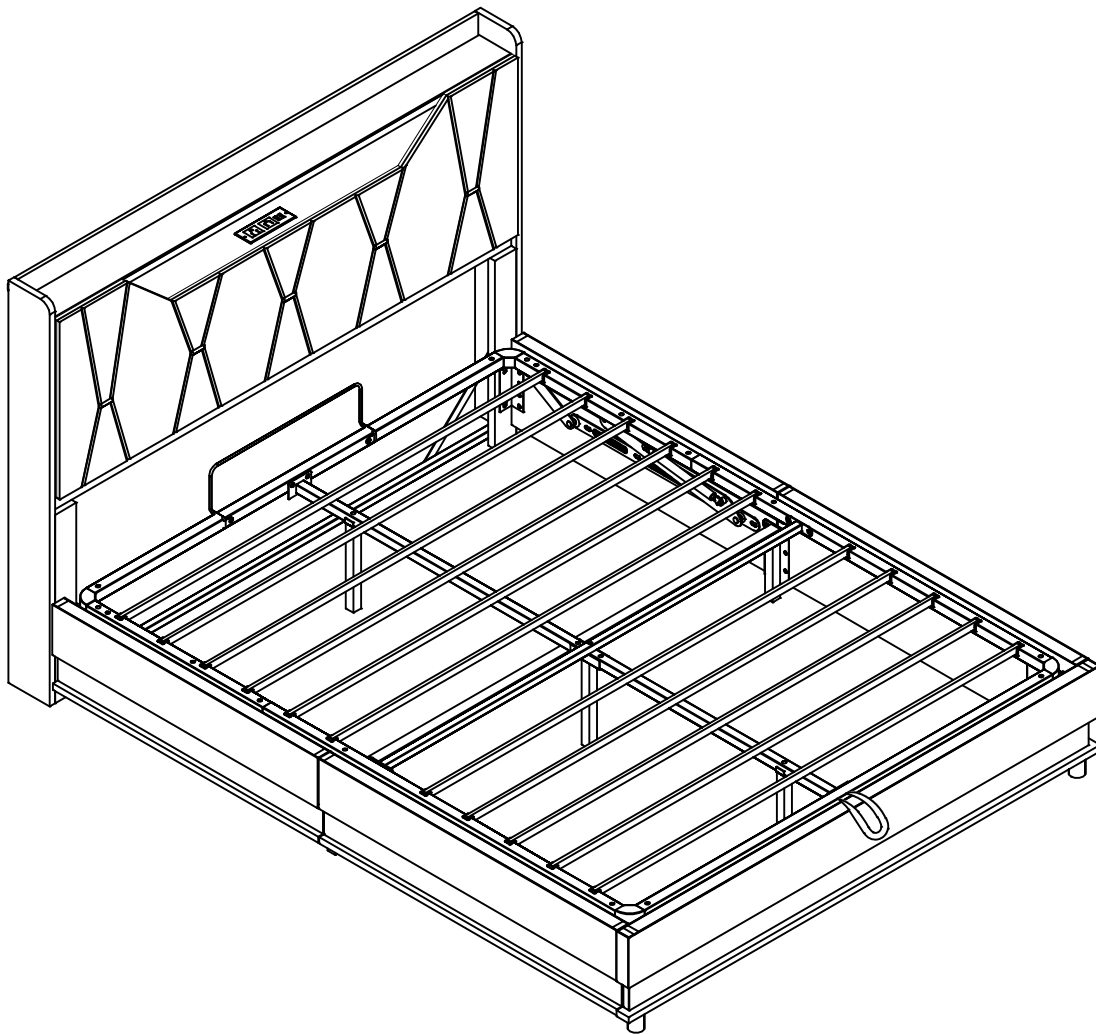


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

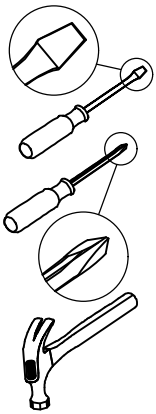


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Part List




M6X25

(B)

X8

BOLT
spare:1




M6X15

(C)

X4

BOLT
spare:1




M8X12

(D)

X8

BOLT
spare:1




M8X15

(E)

X28

BOLT
spare:2




M8X20

(F)

X62

BOLT
spare:5




M8*35

(H)

X4

BOLT
spare:1




M8X40

(J)

X2

BOLT
spare:1




M8X50

(K)

X10

BOLT
spare:2




M8X55

(L)

X1

BOLT
spare:1




M3*12

(M)

X2

BOLT
spare:1




M8

(O)

X12

spare:2



M8XØ22

(R)

X5

spare:1



M6

(T)

X1

SPANNER




M8

(U)

X1

SPANNER



(V)

X1


SPANNER



(W)

X1

SPANNER



(X)

X2

L-SHAPED BRACKET



(Y)

X2

BRACKET




(Z)


X4

NOISE-REDUCTION PAD

Product explosion diagram

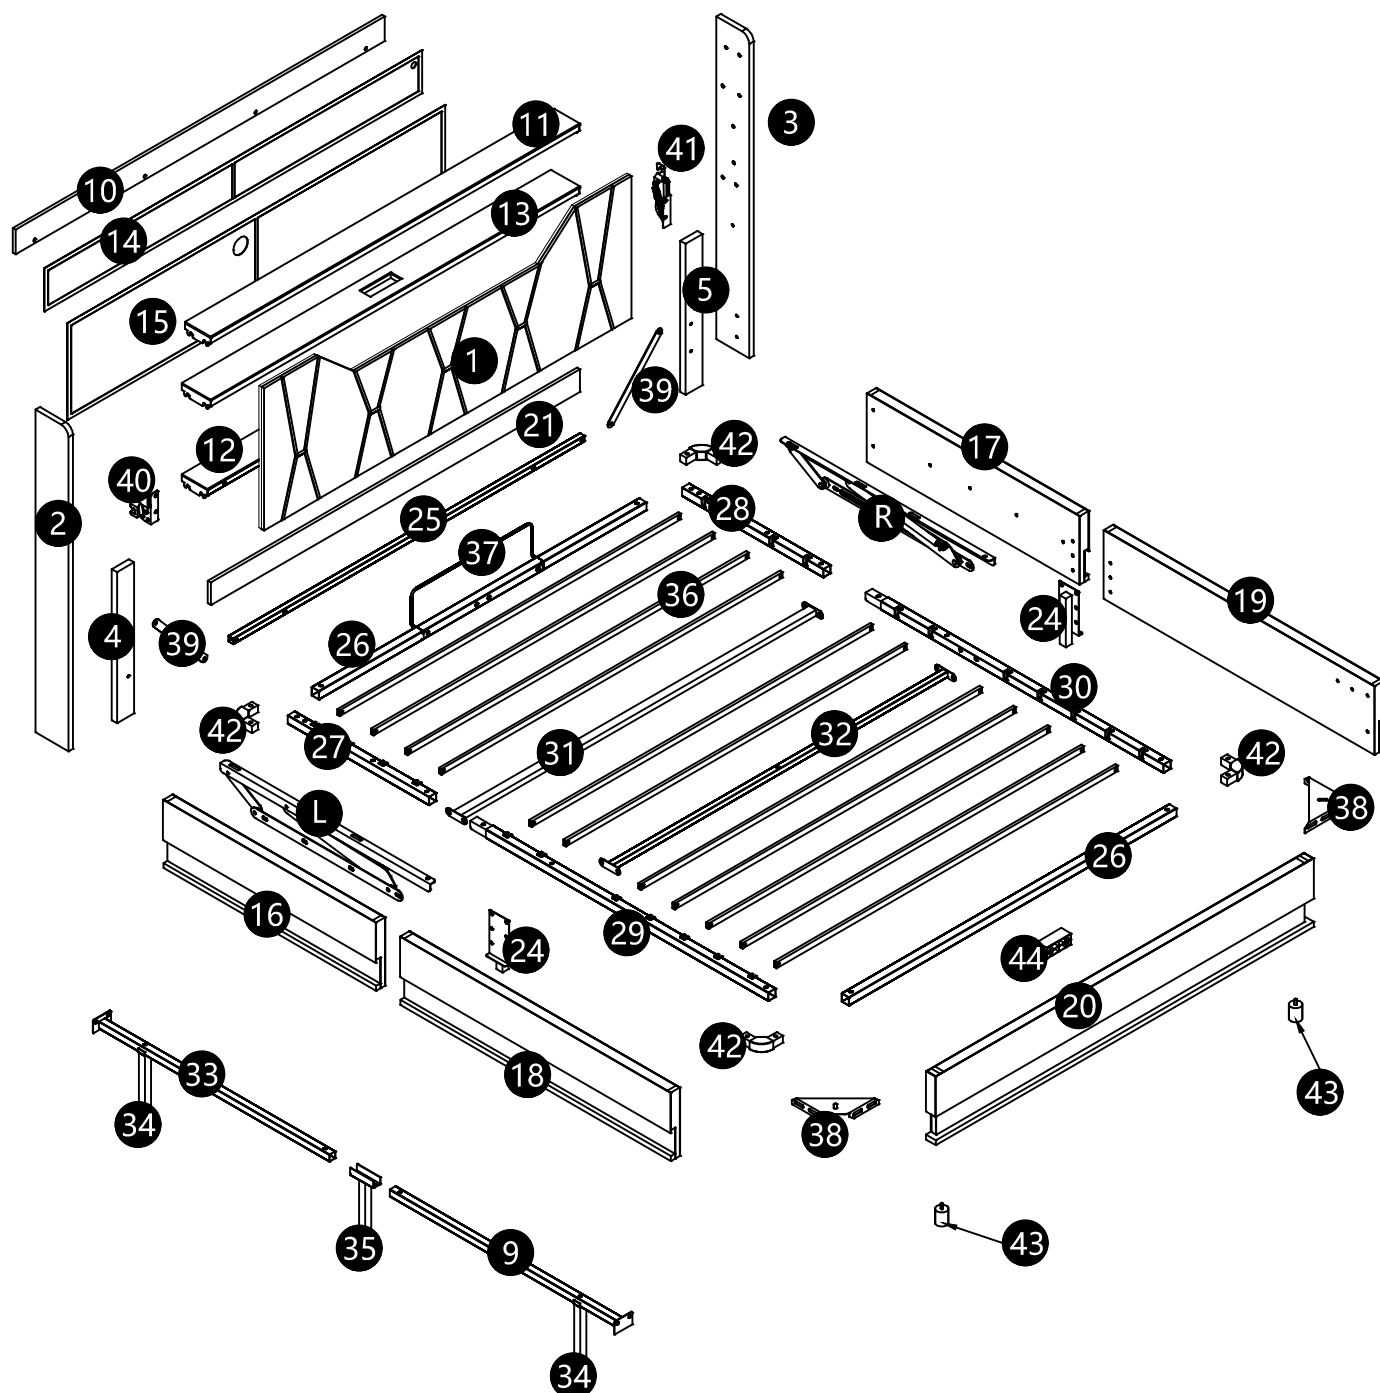

Part List

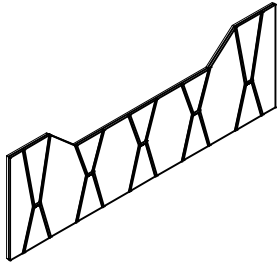

1 1PC




2 1PC




3 1PC



4 1PC




5 1PC

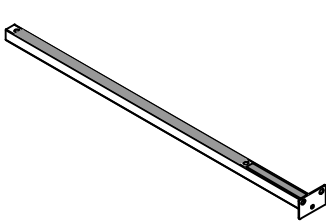


Short


9 1PC

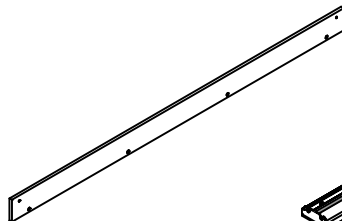


10 1PC

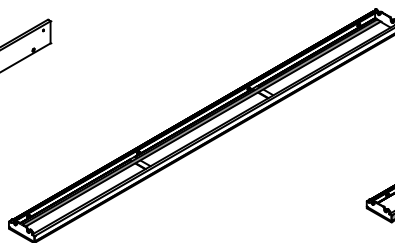


11 1PC

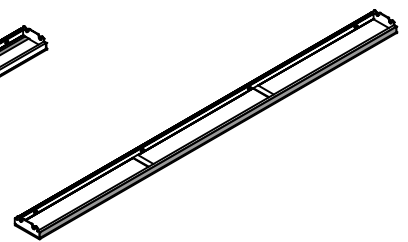


12 1PC

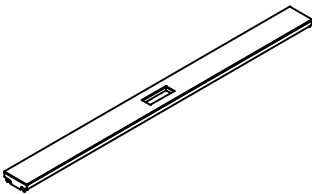


13 1PC

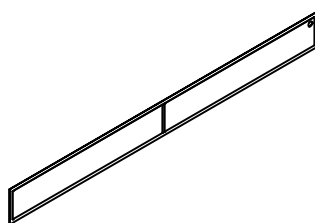


14 1PC

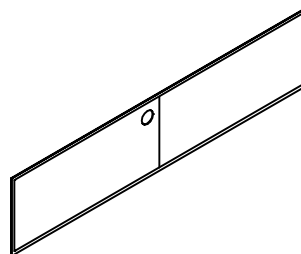


15 1PC

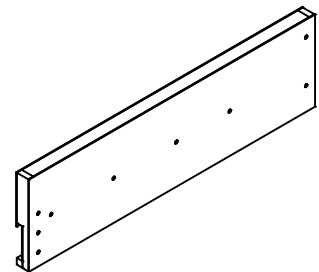


16 1PC

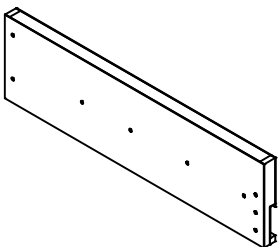


17 1PC

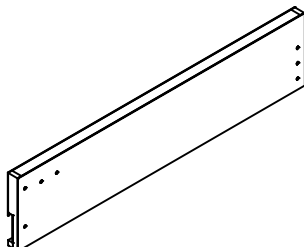

18 1PC

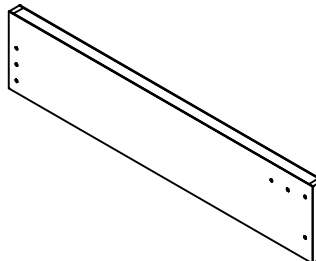


19 1PC

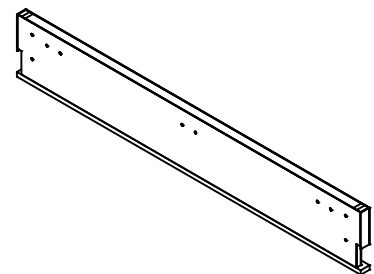


20 1PC


Part List

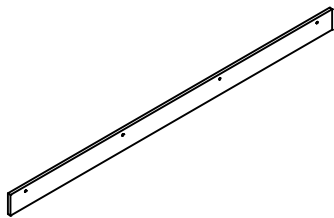


21 1PC




24 2PCS

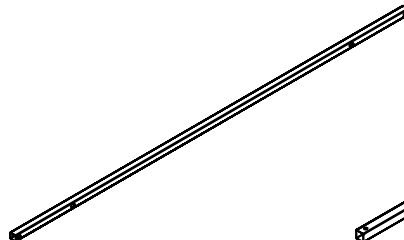


25 1PC

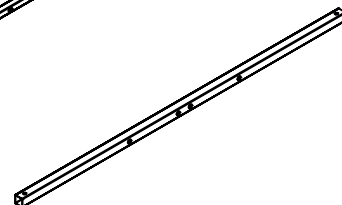


26 2PCS

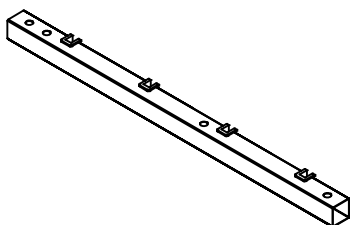


27 1PC

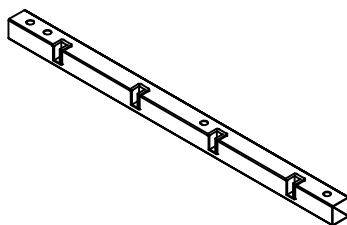


28 1PC

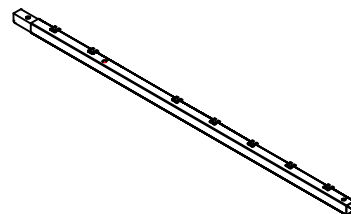


29 1PC

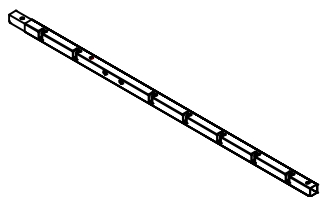


30 1PC

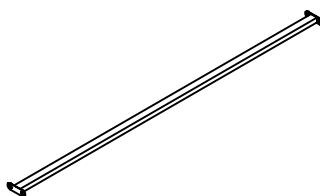

31 1PC

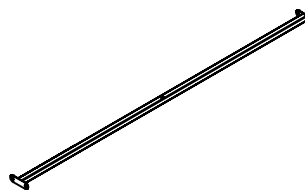


32 1PC

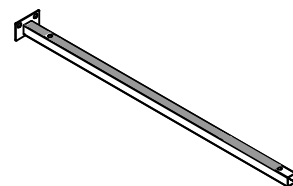


Long
33 1PC




34 2PC




35 1PC

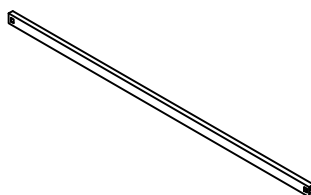

36 11PCS

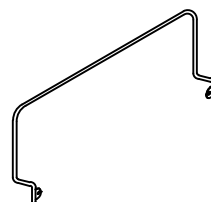

37 1PC



38 2PCS

Part List




39 2PCS




40 1PC




41 1PC




42 4PCS




43 2PCS

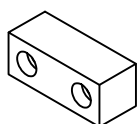

44 1PC




45 2PCS




46 4PCS



47 1PC

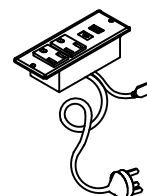


48 1PC




Remote control

49 1PC

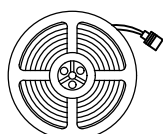


Short light strip

50 1PC

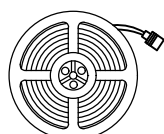


Long light strip

51 2PCS




Power cord

52 1PC

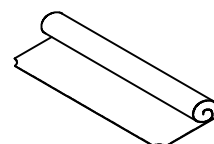

53 1PC

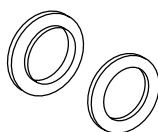


54 1PC




Strap magic tape

55 7PCS

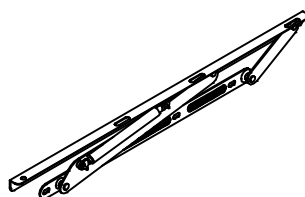


L 1PC

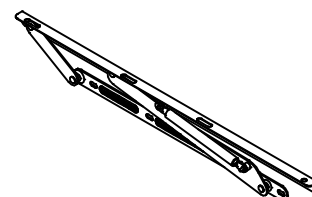


R 1PC

Board Identification

Not actual size

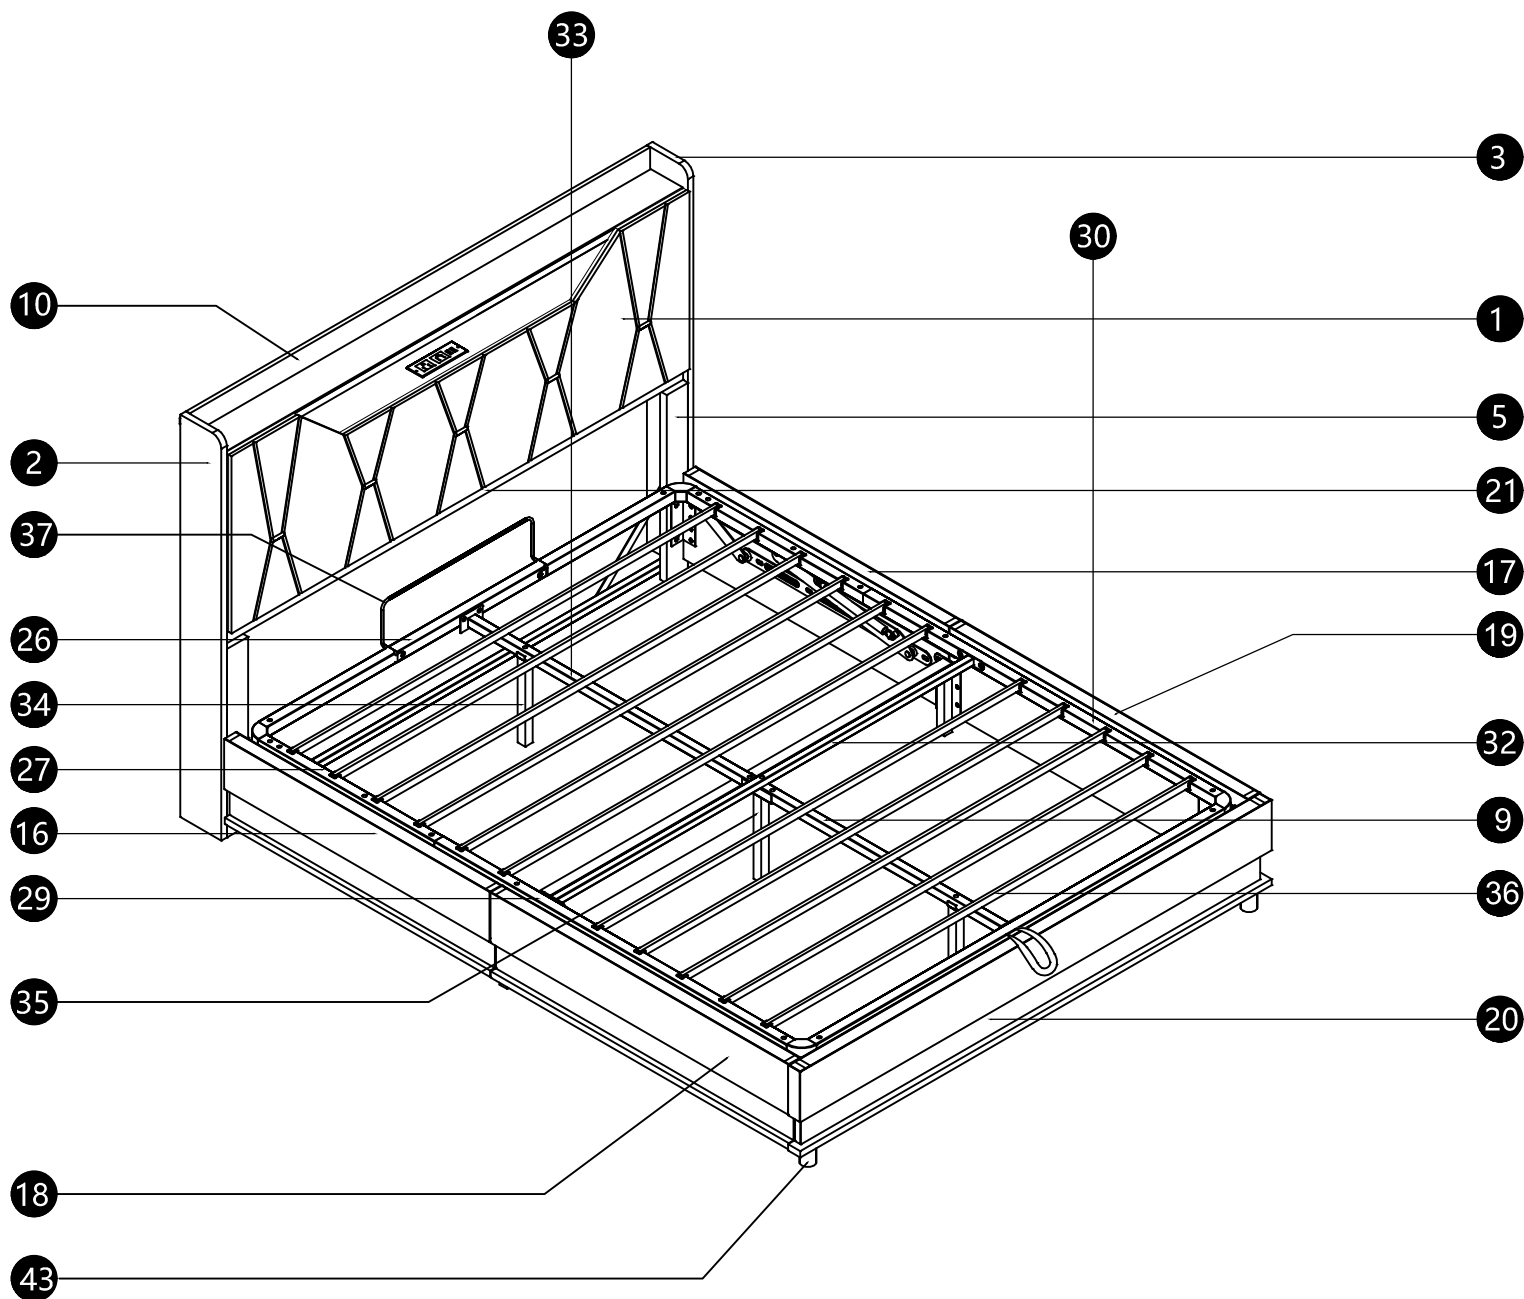

STEP1



M8*20

F

X6



M8


U

X1





X





X2

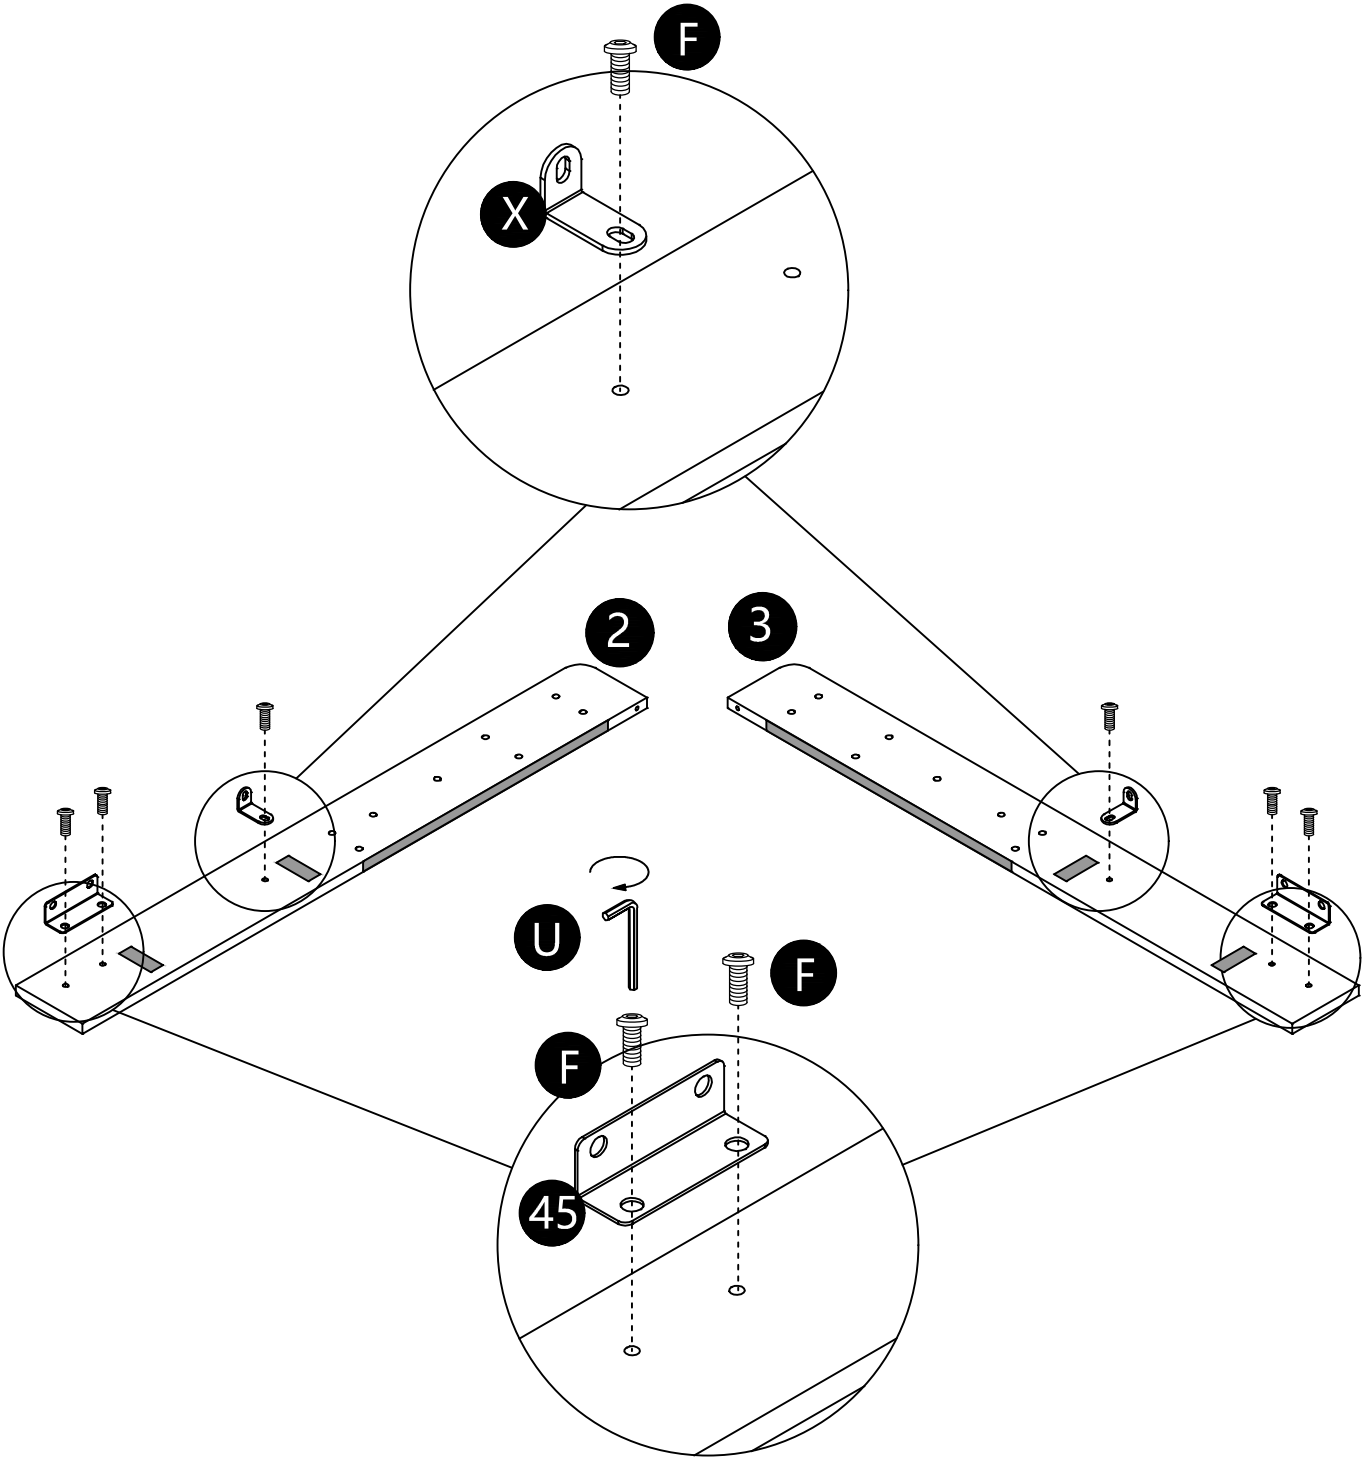



STEP2

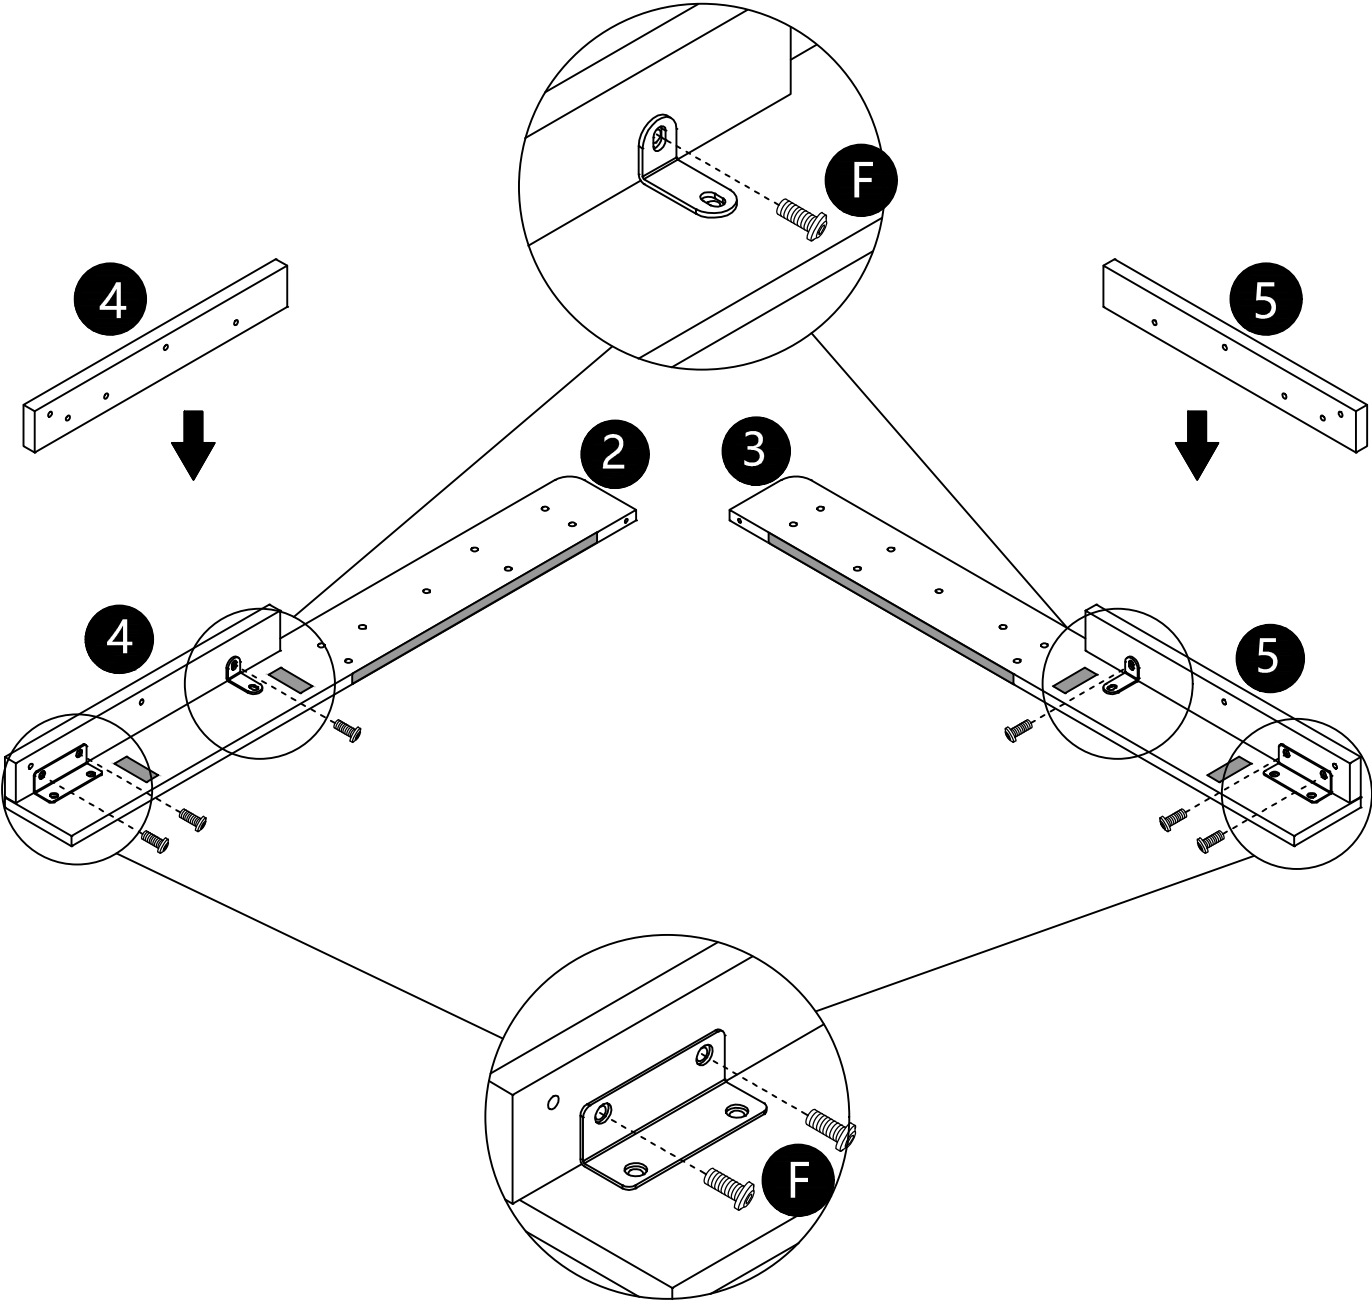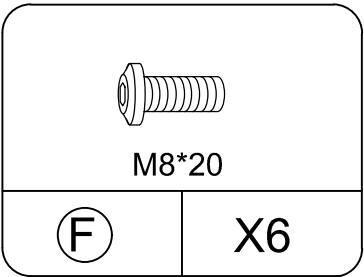


STEP3

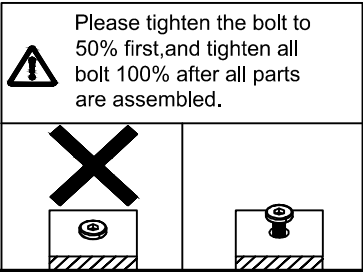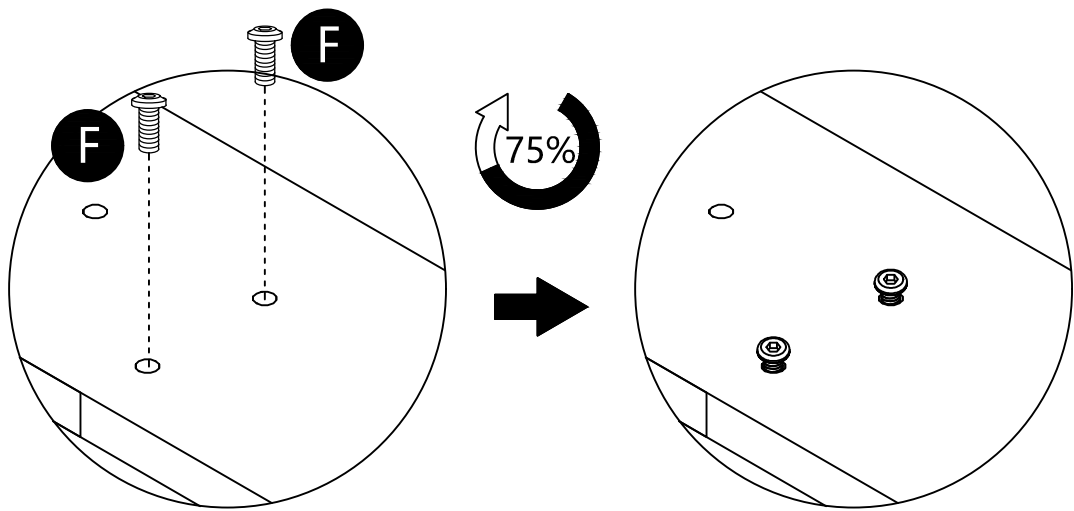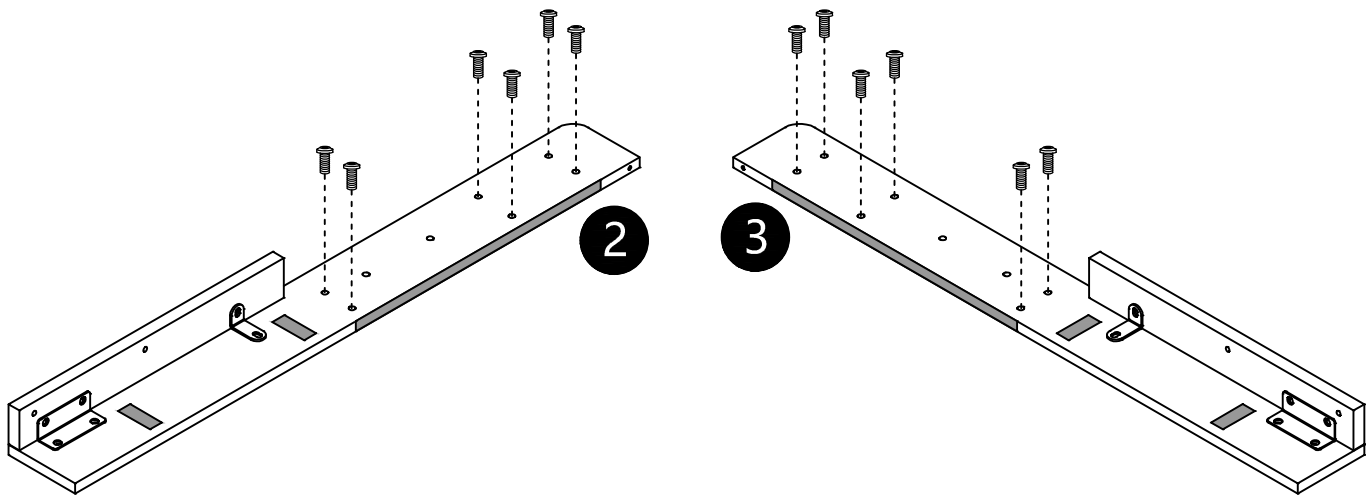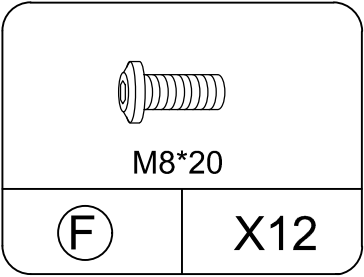


STEP4

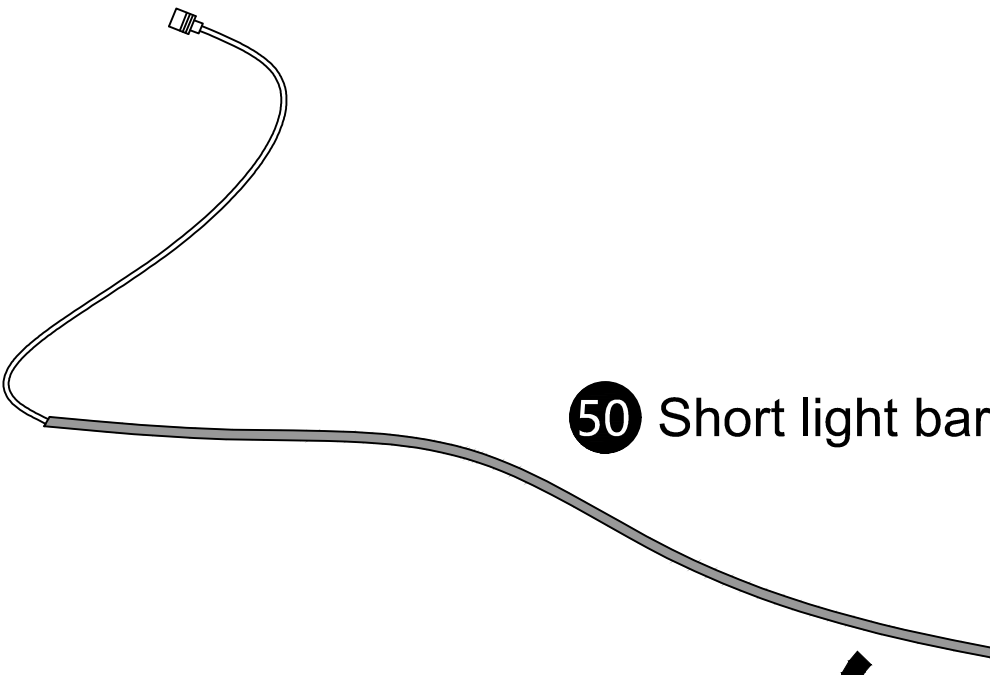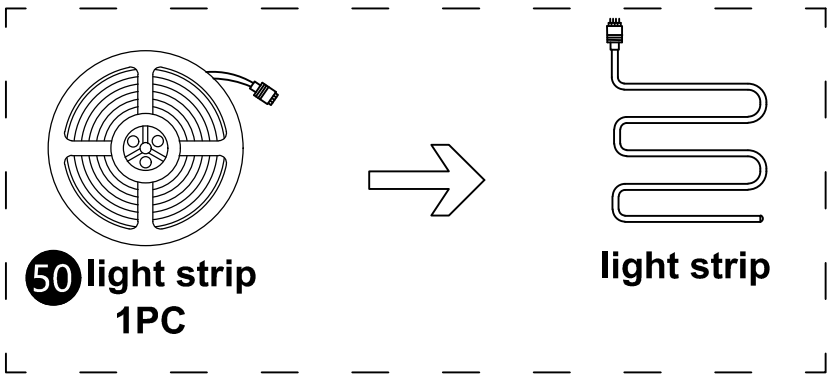


Stick the Velcro on the light strip onto the Velcro on the inside of component 11.

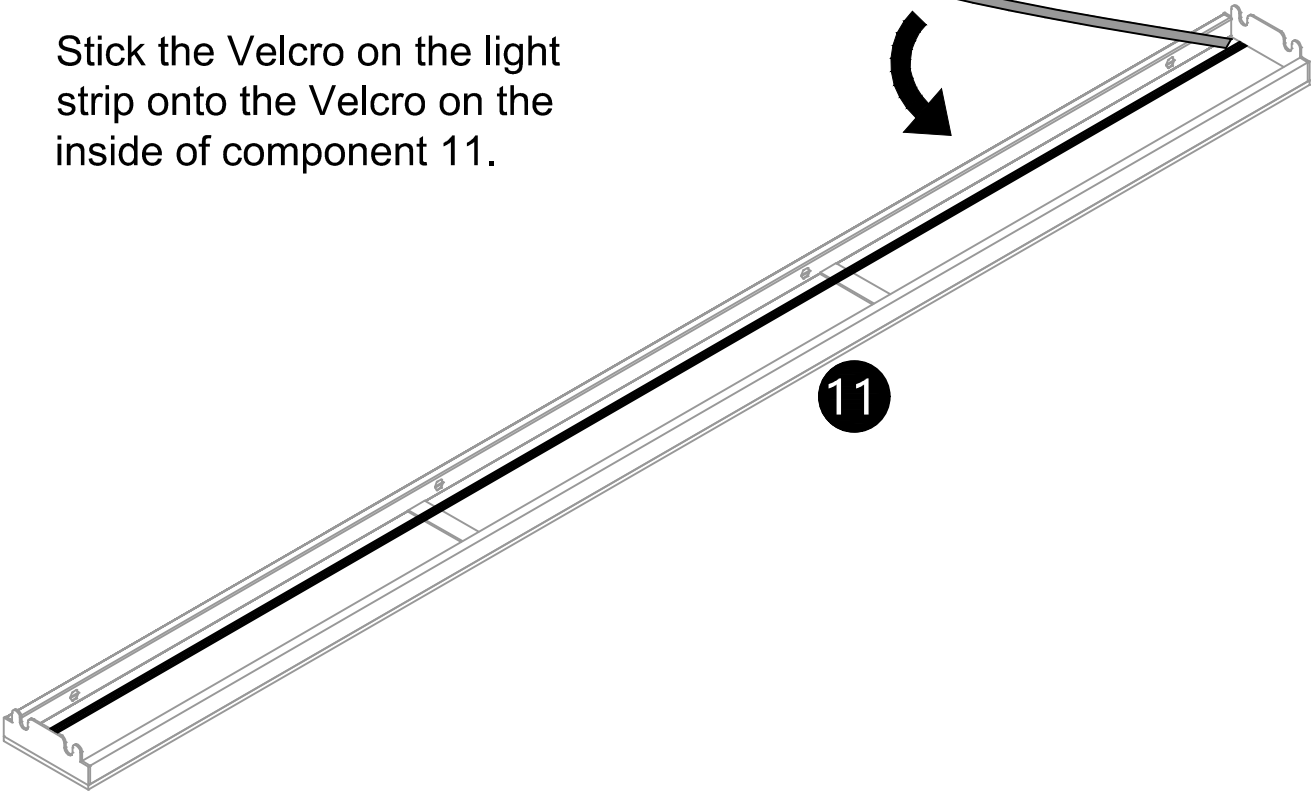


STEP5

	
M6*25	
(B)	X4

	
M6	
(T)	X1

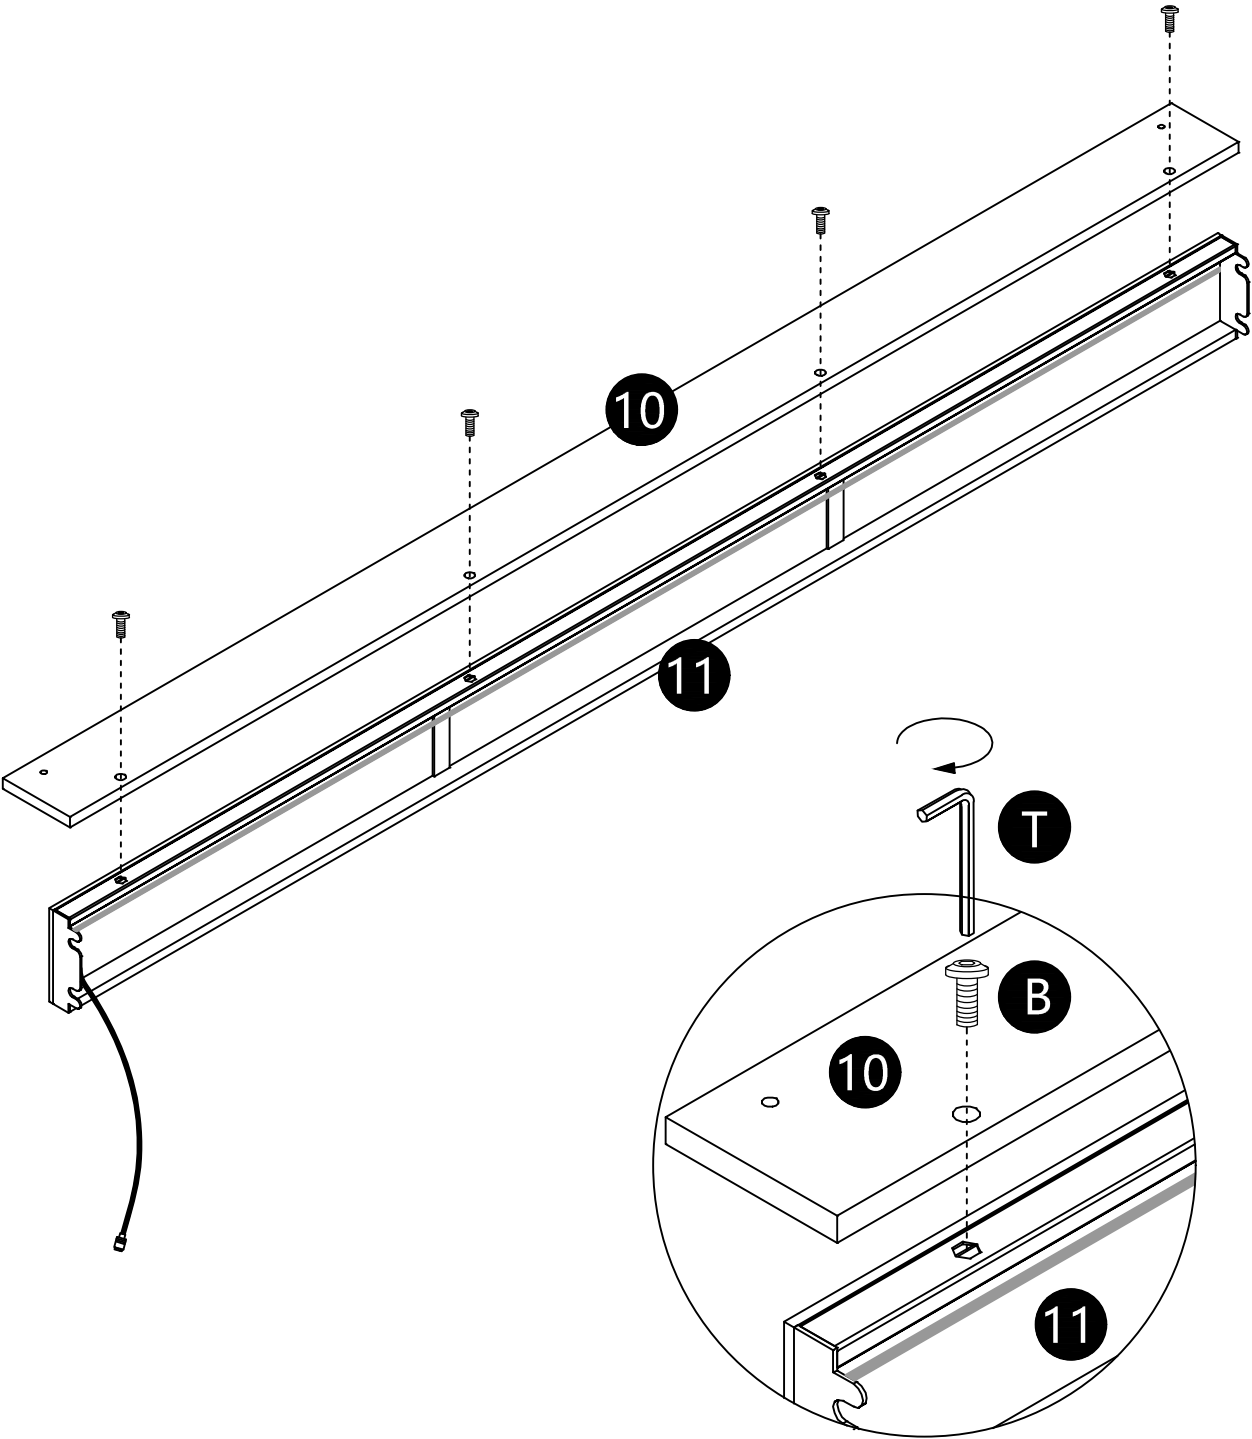


STEP6



M6*25

Ⓑ	X4
---	----

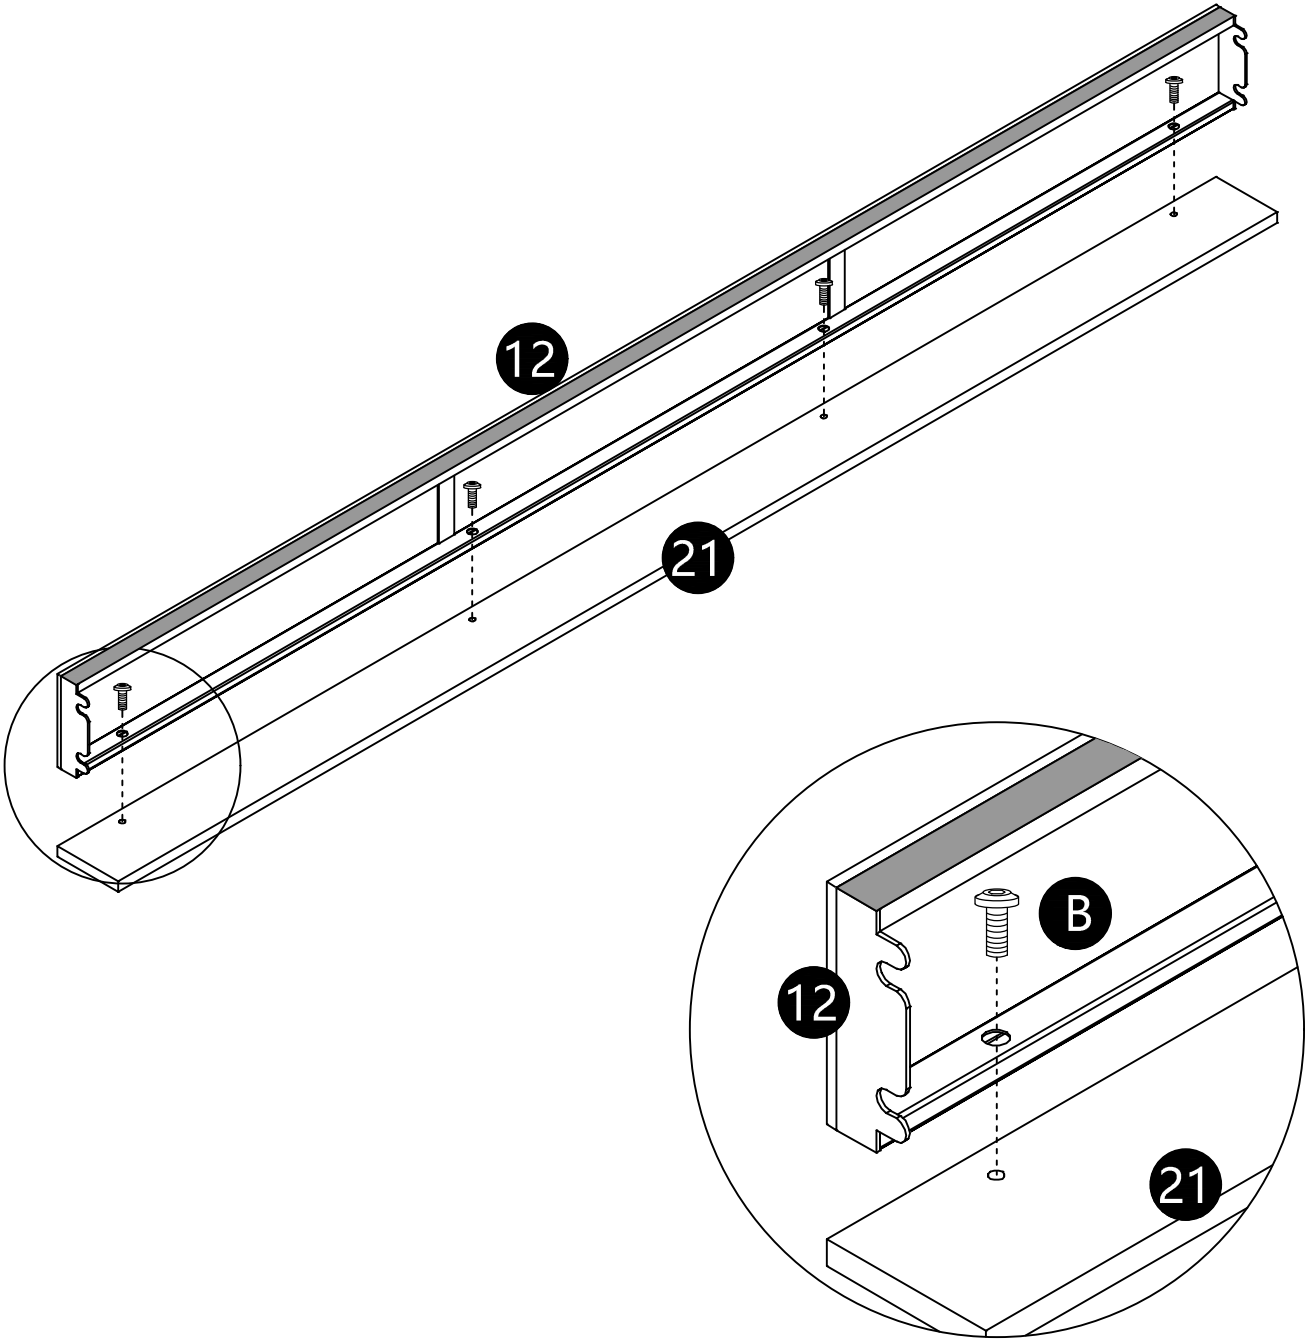


STEP7



M3*12


M

X2






V


X1

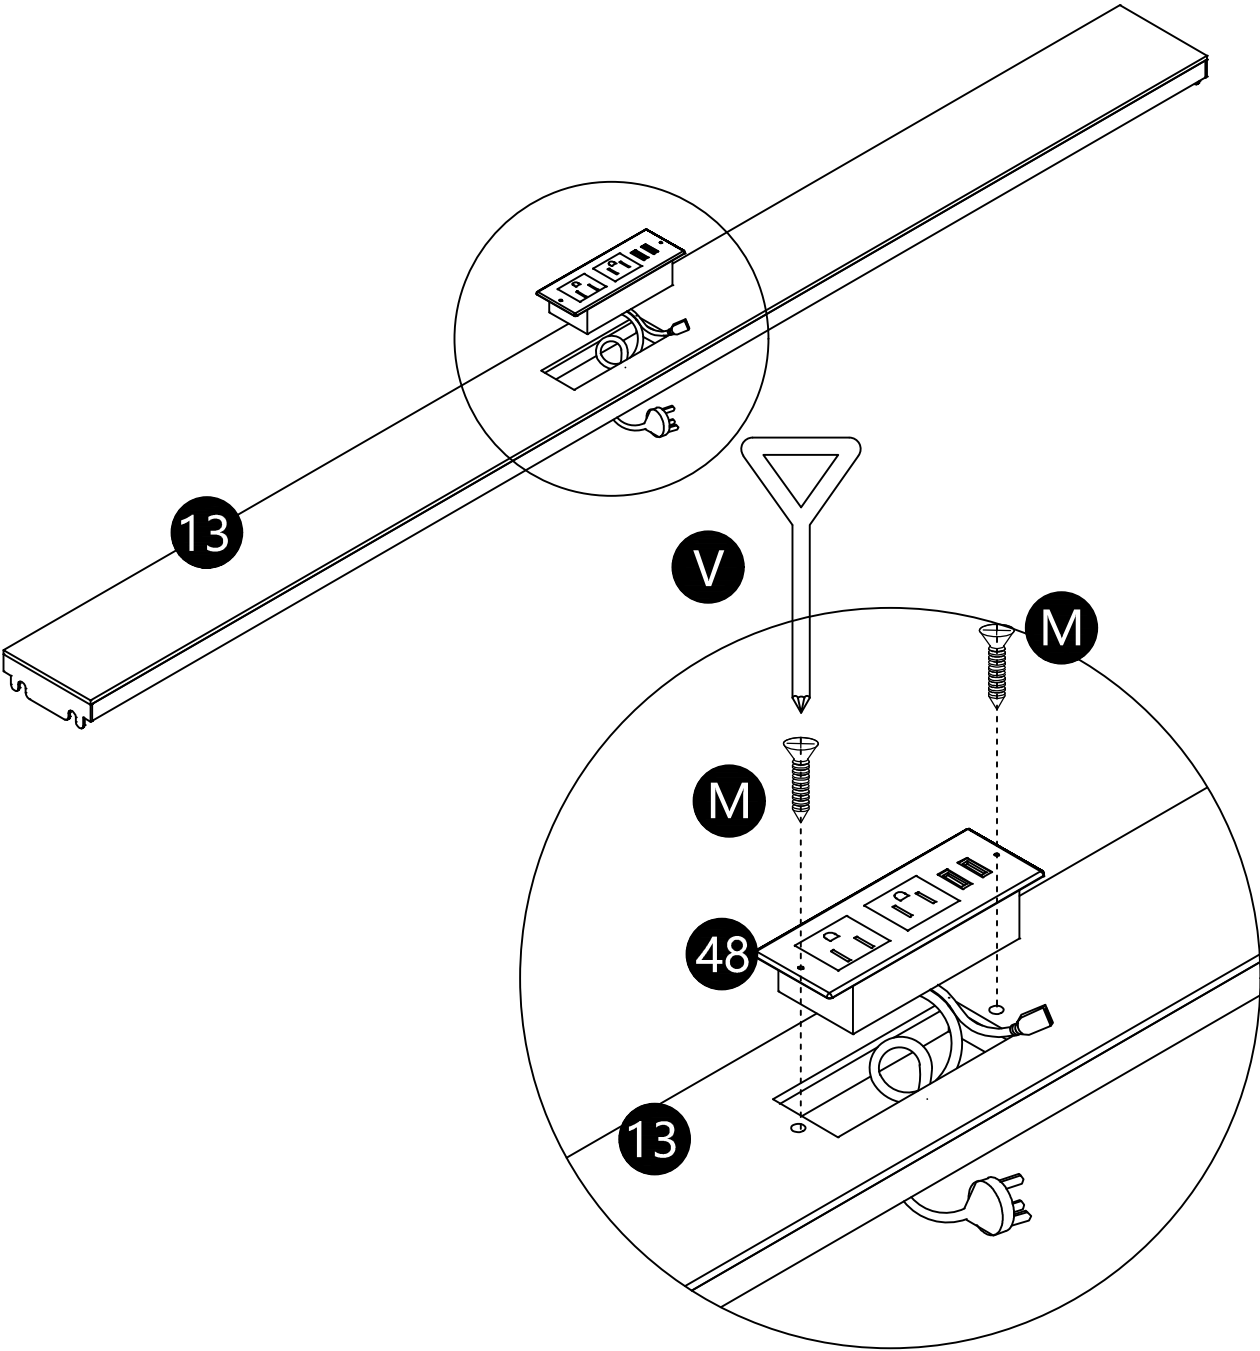


STEP8

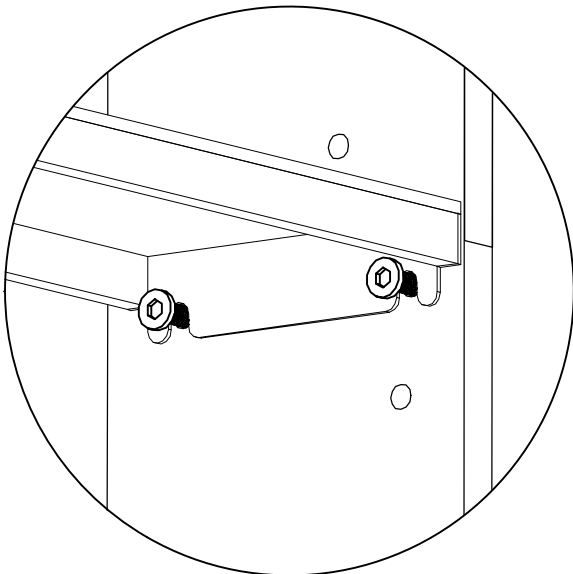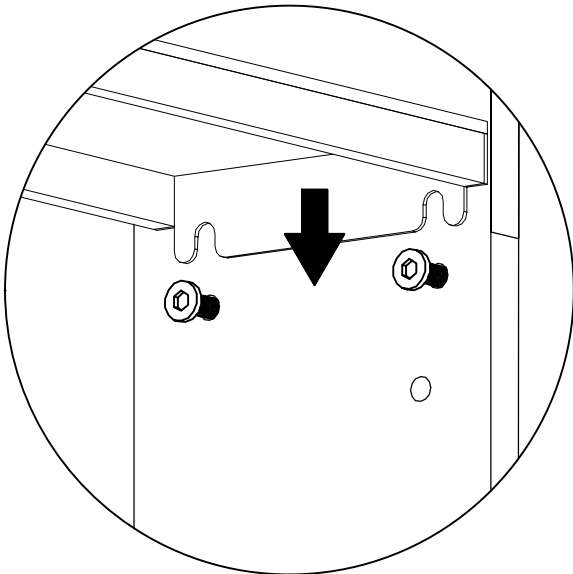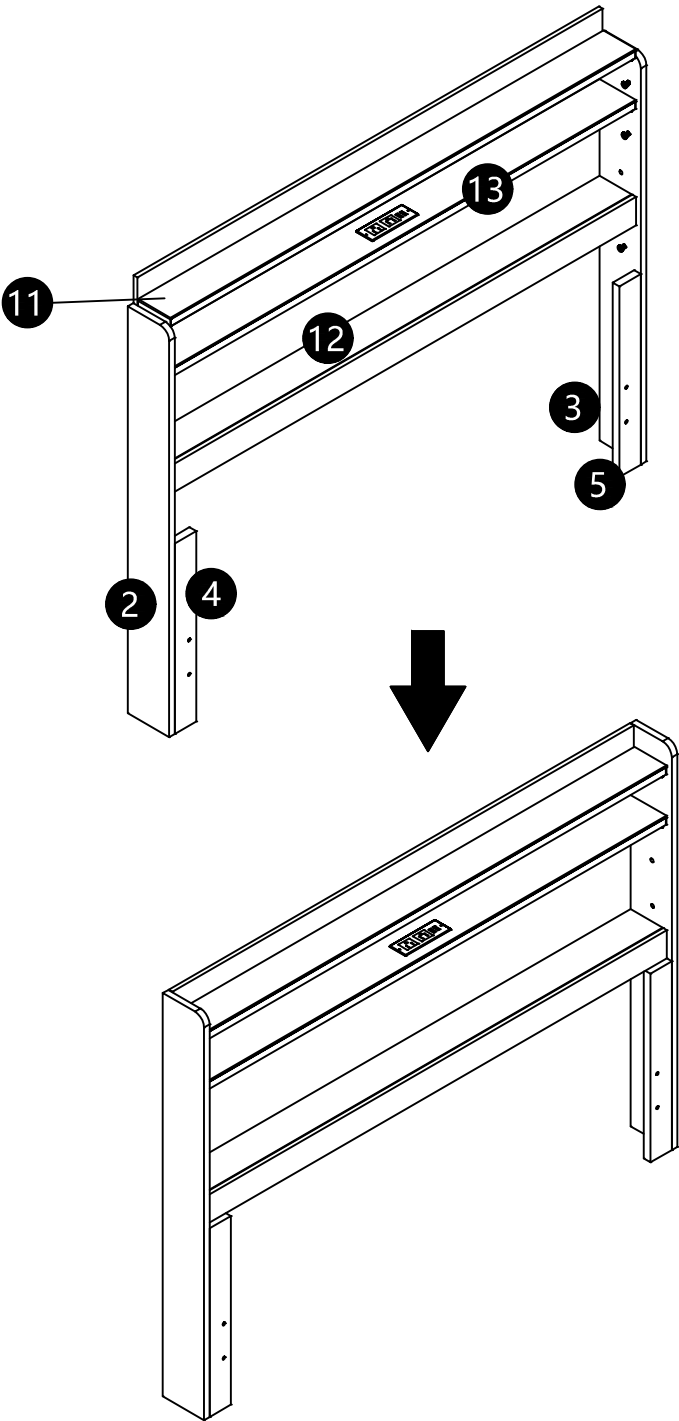






STEP9

	
M6*15	
Ⓒ	X4

	
Y	
Ⓐ	X2

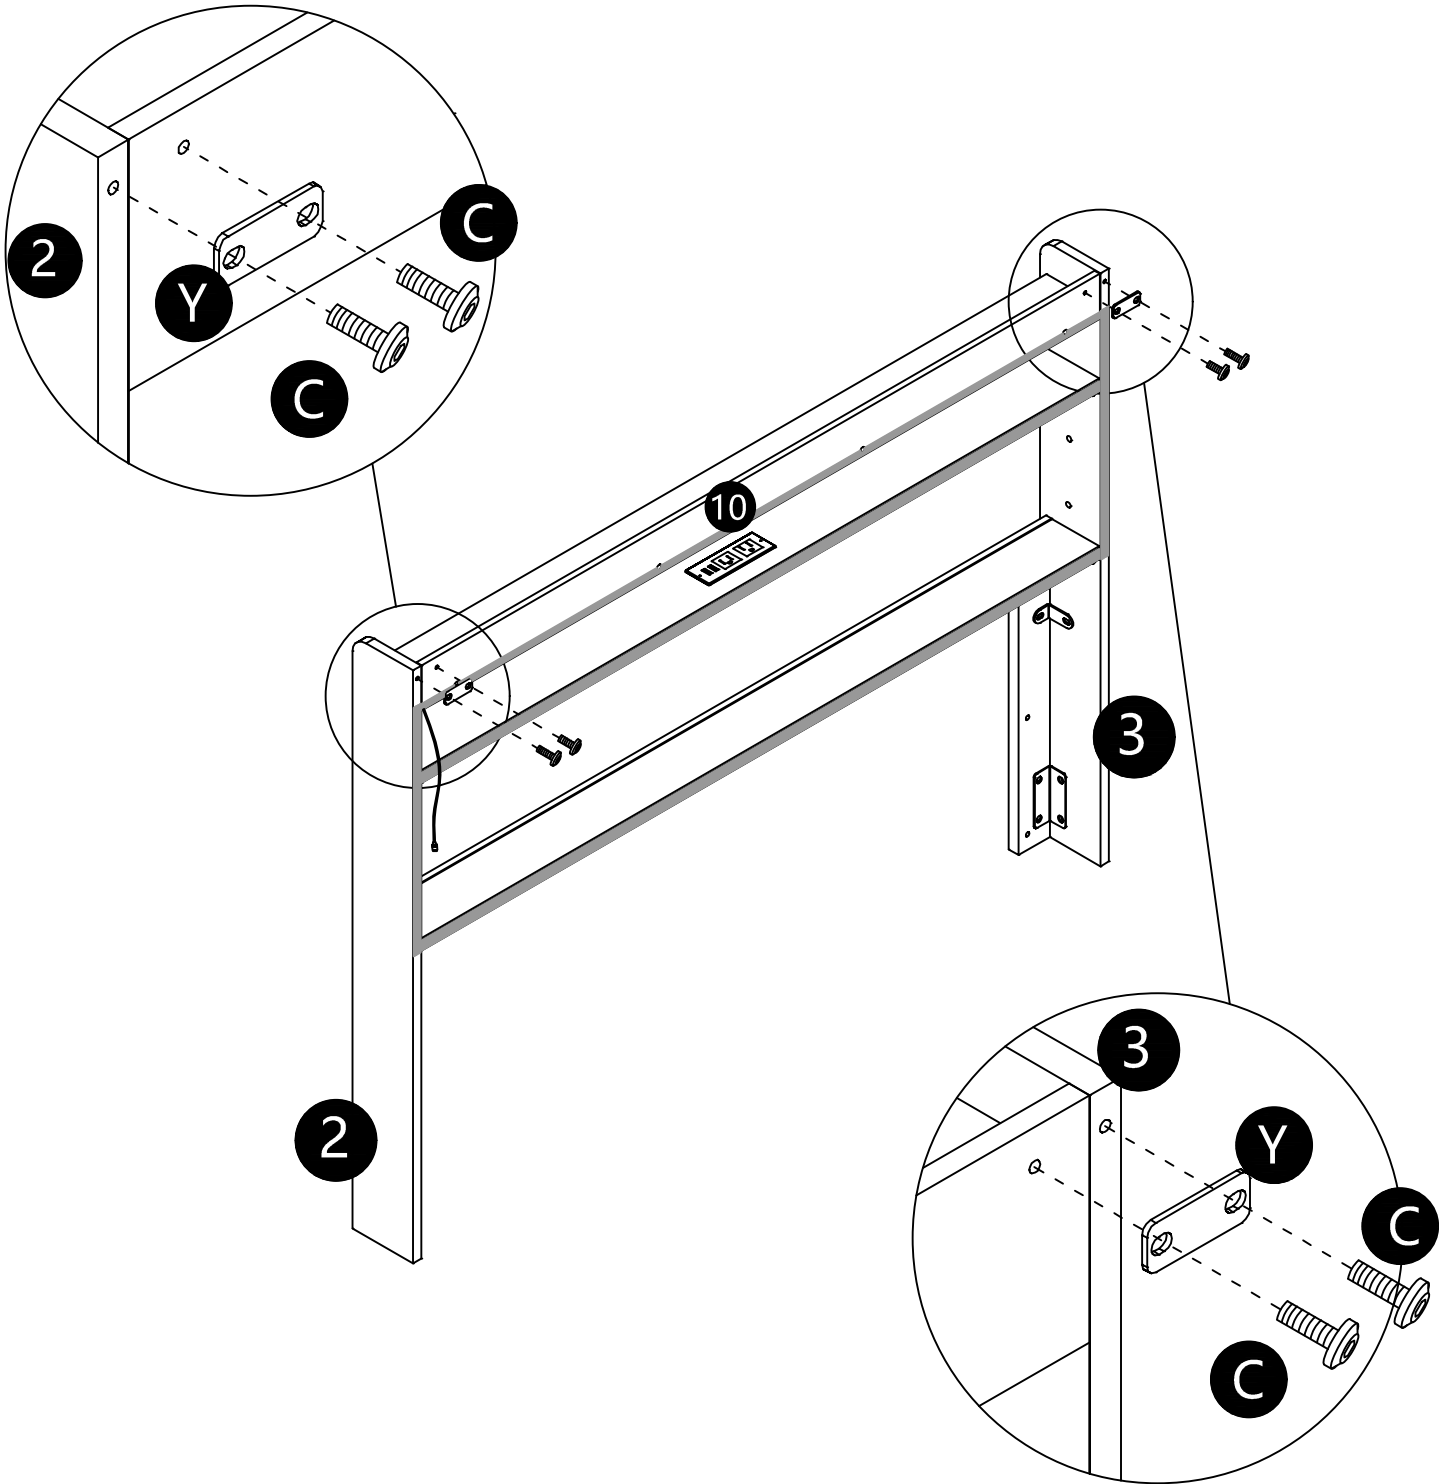


STEP10

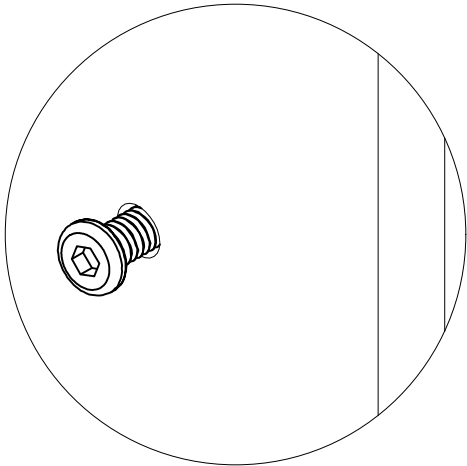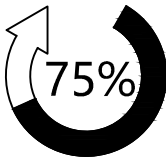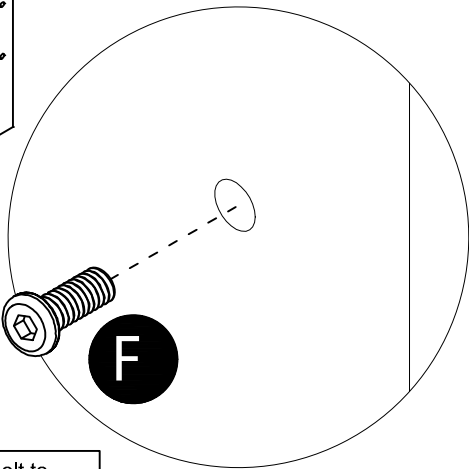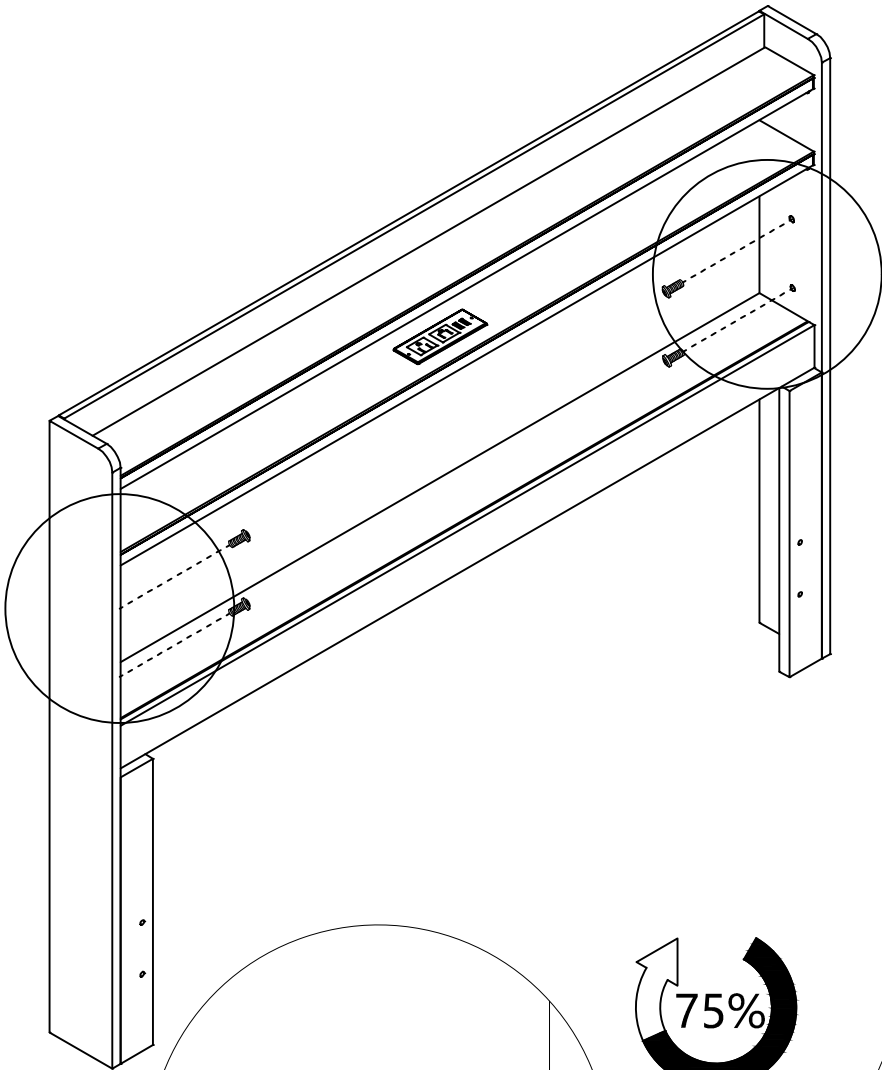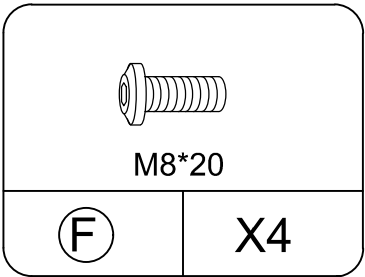

Please tighten the bolt to 50% first, and tighten all bolt 100% after all parts are assembled.




STEP11

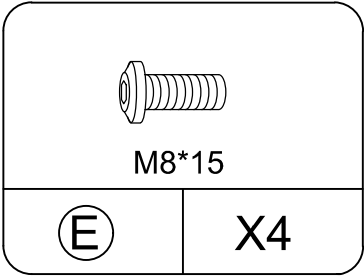


Lock first


Lock first

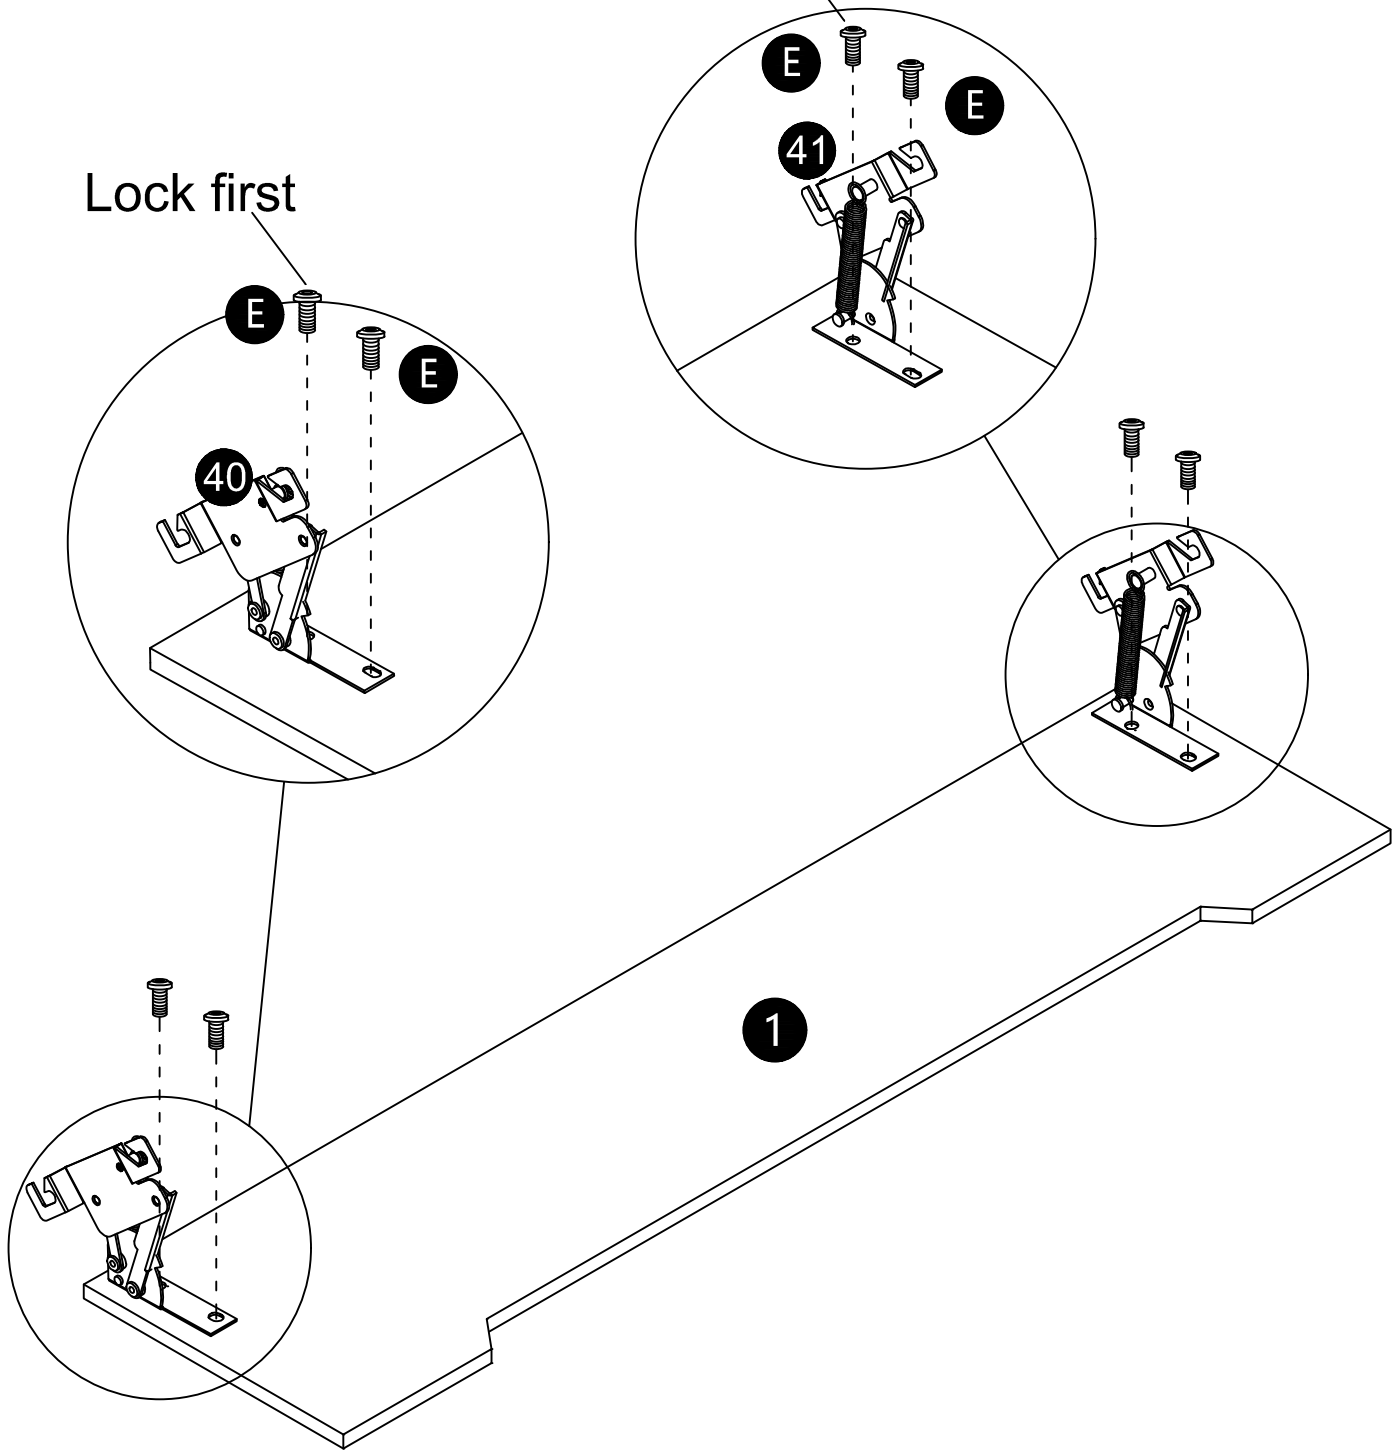

STEP12

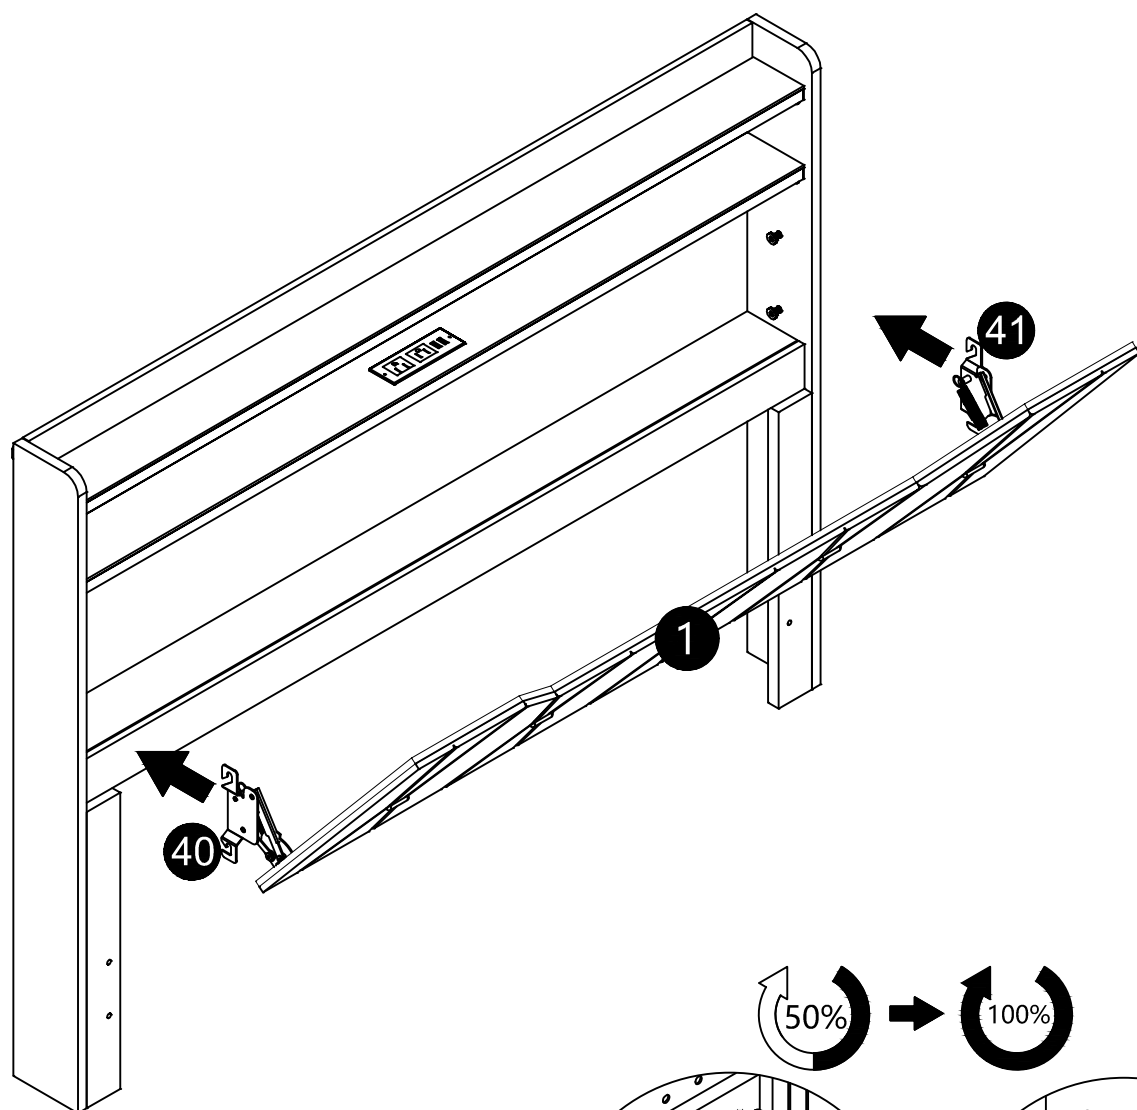


Firstly, open component 40 and component 41, hang them on the already installed screws, and tighten the screws

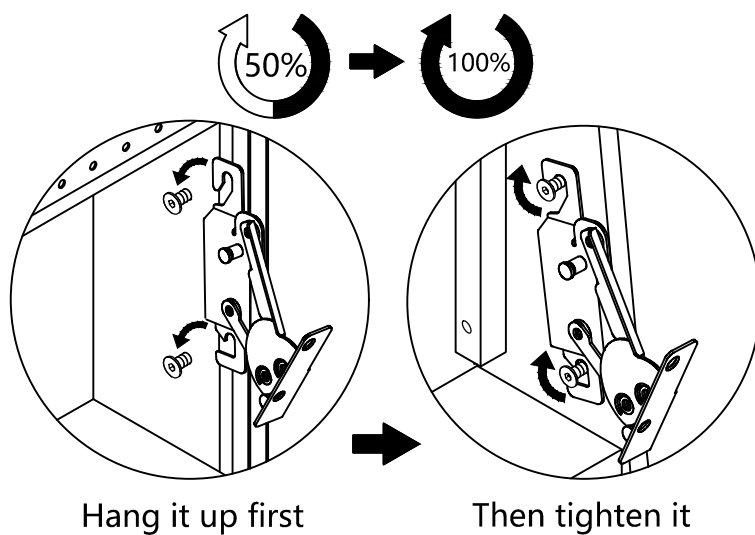

Hang it up first

Then tighten it



STEP13

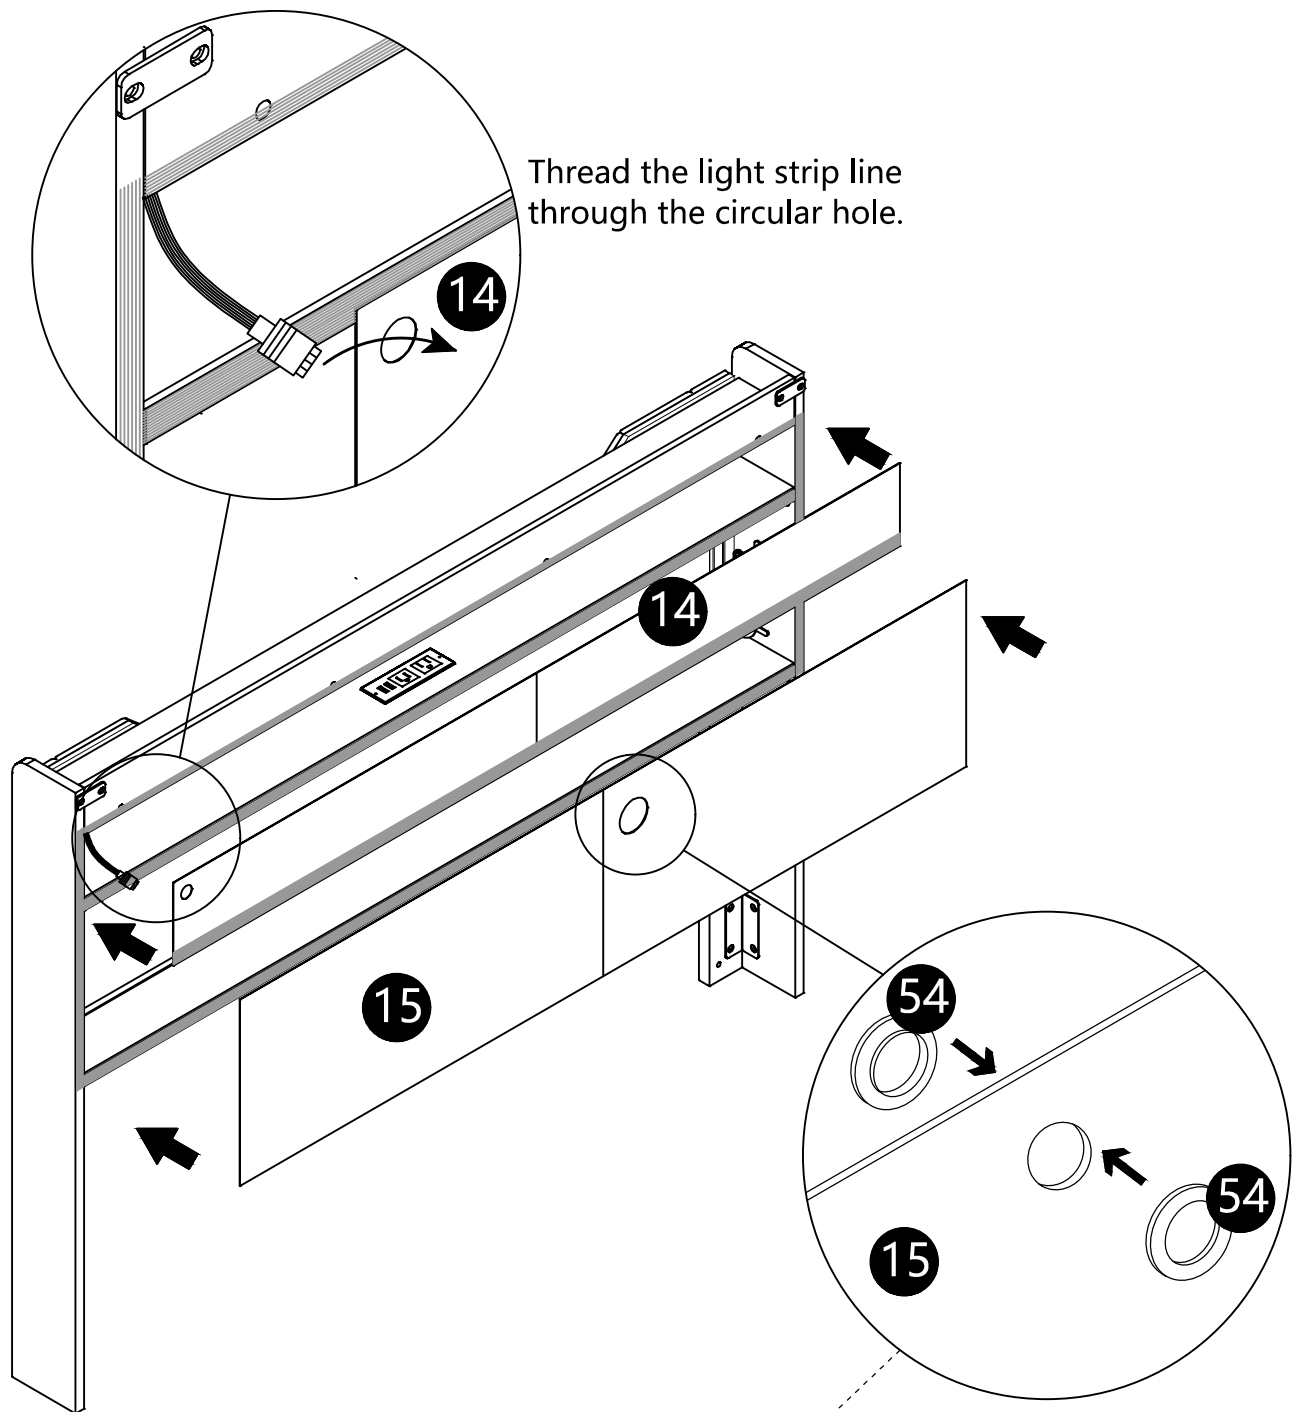



NO.1 Open accessory(54)

NO.2 Place them separately on the front and back of the (15) hole and press them tightly


STEP14

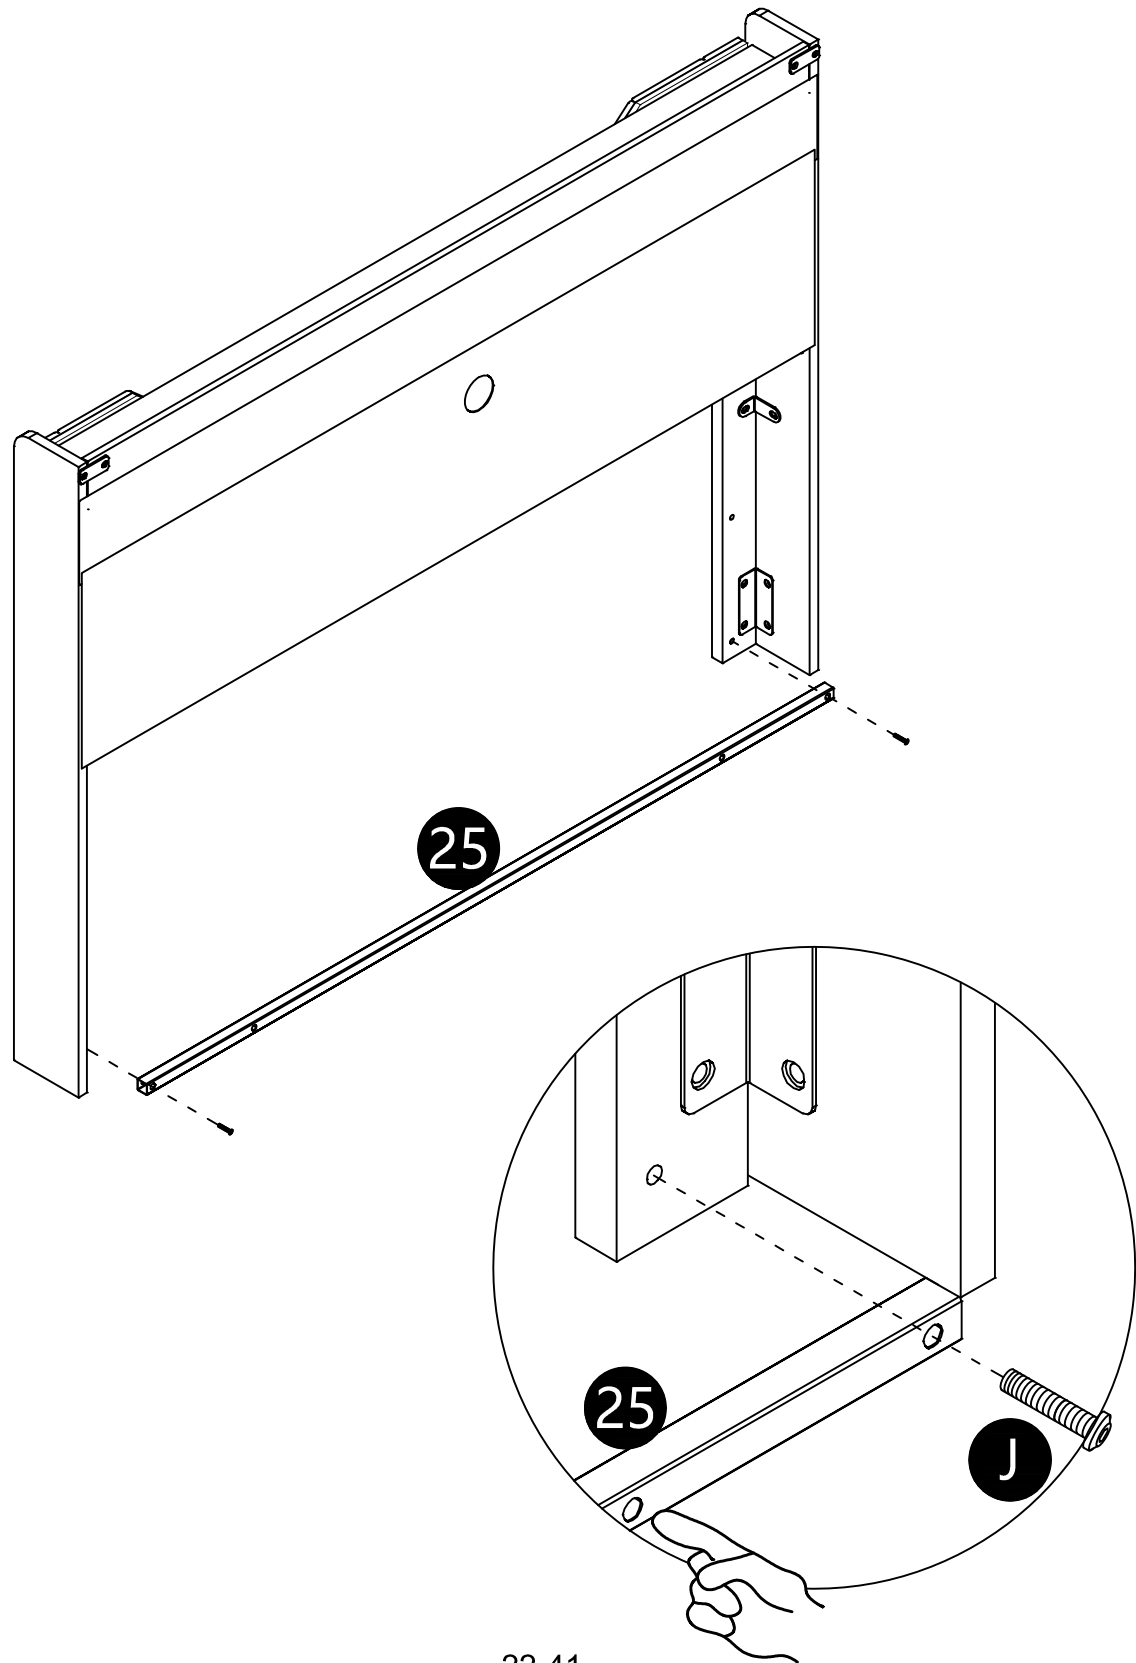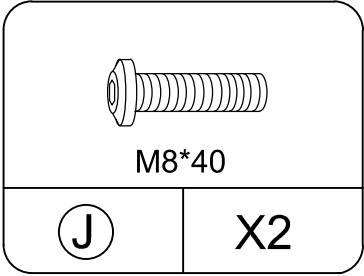

STEP15

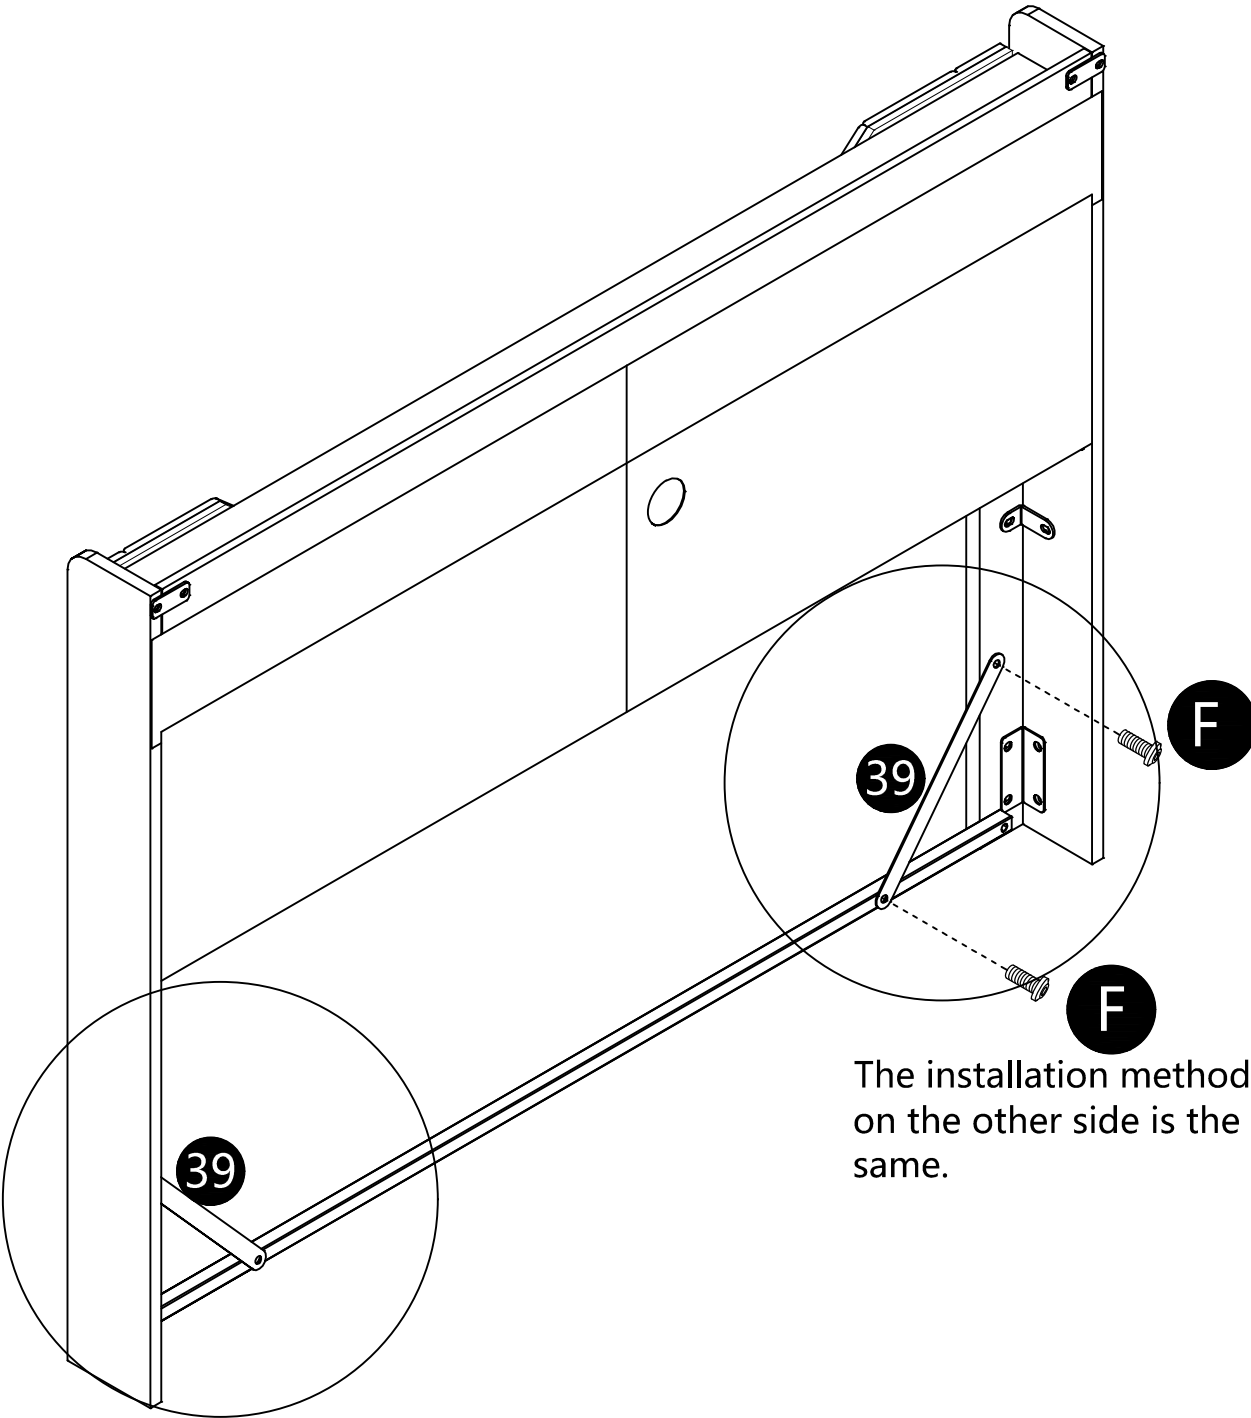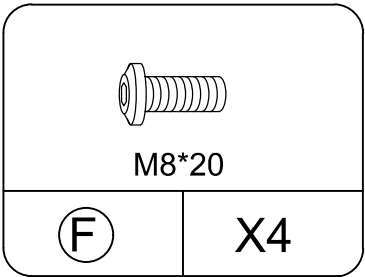


STEP16





M8*15


E	X16
---	-----

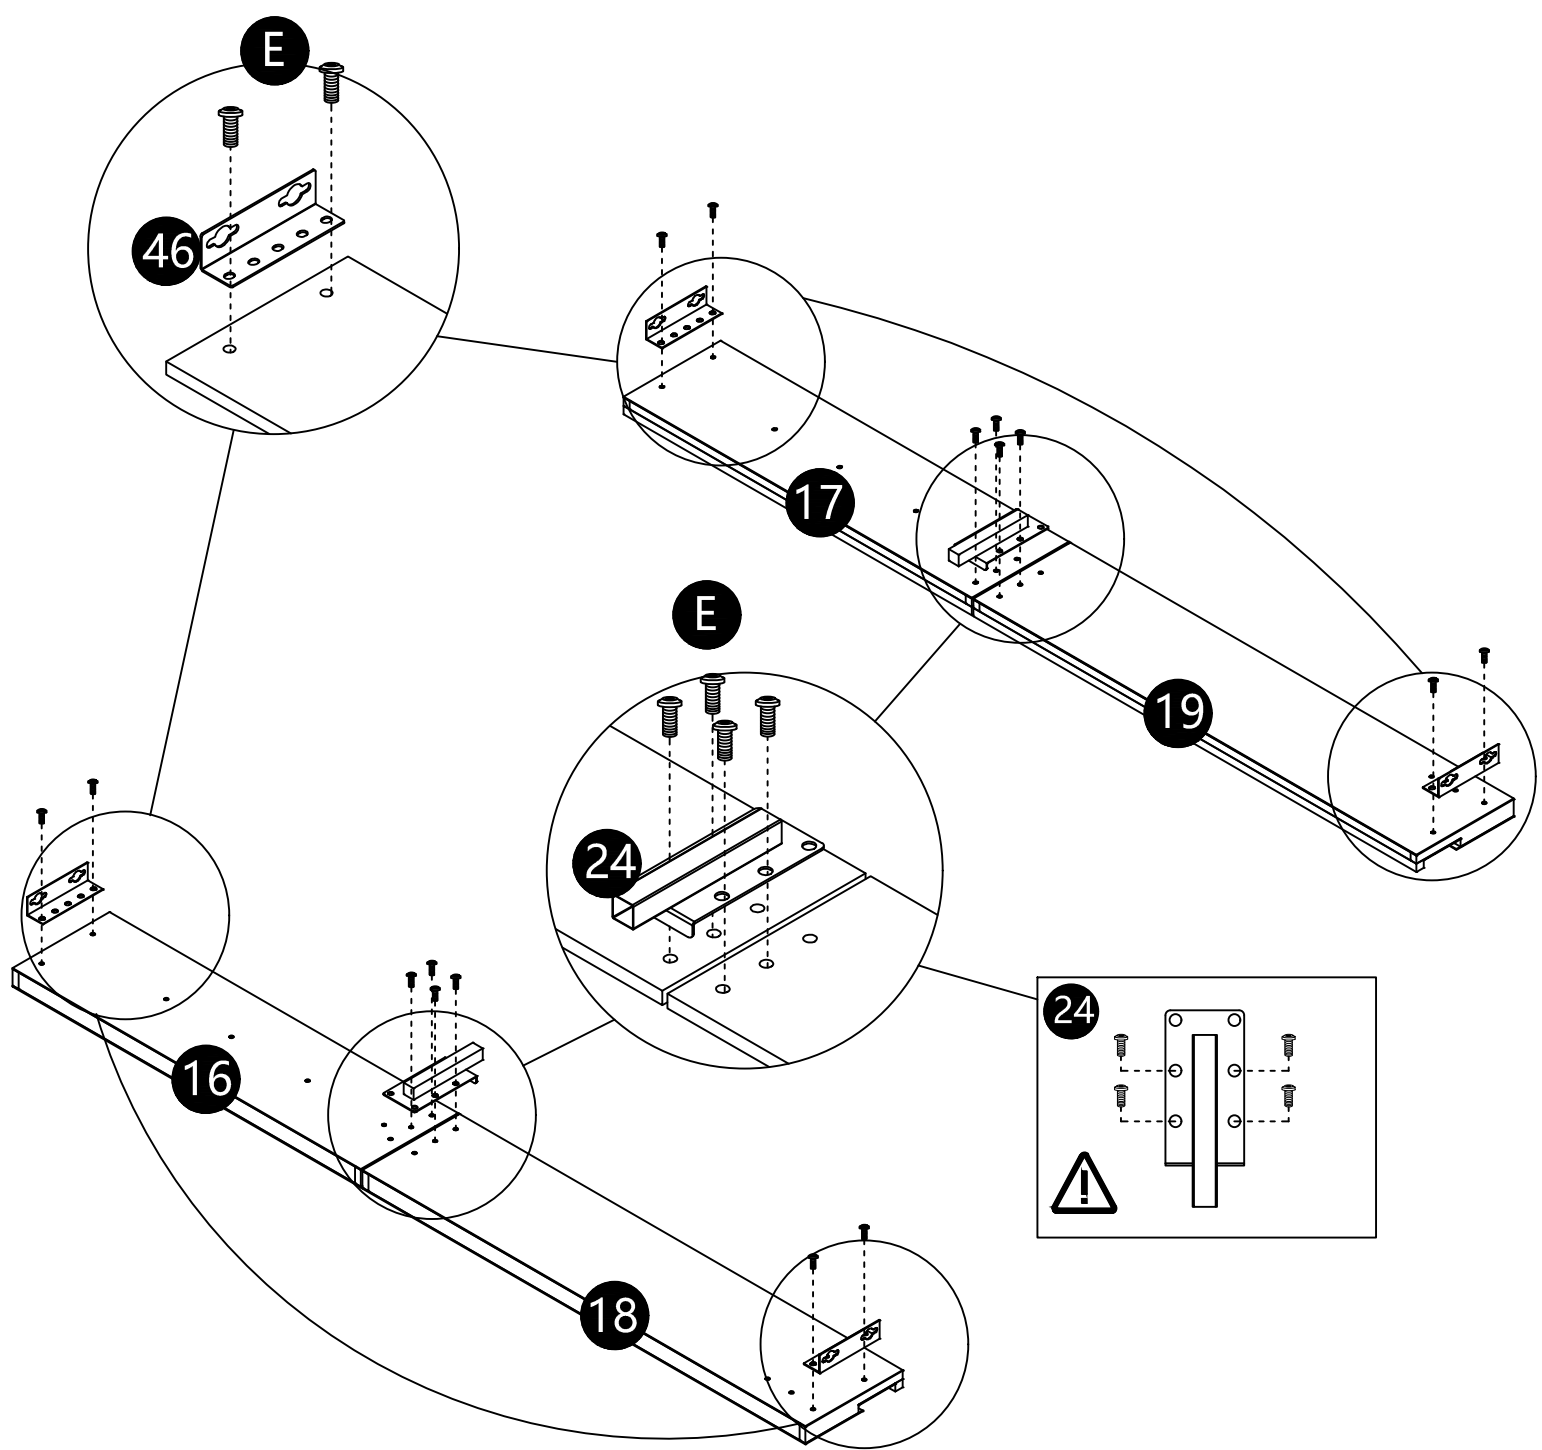

STEP17

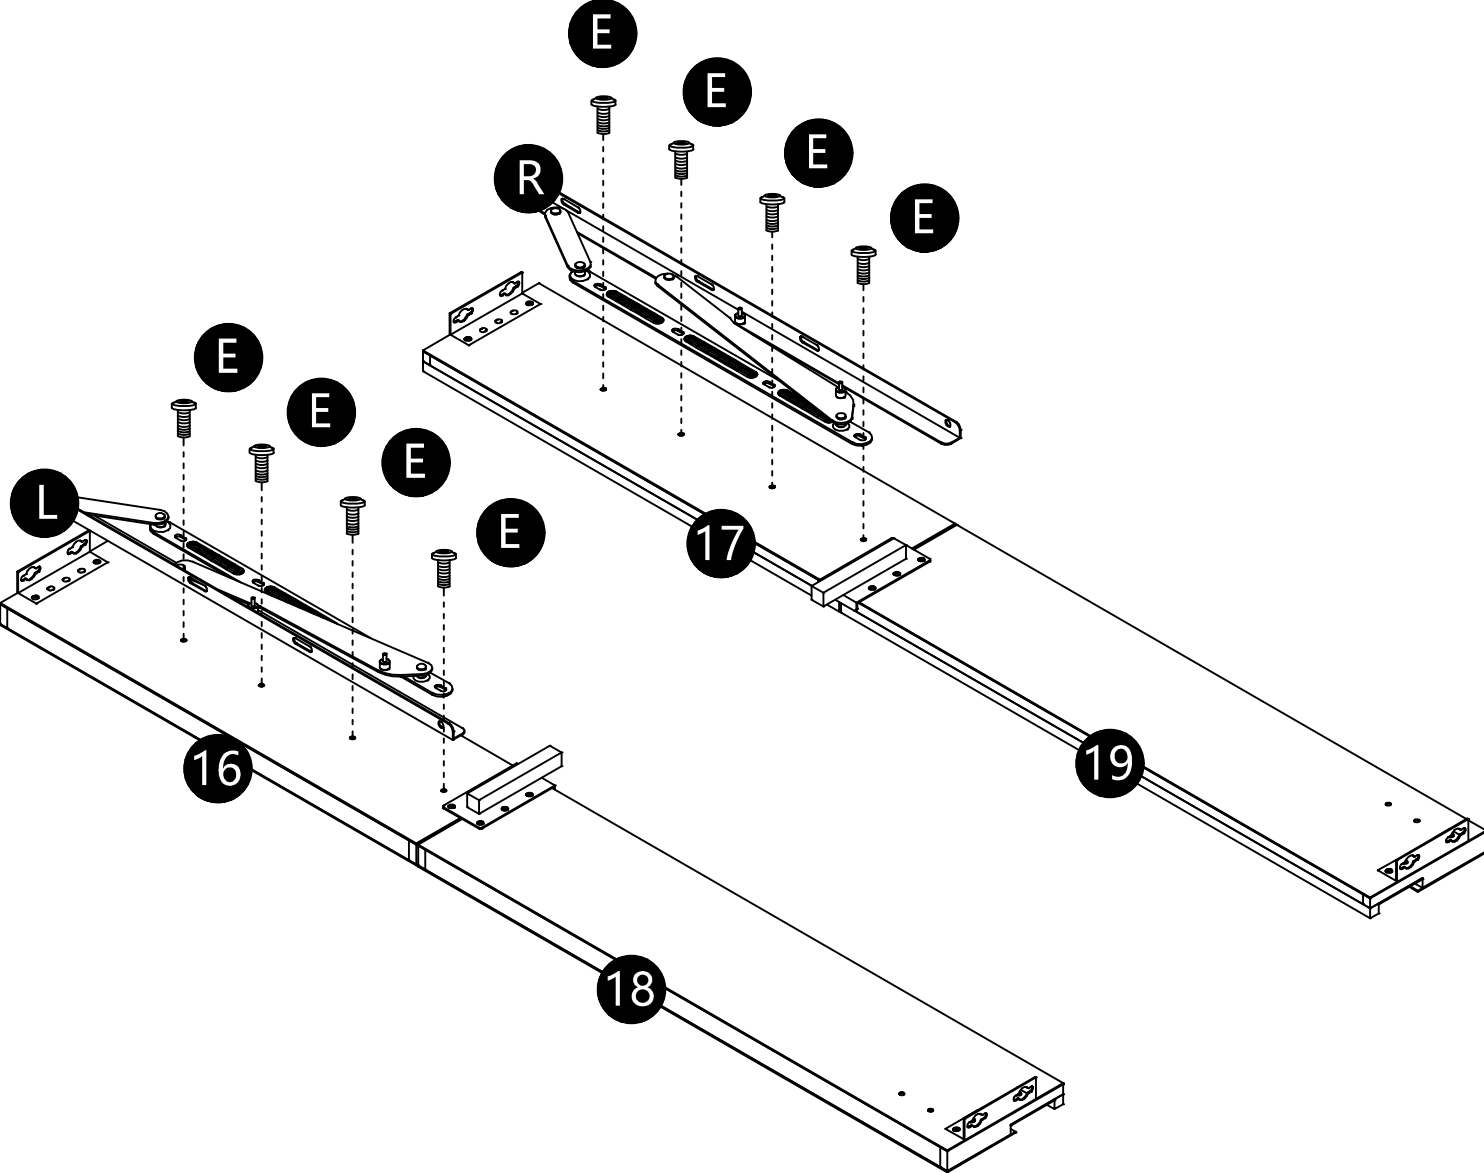
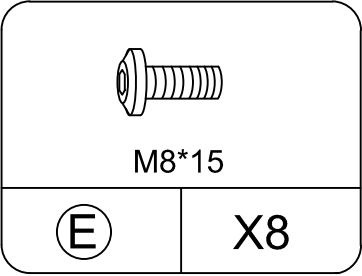


STEP18



M8*20

F	X8
---	----

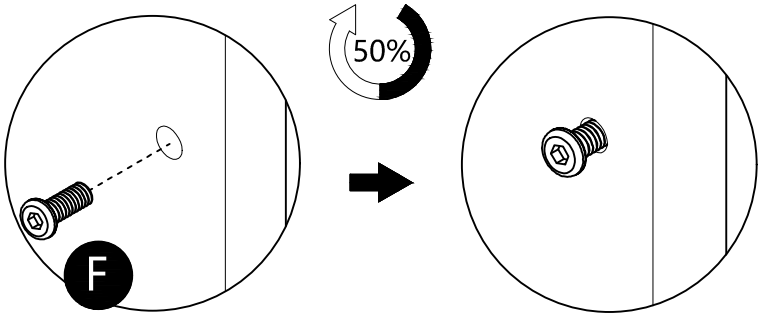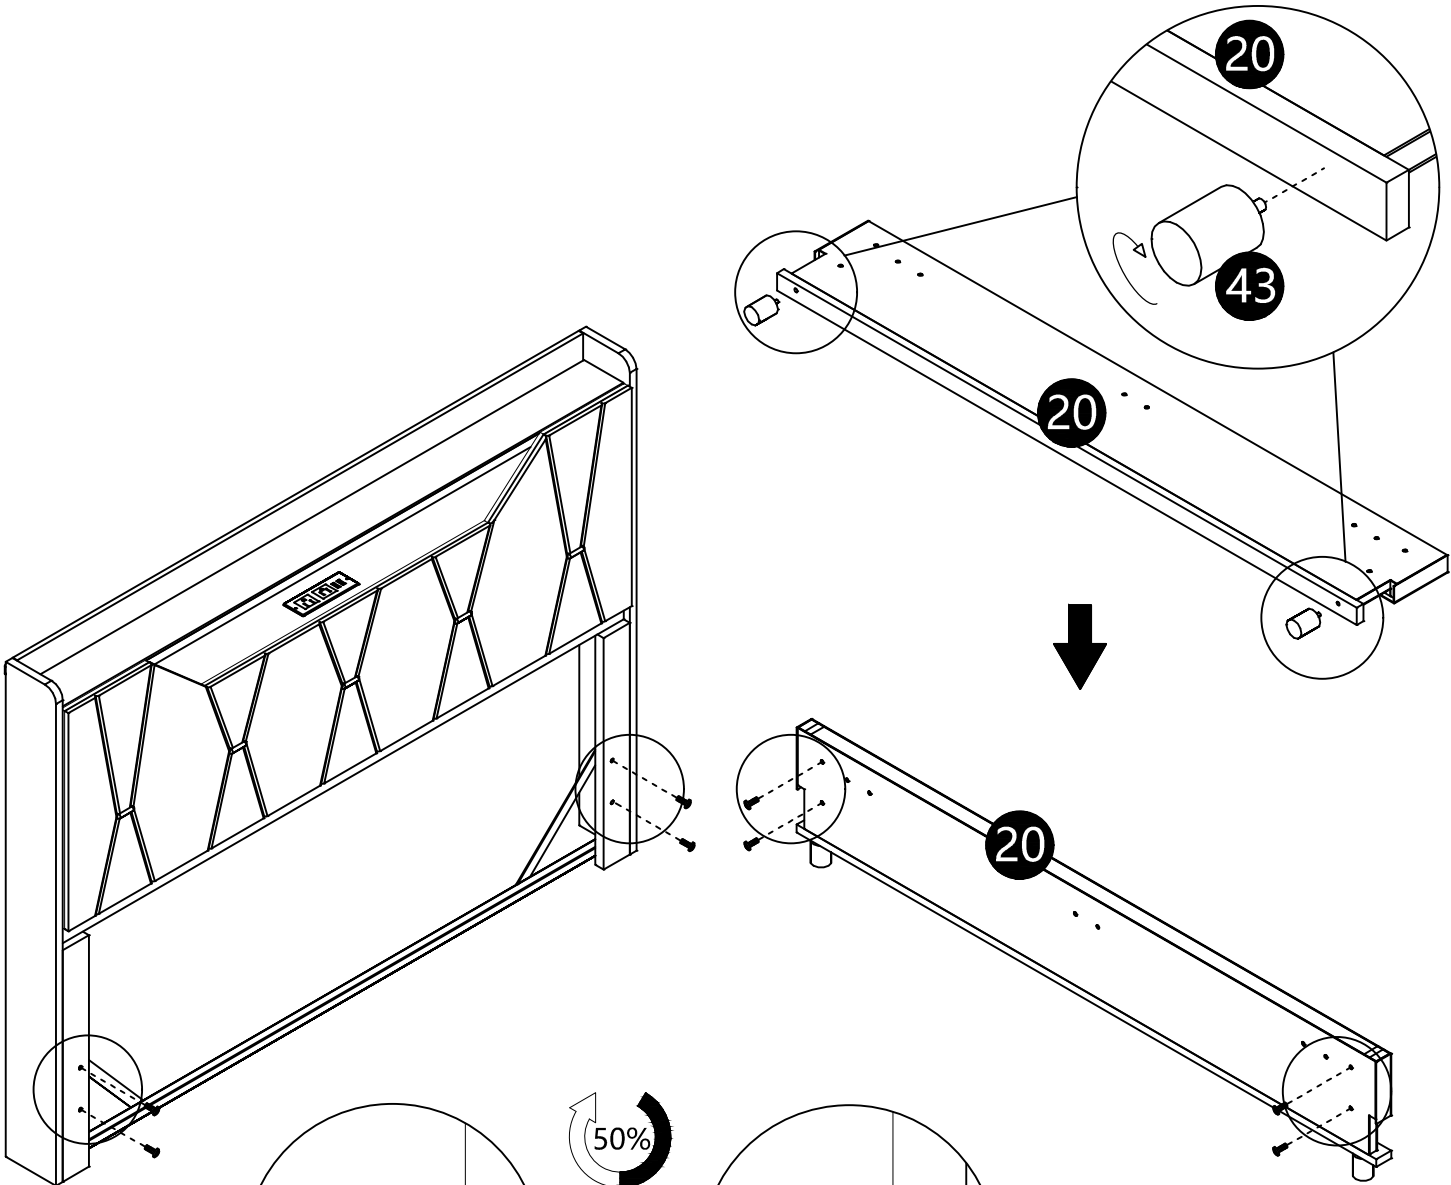





Please tighten the bolt to 50% first, and tighten all bolt 100% after all parts are assembled.

	
---	---


STEP19

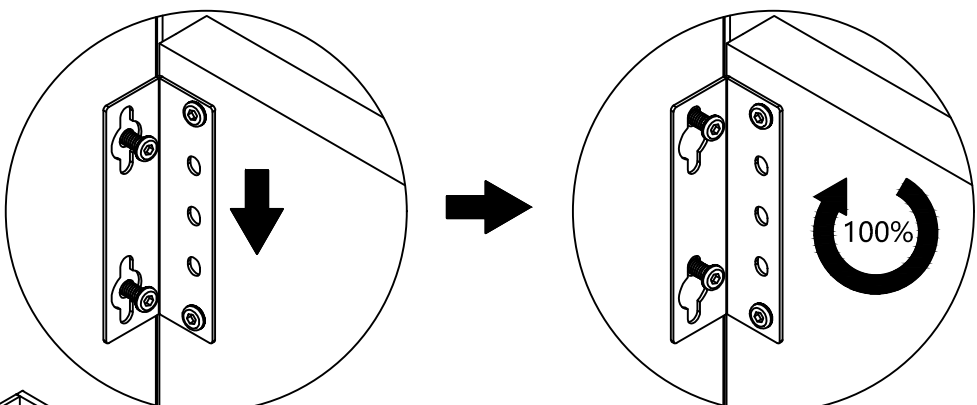

Tighten the screws

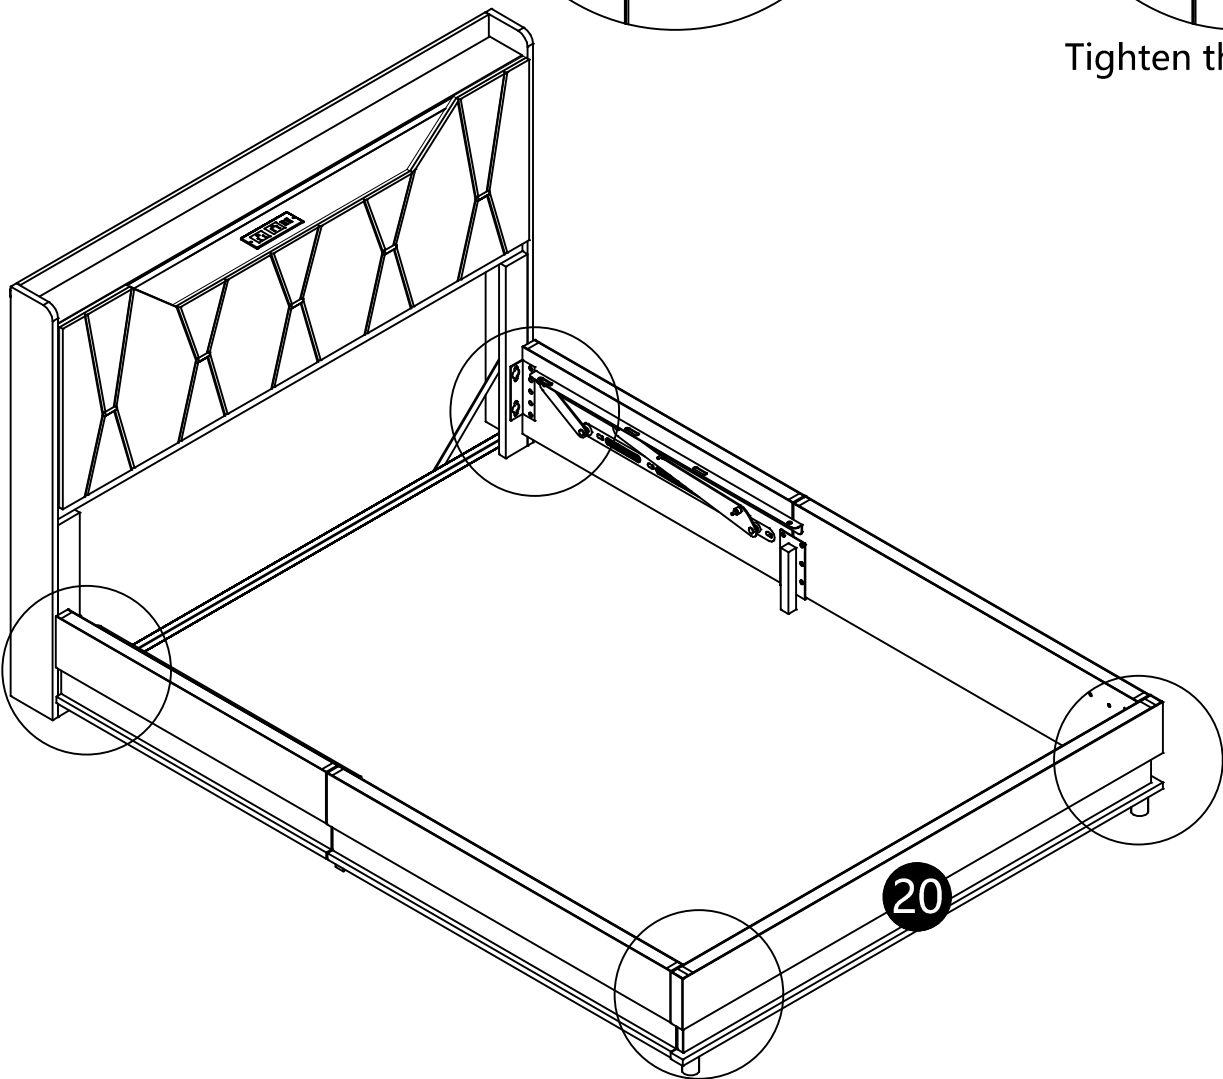


STEP20




M8*20

F	X4
---	----

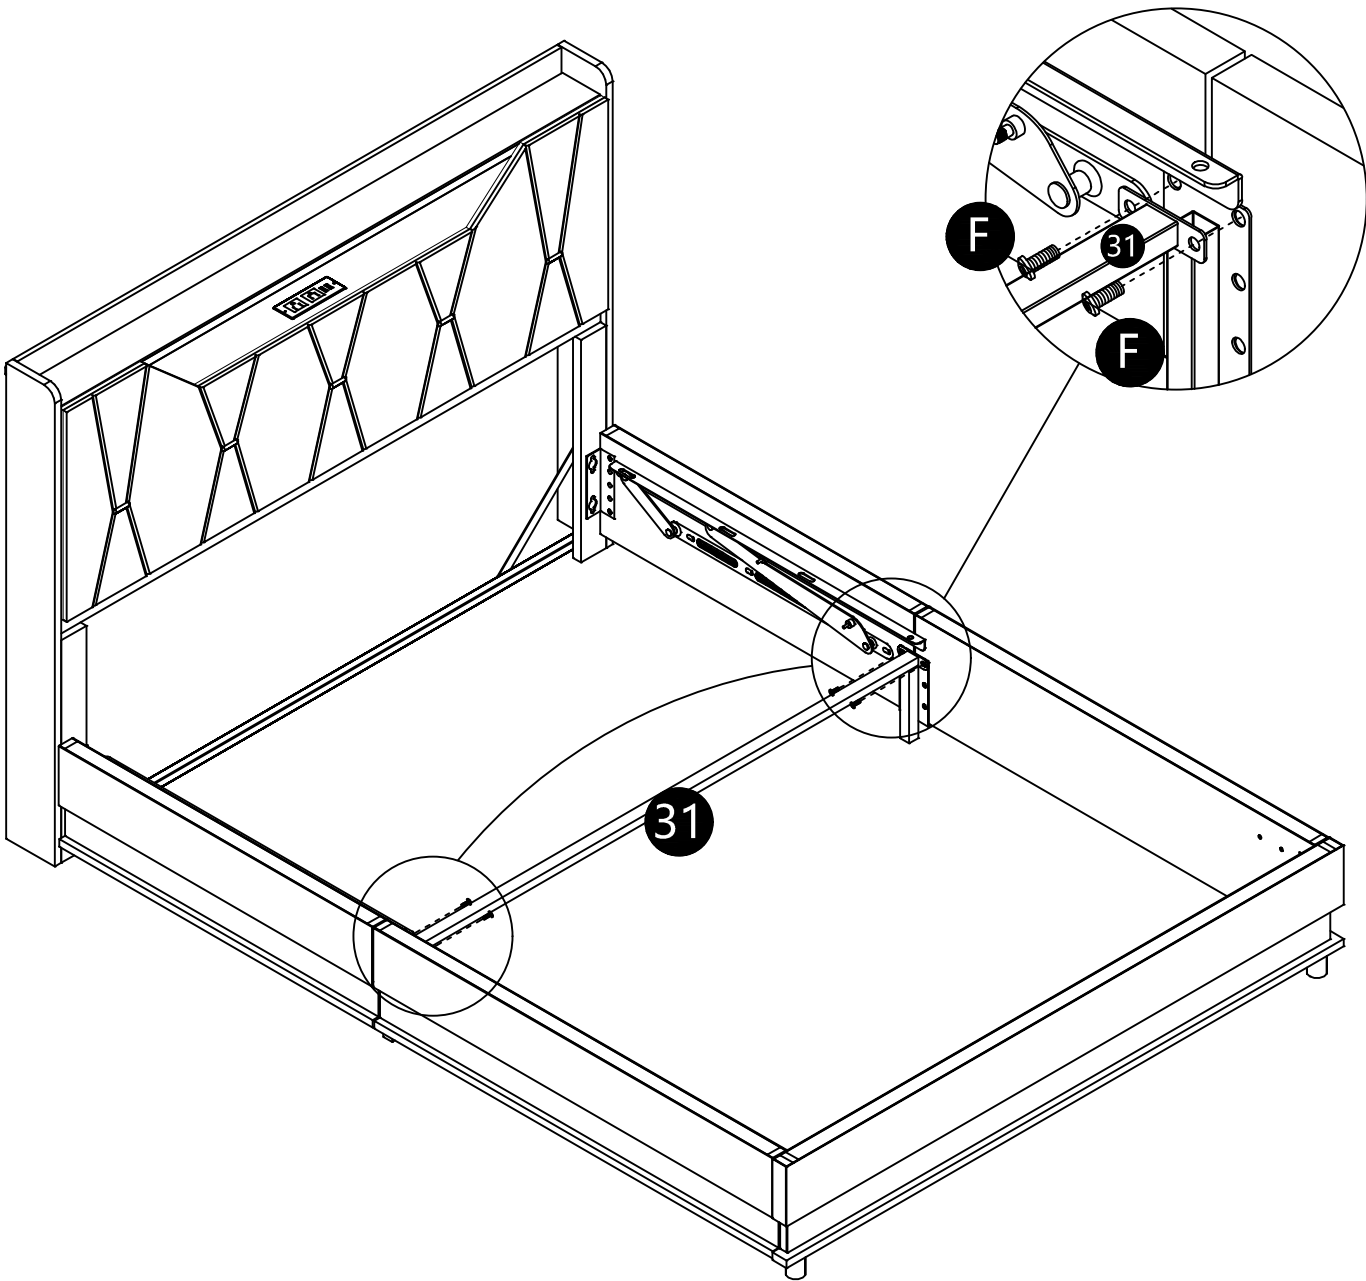


STEP21



M8*20

F	X8
---	----




M8*50


K	X2
---	----






Z	X4
---	----

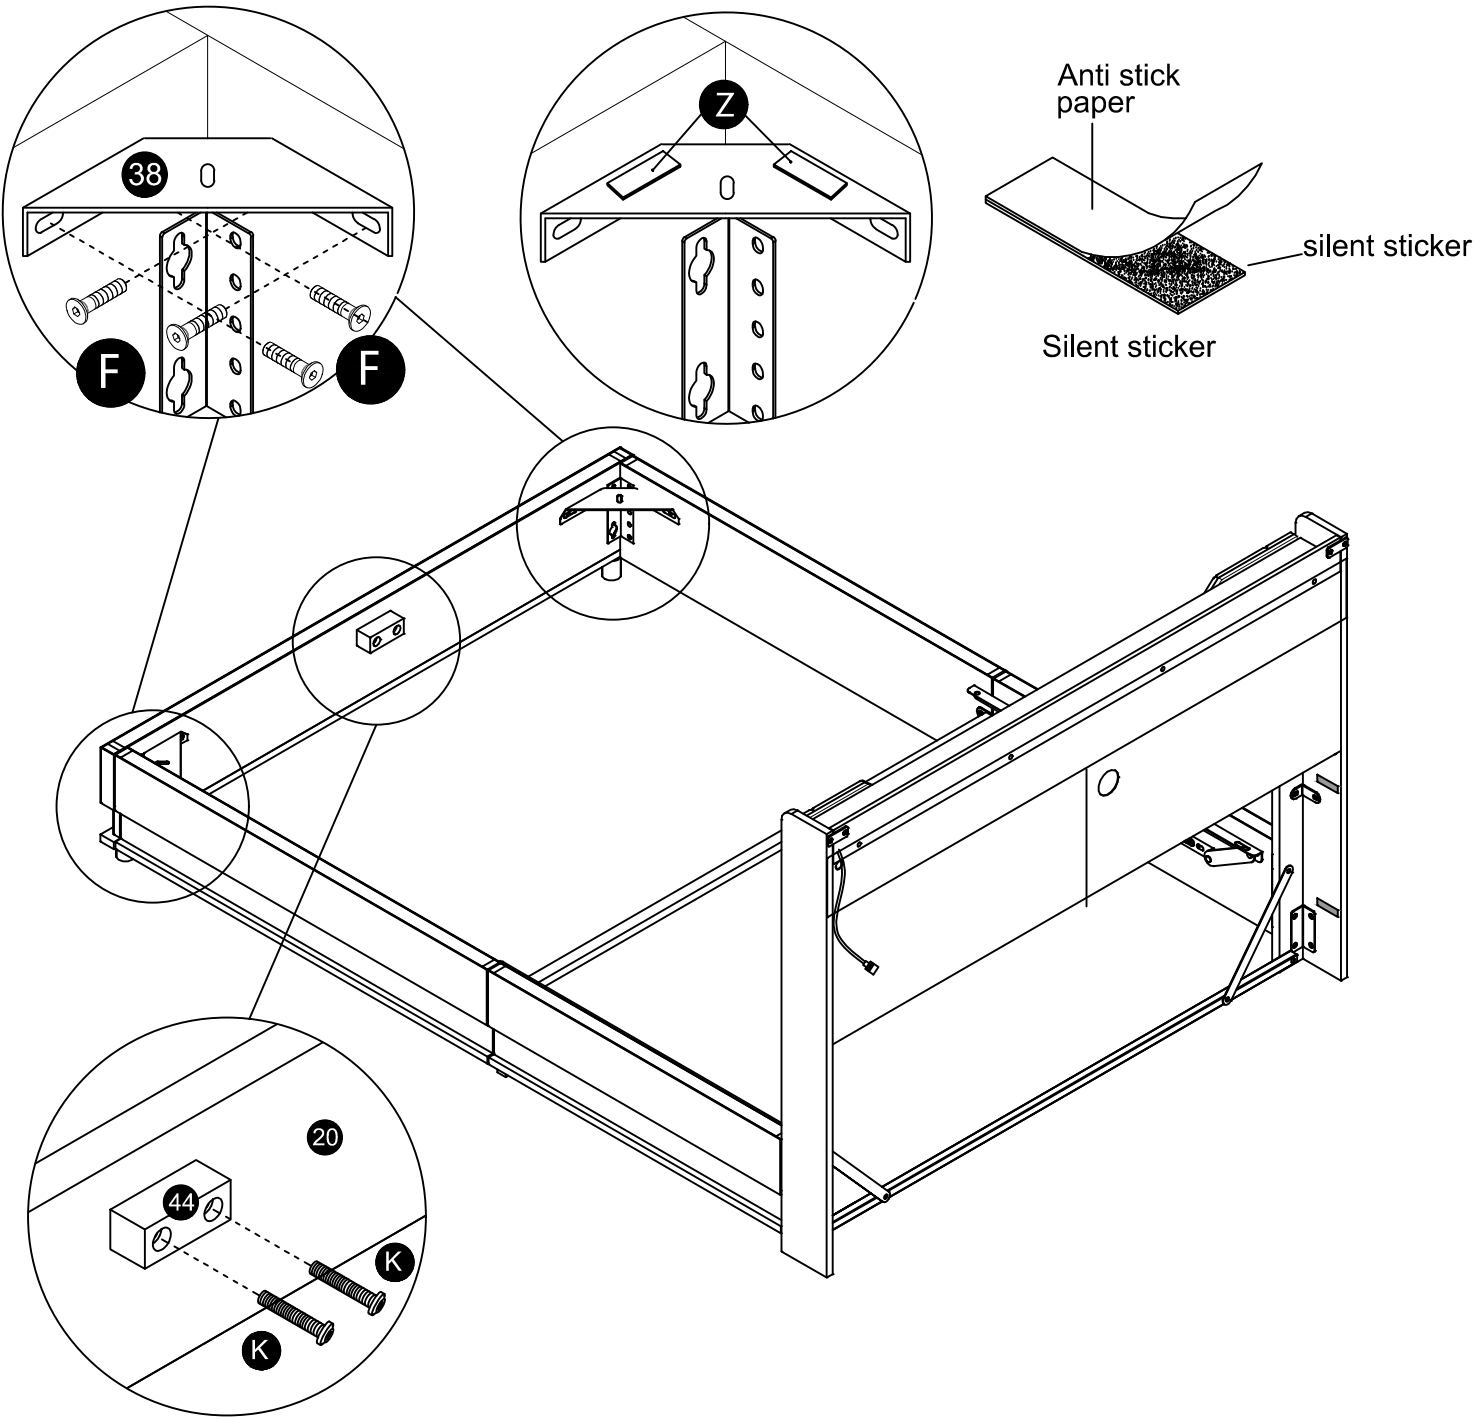


STEP22

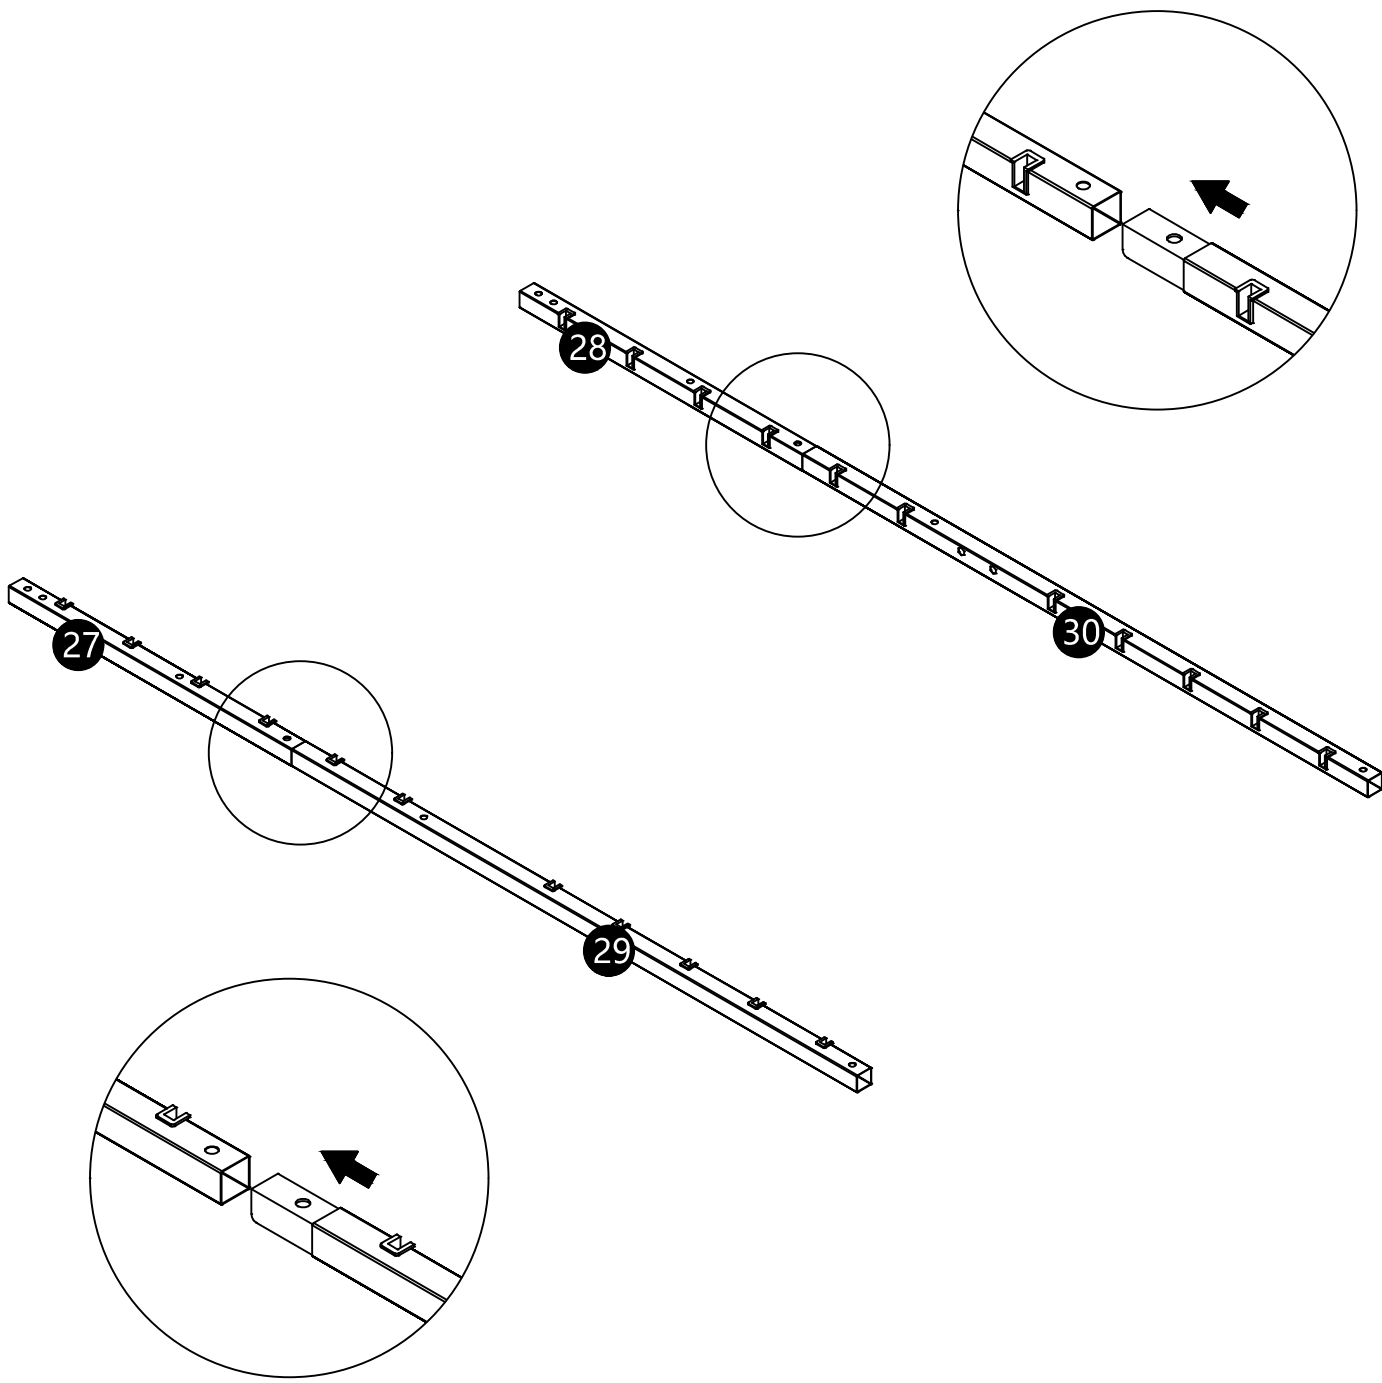

STEP23

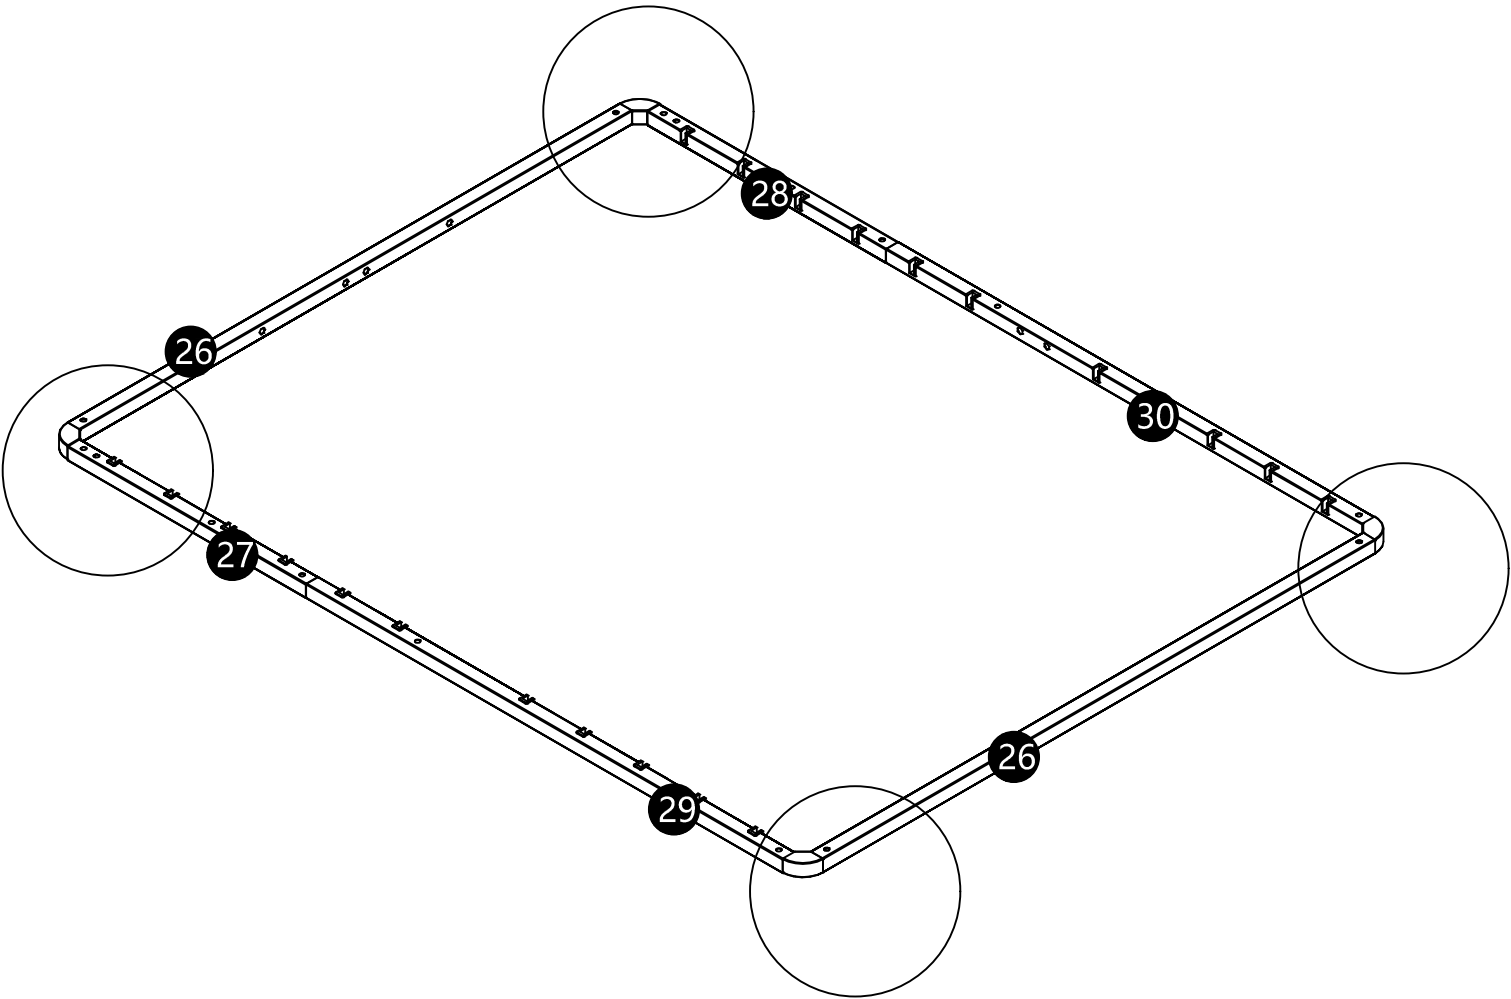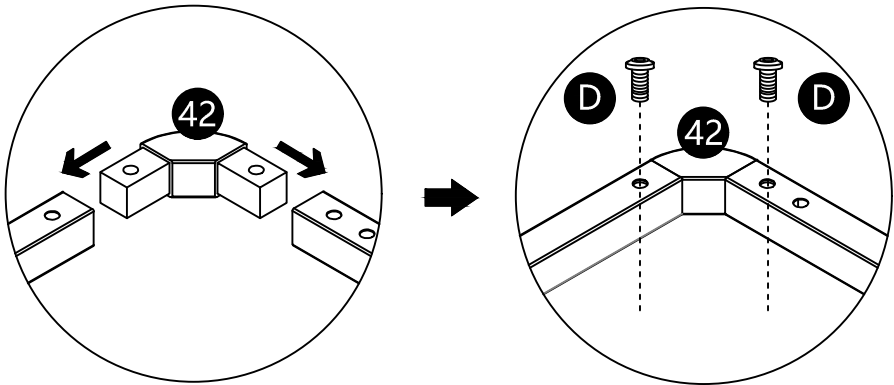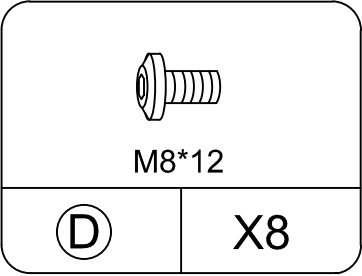


STEP24




M8*20

(F)	X2
-----	----

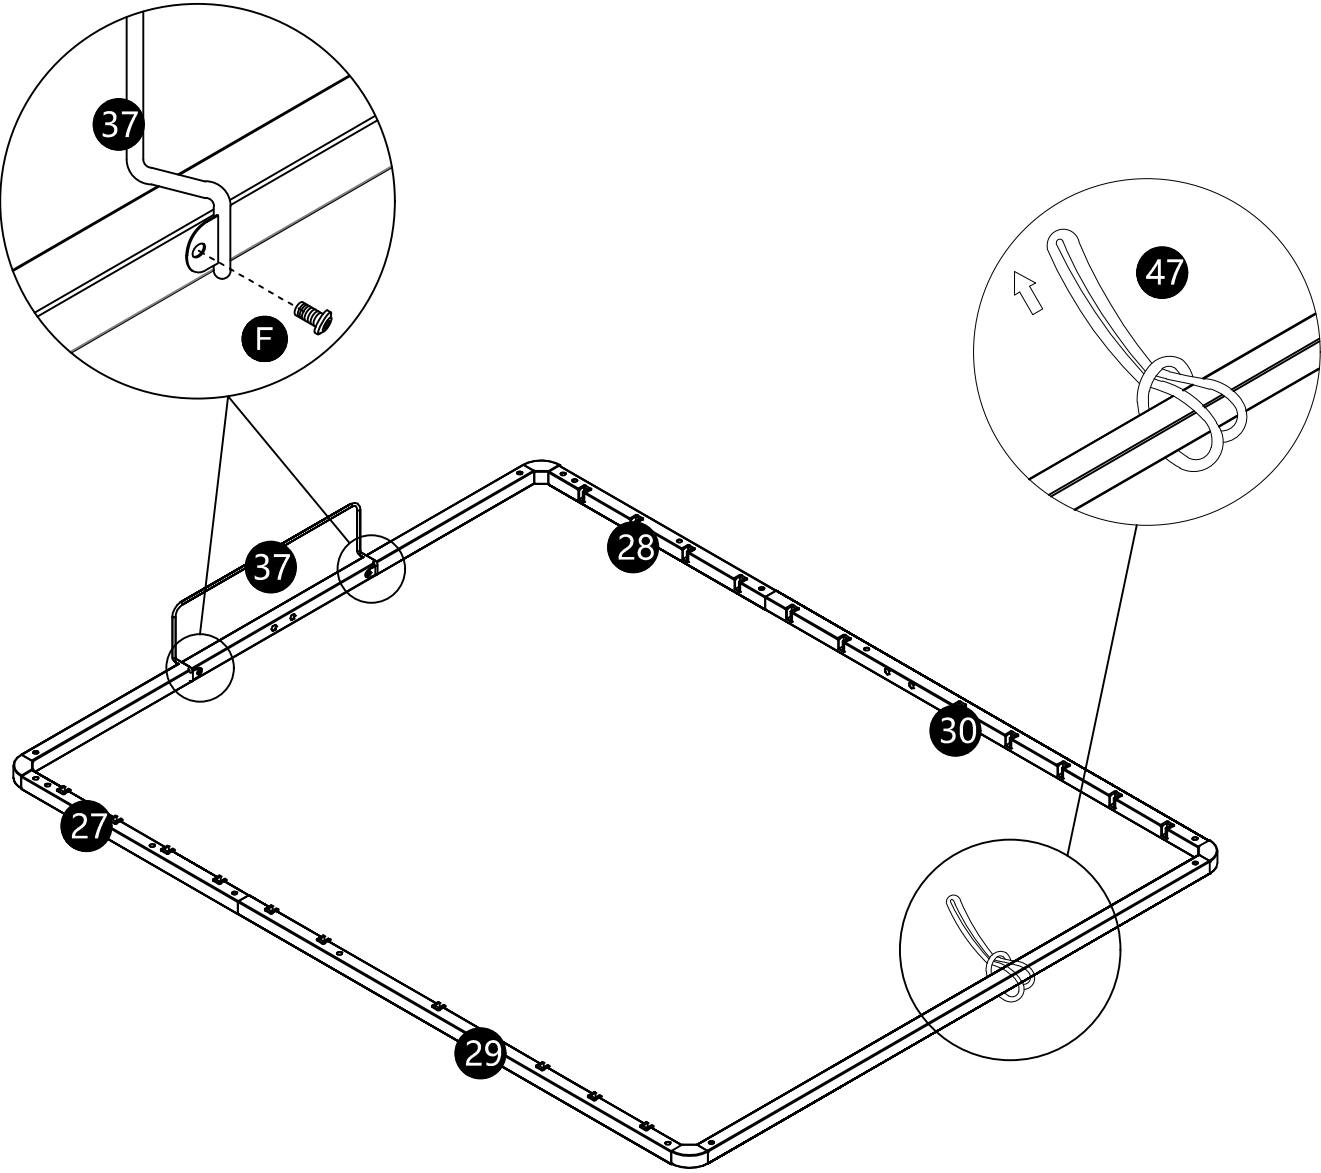

STEP25



M8*50

K

X8



M8


O

X8




W


X1

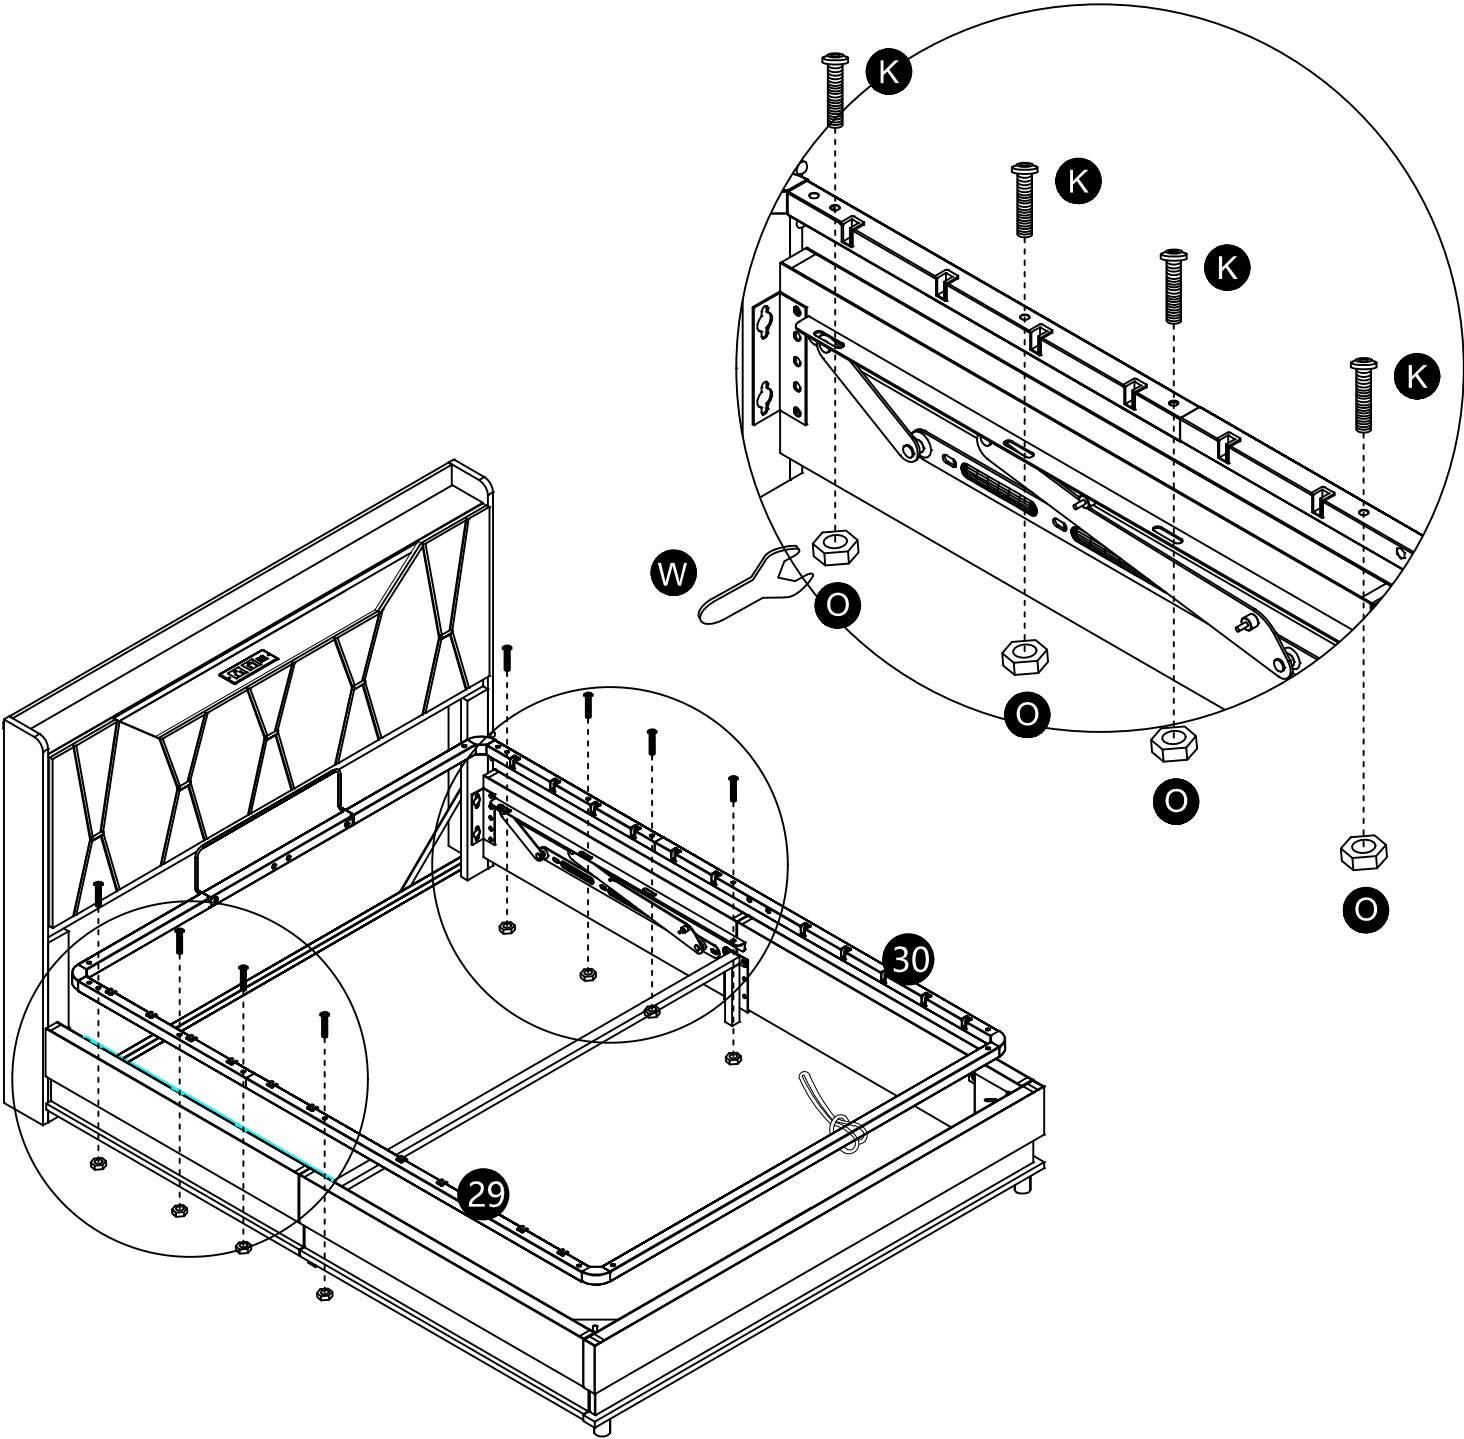


STEP26

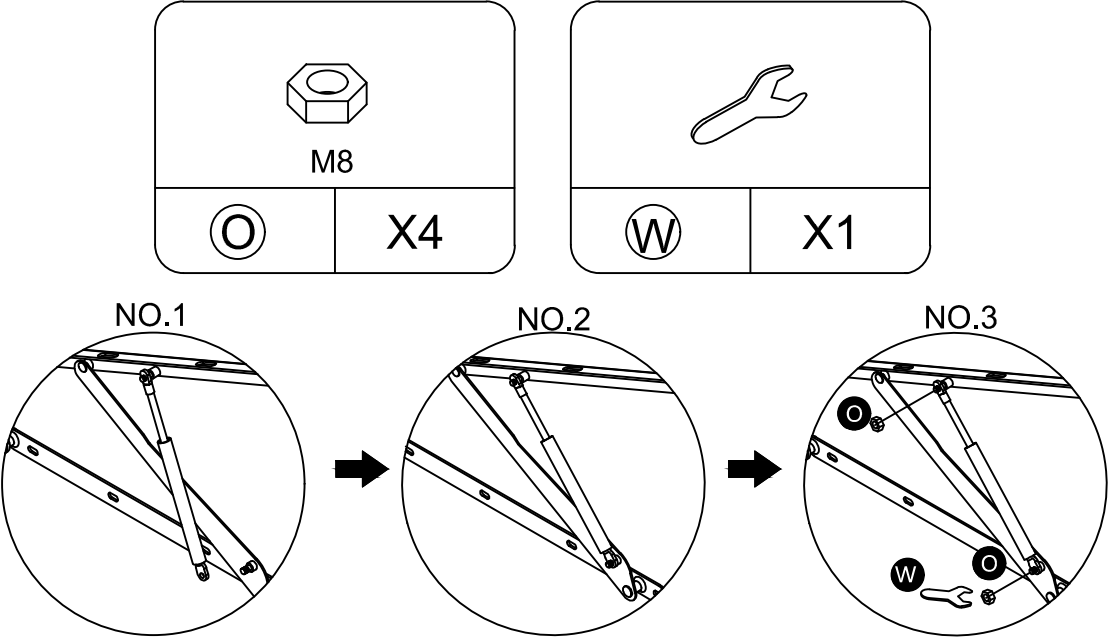

NO.1 As shown in the figure,install the two ends of the air pressure rod.
NO.2 Then tighten the nut.

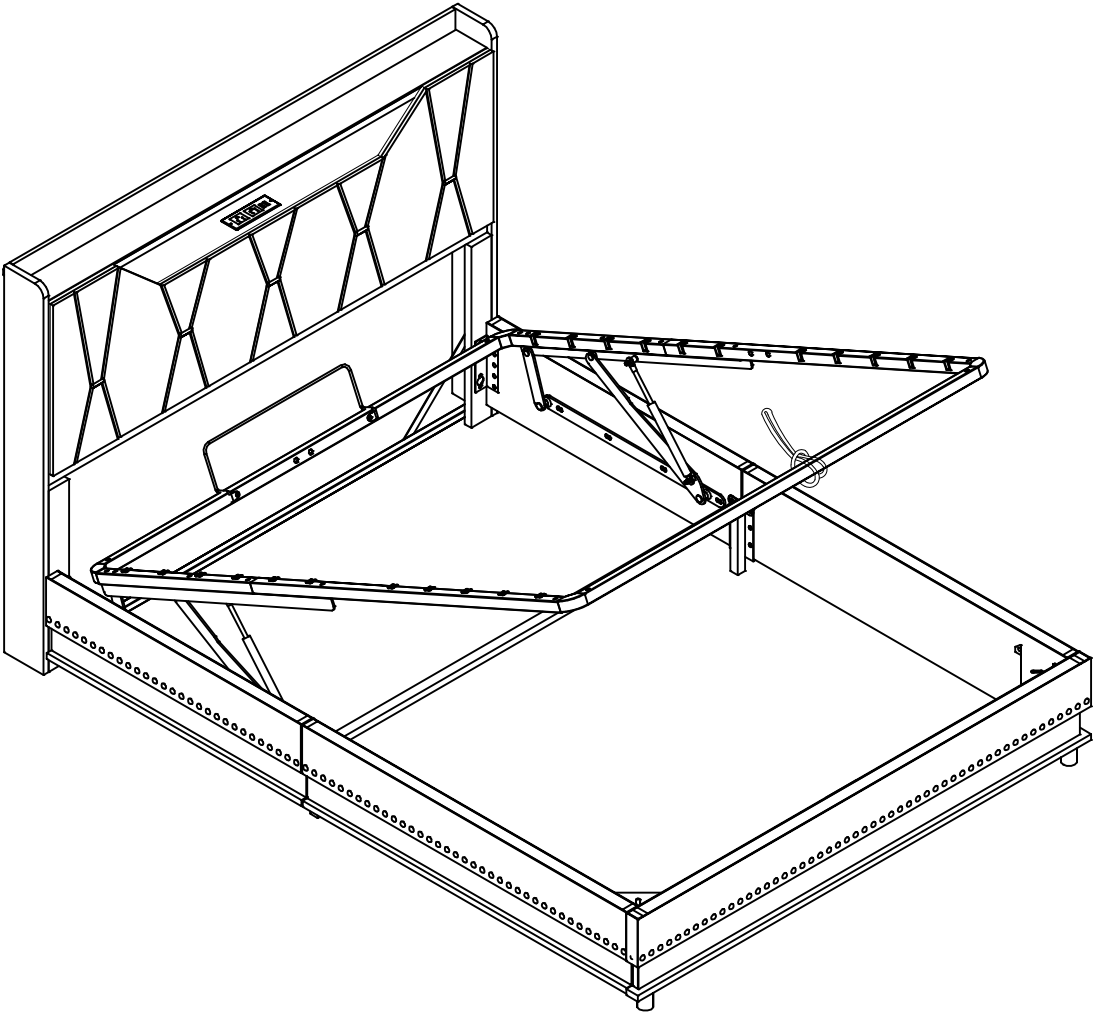

STEP27




M8*35

(H)	X4
-----	----





M8XØ22


(R)	X4
-----	----

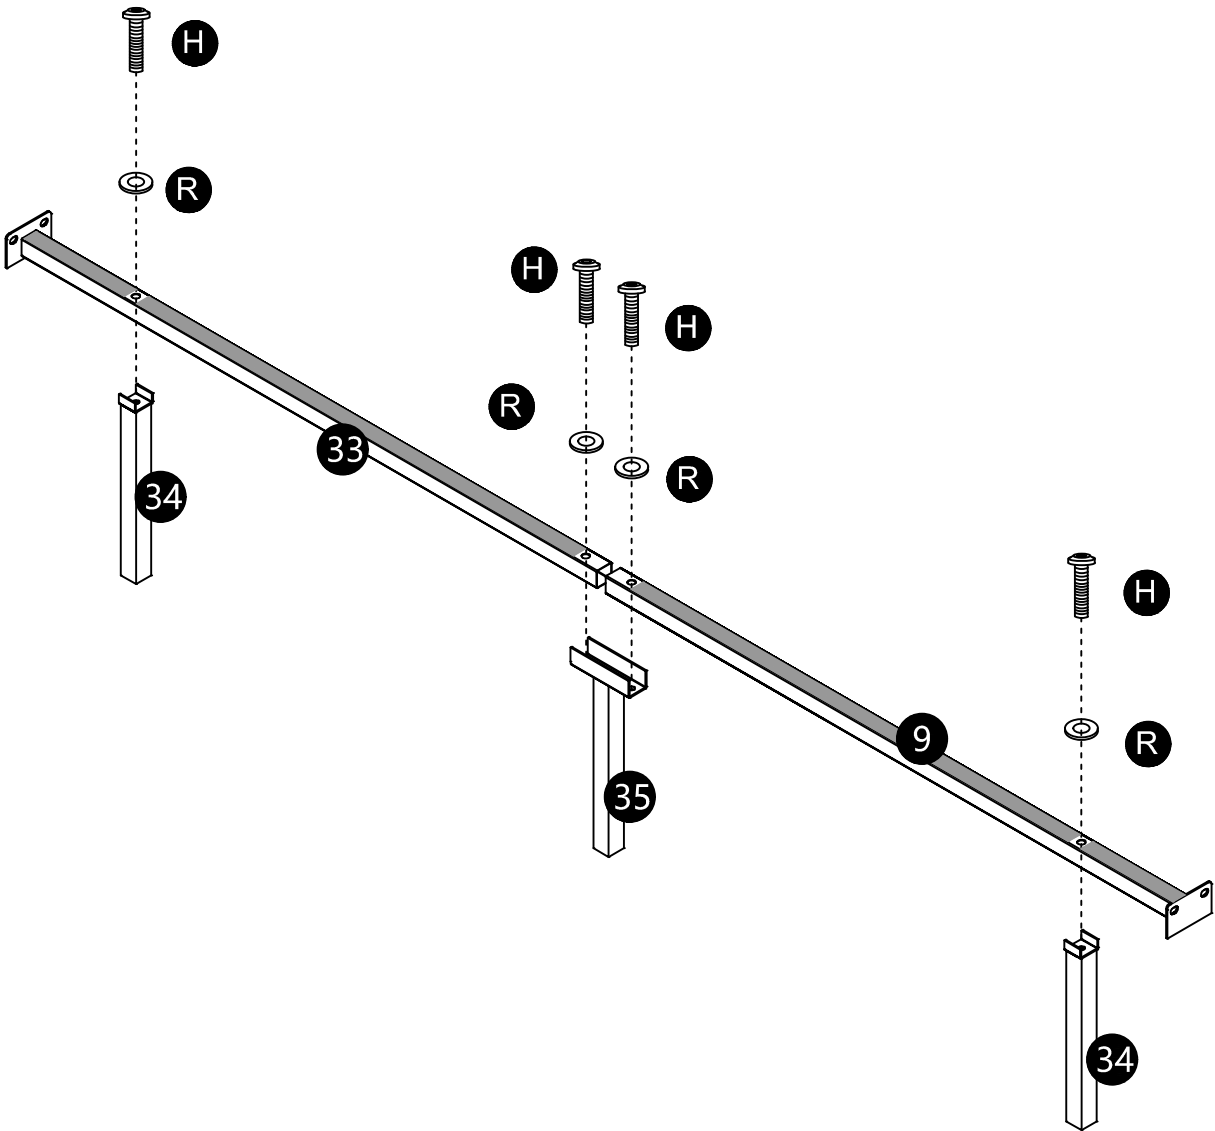


STEP28

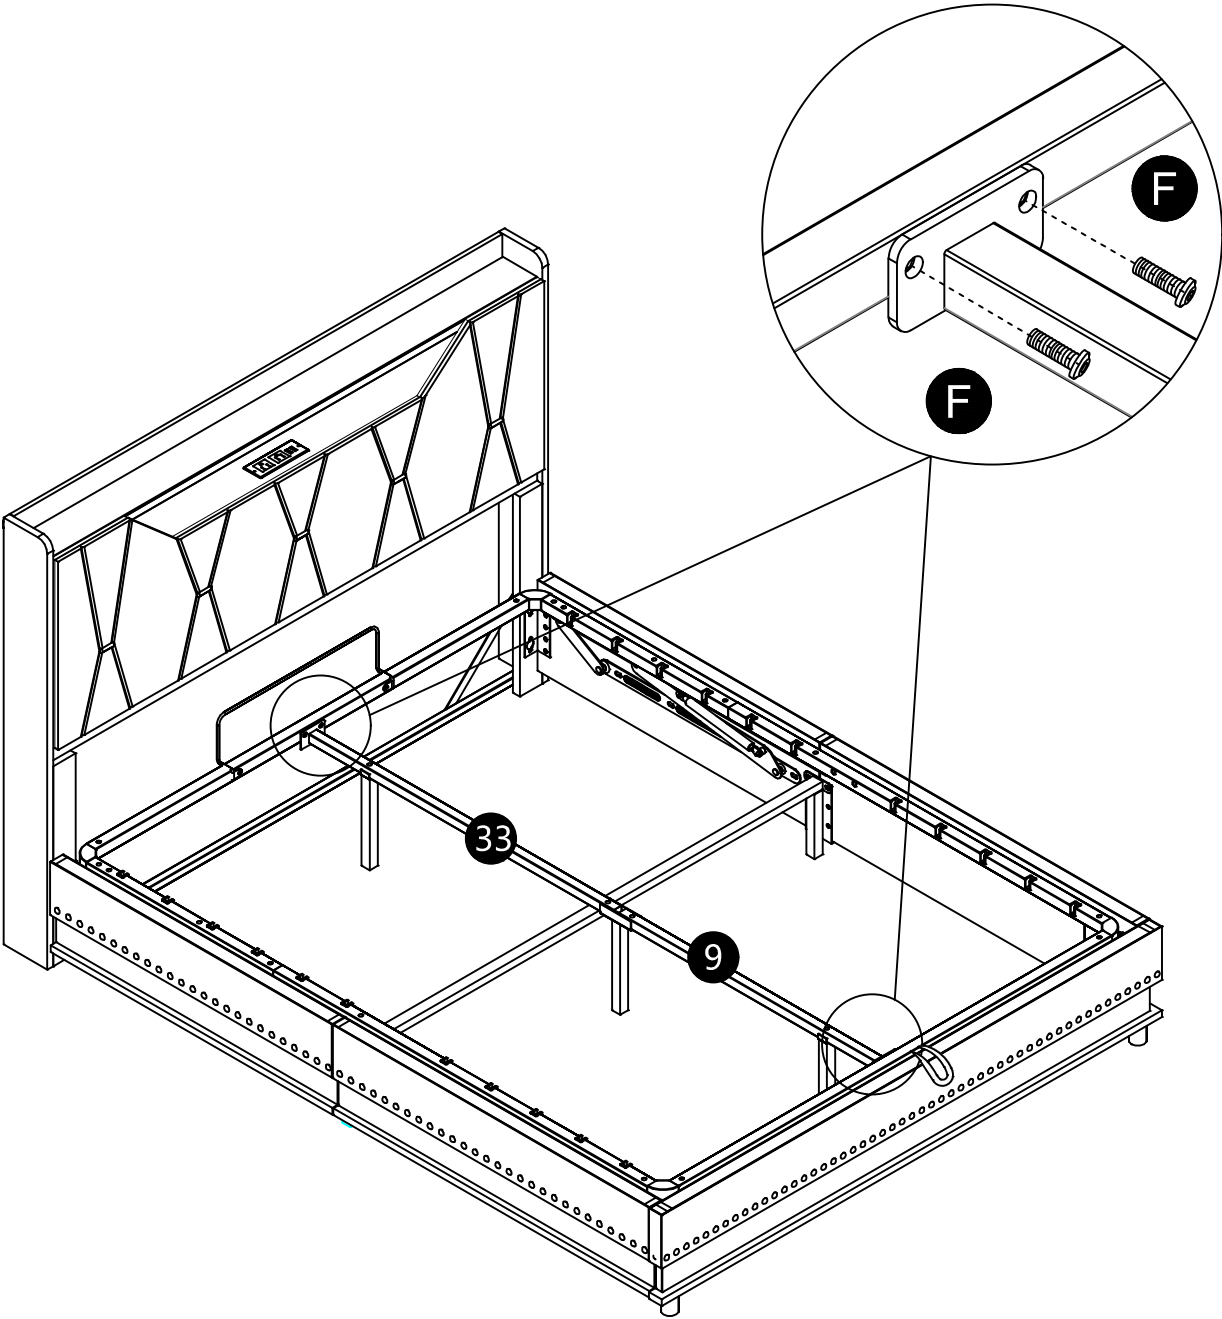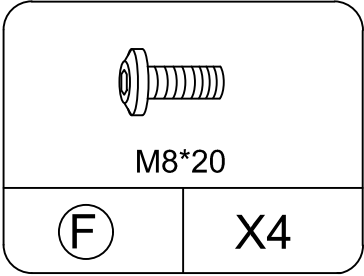

STEP29

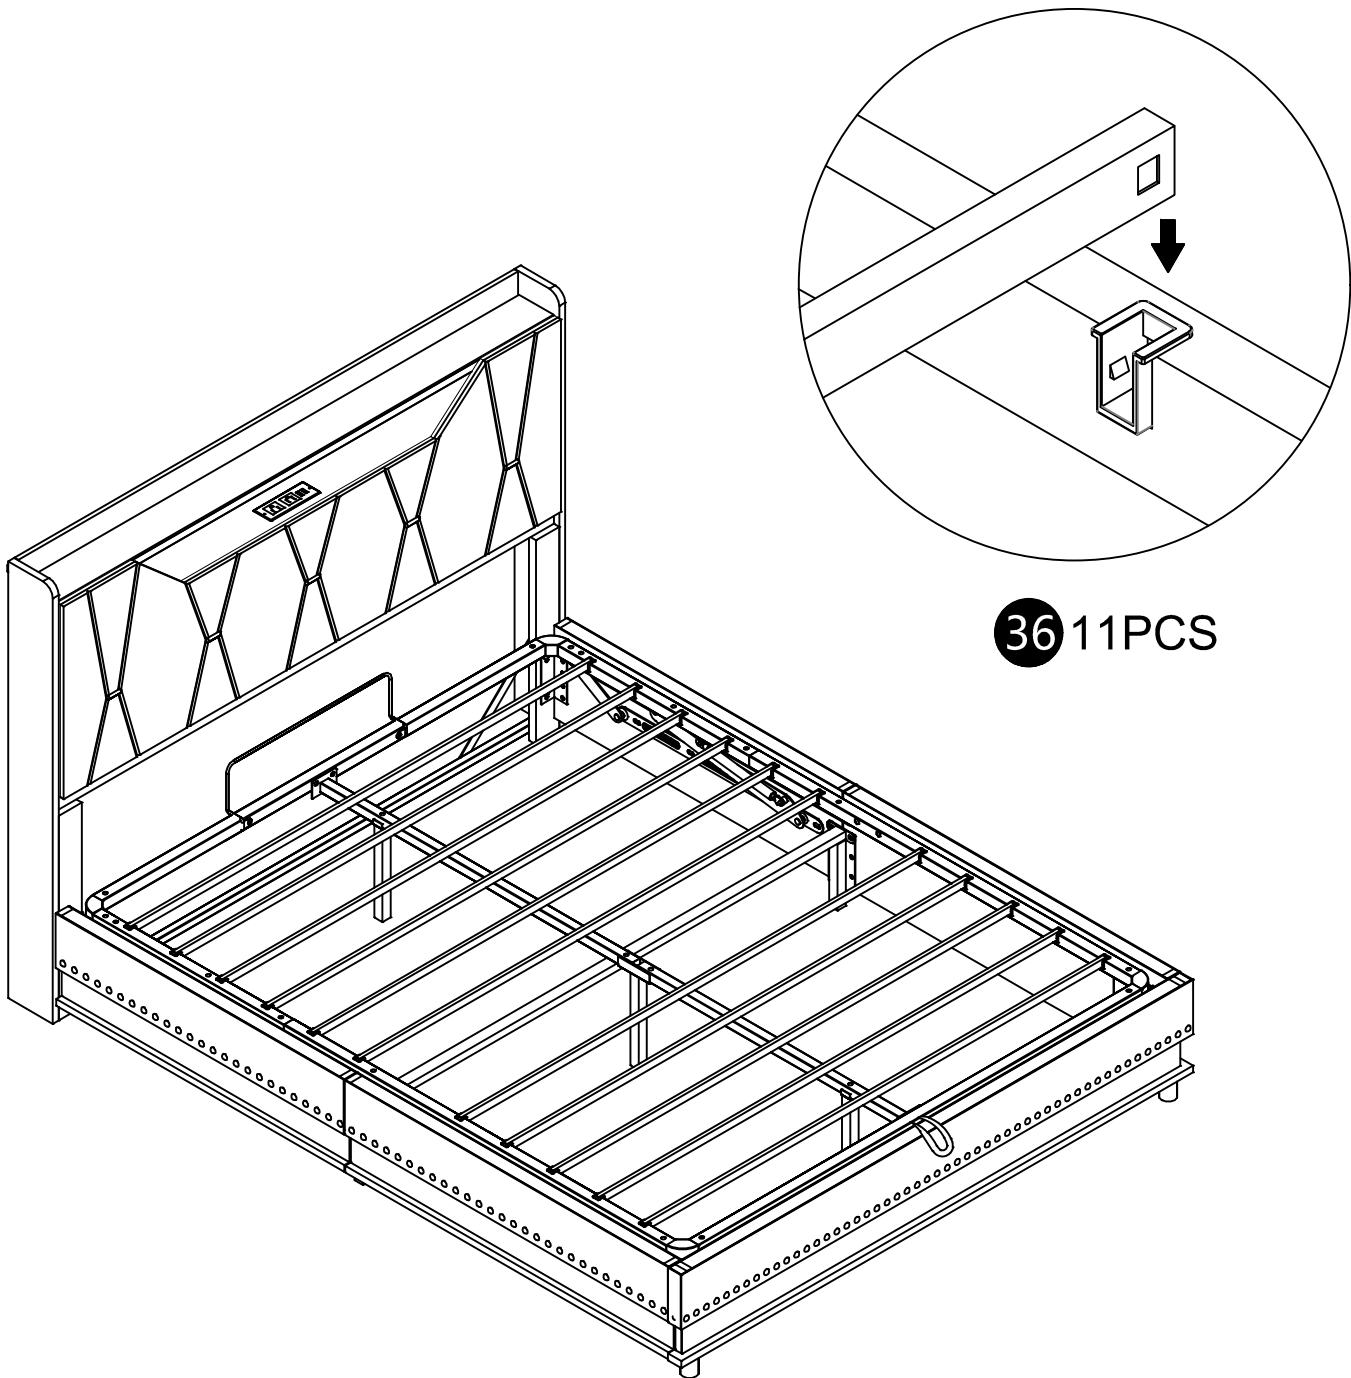


STEP30




M8*20

F	X4
---	----






M8*55

L	X1
---	----

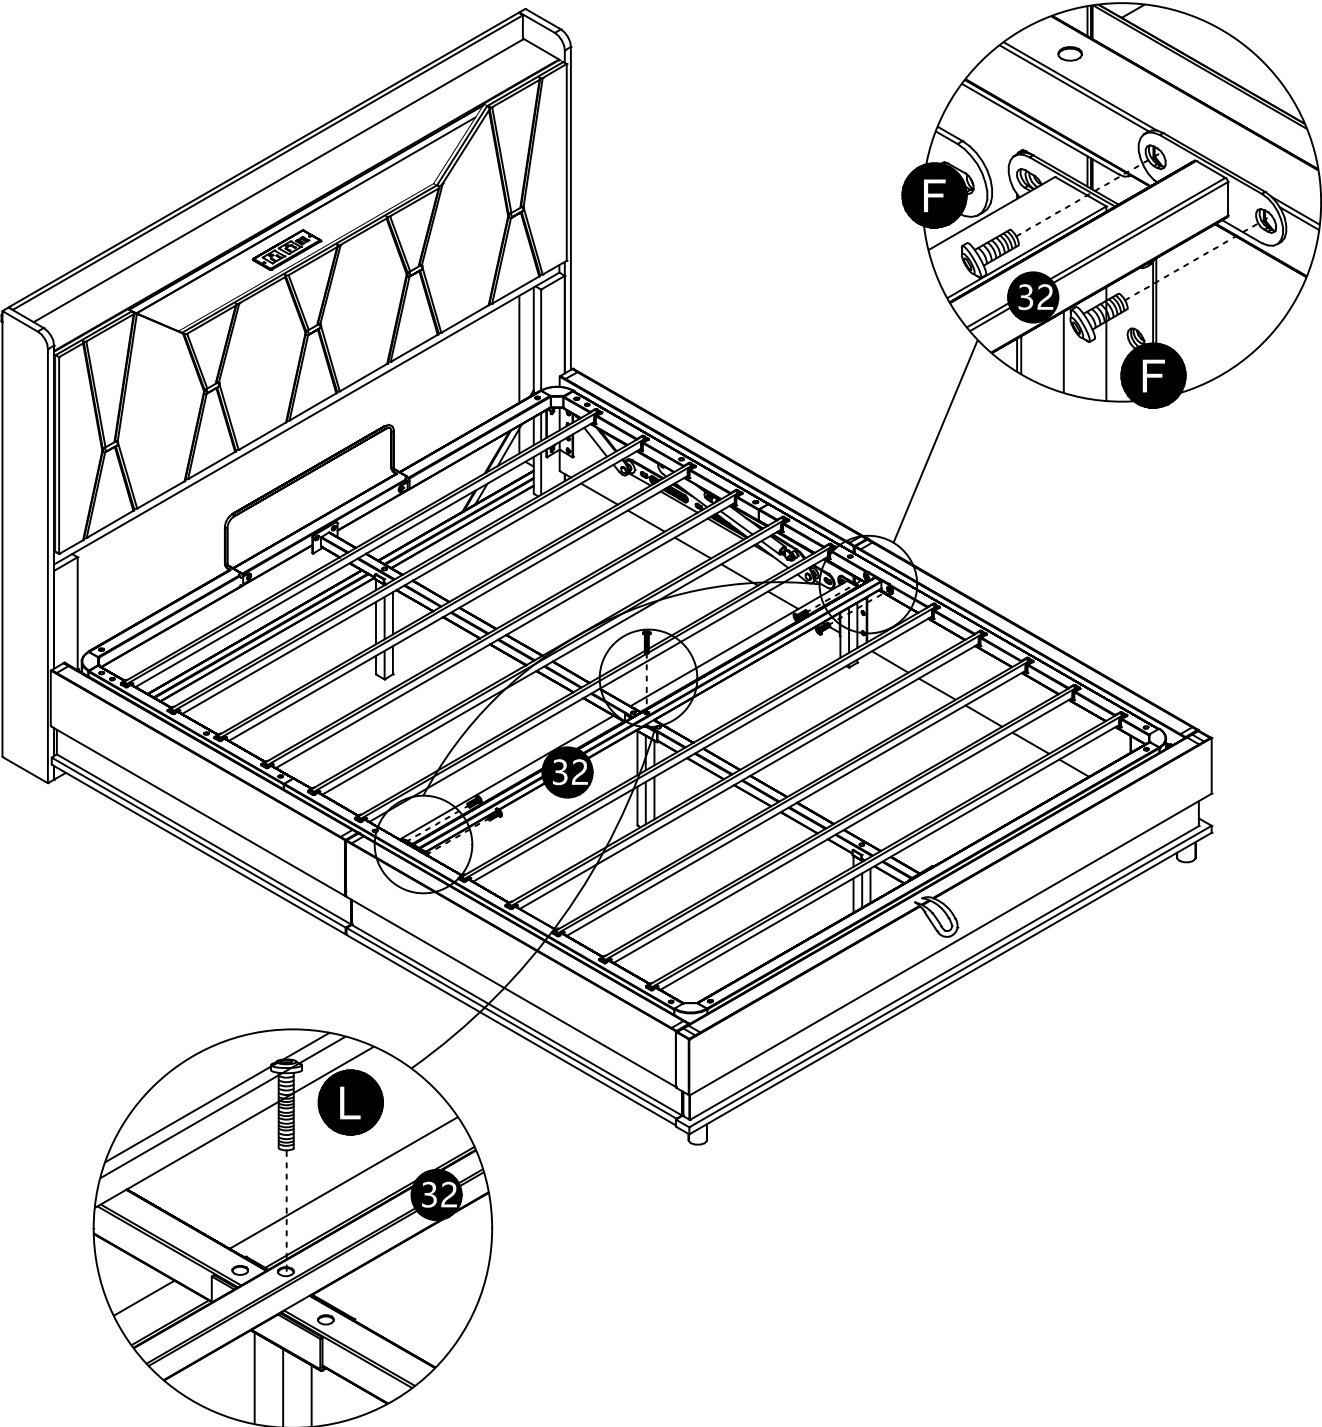


STEP31

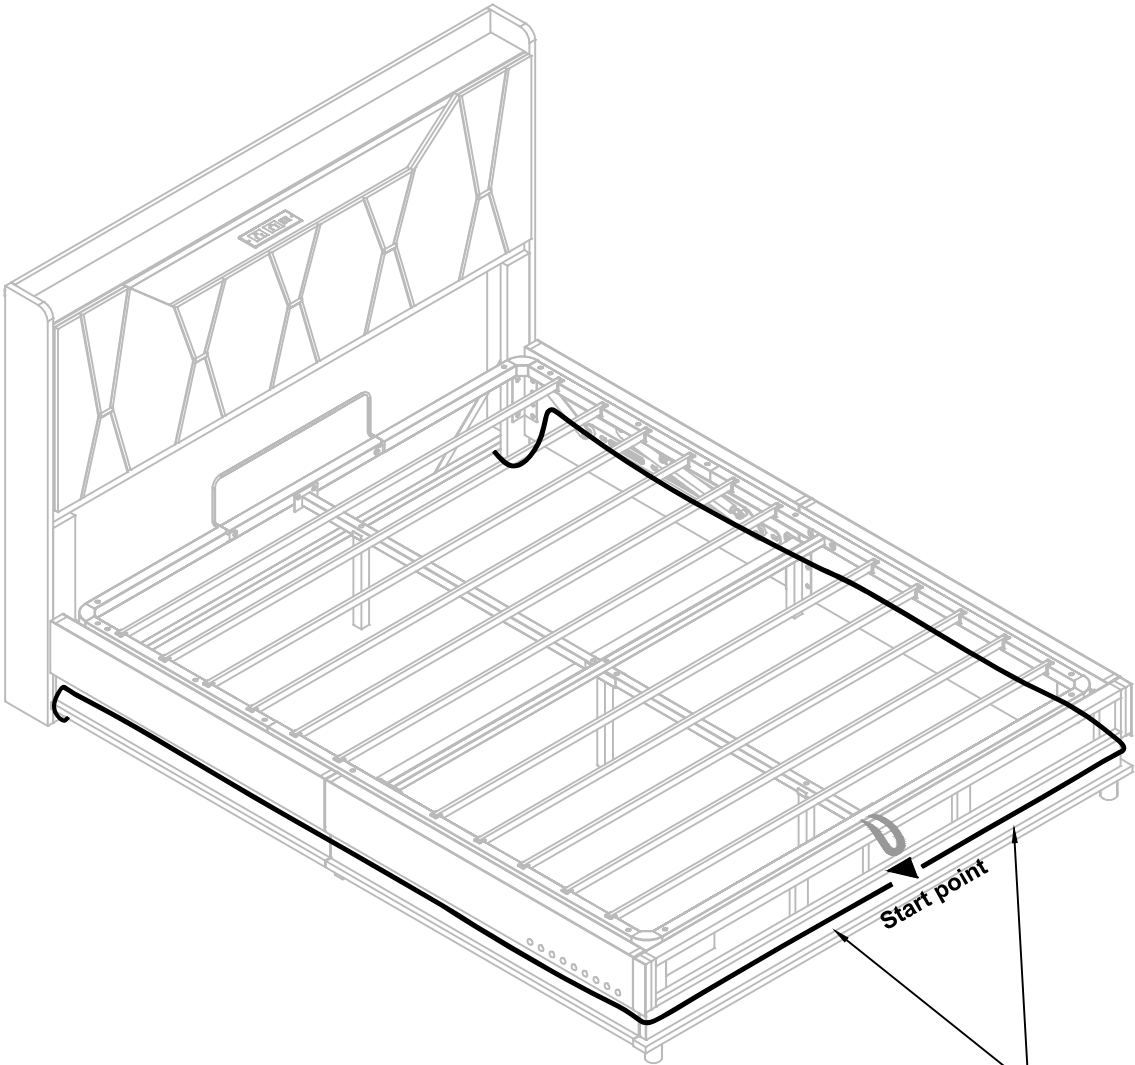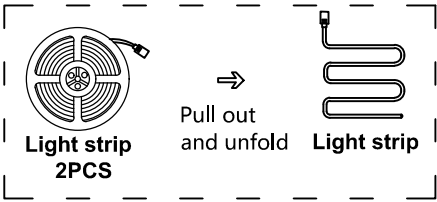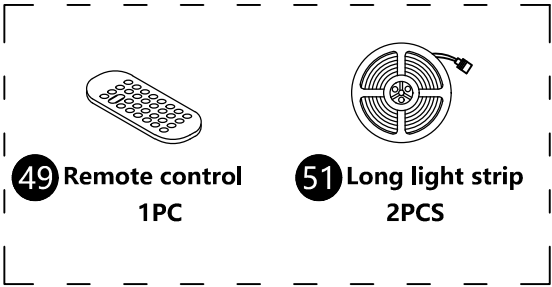

Stick the light strip on the inside of the groove


STEP32



1PC
52 Power cord







7PCS
55 Strap magic tape

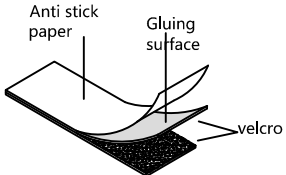


Strap magic tape

When the wires are disordered, tear off the anti stick paper, paste it on the place where the wires pass, and then bind the wires.

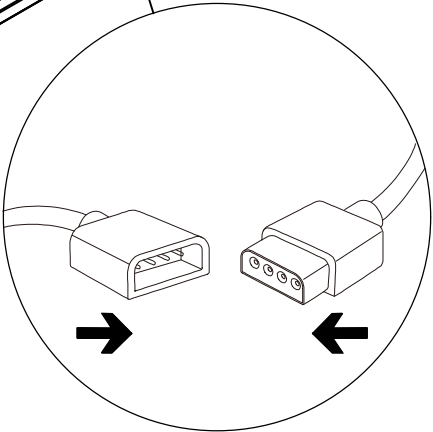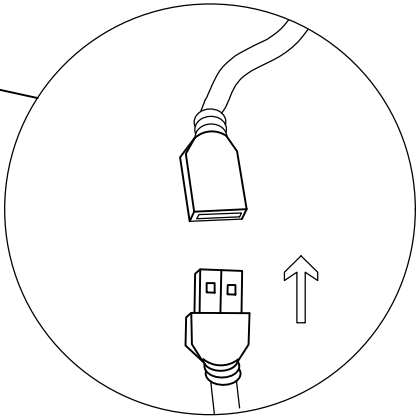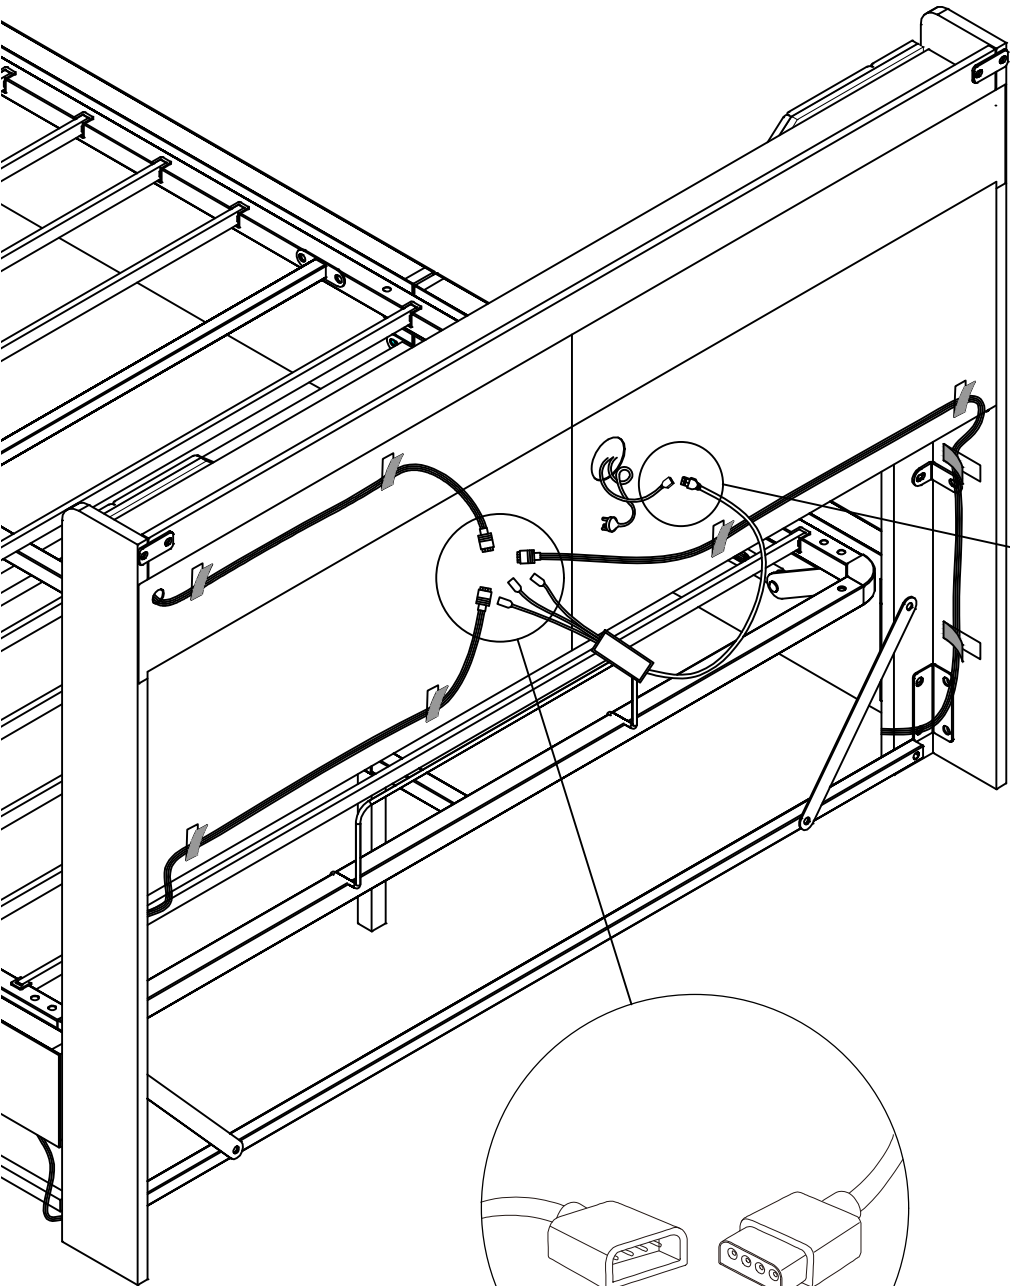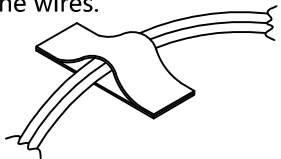


STEP33

**Stick the Velcro on the
bottom fabric onto the
Velcro under the bed**

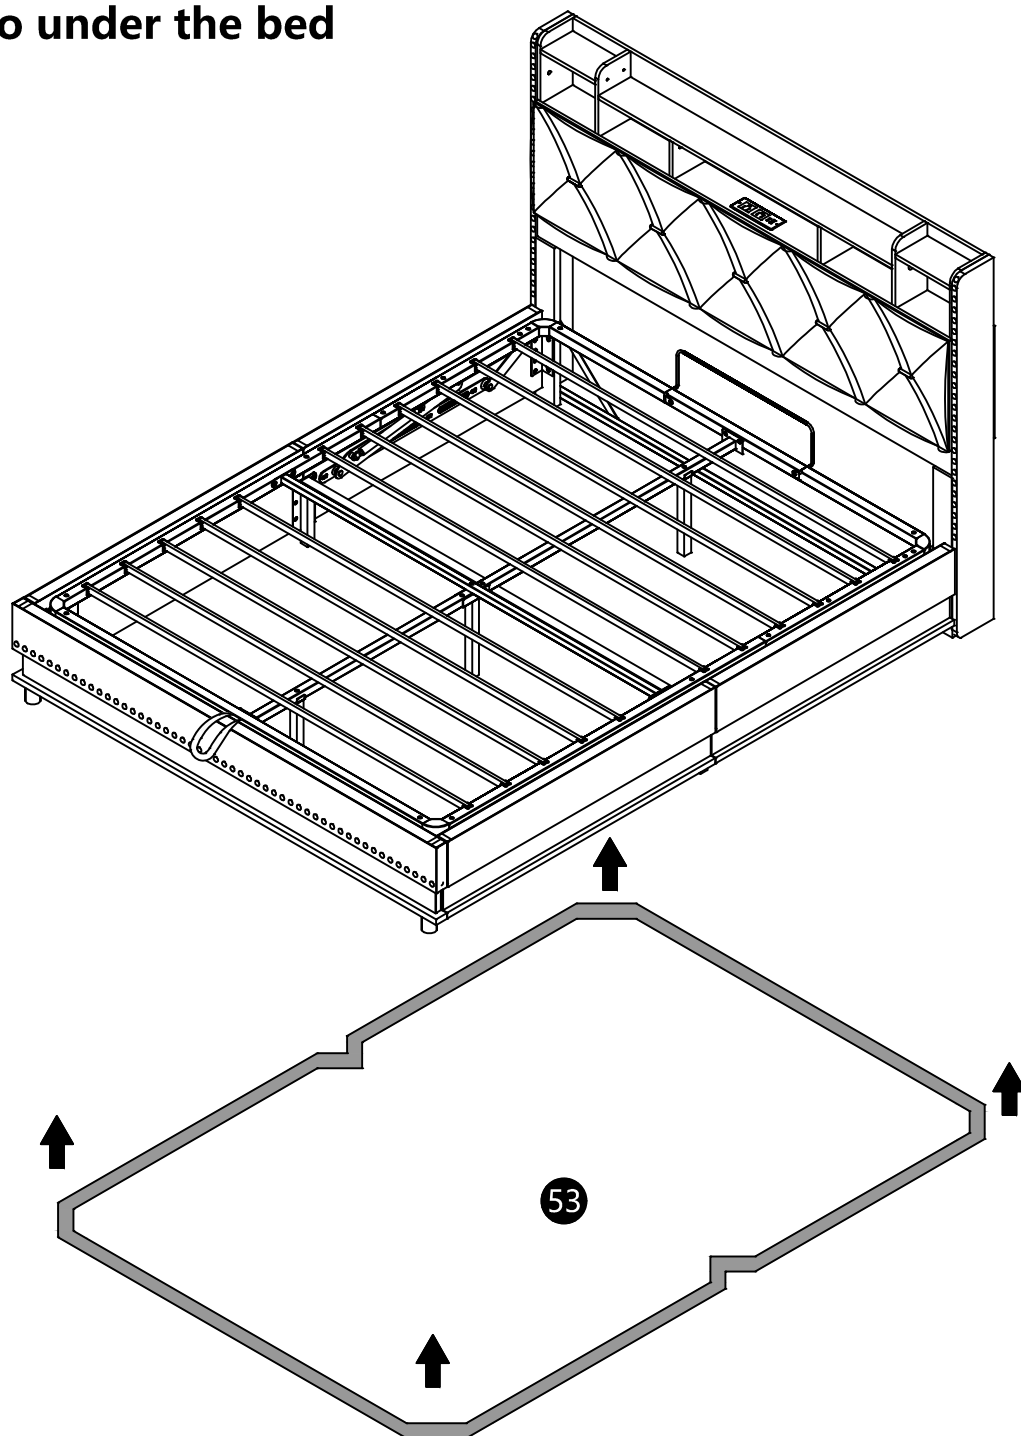


Note:

1. Remote control without battery.
2. Please purchase CR2025 3V specification battery.
3. Please install the battery correctly according to the steps.


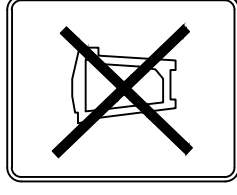


Step 1

Back of remote control.



Step 2

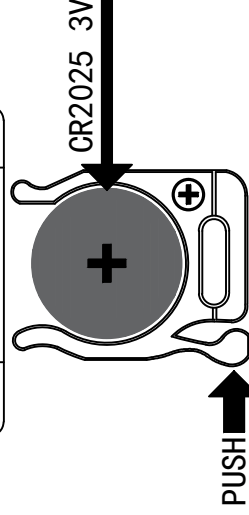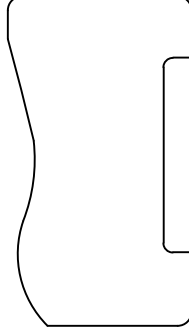

Step 3

Tip: If it is not used for a long time, please insert the plastic sheet into the gap to isolate the battery.

