


TV Stand

Assembly Instructions - Please keep for future reference

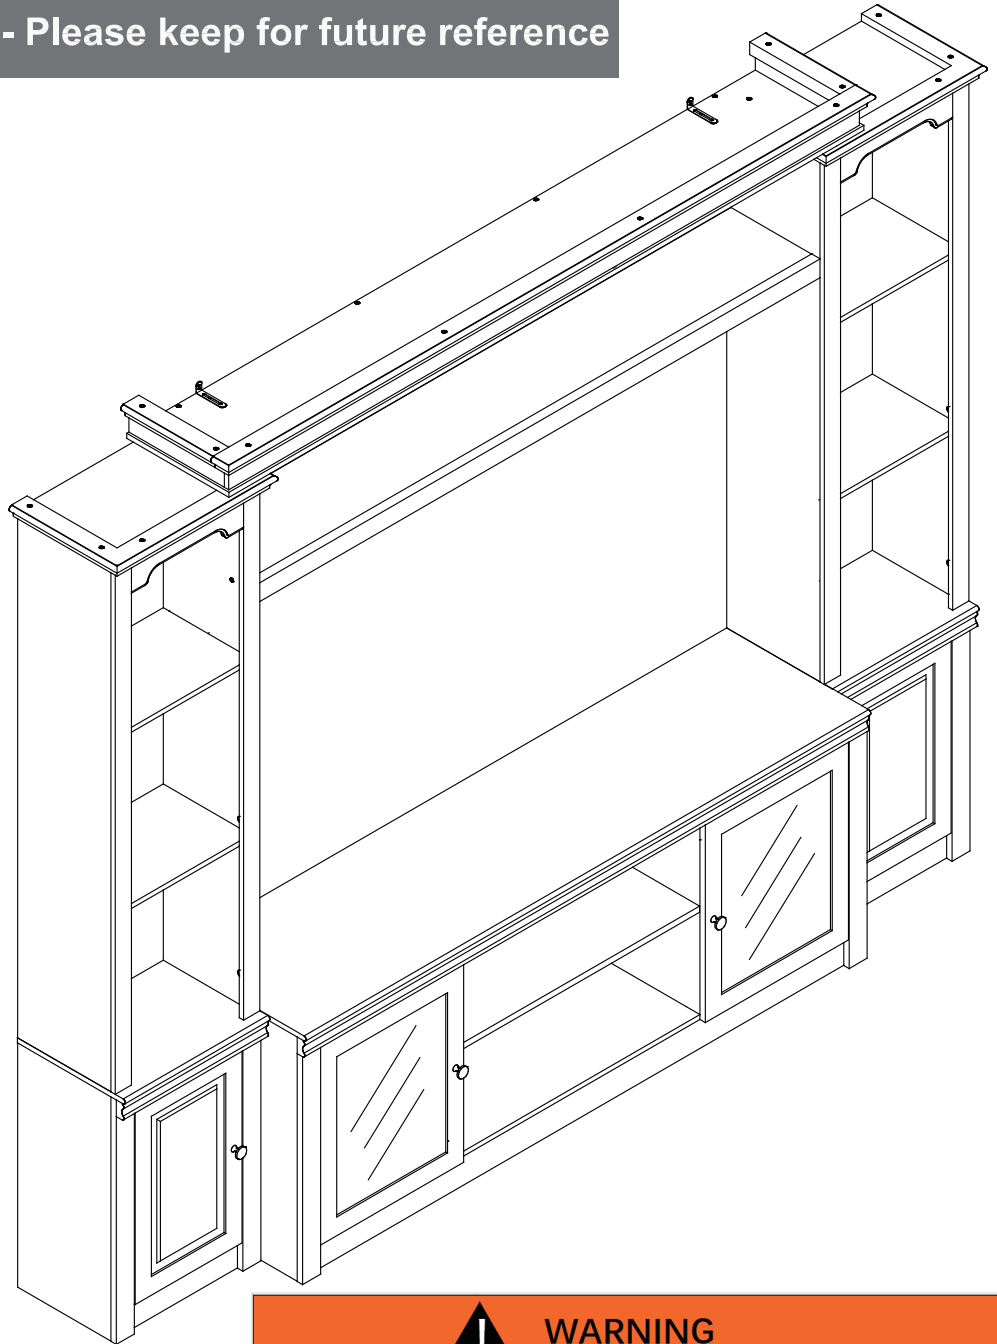

Dimensions

Width- 95.25inch

Depth- 15.75inch

Height- 77.75inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions













To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

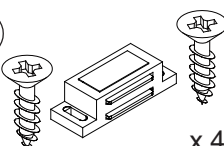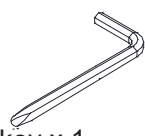 (A) Cam Bolt x 132+2	 (B) 6*30mm Dowel x 141+2	 (C) Cam lock x 132+2	 (D) 4*40mm Screw x 24+2
 (E) Triple fold hinge x 8	 (F) x 4set	 (G) x 32set	 (H) 4*25mm Screw x 12+1
 (I) Shelf support pin x 16+1	 (J) Anti-tipping Device x2	 (K) Perfect fit x 50	 (L) x 4set
 (M) 4*20mm Handle x 4set	 (N) N1 6*40mm Screw x 4+1  N2	 (O) 6*40mm Screw x 2	 (P) Allen key x 1
 (Q) Q1 Q2 6*20mm Screw x 4+1	 (R) 4*30mm Screw x 20+2		

Tools required Not Included



Phillips screwdriver
(medium & large)

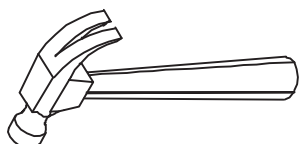


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

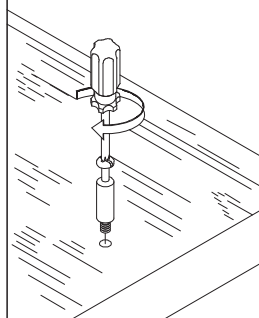

Step 2

Push the male camlock into the entry hole.

2

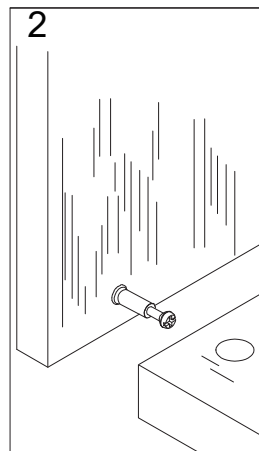


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

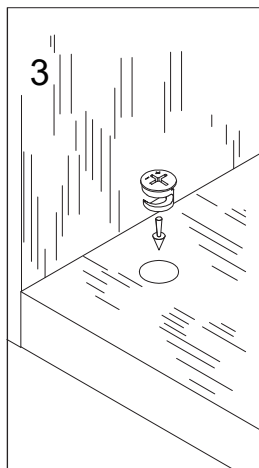


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4











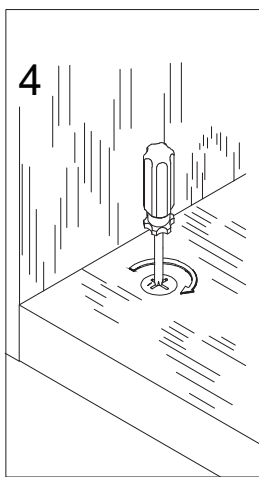


Assembly Instructions

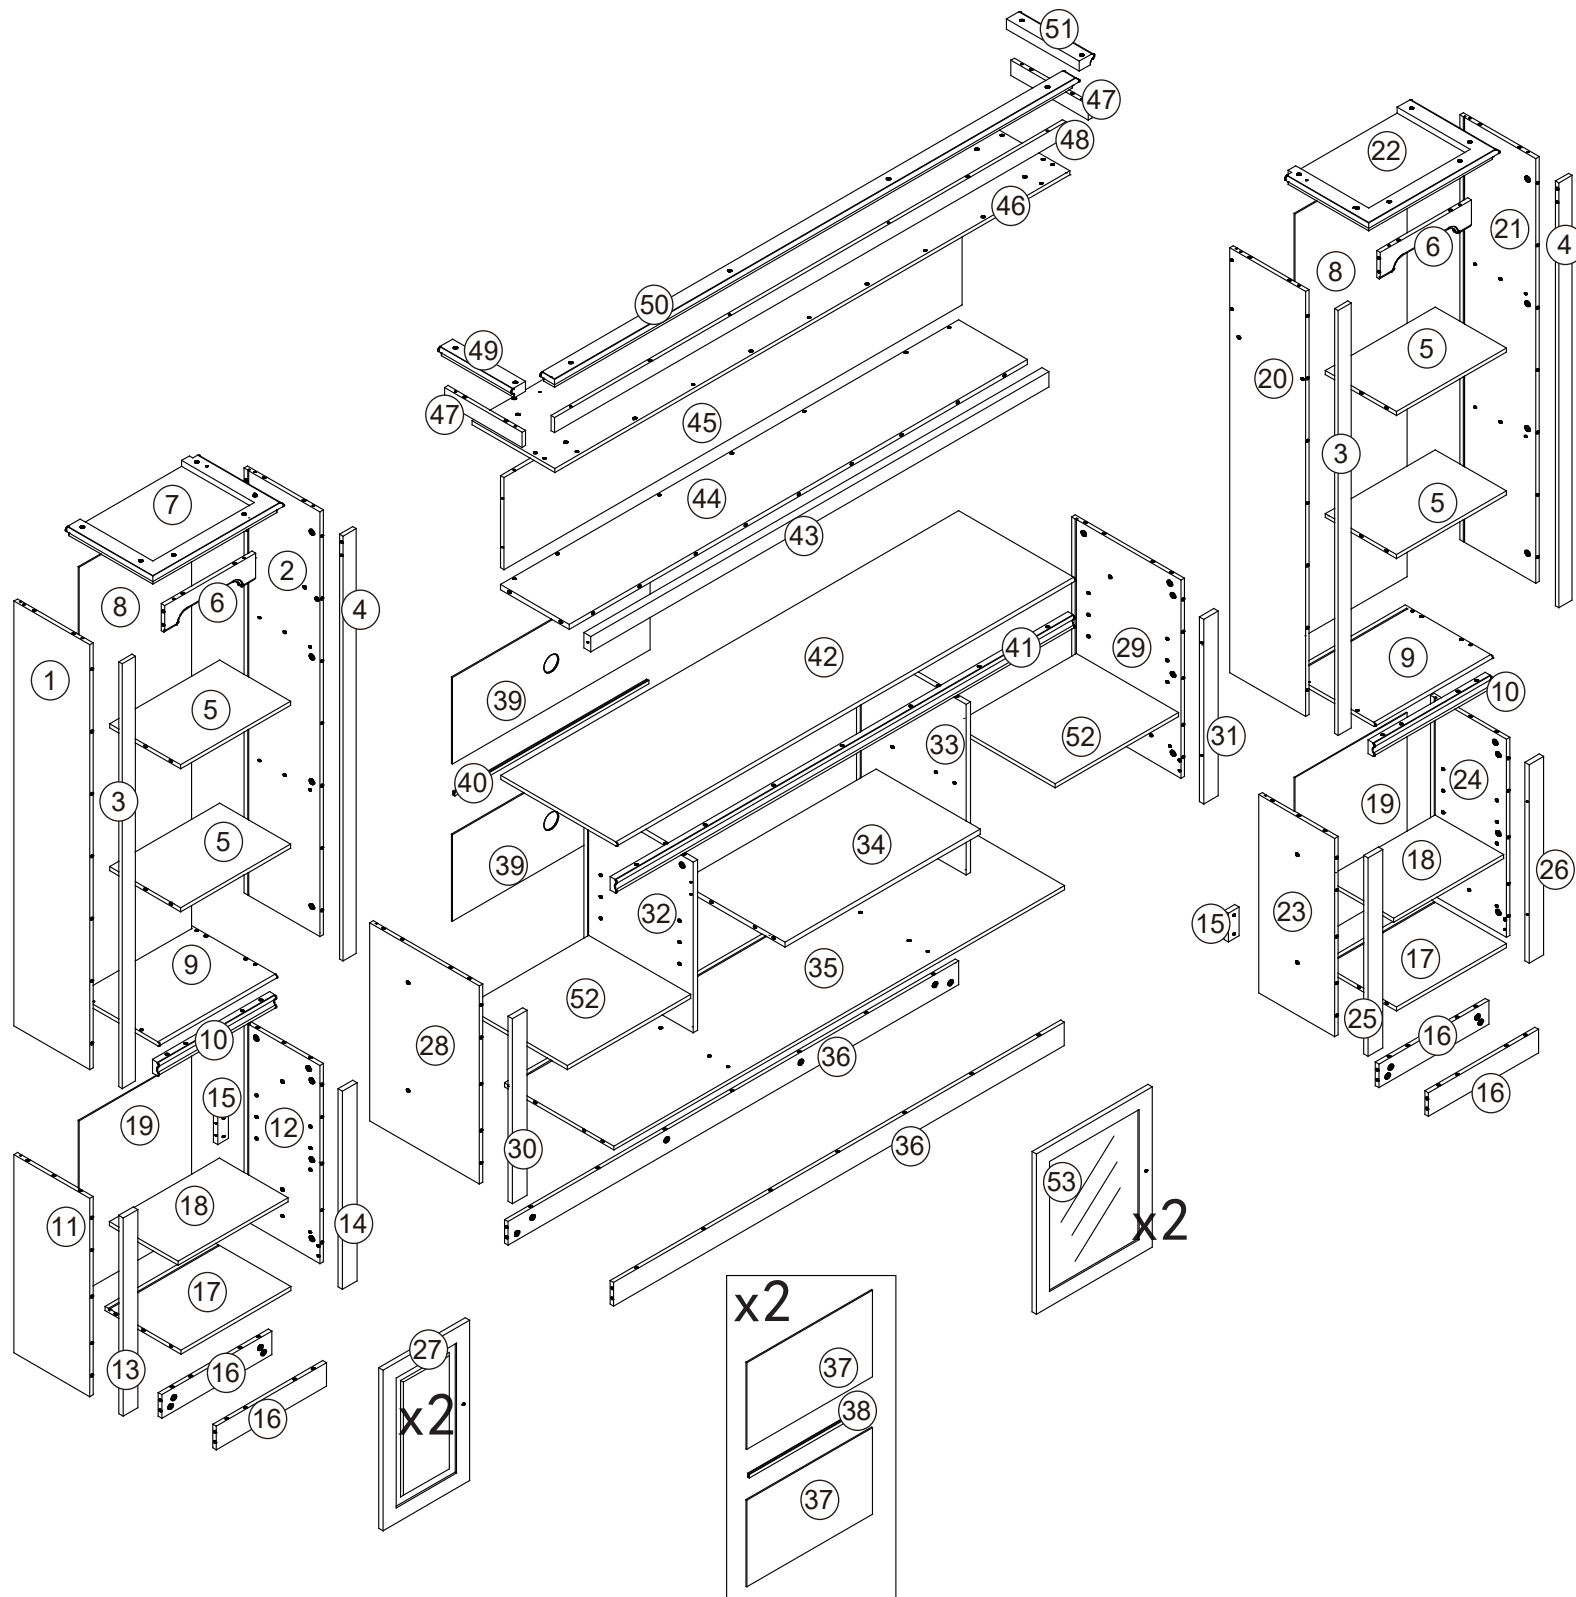


















PART LIST

This product comes in 2 box.

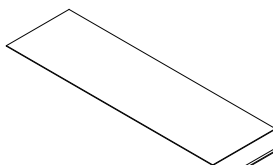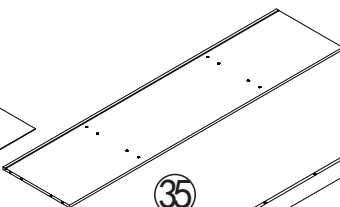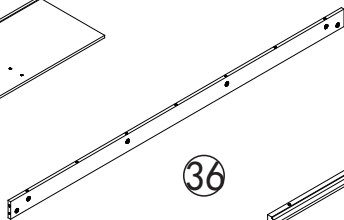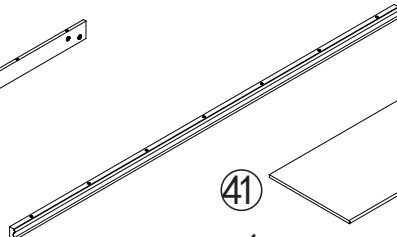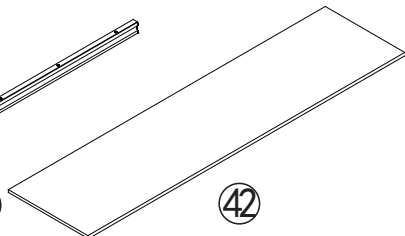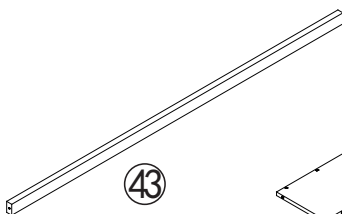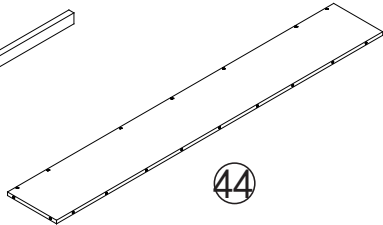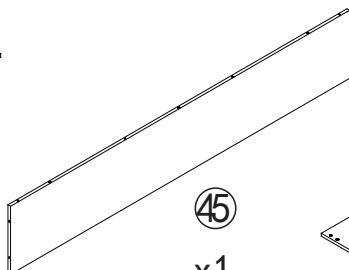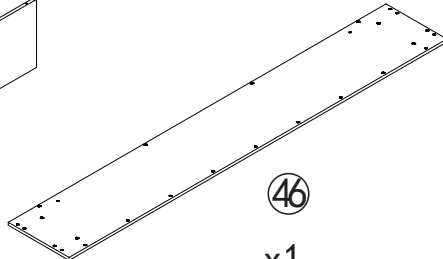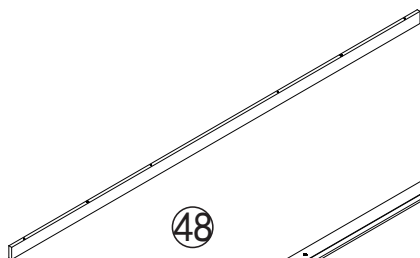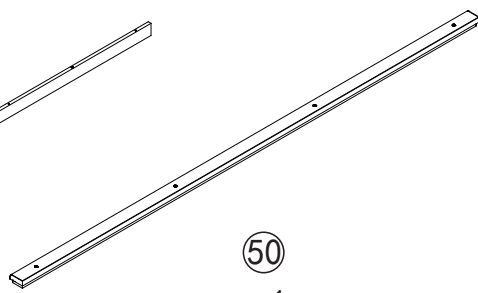 ⑧ x2 1210x200x15mm	 ③⑤ x1 1545x375x12mm	 ③⑥ x2 1545x70x12mm	 ④① x1 1570x40x21mm	 ④② x1 1570x400x12mm
 ④③ x1 1571x45x24mm	 ④④ x1 1571x236x15mm	 ④⑤ x1 1571x273x12mm	 ④⑥ x1 1766x284x12mm	
 ④⑧ x1 1754x45x12mm	 ⑤① x1 1799x50x30mm			


PART LIST

This product comes in 2 box.

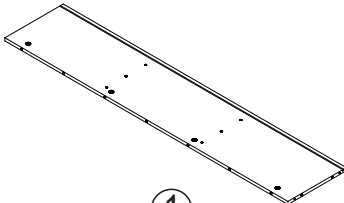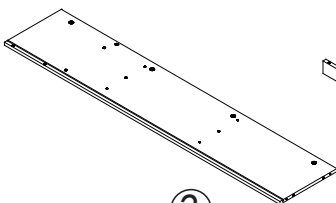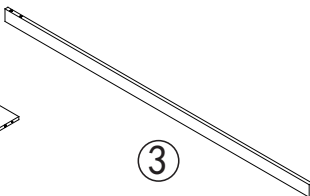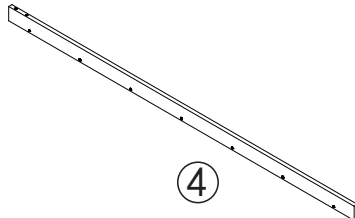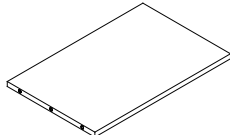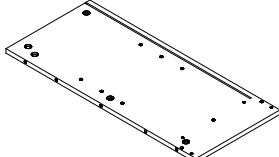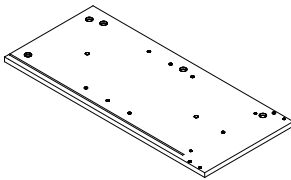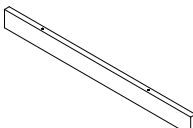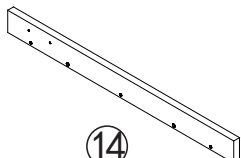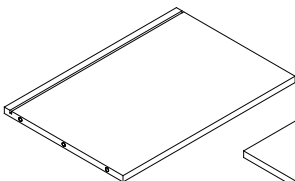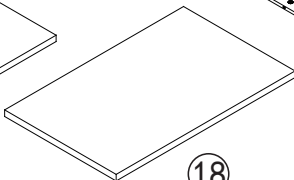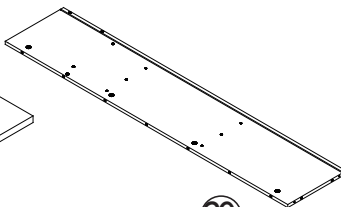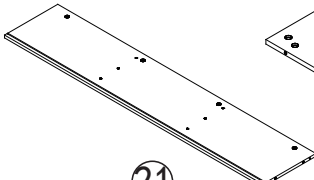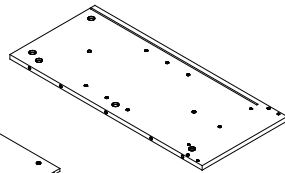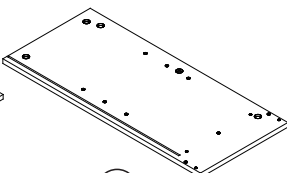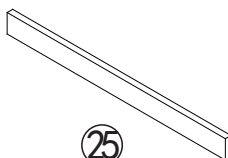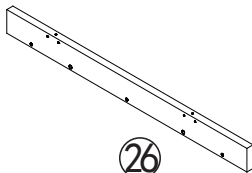 ① x1 1260x260x12mm	 ② x1 1260x260x12mm	 ③ x2 1260x45x12mm	 ④ x2 1260x45x12mm	
 ⑤ x4 377x243.5x12mm	 ⑪ x1 588x260x12mm	 ⑫ x1 588x260x12mm	 ⑬ x1 588x50x15mm	
 ⑭ x1 588x50x15mm	 ⑮ x2 433x80x40mm	 ⑰ x2 377x260x12mm	 ⑱ x2 375x235x12mm	 ⑳ x1 1260x260x12mm
 ㉑ x1 1260x260x12mm	 ㉓ x1 588x260x12mm	 ㉔ x1 588x260x12mm	 ㉕ x1 588x50x15mm	 ㉖ x1 594x384x15mm


















PART LIST

This product comes in 2 box.

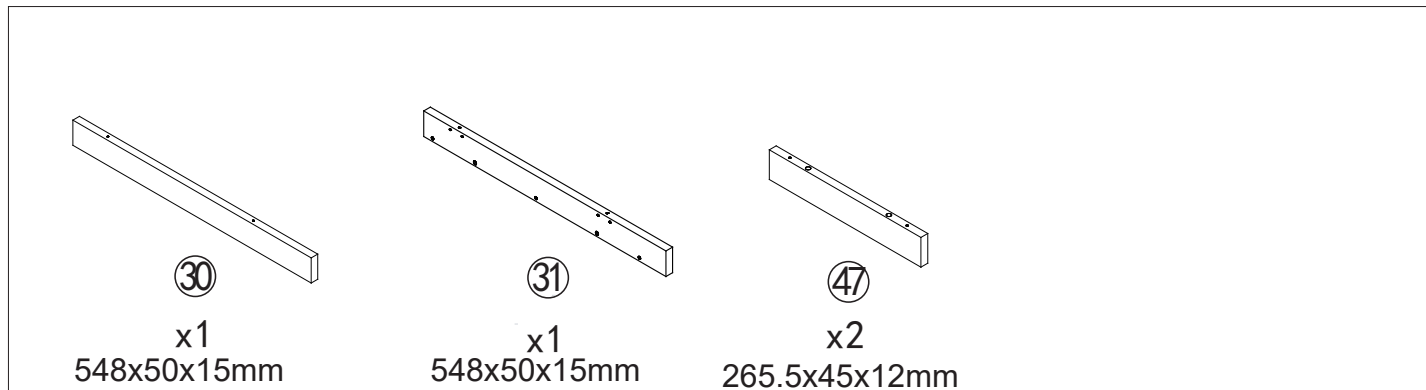


PART LIST

This product comes in 2 box.

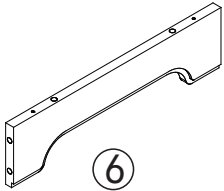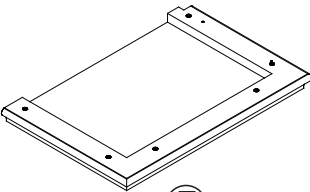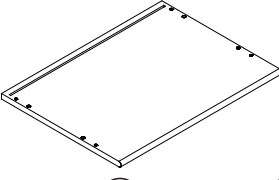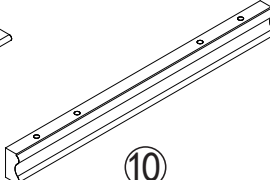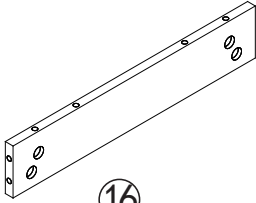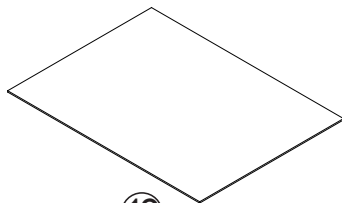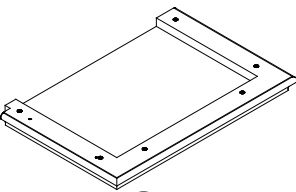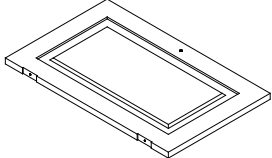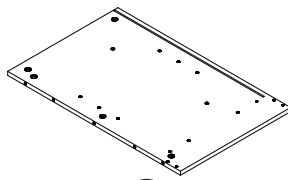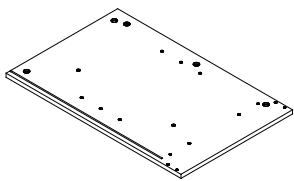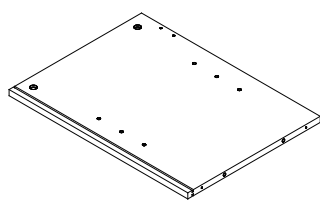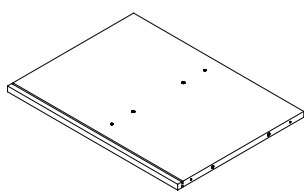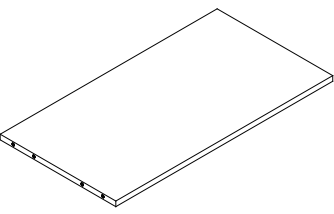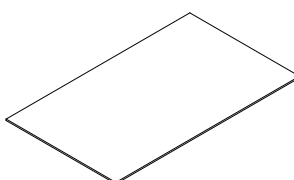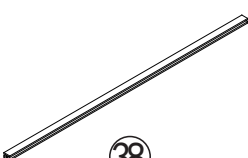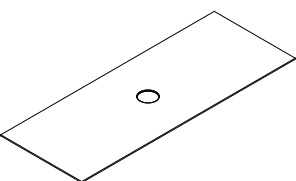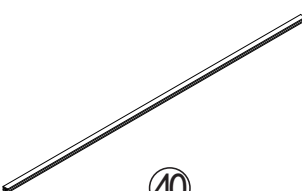 ⑥ x2 312x80x12mm	 ⑦ x1 448x300x30mm	 ⑨ x2 402x300 x12mm	 ⑩ x2 402x40x21mm	 ⑪ x4 377x70x12mm
 ⑲ x2 514x385x3mm	 ⑳ x1 448x300x30mm	 ㉑ x2 475.5x297x15mm	 ㉒ x1 588x375x12mm	
 ㉓ x1 588x375x12mm	 ㉔ x1 506x375x15mm	 ㉕ x1 506x375x15mm	 ㉖ x1 670x357x15mm	
 ㉗ x4 430.5x257x3mm	 ㉘ x2 417mm	 ㉙ x2 678x257x3mm	 ㉚ x1 665mm	


PART LIST

This product comes in 2 box.

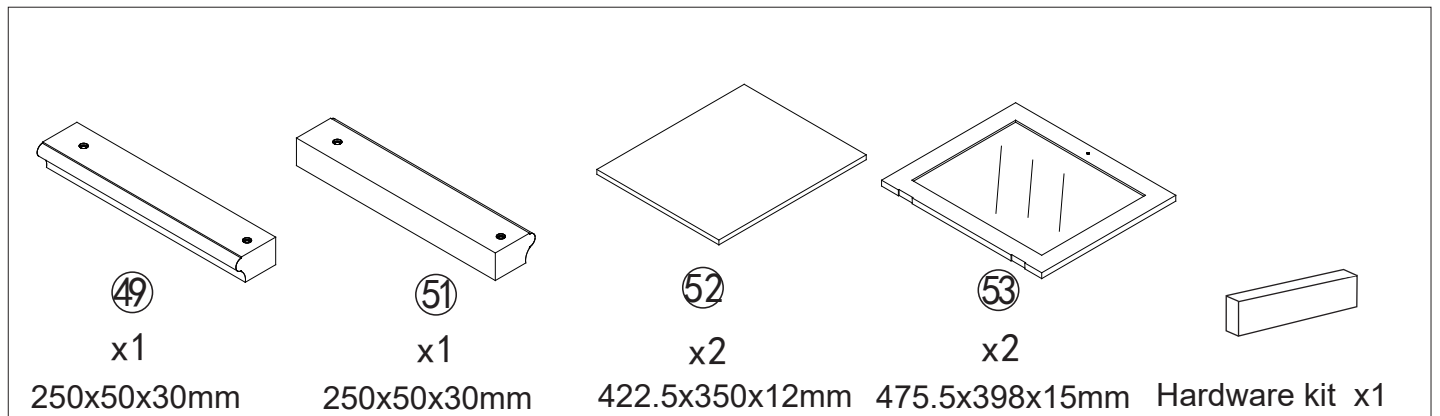


Assembly Instructions

Step 1

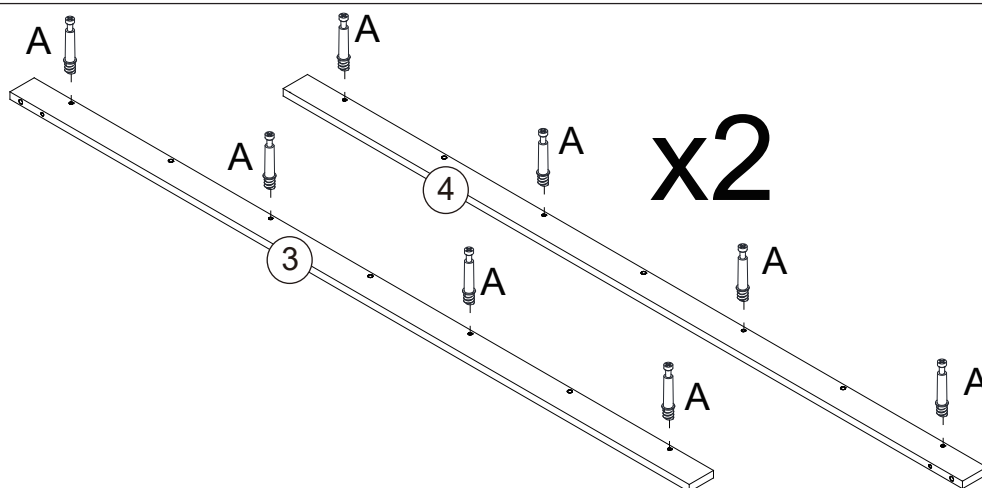


(A)



Cam Bolt x 16

Step 2

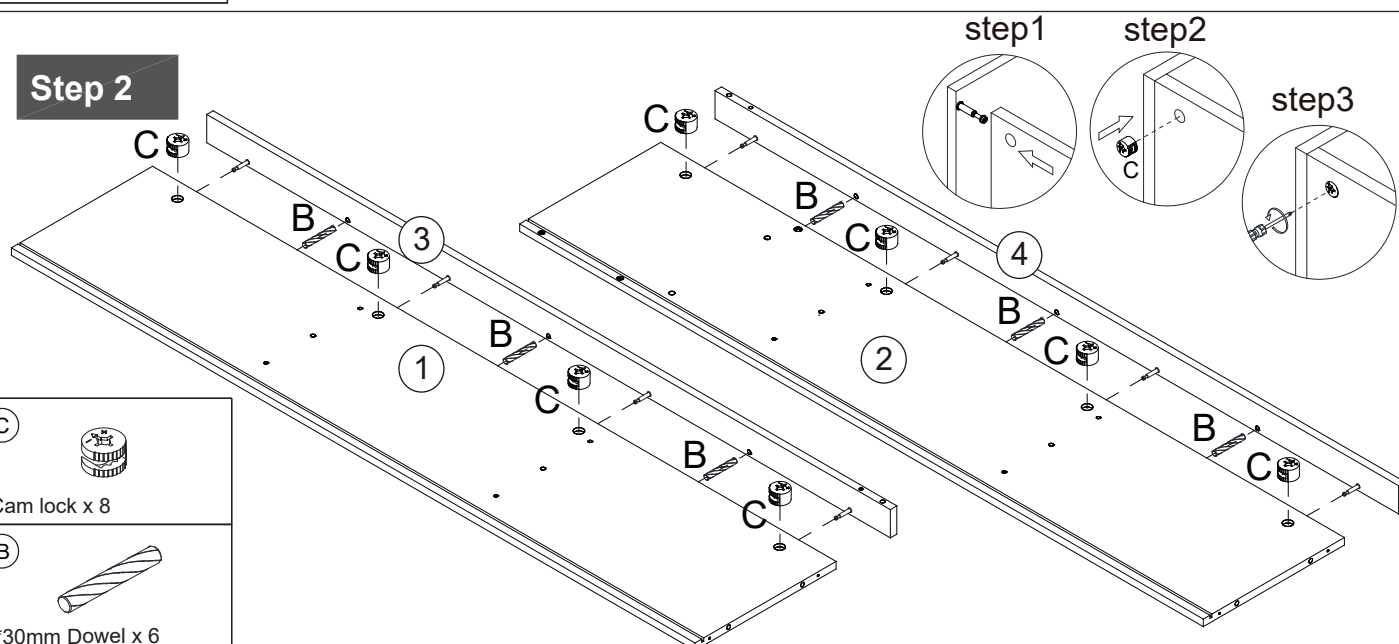

(C)




Cam lock x 8

(B)




6*30mm Dowel x 6

Step 3

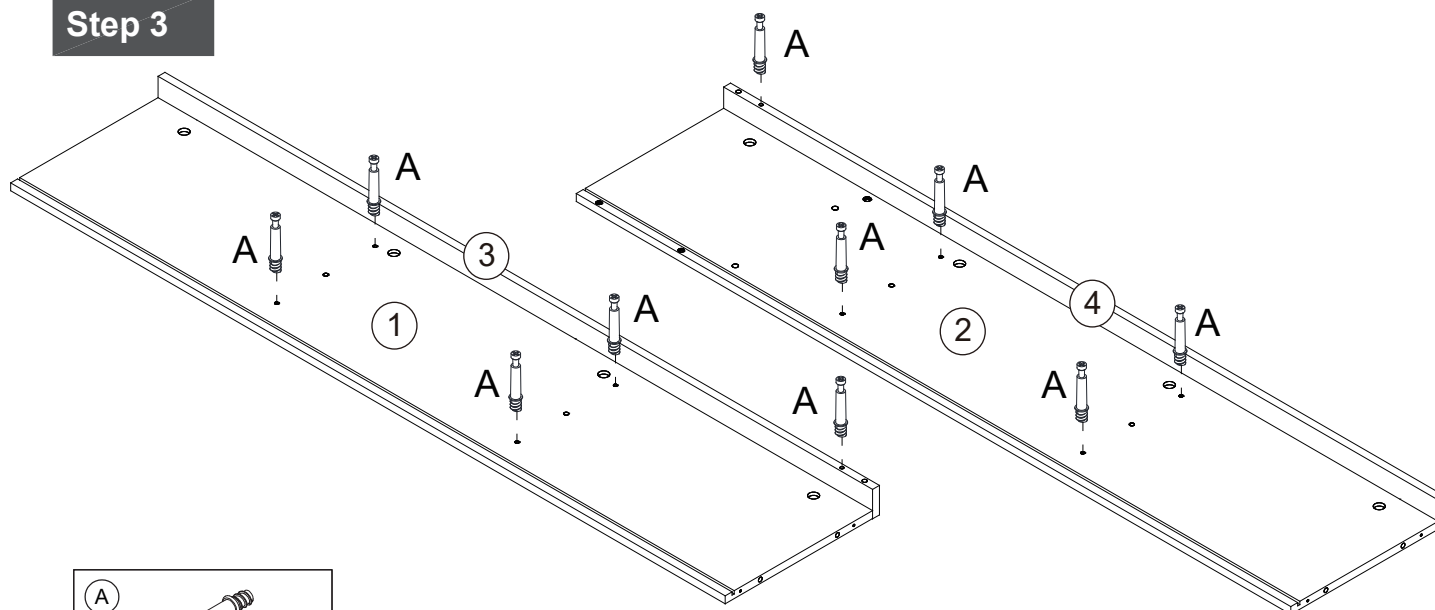




(A)





Cam Bolt x 10

Assembly Instructions

Step 4

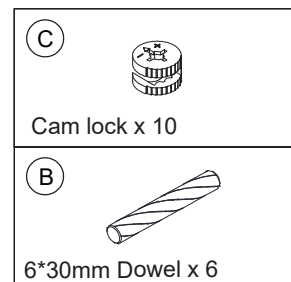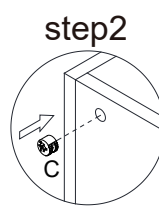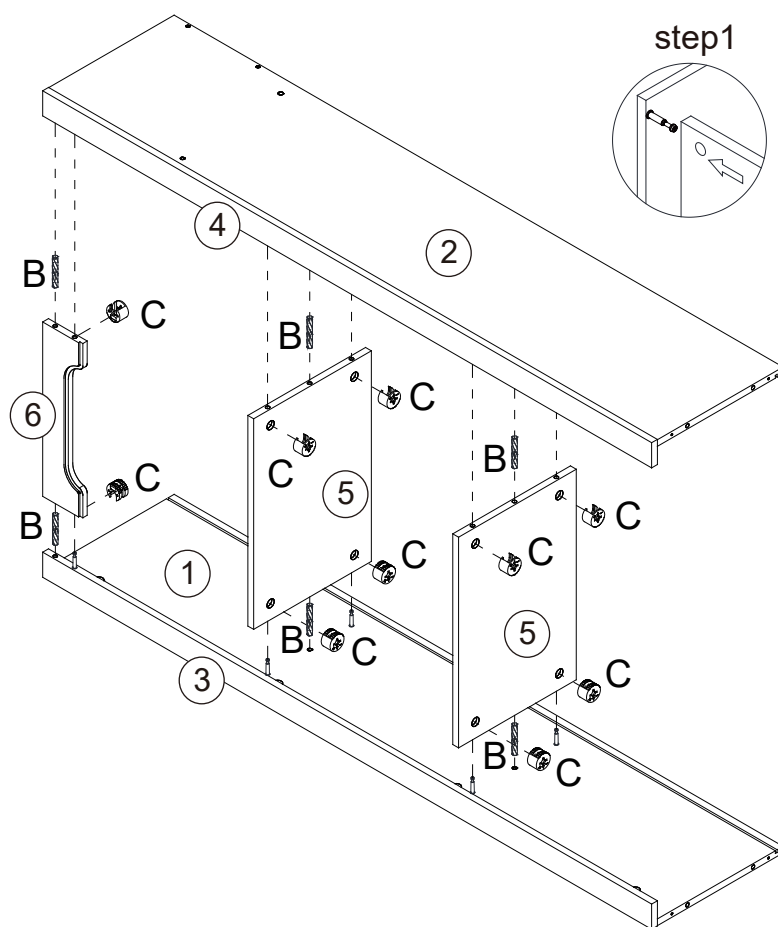


Step 5

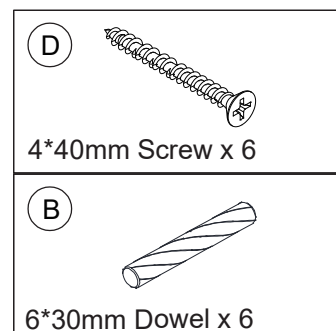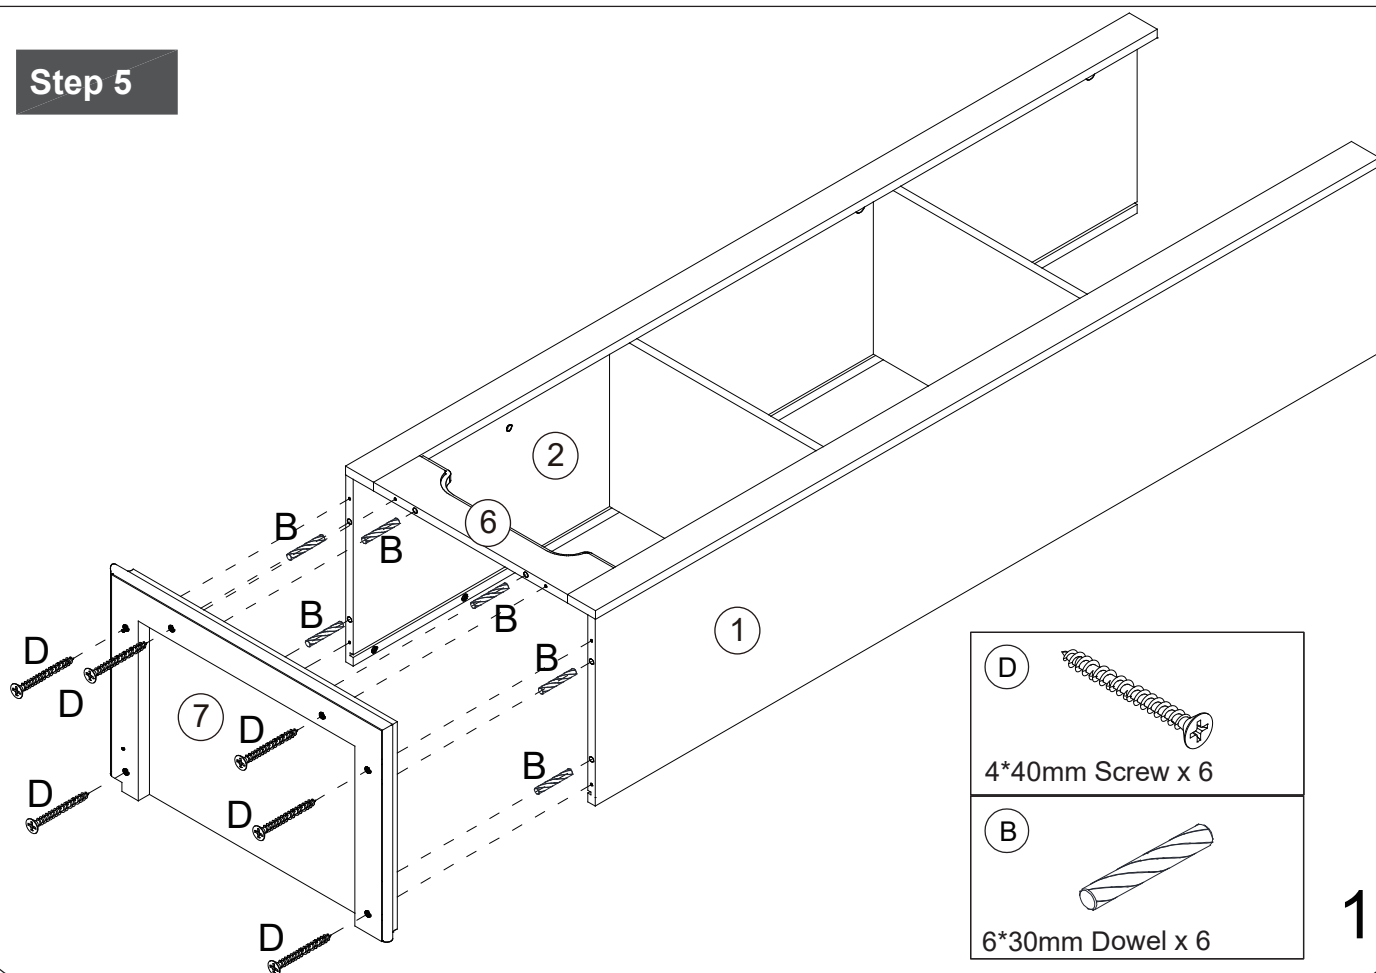


Assembly Instructions




Step 6

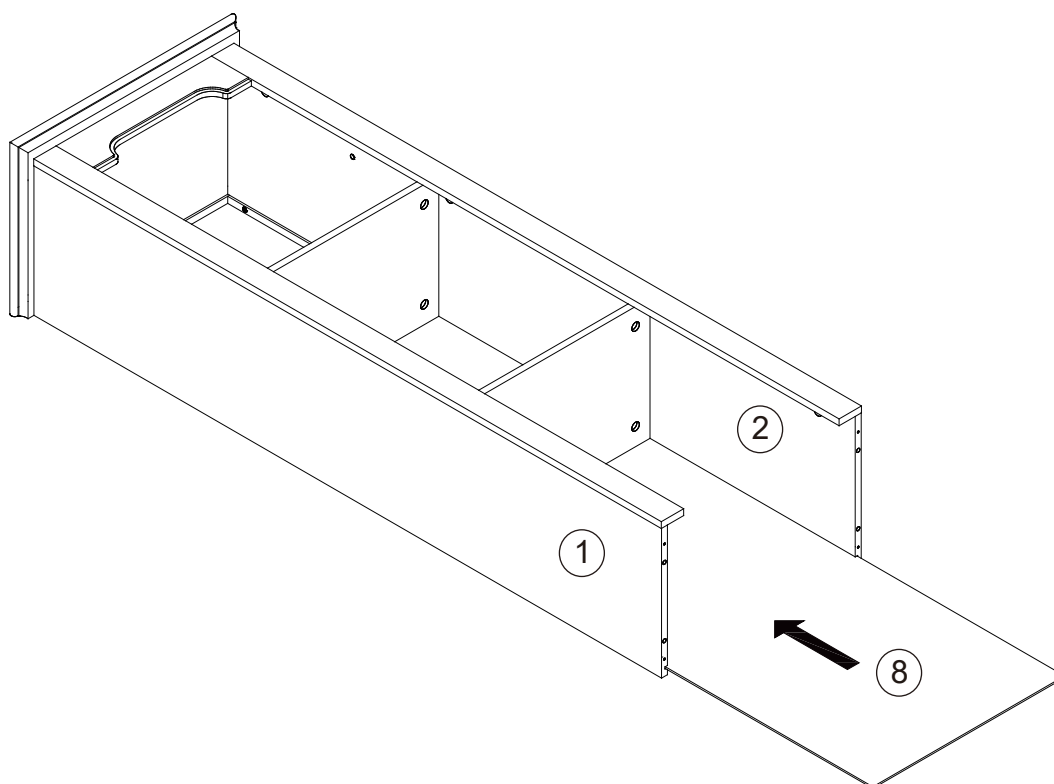

Step 7



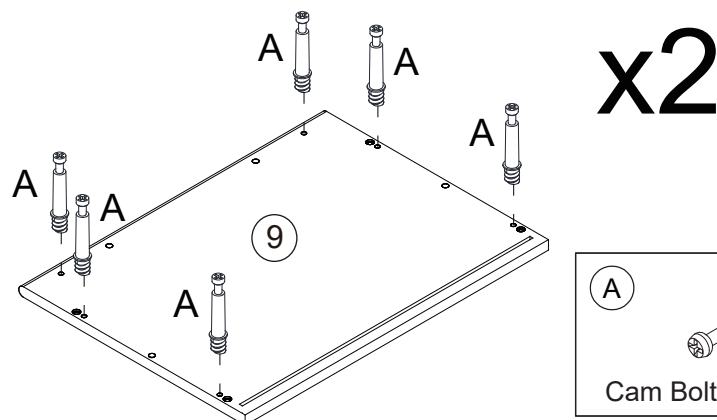


Step 8


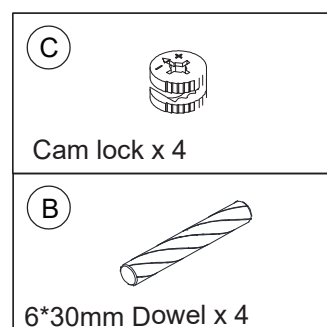
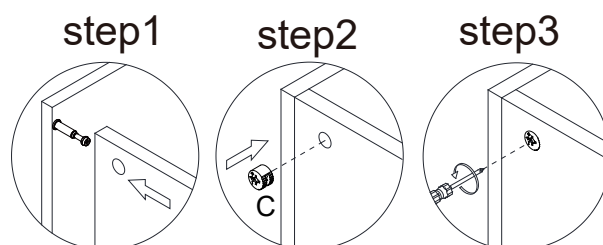
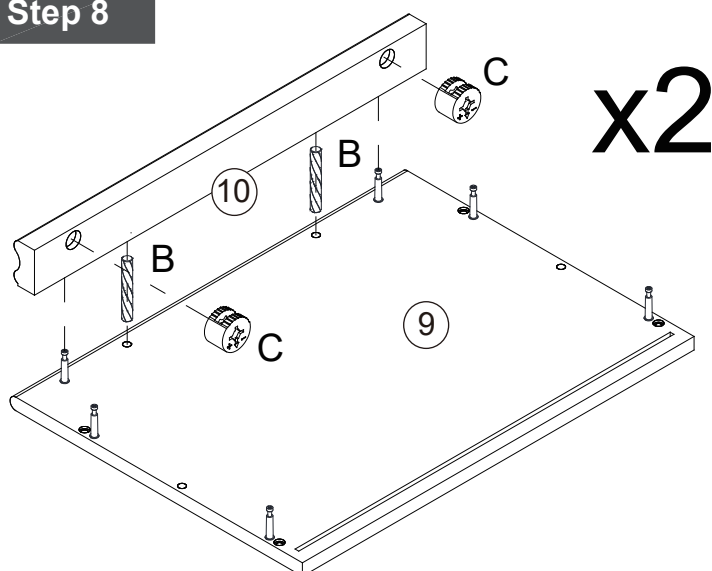


Assembly Instructions

Step 9

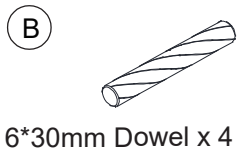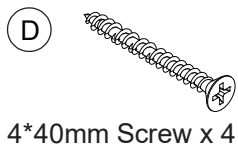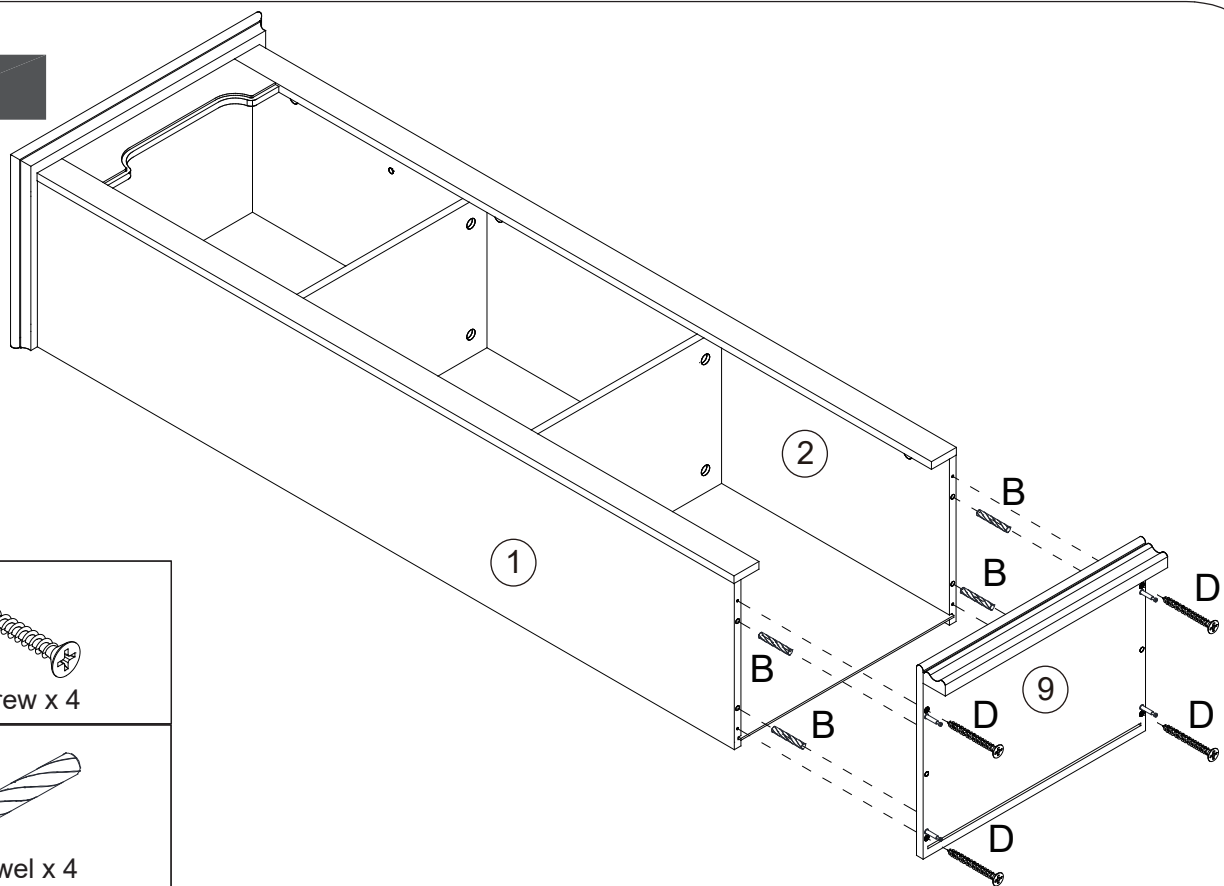


Step 10

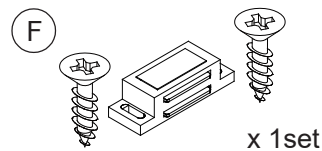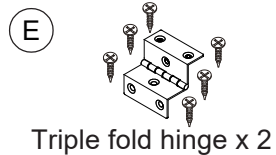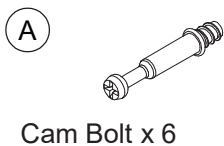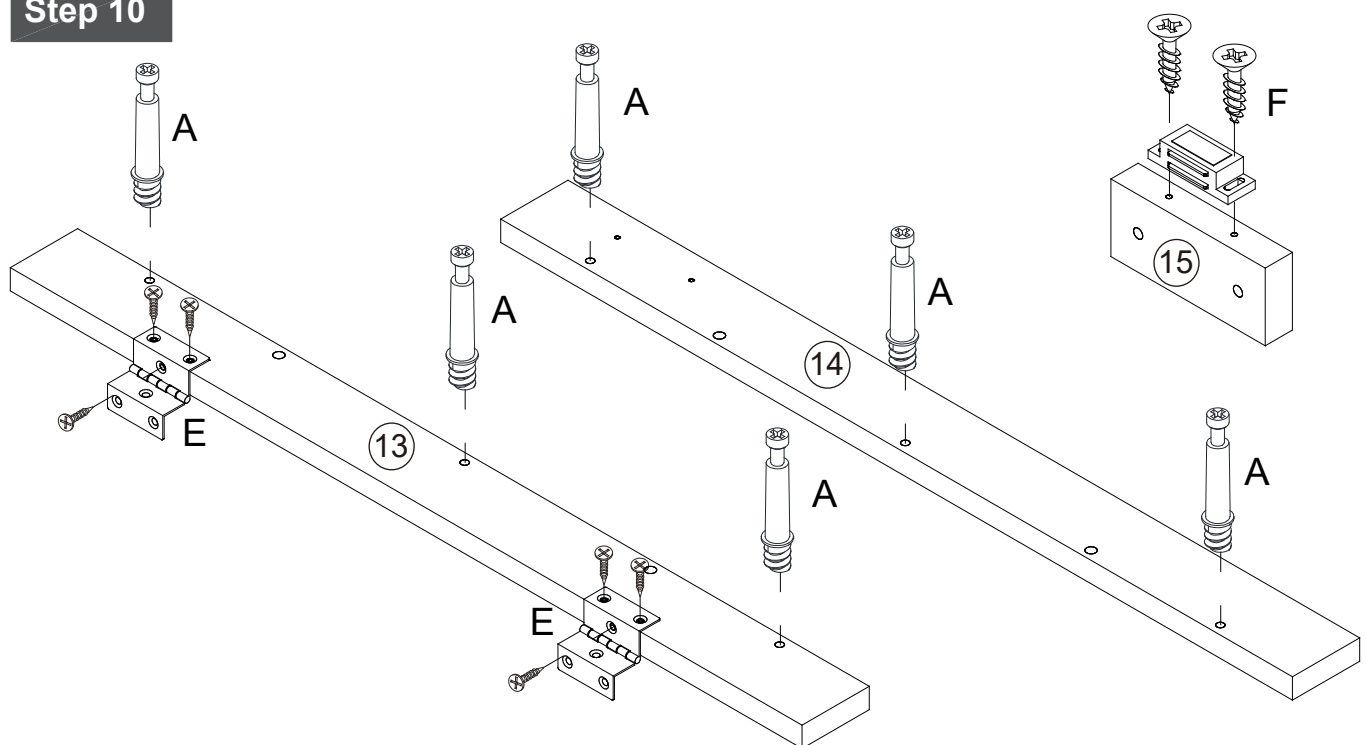


Assembly Instructions


Step 11

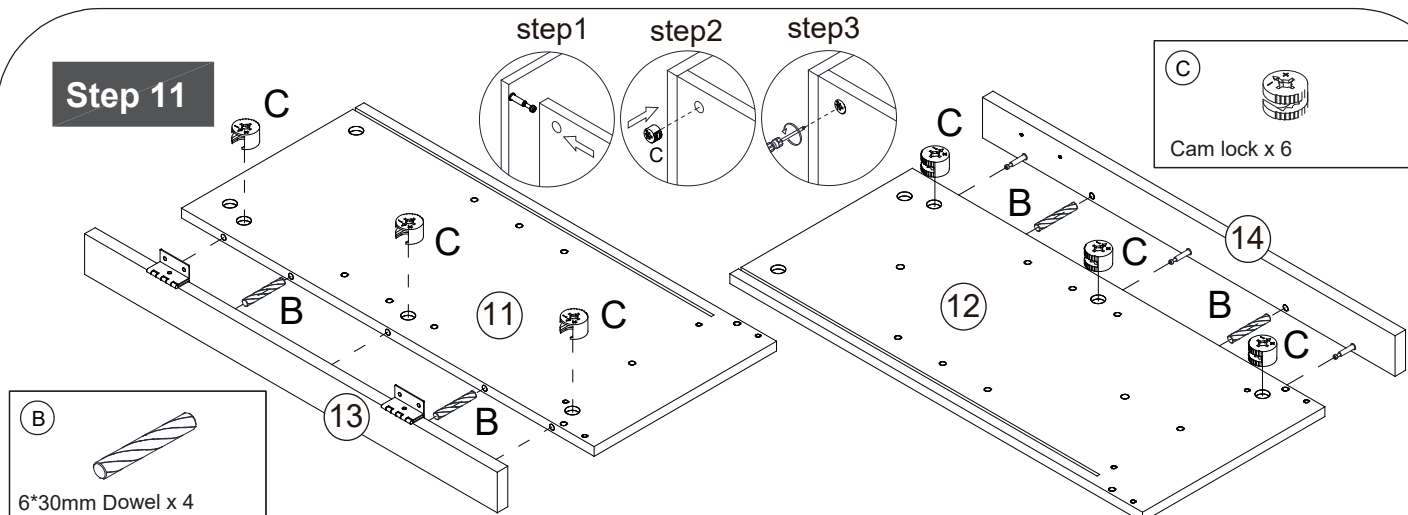

Step 12

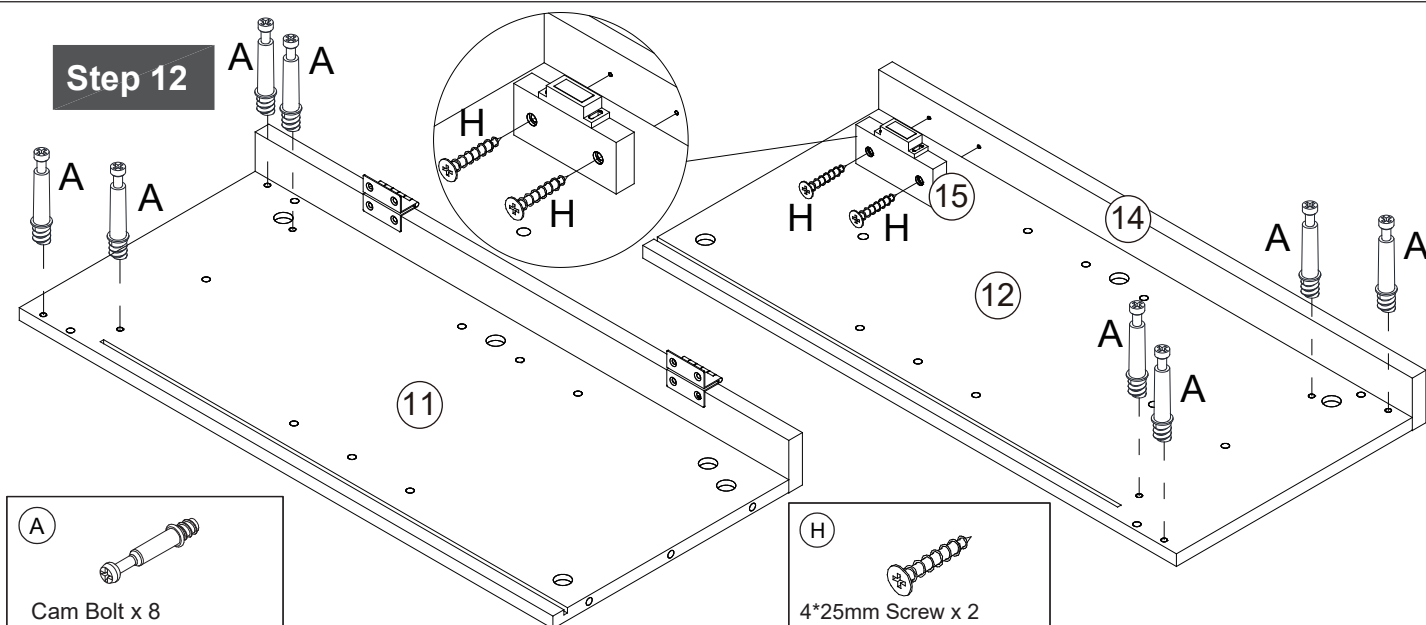


Step 13

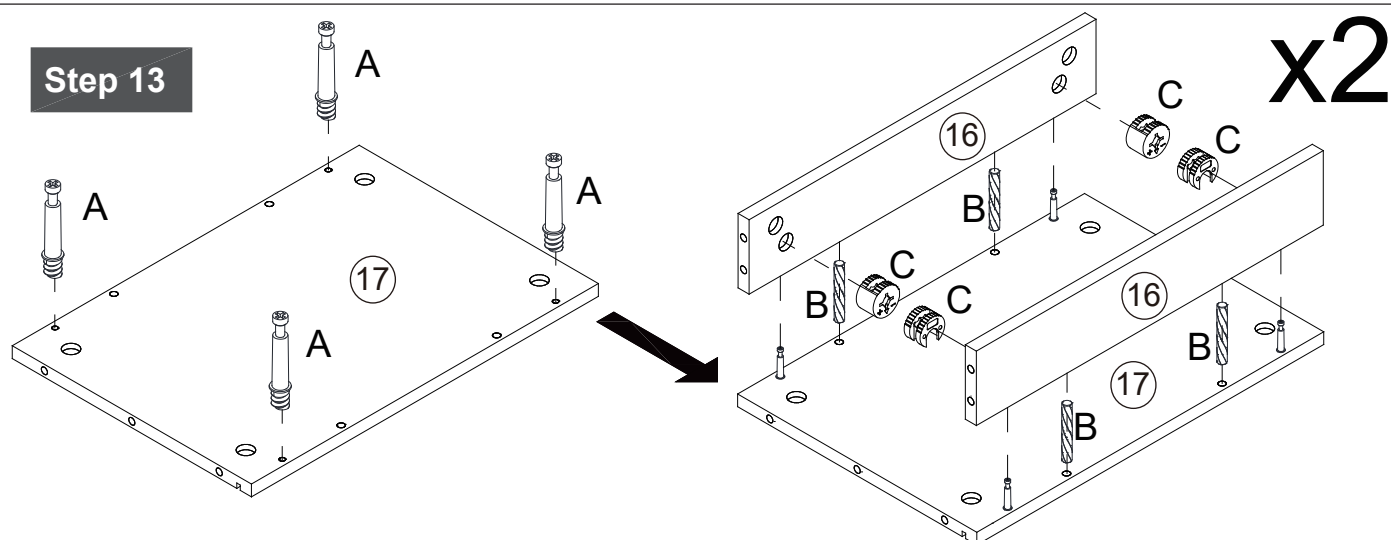

Assembly Instructions


Step 14

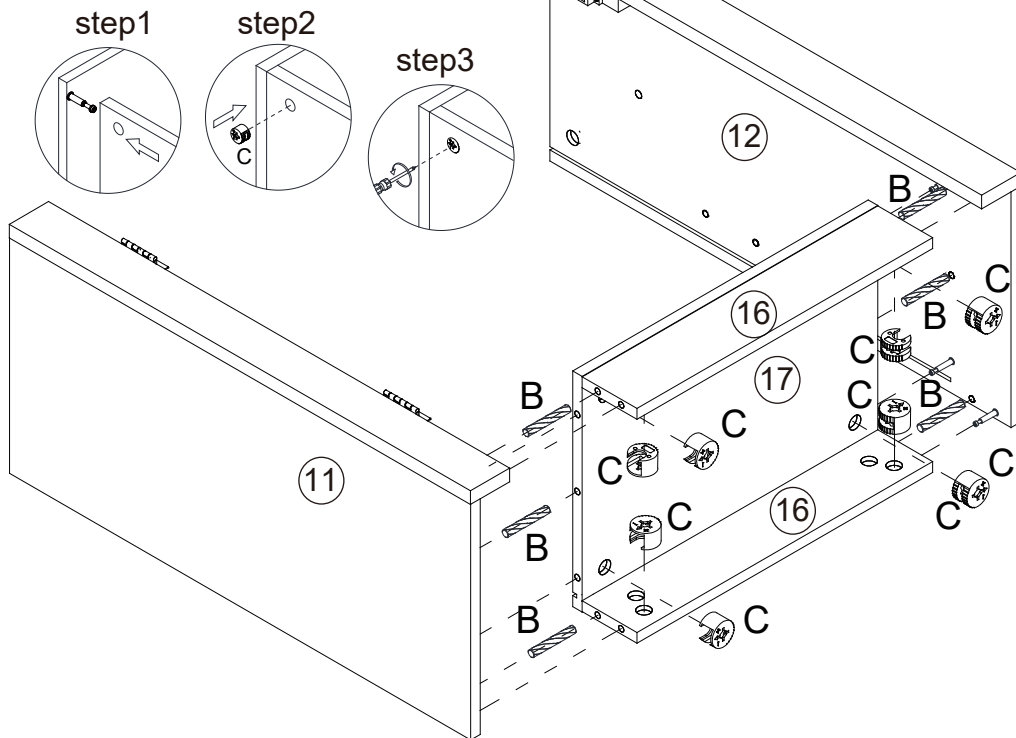

Cam lock x 8

6*30mm Dowel x 6

Step 15

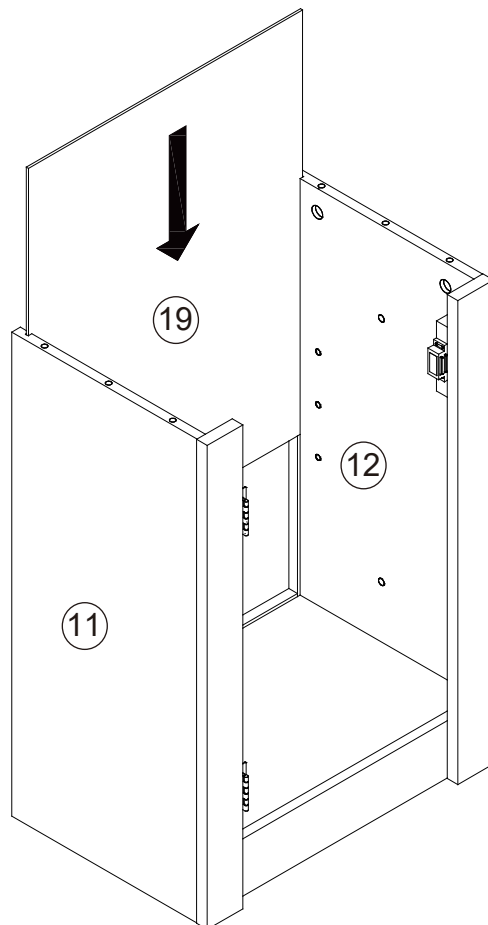

Assembly Instructions

Step 16

step1

step2

step3

©

Cam lock x 4

B

6*30mm Dowel x 2

Step 17



①

Shelf support pin x 4

16


Assembly Instructions

Step 18

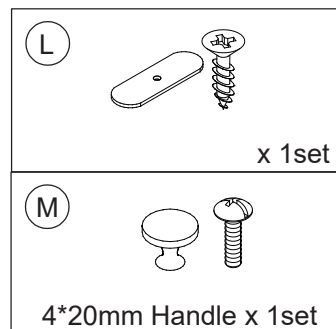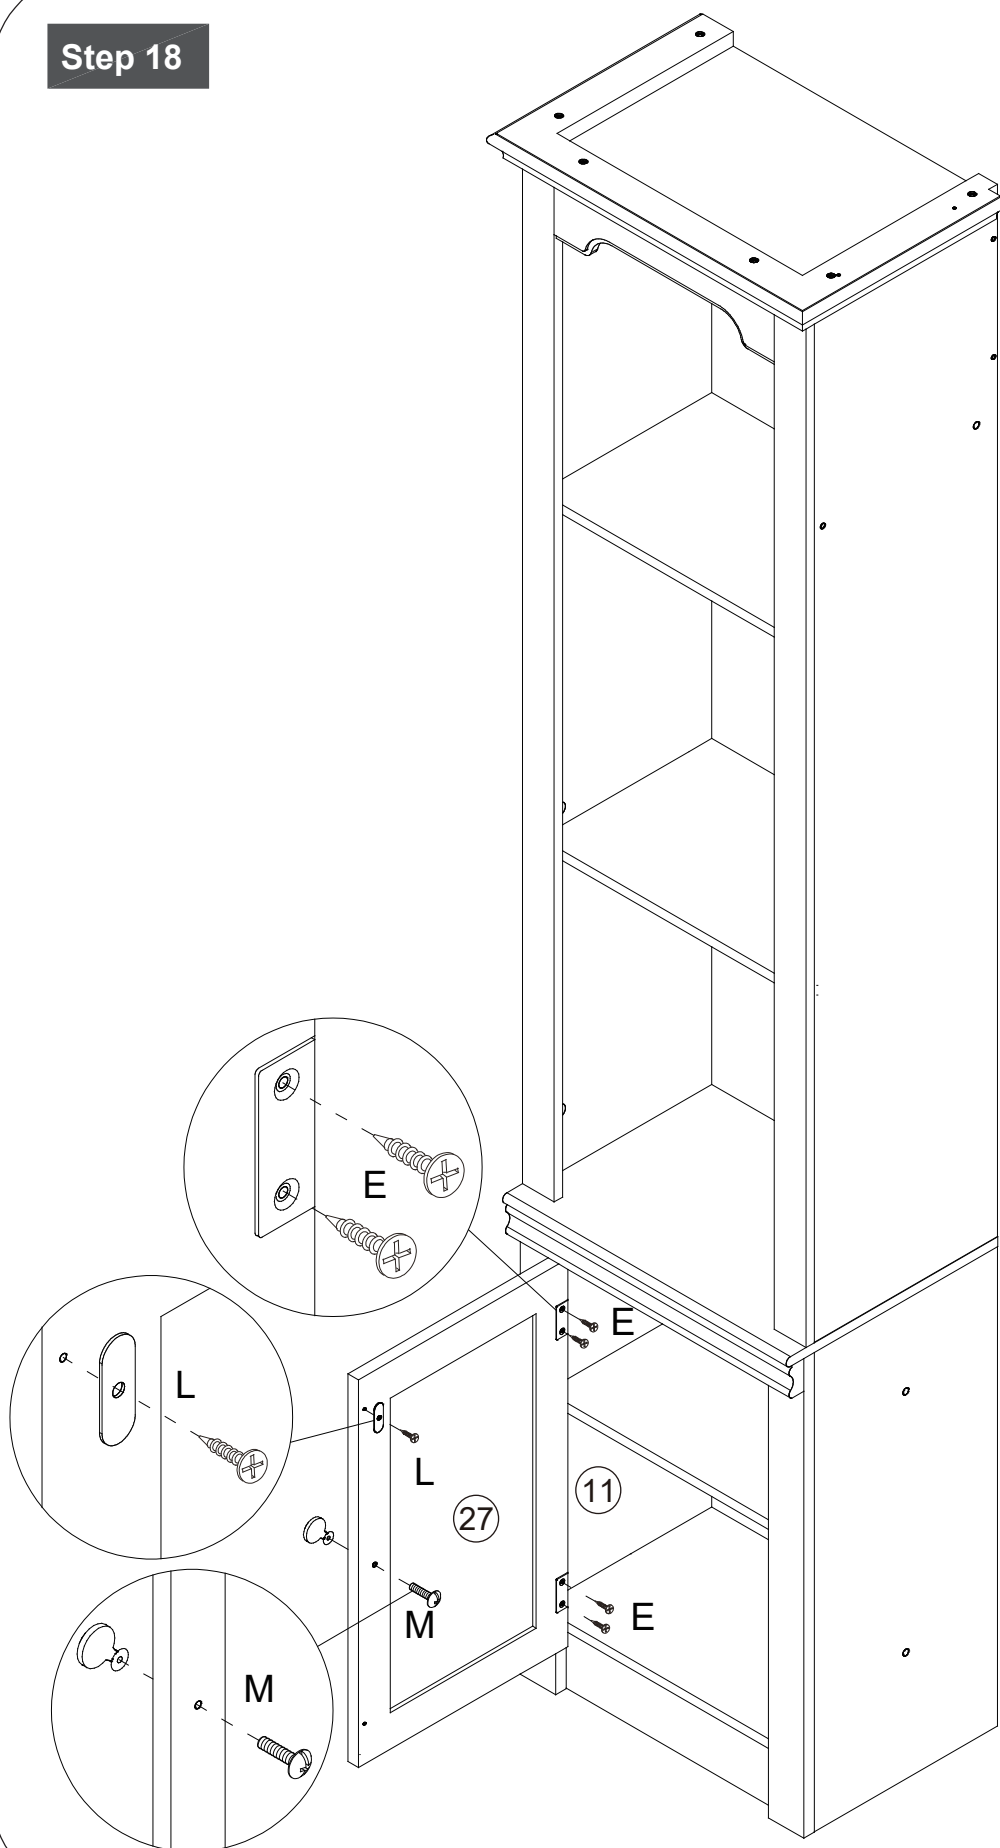


Assembly Instructions



Step 20

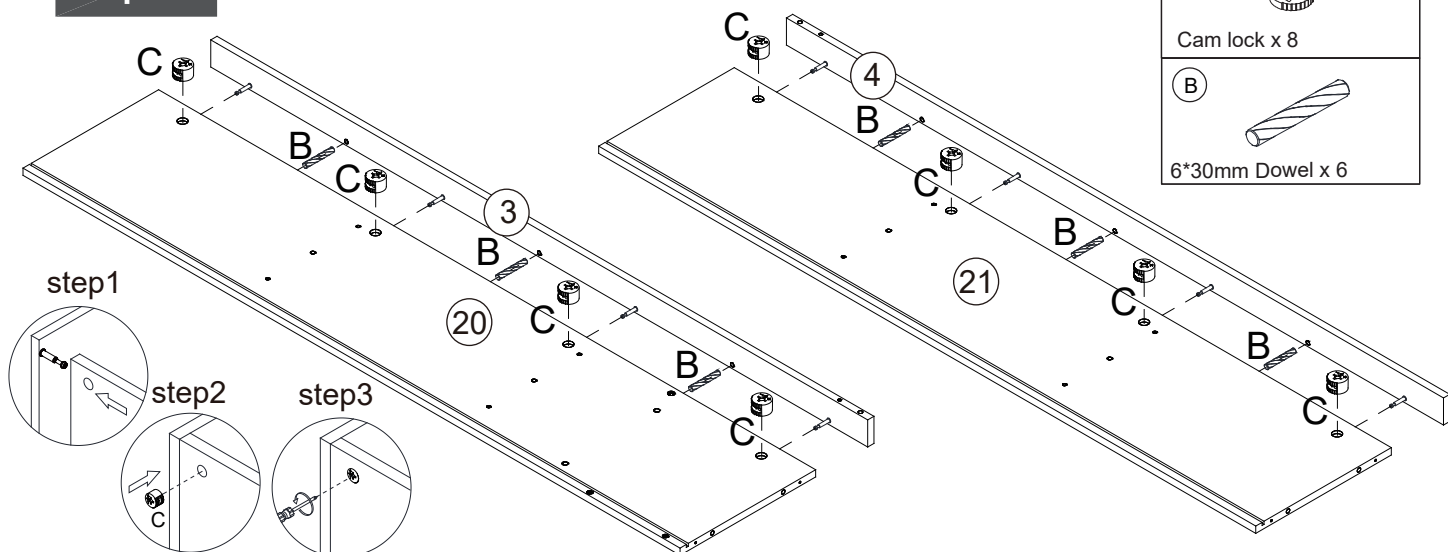

Step 21

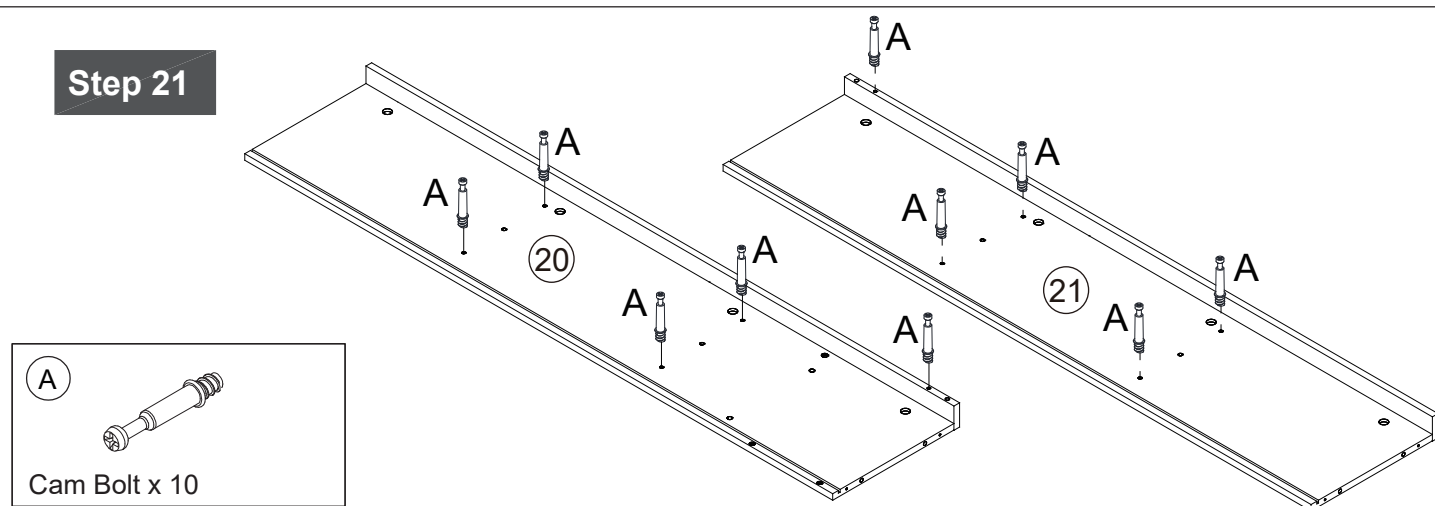


Step 22

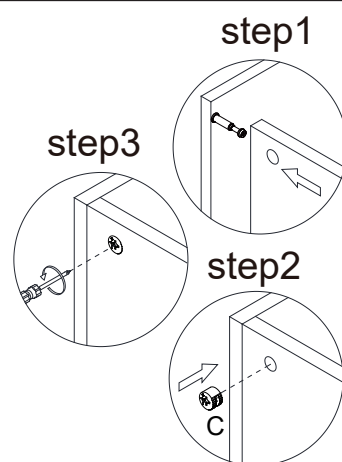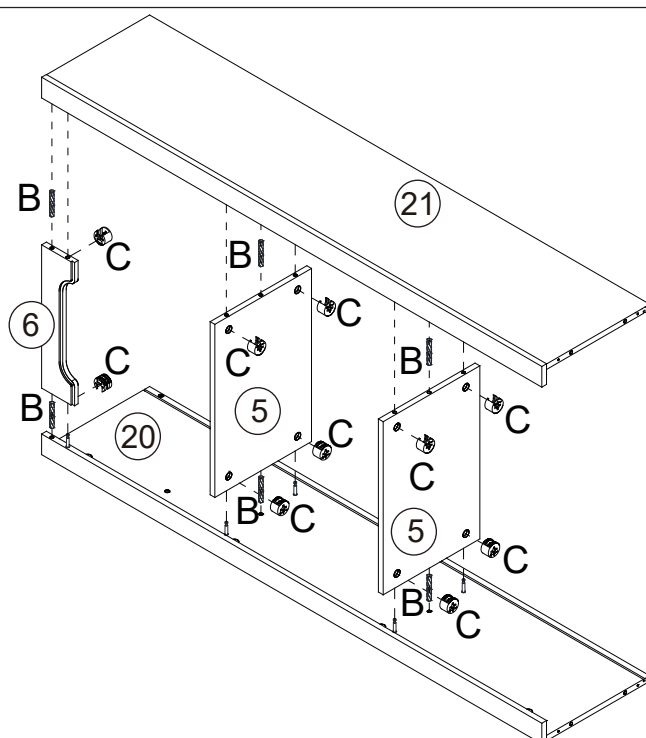


Assembly Instructions

Step 23



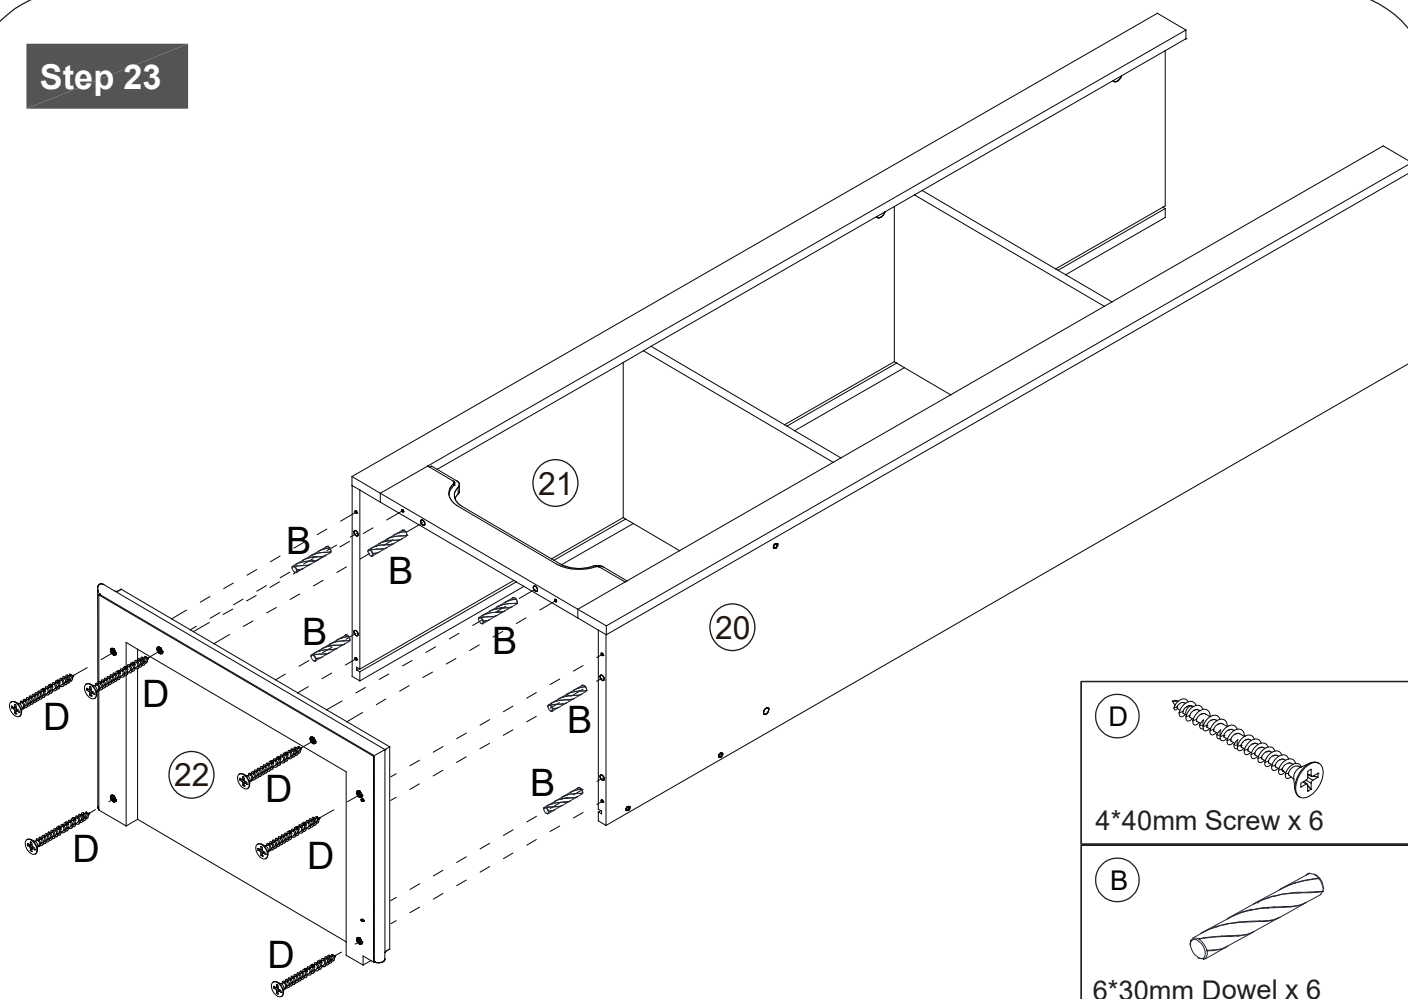


Step 24




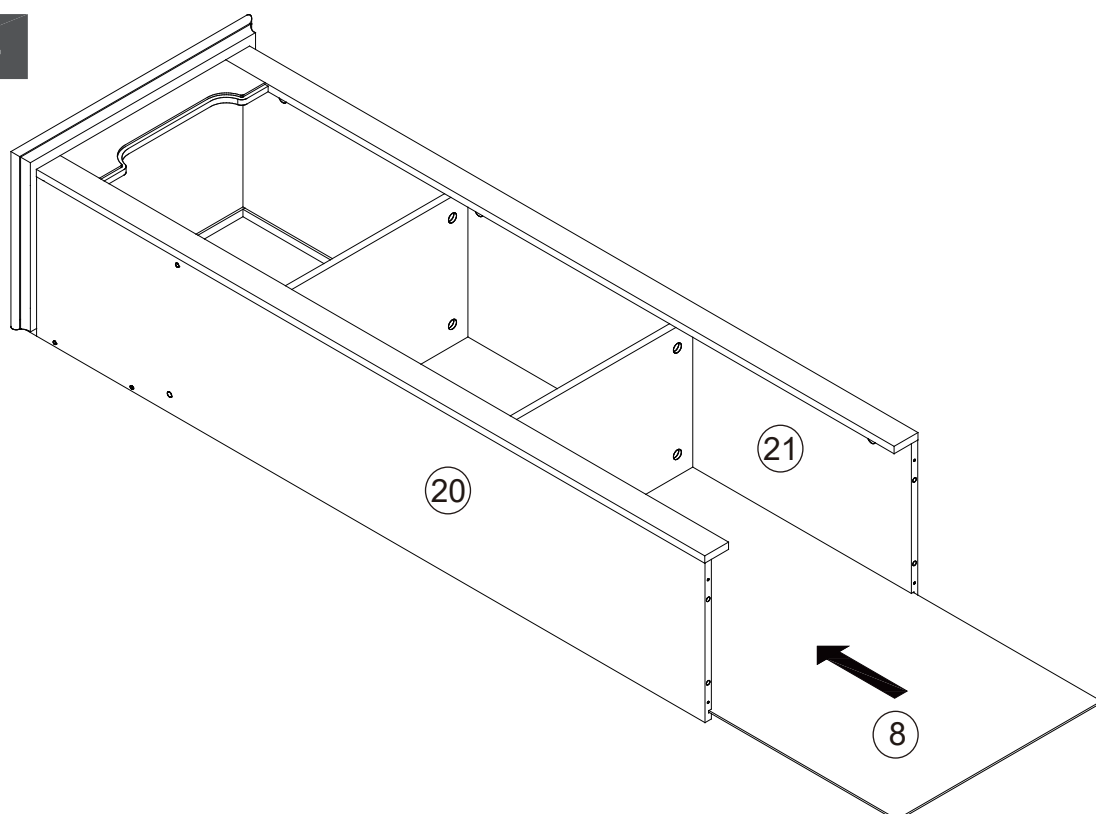


Assembly Instructions

Step 25

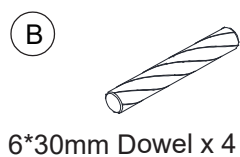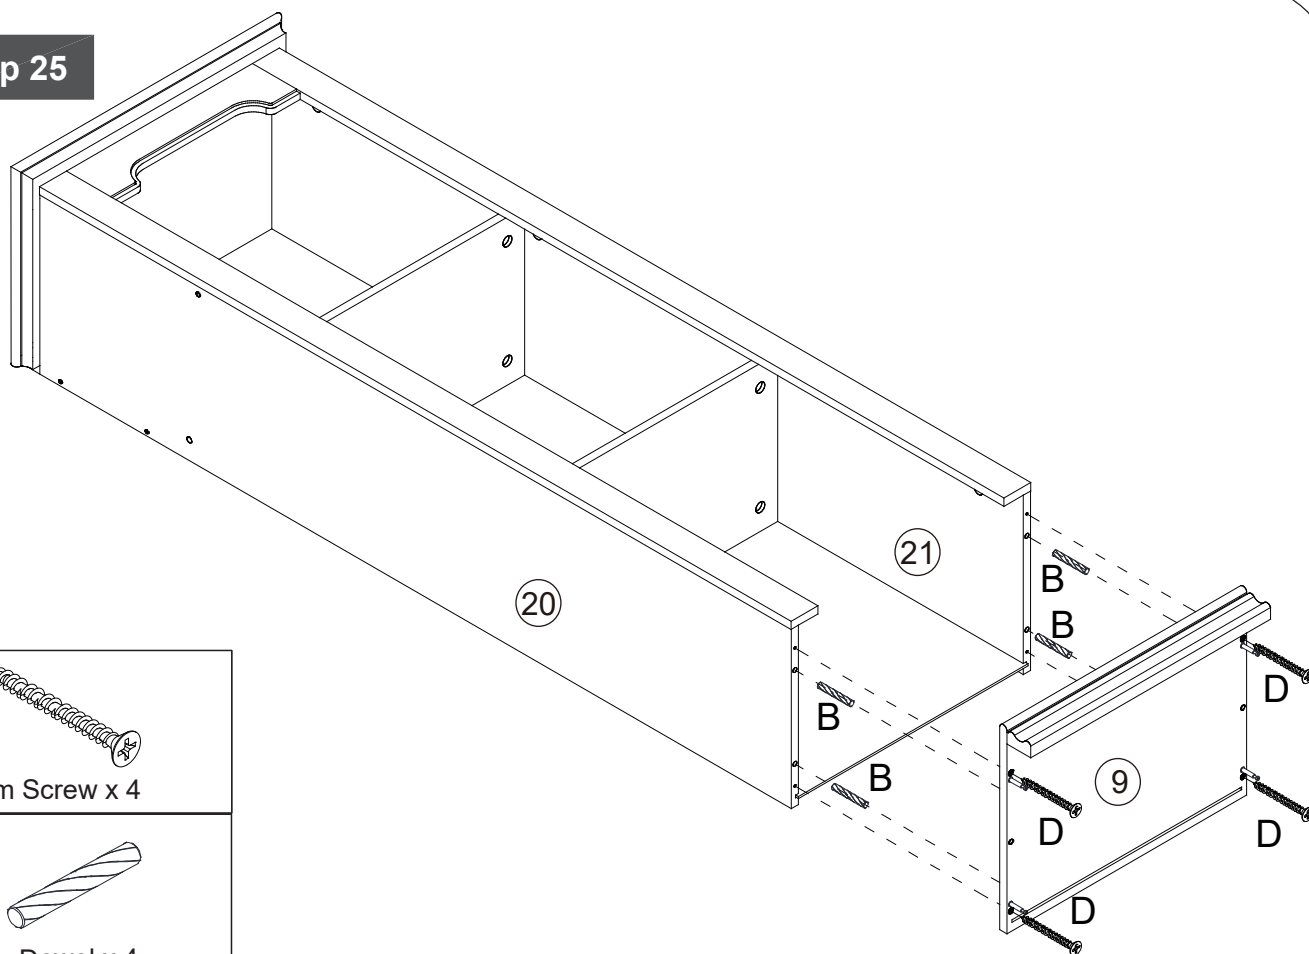


Step 26

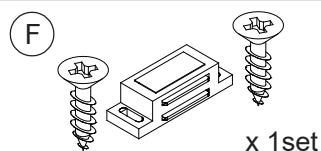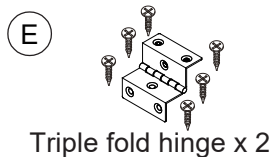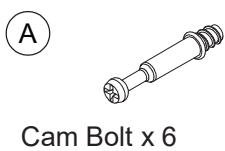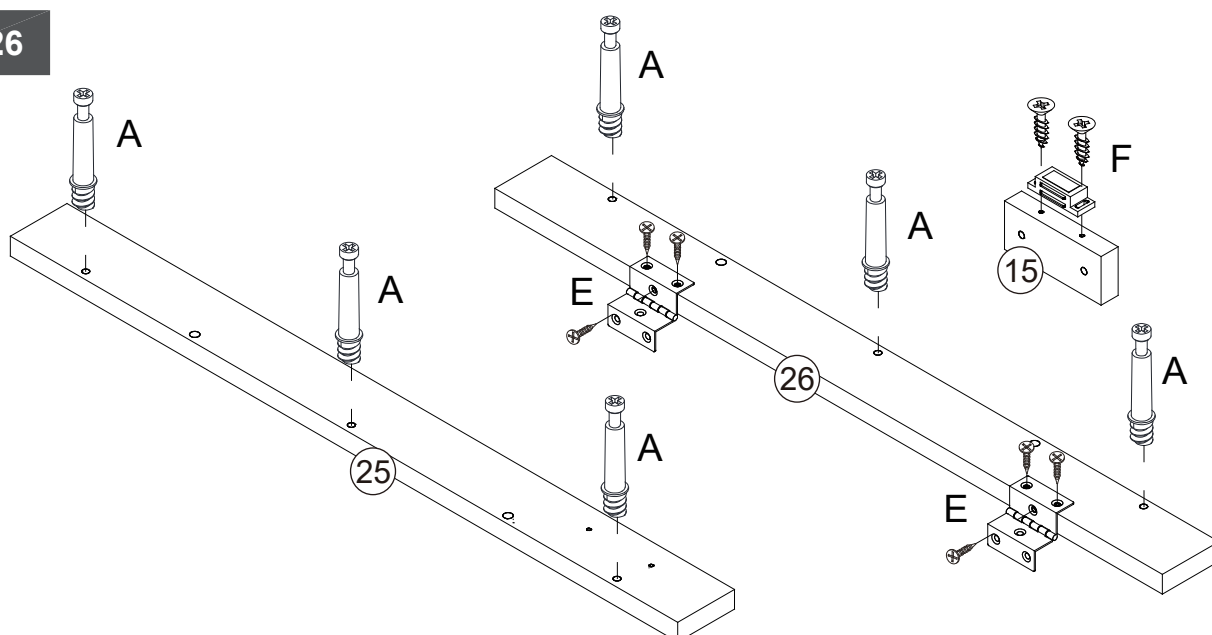


Assembly Instructions


Step 27

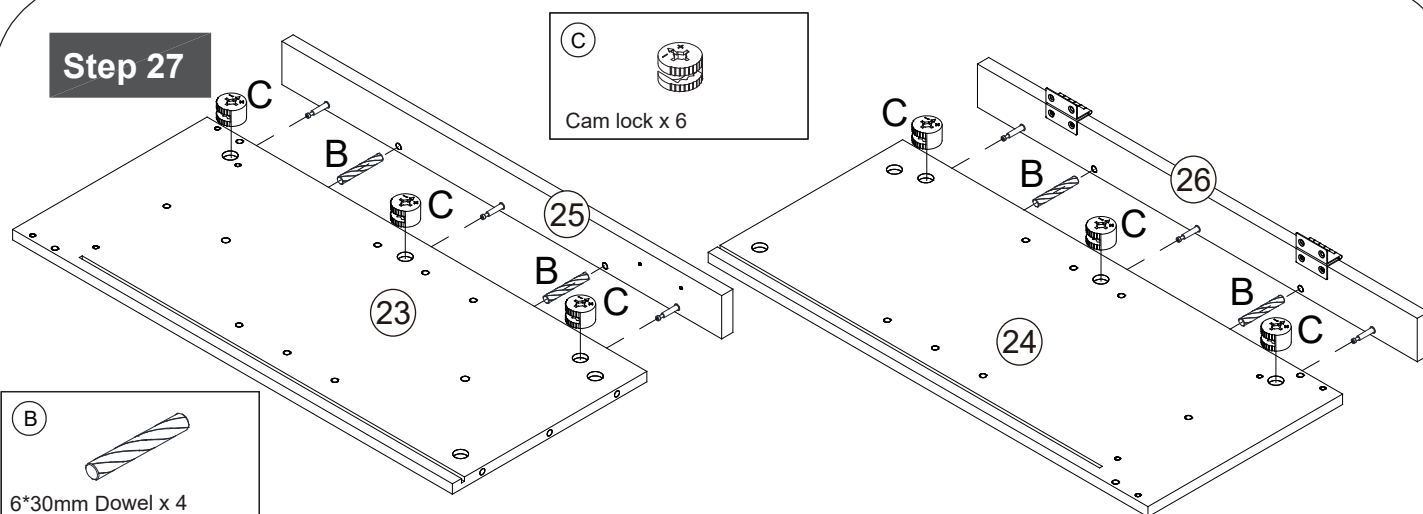

Step 28

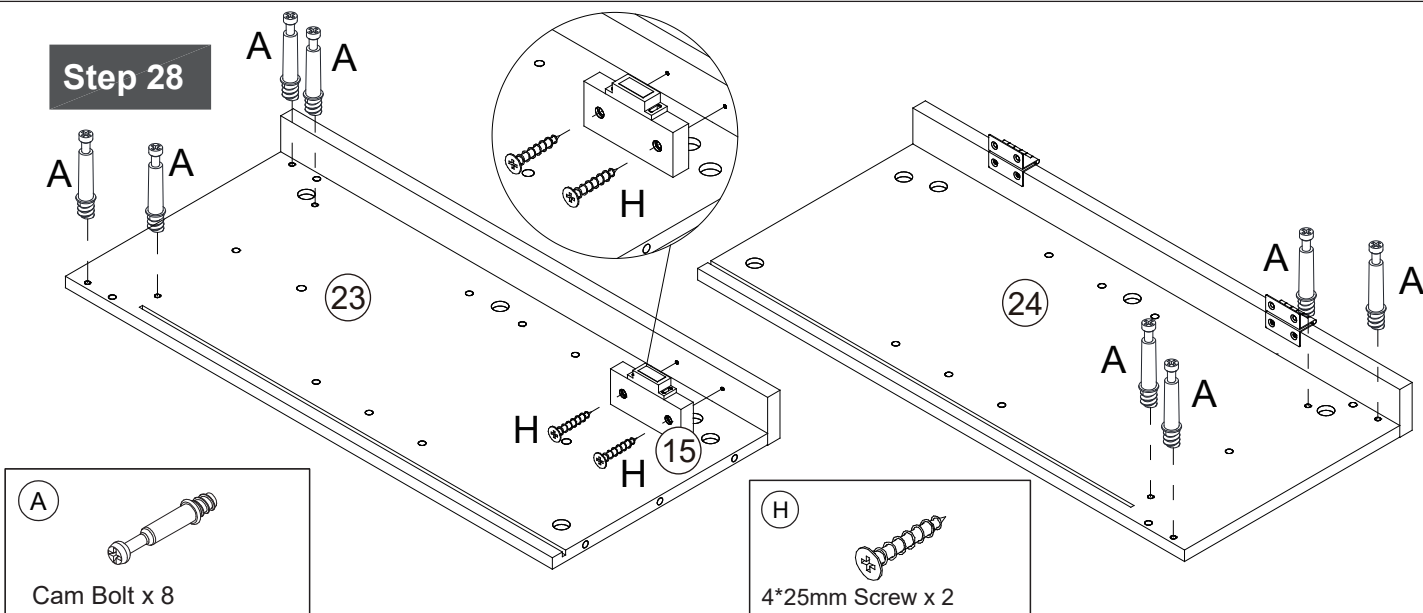


Step 29

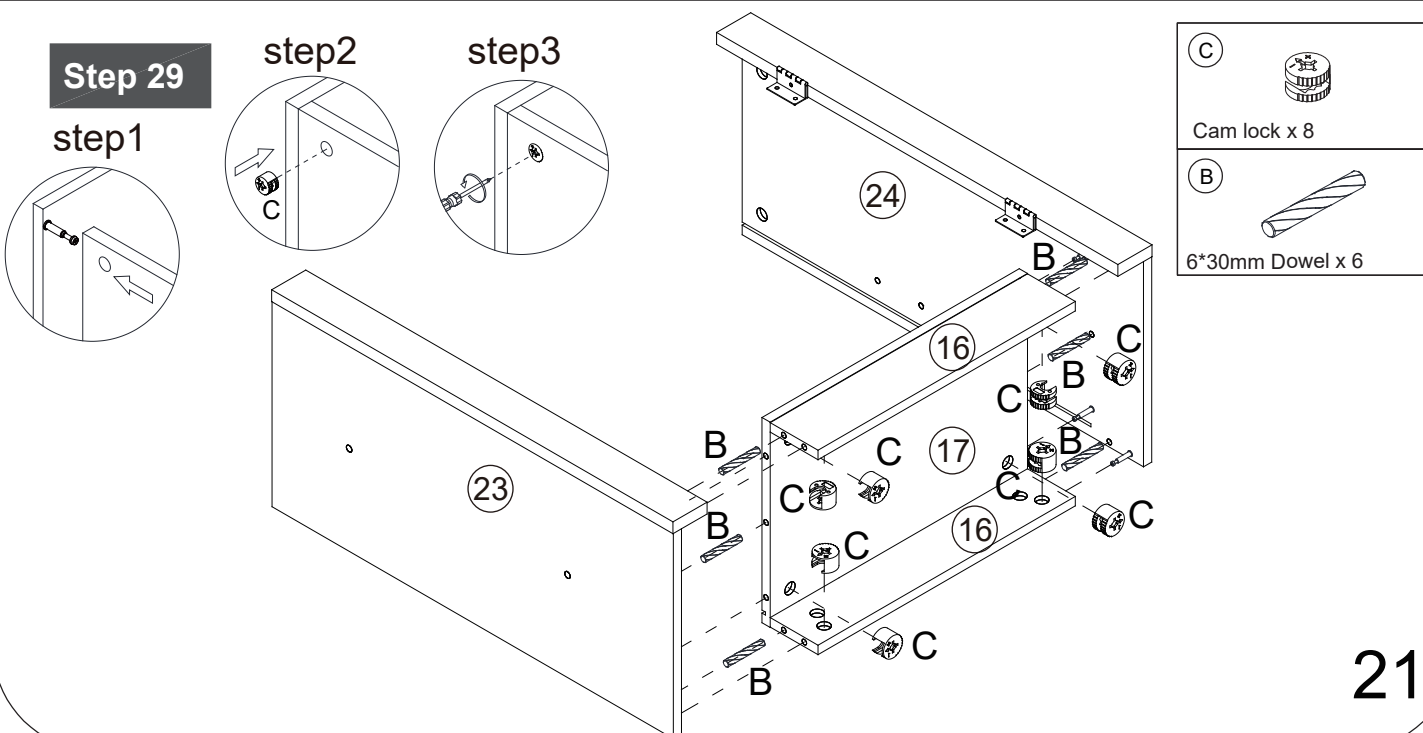

Assembly Instructions

Step 30

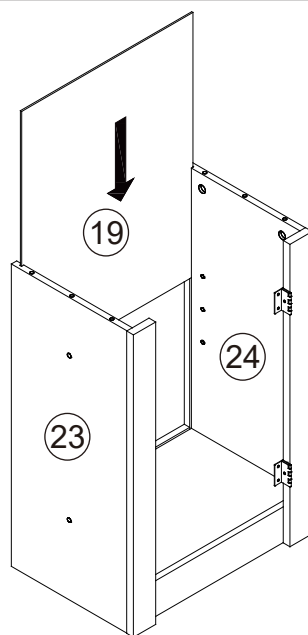

Step 31

(C)




Cam lock x 4


(B)




6*30mm Dowel x 2

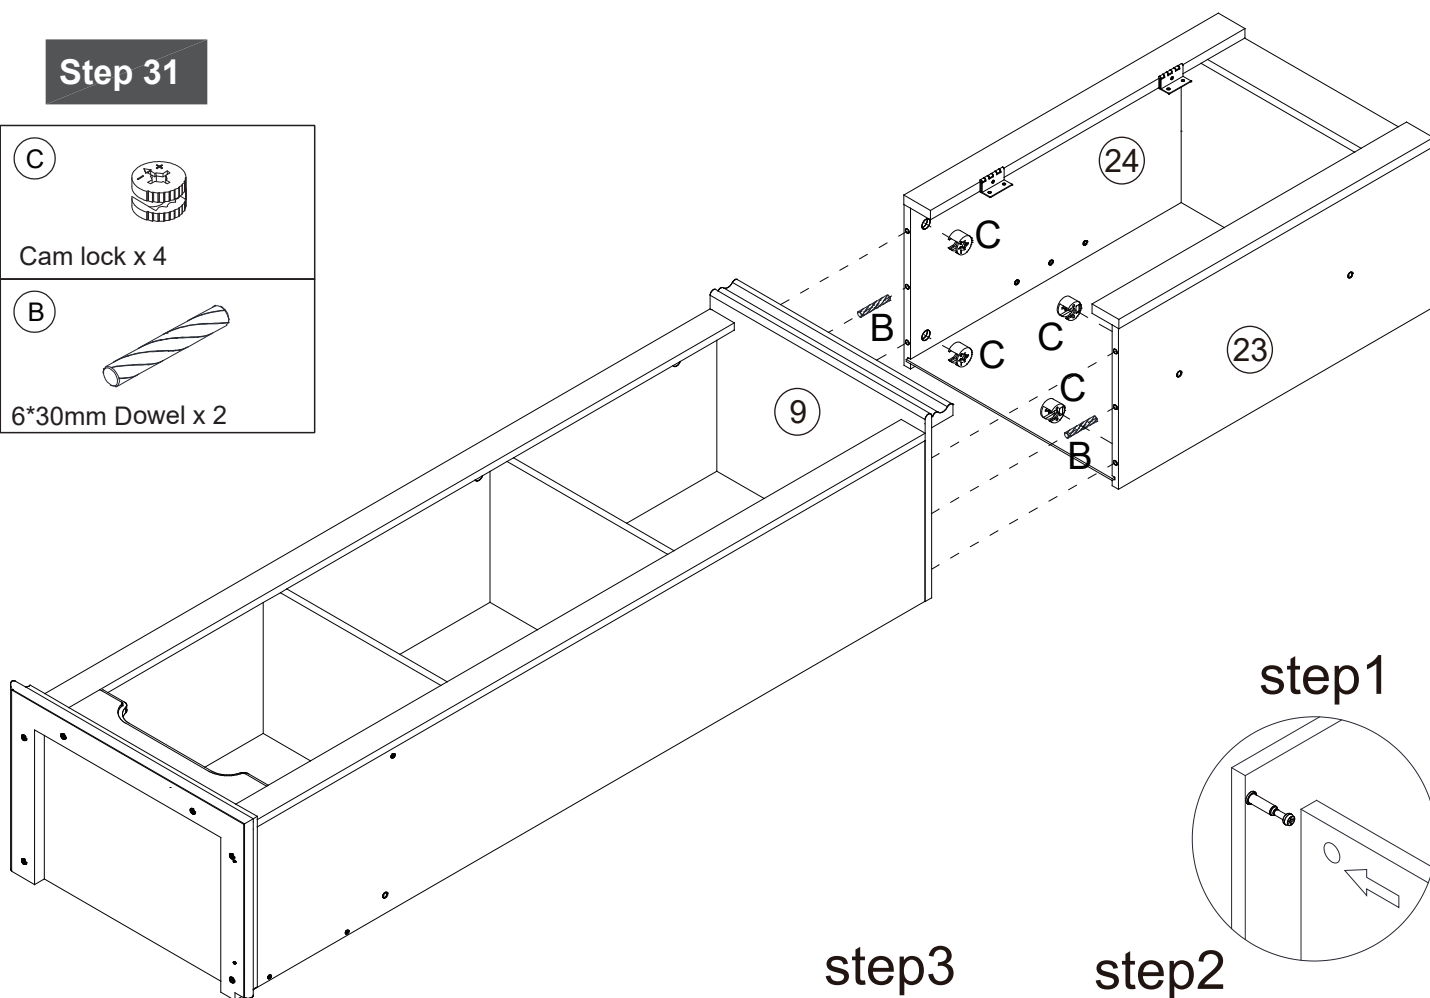


step1

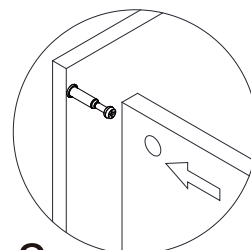

step3

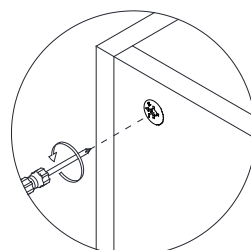




step2

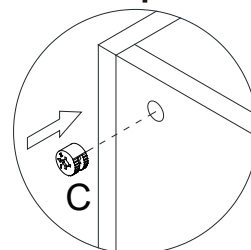

22






Assembly Instructions

Step 32

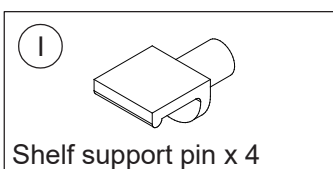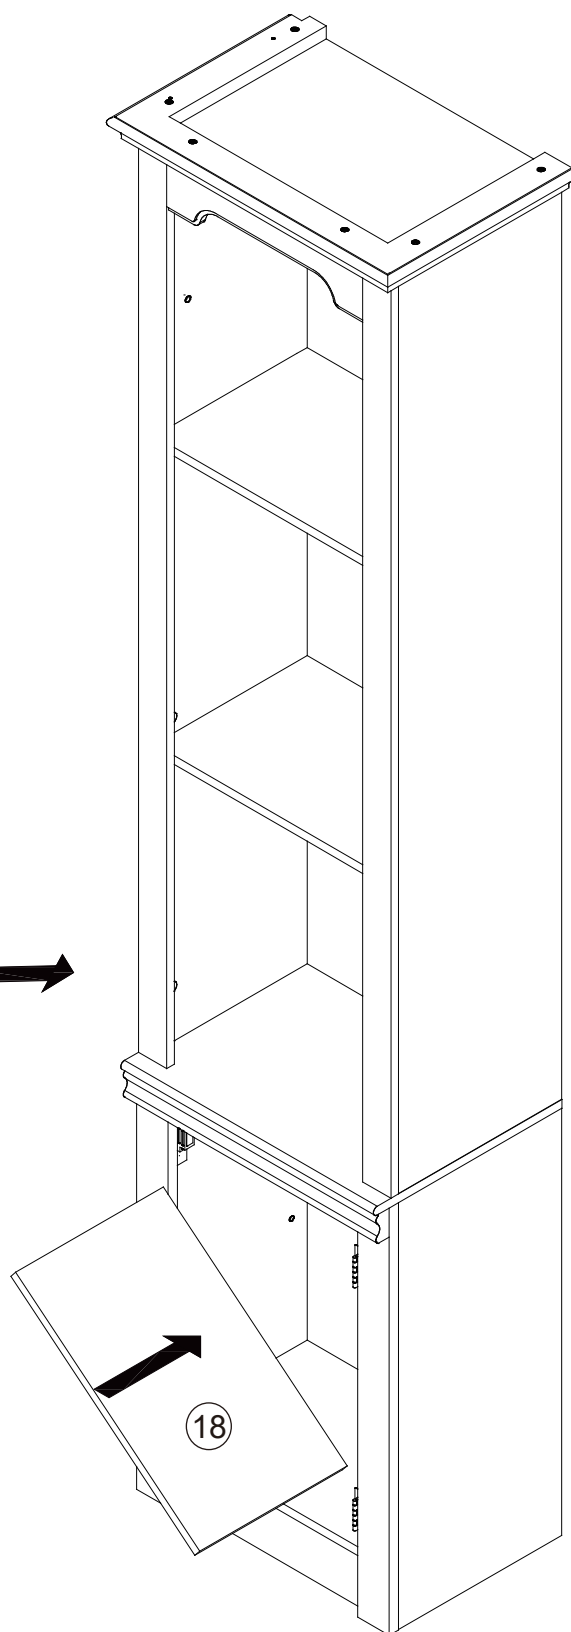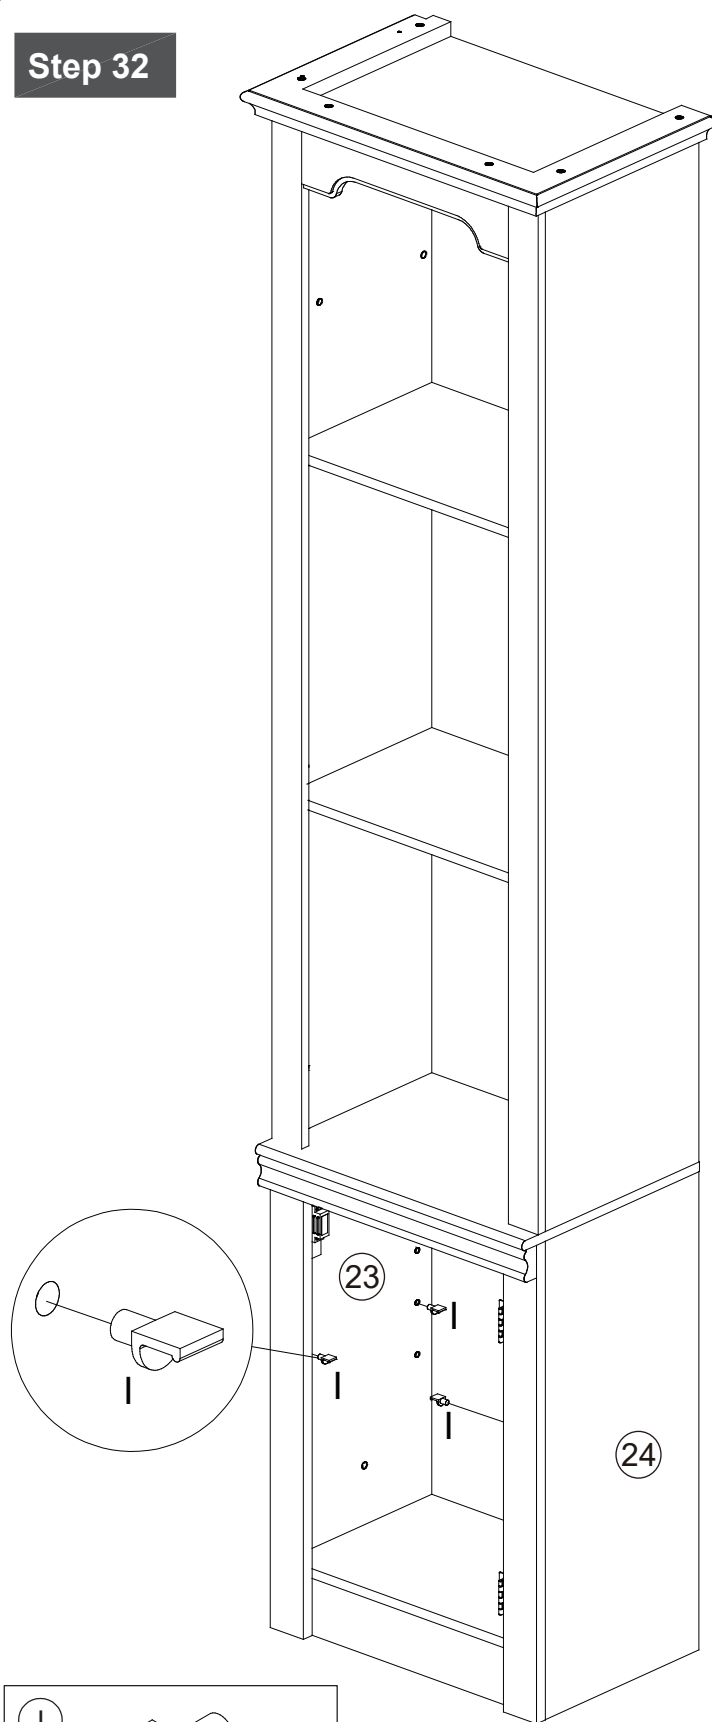


Assembly Instructions

Step 33

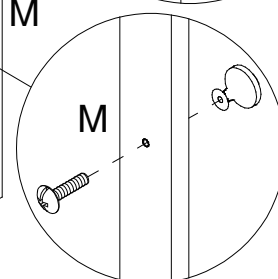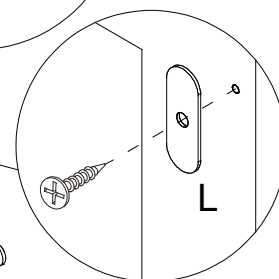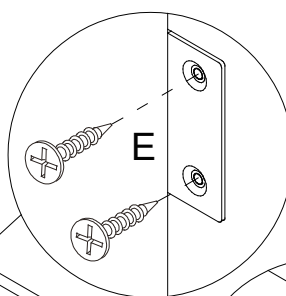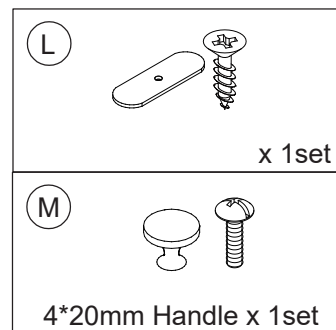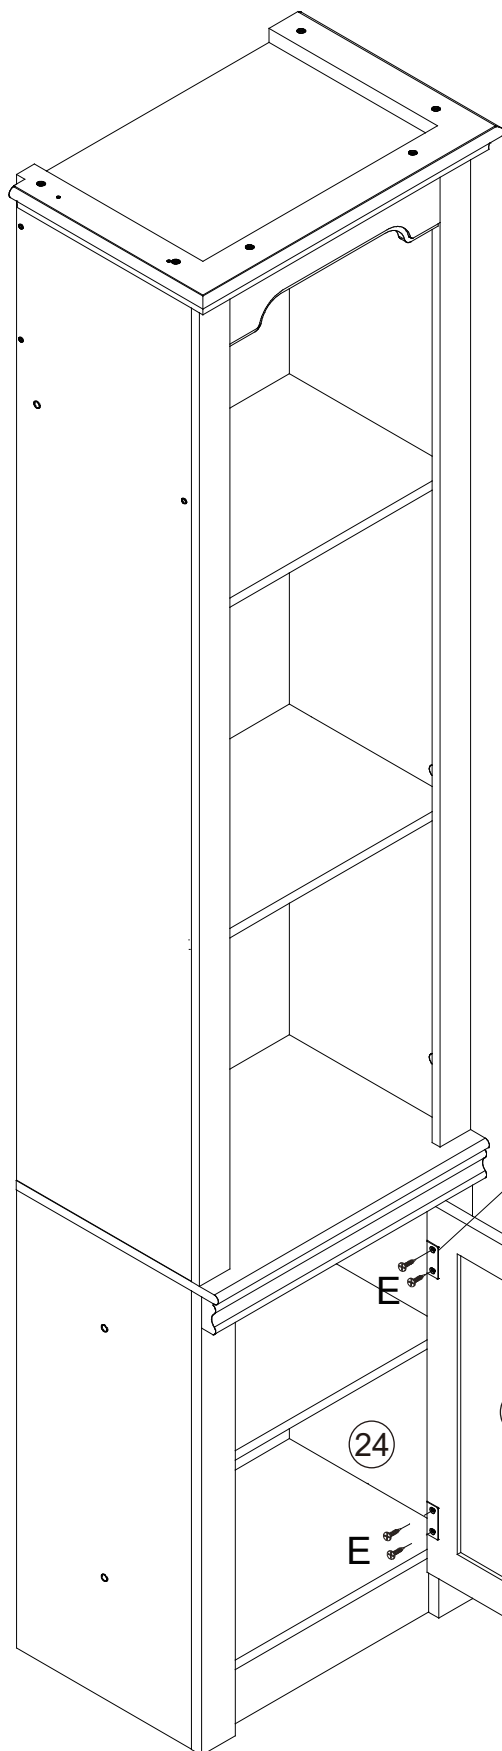


Assembly Instructions


Step 34

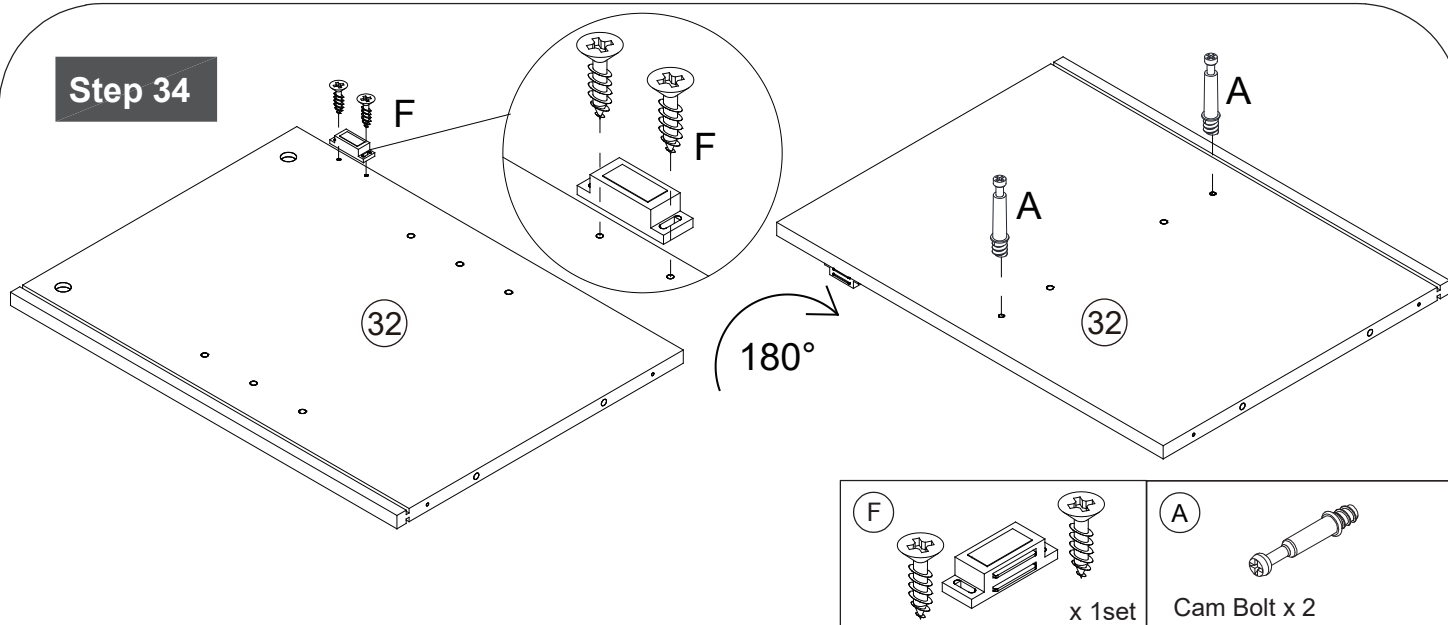

Step 35

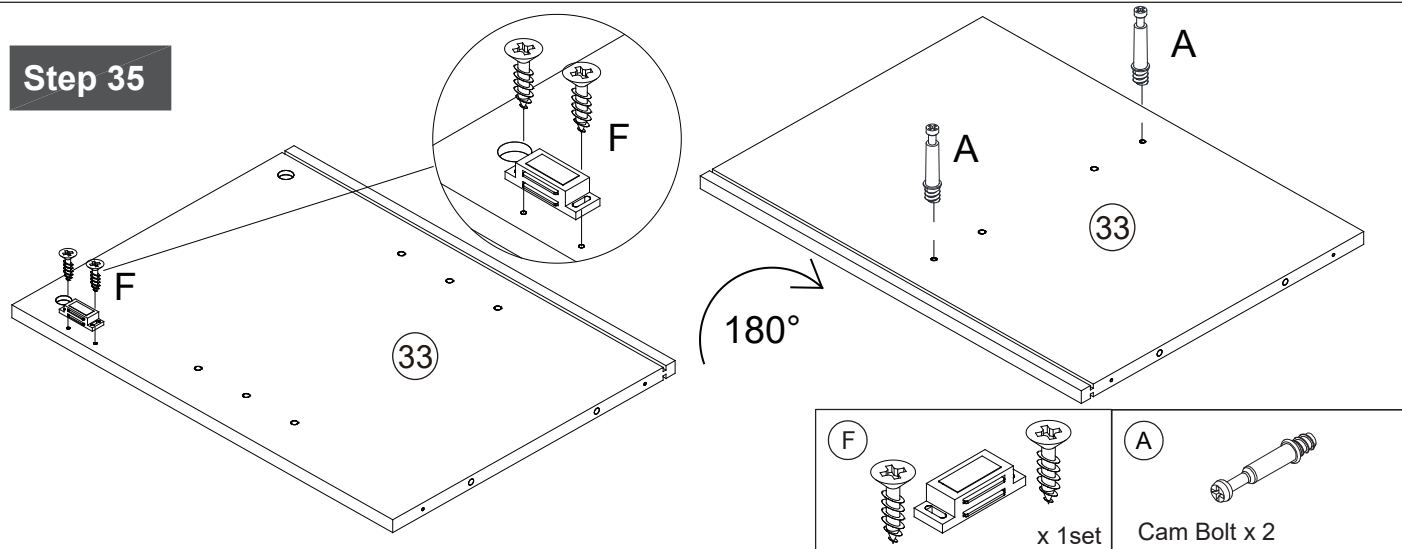


Step 36

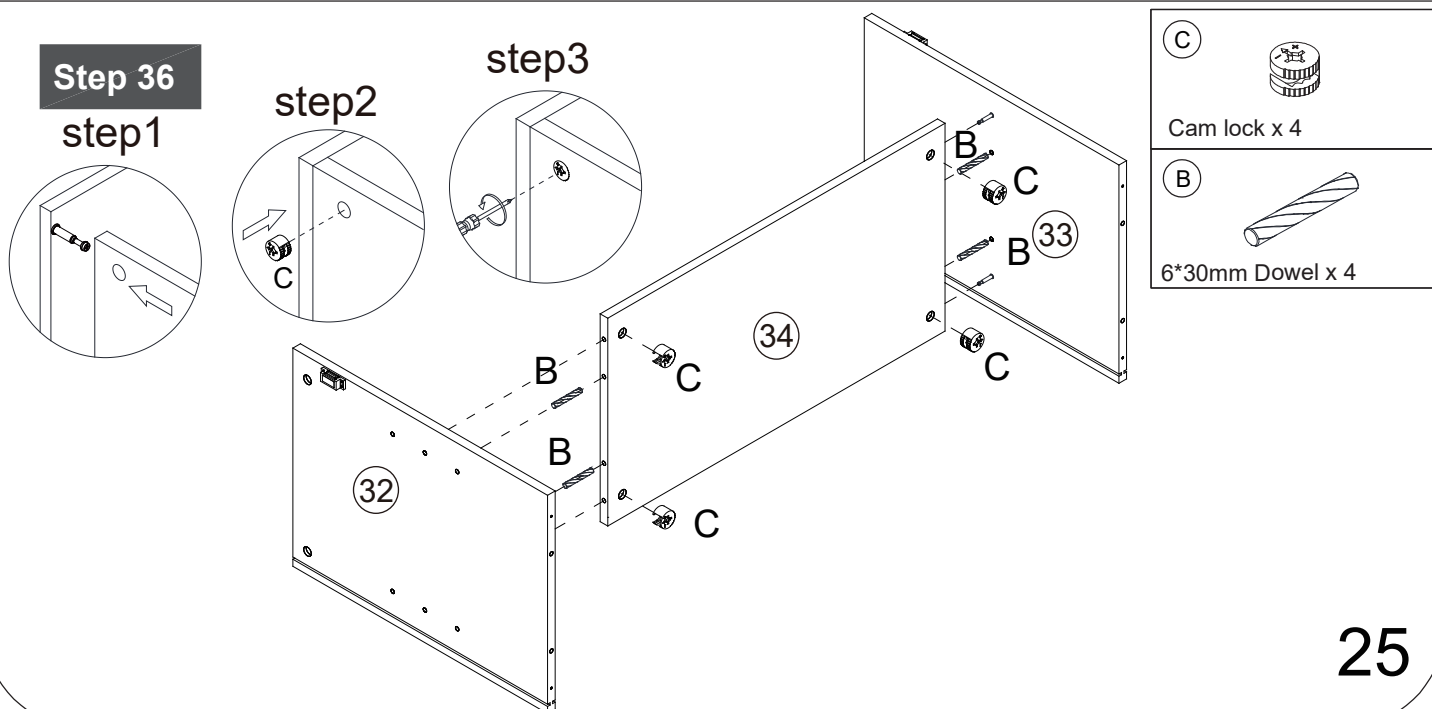


Assembly Instructions

Step 37

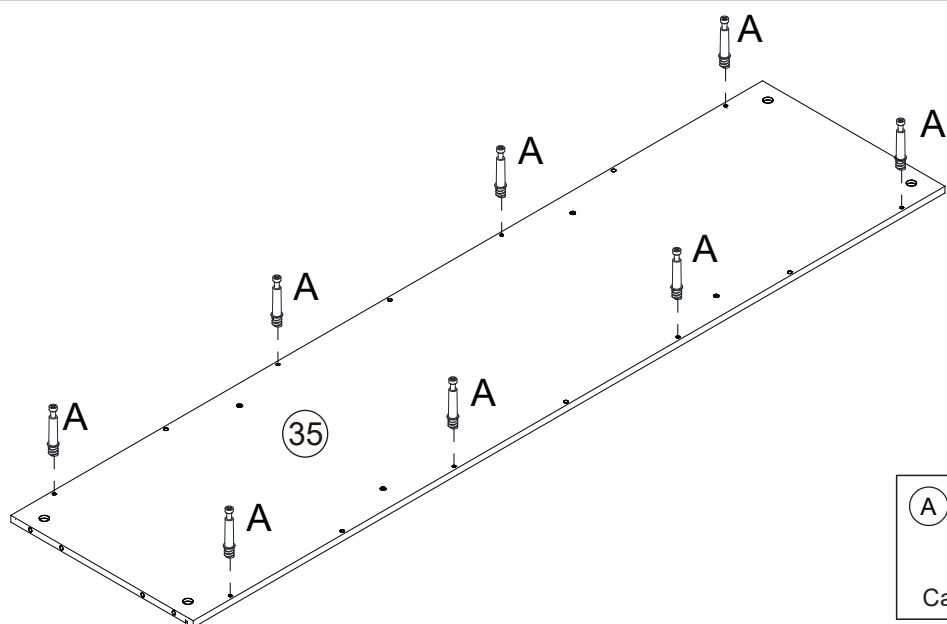

(A)
Cam Bolt x 8



Step 38

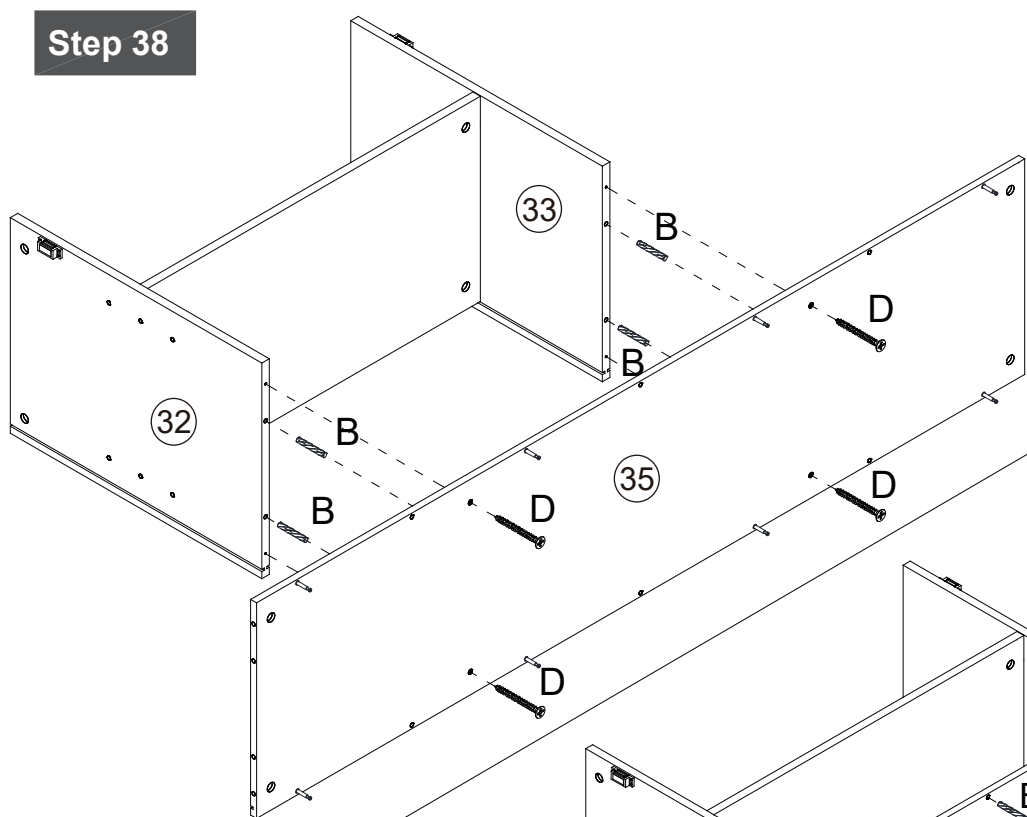

(D)
4*40mm Screw x 4

(B)
6*30mm Dowel x 4


(C)
Cam lock x 8

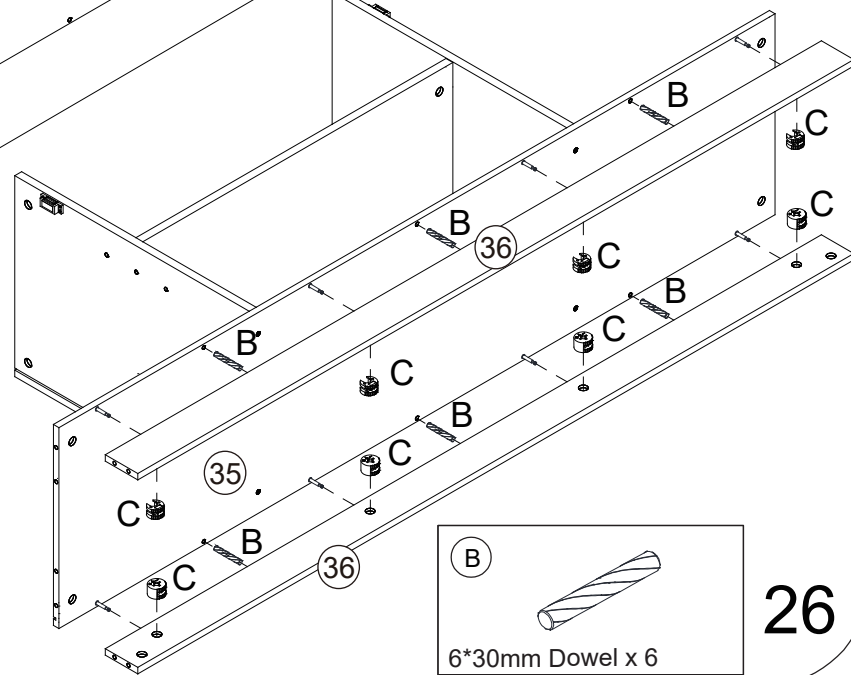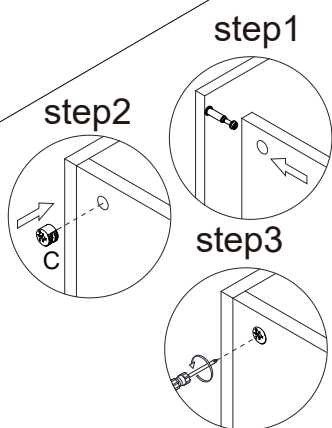


(B)
6*30mm Dowel x 6

Assembly Instructions


Step 39

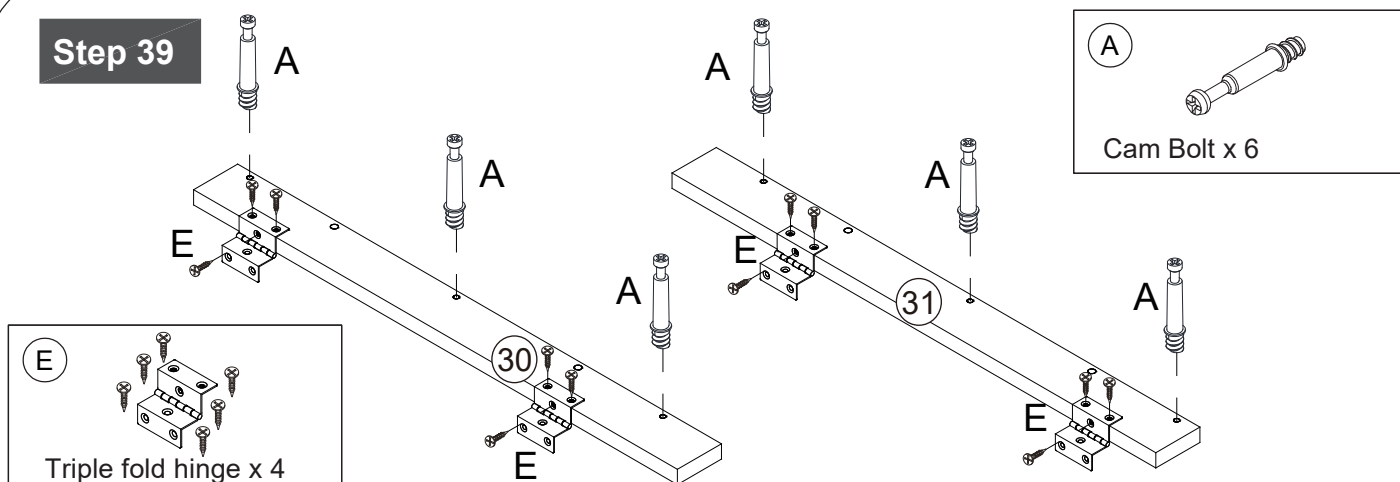

Step 40

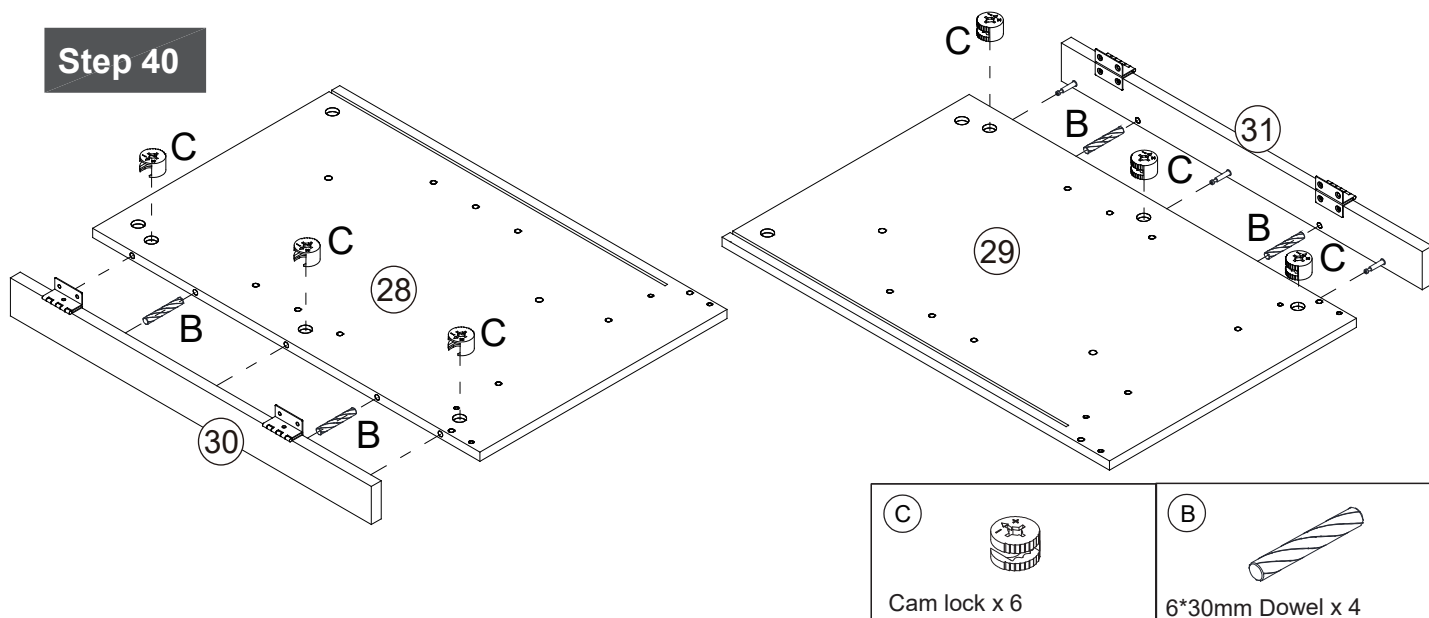

Step 41

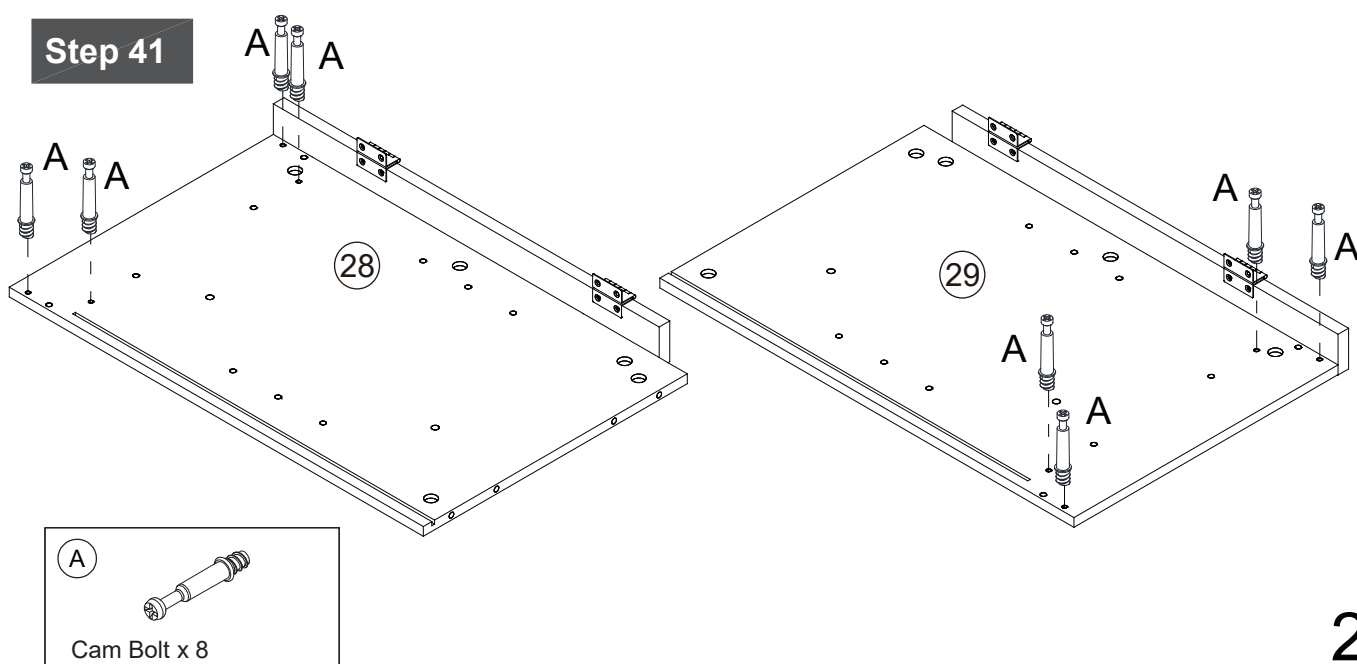


Assembly Instructions

Step 42


step1

step2

step3

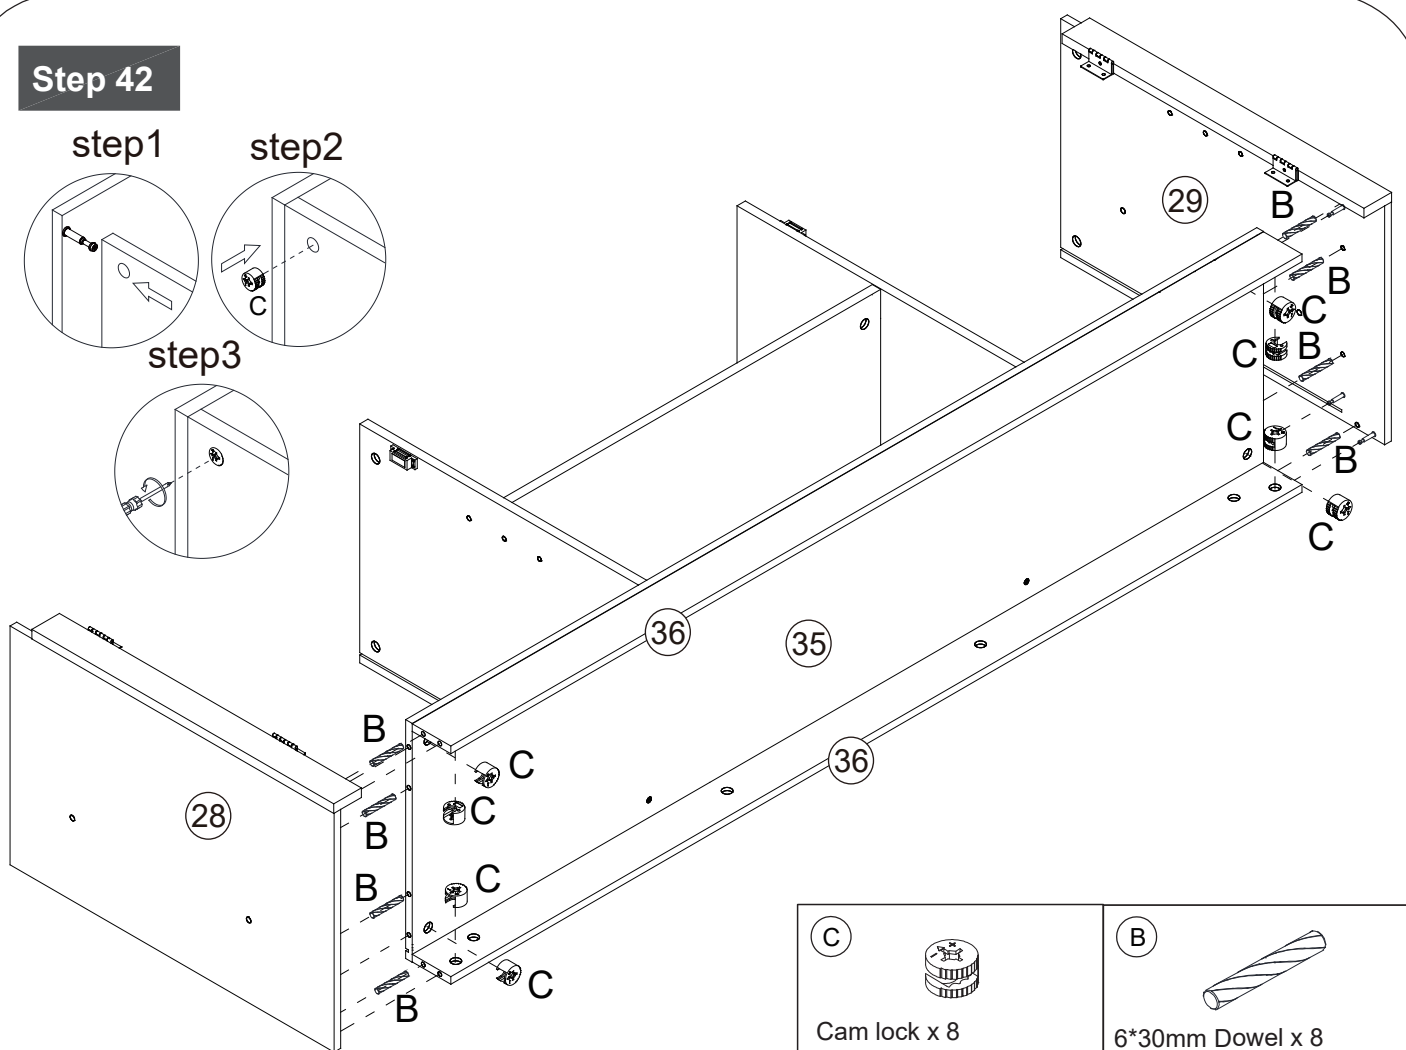


Step 43

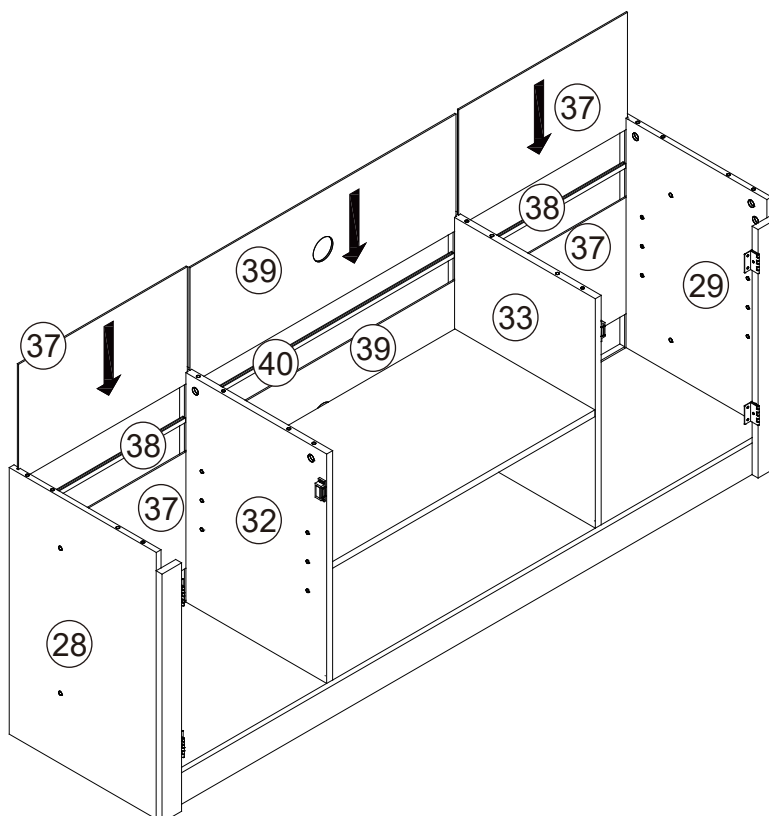


Assembly Instructions

Step 44

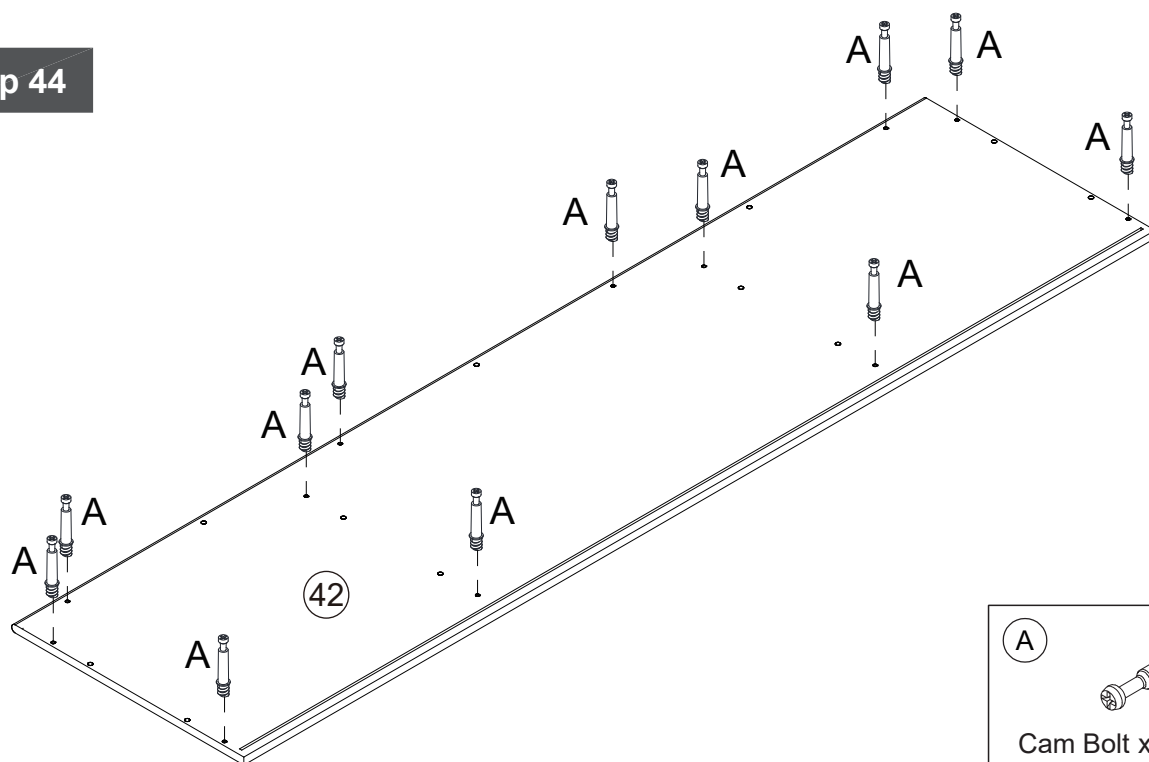


A



Cam Bolt x 12

Step 45

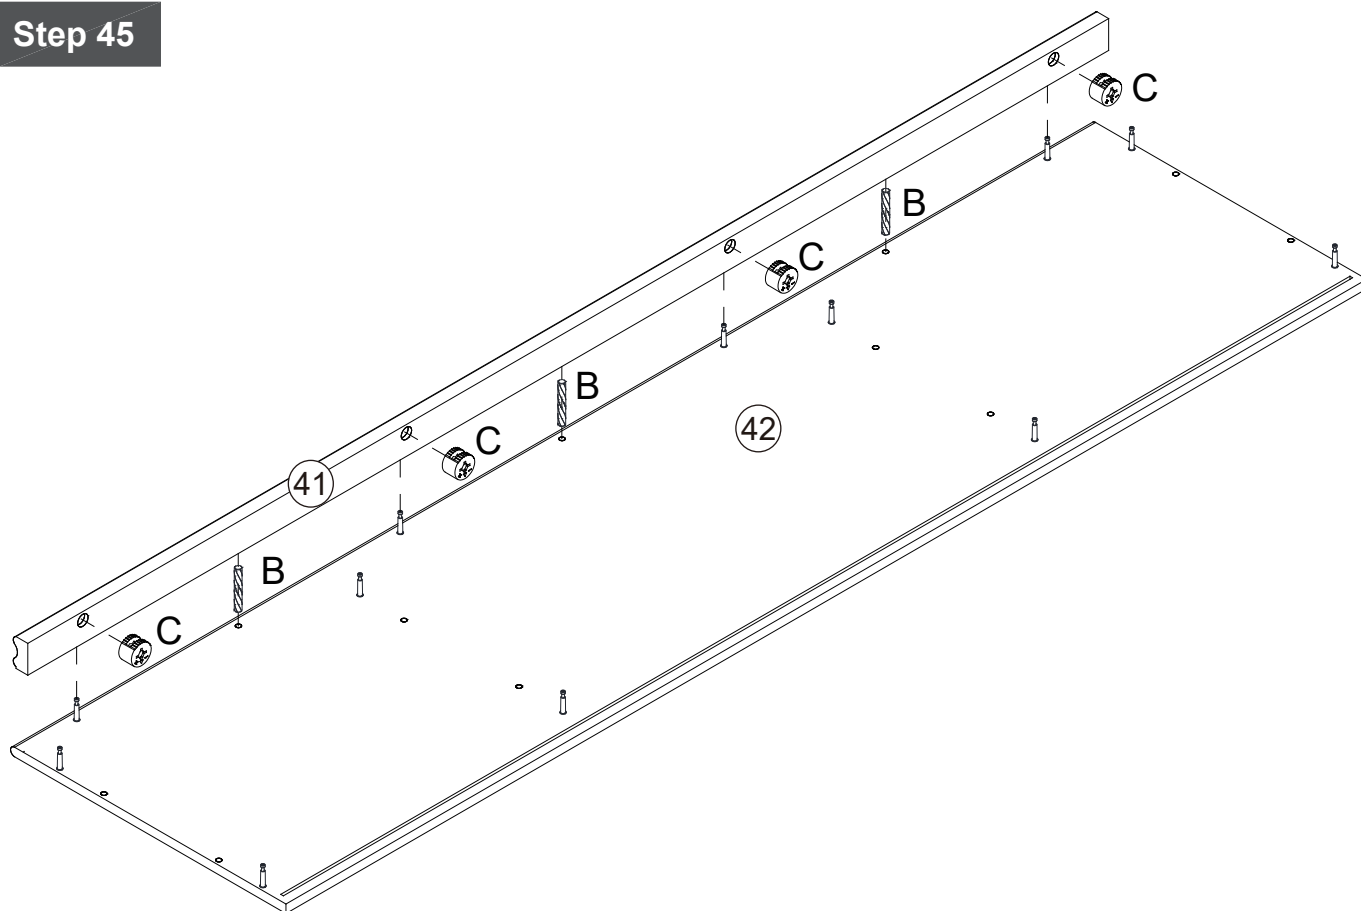

C



Cam lock x 4



B





6*30mm Dowel x 3

Assembly Instructions

Step 46

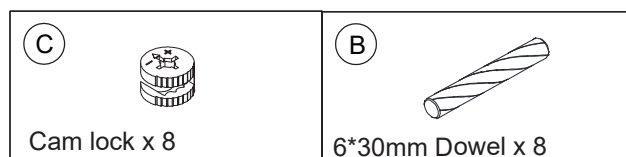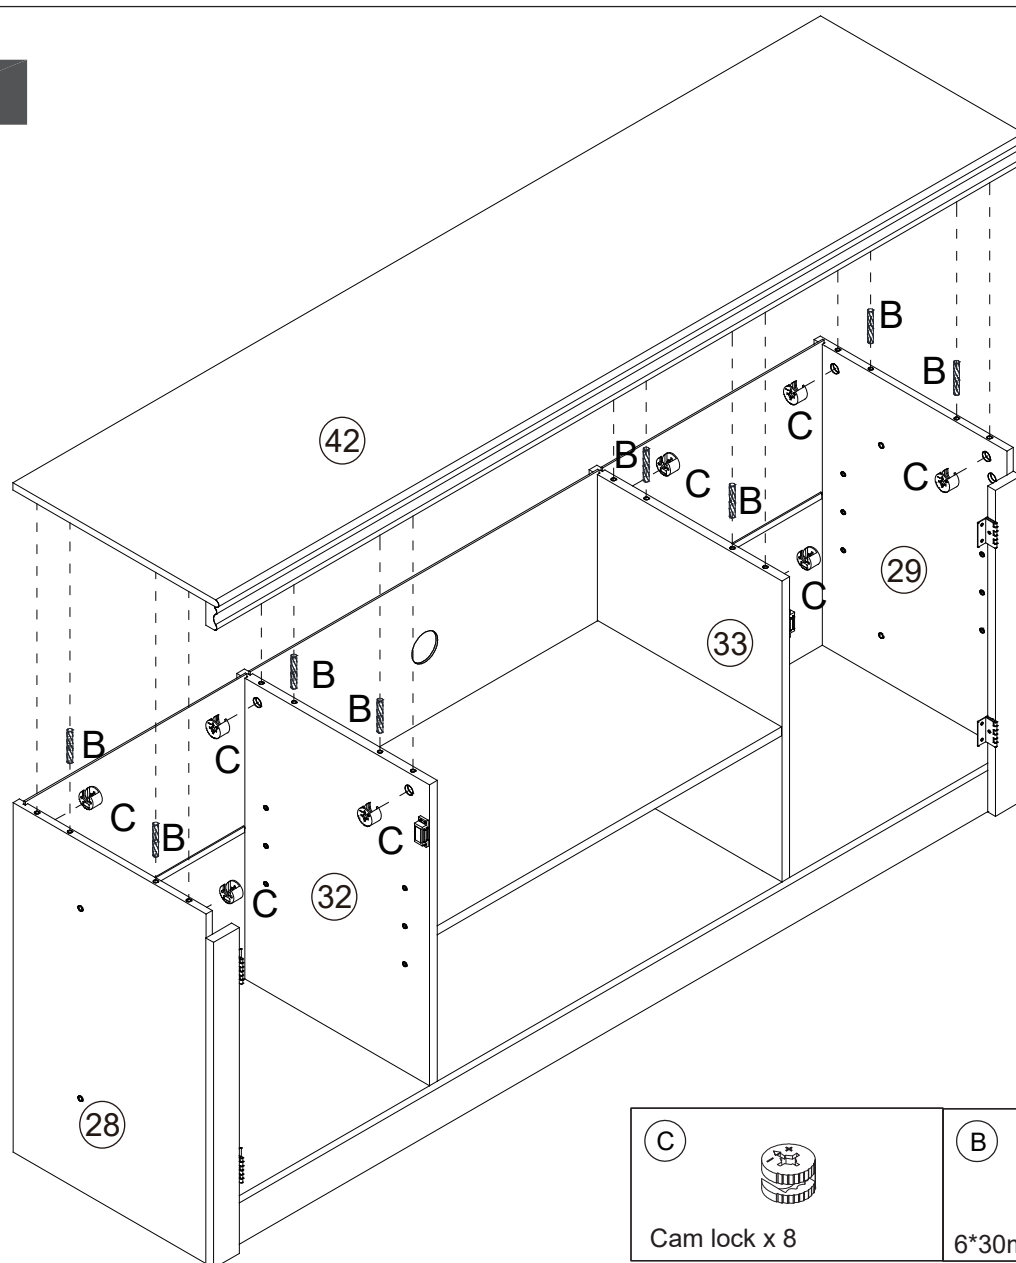


Step 47

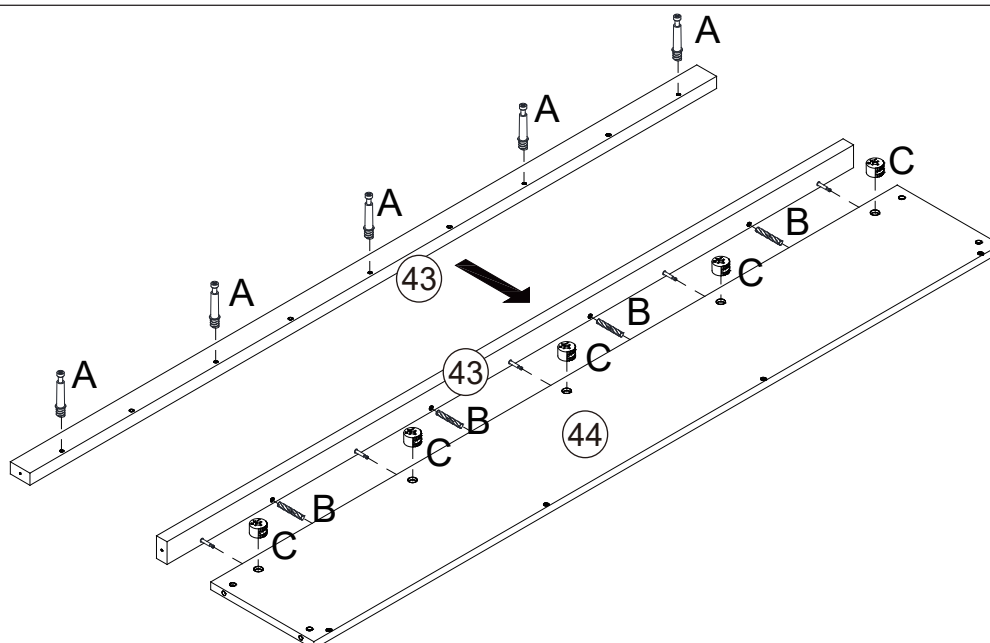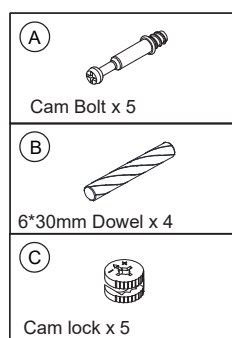




Assembly Instructions

Step 48

Please place the left cabinet, right cabinet and middle cabinet closely together as shown in the figure. First tighten the screws of the upper cabinet, then align the screw holes of the lower cabinet and tighten them one by one.

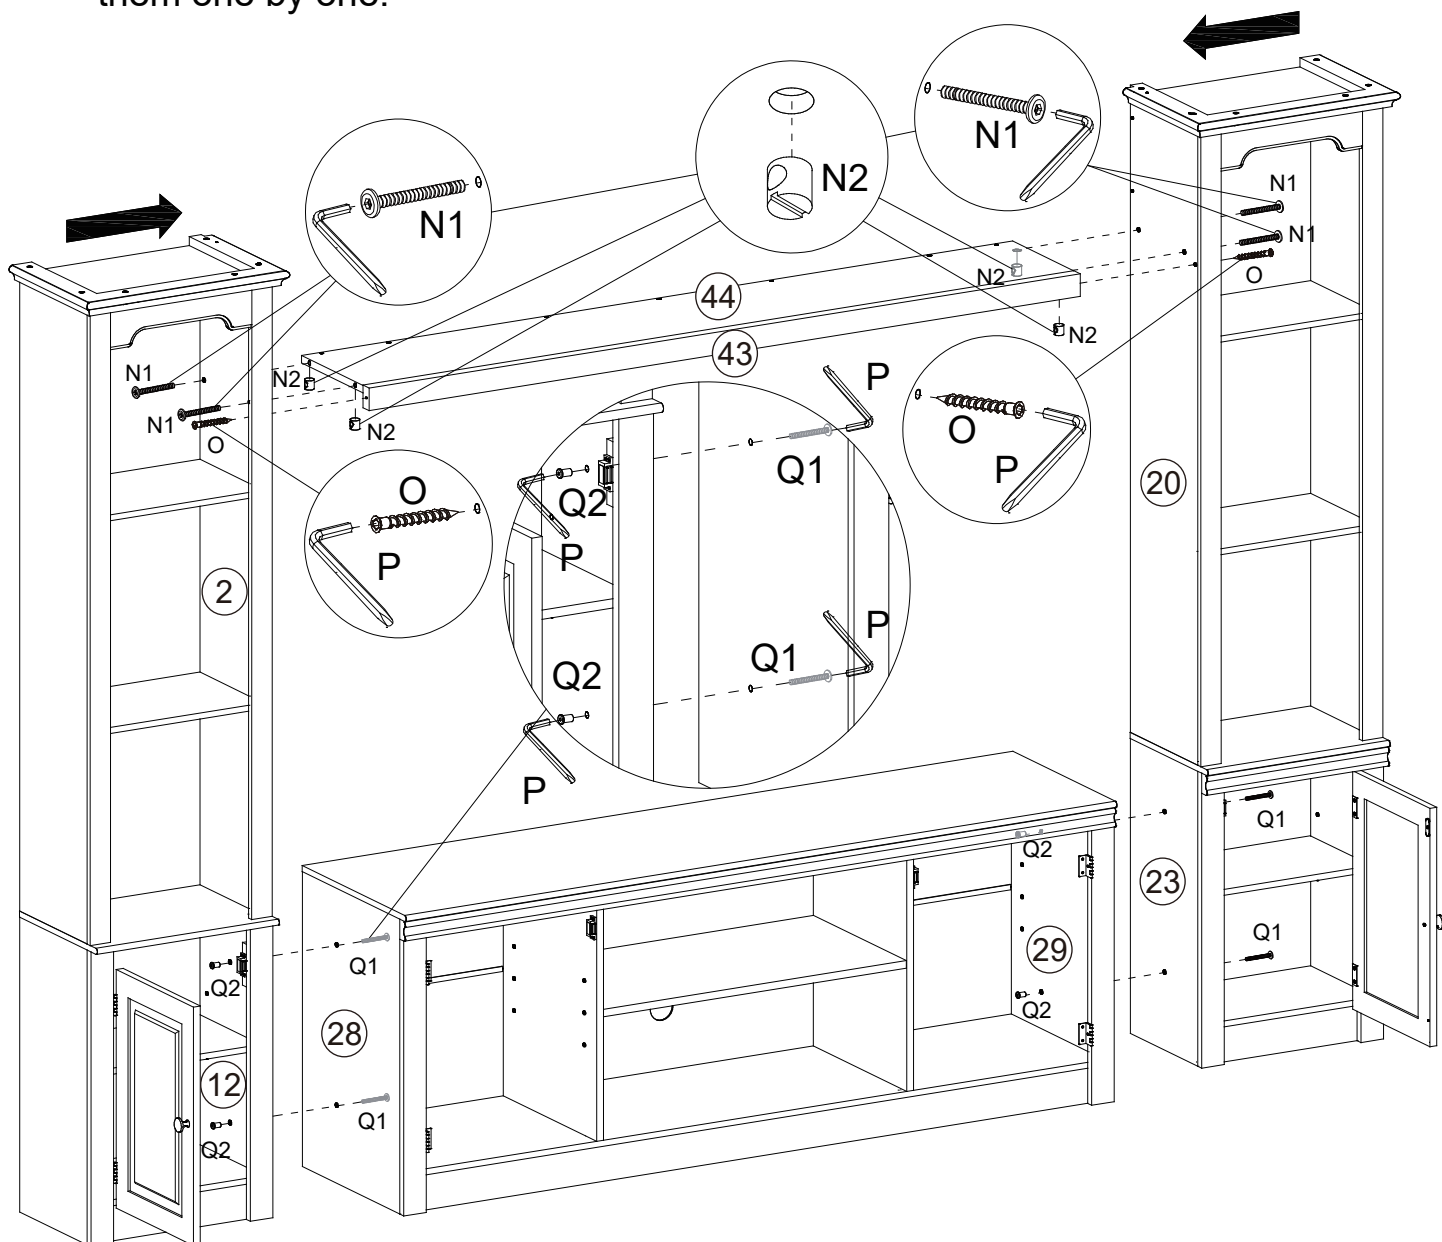


(Q)  Q1 Q2 6*20mm Screw x 4	(N)  N1 N2 6*40mm Screw x 4
---	---

(O)  6*40mm Screw x 2	(P) 
--	---

Assembly Instructions


Step 49

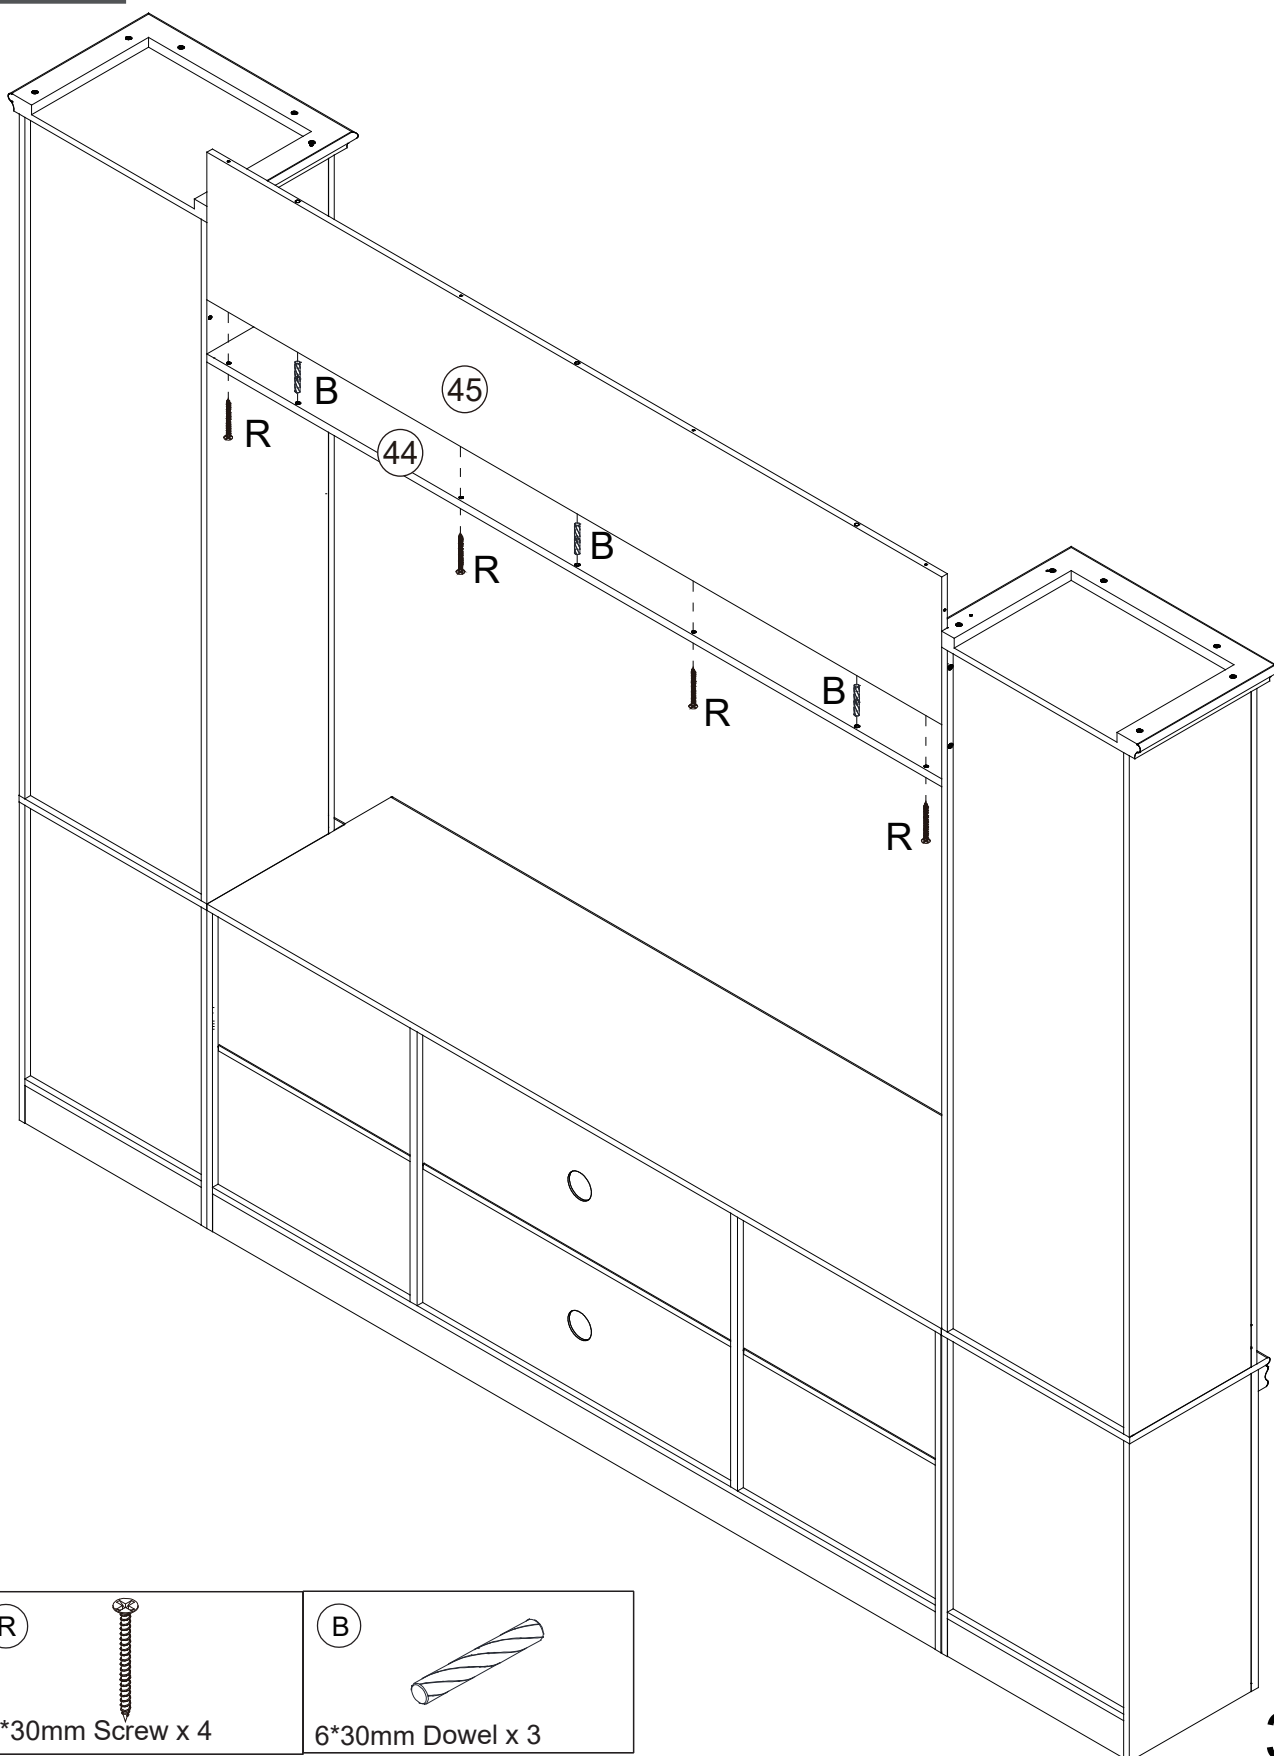


Assembly Instructions

Step 50

A



Cam Bolt x 5

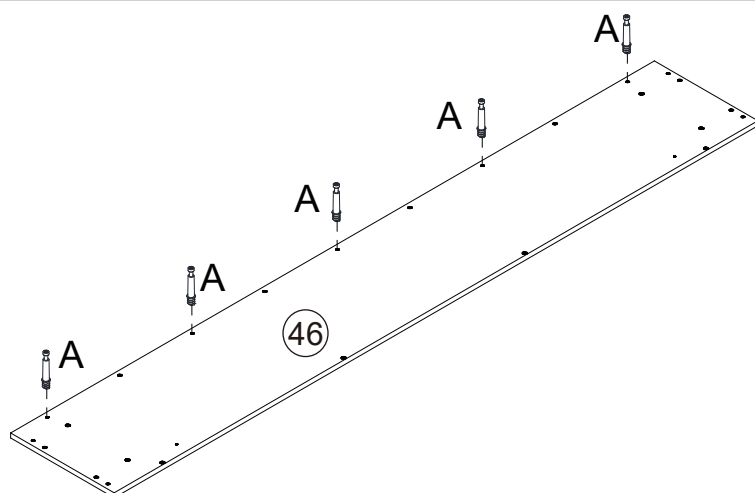


Step 51

C




Cam lock x 5

B




6*30mm Dowel x 8


H



4*25mm Screw x 4

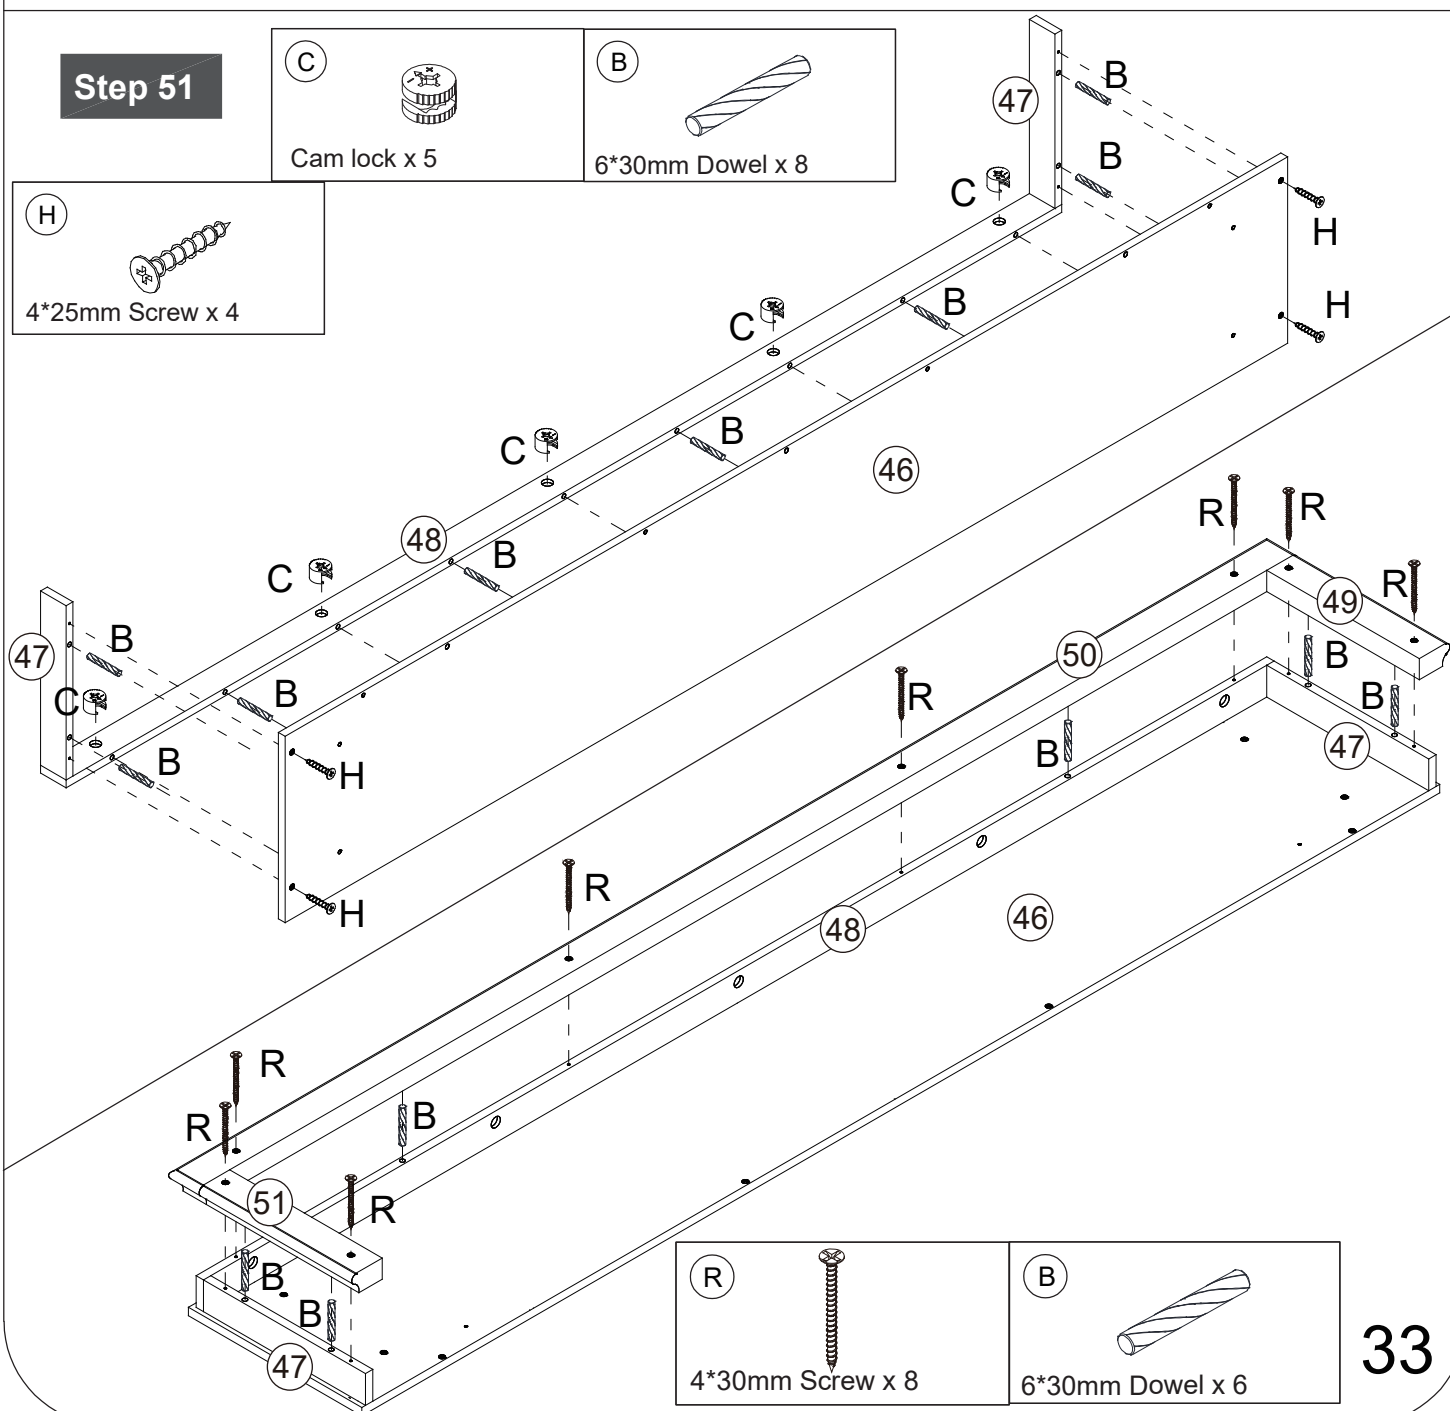

R



4*30mm Screw x 8


B




6*30mm Dowel x 6

Assembly Instructions

Step 52

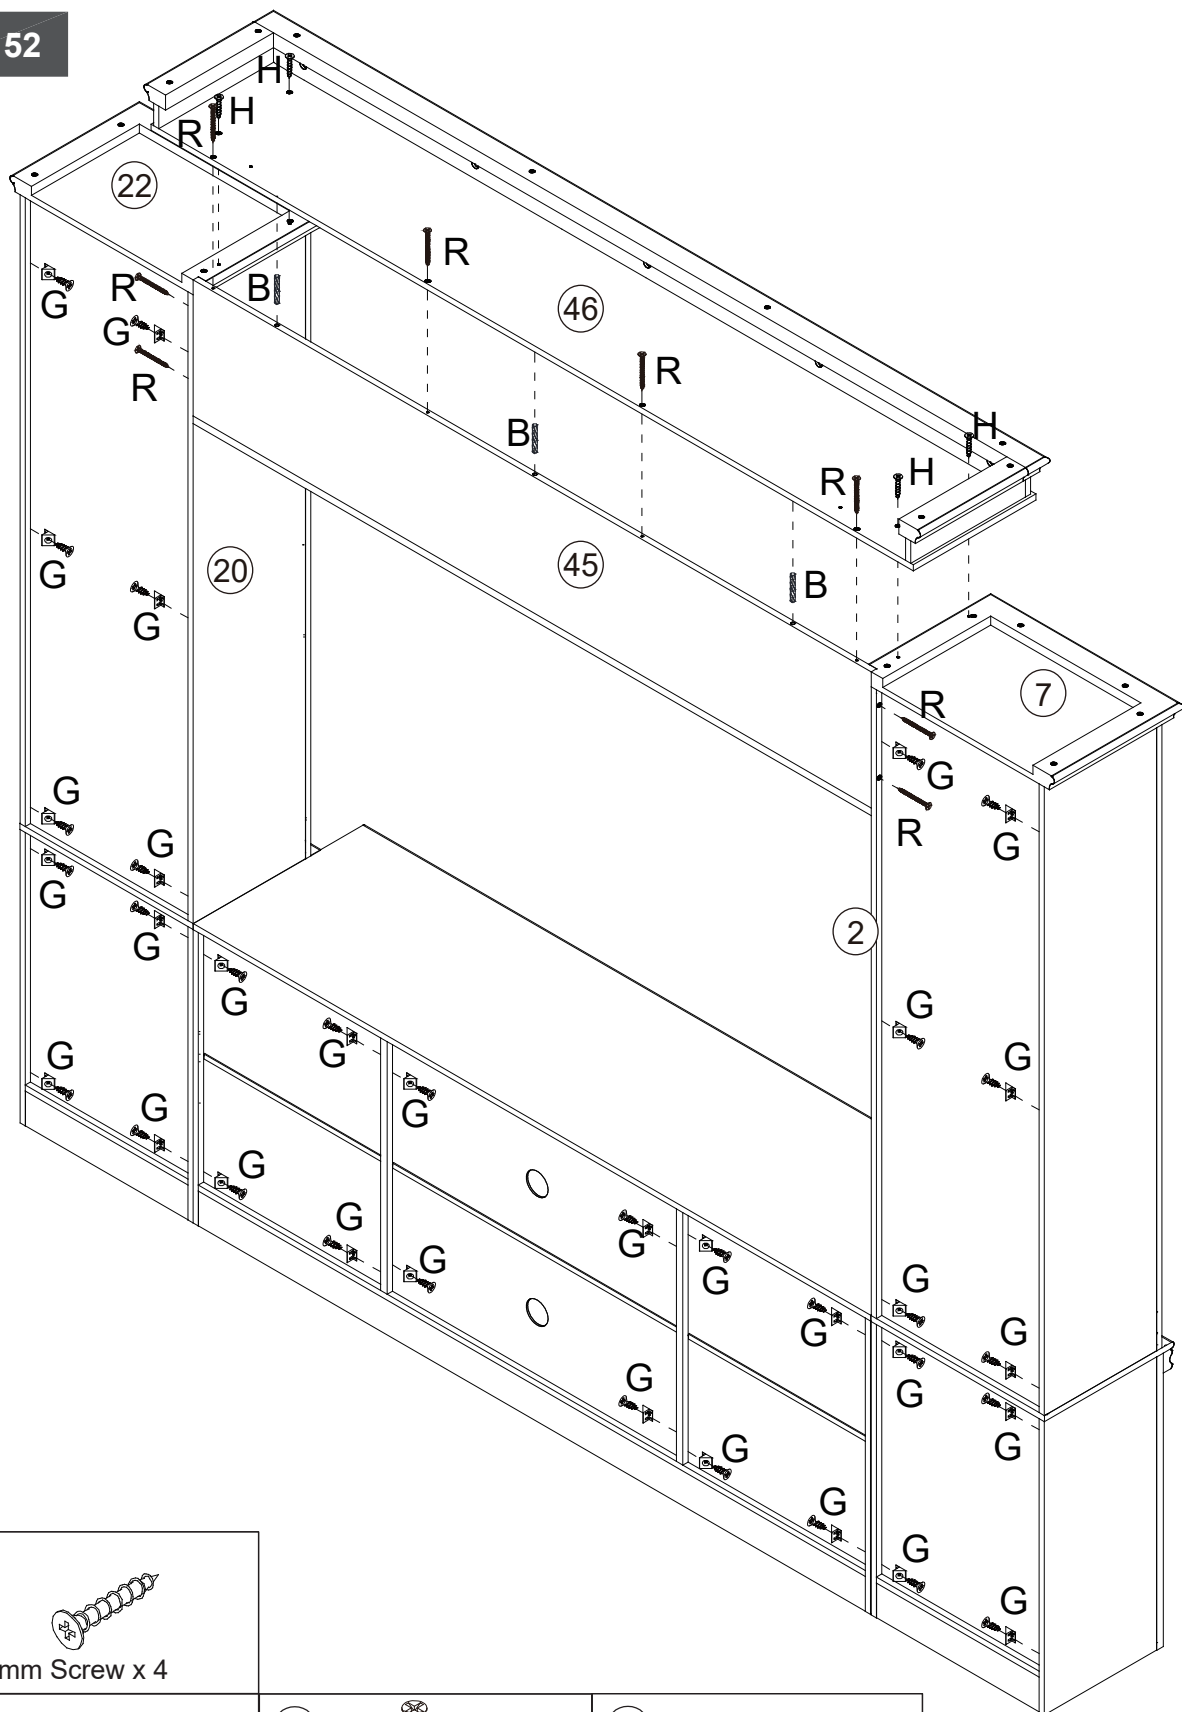


(H)



4*25mm Screw x 4

(G)




x 32set

(R)



4*30mm Screw x 8



(B)



6*30mm Dowel x 3


Assembly Instructions

Step 53

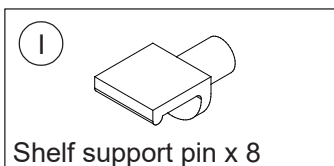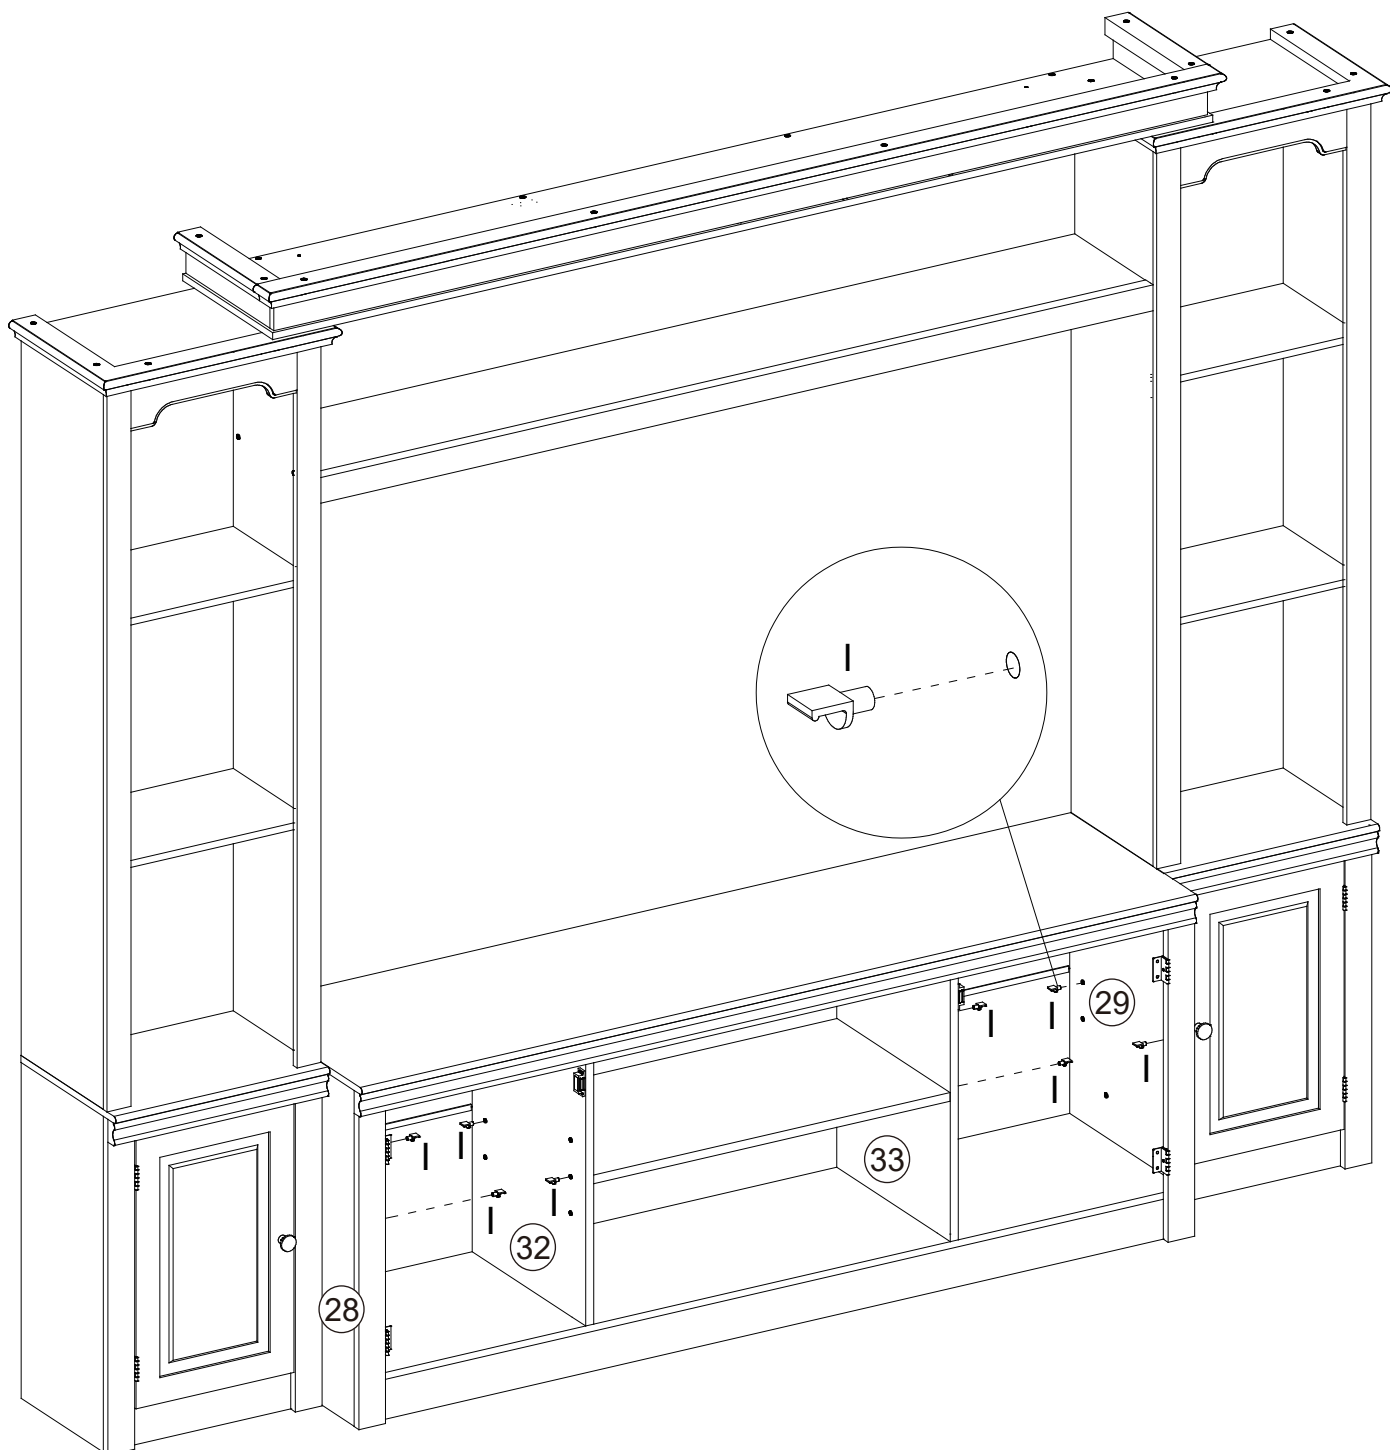


Assembly Instructions

Step 54

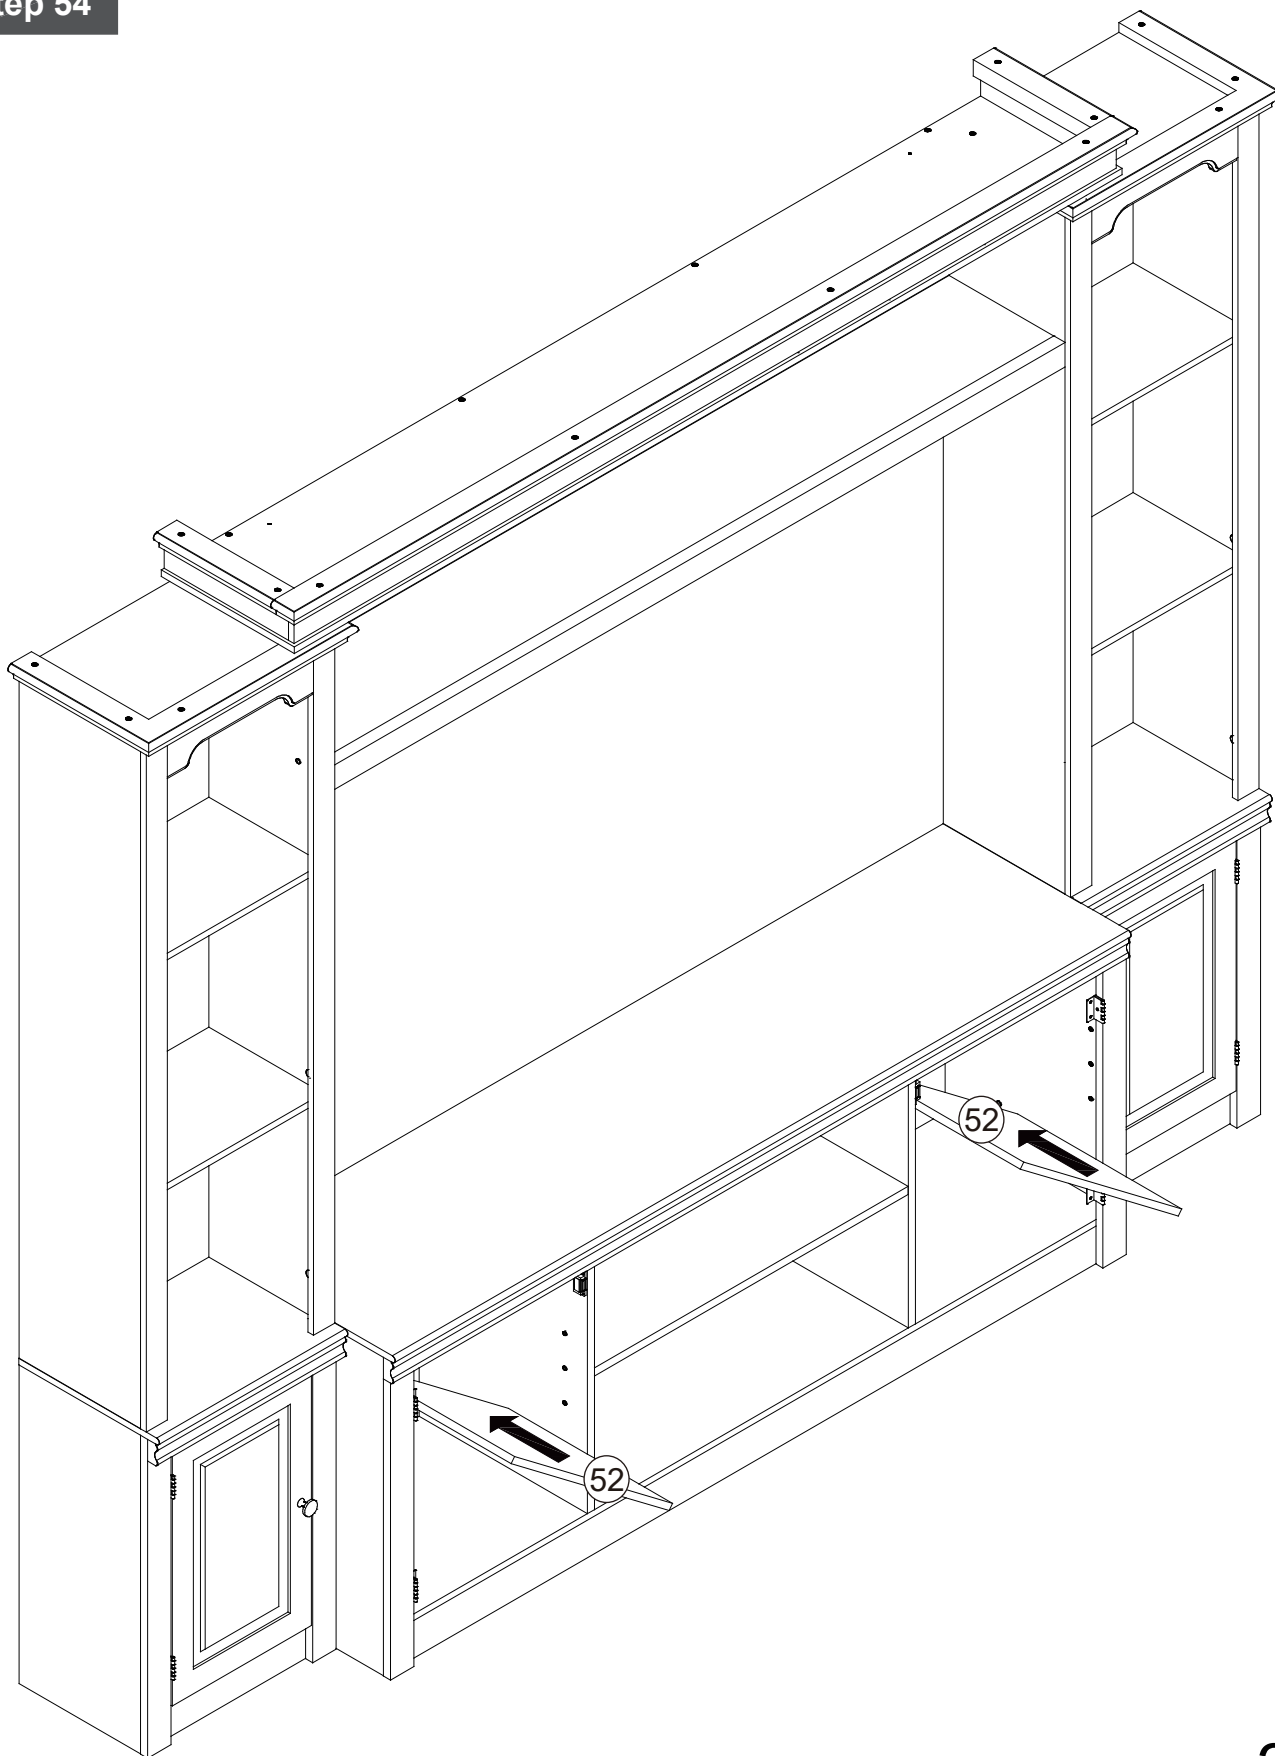



Assembly Instructions


Step 55

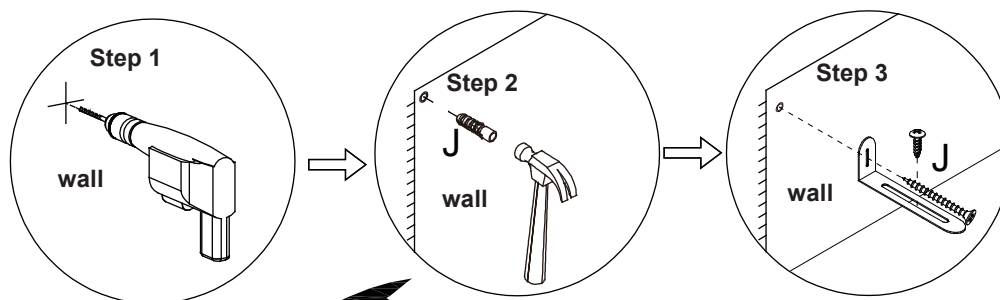

WALL

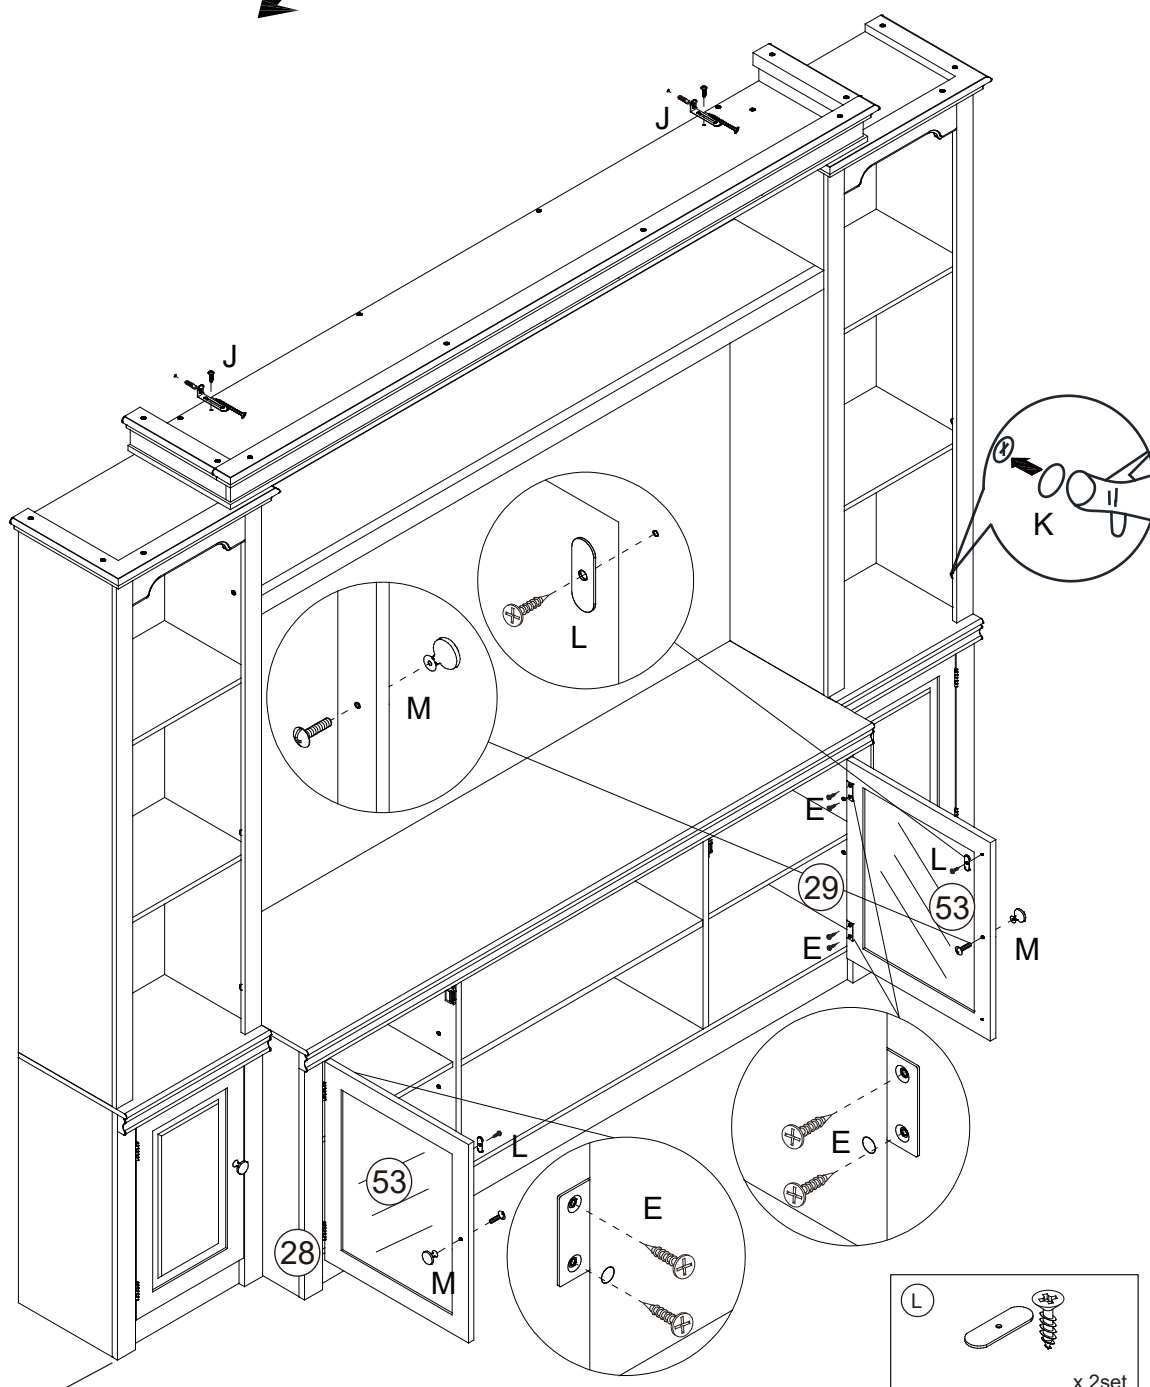

(K)  Perfect fit x 50	(J)  Anti-tipping Device x2	(M)  4*20mm Handle x 2set
--	--	--

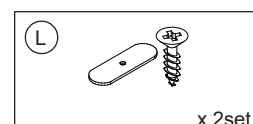

Assembly Instructions

Finish

