


Installation & Assembly

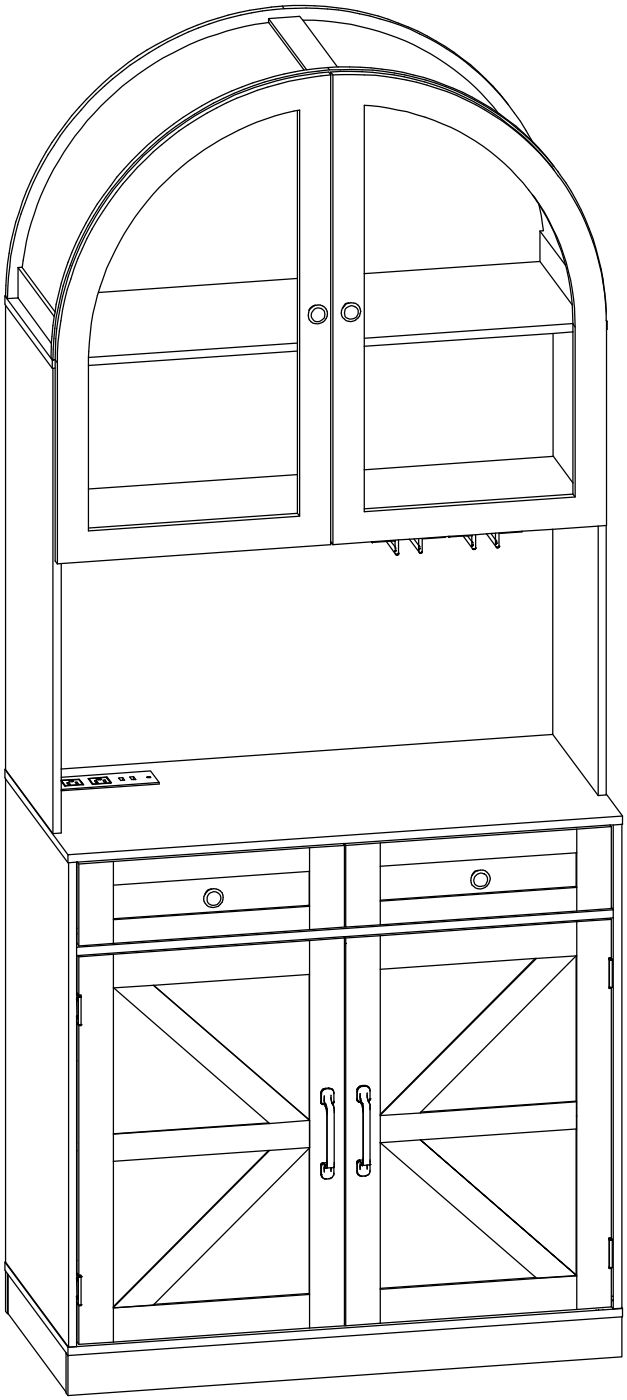



















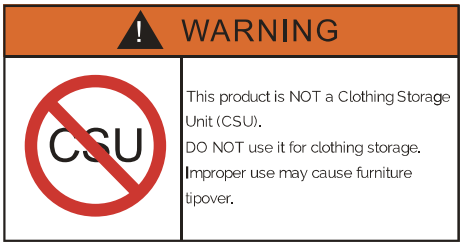


1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2.All cabinets come with TRO,stainless steel or our "L-Bracket"when shipped.

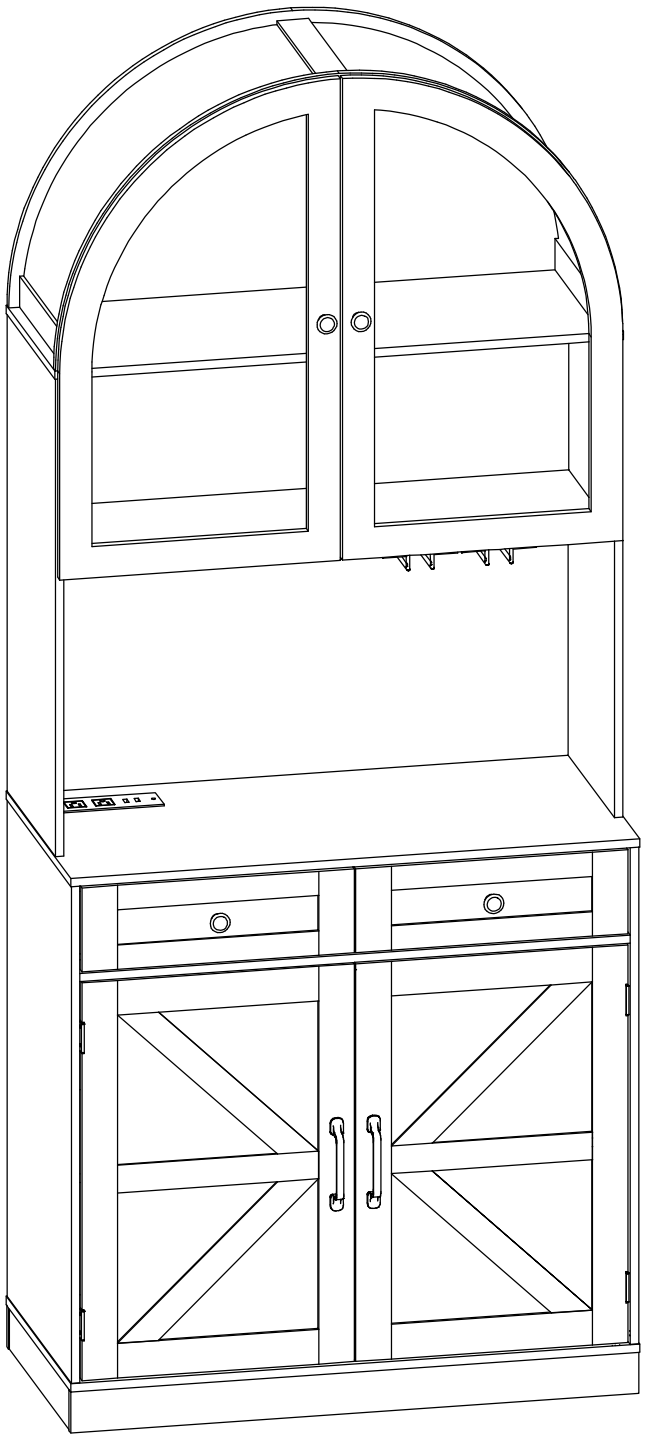


Part List

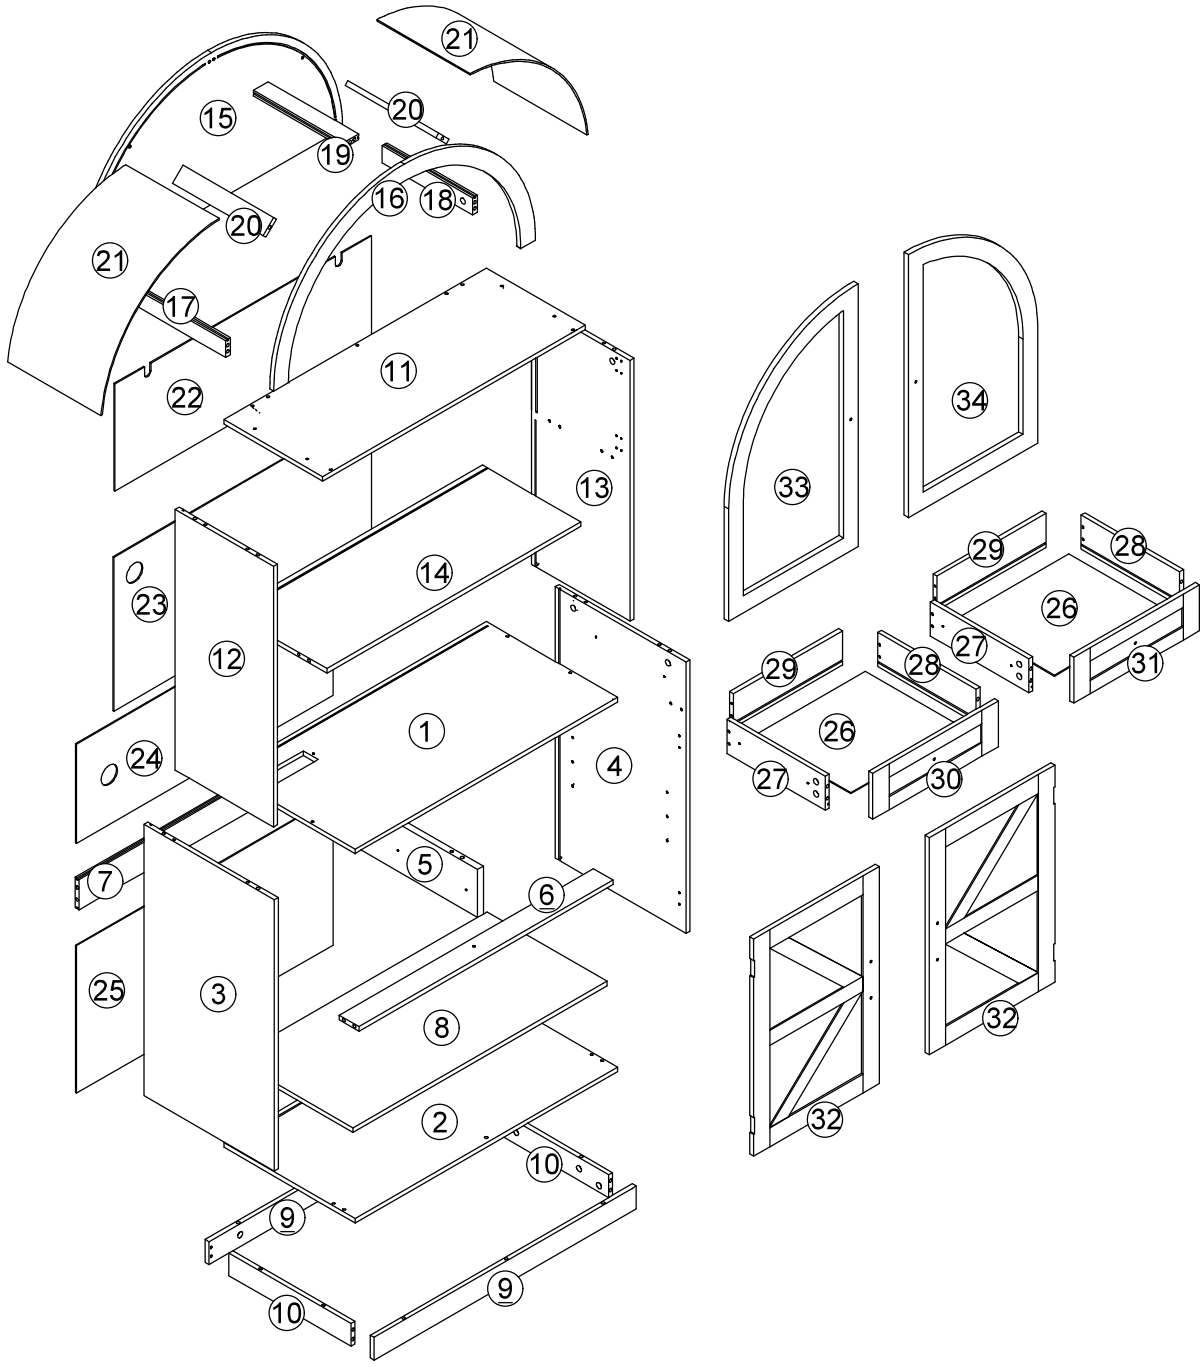
21
15
20
19
16
18
20
21
17
22
11
13
14
23
12
1
24
4
7
5
6
25
3
8
2
10
9
10
9
33
34
29
28
26
27
31
29
28
26
27
30
32
32

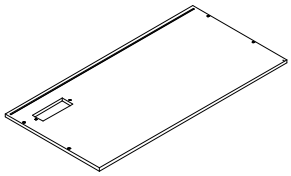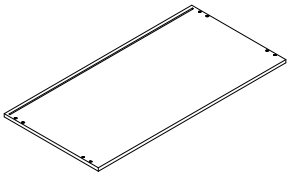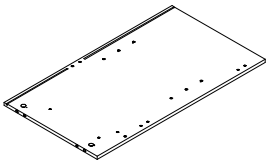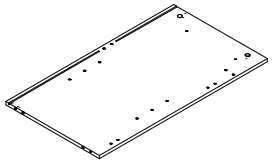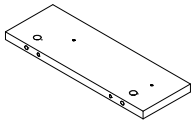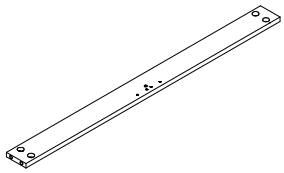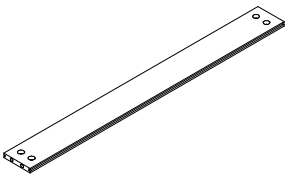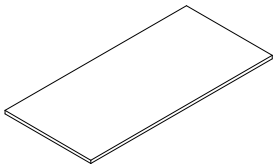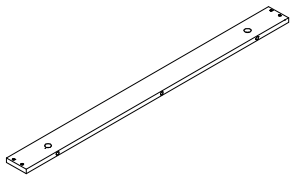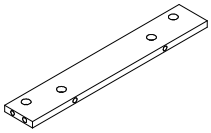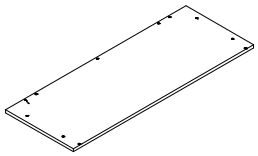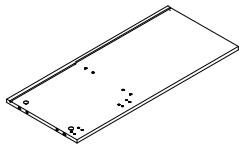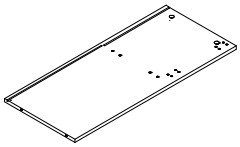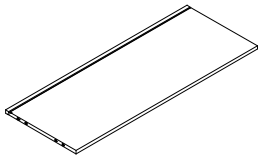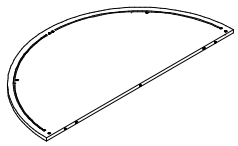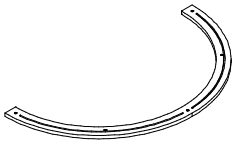
1  X1PC	2  X1PC	3  X1PC
4  X1PC	5  X1PC	6  X1PC
7  X1PC	8  X1PC	9  X2PCS
10  X2PCS	11  X1PC	12  X1PC
13  X1PC	14  X1PC	15  X1PC
16  X1PC	17  X1PC	18  X1PC

19




X1PC

20




X2PCS

21

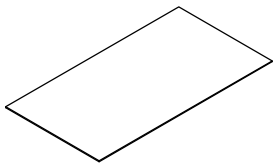


X2PCS

22

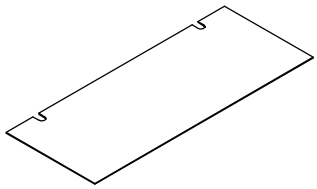


X1PC

23

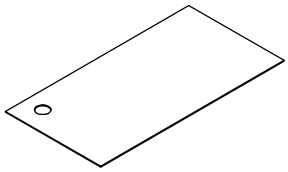


X1PC

24

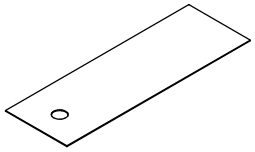


X1PC

25

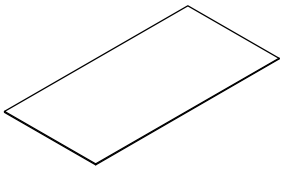


X1PC

26

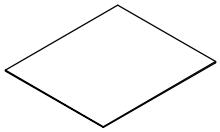


X2PCS

27

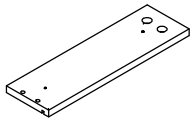


X2PCS

28




X2PCS

29

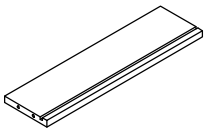


X2PCS

30

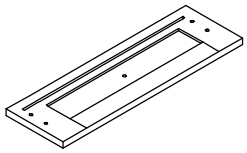


X1PC

31

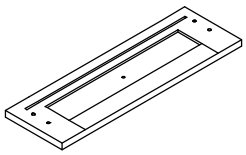


X1PC

32

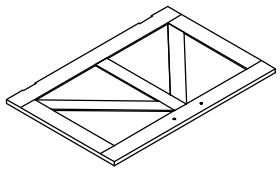


X2PCS

33

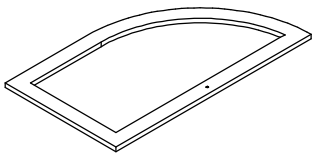





X1PC



34


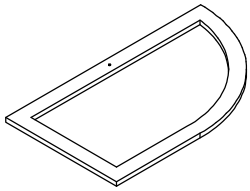


X1PC


Ⓐ X47	Ⓑ X47	Ⓒ X26	Ⓓ X8	Ⓔ X34	Ⓕ X62
			 Plug the hole		
Ø6*35mm	Ø15*9.5mm	Ø6*30mm	Ø20mm	Ø5*40mm	Ø3.5*12mm


Ⓖ X2	Ⓗ X2	Ⓘ X16	Ⓙ X4	Ⓚ X4	Ⓛ X4
					
	Ø3*16mm	Ø3*16mm	300mm		

Ⓜ X2	Ⓝ X6	Ⓞ X4	Ⓟ X2	Ⓠ X1	Ⓡ X1
					
M4*8mm	M4*16mm				


Ⓢ X2	Ⓣ X4	Ⓤ X1
		
Ø4*12&Ø6*30&Ø4*35mm		S4


Step1

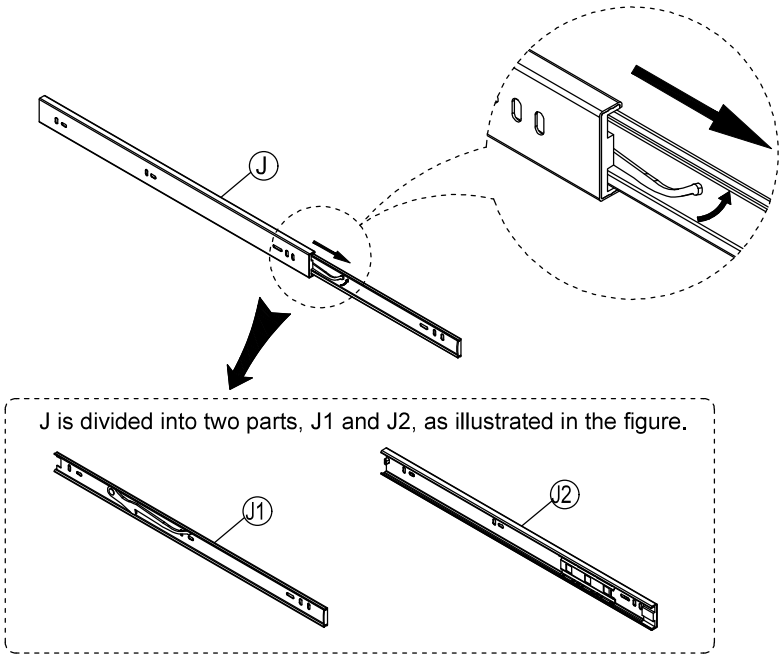

Ⓙ	X4
	
300mm	


Step2

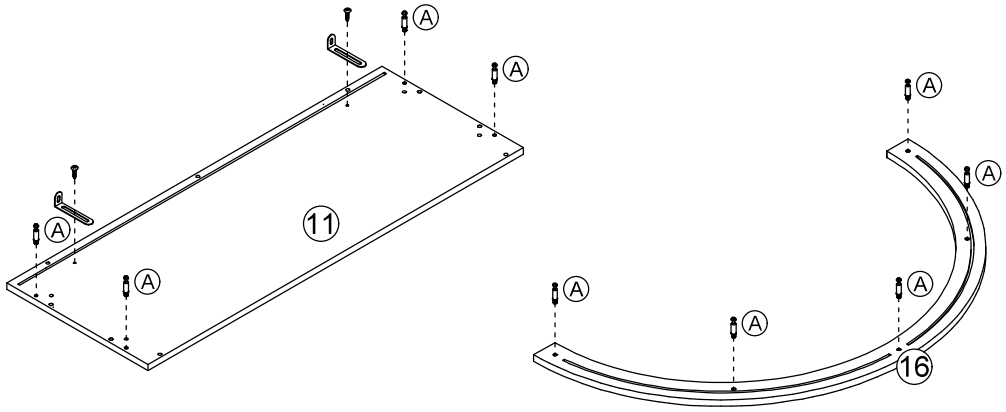


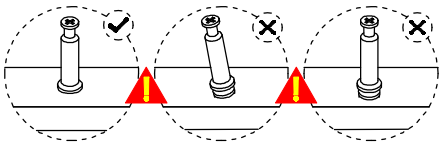

Ⓢ	X2	Ⓐ	X9
			
Ø4*12mm		Ø6*35mm	


Step3

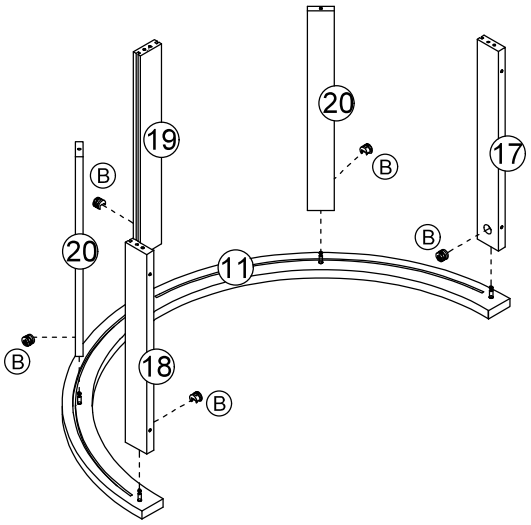

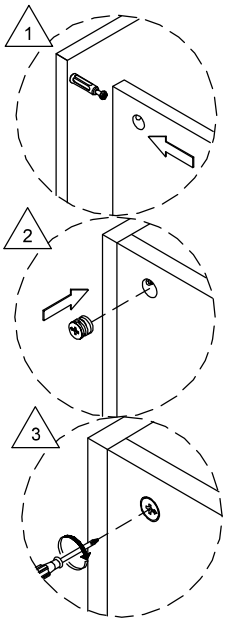


Ⓑ	X5
	
Ø15*9.5mm	

Step4

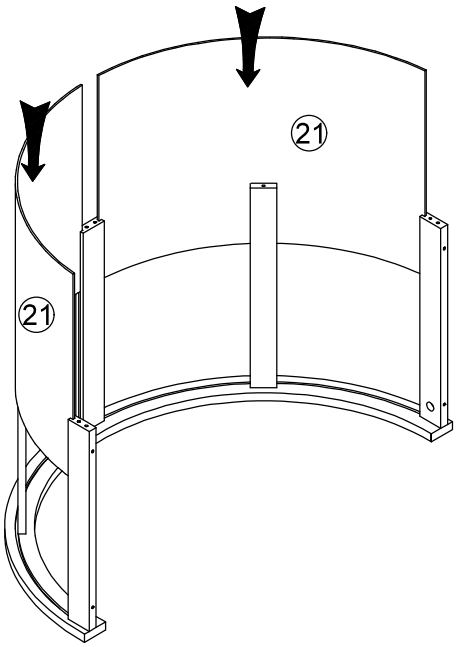


Step5

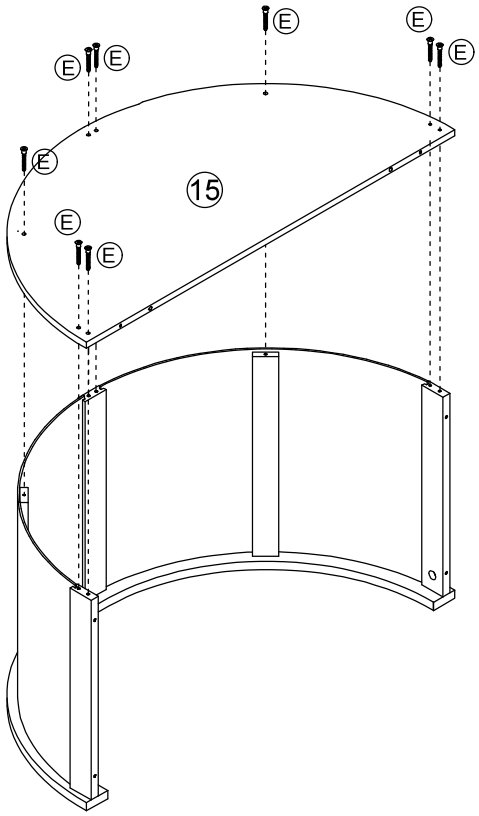


Ⓔ	X8
Ø5*40mm	


Step6

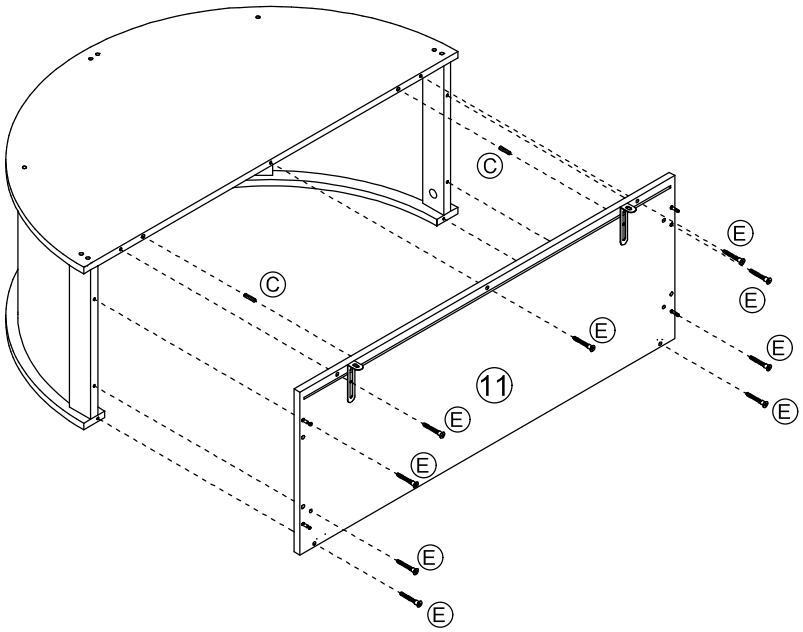



Ⓒ	X2	Ⓔ	X9
Ø6*30mm		Ø5*40mm	


Step7

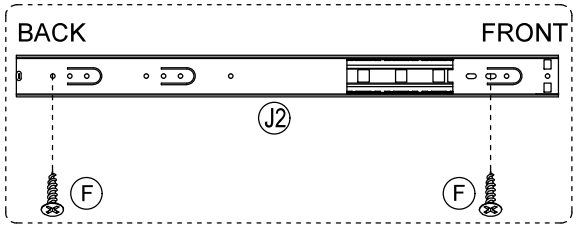

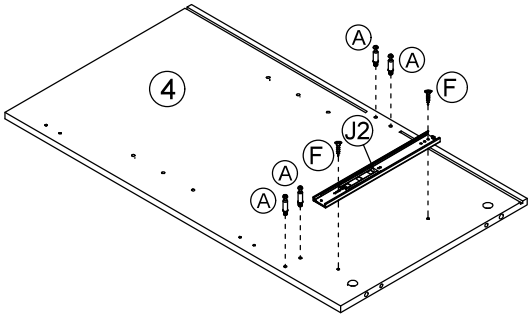


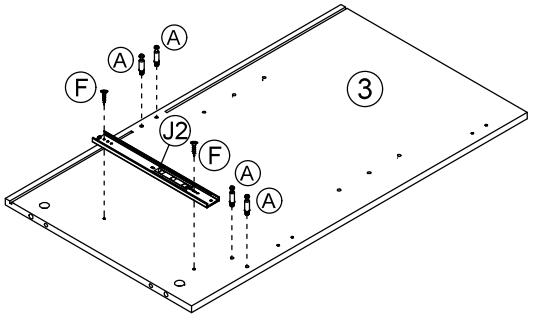

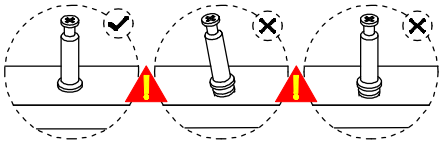


Ⓙ	X2	Ⓕ	X4	Ⓐ	X8
					
300mm		Ø3.5*12mm		Ø6*35mm	


Step8

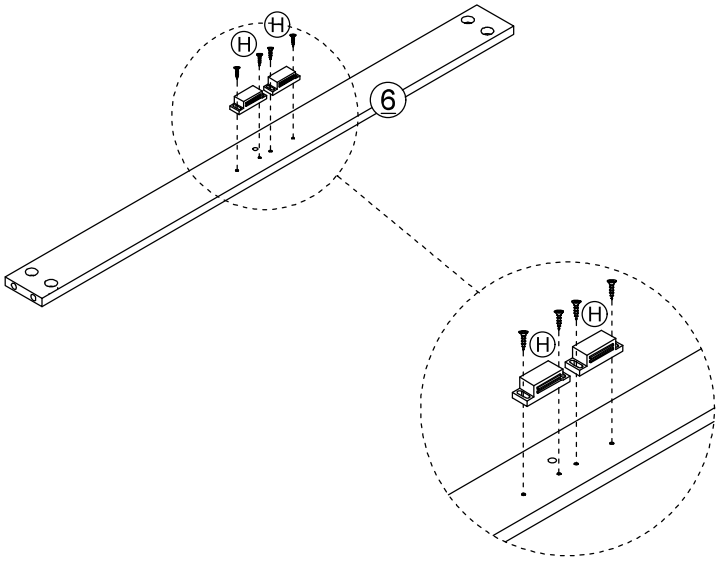

Ⓗ	X2
	
Ø3*16mm	


Step9

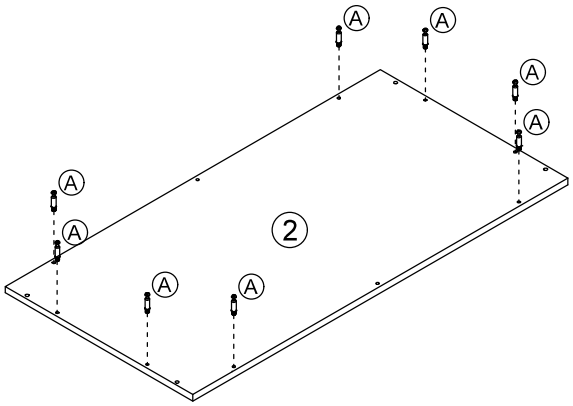


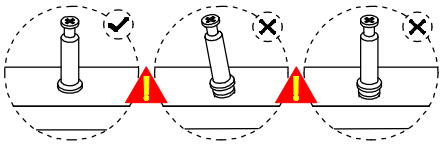

A	X8
	
Ø6*35mm	


Step10

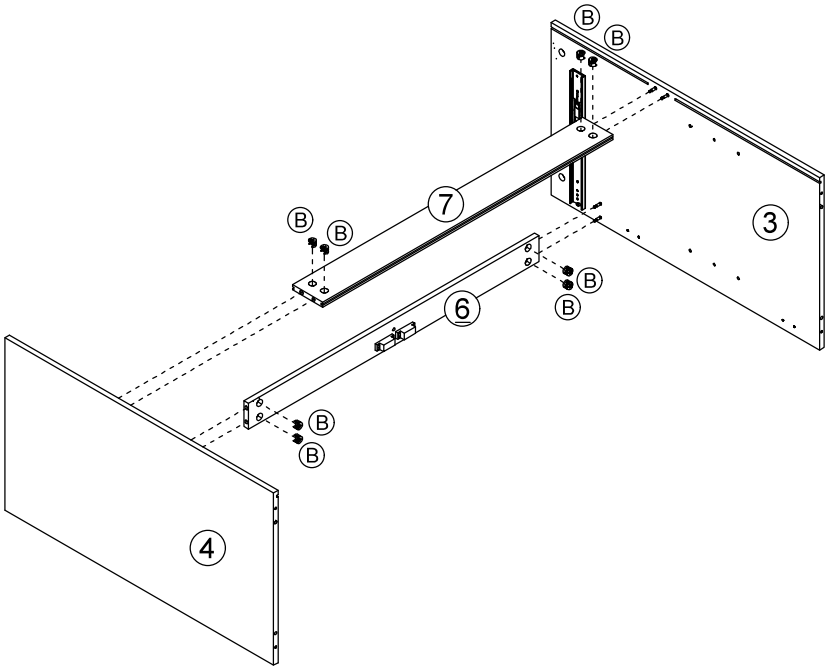

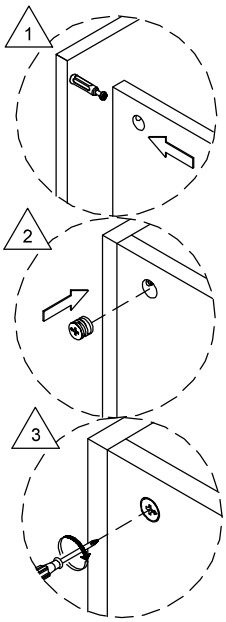


B	X8
	
Ø15*9.5mm	

Step11

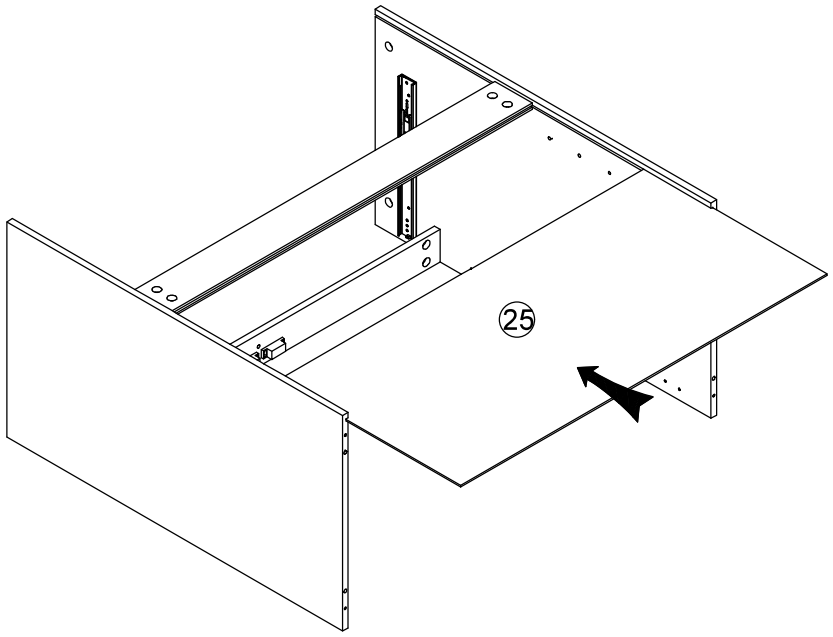



Step12

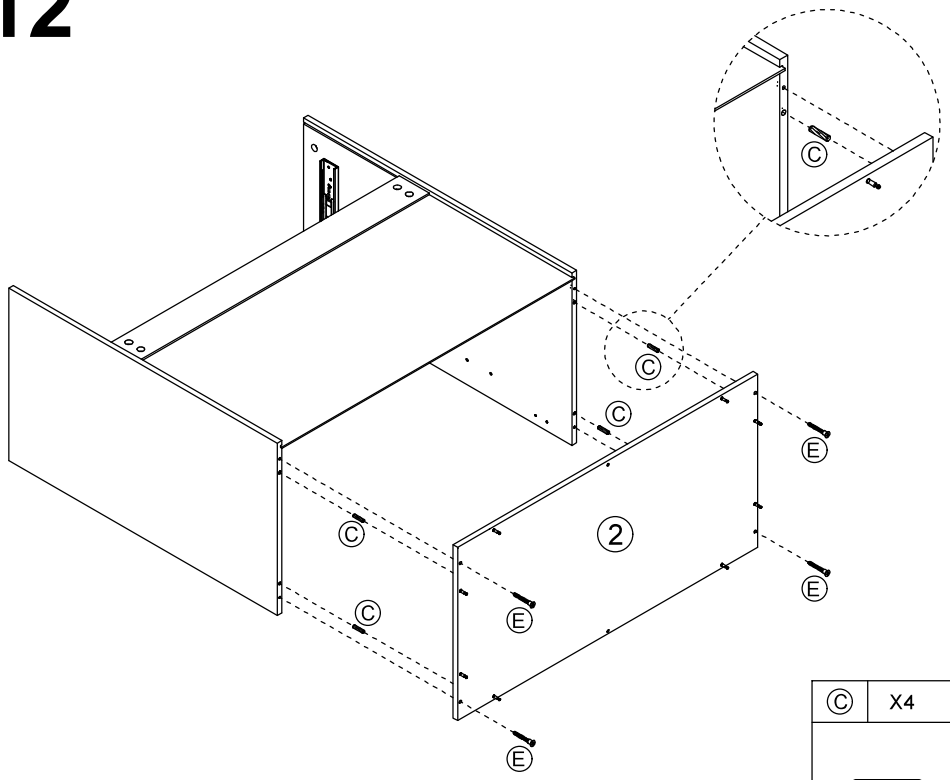


Ⓒ	X4	Ⓔ	X4
			
Ø6*30mm		Ø5*40mm	

Step13

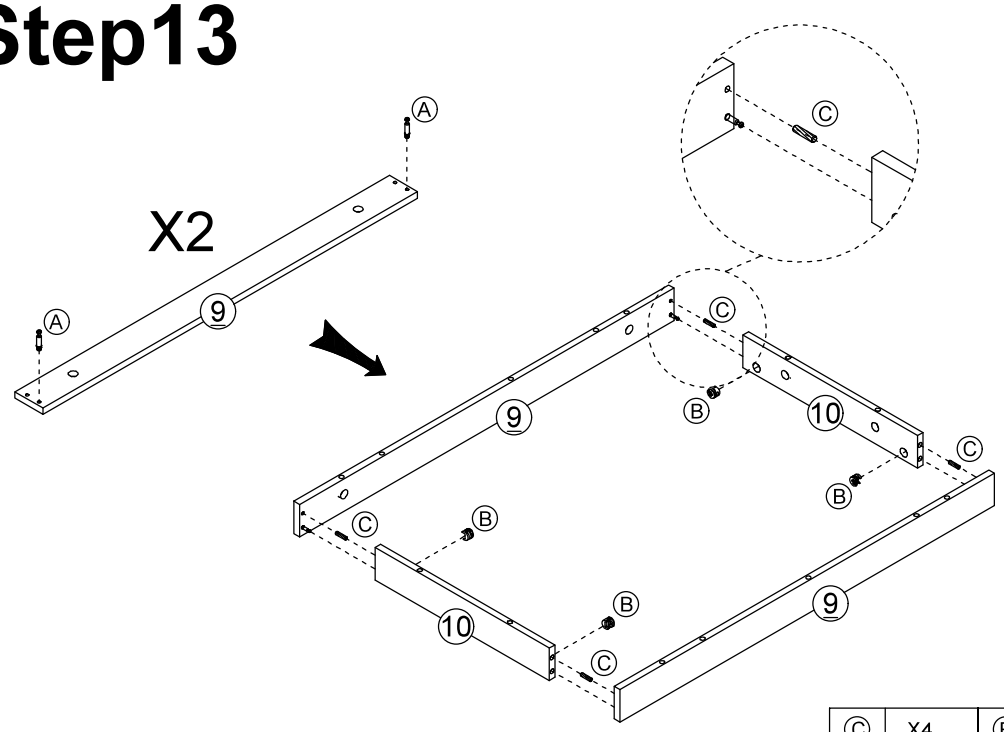


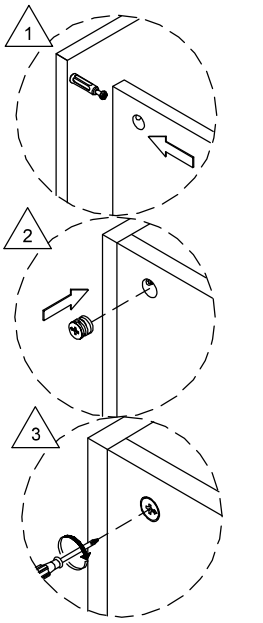


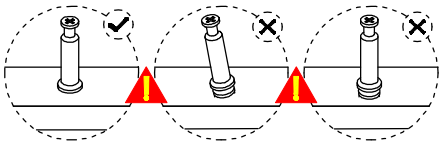

C	X4	B	X4	A	X4
					
Ø6*30mm		Ø15*9.5mm		Ø6*35mm	


Step14

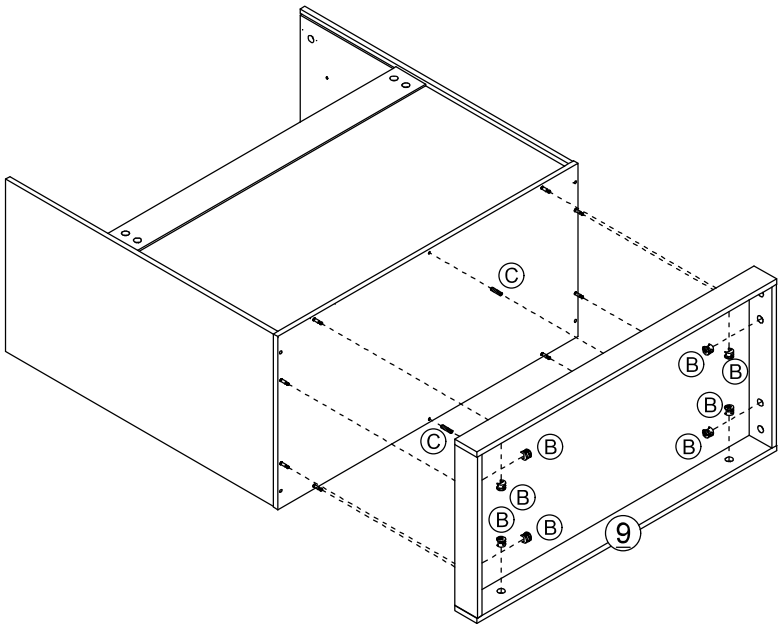


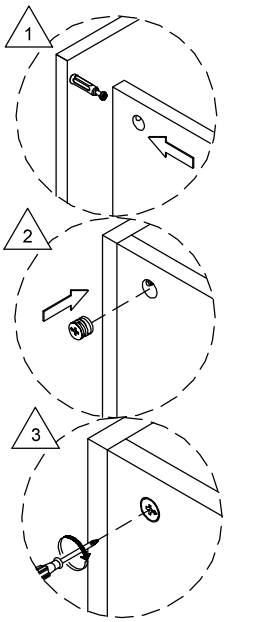

C	X2	B	X8
			
Ø6*30mm		Ø15*9.5mm	


Step15

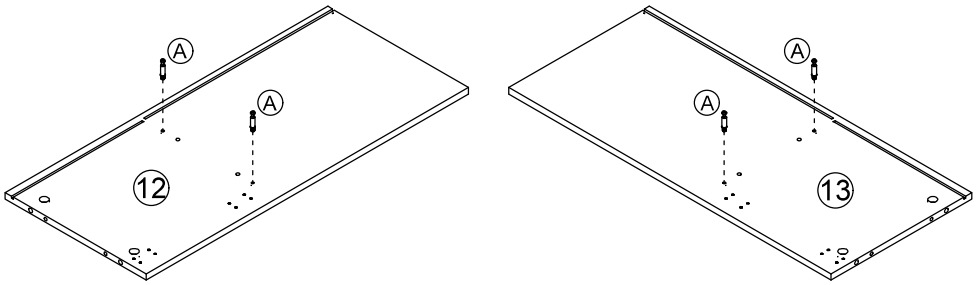


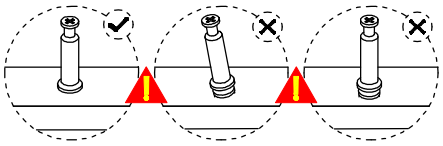

A	X4
	
Ø6*35mm	


Step16

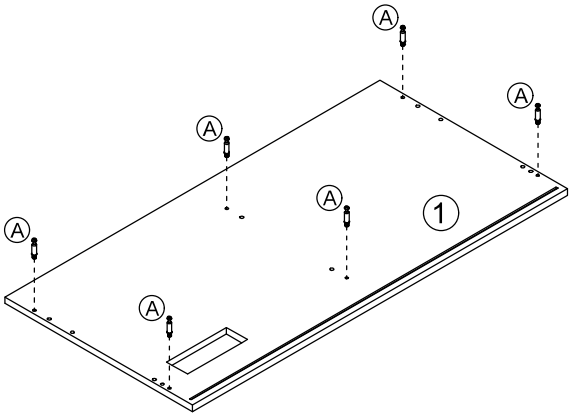

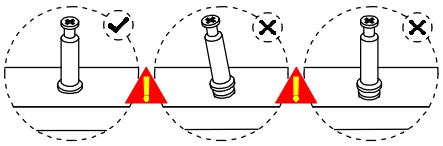


A	X6
	
Ø6*35mm	


Step17

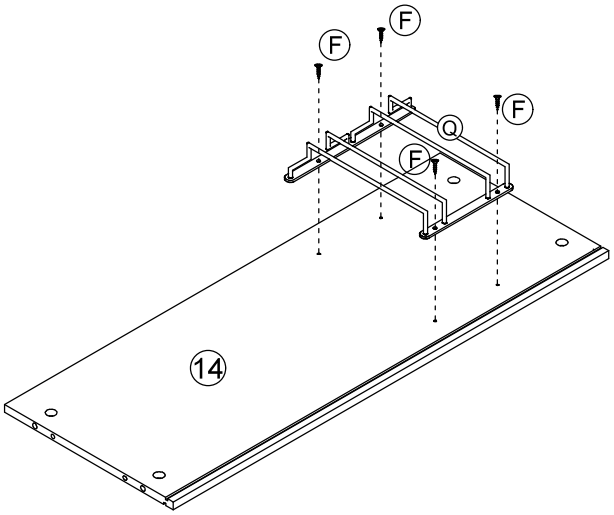

Q	X1	F	X4
			
			Ø3.5*12mm


Step18

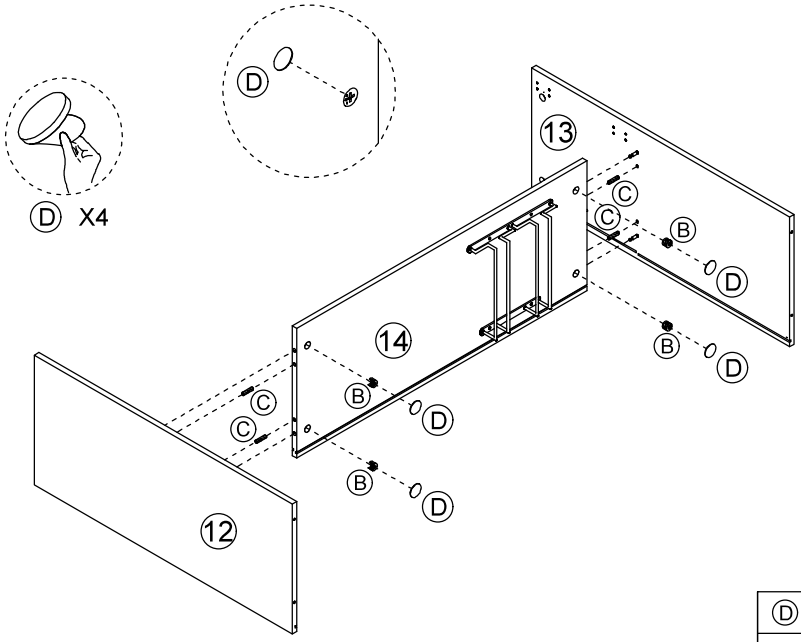

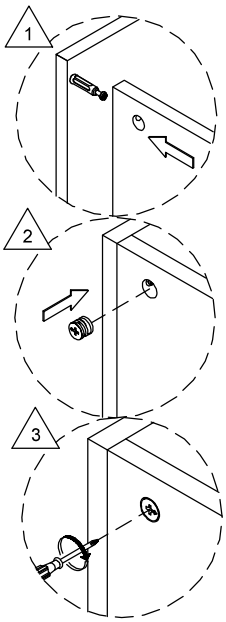


D	X4	C	X4	B	X4
 Plug the hole					
Ø20mm		Ø6*30mm		Ø15*9.5mm	

Step19

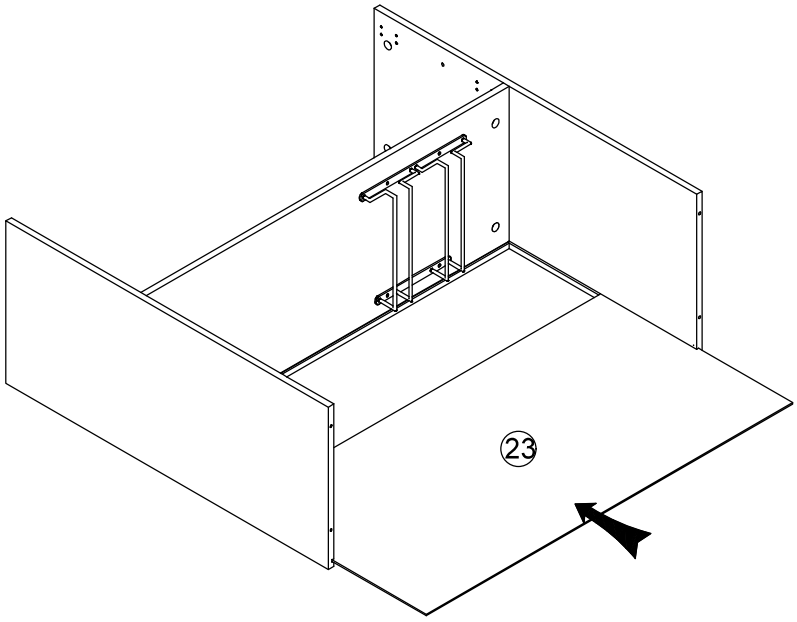



Step20

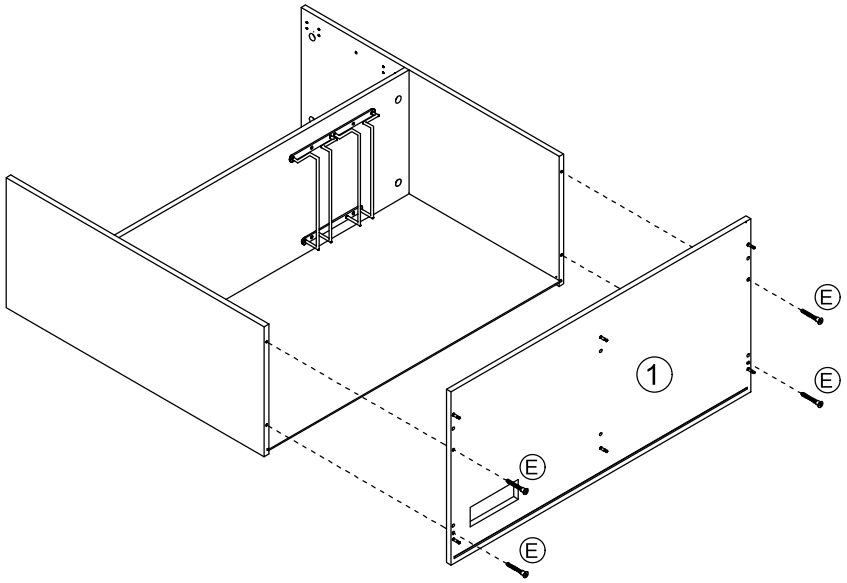



Ⓔ	X4
Ø5*40mm	

Step21

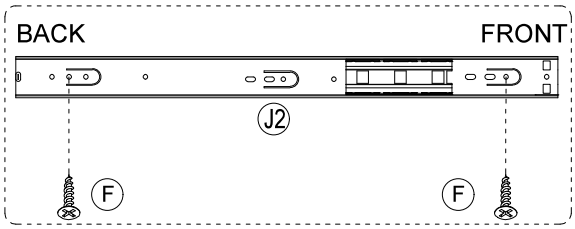


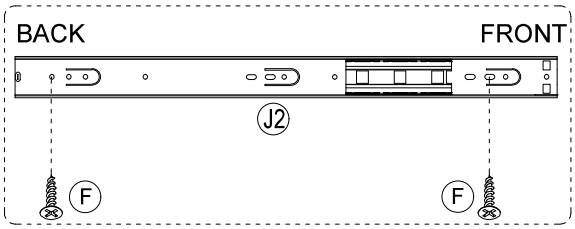


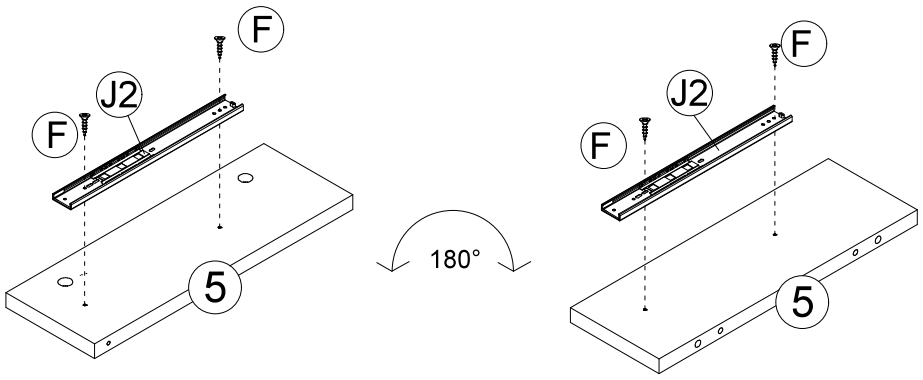

J	X2	F	X4
			
300mm		Ø3.5*12mm	


Step22

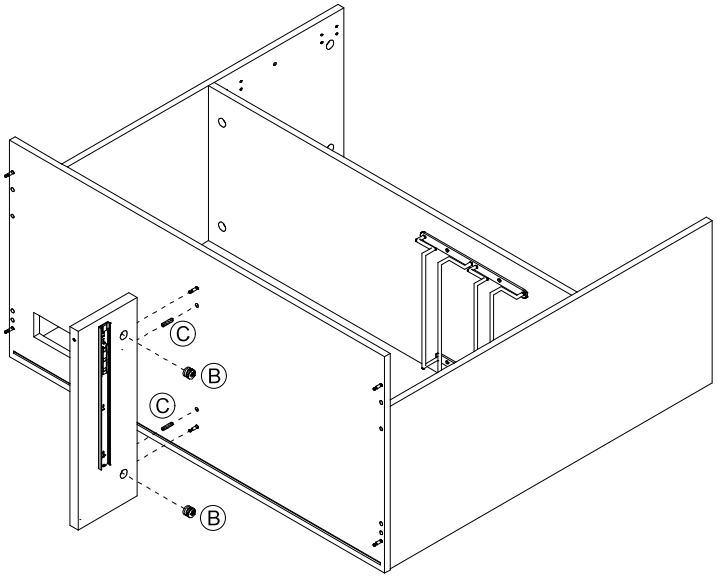

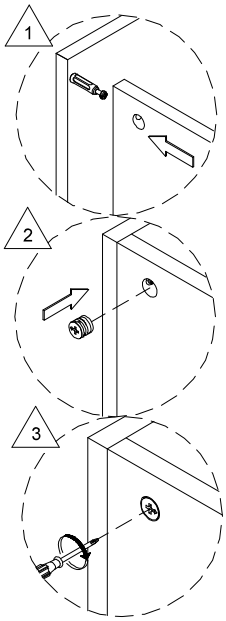


C	X2	B	X2
			
Ø6*30mm		Ø15*9.5mm	


Step23

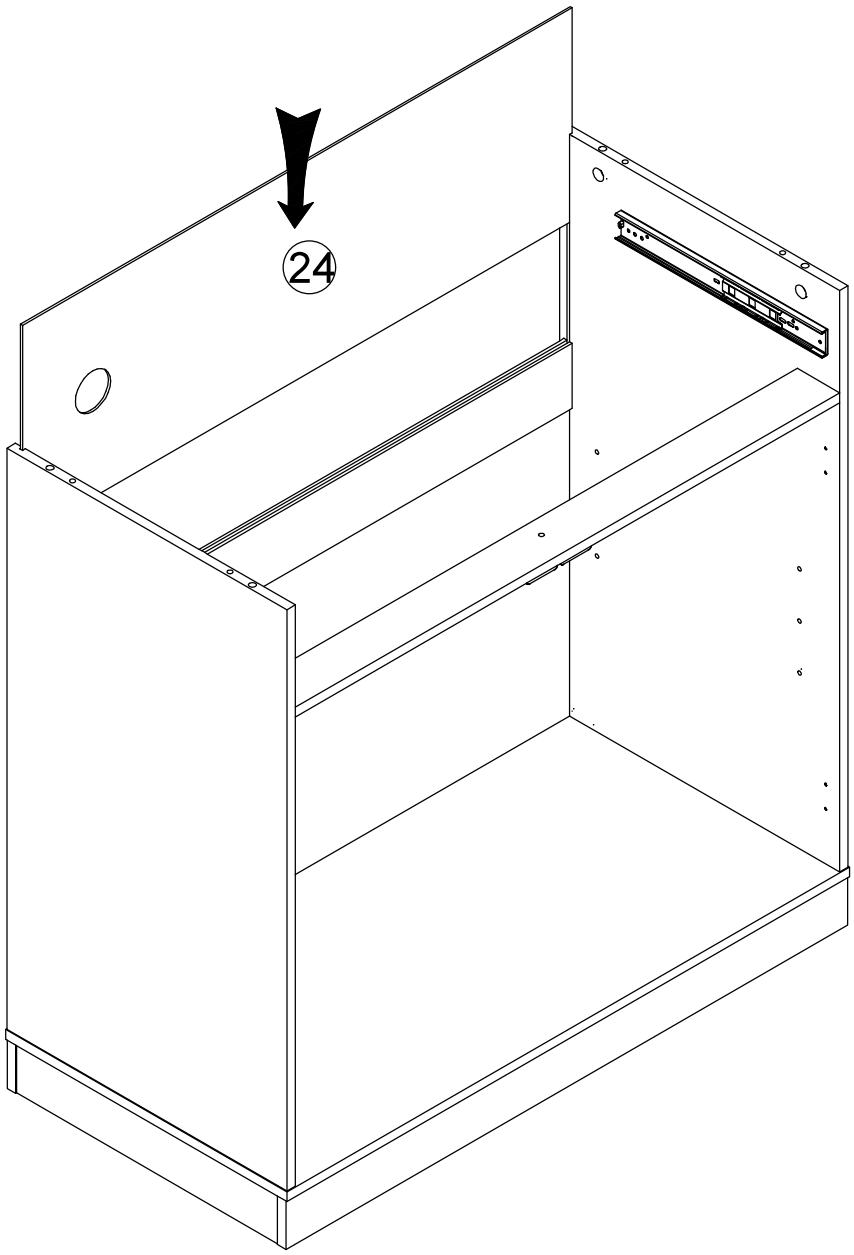


Step24

Two people are needed to install it

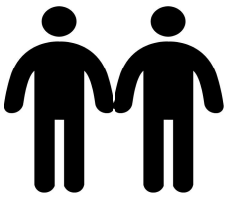


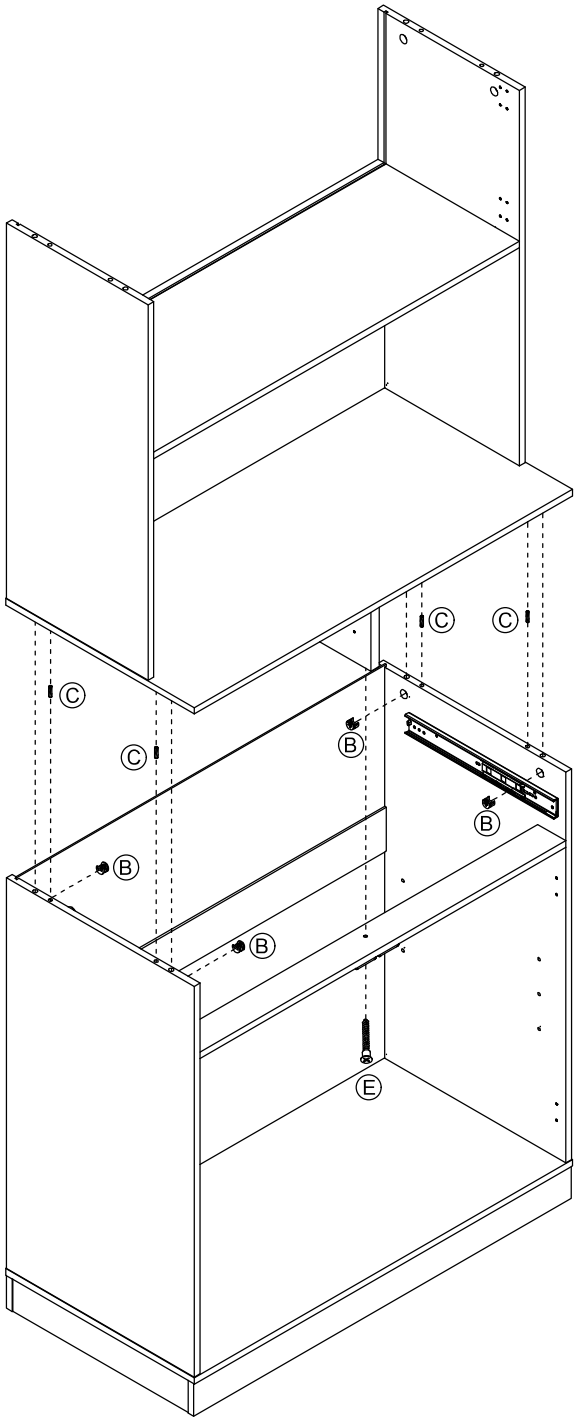

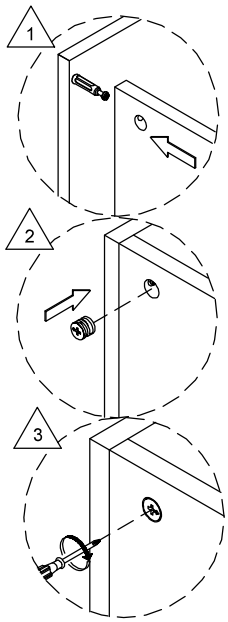


Ⓔ	X1	Ⓒ	X4	Ⓑ	X4
					
Ø5*40mm		Ø6*30mm		Ø15*9.5mm	


Step25

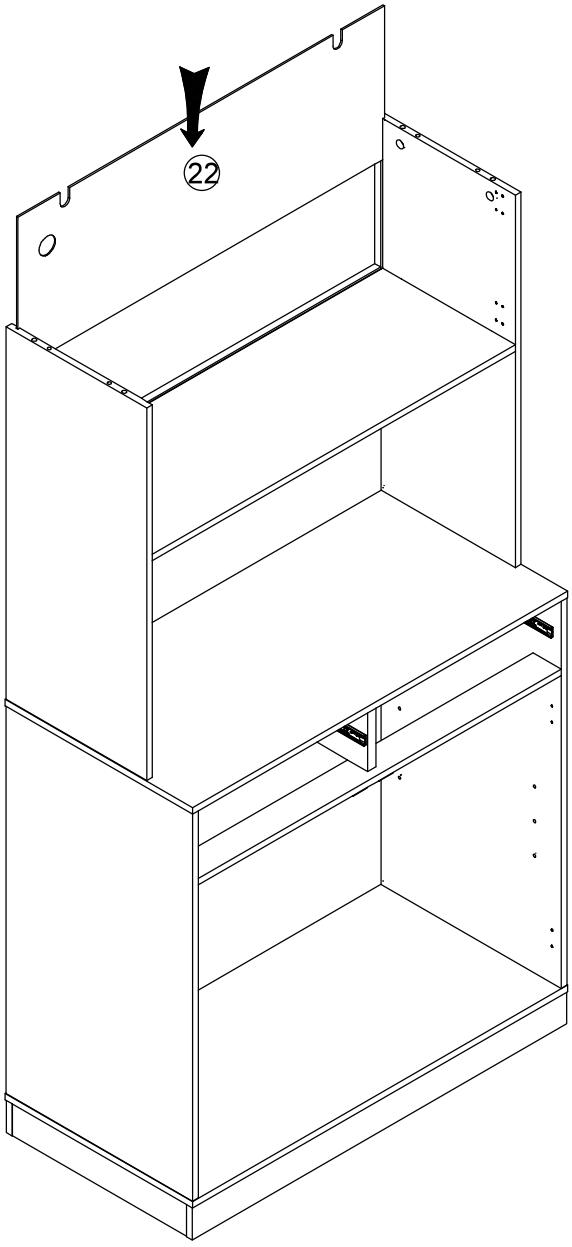

Step26


Two people are needed to install it

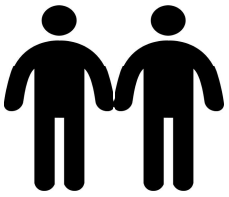


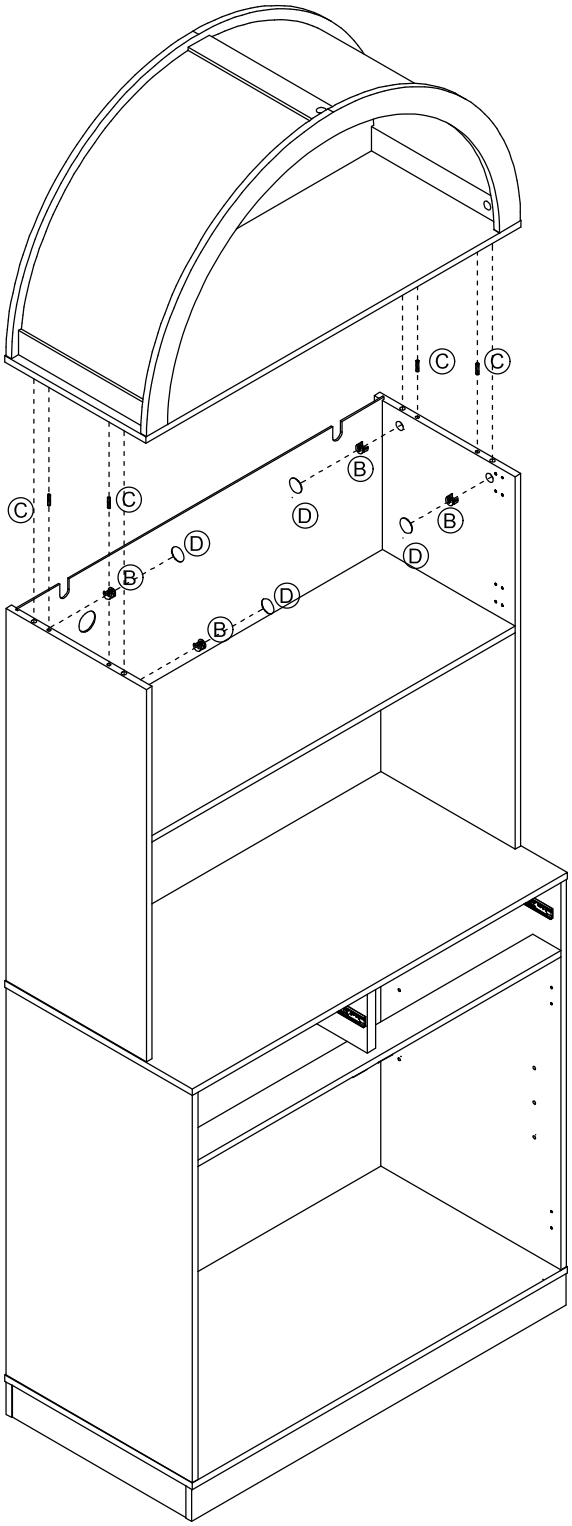




Ⓓ X4

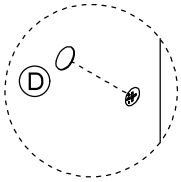


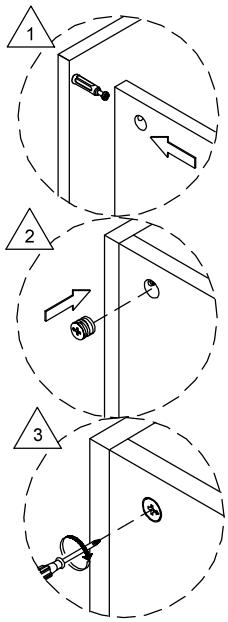

Ⓓ X4	Ⓒ X4	Ⓑ X4
 Plug the hole		
Ø20mm	Ø6*30mm	Ø15*9.5mm


Step27

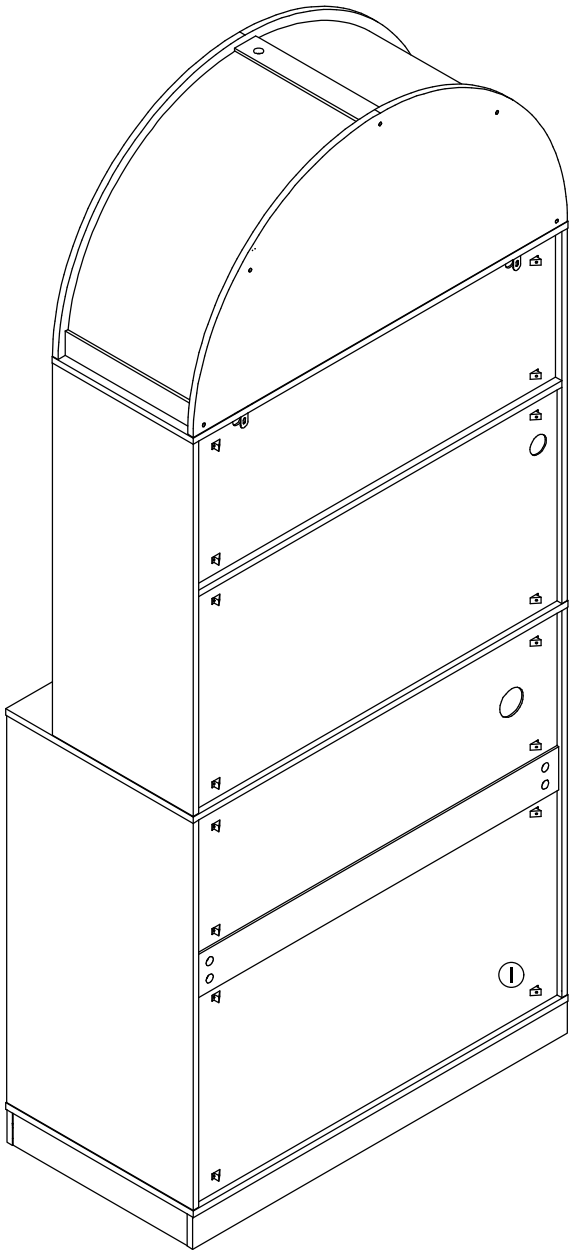


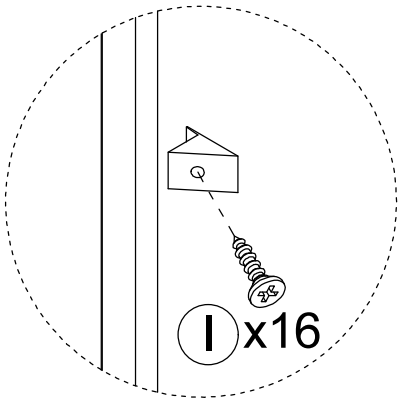


I	X16
	
Ø3*16mm	

Step28

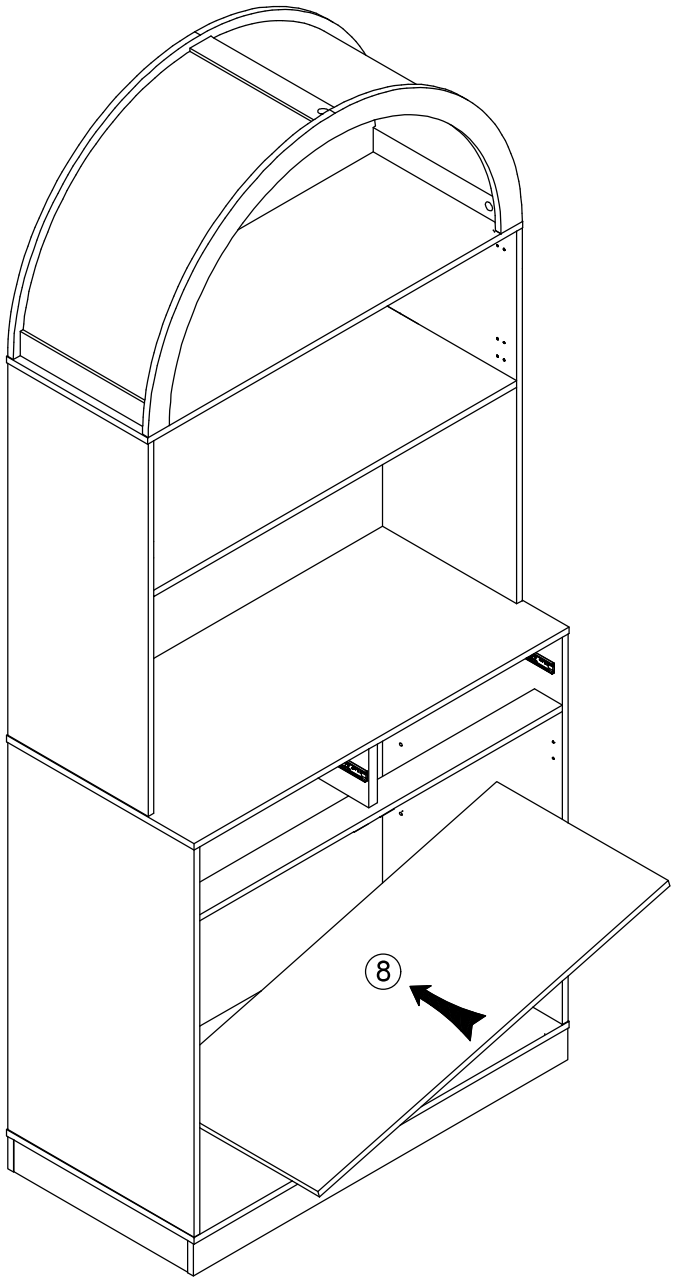


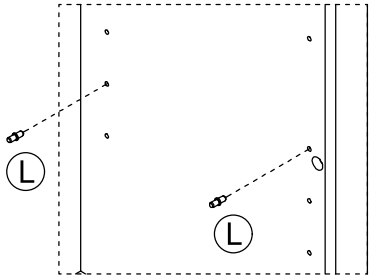


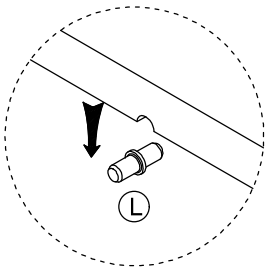

L	X4


Step29

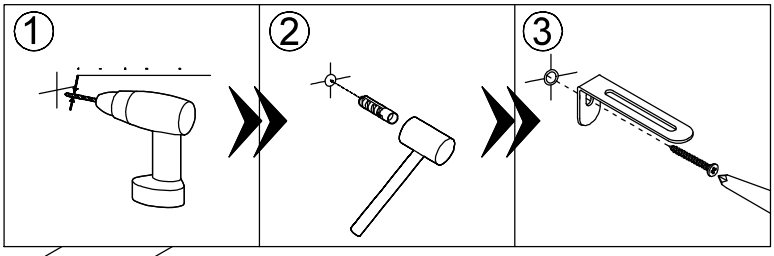

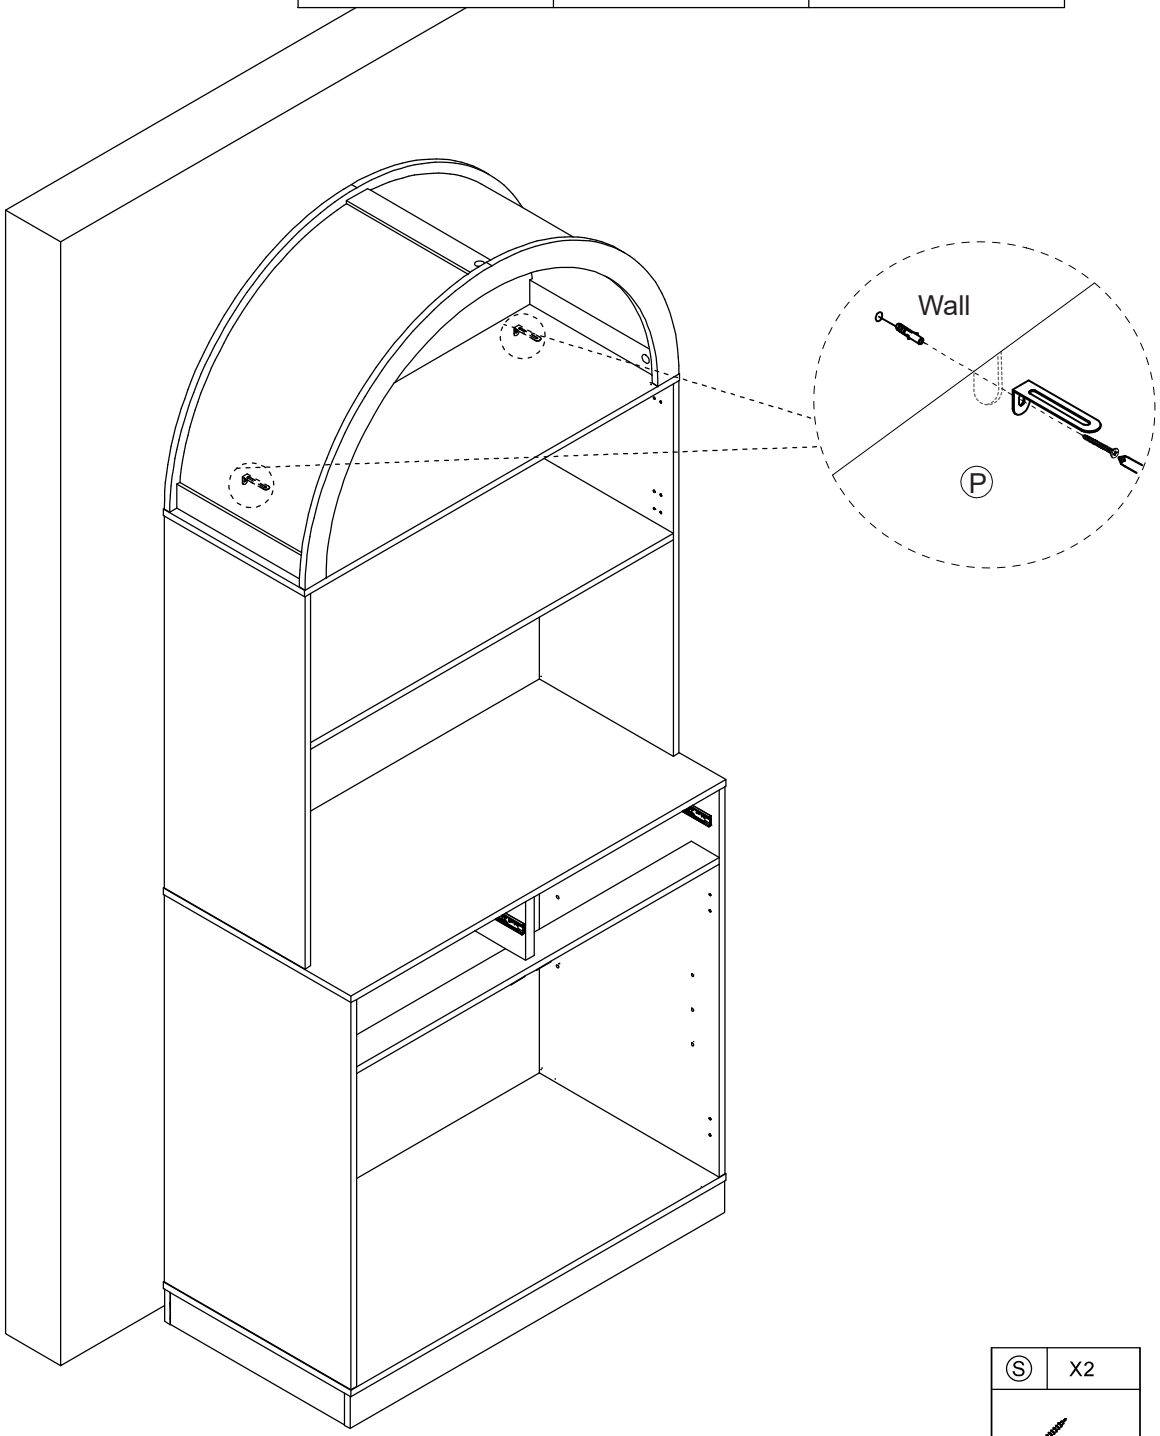


Ⓢ	X2
	
Ø6*30&Ø4*35mm	

Step30

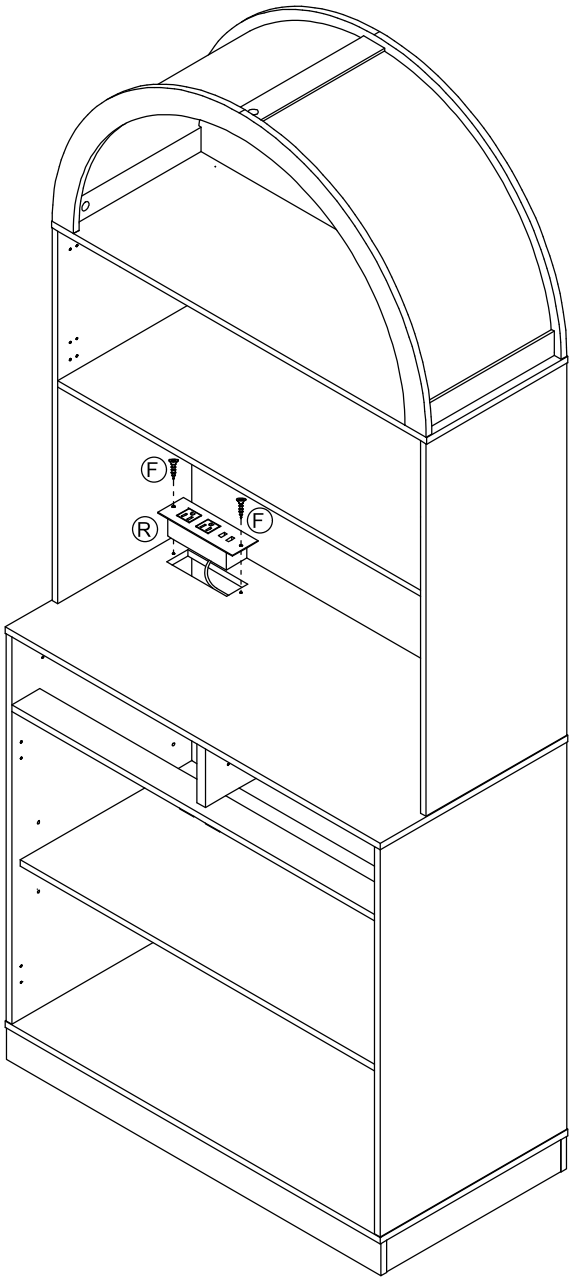


Ⓡ	X1	Ⓕ	X2
			
			Ø3.5*12mm

Step31

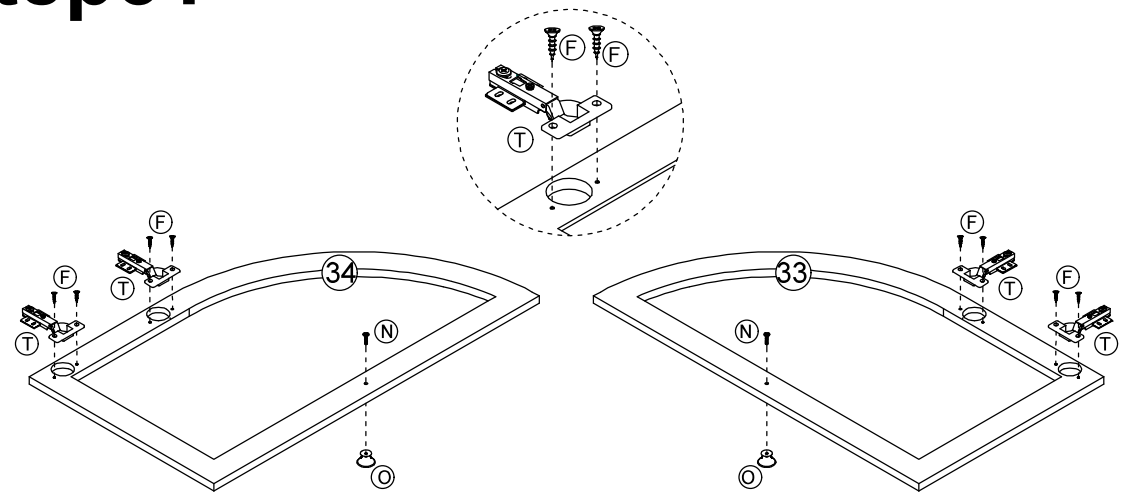

Ⓣ	X4	Ⓞ	X2	Ⓝ	X2	Ⓕ	X8
							
				M4*15mm		Ø3.5*12mm	


Step32

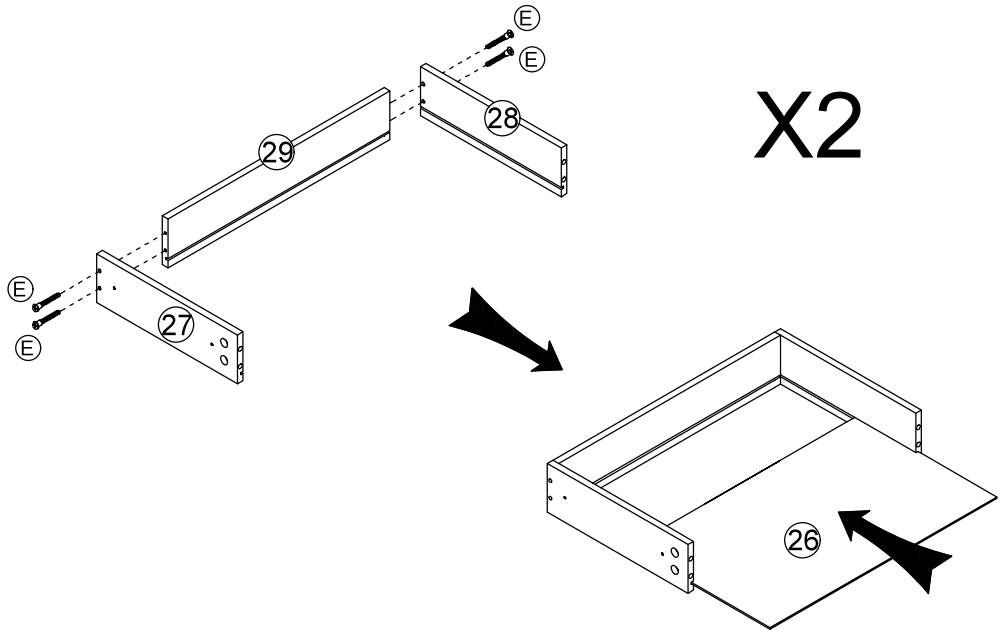



X2

Ⓔ	X8
Ø5*40mm	

Step33

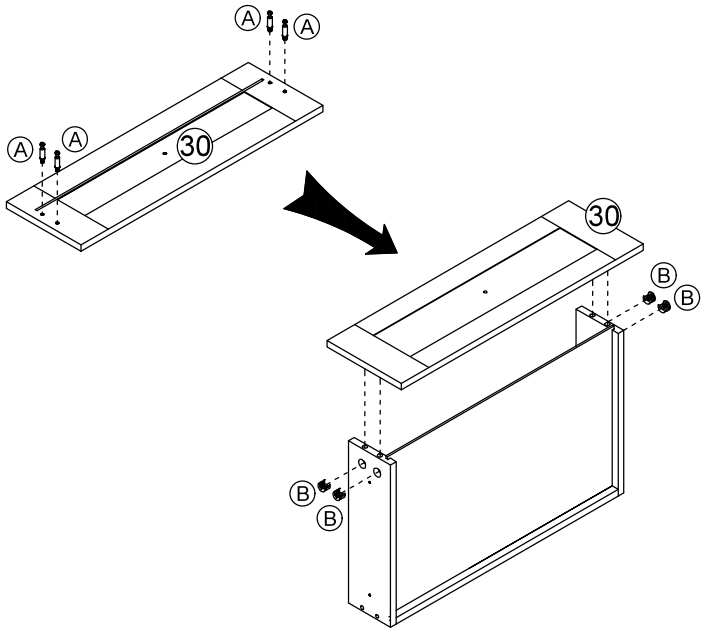


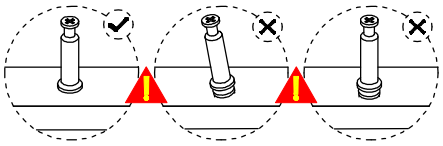


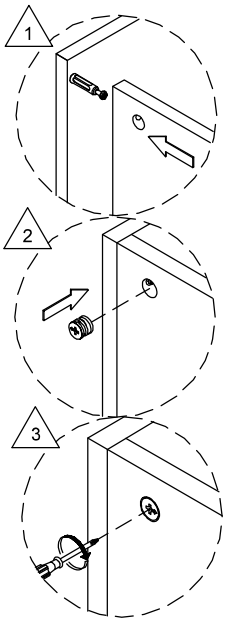


B	X4	A	X4
			
Ø15*9.5mm		Ø6*35mm	

Step34

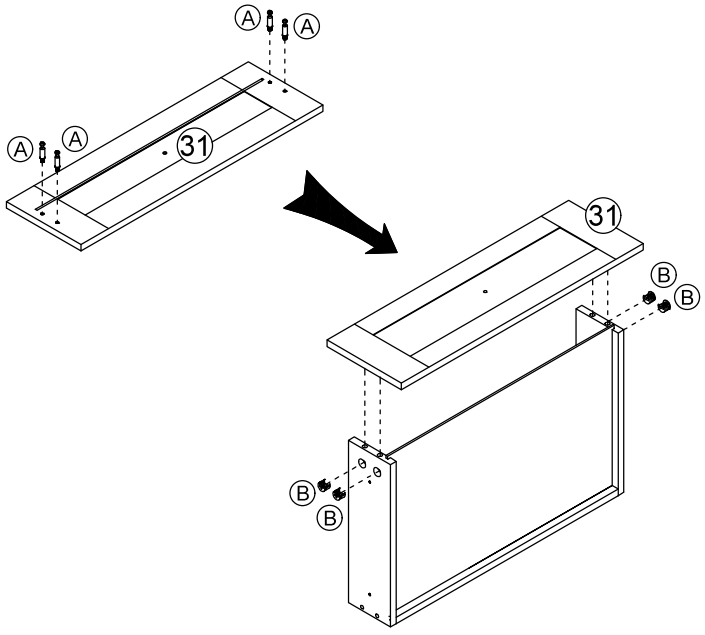


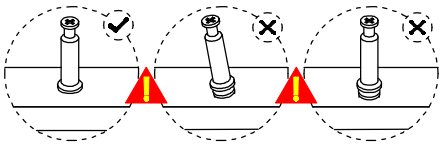


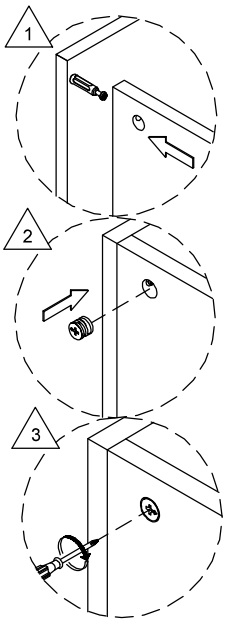


B	X4	A	X4
			
Ø15*9.5mm		Ø6*35mm	


Step35

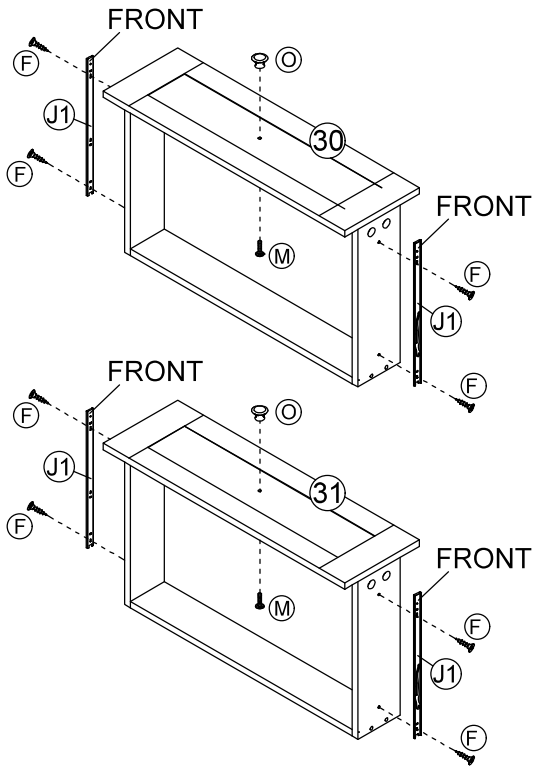


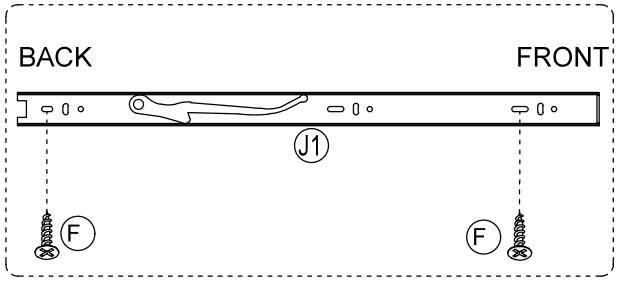

Ⓞ	X2	Ⓜ	X2	Ⓙ	X4	Ⓕ	X8
							
		M4*8mm		300mm		Ø3.5*12mm	


Step36

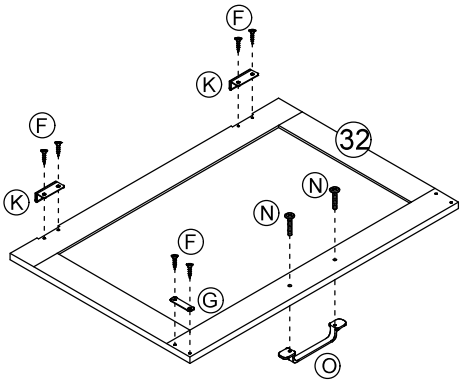


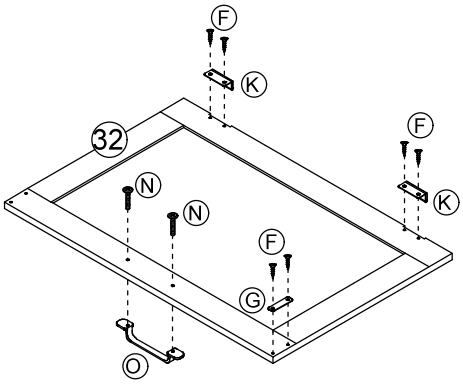

Ⓞ	X2	Ⓝ	X4	Ⓚ	X4	Ⓖ	X2	Ⓕ	X12
									
		M4*15mm						Ø3.5*12mm	

Step37

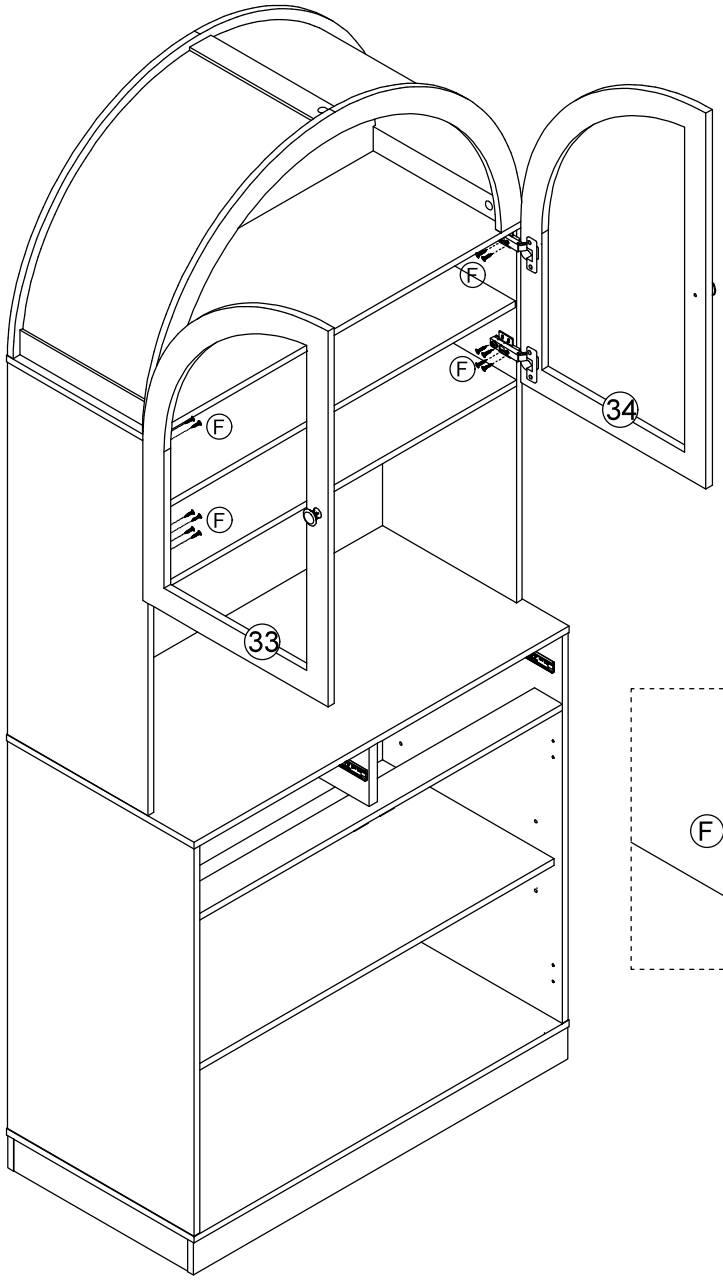

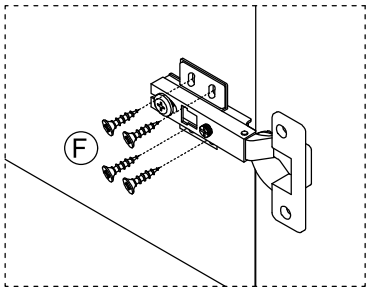



F	X16
Ø3.5*12mm	

Step38


Align with the slide rail position and insert the drawer.

Note: For optimal alignment, please adjust the drawer up and down to fit the tracks properly.

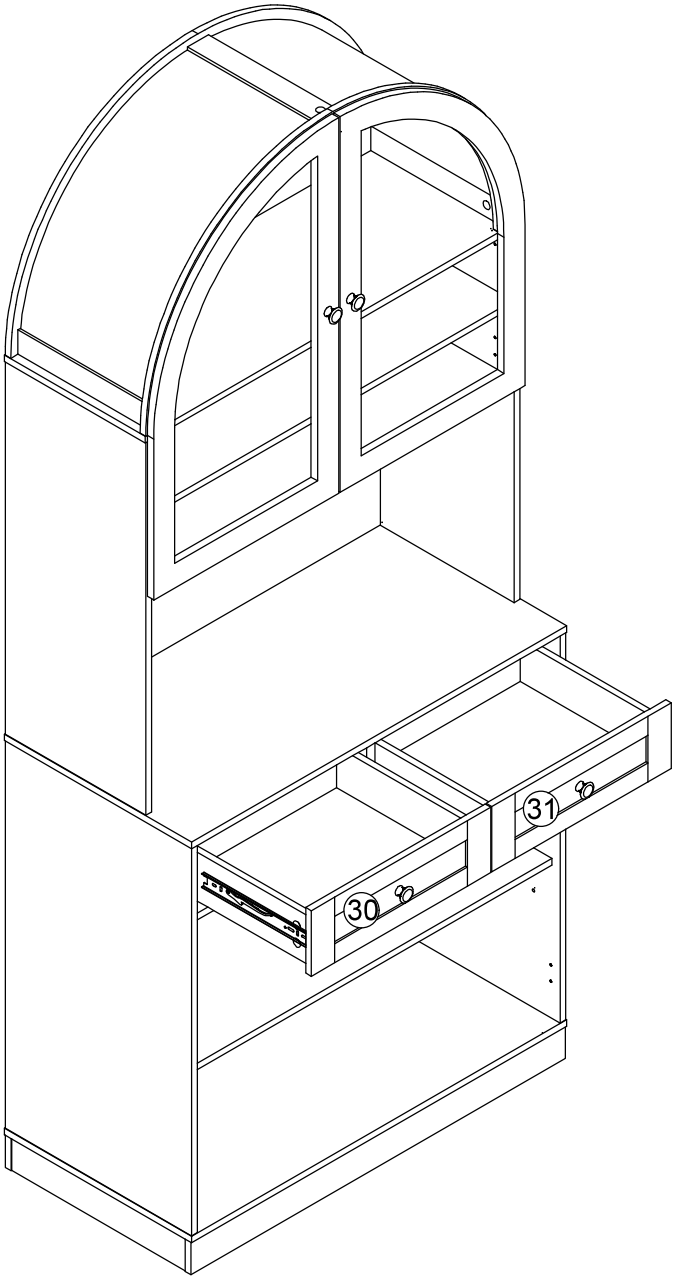

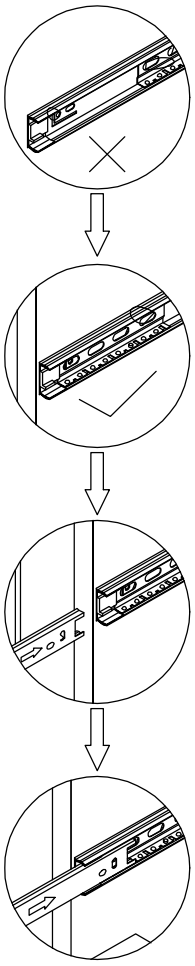


Step39

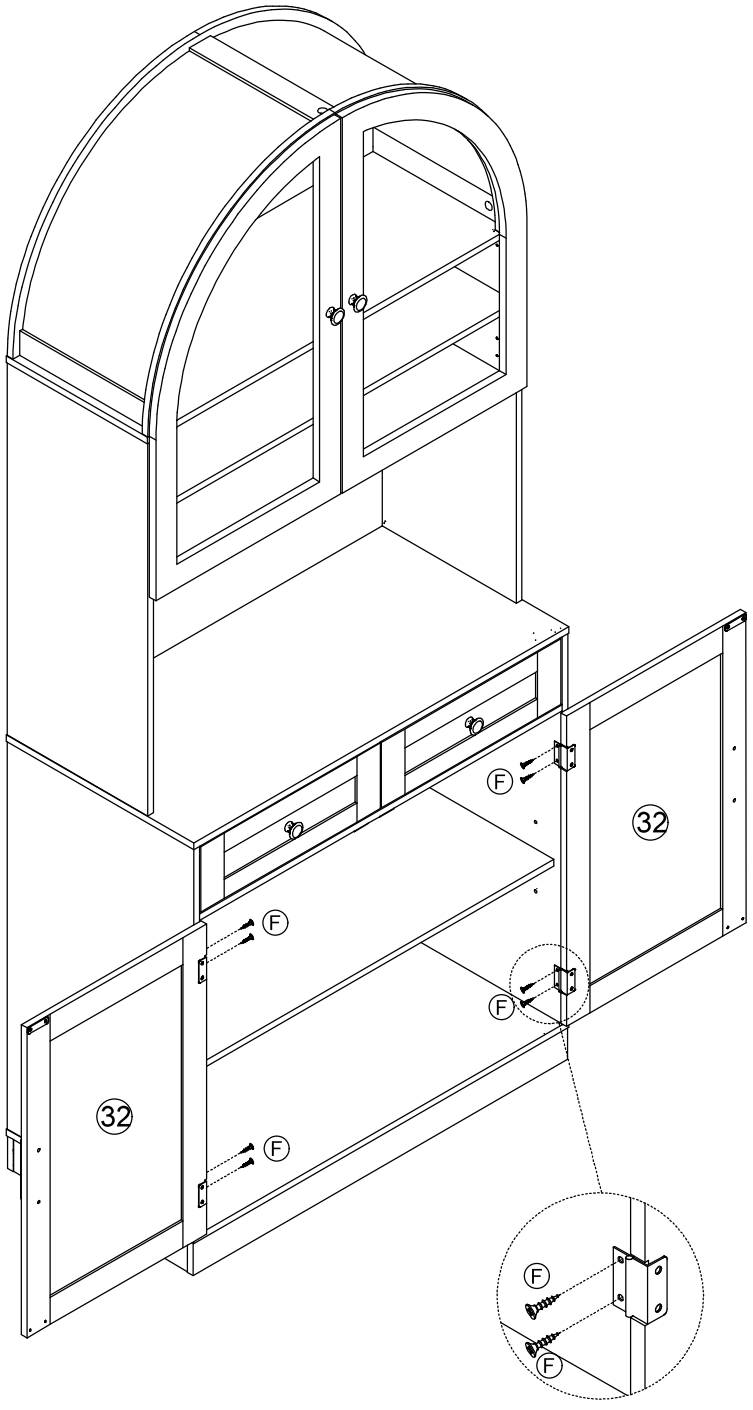

Ⓕ	X8
	
Ø3.5*12mm	

COMPLETE

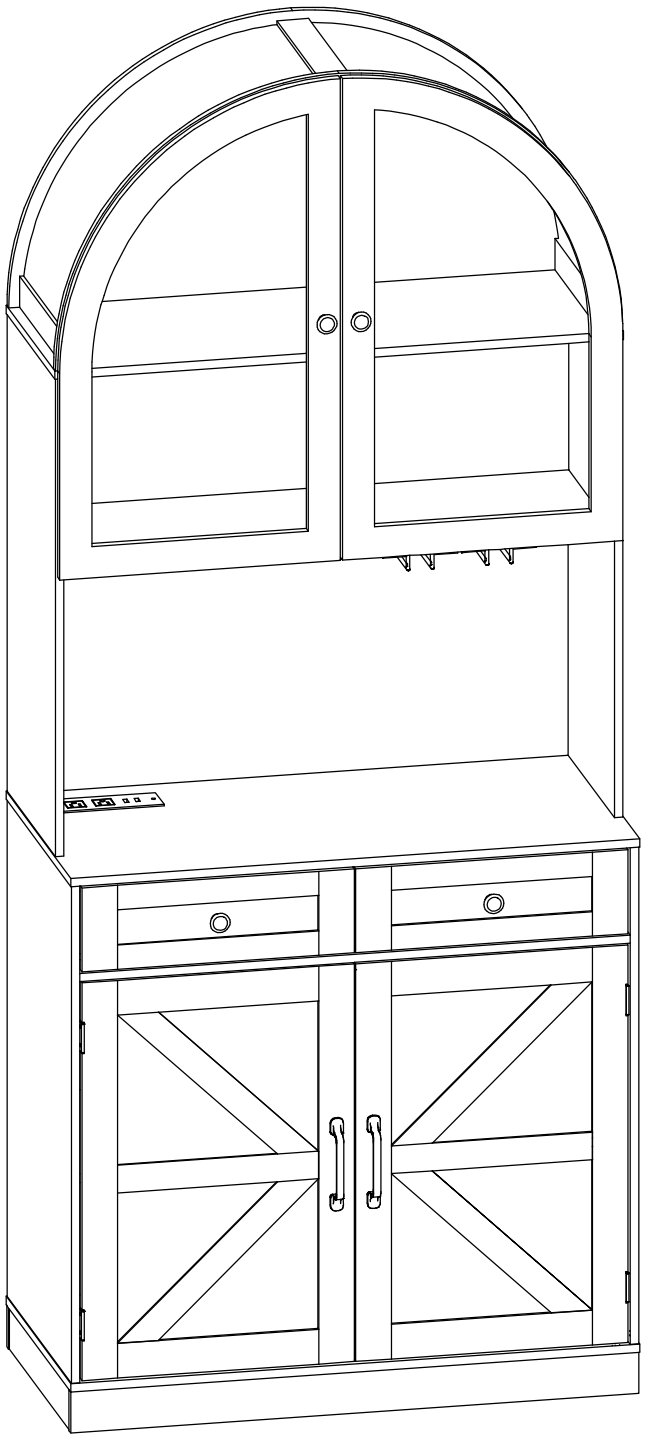


Assembly Steps

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

STEP 1

Open the door.

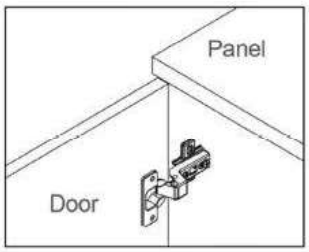

STEP 2

Adjust the door panelsupward or downward



Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3

Adjust the flush between door panel and side panel




MOVE DOOR OUTWARD by turning this screw counter-clockwise

KEEP DOOR IN RIGHT POSITION

MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4

Adjust the Gap beteen door panel and side panel

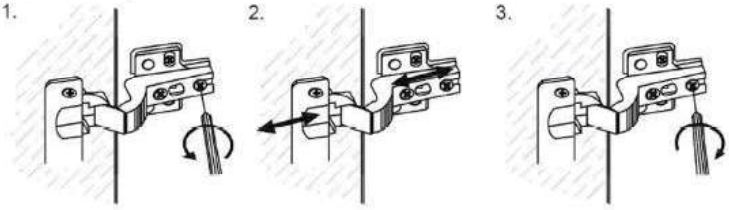

Loosen this screw a bit.

MOVE DOOR BACK OR FORTH

Re-tighten this screw.