




# Assembly Instruction Kitchen Island Iron Handle

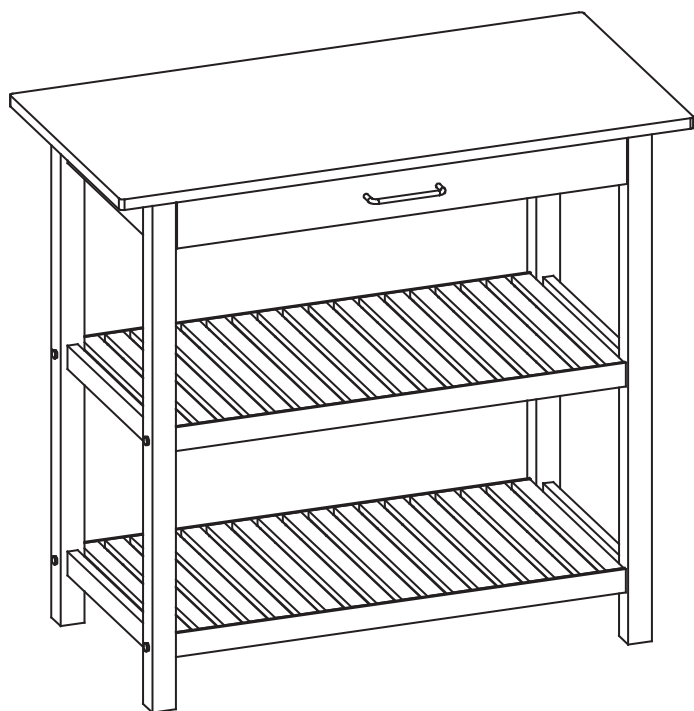


## Parts List

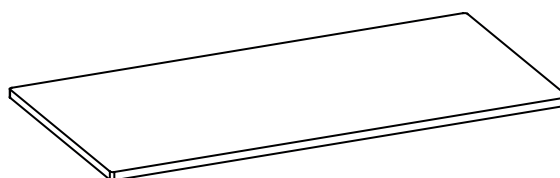


**A**  
Table Top  
1 Pc.

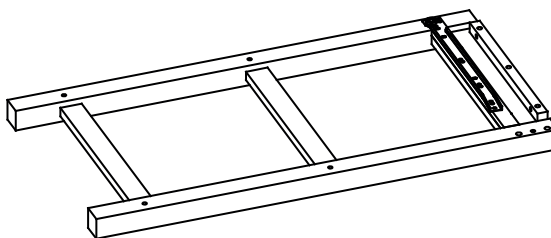


**B**  
Left Panel  
1 Pc.

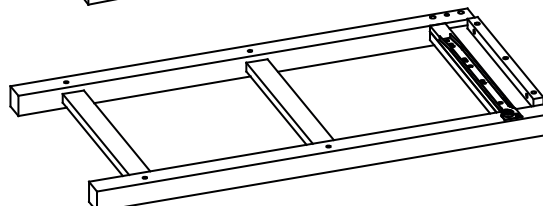


**C**  
Right Panel  
1 Pc.

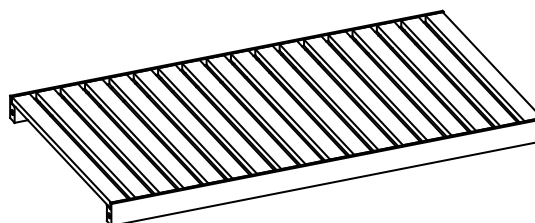


**D**  
Shelves  
2 Pcs.

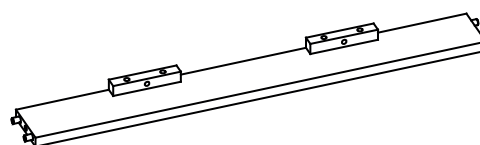

**E**  
Back Panel  
1 Pc.

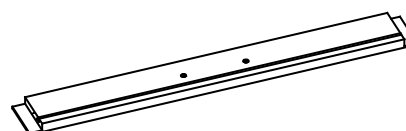

**F**  
Drawer Front  
1 Pc.



**G**  
Drawer Left  
1 Pc.



**H**  
Drawer Right  
1 Pc.



**I**  
Drawer Back  
1 Pc.




**J**  
Drawer Plate  
1 Pc.


## Hardware




Drywall F6 x 1"  
RF10030  
8 Pcs.



JCB M6 x 30  
RF10052  
6 Pcs.




JCB M6 x 50  
RF10034  
10 Pcs.

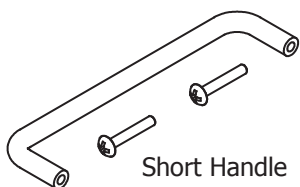


Short Handle  
RF40153  
1 Set



Wood Plug  
RF40001  
10 Pcs.

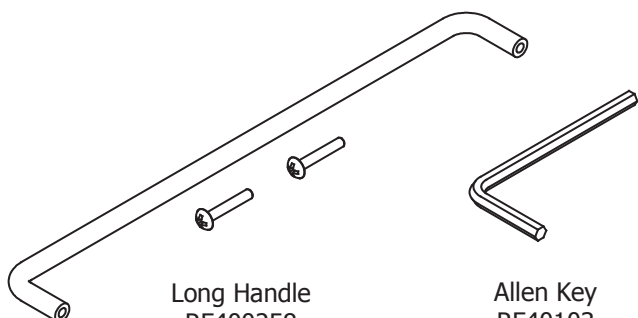

Long Handle  
RF400258  
1 Set

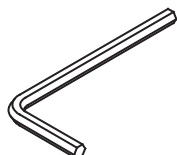

Allen Key  
RF40103  
1 Pc.

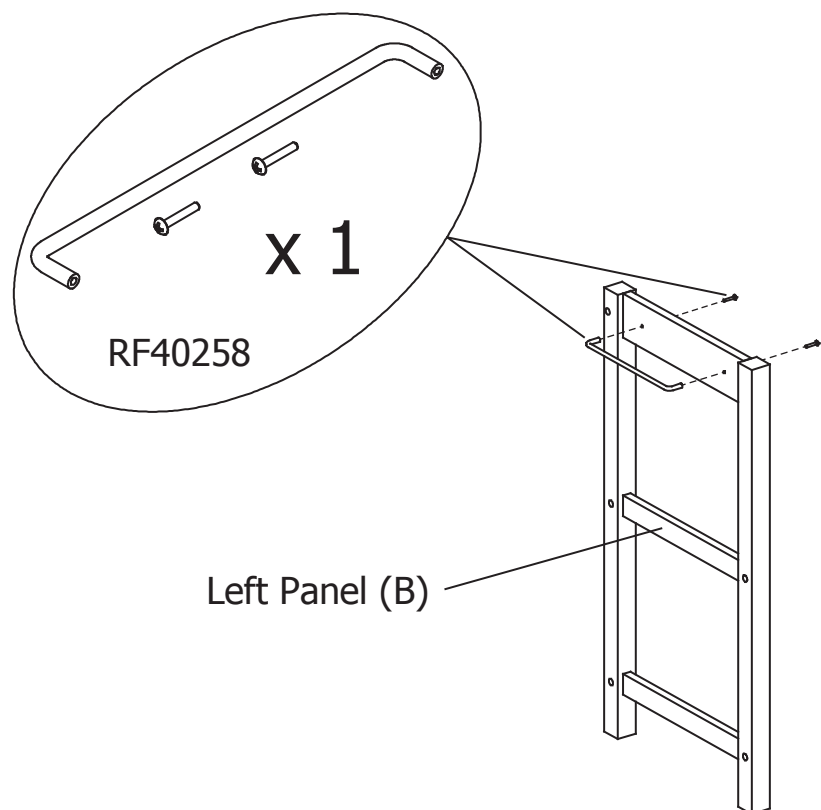


Diagram 1.

### Step 1.

Attach Long Handle (RF40258) into the Left Panel (B) as per Diag.1.

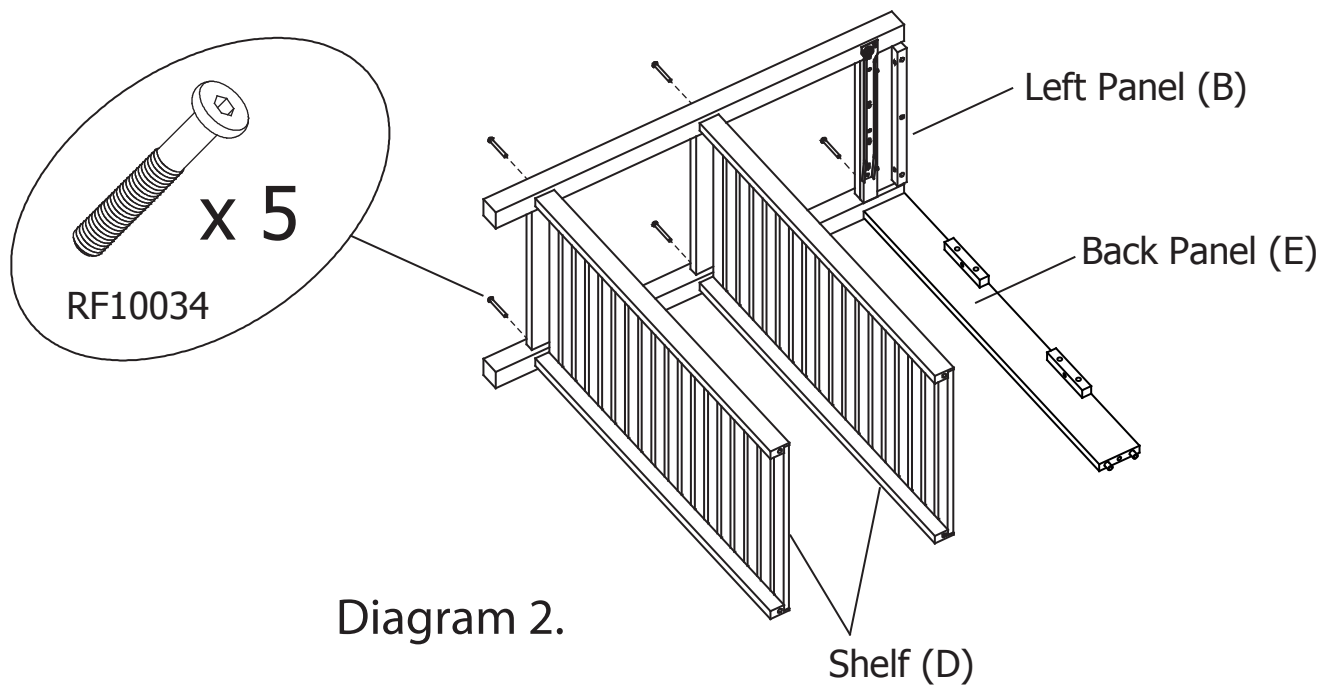


Diagram 2.

### Step 2.

Attach Left Panel (B), 2 Shelves (D) and Back Panel (E) together using 5 screws (RF10034) as per Diag.2.

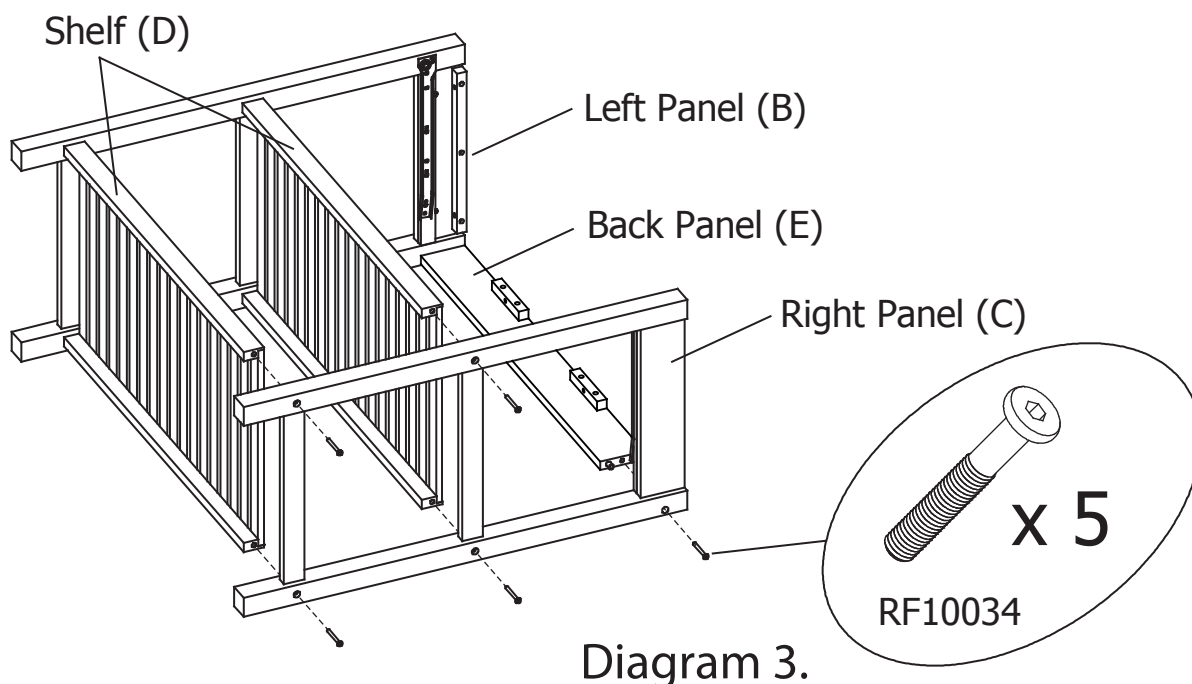


Diagram 3.

### Step 3.

Attach Right Panel (C) into Shelves (D) and Back Panel (E) using 5 screws (RF10034) as per Diag.3.

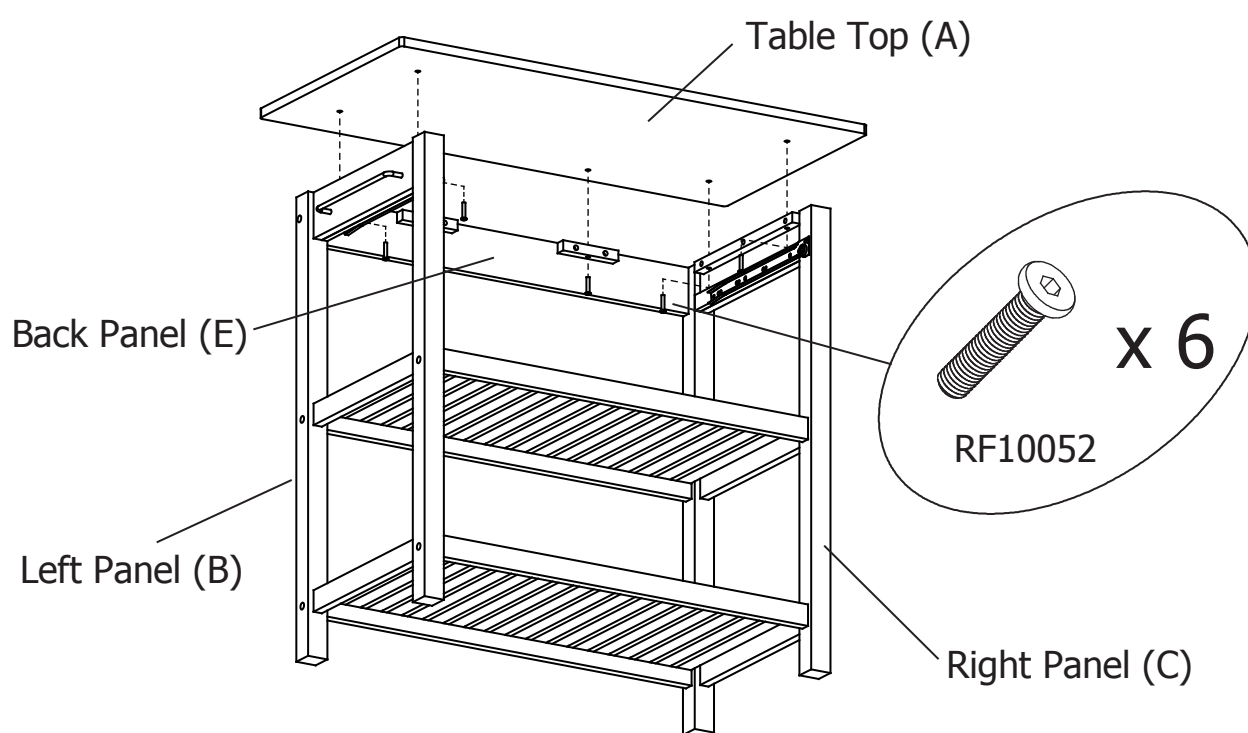


Diagram 4.

### Step 4.

Attach Table Top (A) onto the unit using 6 screws (RF10052) as per Diag.4.


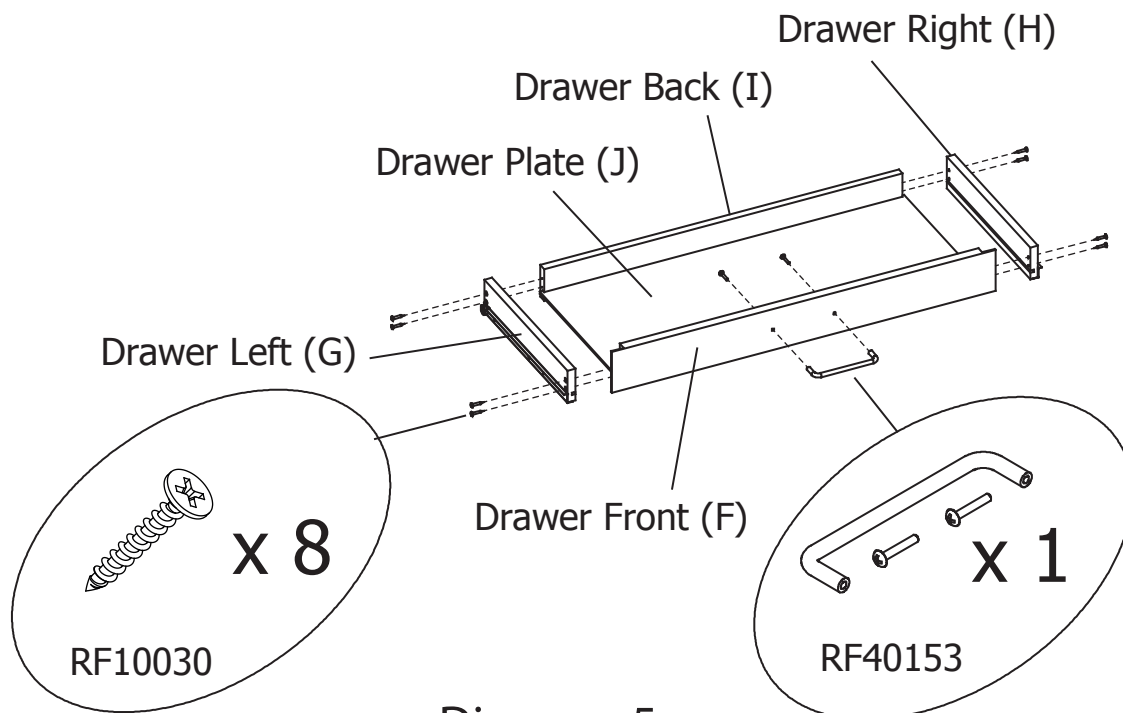


Diagram 5.

## Step 5.

- Attach Short Handle (RF40153) into the Drawer Front (F).
- Assemble the drawer by attaching the Drawer Front (F), Drawer Left (G), Drawer Right (H), Drawer Back (I) and Drawer Plate (J) together using 8 screws (RF10030) as per Diag.5.

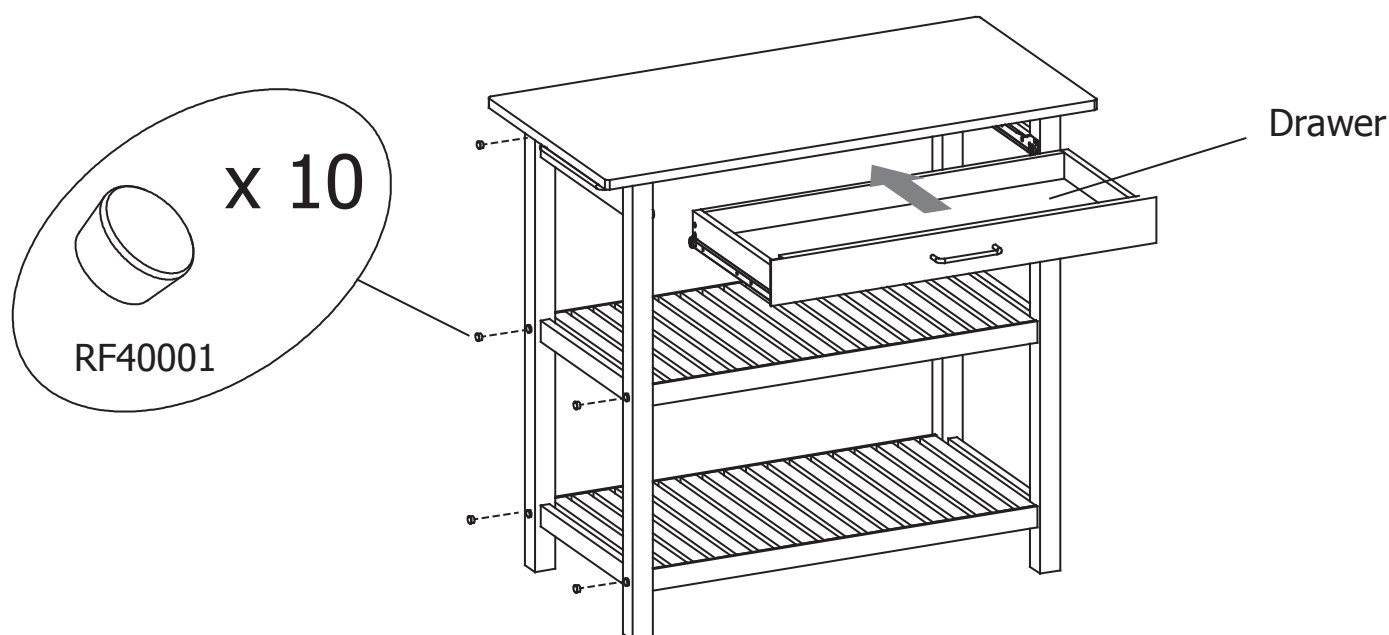

## Step 6.

Slide in drawer and cover screw holes with Wood Plugs (RF40001) as per Diag.6.