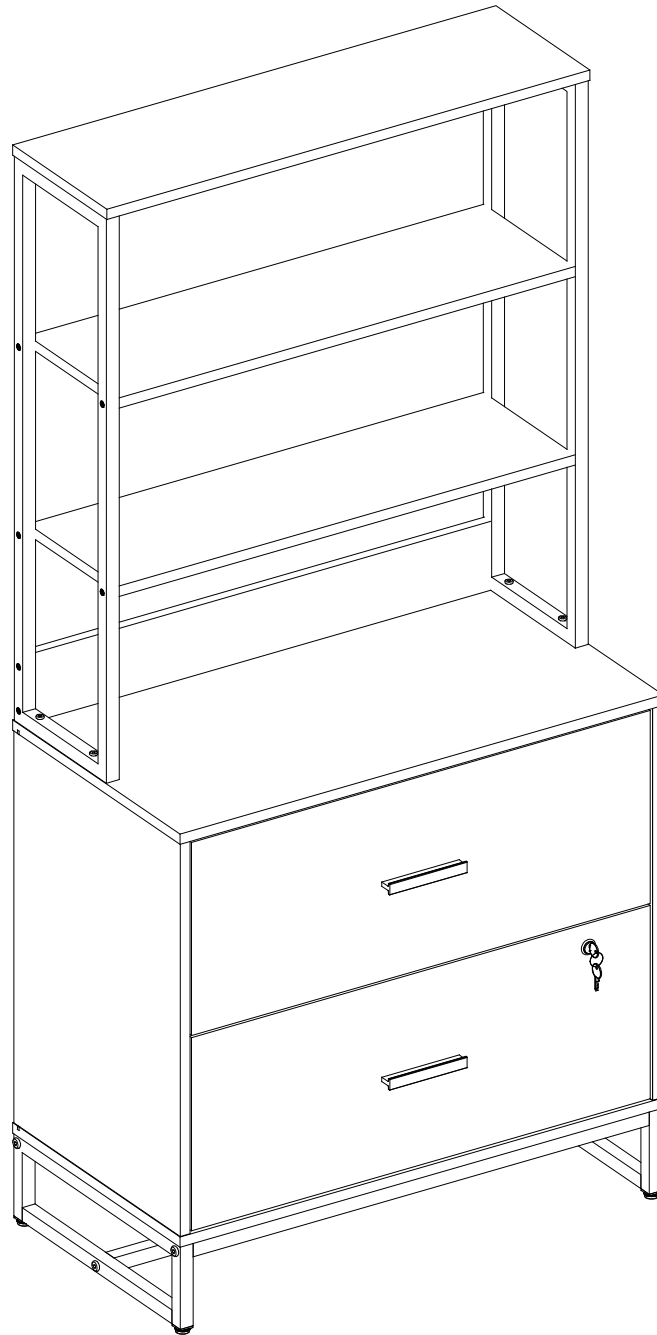


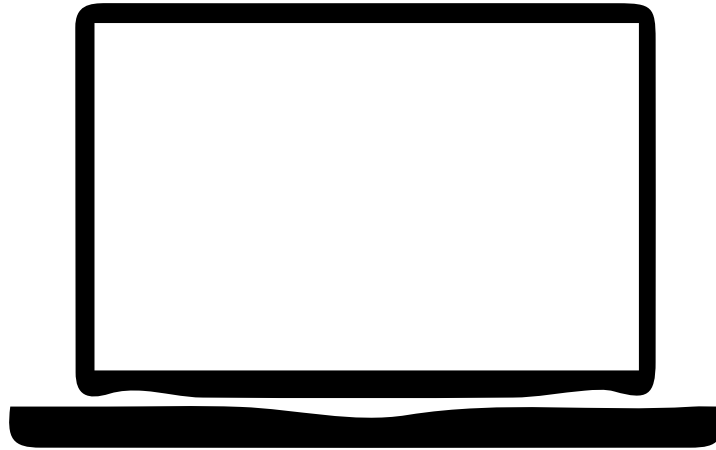
Assembly Instructions



Filing Cabinet

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

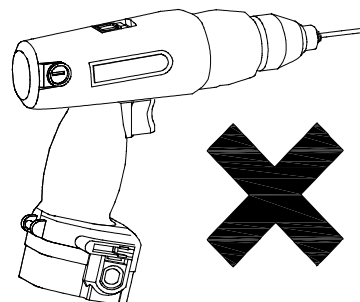
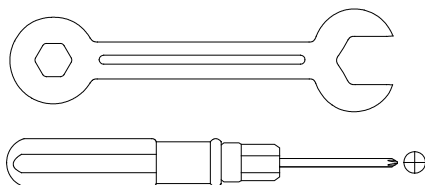
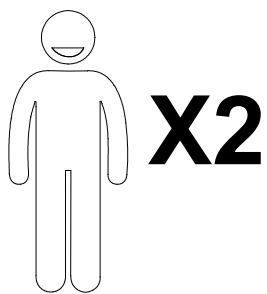
Step 1

Scan the QR code.

Step2

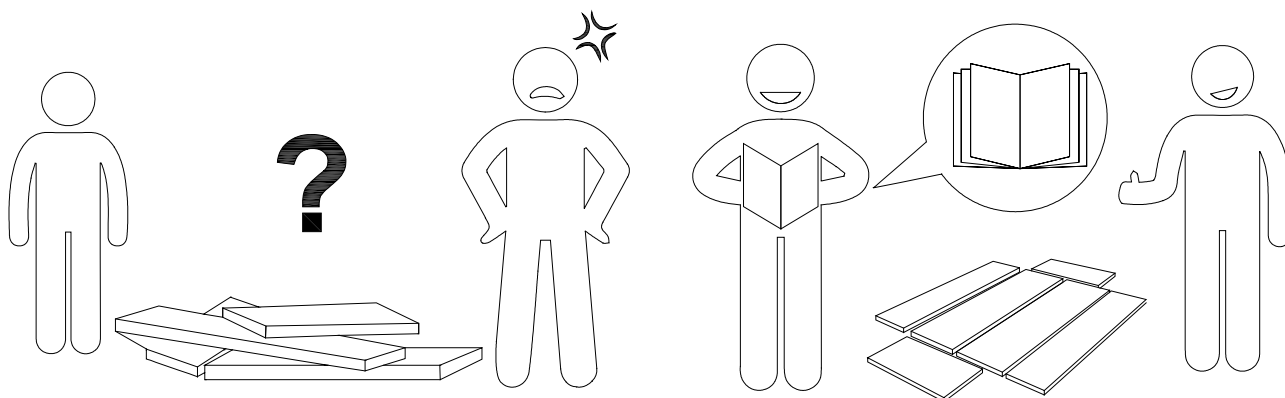
Search with the Model No.
(on the bottom left corner of the title page)

Note: If you can't find the assembly video, please contact us.



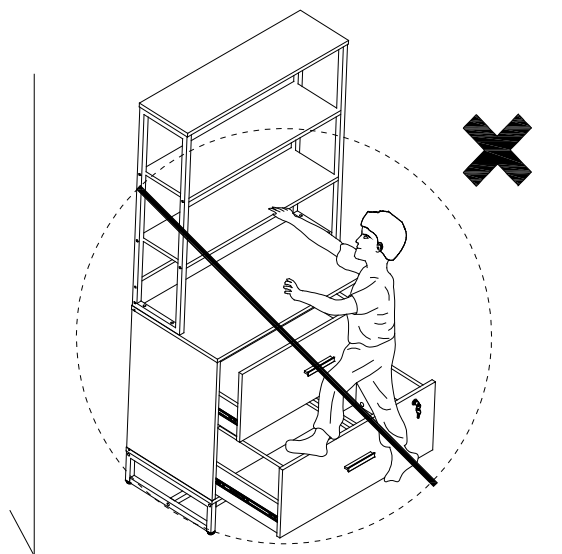
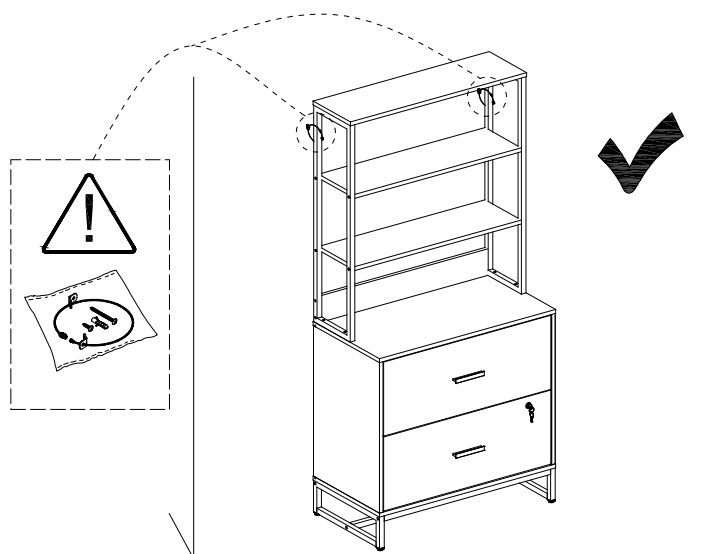
We recommend using hand tools for assembly.

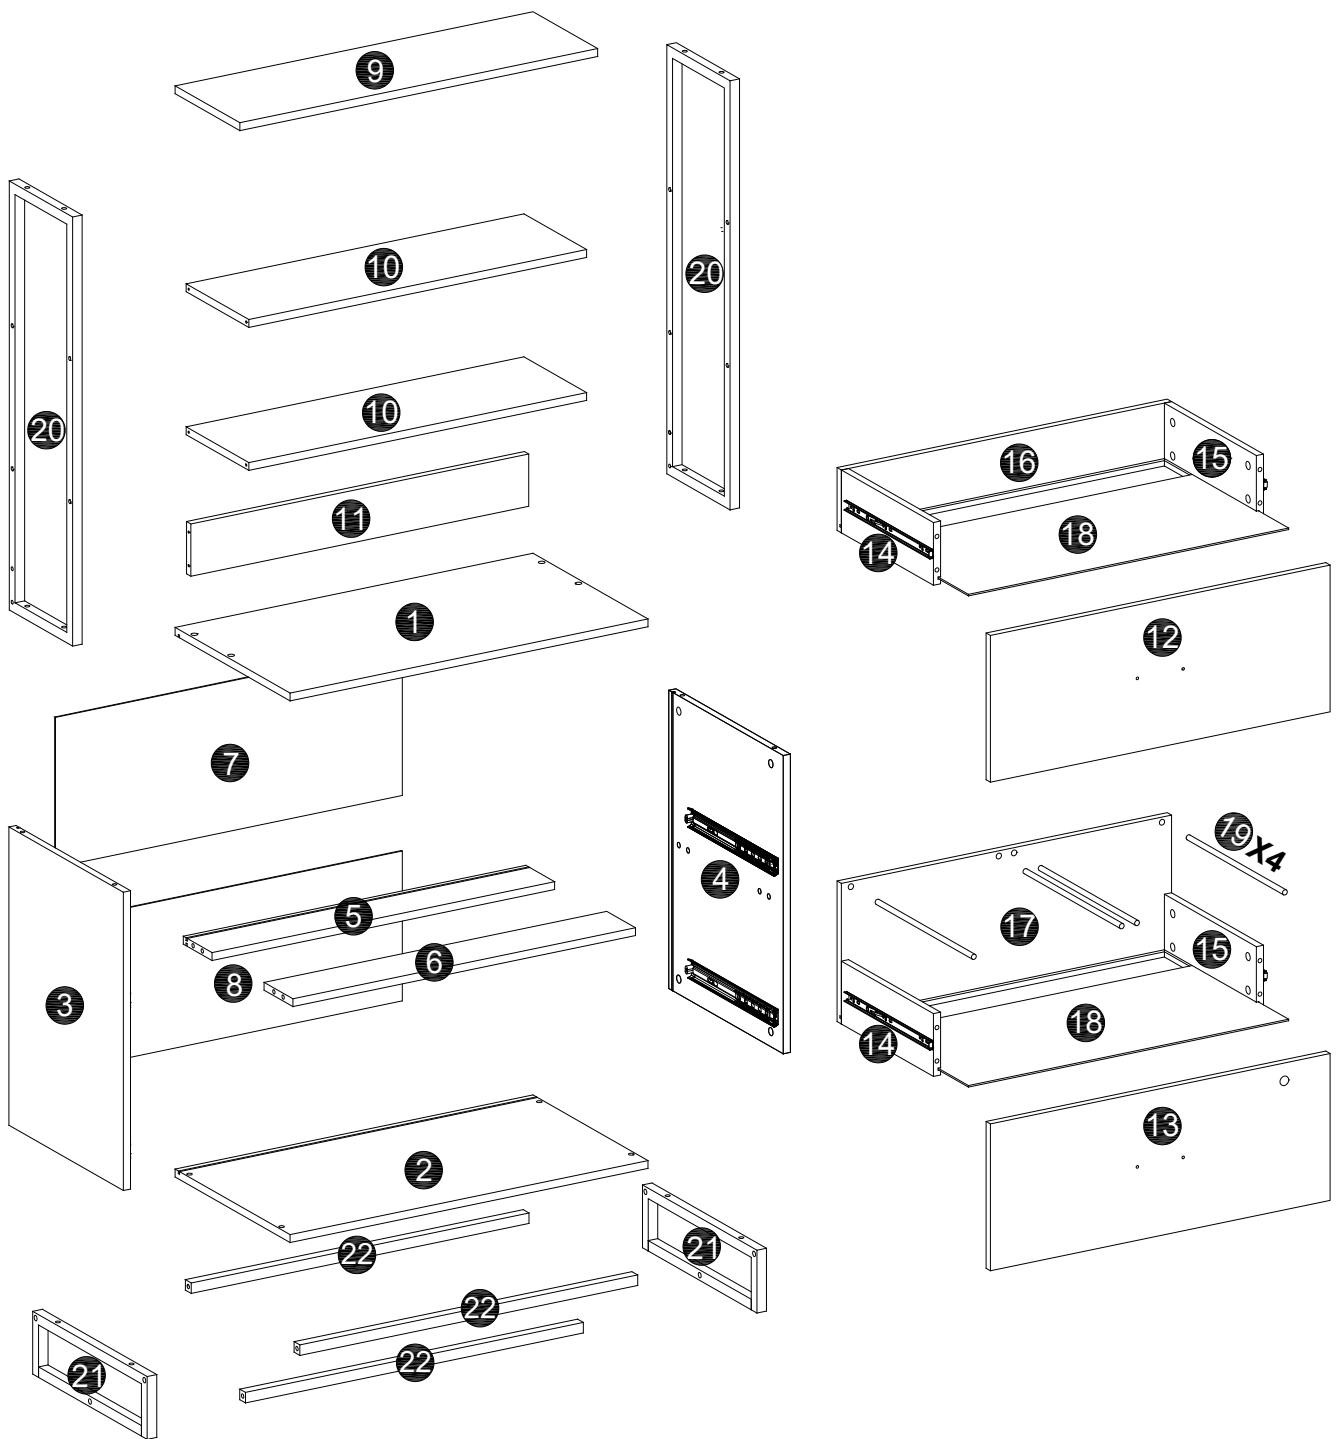
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

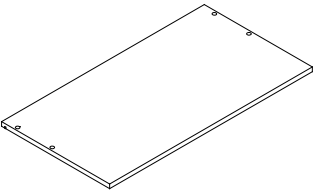
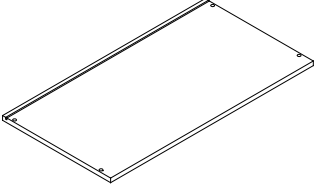
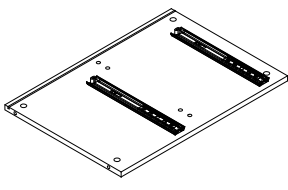
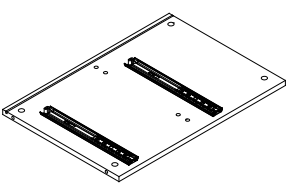
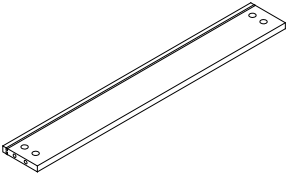
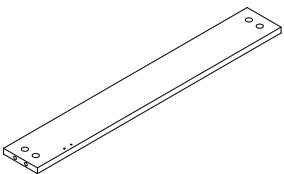
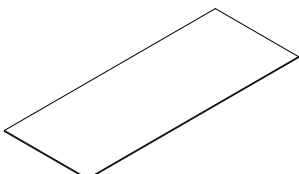
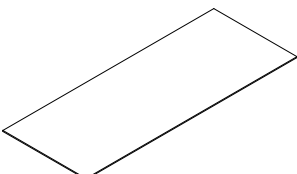
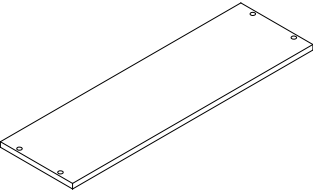
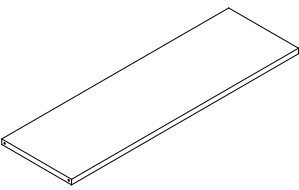
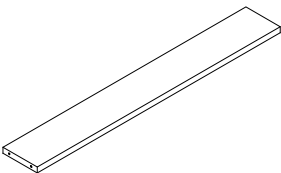
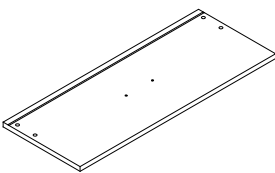
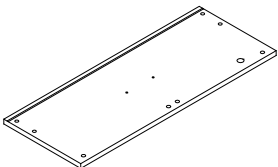
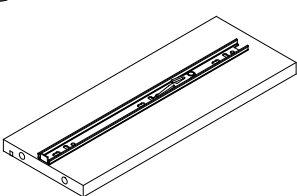
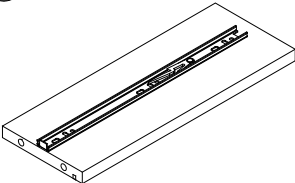
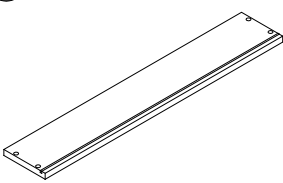
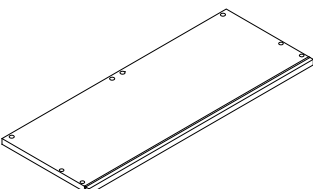
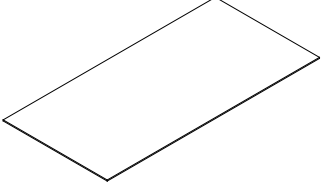
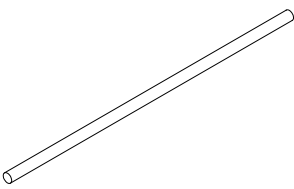
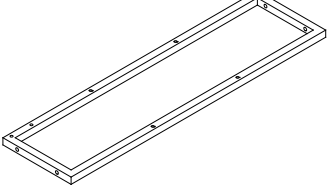
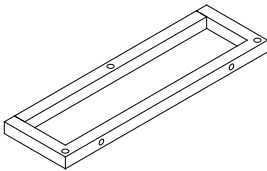
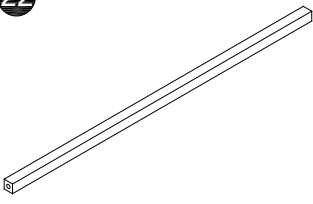




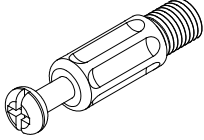

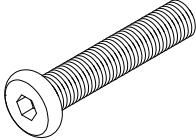
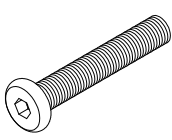
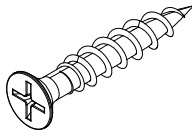

⚠ Caution




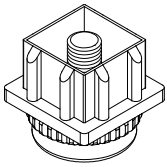
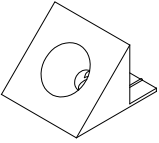
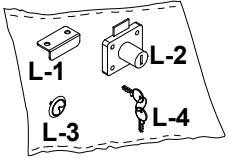
Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



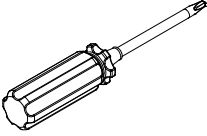
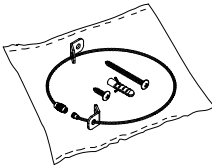
Parts List

<div><div>1</div><div>1 pc</div></div>	<div><div>2</div><div>1 pc</div></div>	<div><div>3</div><div>1 pc</div></div>	<div><div>4</div><div>1 pc</div></div>
<div><div>5</div><div>1 pc</div></div>	<div><div>6</div><div>1 pc</div></div>	<div><div>7</div><div>1 pc</div></div>	<div><div>8</div><div>1 pc</div></div>
<div><div>9</div><div>1 pc</div></div>	<div><div>10</div><div>2 pcs</div></div>	<div><div>11</div><div>1 pc</div></div>	<div><div>12</div><div>1 pc</div></div>
<div><div>13</div><div>1 pc</div></div>	<div><div>14</div><div>2 pcs</div></div>	<div><div>15</div><div>2 pcs</div></div>	<div><div>16</div><div>1 pc</div></div>
<div><div>17</div><div>1 pc</div></div>	<div><div>18</div><div>2 pcs</div></div>	<div><div>19</div><div>4 pcs</div></div>	<div><div>20</div><div>2 pcs</div></div>
<div><div>21</div><div>2 pcs</div></div>	<div><div>22</div><div>3 pcs</div></div>		

Hardware List

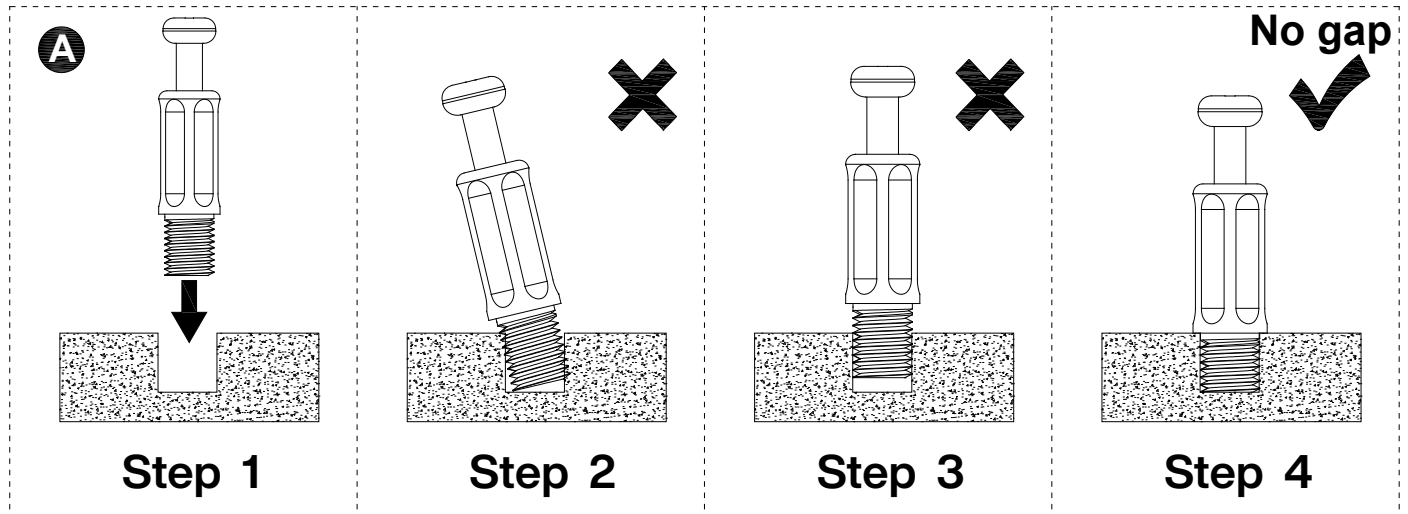
A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	M8x40mm	M6x35mm	Ø5x40mm	Ø4.2x20mm
32 pcs	32 pcs	6 pcs	12 pcs	12 pcs	4 pcs

G	H	I	J	K	L
					
Ø3x14mm	Ø3x20mm				
14 pcs	4 pcs	2 pcs	4 pcs	12 pcs	1 pc

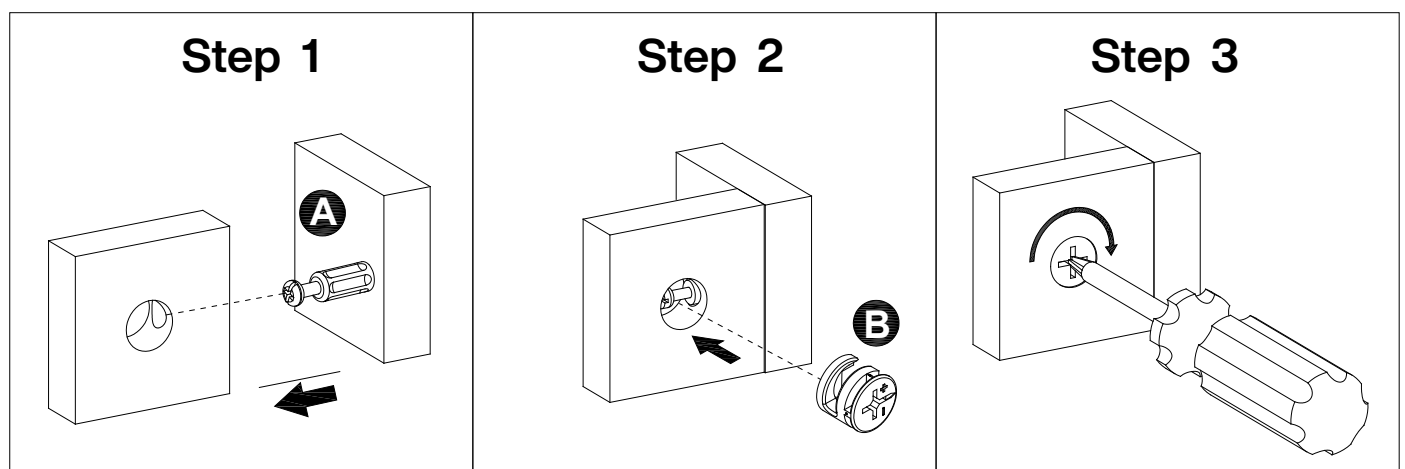
M	N	O	P		
					
M5	M4				
1 pc	1 pc	1 pc	2 pcs		

Installation of Cams and Pins

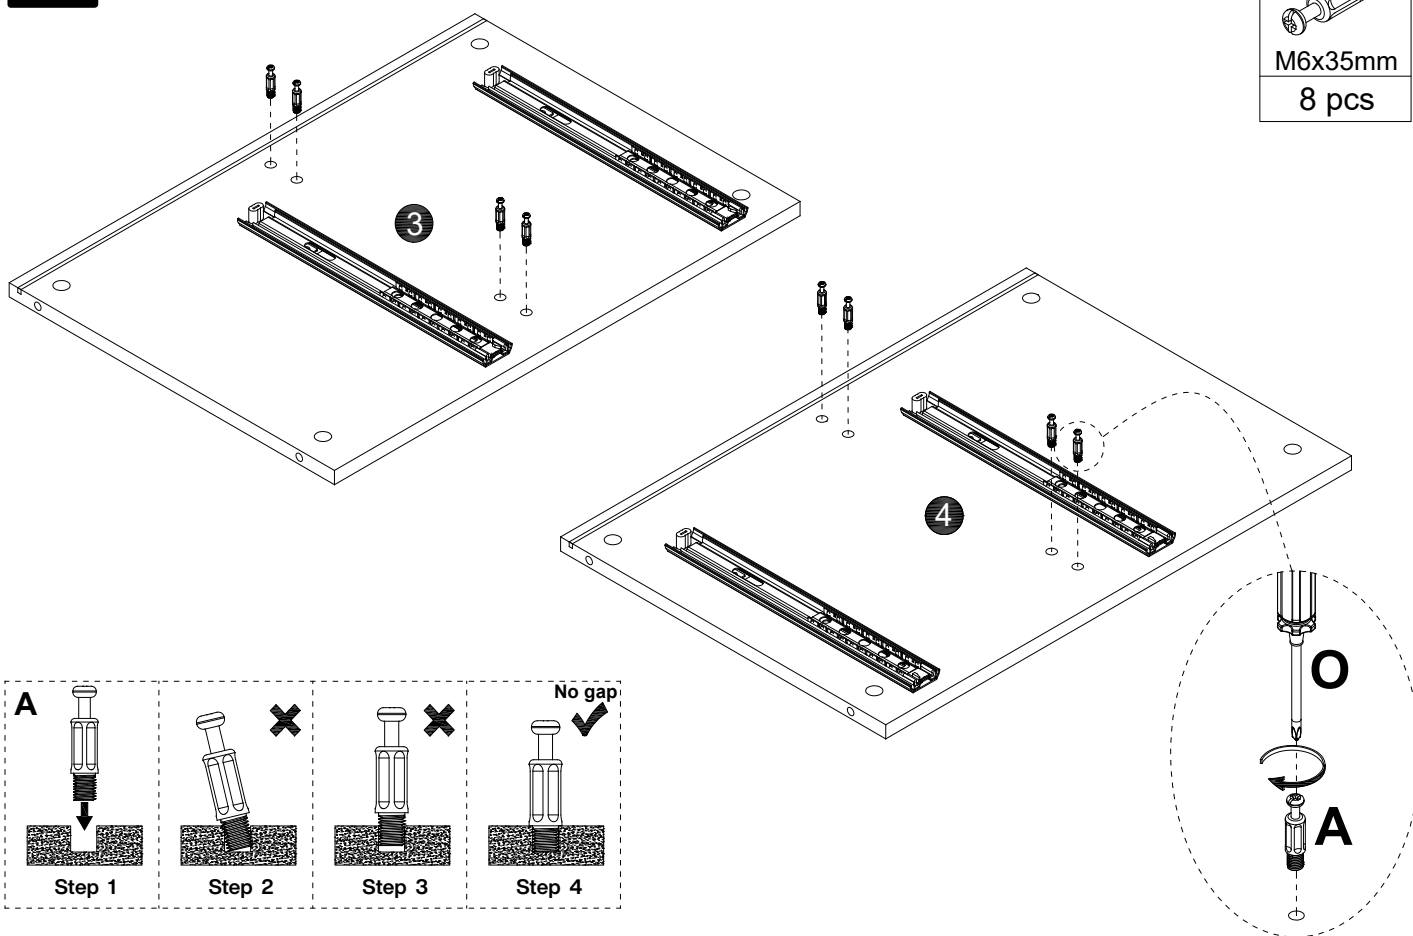
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.



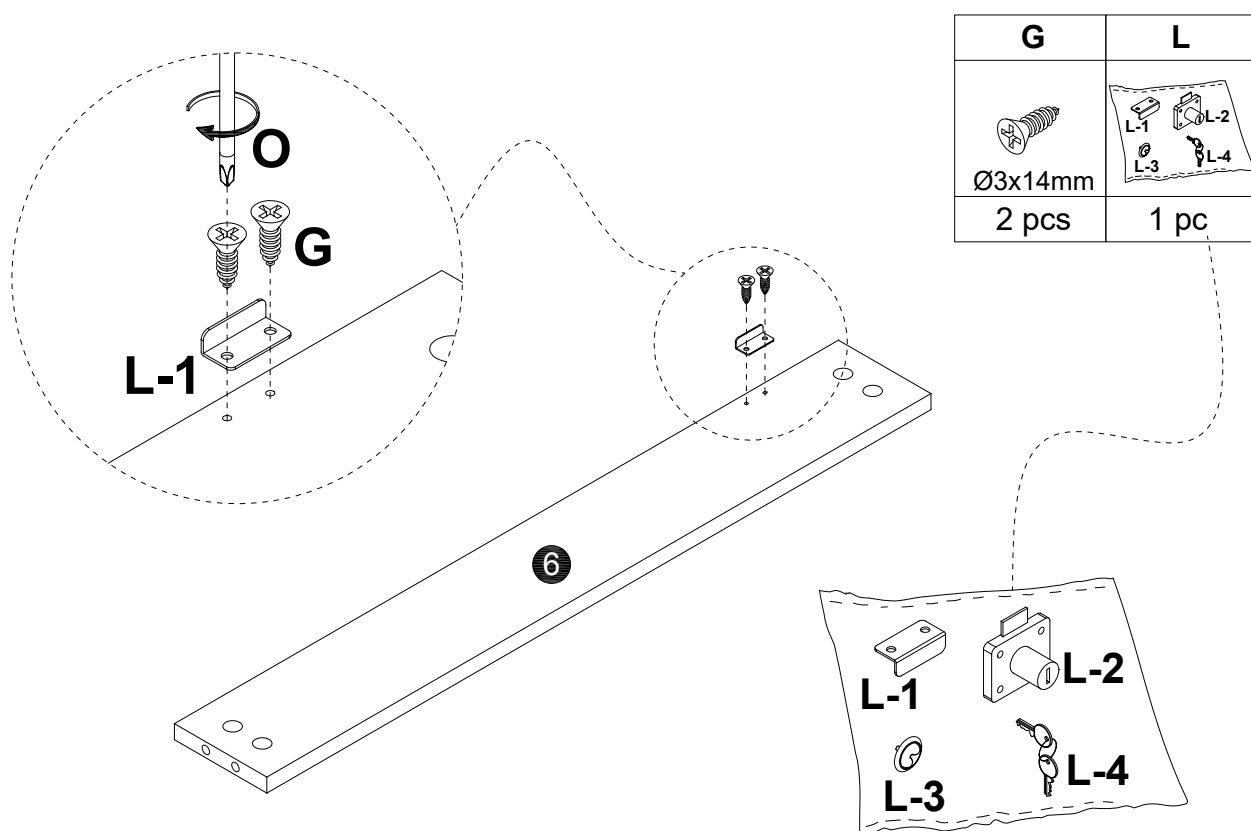
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.




1

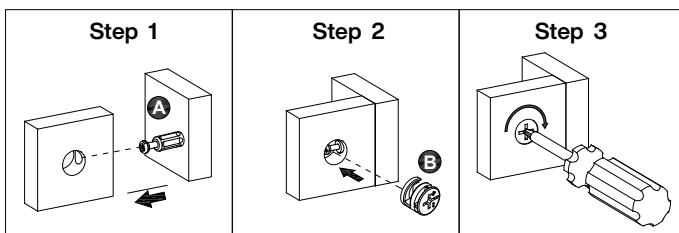
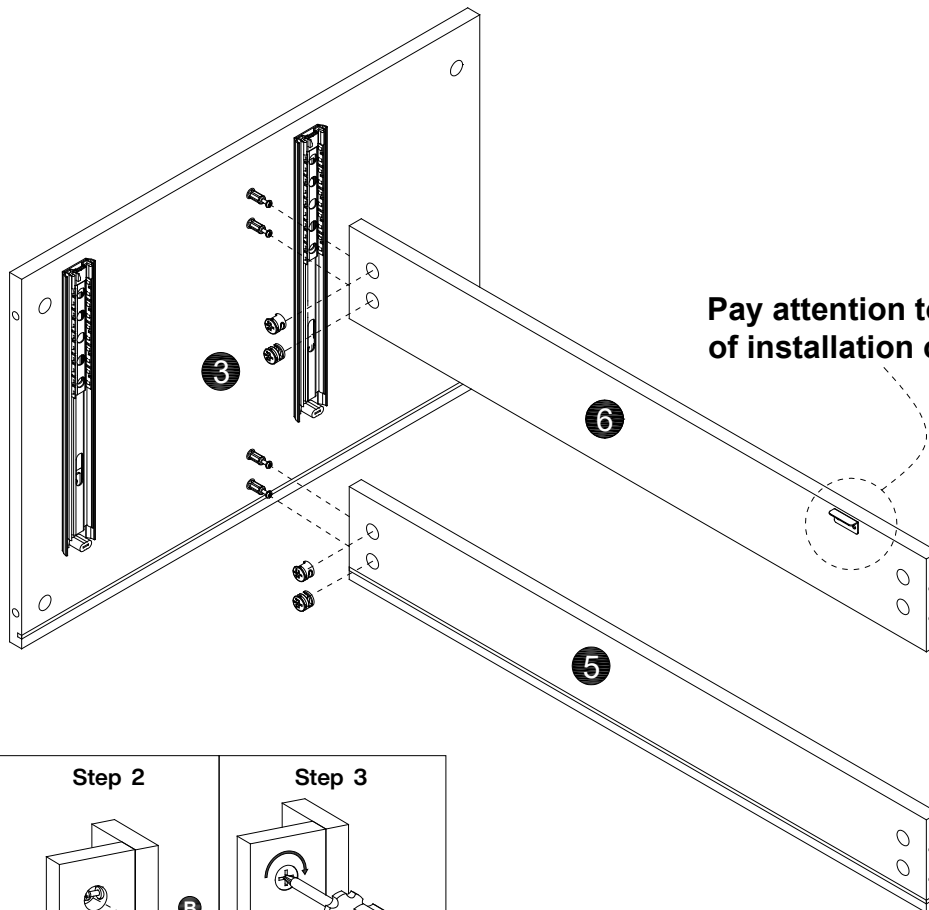


2




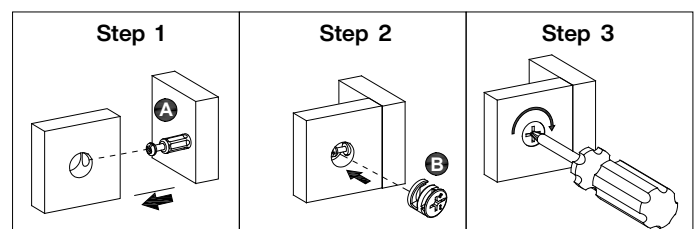
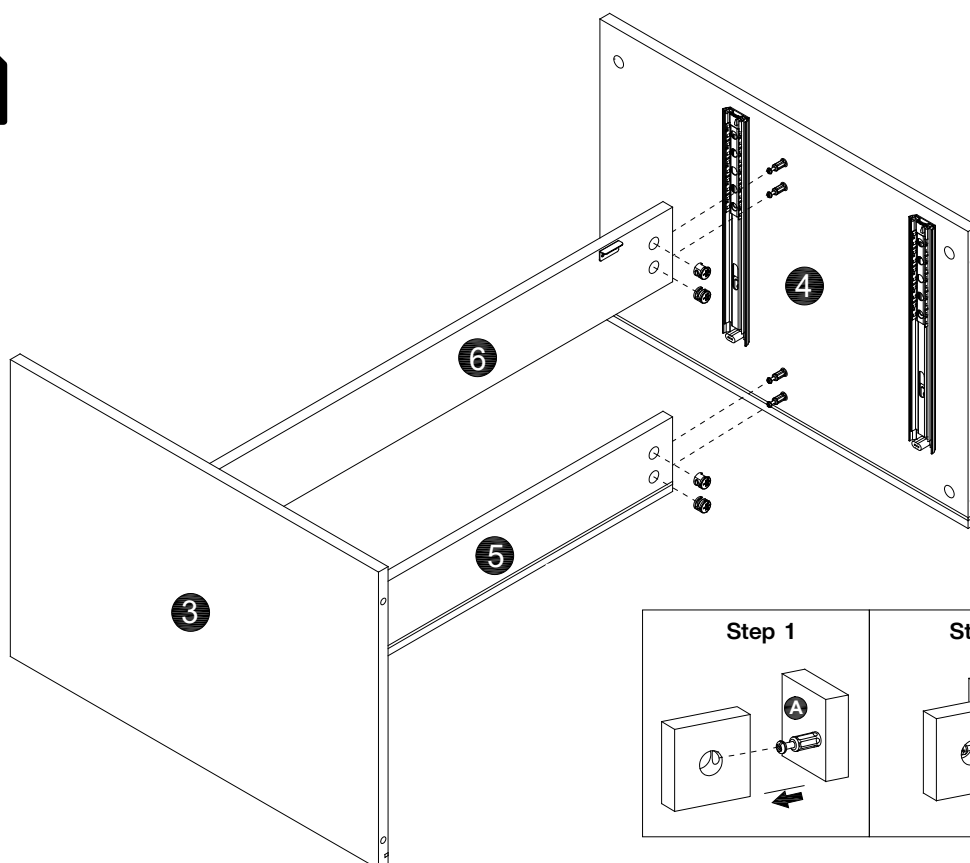
3

B

Ø15x12mm
4 pcs

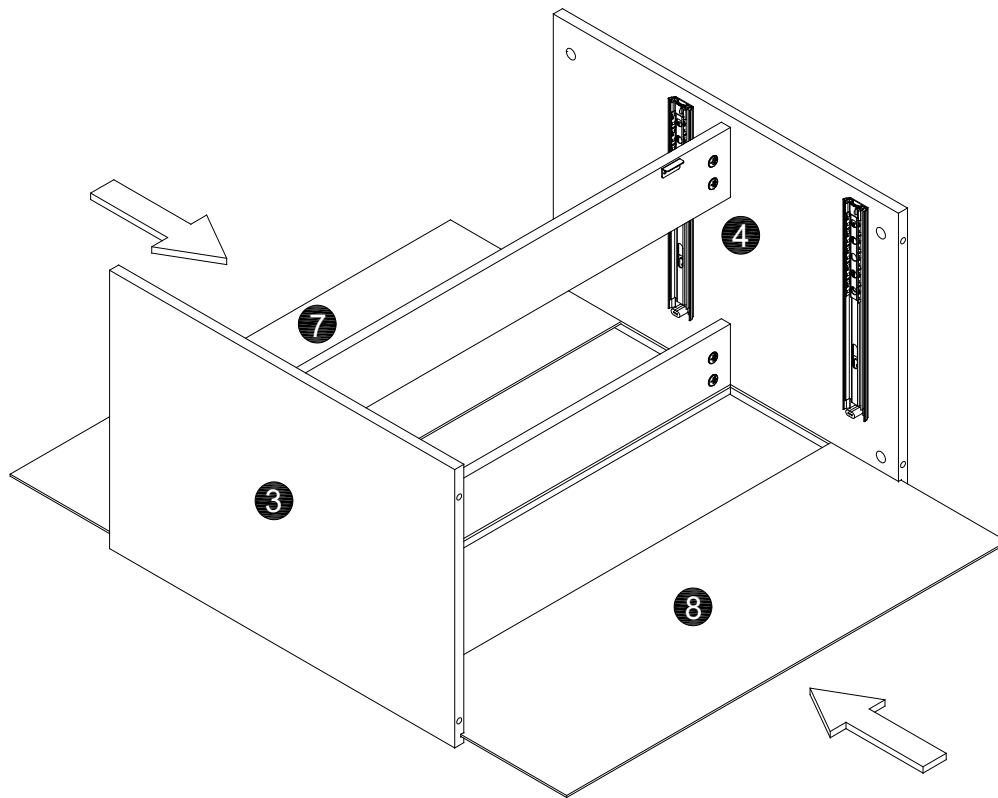


4


B

Ø15x12mm
4 pcs

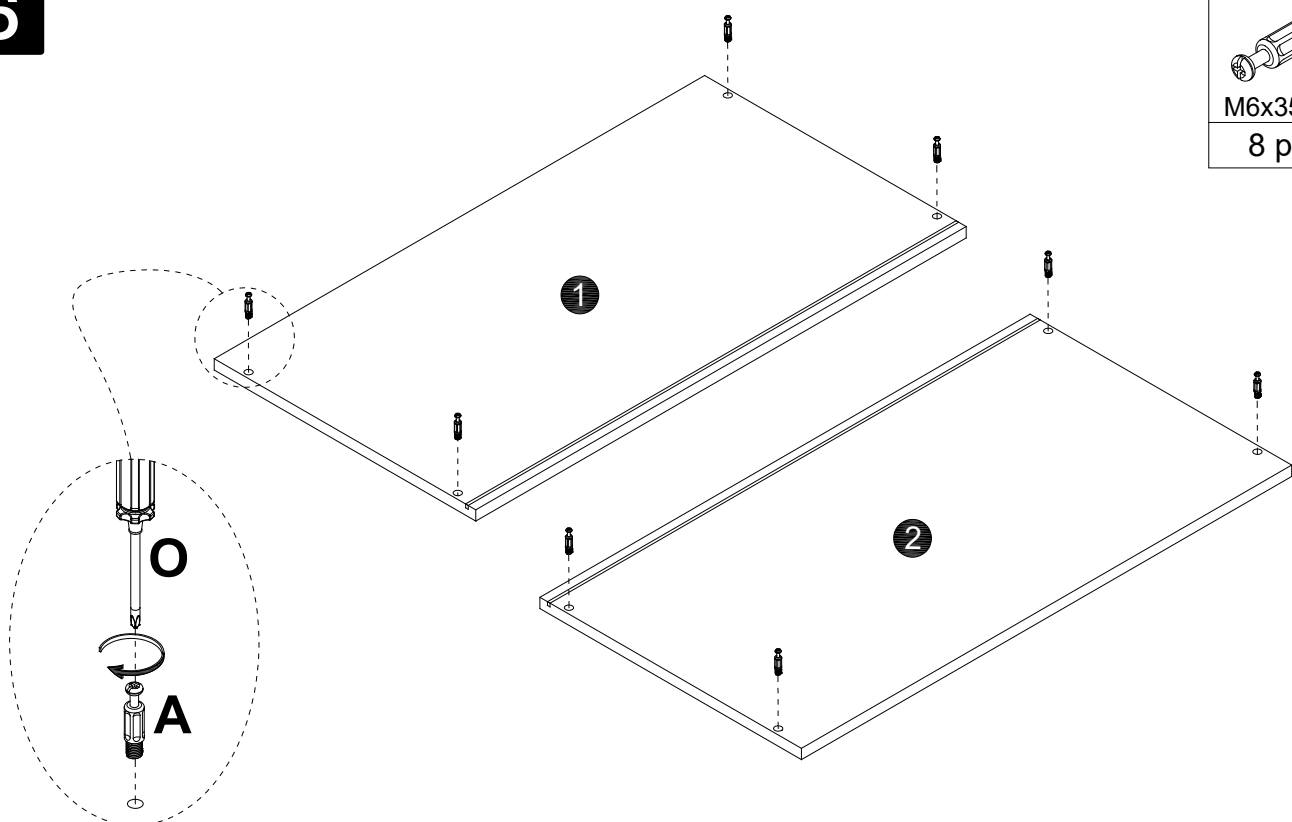


5

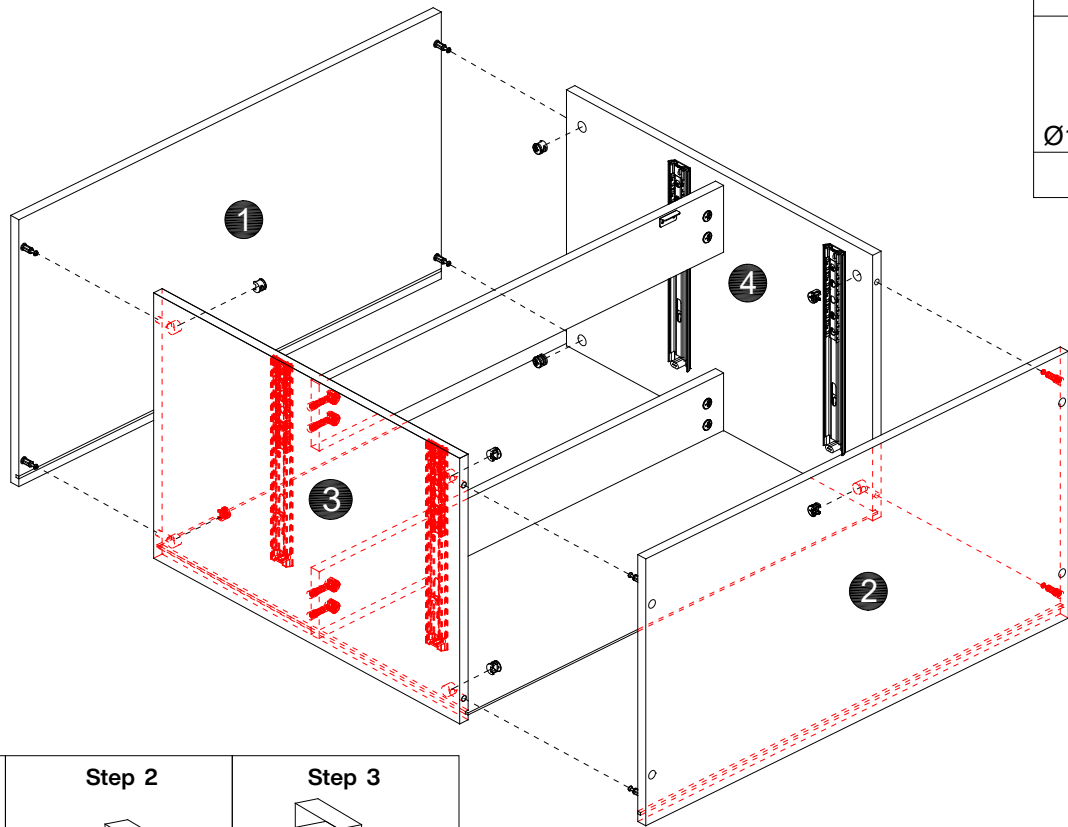



6

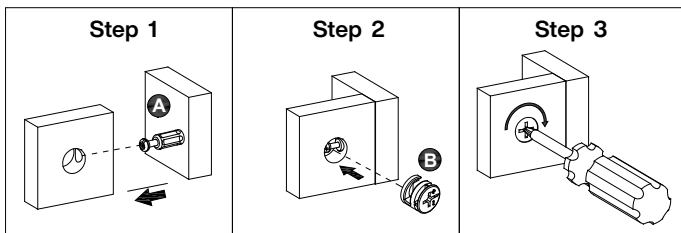
A

M6x35mm
8 pcs



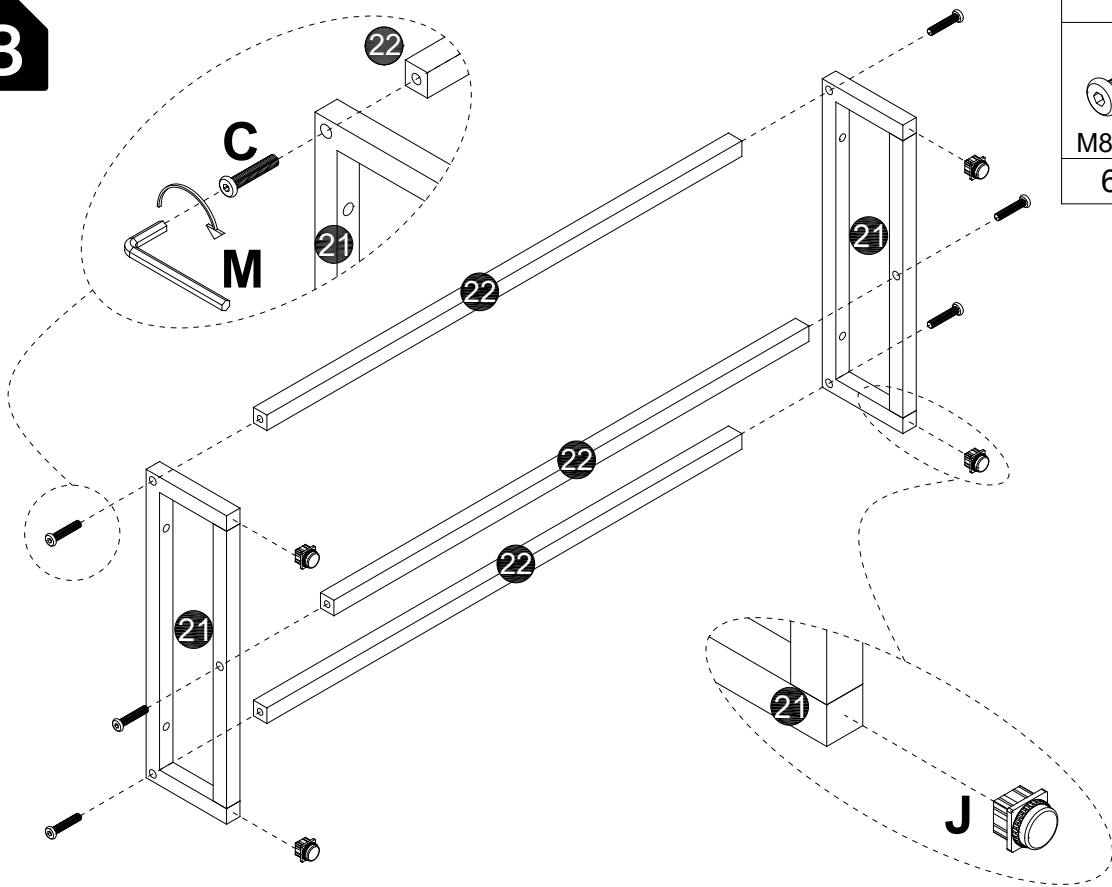
7





B

Ø15x12mm
8 pcs

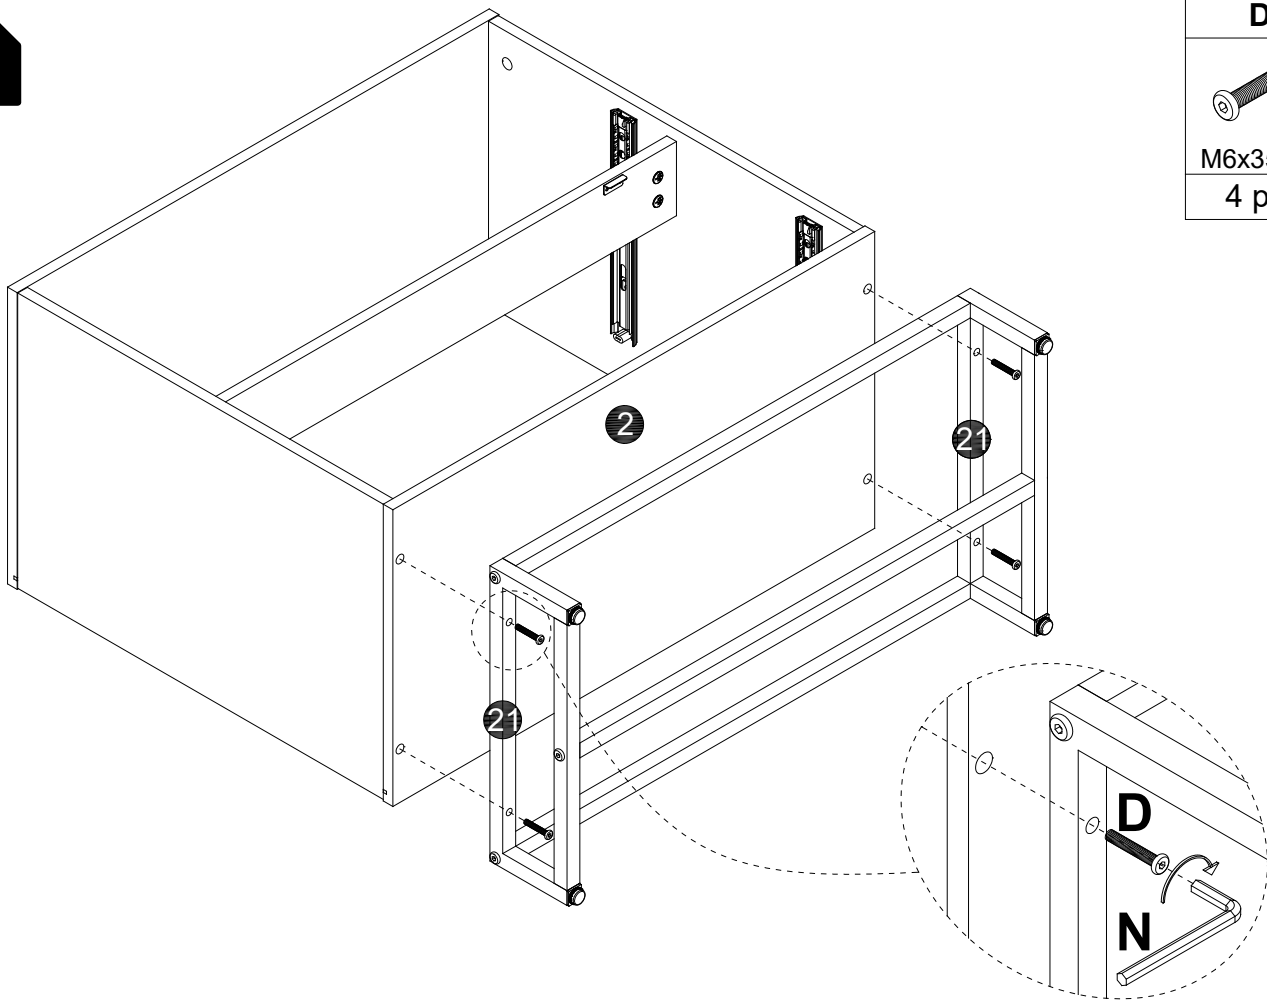



8



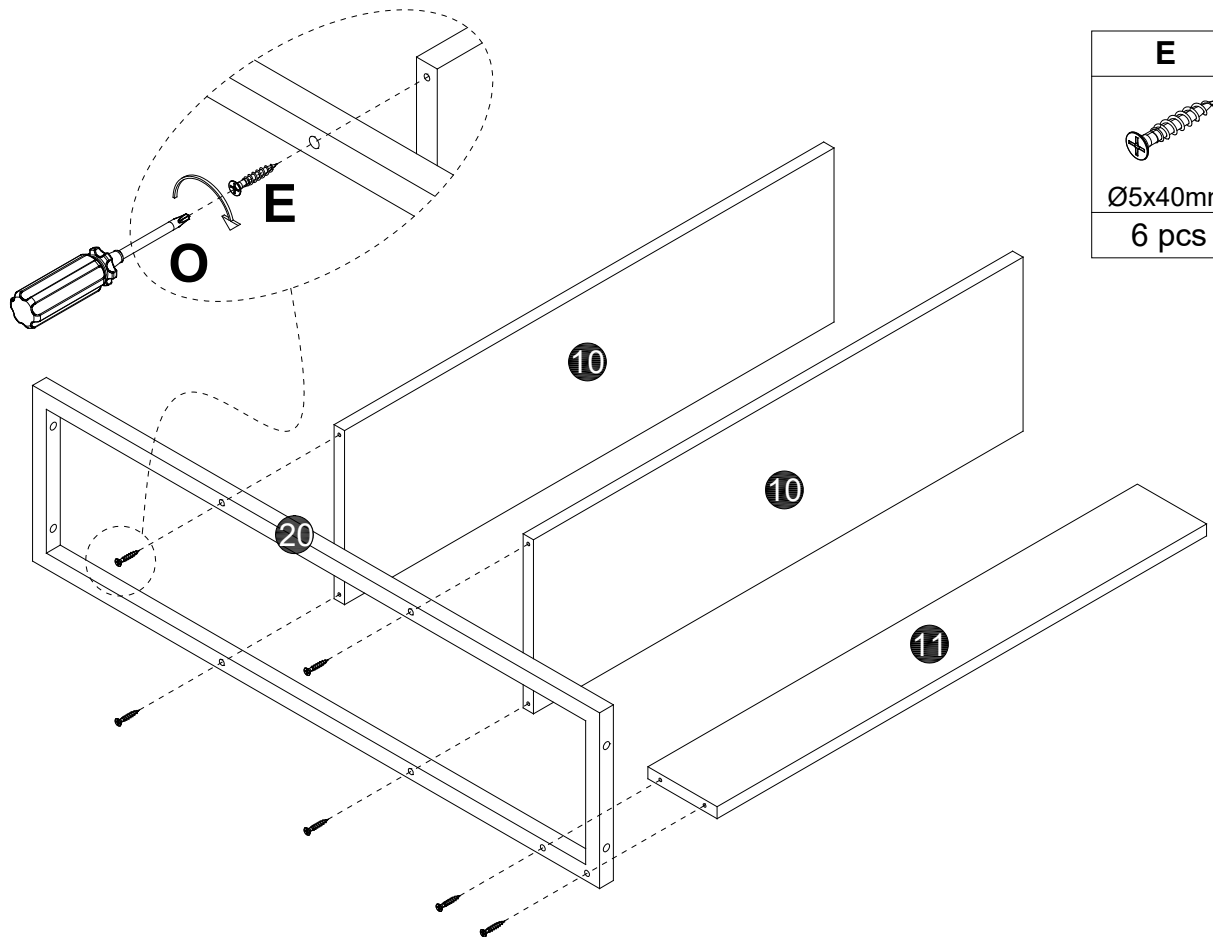
C	J
	
M8x40mm	
6 pcs	4 pcs


9



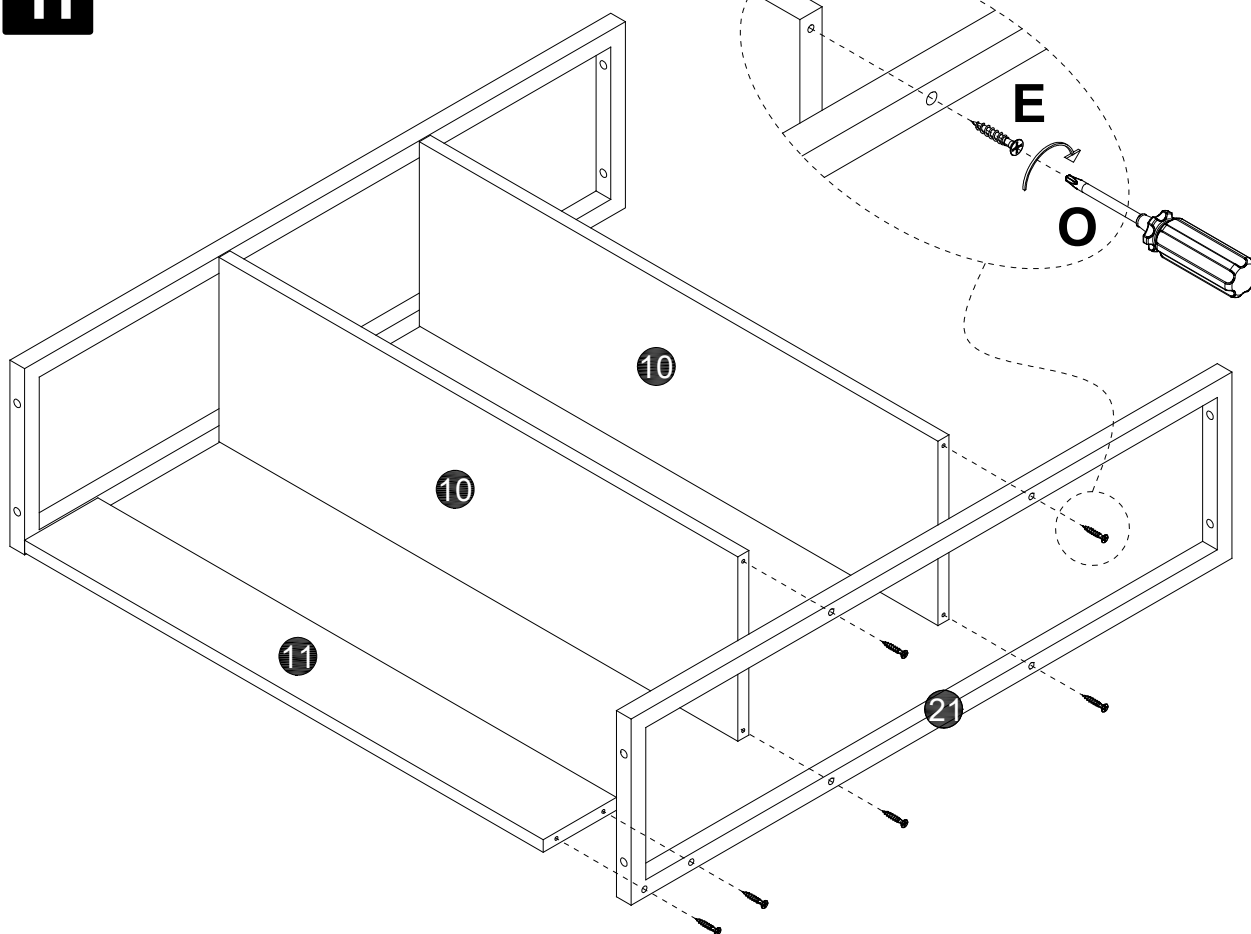
D

M6x35mm
4 pcs


10



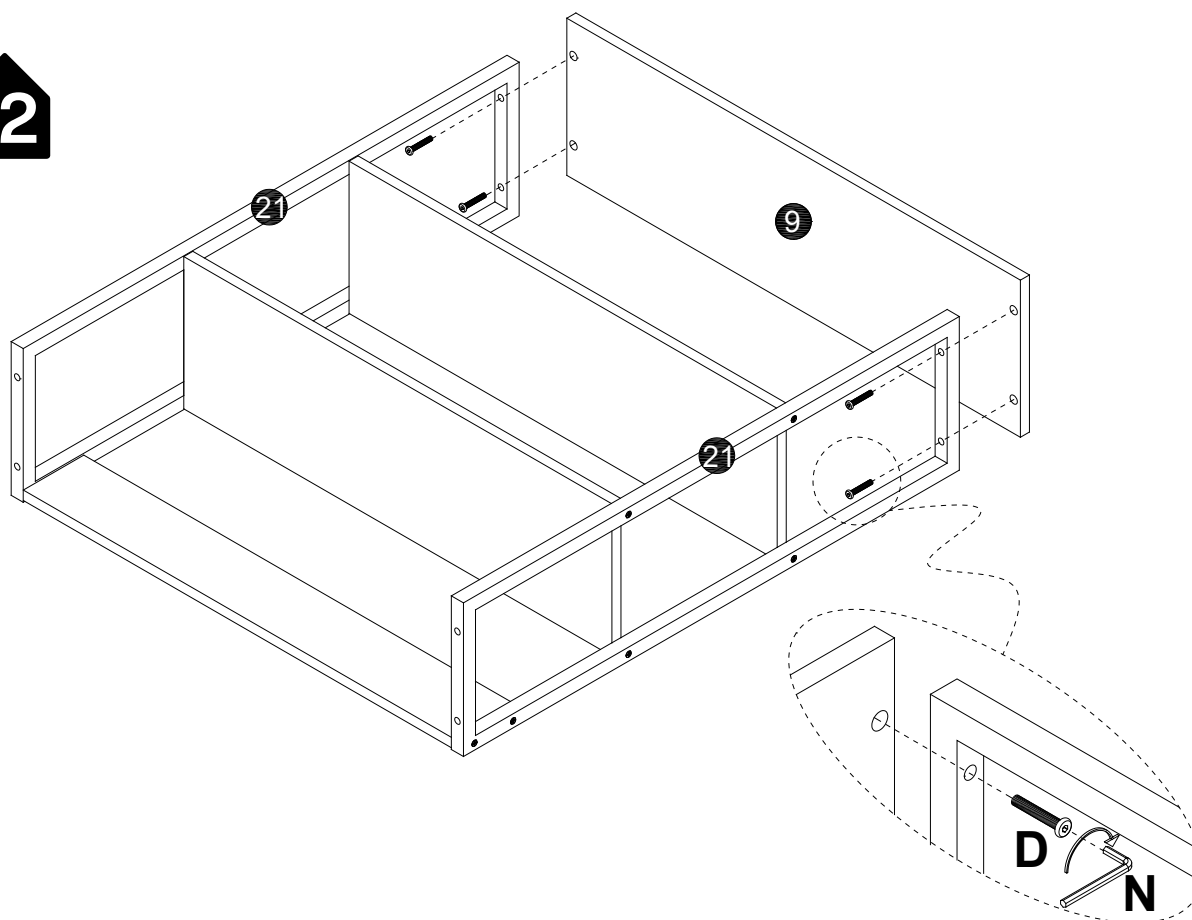
E

Ø5x40mm
6 pcs


11



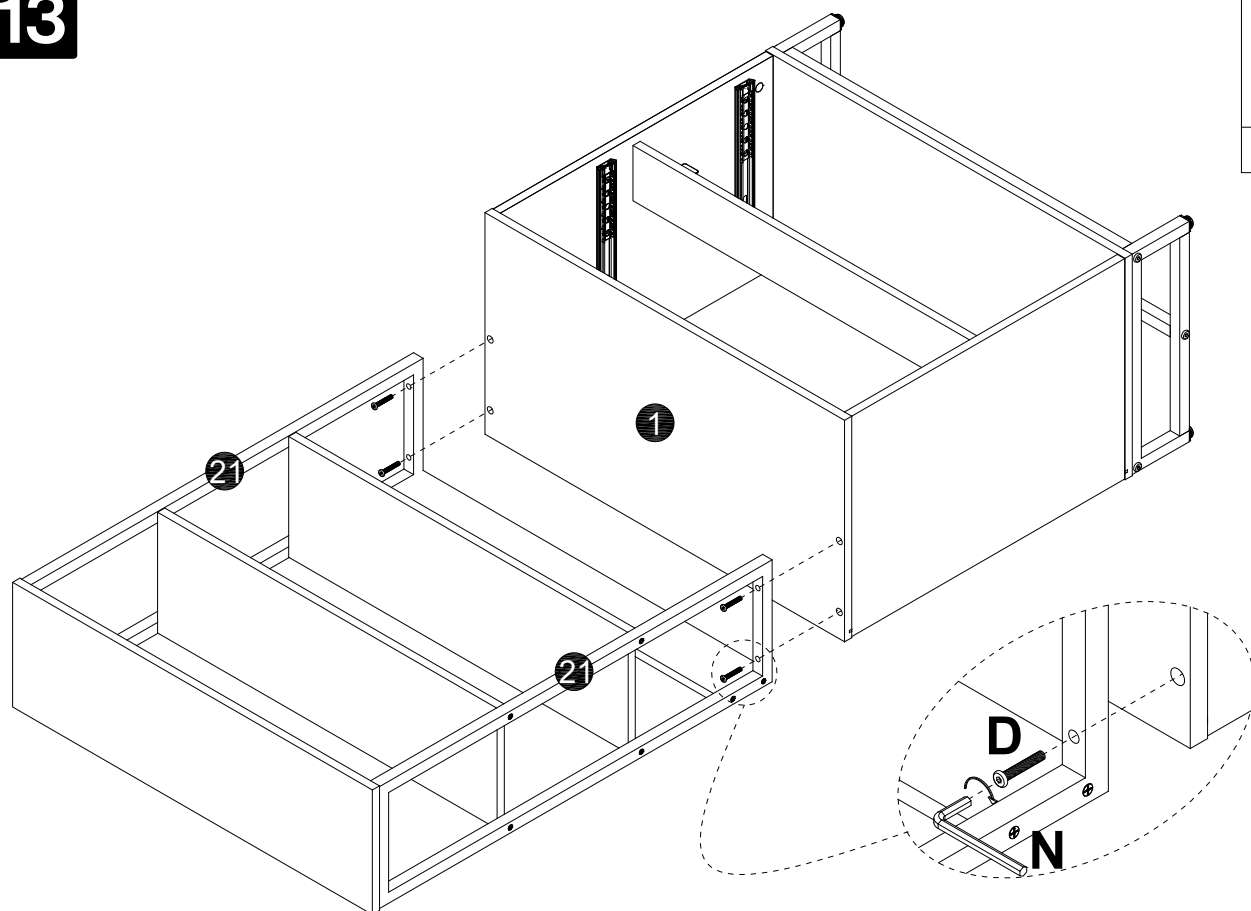
E

Ø5x40mm
6 pcs


12



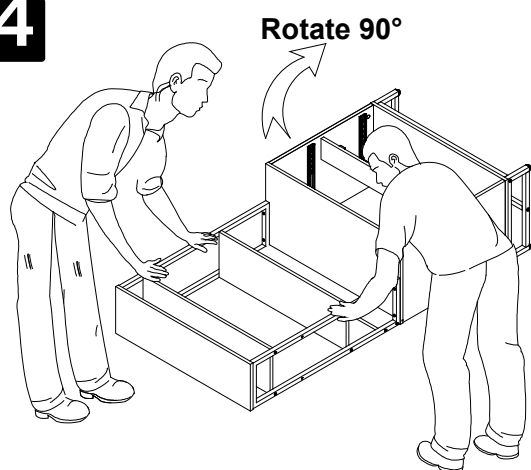
D

M6x35mm
4 pcs

13

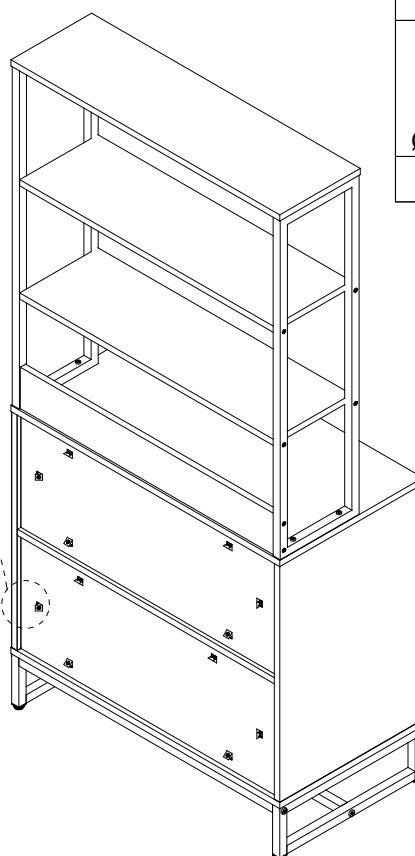
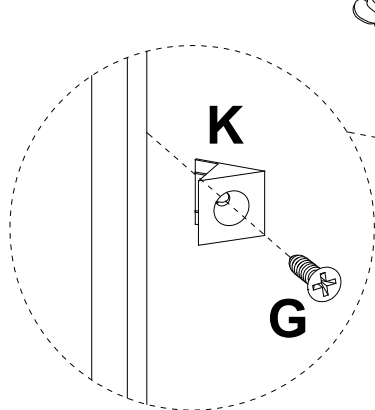




D

M6x35mm
4 pcs

14

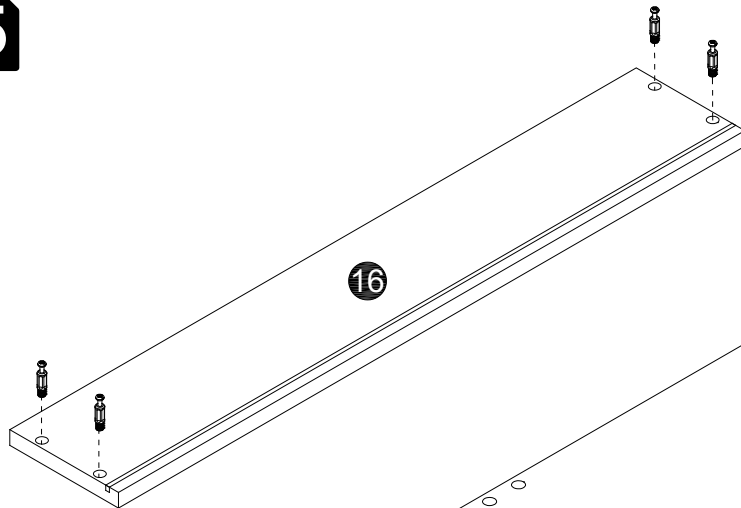



Rotate 90°

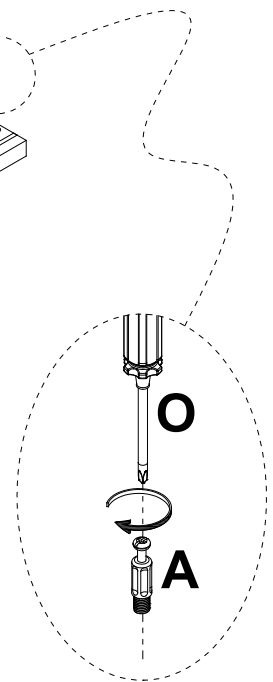


G	K
	
Ø3x14mm	
12 pcs	12 pcs

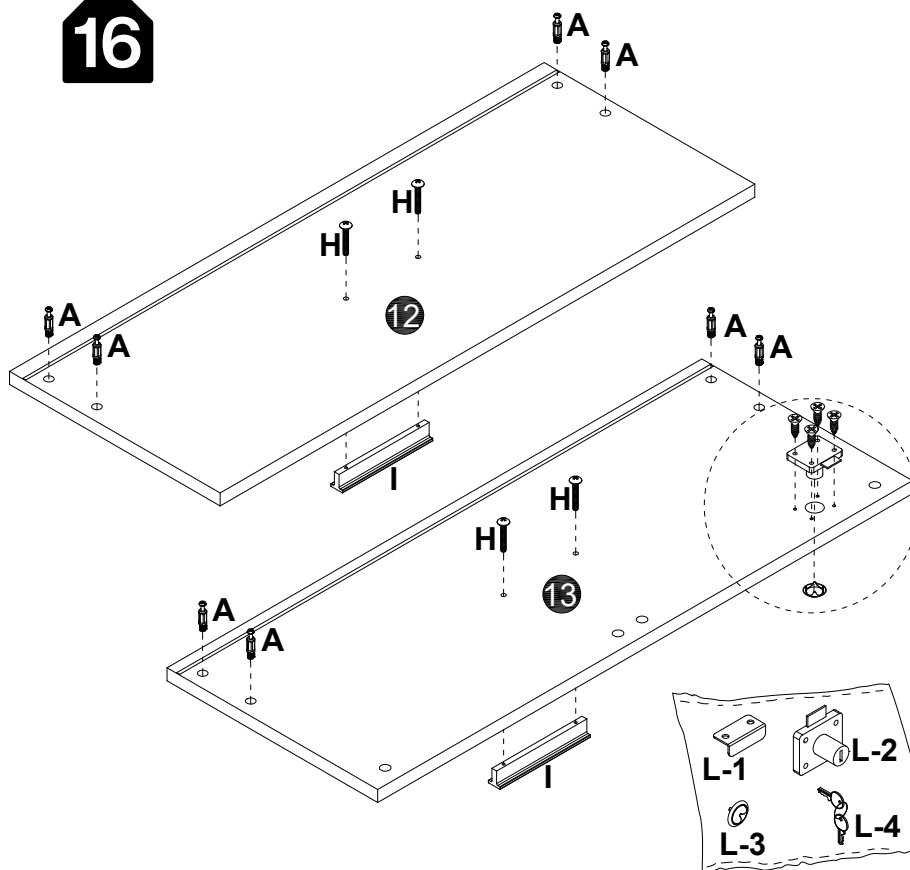
15








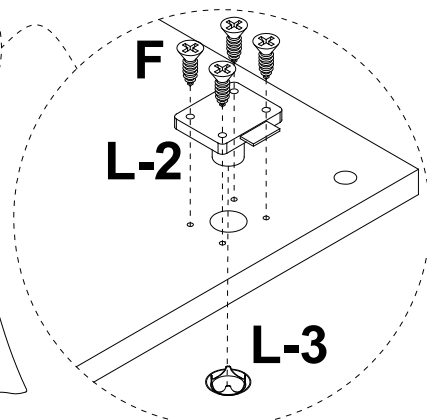
A

M6x35mm
8 pcs



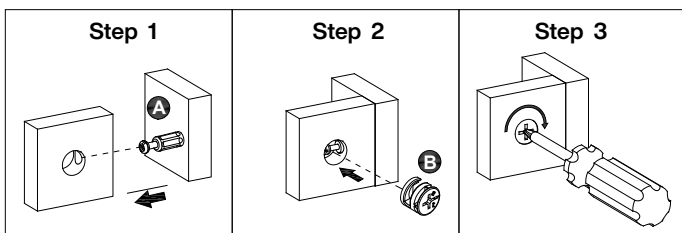
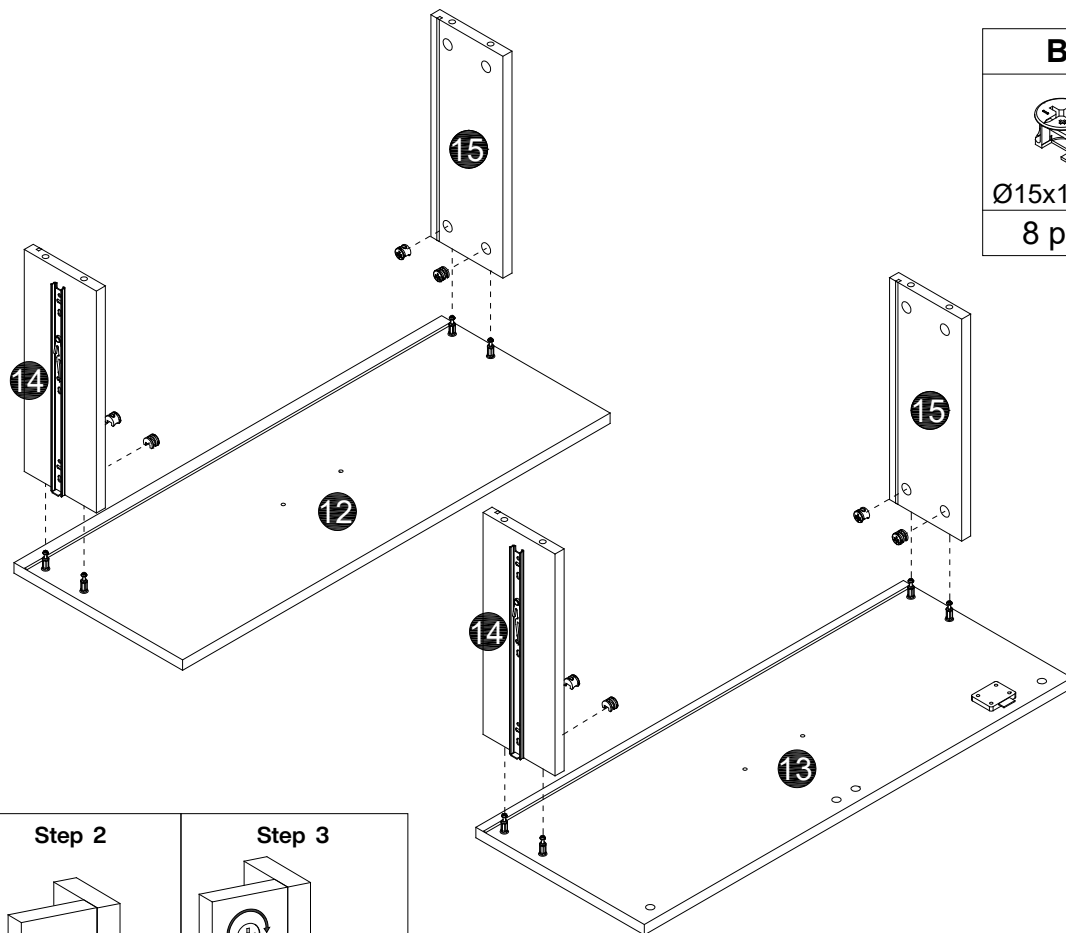
16



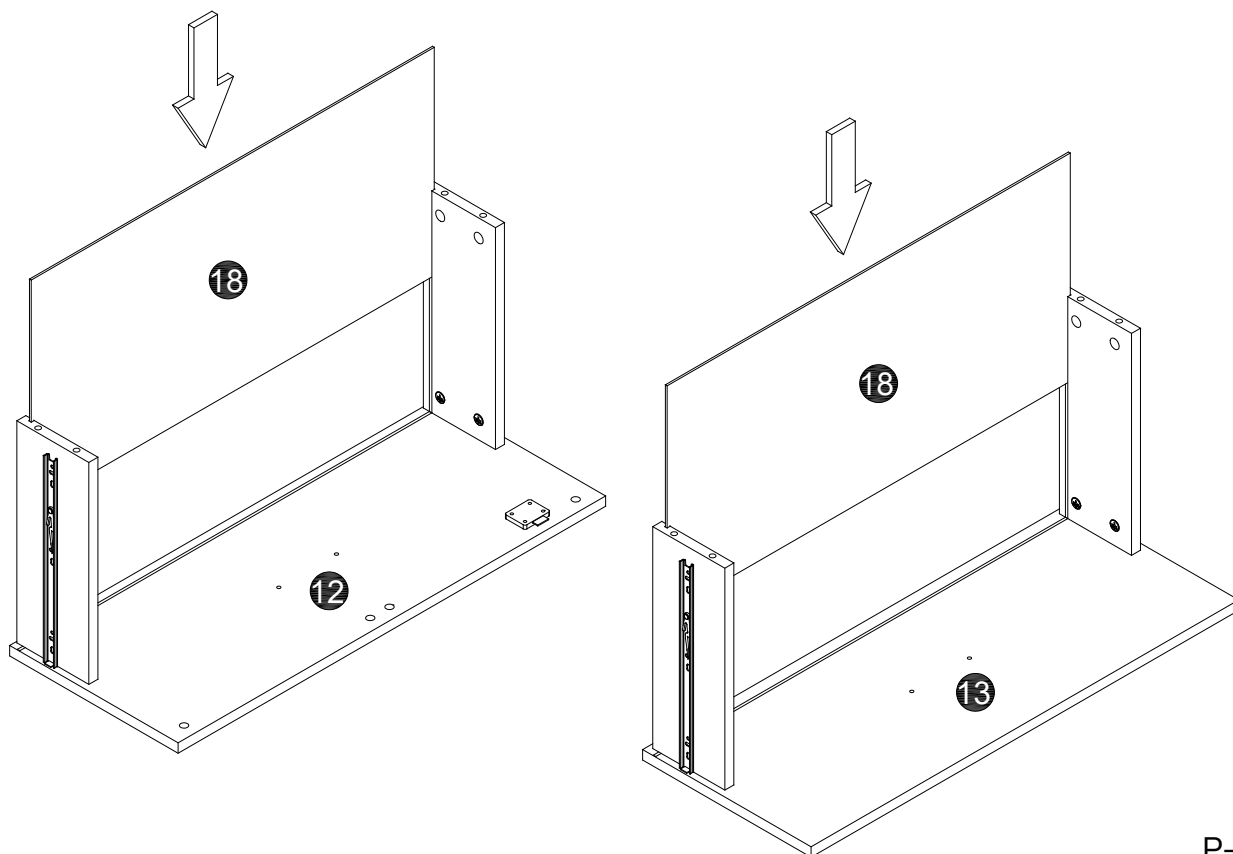
A	H	I
		
M6x35mm	Ø3x20mm	
8 pcs	4 pcs	2 pcs
L	F	
		
1 pc	Ø4.2x20mm	
	4 pcs	



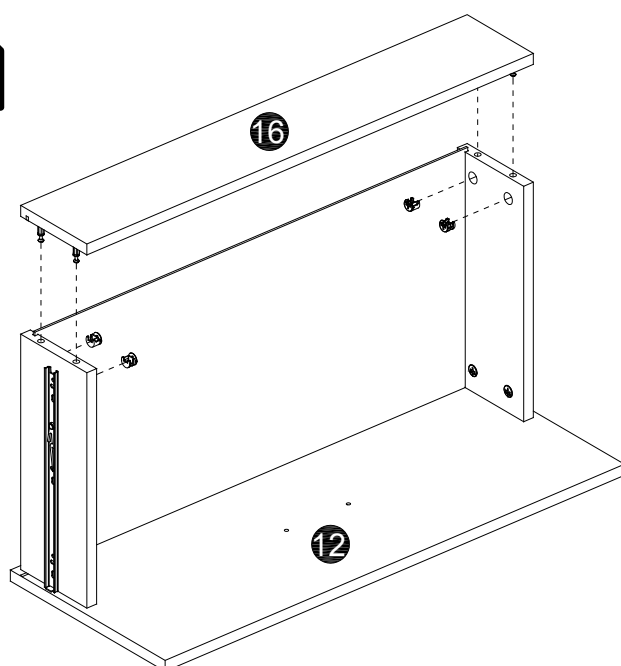
17




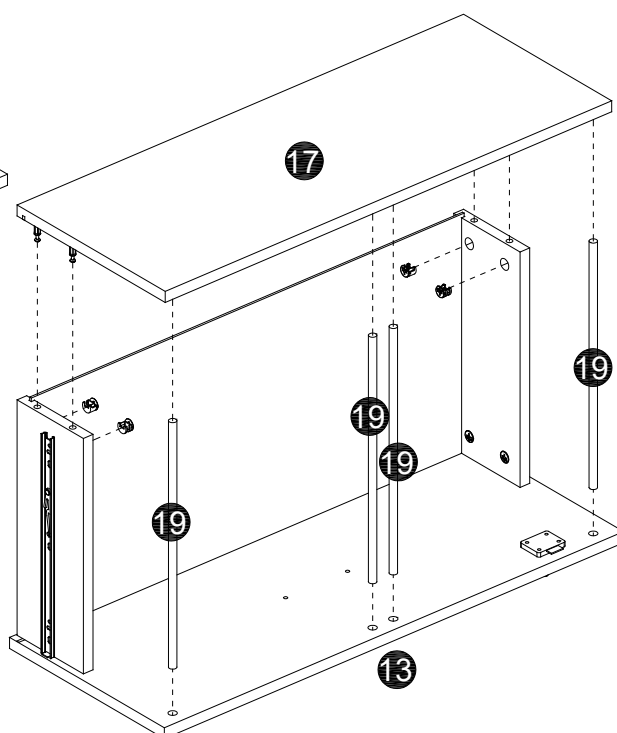
18



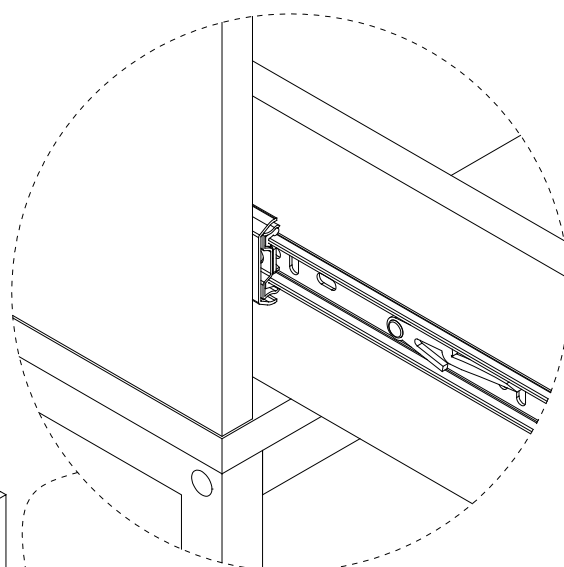
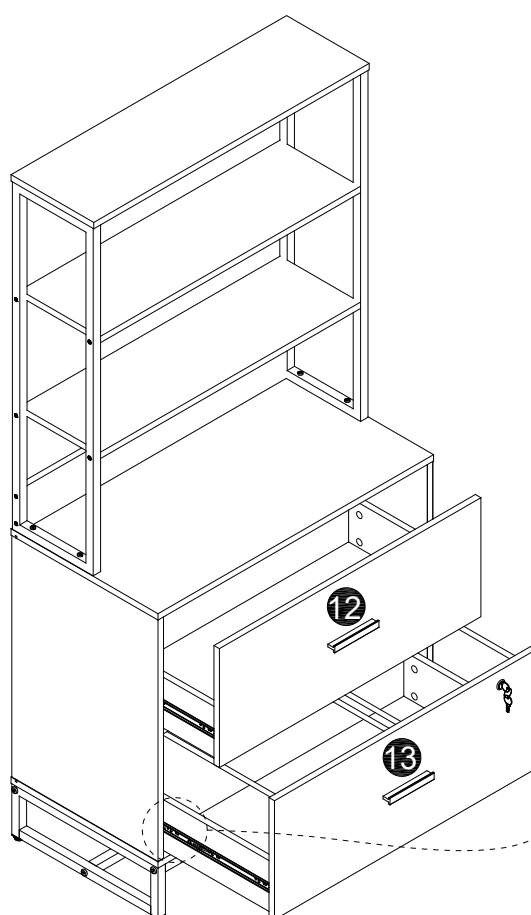
19



B

Ø15x12mm
8 pcs



20



Align the "14" "15" with the "3" "4" guideway and gently push it in to complete the assembly

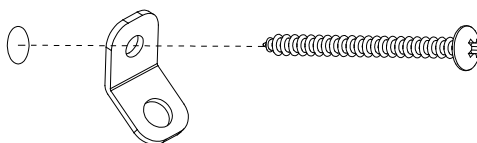
21

Wall

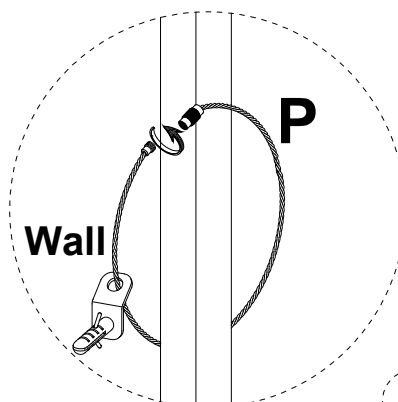
Step1



Step2



Step3



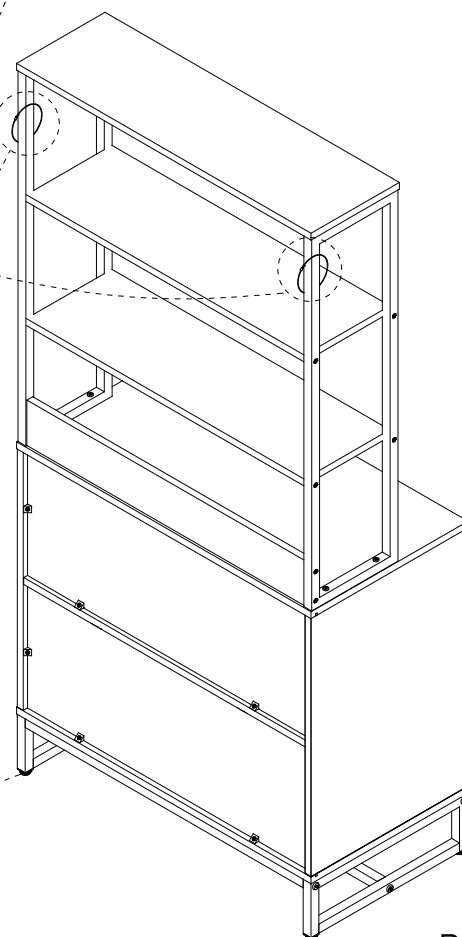
P

Wall

P



2 pcs



Thank you for your support!

