

INSTALLATION MANUAL



3 TIERS MIRROR SHOE(STORAGE) CABINET



WARNING

**INSTALLATION REQUIRES TWO ADULTS,
KEEP AWAY FROM CHILDREN TO
PREVENT ANY INJURY.**

Tools Required



UPDATED ON 07/03/2024

INTRODUCTION

PAGE 2

TIPS AND WARNINGS

PAGE 3

PARTS LIST

PAGE 5

INSTALLATION STEPS

PAGE 7







ATTENTION



This product is for household use only! And not for commercial use.

Do not use this product for any other over expected purpose. To any commercial use, public or institutional, disclaims all liability and cancels all guarantees.


TIPS AND WARNINGS:

- Do not lean on the shoe cabinet.
- Do not store in a damp room or outdoor.
- Beware of the risks of pinching and puncturing during installation.
- Beware of the risk of mirror damage.

Maintenance :



Cleaning with a dry cloth.

Far away from water or wet shoes.

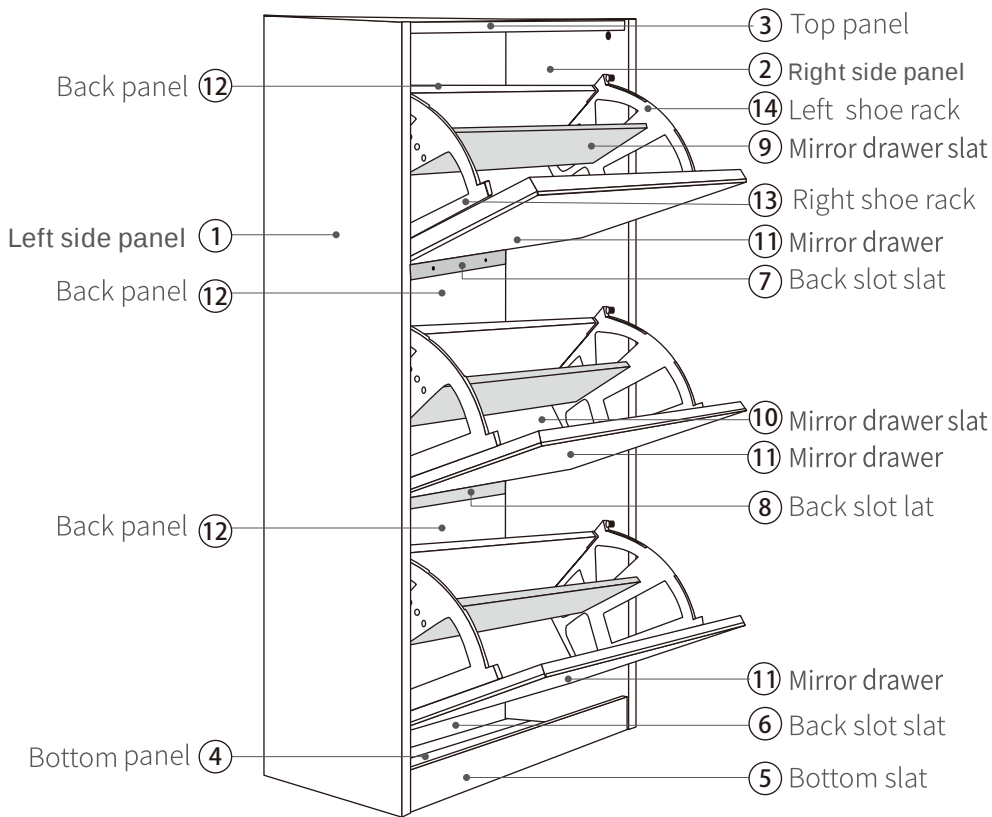

PART LIST

Illustration picture for reference only

NO.	DESCRIPTION	QTY	SIZE (mm)	ILLUSTRATION
①	Left side panel	1	1126x236x15	
②	Right side panel	1	1126x236x15	
③	Top panel	1	600x214x15	
④	Bottom panel	1	600x98x15	
⑤	Bottom slat	1	600x60x15	
⑥	Back slot slat	1	600x78x15	
⑦	Back slot slat	1	600x78x15	
⑧	Back slot slat	1	600x78x15	
⑨	Mirror drawer slat	6	585x135x12	
⑩	Mirror drawer slat	3	585x97x12	
⑪	Mirror drawer	3	596x350x12	
⑫	Back panel	3	606x302x5	

NO.	ILLUSTRATION	QTY	SIZE (mm)
⑬	 Left	3	
⑭	 Right	3	
⑮		6	ø4x16
⑯		6	
⑰		6	
⑱		24	ø3.5x10
⑲		12	ø3.5x16
⑳		12	ø3.5x25

NO.	ILLUSTRATION	QTY	SIZE (mm)
㉑		6	ø3.5x14
㉒		6	
㉓		22	
㉔		22	
㉕		3	
㉖		2	
㉗		2	
㉘		2	ø3.5x45



Two adults are required for assembly of this product on a clean, flat surface instead of a rough surface.

07 | MIRROR SHOE(STORAGE) CABINET

STEP 3 | Assemble the cabinet frame

Attention:

When installing ⑤, ensure that the holes on the board face inward and the bevel side faces upward

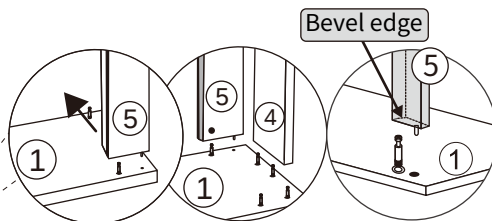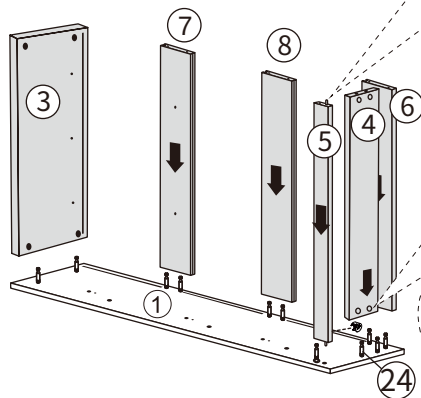


Tip:




Attention:

Put ②③ into the hole and turn ②④ clockwise to lock ②④.

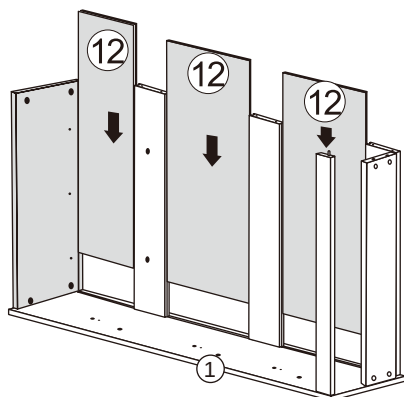

Attention:

Make sure side panel fall into slots, if the side panel is not fully fit, please tap the side panel tightly to adjust.

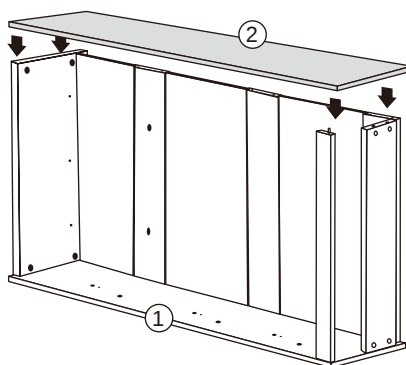


Attention:

Make sure all screws locked tightly.

STEP 4 | Assemble mirror drawer for 3-tier shoe cabinet

Attention:



After installing ②, fix the mirror doors to ① ② with screws ⑮ and ⑯

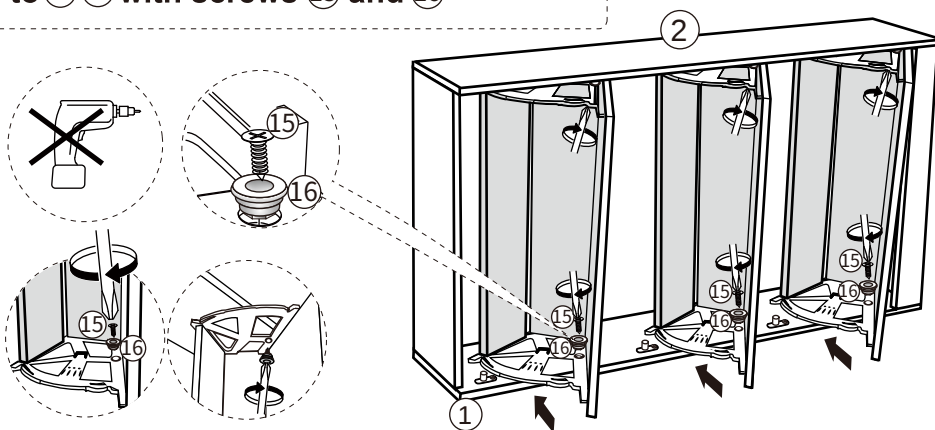

STEP 5 | Lift the shoe cabinet and straighten it

ATTENTION


Place the installed shoe cabinet flat on the ground then raise it up using two people. **Mirror** must on the top when you raise it up. Do not let the moveable door panel fall off.

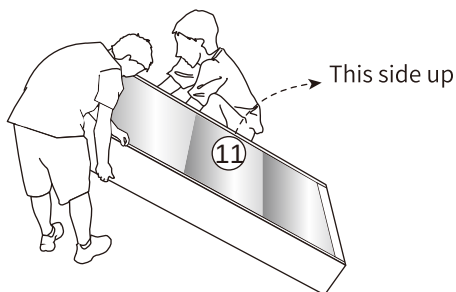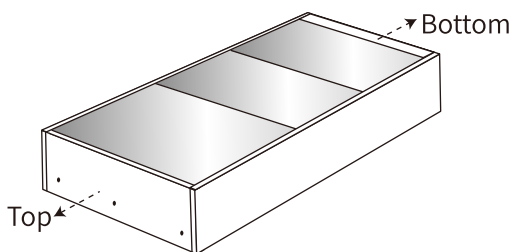

STEP 6 | Insert the mirror drawer slat


Tip:

Fix screw according to the space you need.

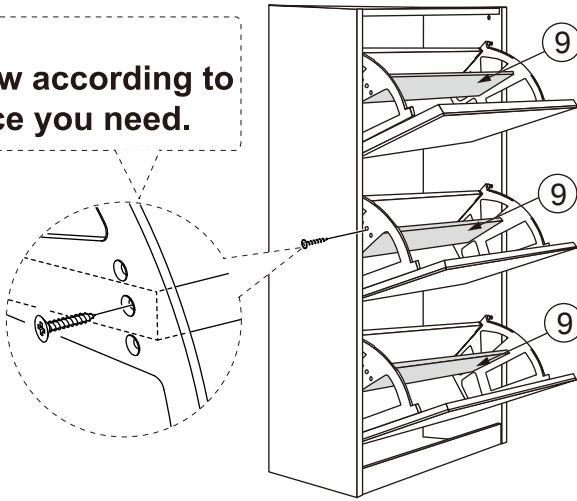

Attention:

If you buy a 2+3 combination shoe cabinet, please do not use (25) to seal the hole, otherwise please install (25) as picture shown.

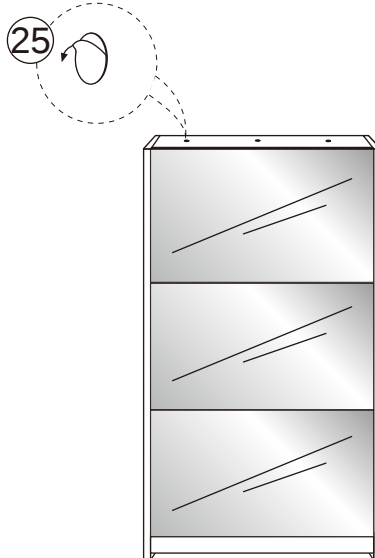

STEP 7 | Insert the anti-falling screws.

ATTENTION

This unit must be fixed to a solid wall by falling prevention screws. Failure to do so may result in a risk of the cabinet falling over and possible injury/damage to persons or property.

