



Step 3

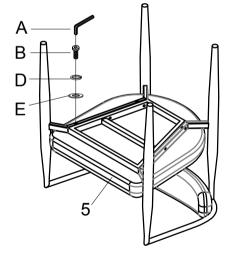


Step 2

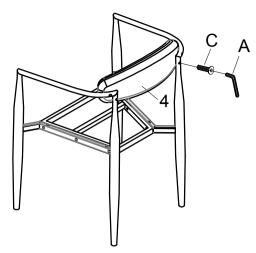

Don't lock the bolts tightly first, level the chair and tighten all the bolts at the end.

Step 4

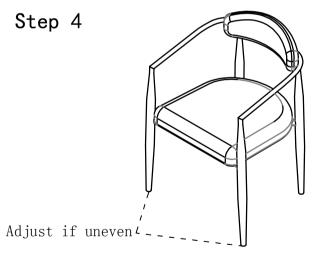

1	2	3	4	5	Α	В	С	D	Е
A					4.0	((((())) M6*40	() M6*35	@ ø 13	Ø16
1pc	1pc	1pc	1pc	1pc	1pc	10pcs+2	4pcs+2	4pcs+2	10pcs+2