

Desk Installation Guide



Step 1: As shown in Image 1, install the metal frame onto the bottom of the cabinet using self-tapping screws.

Step 2: Affix anti-slip gaskets around the perimeter of the metal frame on the side that will be in contact with the cabinet, as illustrated in Image 2.



Image 1



Image 2

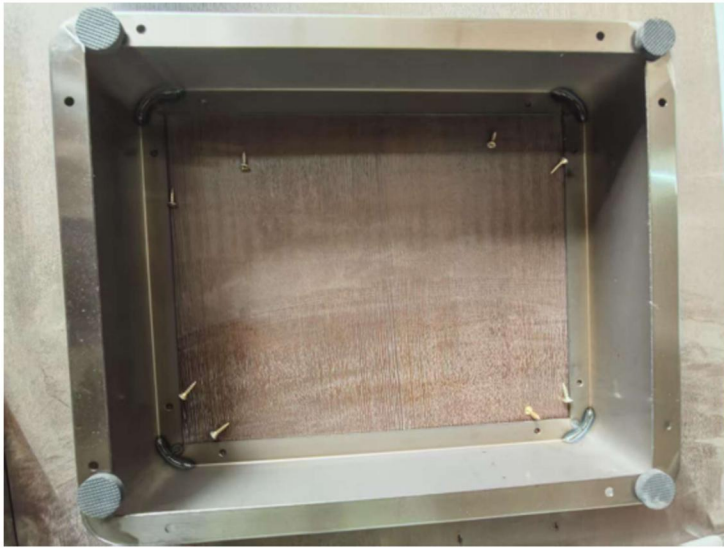


Image 3

Step 3: Turn the countertop over to its back side. As shown in Figure 3, secure the metal frame to the back of the desktop using self-tapping screws. (Note: There is no specific, pre-defined position for fixing the metal frame. Position it centrally from top to bottom and then lock it in place with self-tapping screws.)



Step 4: Lock the steel plate side legs onto the pre-drilled holes on the back of the desktop using long screws, as seen in Image 4.

Image 4



Step 4: Lift the desktop and place it in the central position on top of the cabinet. The installation is complete, as shown in Image 5.

Image 5