


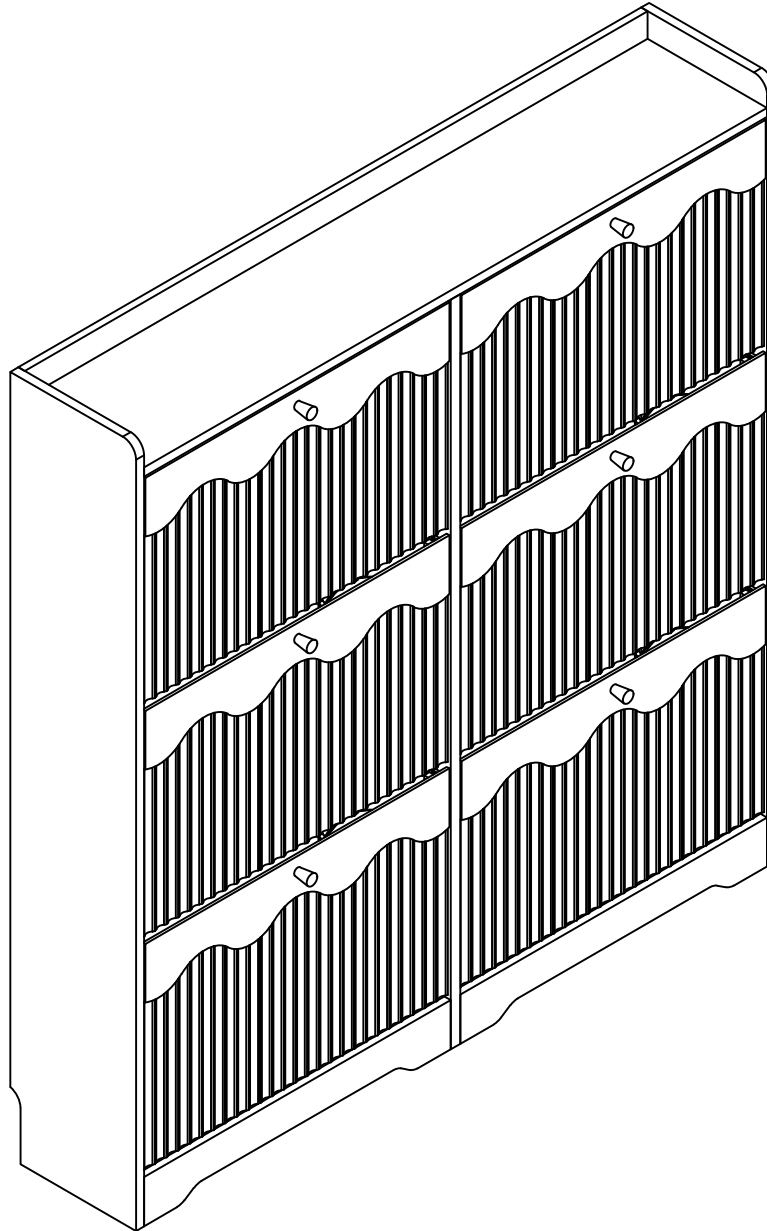

Please note: Items cannot be returned once assembled.






HLG303

Version:1.0




IT IS RECOMMENDED
TO USE POWER TOOLS

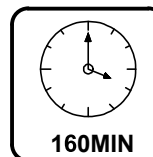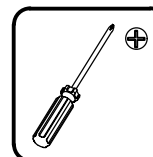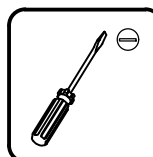


160MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

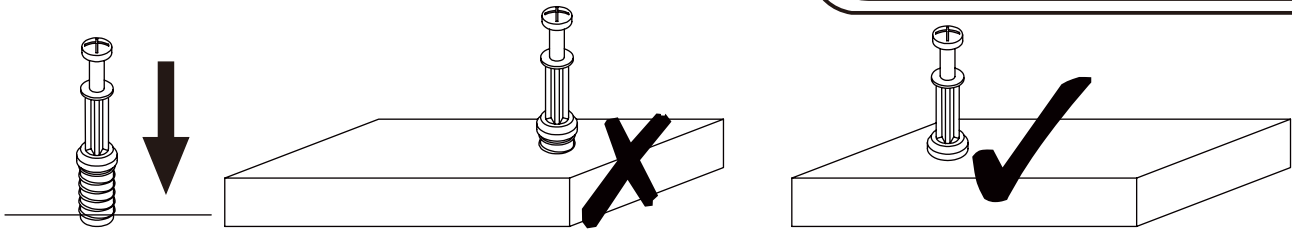


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

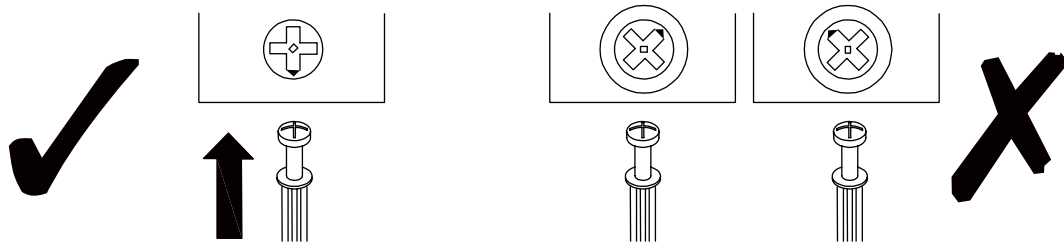











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


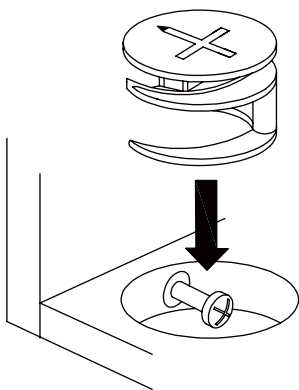




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.







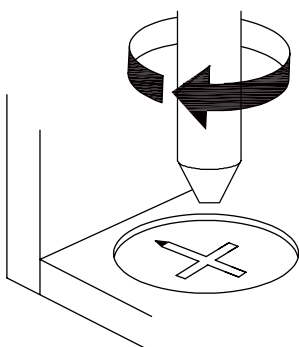



EN_Turn cam lock clockwise to tighten.

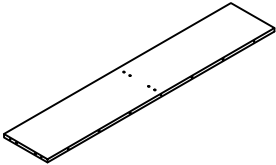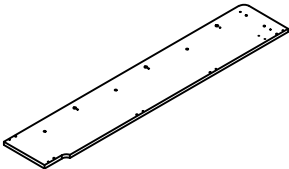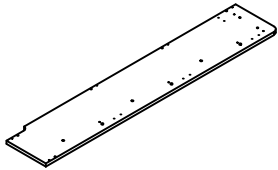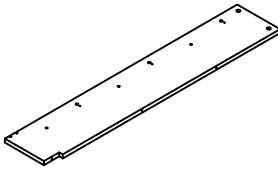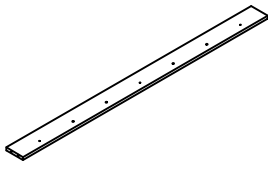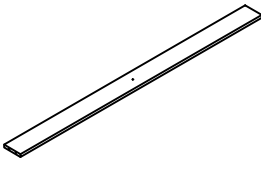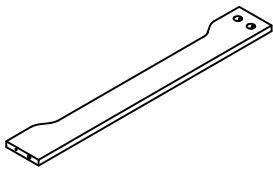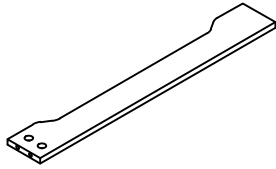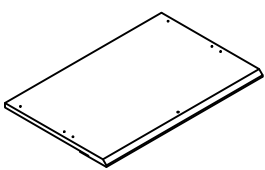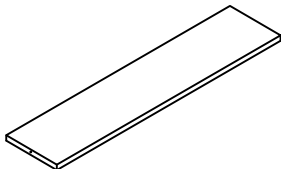NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x3	
⑦		x1	
⑧		x1	
⑨		x6	
⑩		x6	

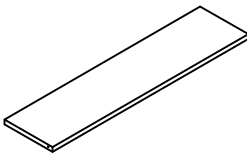
NO.	PARTS	QTY	SPARE
⑪		x12	
	 Hardware Kit	x1	

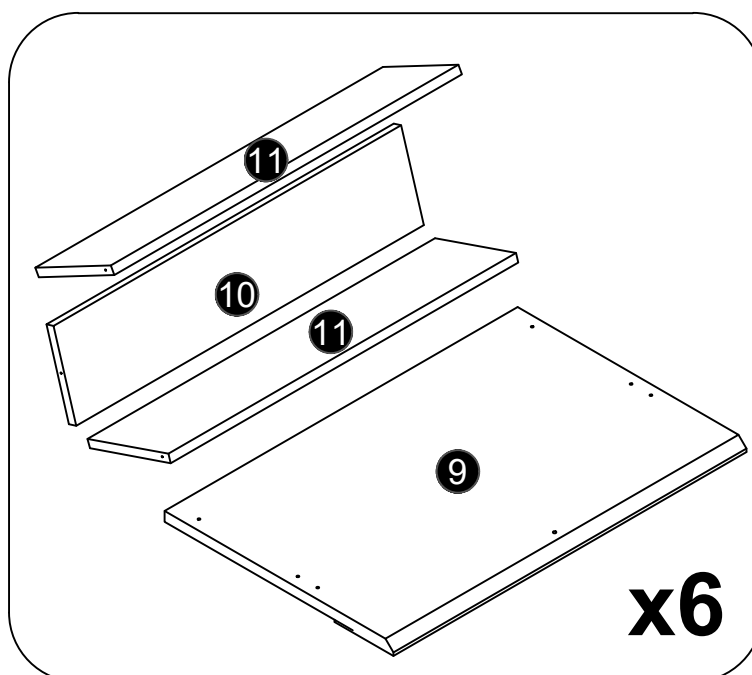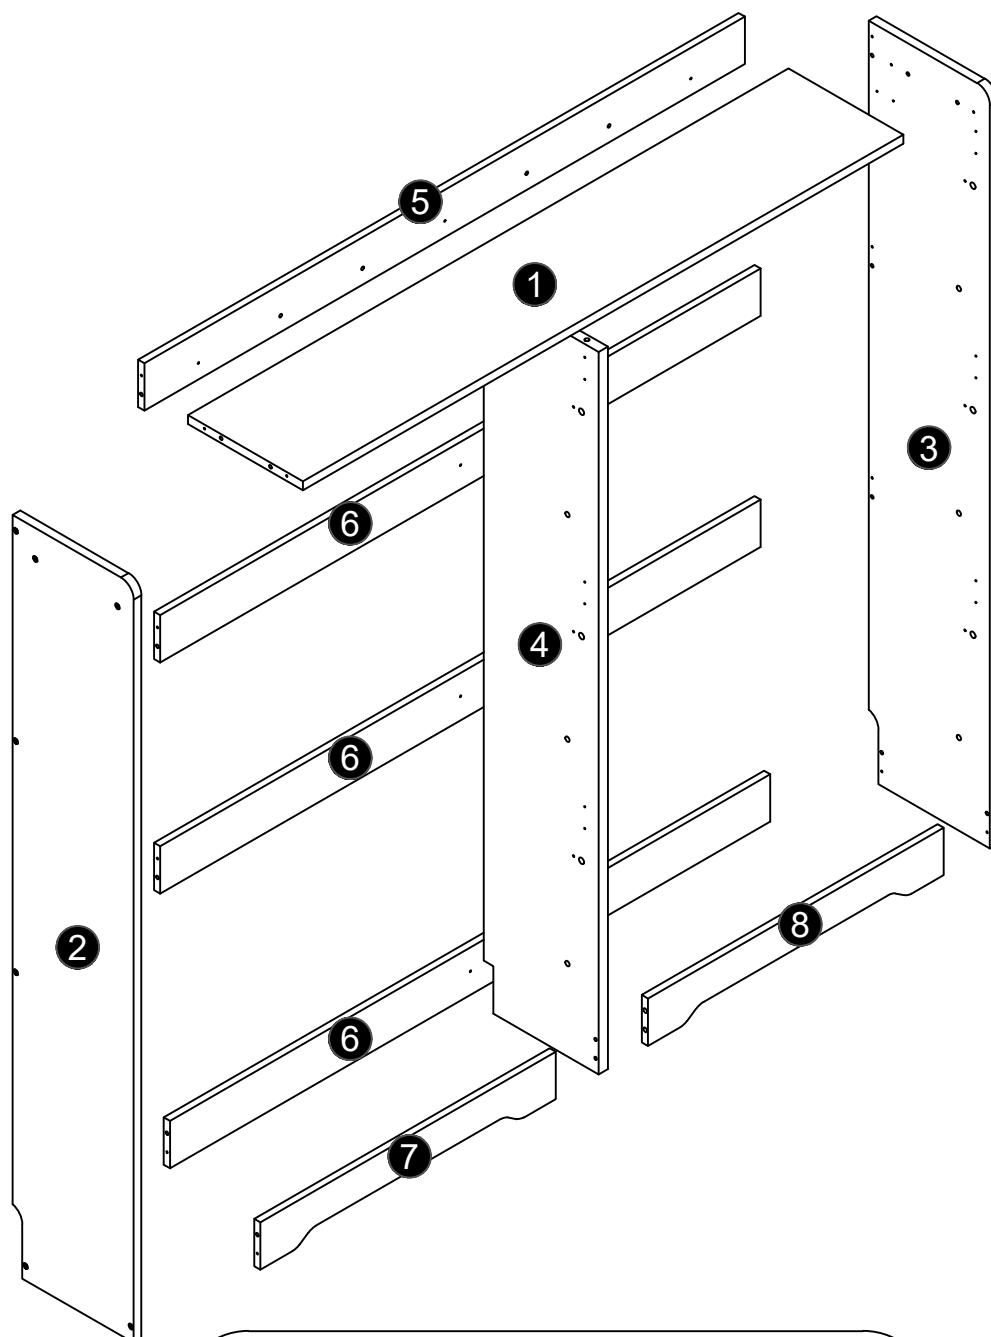


A x6 Ø6x35mm 	B x6 Ø15x10mm 	C x20 Ø6x30mm +2(spare) 	D x22 Ø4x35mm +2(spare) 	E x72 Ø3.5x12mm +4(spare) 	F x12 +1(spare) 
G x12 +1(spare) 	H x6 +1(spare) 	I x1 	J x6 J-1 J-2  	K x6 K-1 K-2  	L x6 
M x14 +2(spare) 	N x2 Ø6x30mm 	O x6 O-1 O-2  	P x2 P-1 P-2  	Q x12 Ø4x10mm +2(spare) 	R x6 
S x6 +1(spare) 					

F x3 	P x1 P-1 P-2  	Q x3 
--	---	--

01

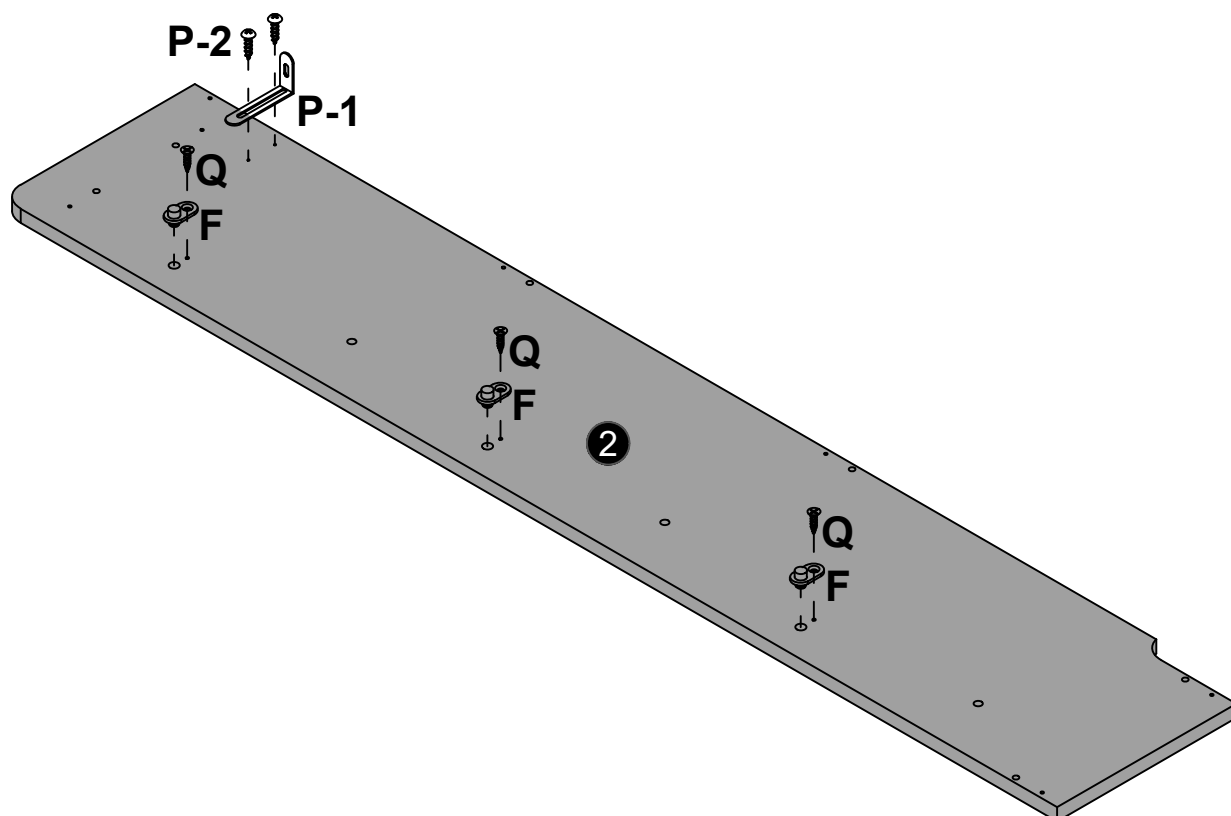

F x3



J x3



J-1




J-2

P x1




P-1




P-2


Q x3

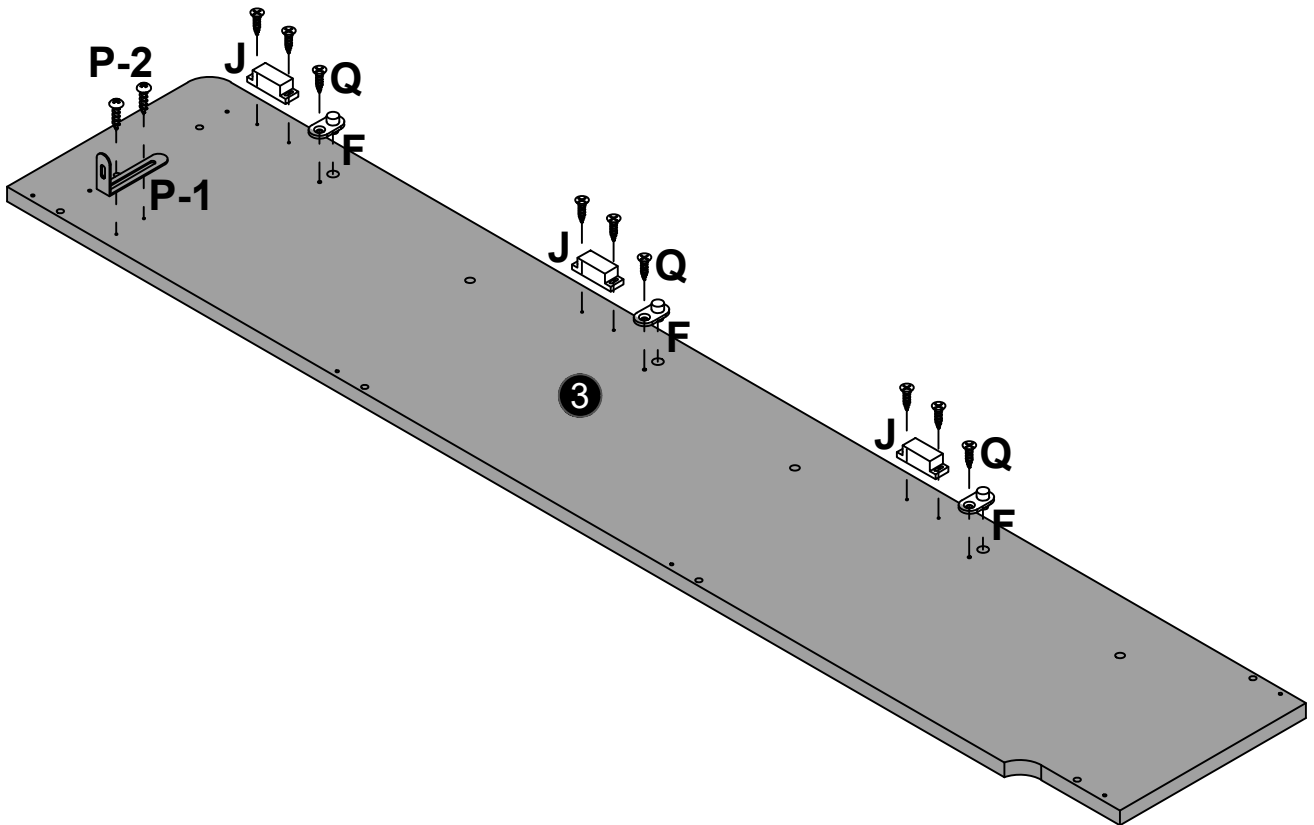

A x4



F x6



J x3




J-1




J-2


Q x6

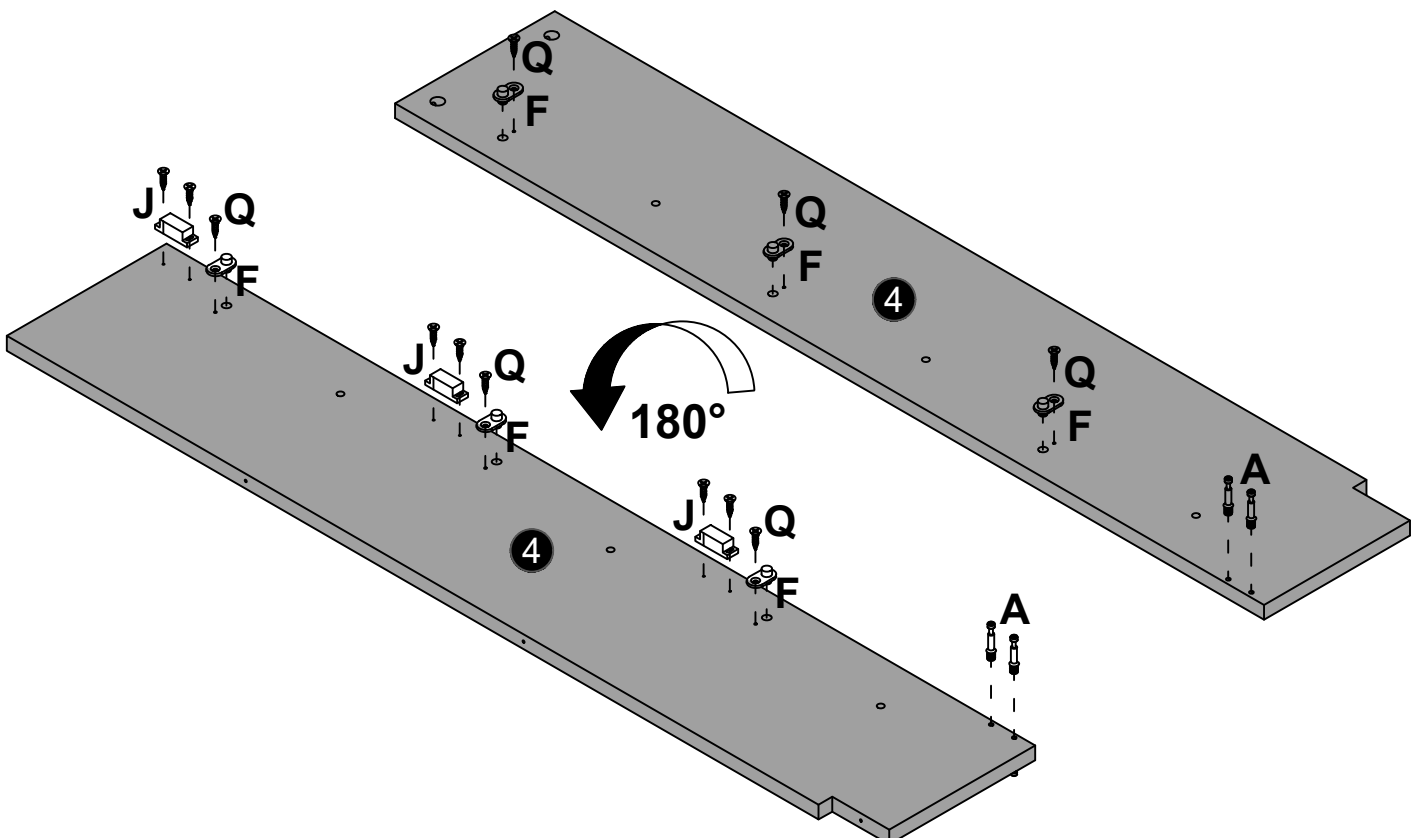

A x2




04

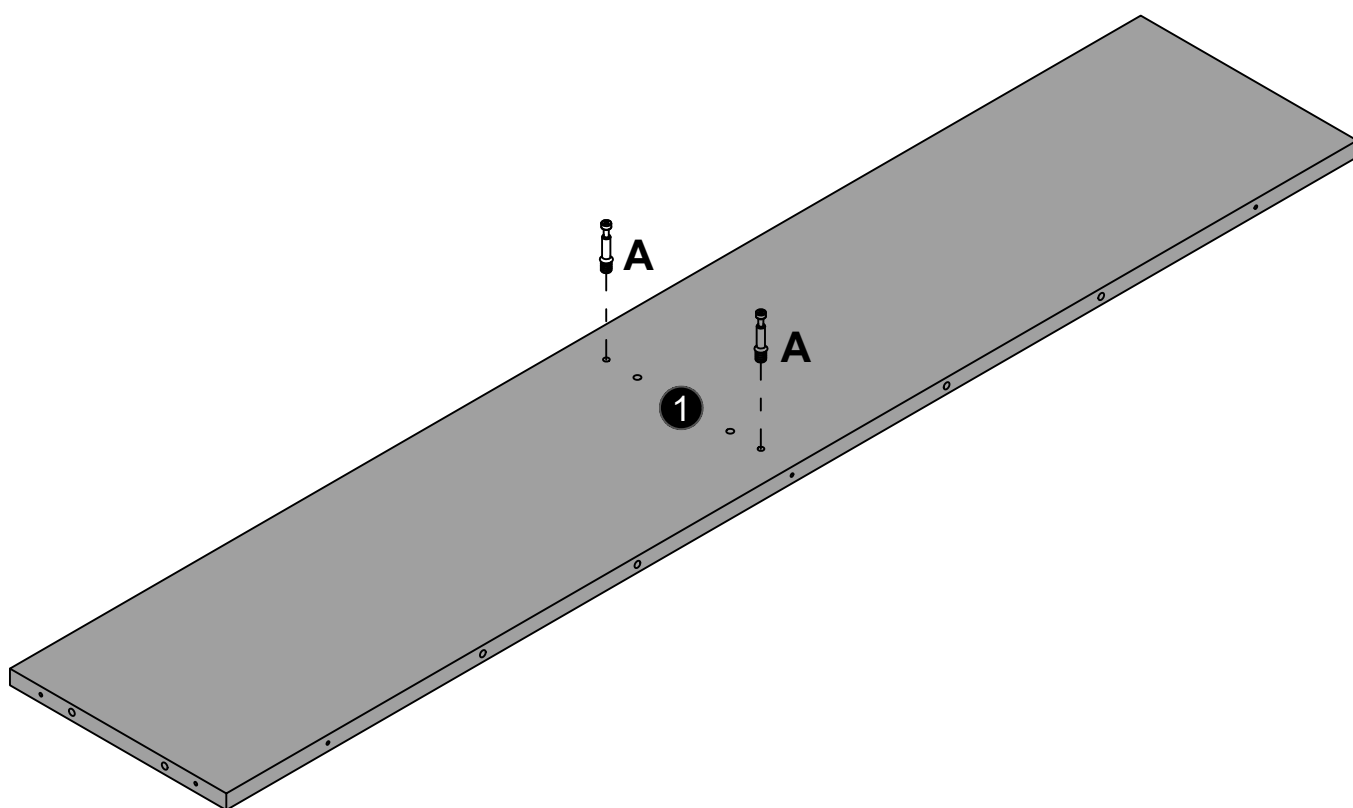


C x4







D x3




05

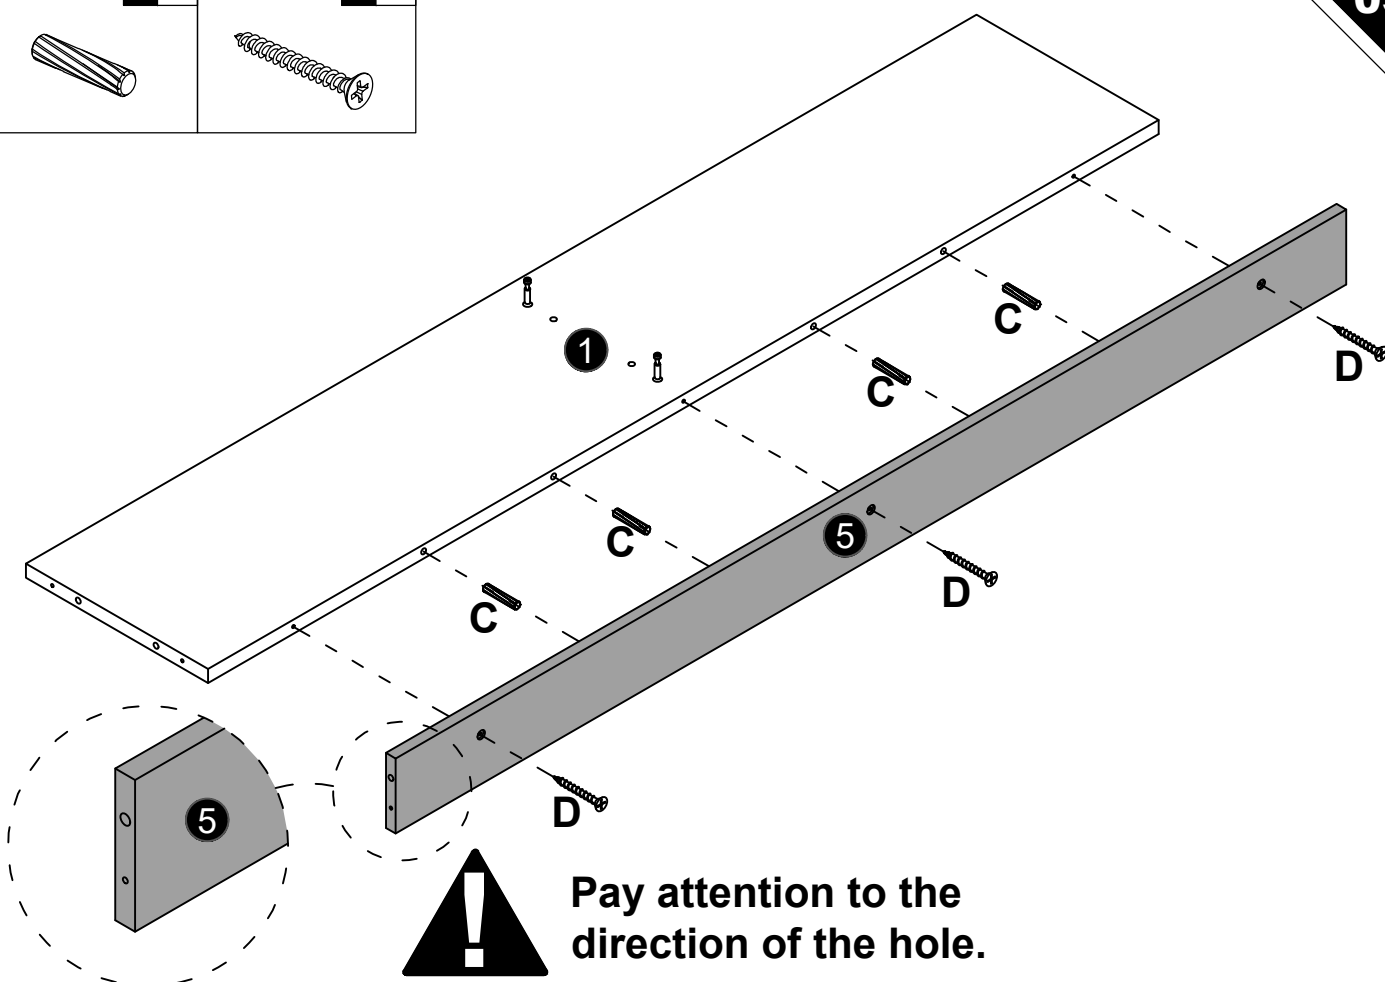

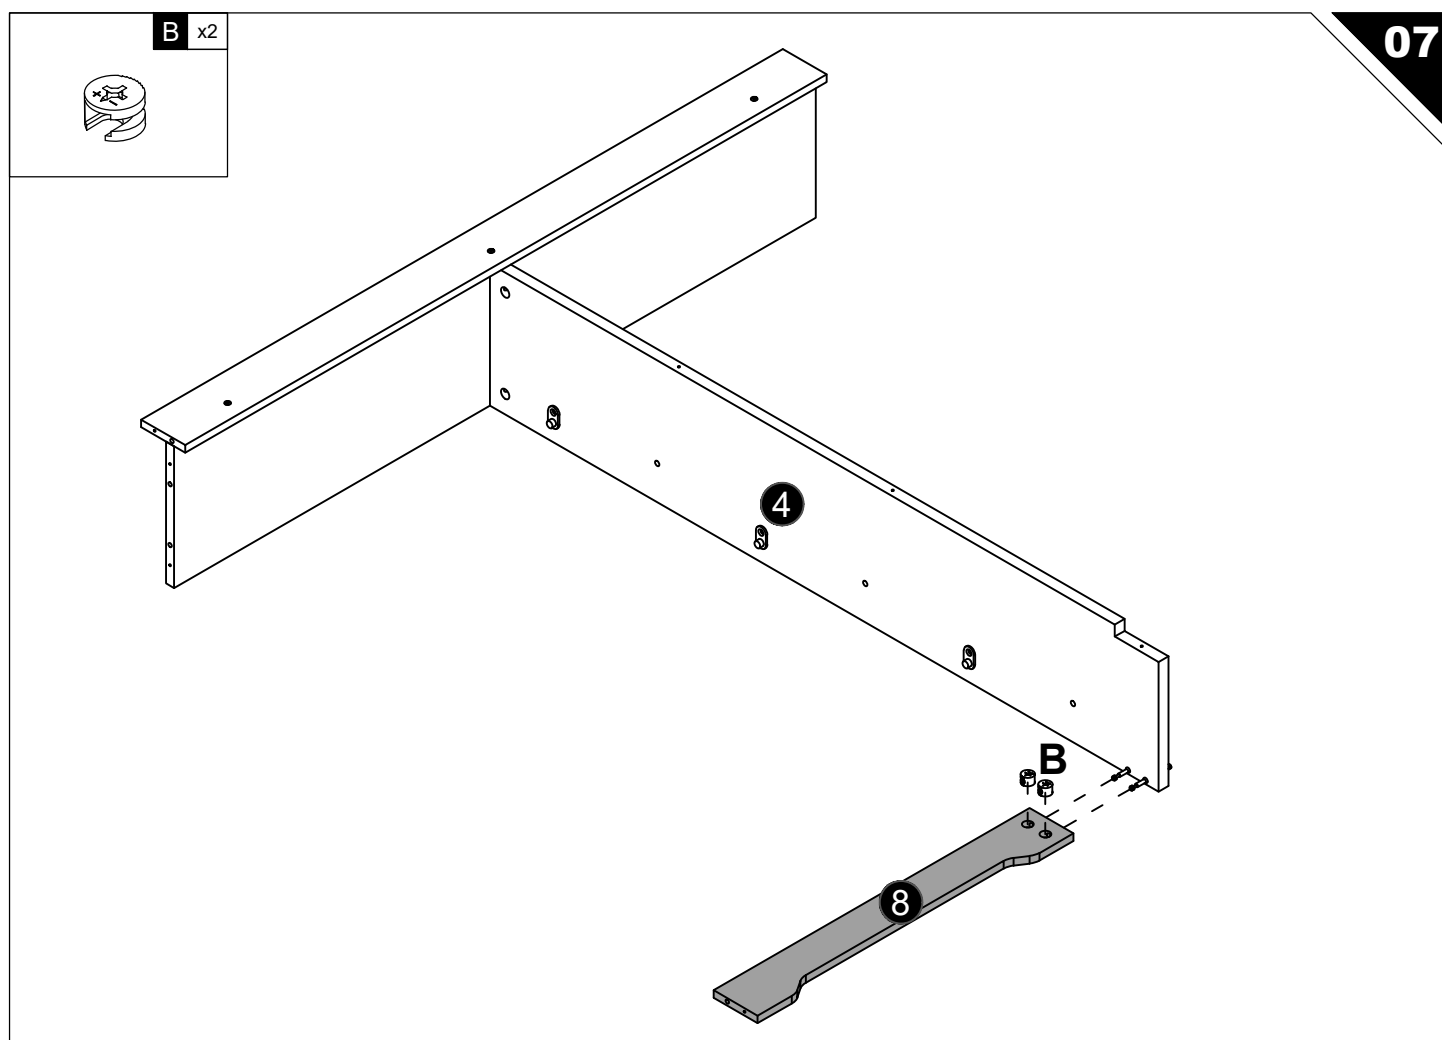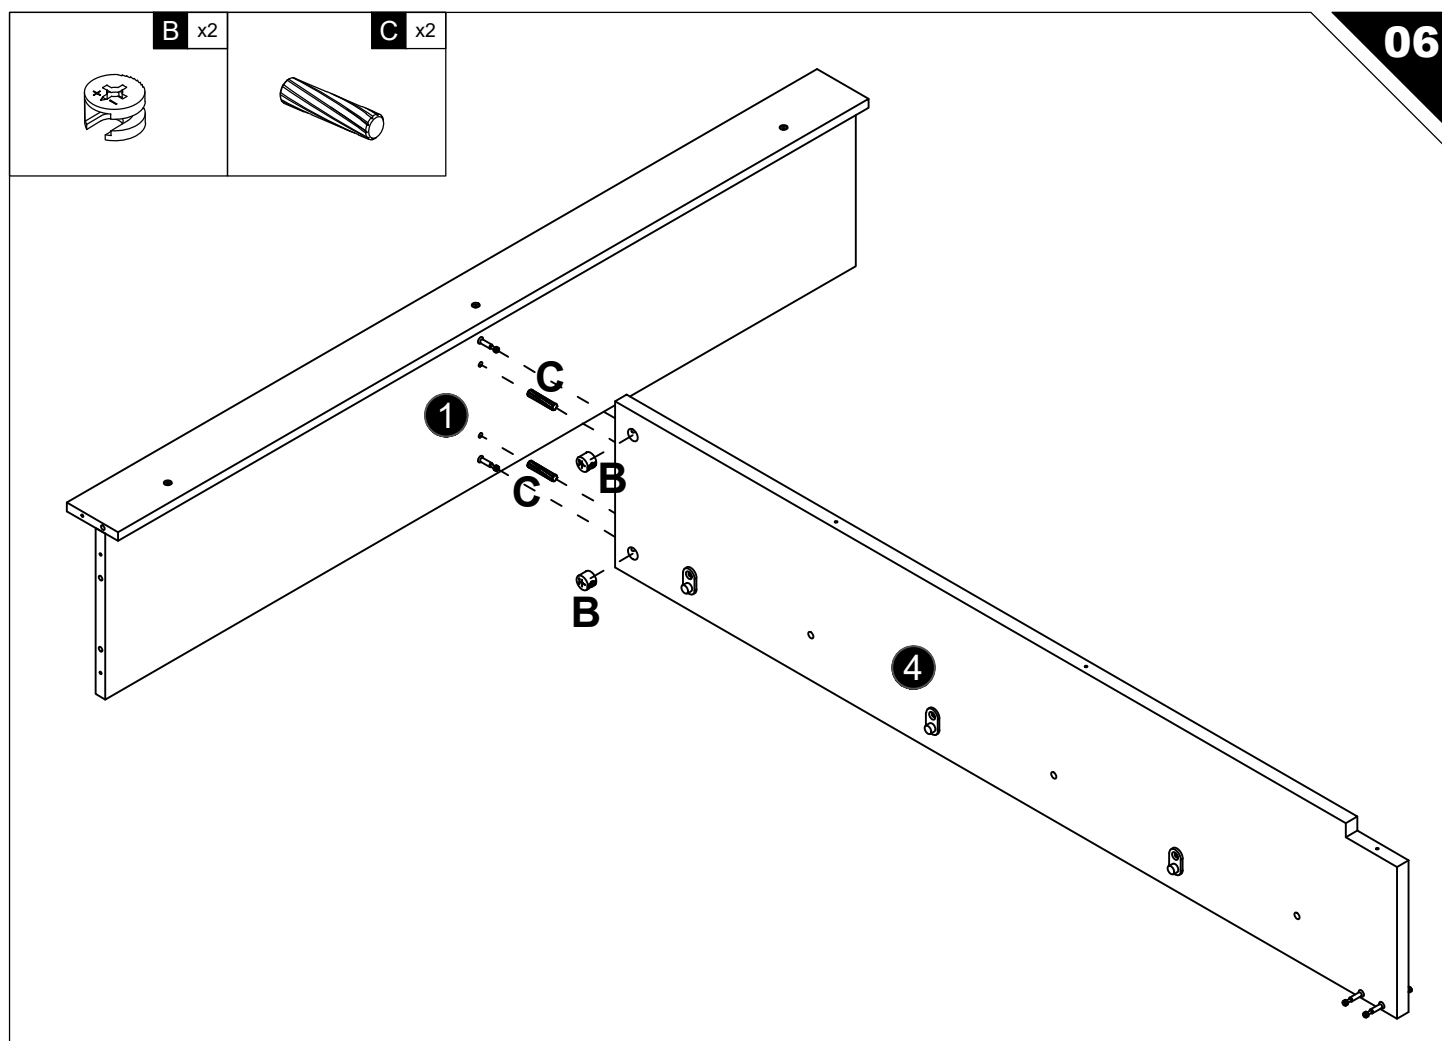


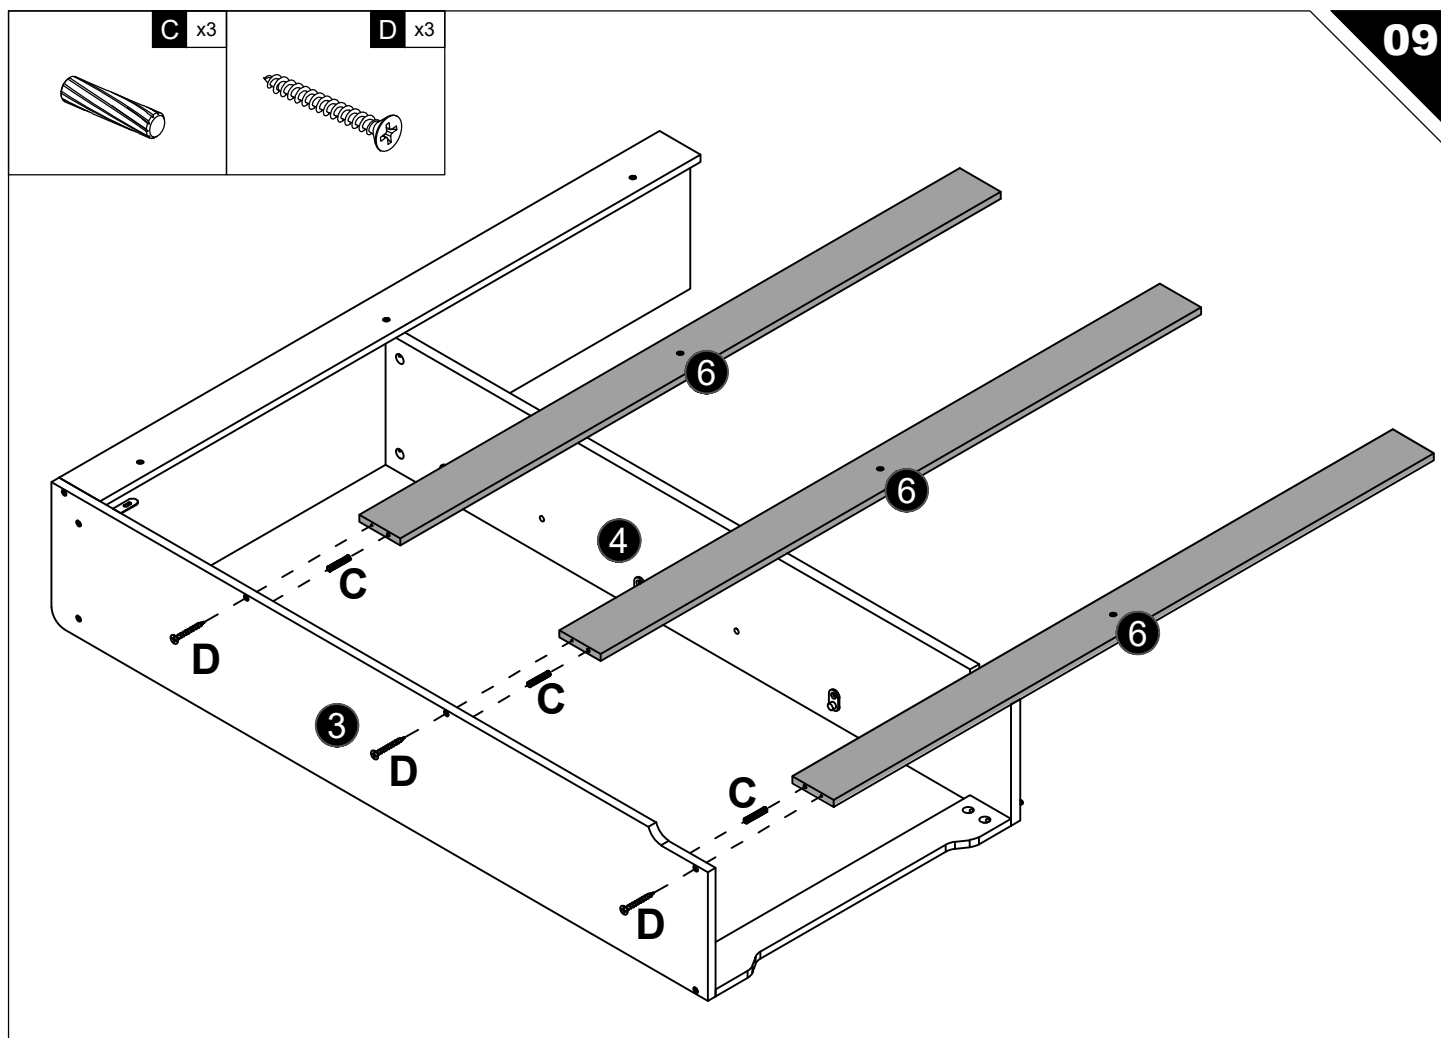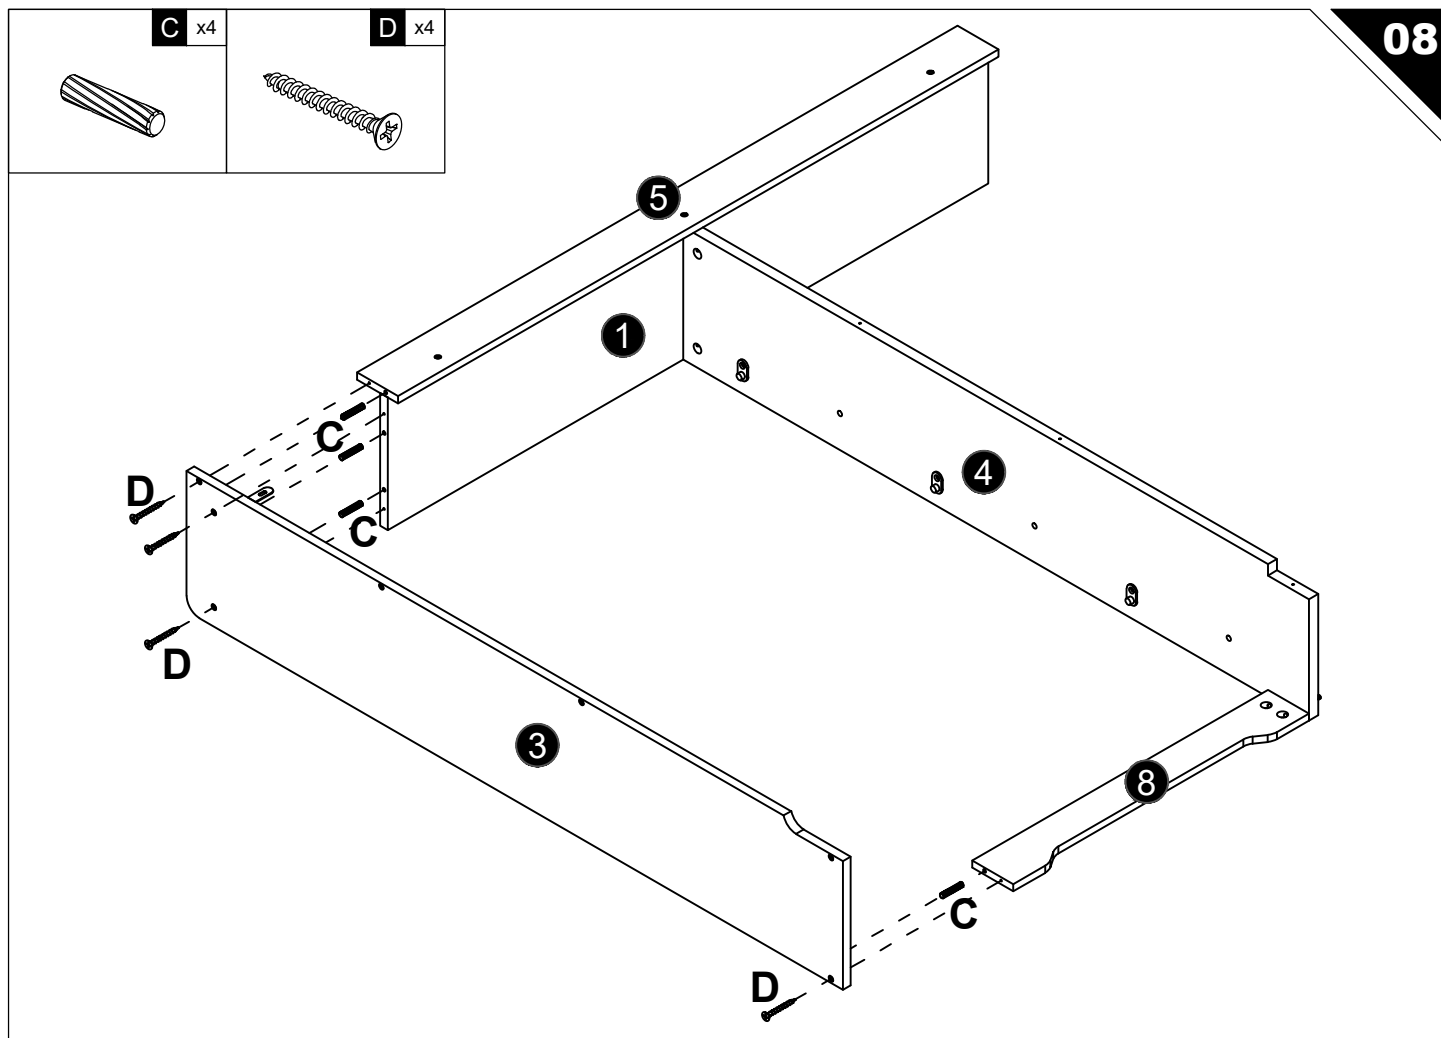

D x3




10

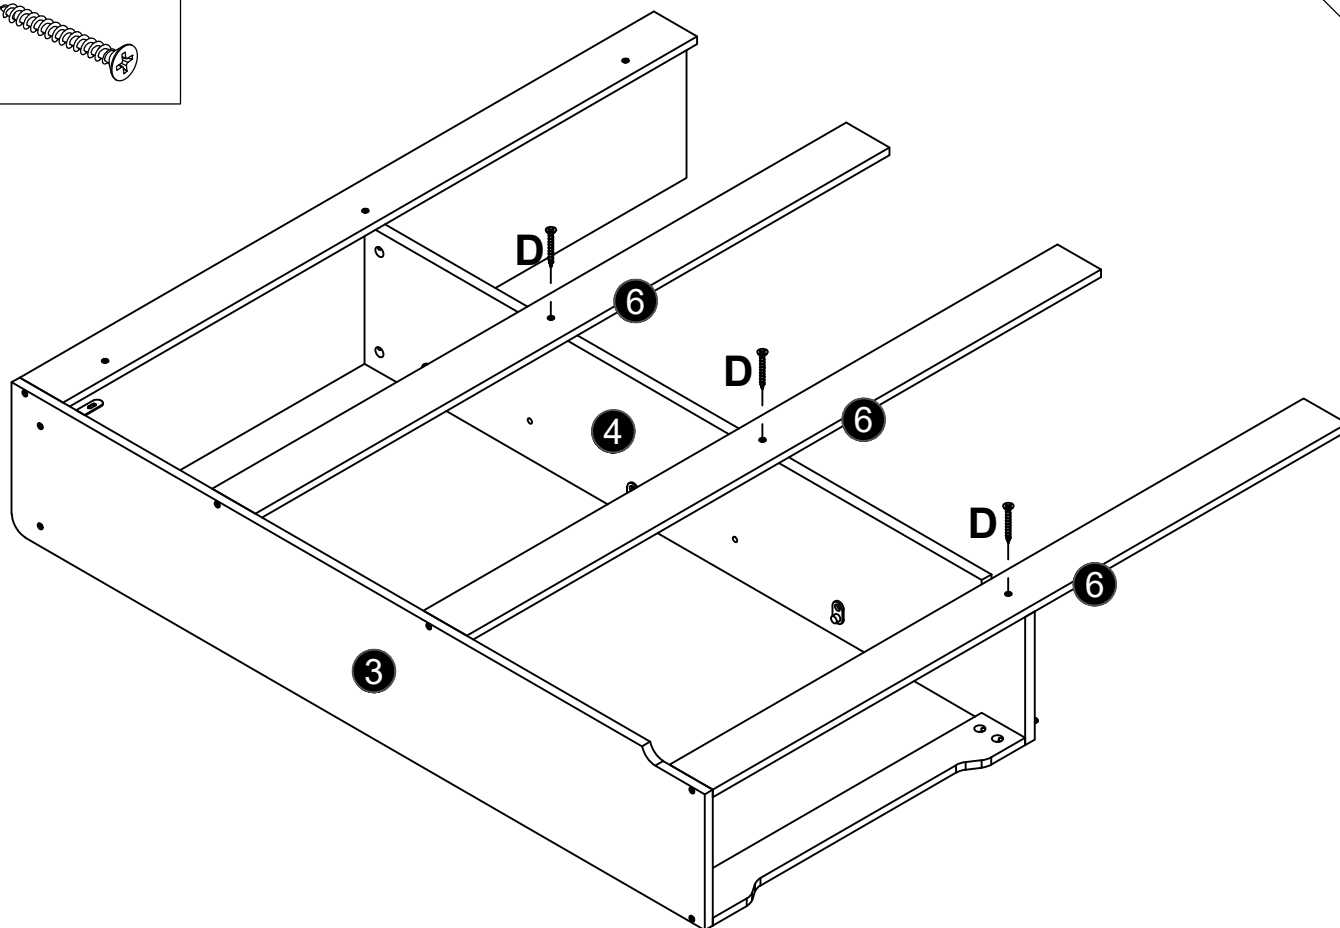


B x2

C x7


D x7




11

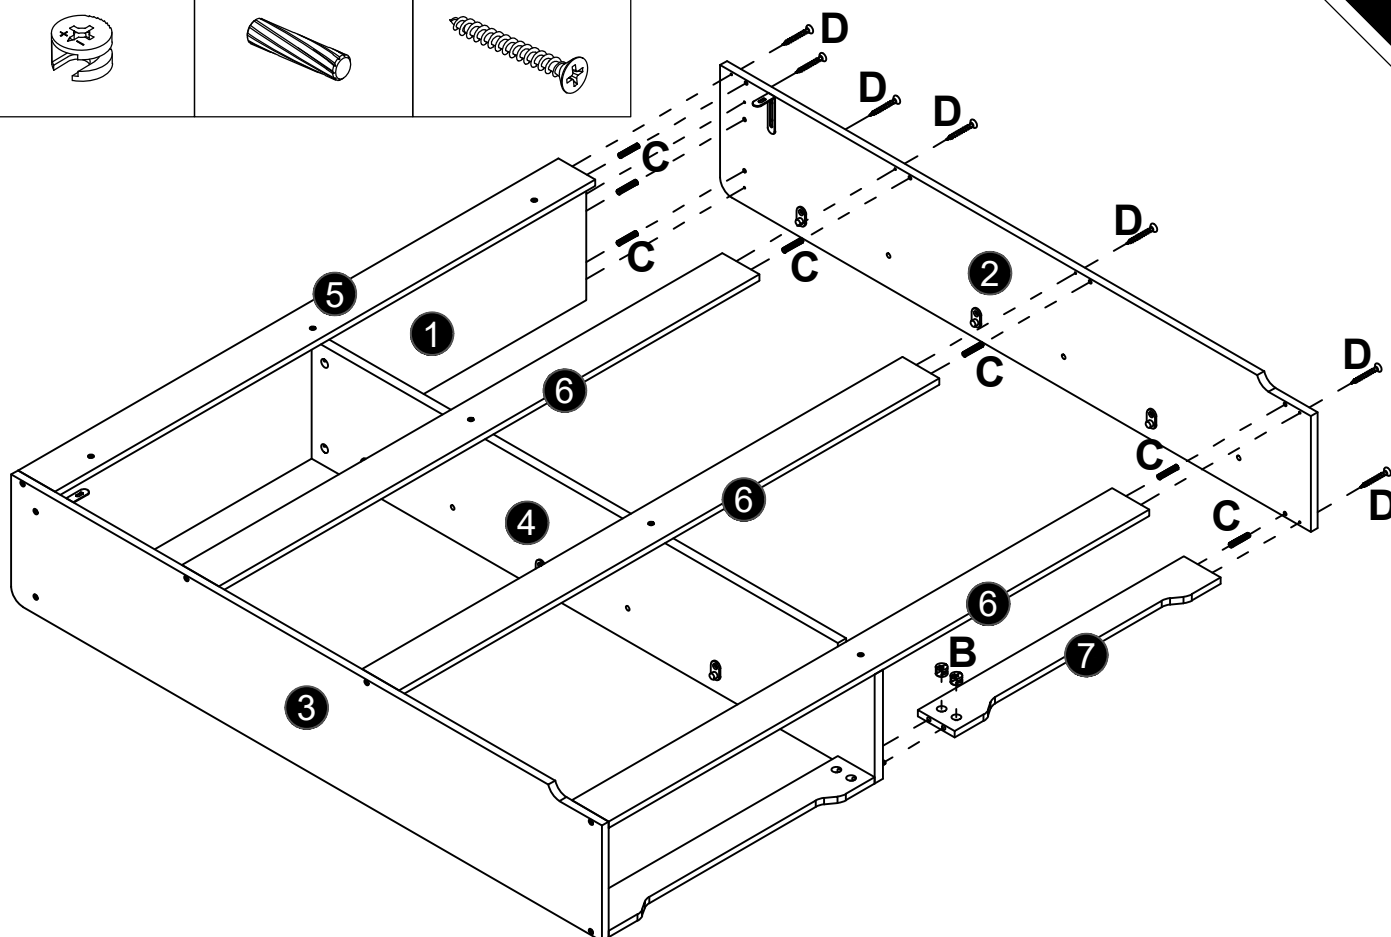

D x2



N x2

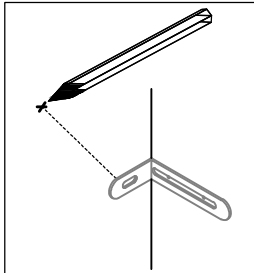

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL



(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

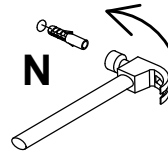

(3)x2


Then, put the expansion bolt into the hole



WALL

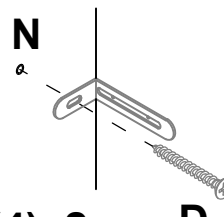


(4)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

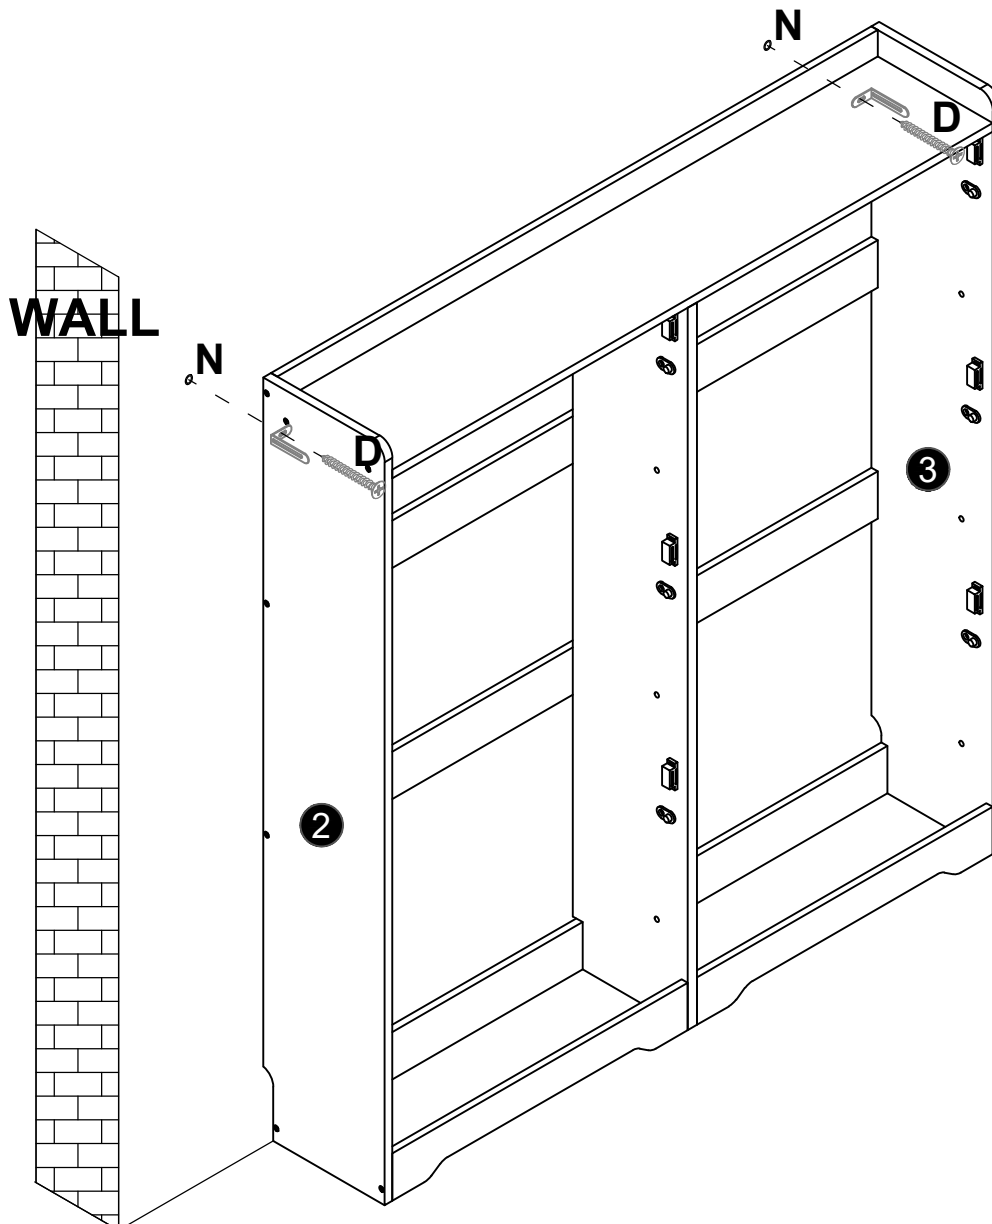

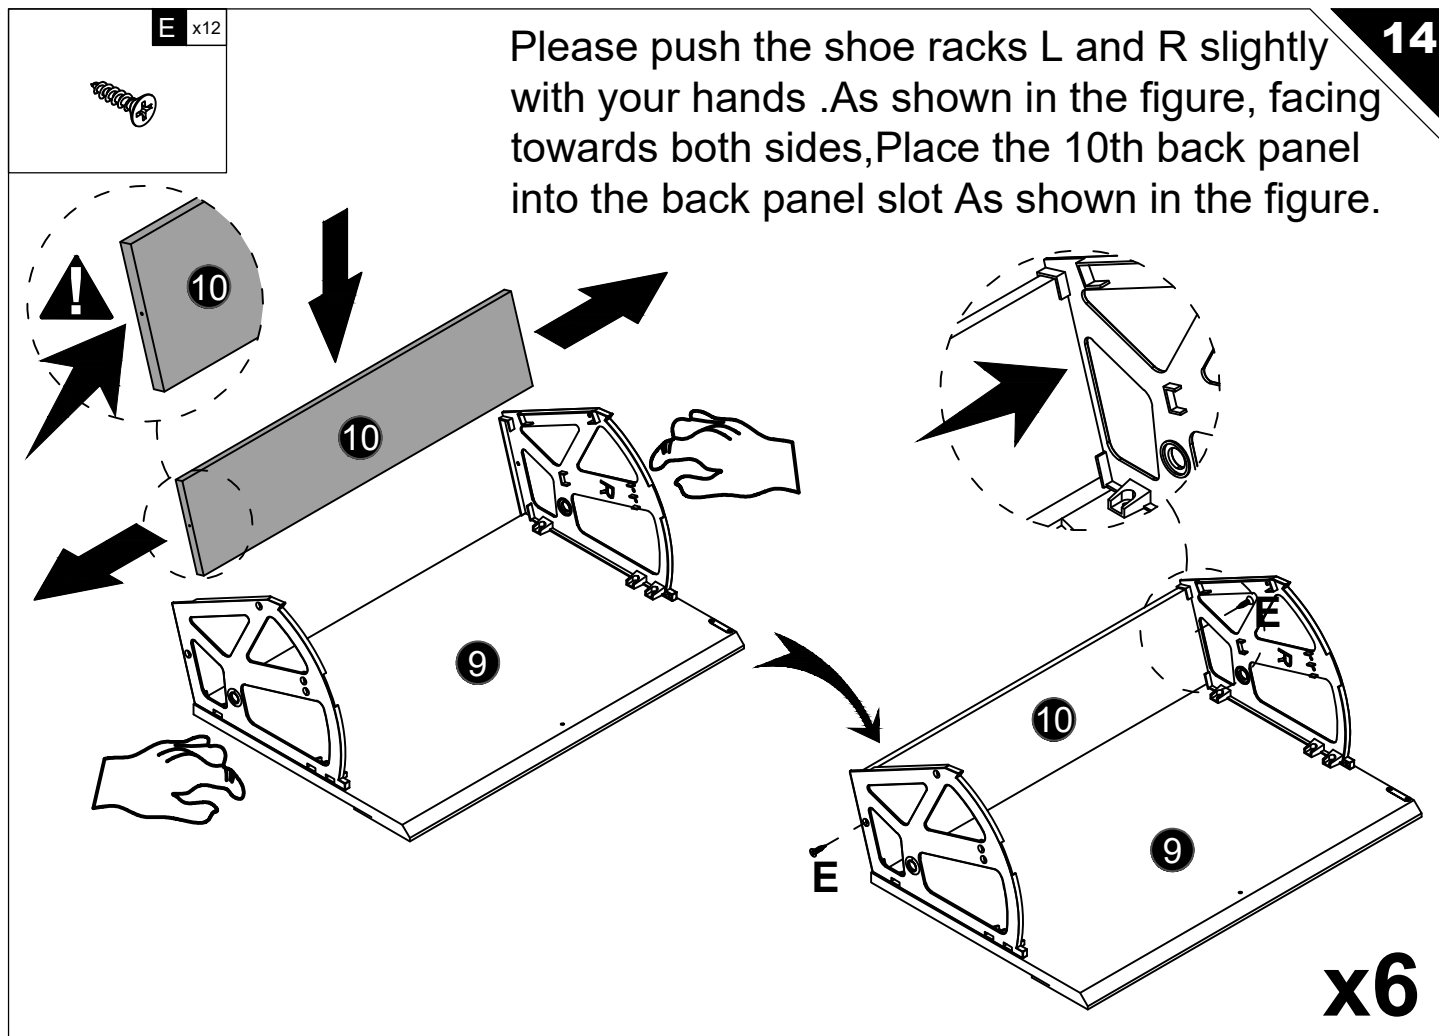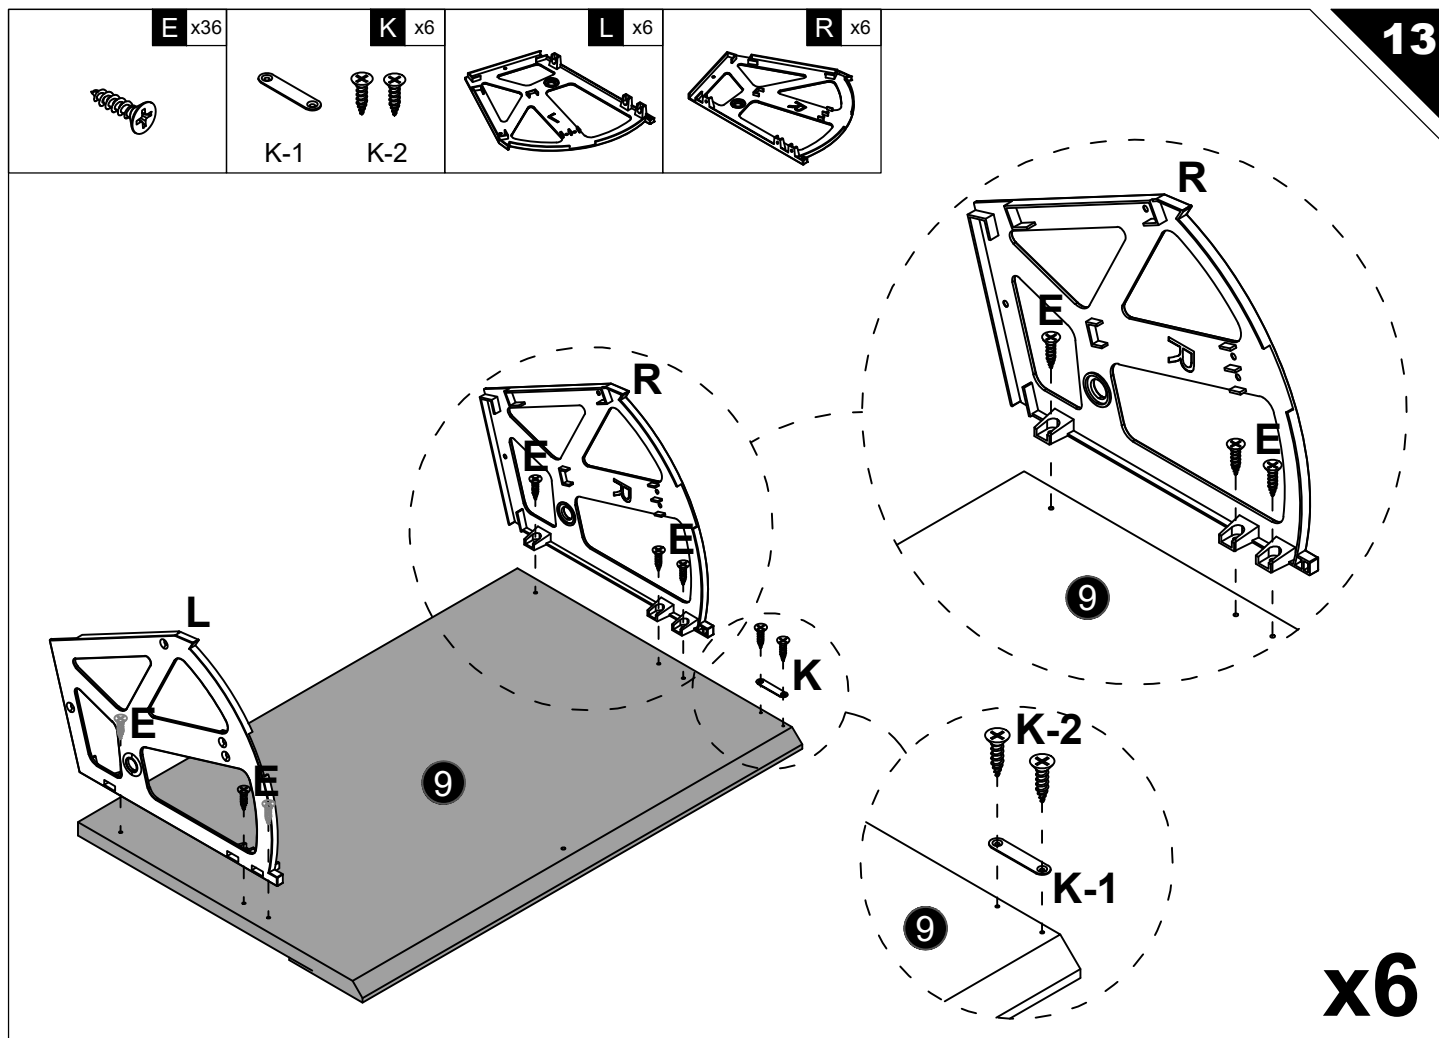

15

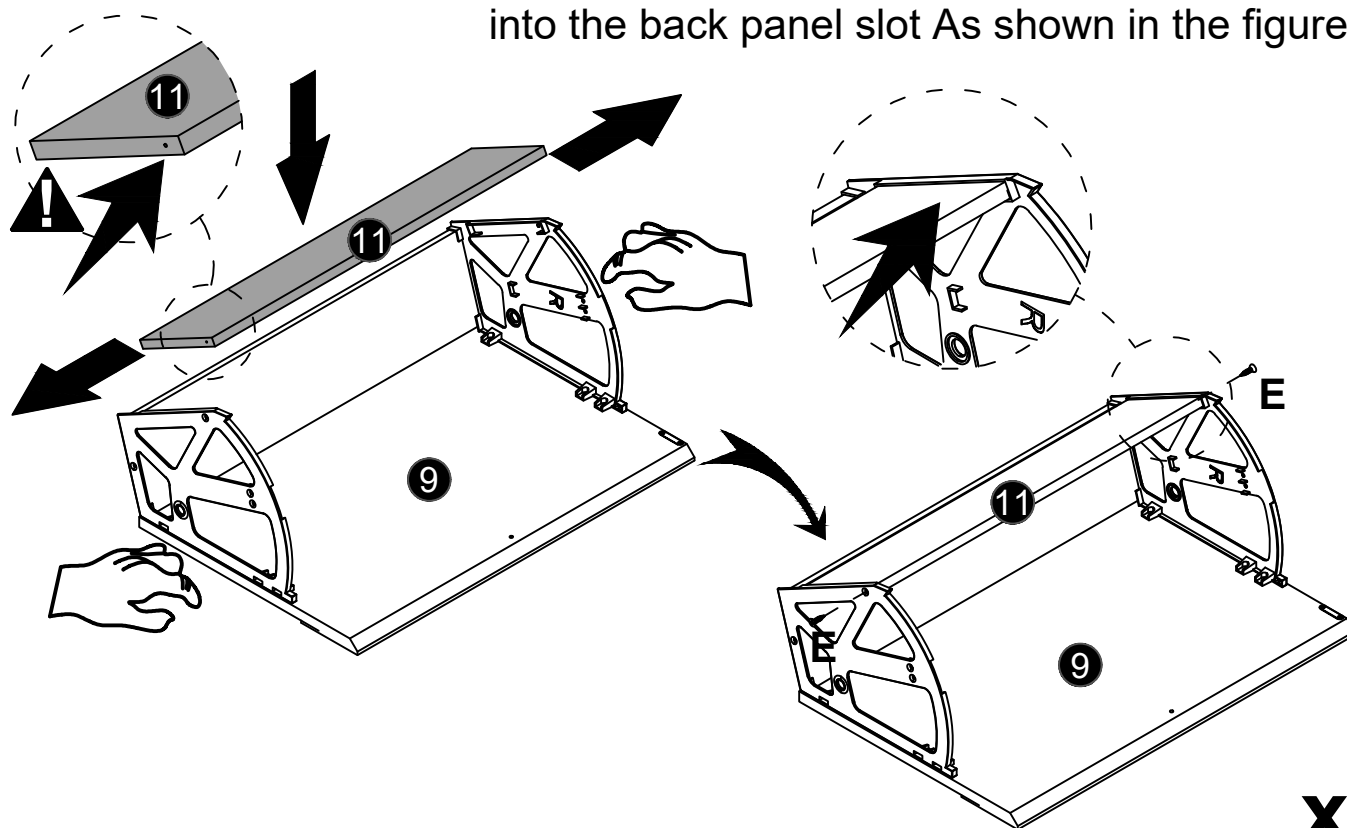


x6

16



O-2

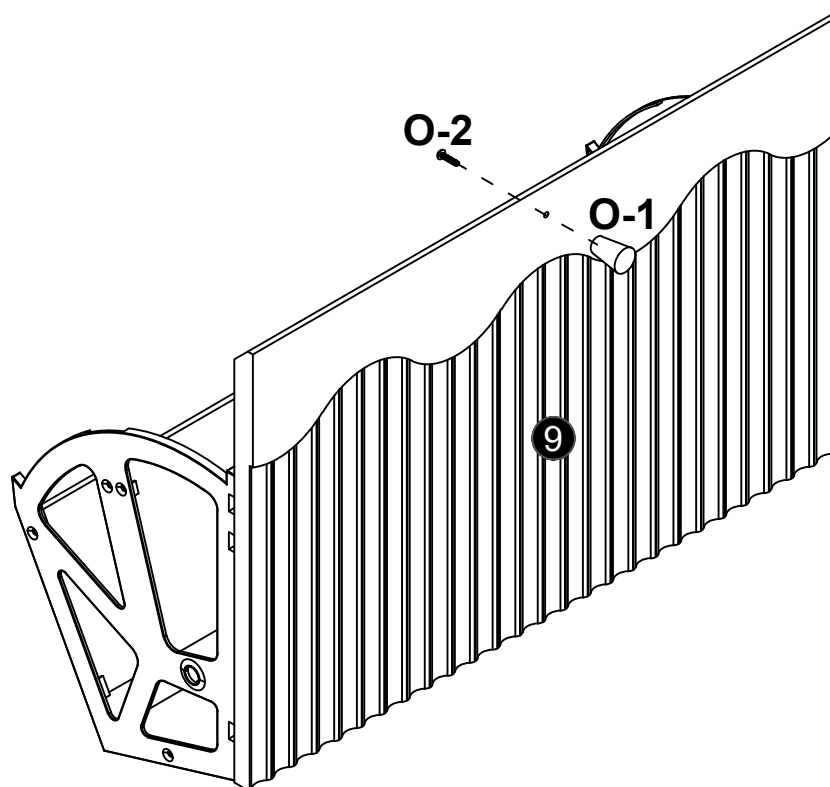


x6


G x6




H x3





I x1




S x3

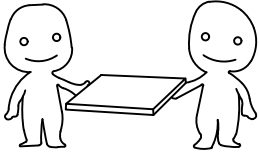


Need Two or More
People To Complete

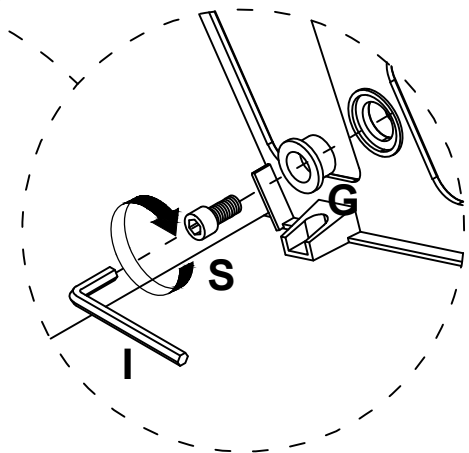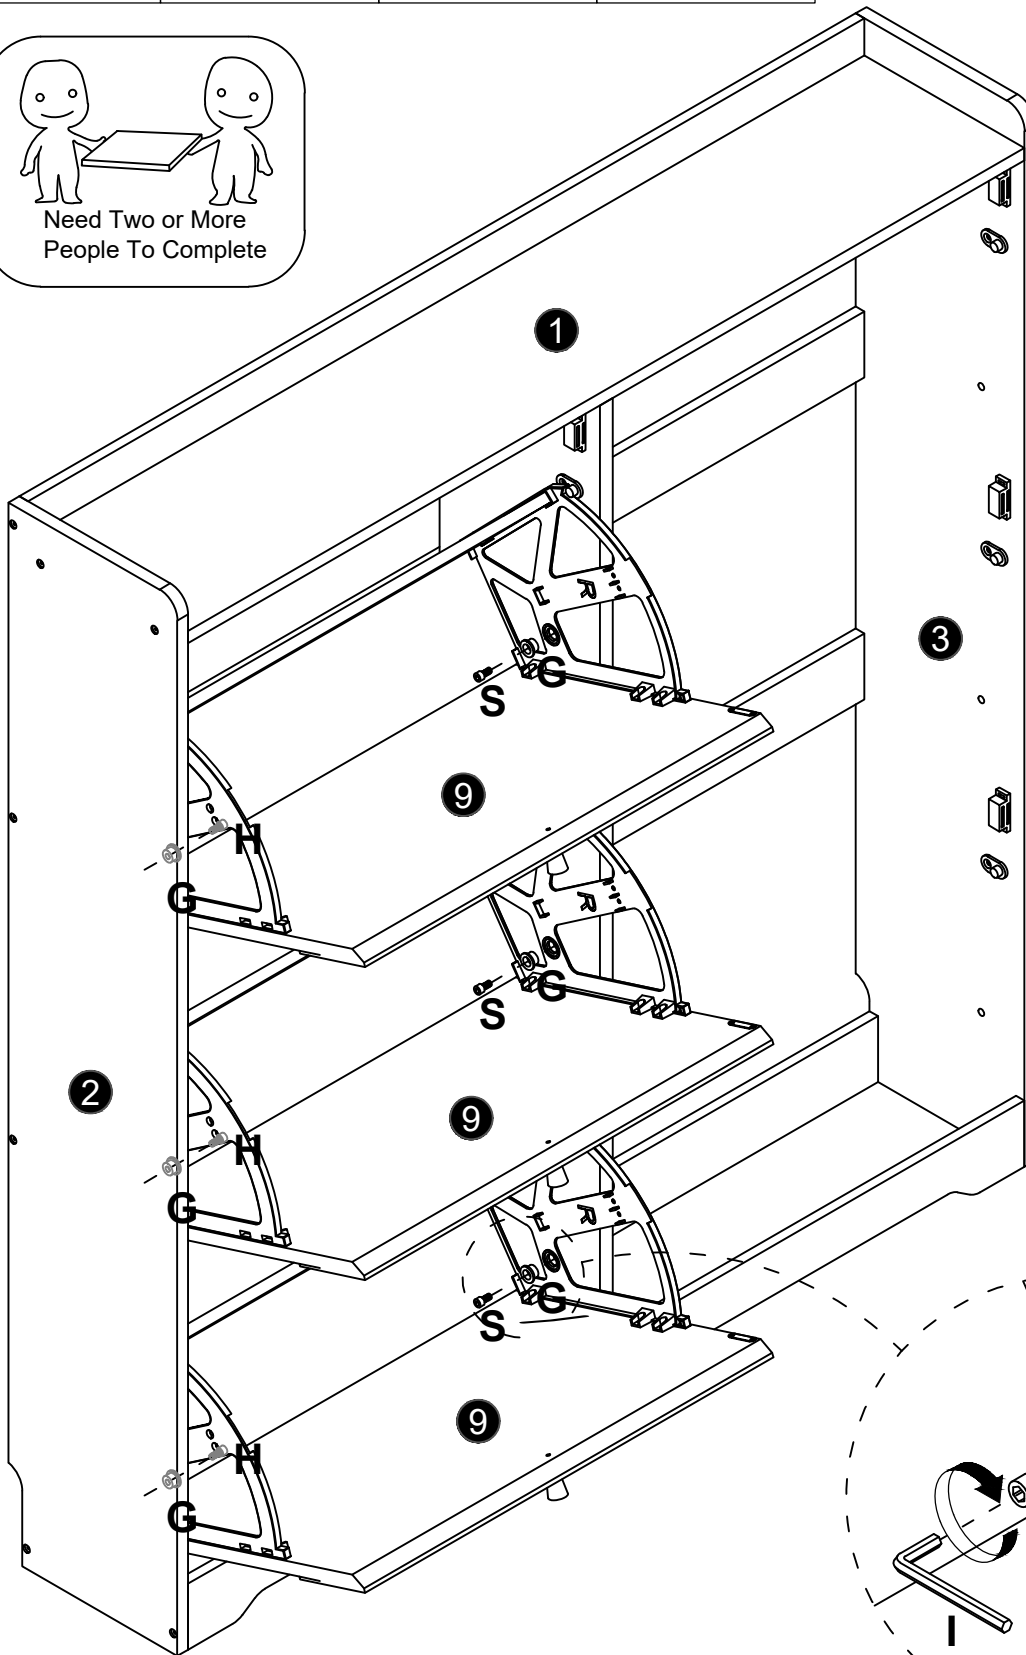


Note: When installing H or S, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

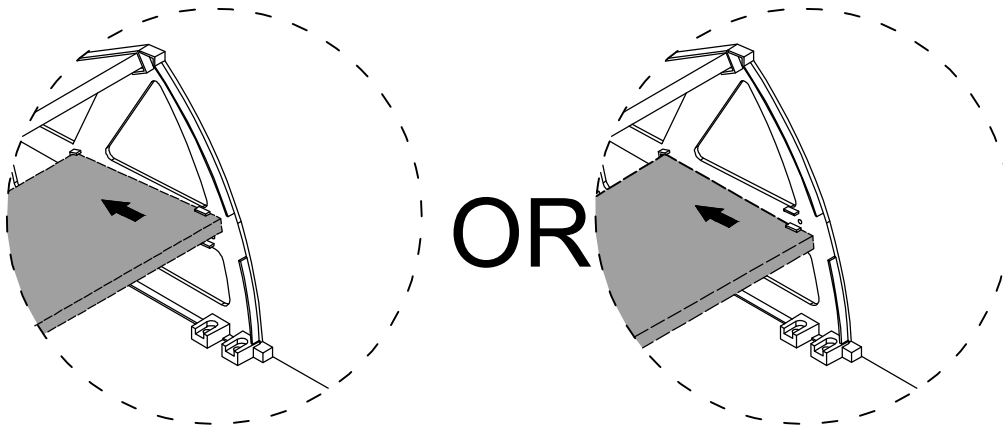

Adjustments can be made according to your own needs.

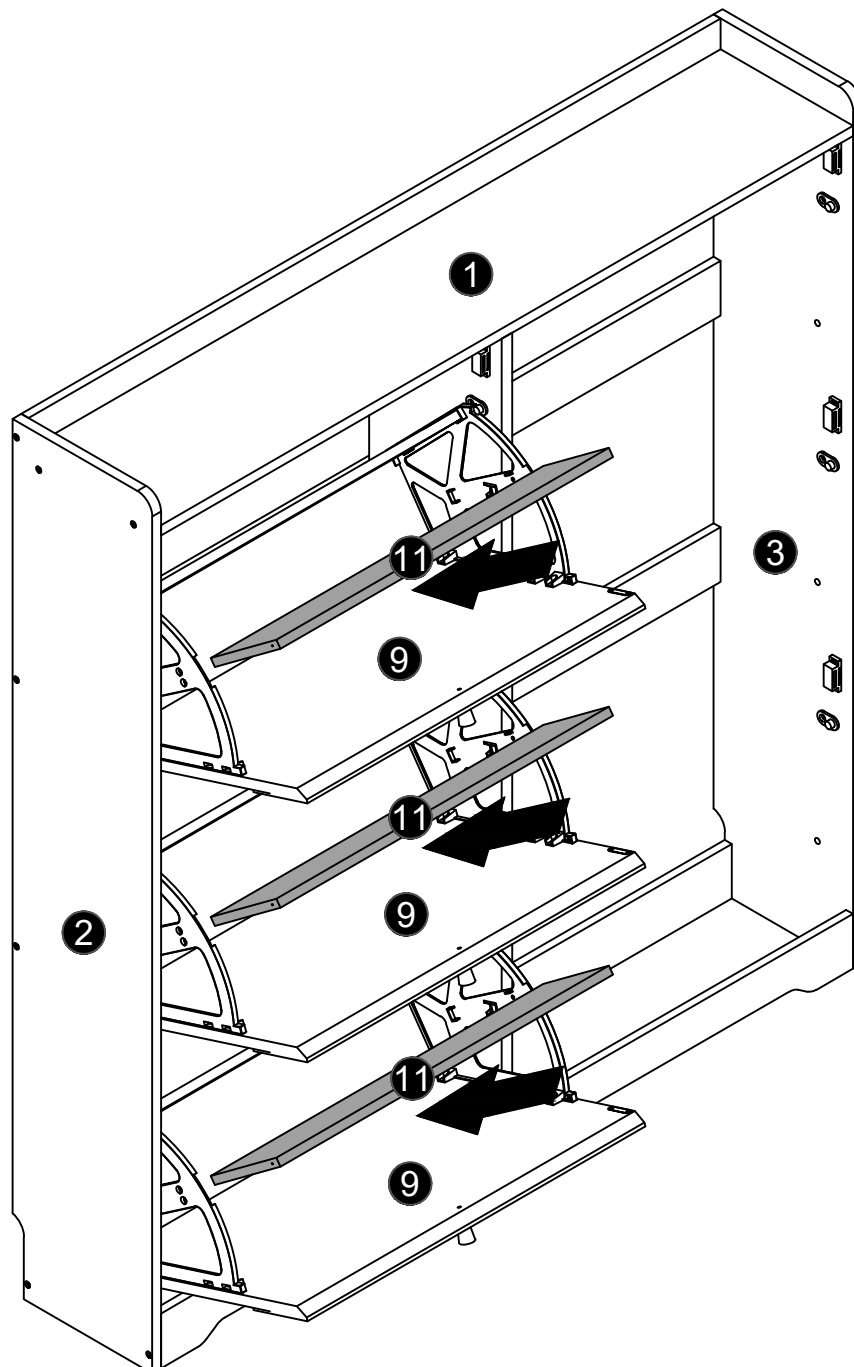


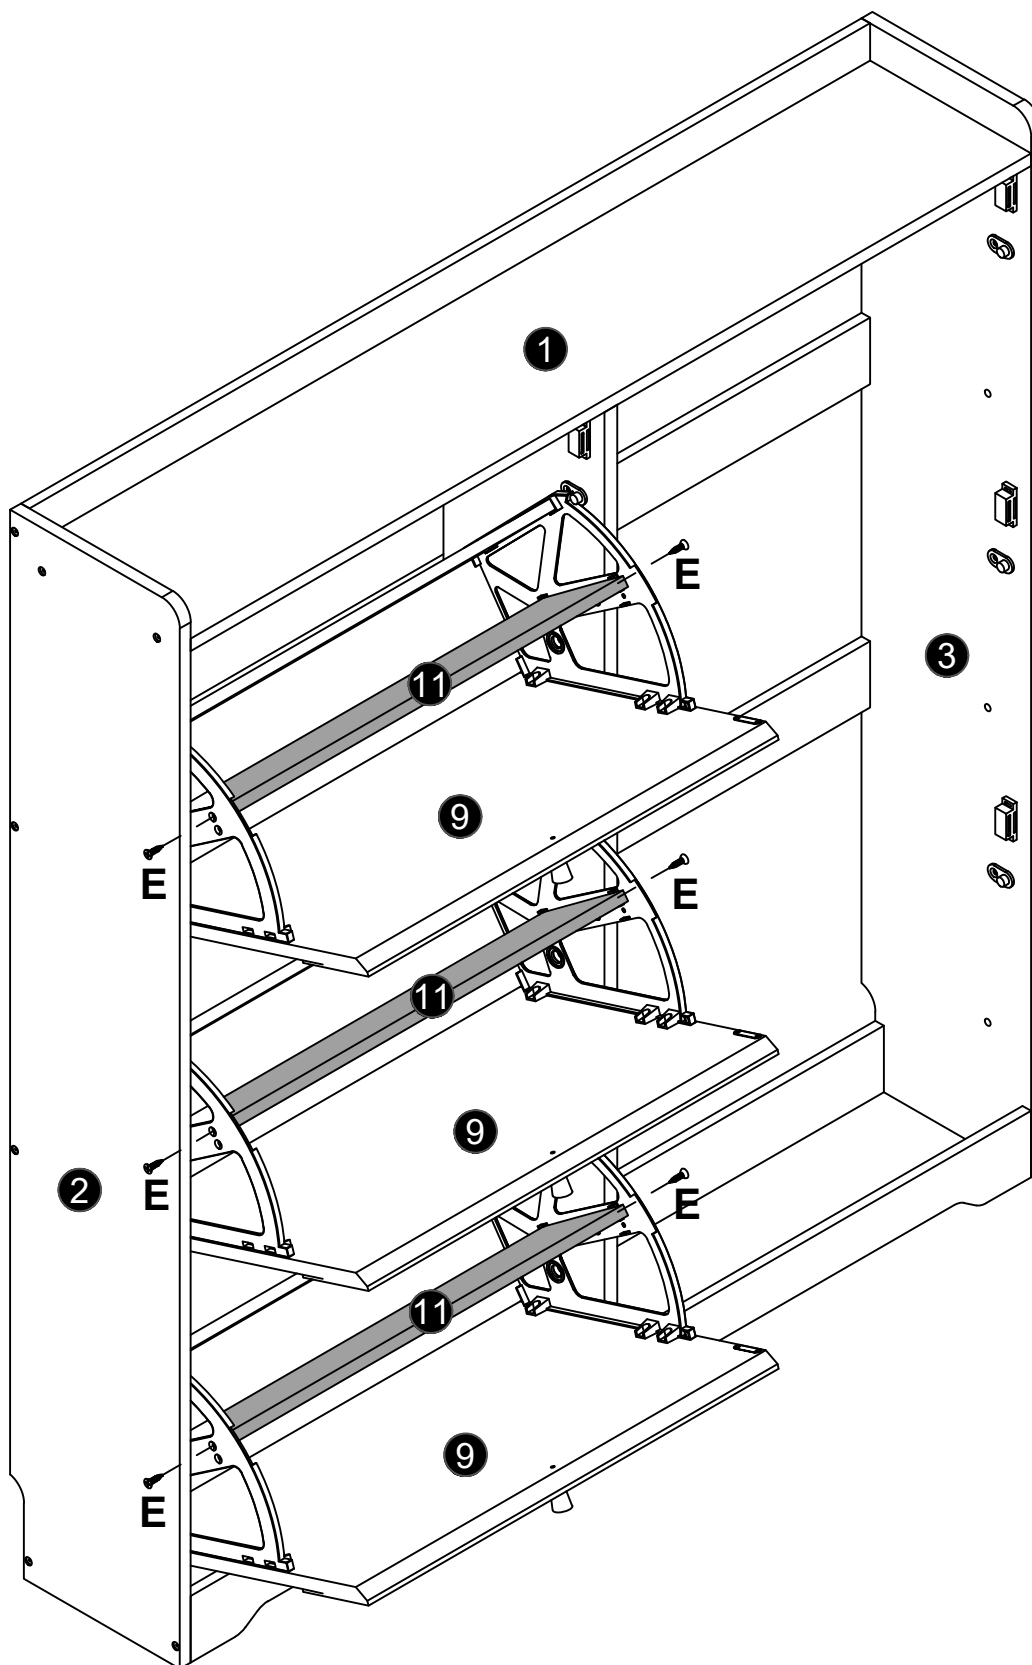


G x6




H x3




I x1




S x3

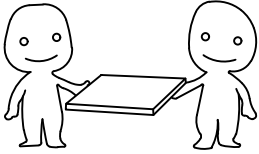


Need Two or More
People To Complete

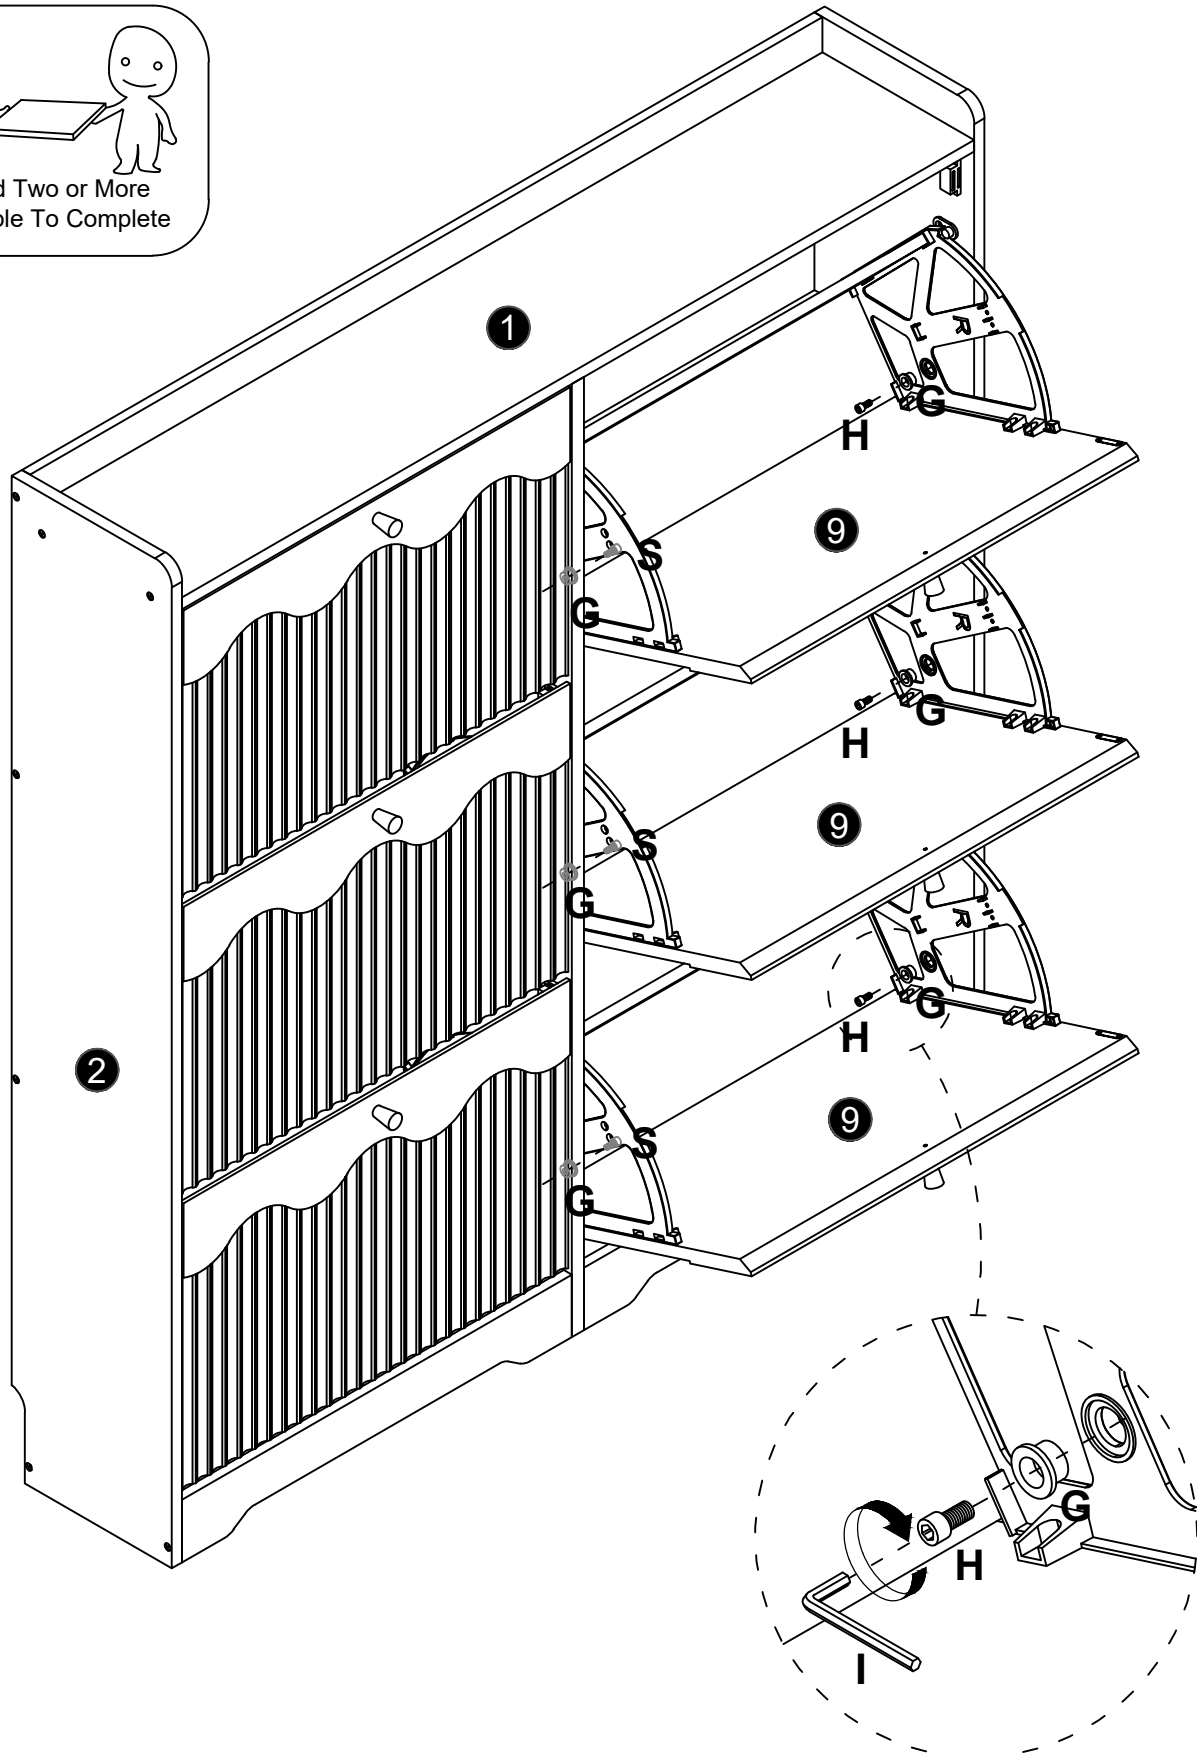


Note: When installing H or S, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

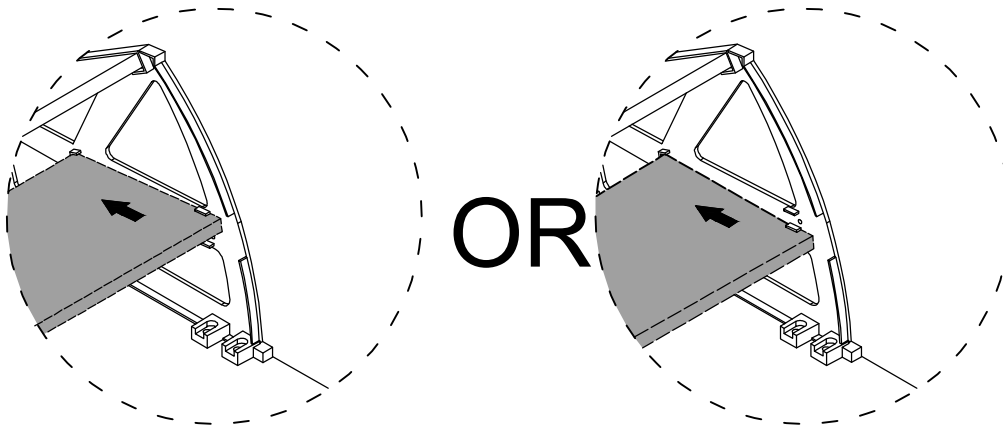

Adjustments can be made
according to your own needs.

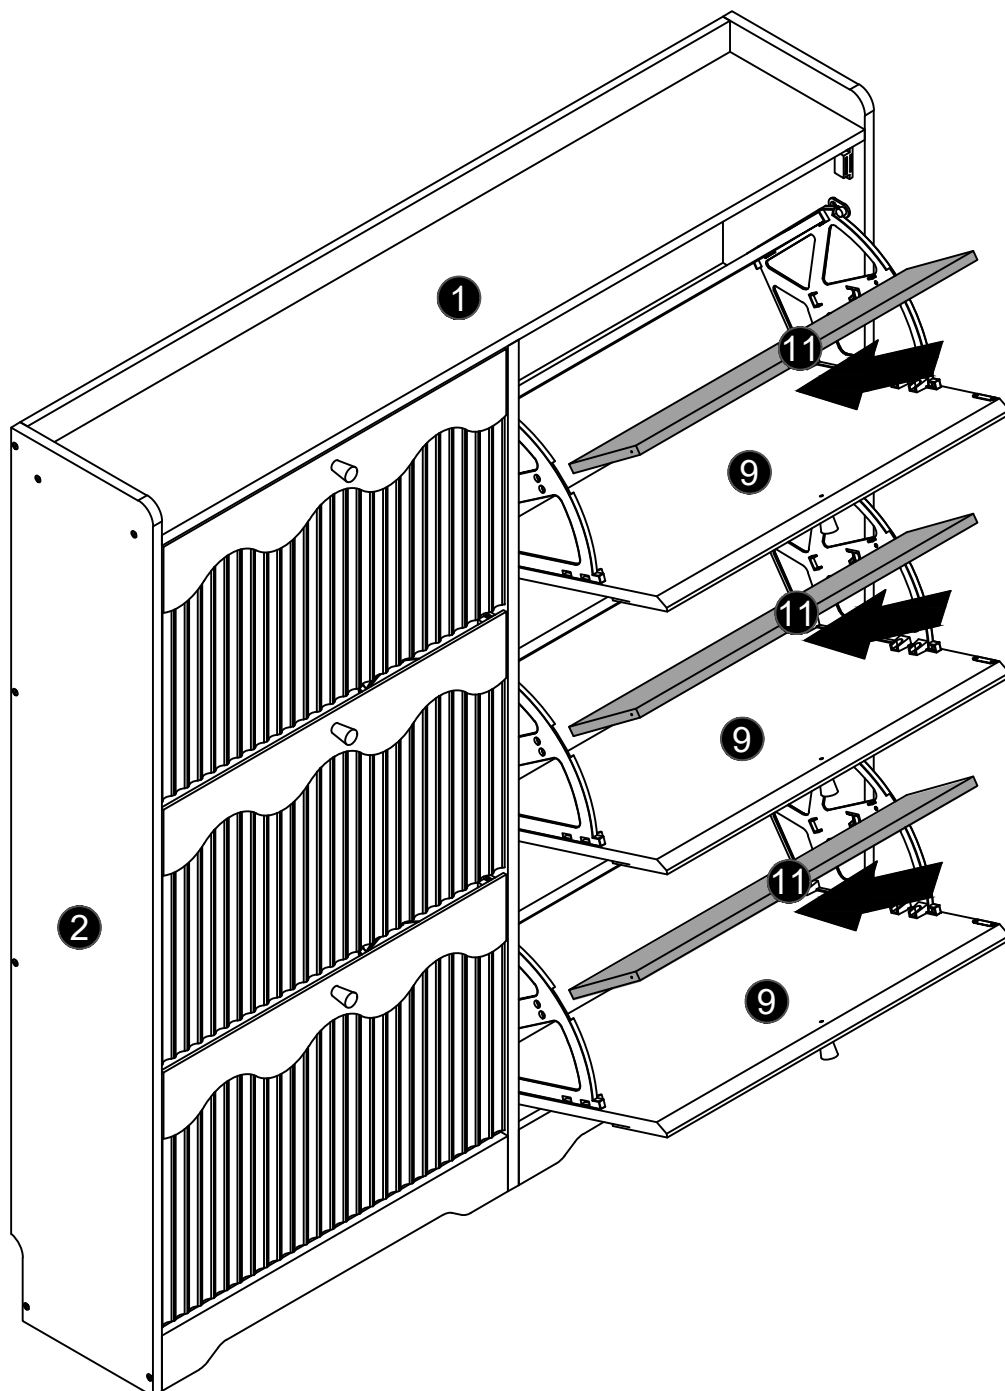

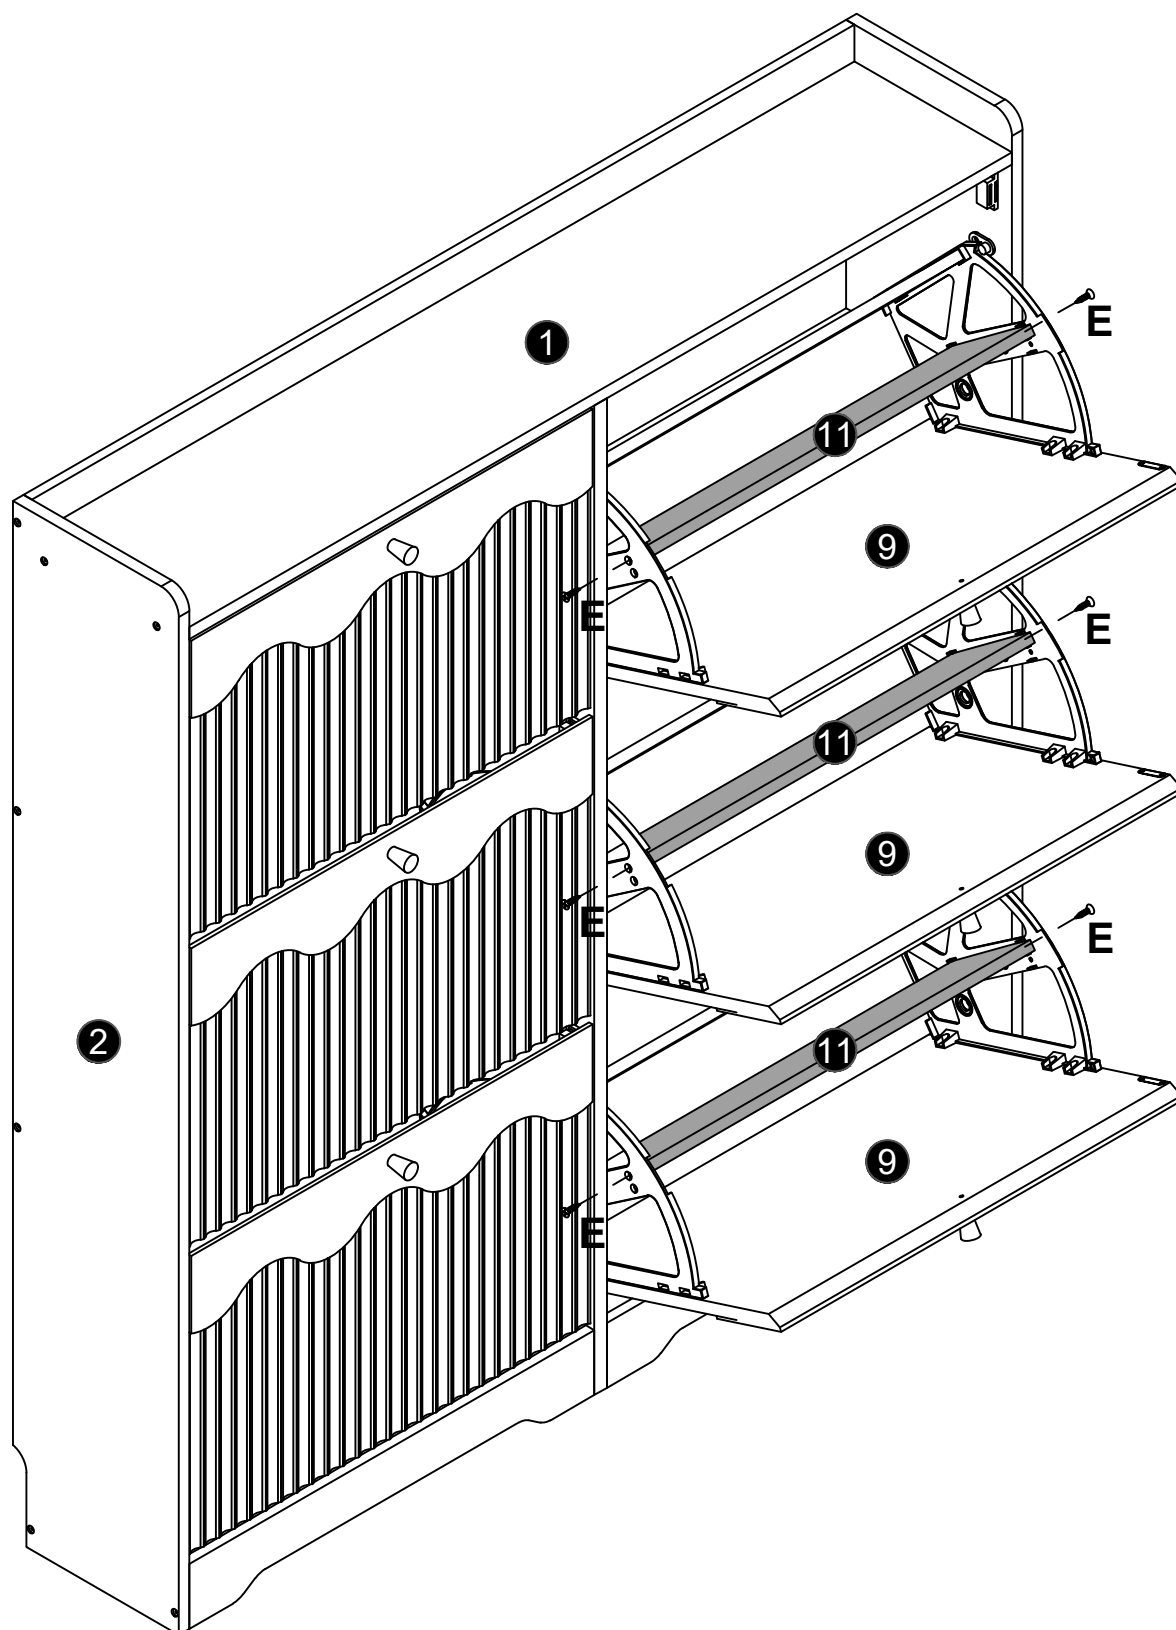

M x14

Done

