



# ASSEMBLY INSTRUCTION

## STEP 1

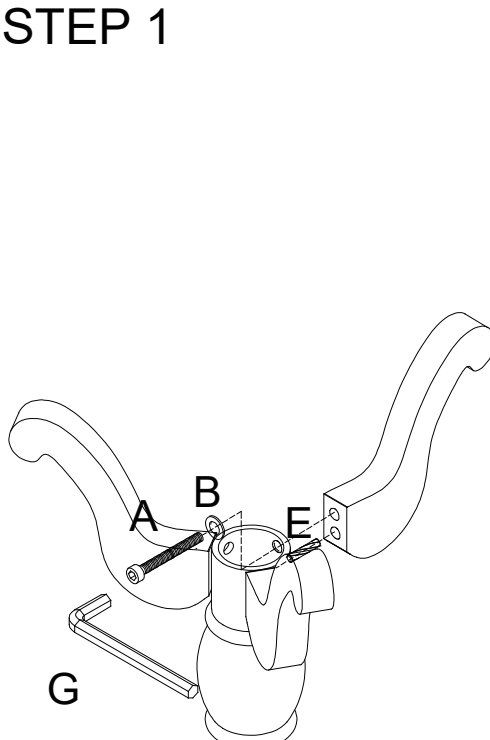


When installing here, first screw in by hand, and then tighten the screw with a tool when you cannot screw again.

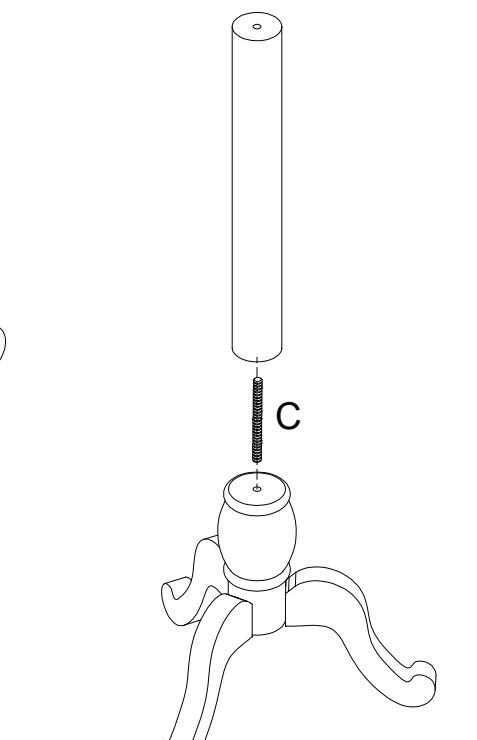


Connect with 4cm screws, leaving 2cm for the upper lever and 2cm for the lower lever


## STEP 2

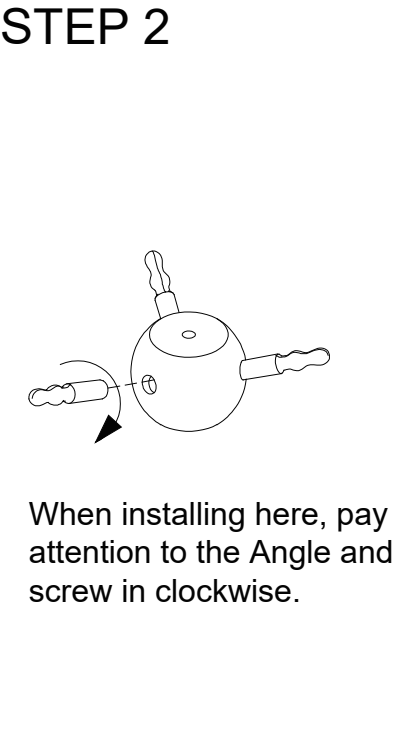


When installing here, pay attention to the Angle and screw in clockwise.

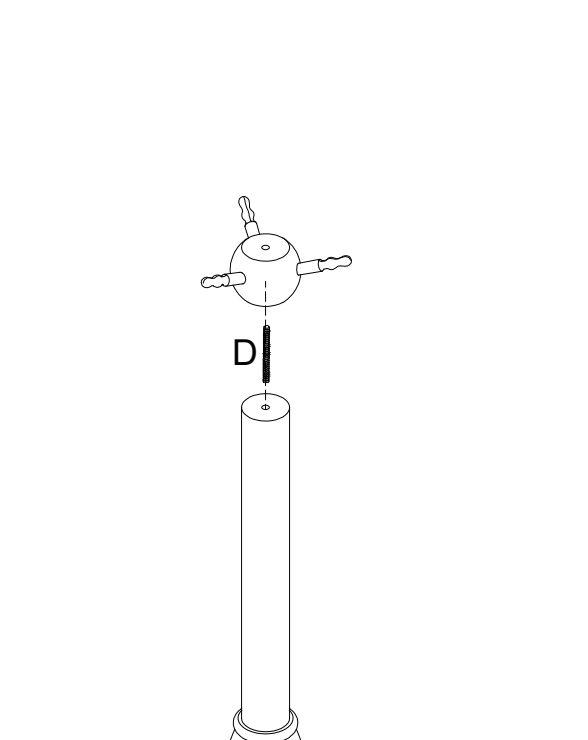

## STEP 3

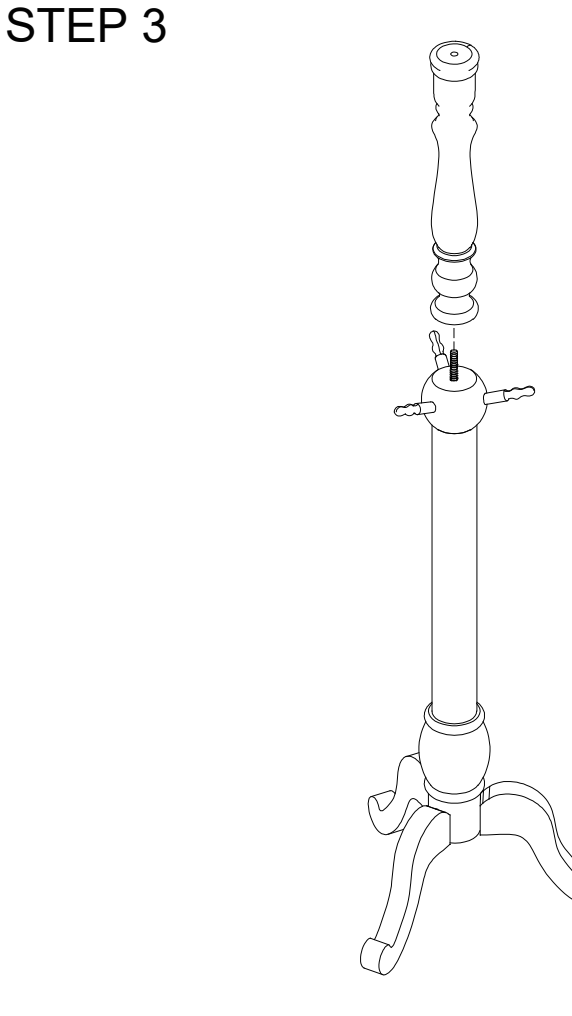

## STEP 4

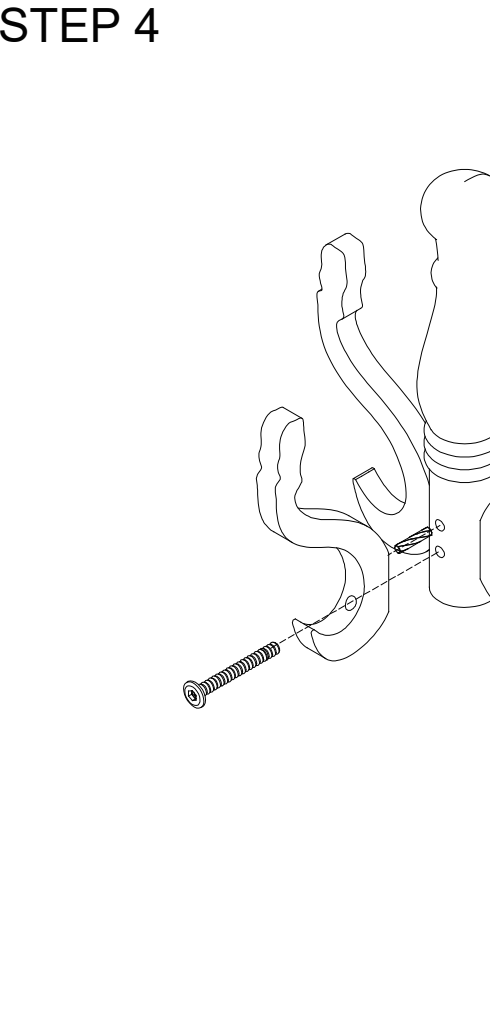

## STEP 5

