Instruction

A	M60*12mm 2pcs	F	9mm washer 6pcs
B	M60*45mm 2pcs	G	Nuts 10pcs
C	M60*66mm 2pcs	H	Nut Caps 10pcs
D	M60*71mm 2pcs	I	Hex Key 1pc
E	2mm washer 2pcs	J	0pen-end wrench 1pc




K

Backrest 1pc



L

Seat 1pc

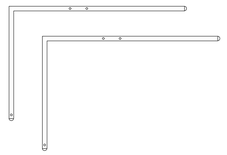

M

Front Leg 2pcs

N

Back Leg(Left side) 1pc

O


Back Leg(Right side) 1pc



P


Cross Bar 1pc

1

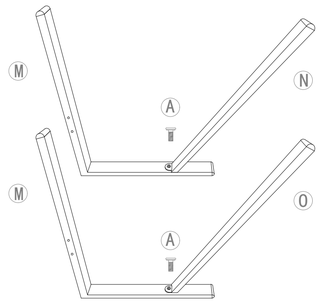


Attach the armrests and beck legs
Secure the left and right back legs
Using M6*12mm Screws

2

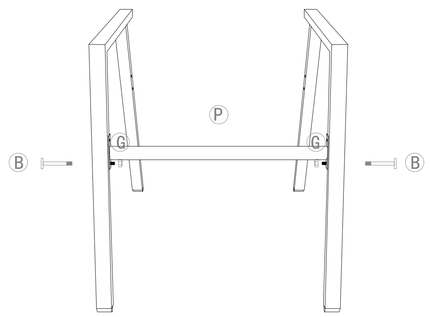

Attach the crossbar to Connect the left
and right Sides Using M6*45mm
Screws


3

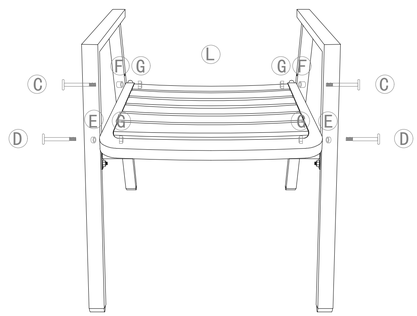

Attach the seat
Install the 9mm washers and fix it with M6*66mm
screws Install the 4mmwasherw and fix it with
M6*71mm Screws




4

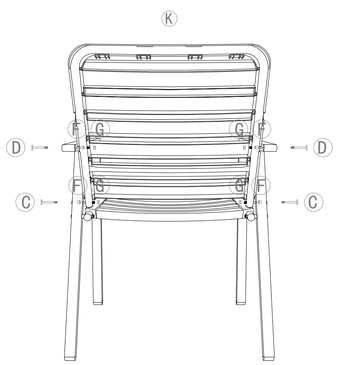


Attach the backrest
Install the 9mm washers and fix it with M6*66mm screws
Install the 9mmwasherw and fix it with M6*71mm Screws

5

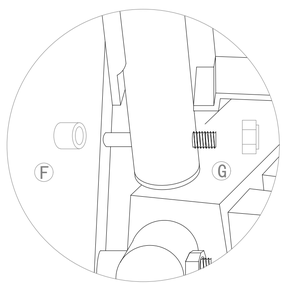

Install the 9mm
washers and Screw corers

6

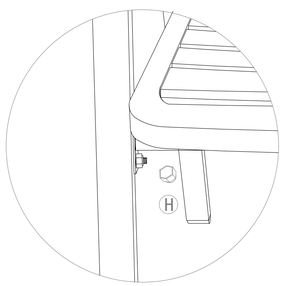

Install the Nut caps

finish