


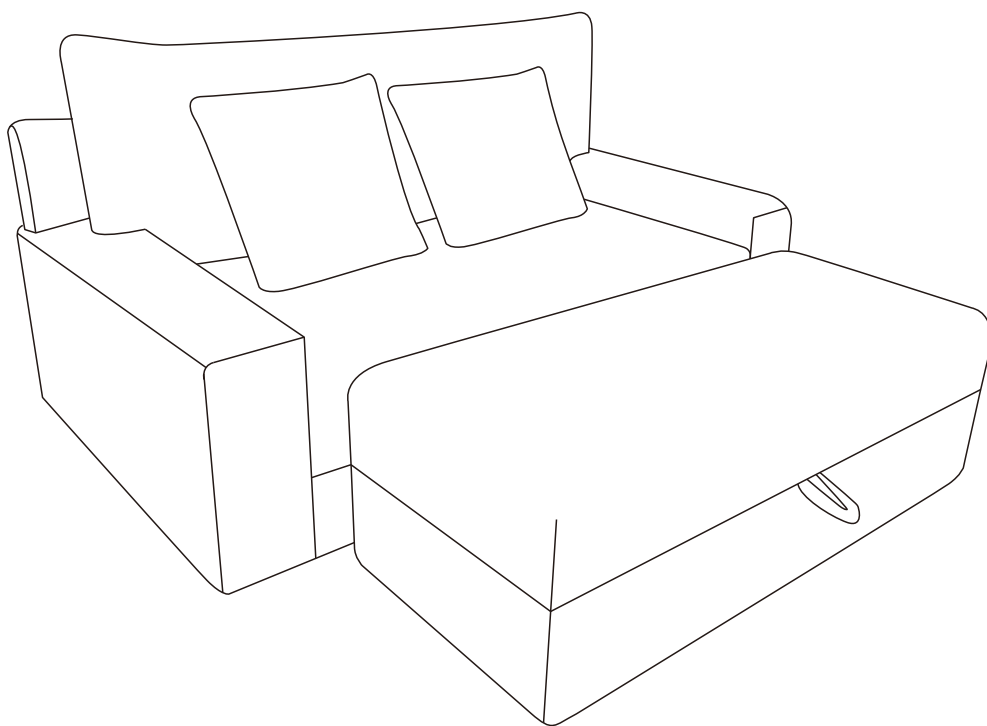

S06

Assembly Instructions



Notice for Vacuum Package


- The pillow and cushion come vacuum package for the reason of shipping. It can be restored to normal shape and condition within **72-96** hours.
- Some modeling works would be great help to restore the pillow and cushion.
- Please follow the steps below:



Open the vacuum bag carefully



Press and tap with both hands from the side to fully inhale air.

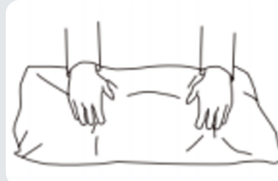

Press and tap with both hands from the front to fully inflate.



Carefully smooth out each section until the surface is even.

Padding of pillows and cushion.

- For the purpose of long lasting performance during daily usage, we choose the Fiber foam mix up with bulk foam in certain range of diameter, to fill all the upholstered cushion and pillows. It's comply with standard CA TB 117 AND CARB Phase 2.



IMPORTANT SAFETY INFORMATION

Please carefully read the instructions and caution warnings below before assembling the product. Following this guide will ensure that you install, use and maintain the product properly.






- * Please check if all the components and tools listed are received.
- * Please keep this installation and user manual/instructions for future reference in case you need to assemble the product.
- * Do not assemble if you notice serious damage such as cracks or bends.
- * During installation, please use work gloves for hand safety.
- * Please assemble the unit on carpeted floor or the flat cardboard box to avoid scratching the surface or your floor while assembling on the floor.
- * To assemble, please use the complimentary installation tools (Allen Wrench). Pay more attention to the direction of components at each steps.
- * Do not use sharp instruments, rubbing alcohol, corrosive chemicals, or abrasive cleaners to clean the product.
- * Do not keep the product in a damp environment for a long period of time. The damp environment may cause the iron components to rust and the plates to bulge and crack.

CUSTOMER SERVICE

Malfunction, repair, usage instruction, or any another problem, pls contact us :

Email: service@levincomp.com

Components

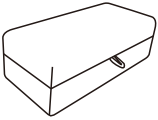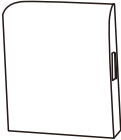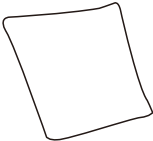A*1 	B*1 	C*1 	D*1 	E*1 	F*1 
G*1 	H*1 	J*1 	K*1 	M*2 	N*8 
T*1 					


Assembly Instruction



You need Package 1 to finish this installation!


Step 1

Unscrew the B/C pre-installed screw by 50% to facilitate subsequent installation.

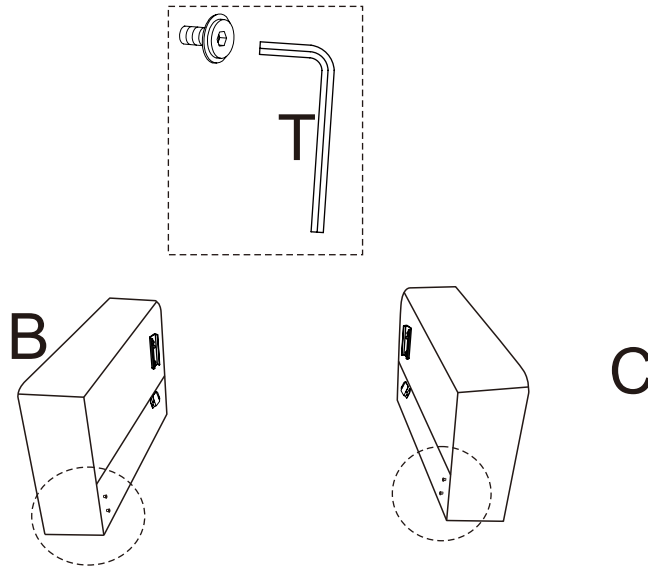

Step 2


Install the N on A.

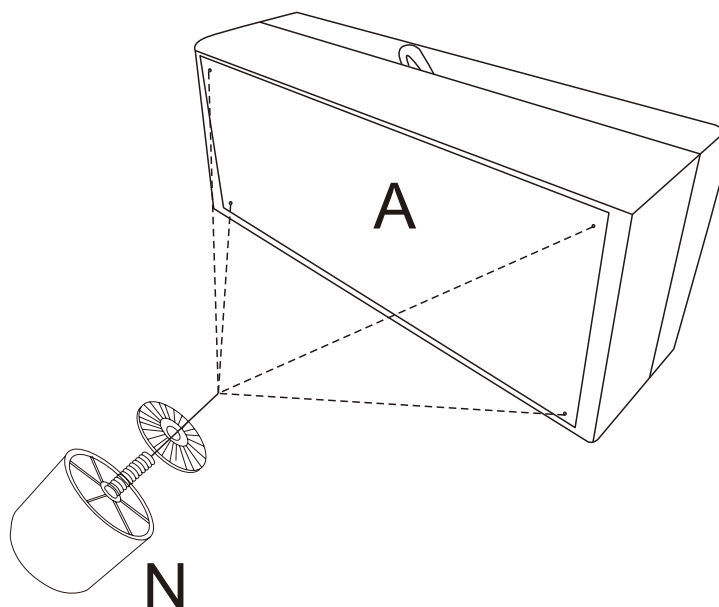

Assembly Instruction


Step 3

Install the N on B,C.

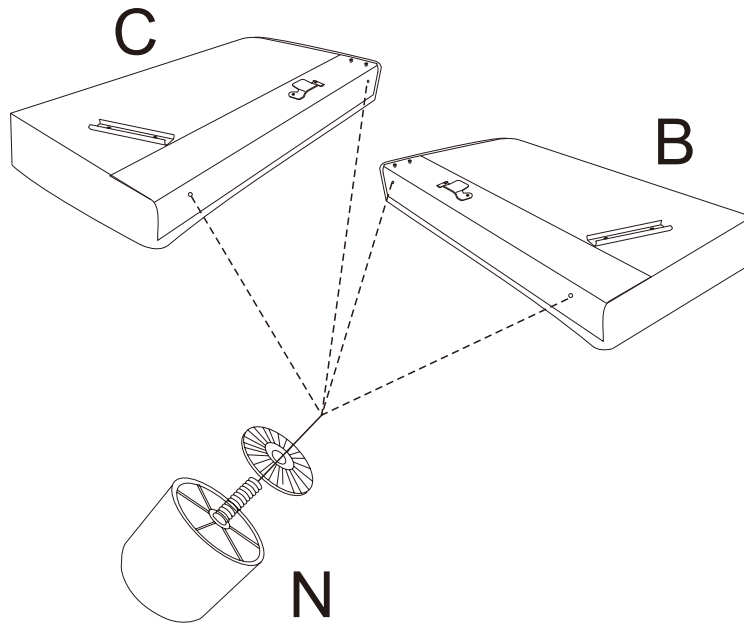

Step 4


Hang D on the reserved screw of the handrail B/C, and make sure the screw is not tightened.

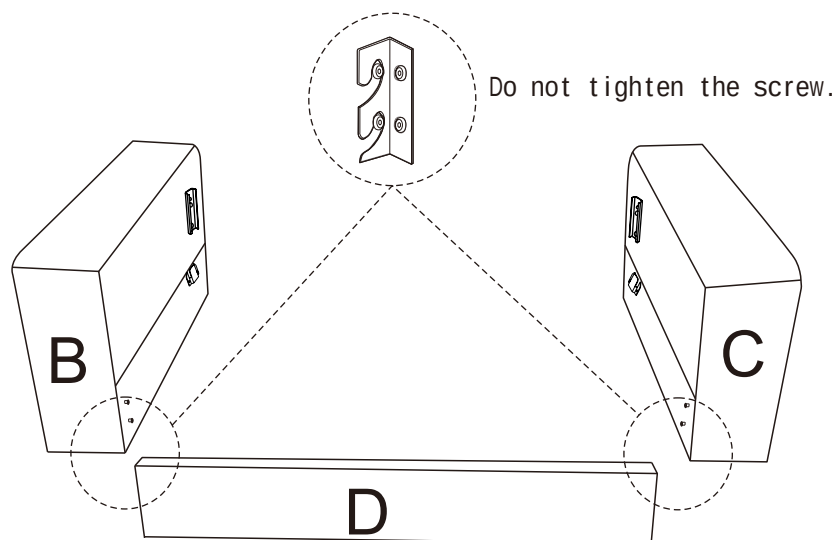

Assembly Instruction


Step 5

Insert E horizontally onto B/C.

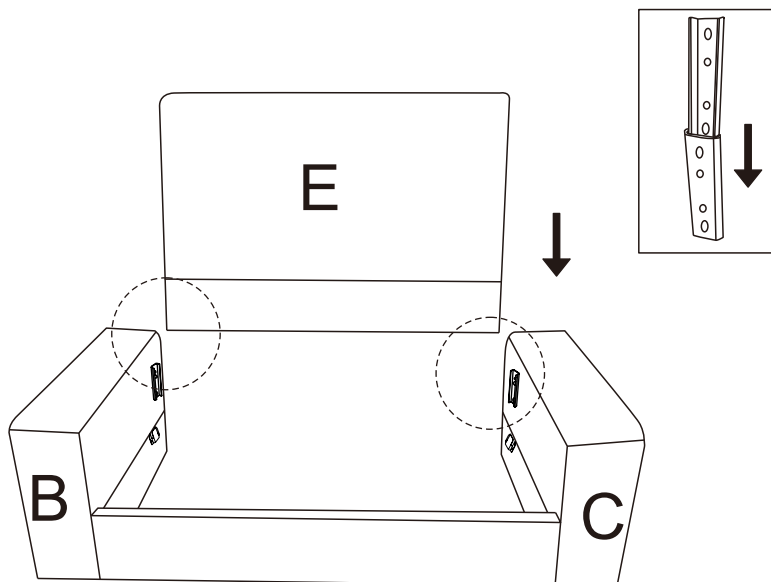

Step 6


Insert F/G into E, pay attention to the forward marker of F/G, and tighten the screw connecting the B/C hanging piece.

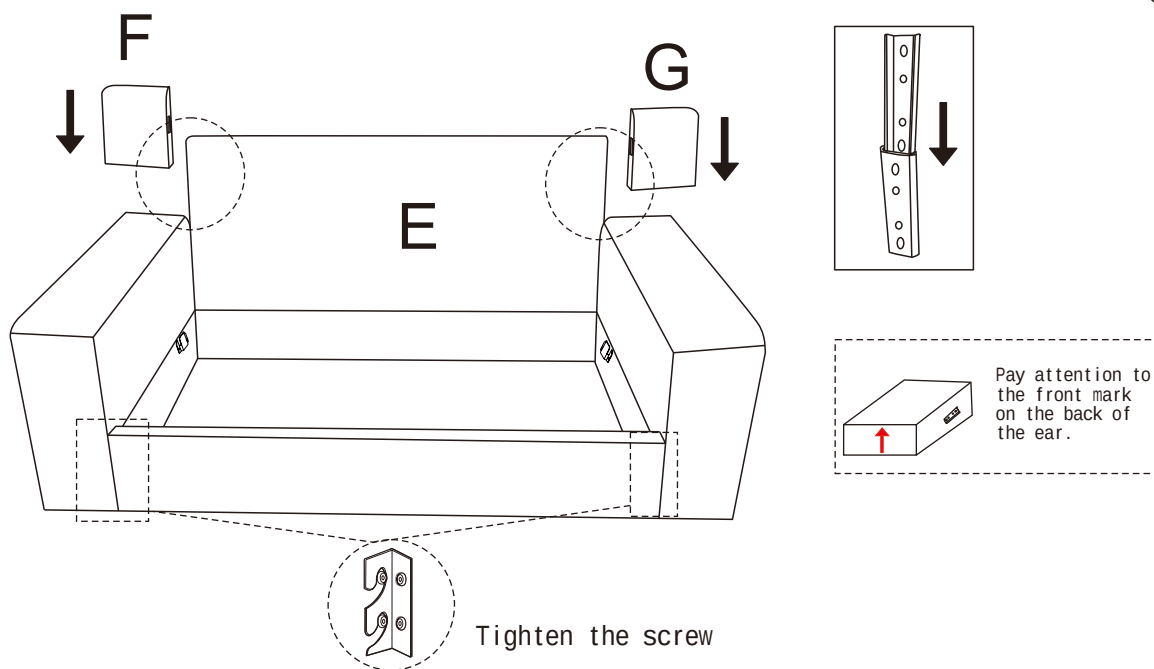

Assembly Instruction


Step 7

Insert H into B/C.

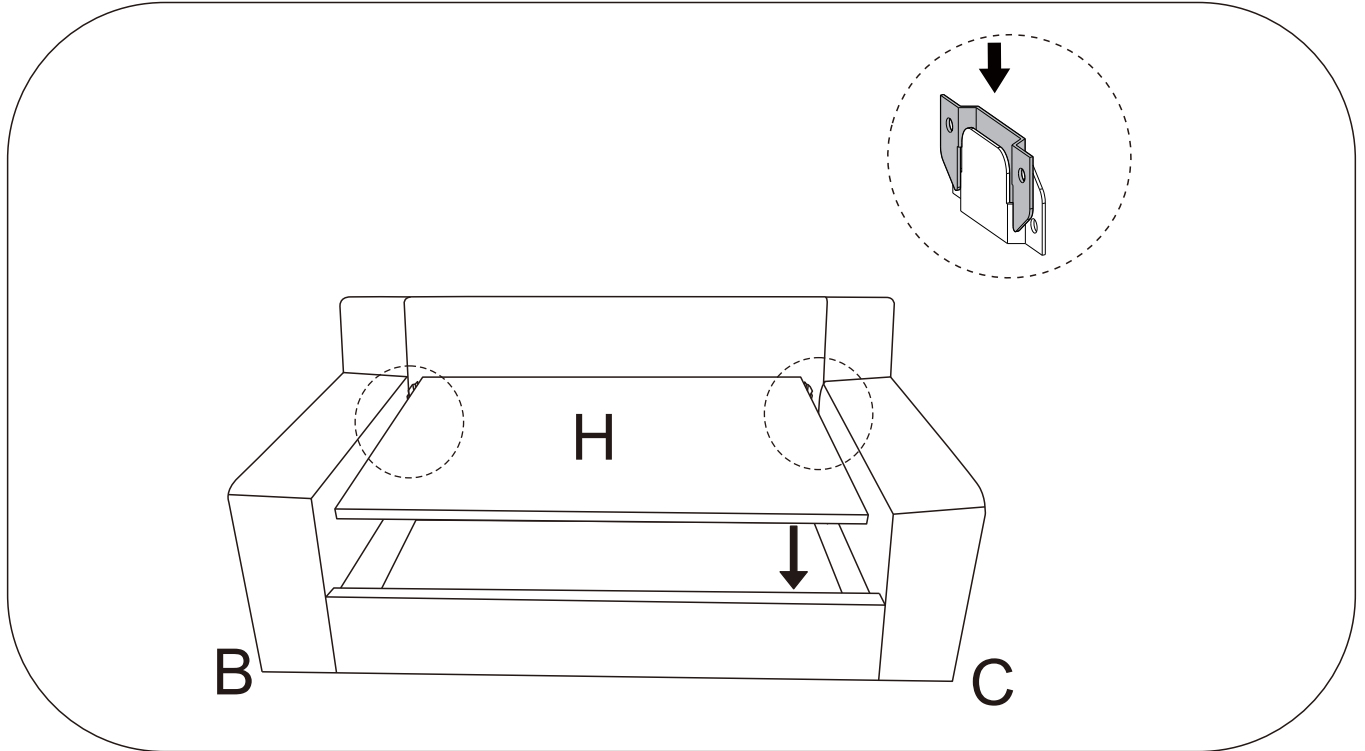

Step 8


Place J on H and pay attention to the direction marker of J.

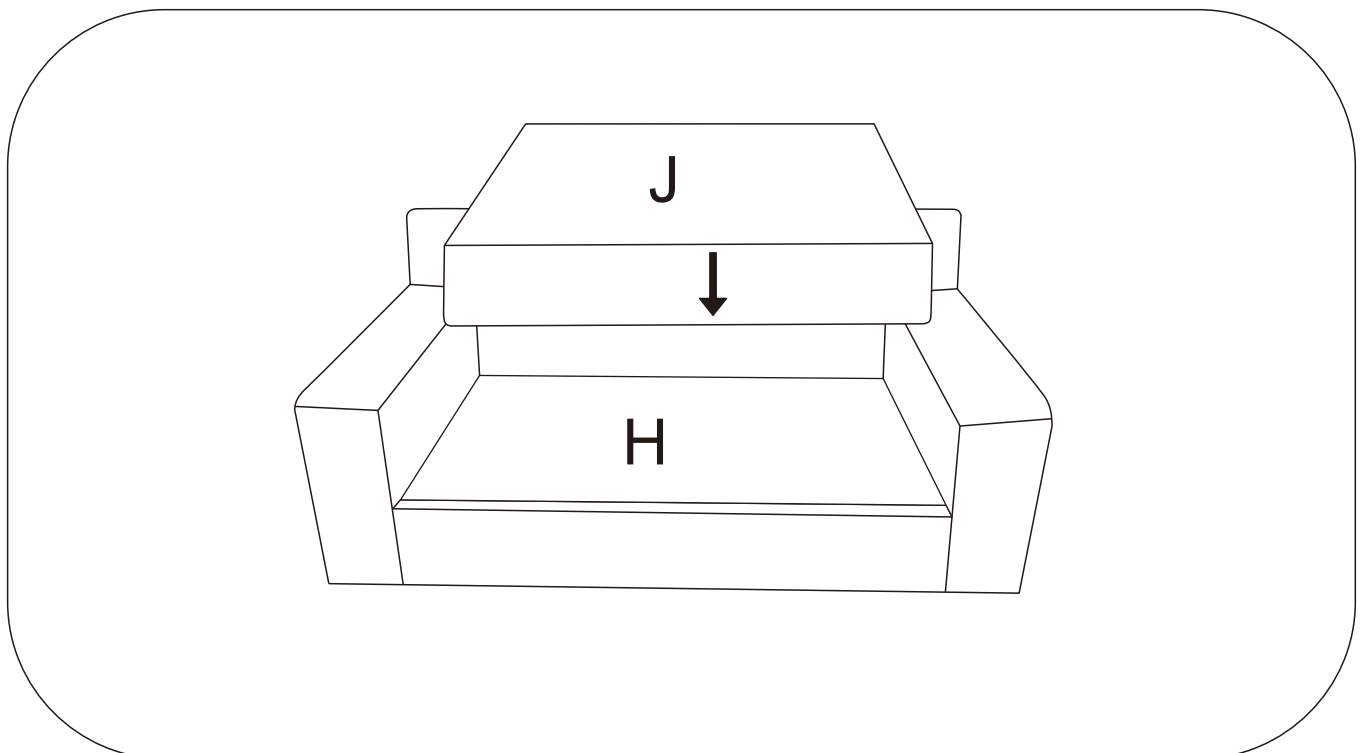

Assembly Instruction


Step 9

Place K on the assembled sofa.

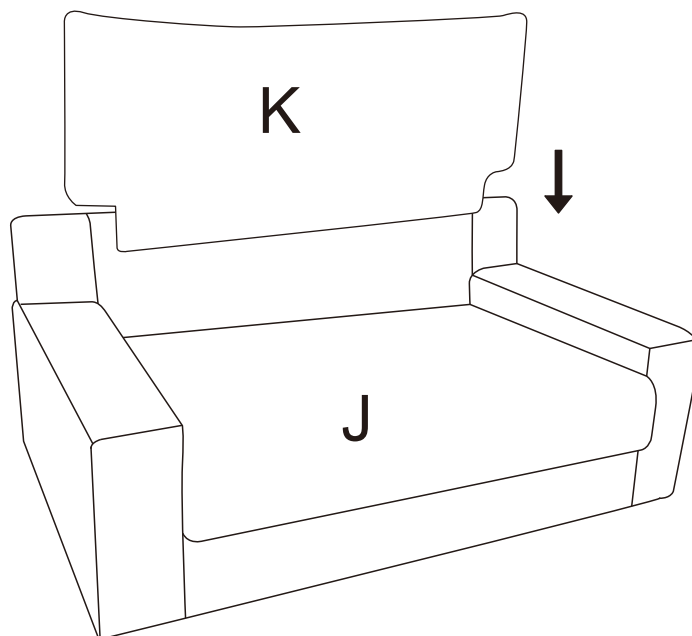

Step 11

Place M on the assembled sofa.

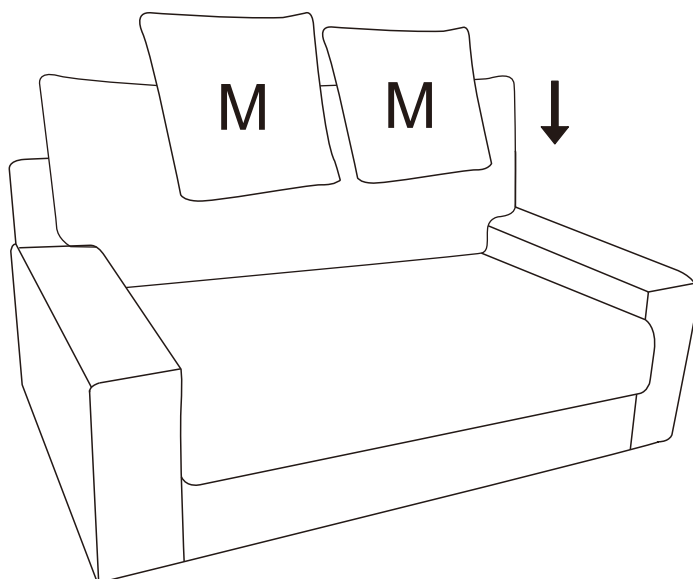

Assembly Instruction

Step 11

Installation completed.

