



13852 - BUCKINGHAM BENCH 6Ft

PARTS LIST :


A. LEGS FRAME 3 PCS

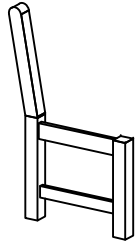

B. BACKREST 2 PCS

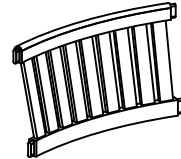

C. SEATREST 2PCS



HARDWARE :

D. WOODEN DOWELS

24 PCS



E. SCREW

12 PCS




F. SCREW

4 PCS



TOOLS REQUIRED :

F. PHILLIPS SCREWDRIVER (NOT INCLUDED)



NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

