



Assembly Instructions









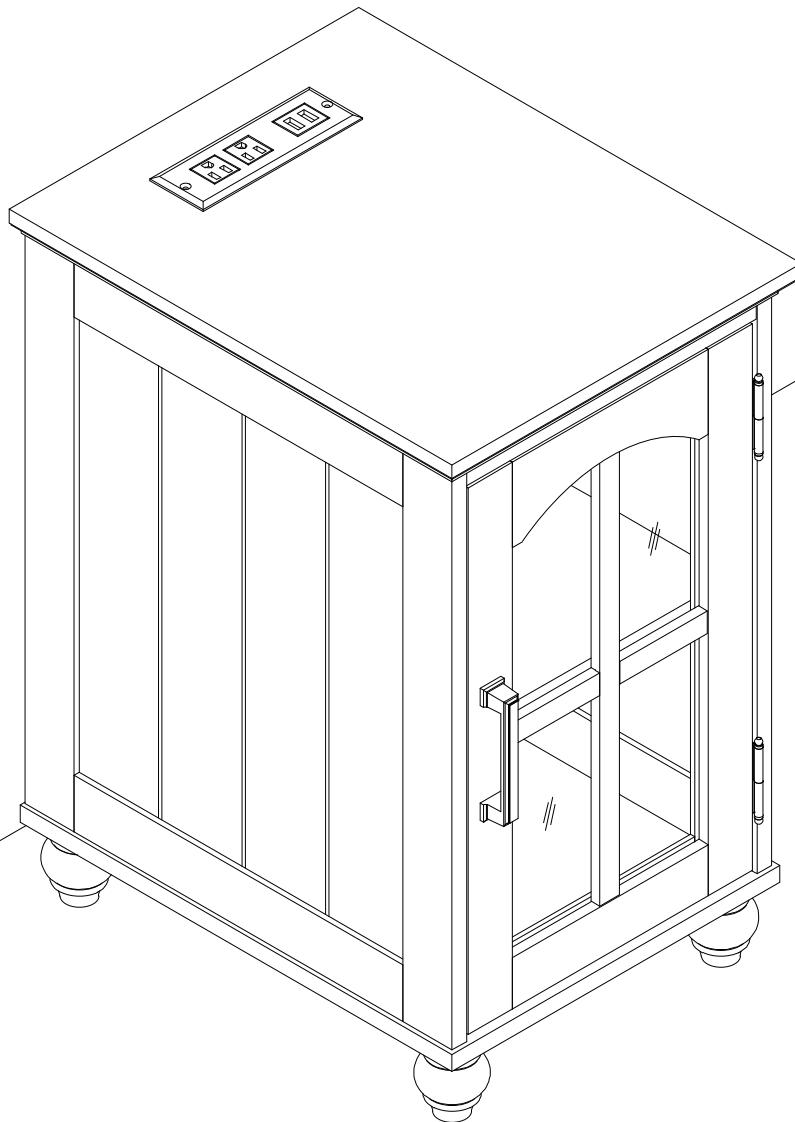


Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life


PART LIST

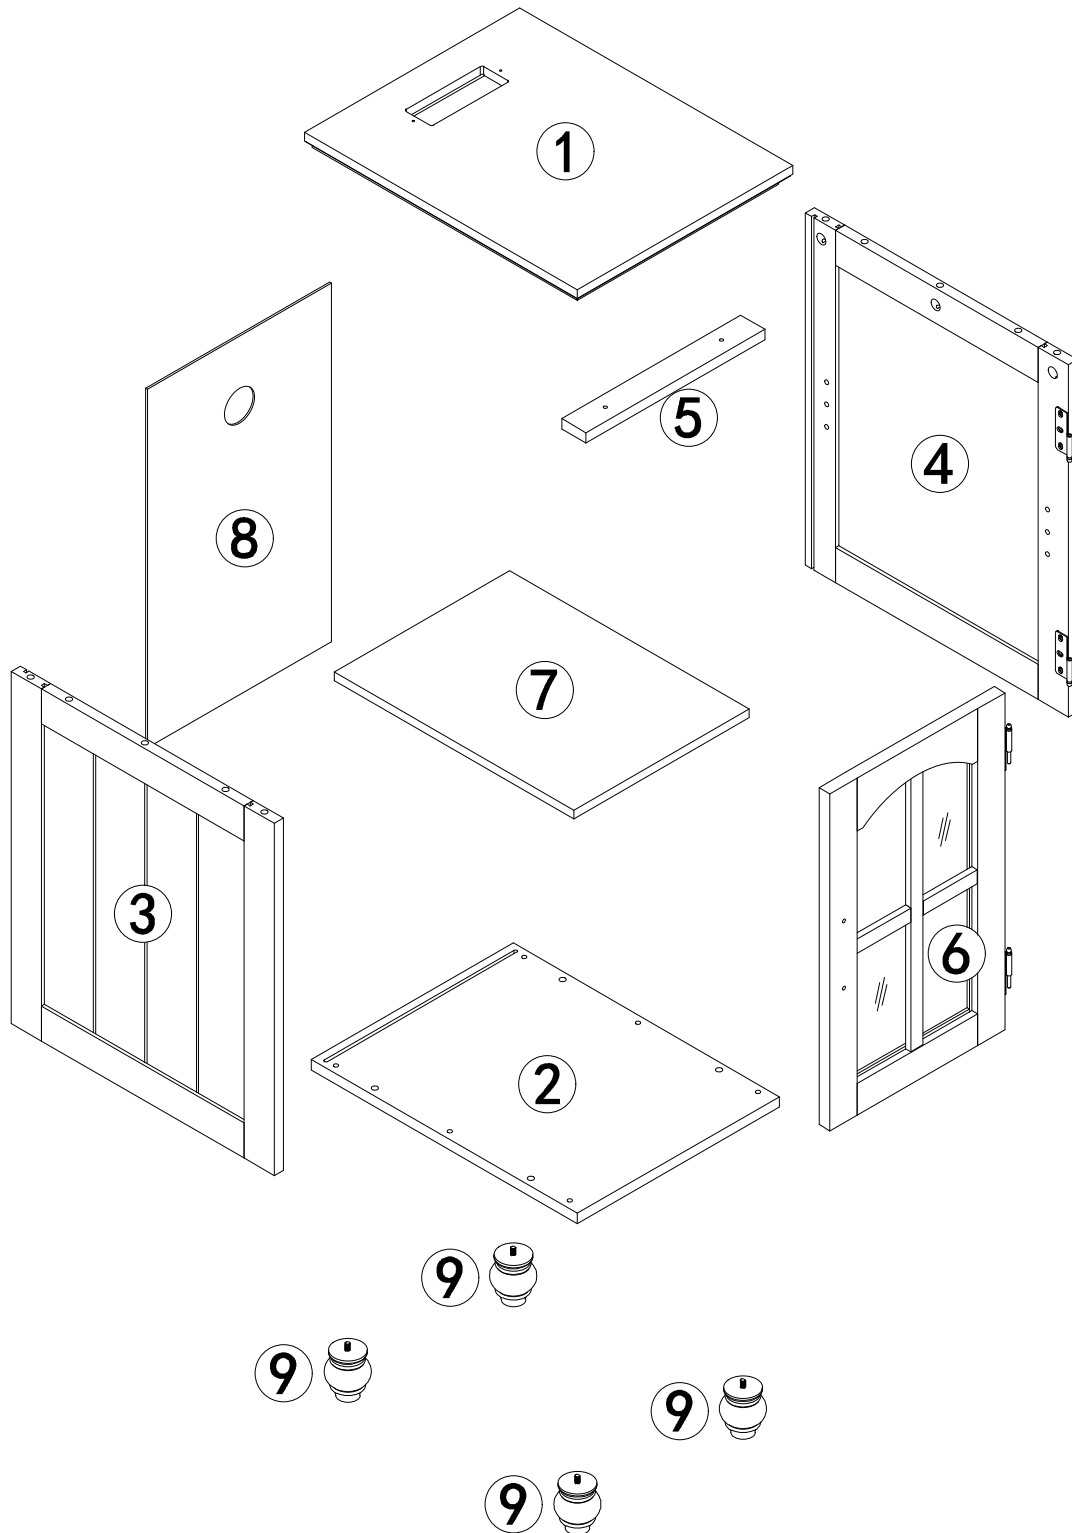

HARDWARE LIST

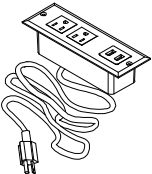A  Ø6x35mm 6PCS	B  Ø15x11.5mm 6PCS	C  Ø8x30mm (8+1)PCS
D  Ø5x40mm 6PCS	E  1PC	F  Ø4x22mm 2PCS
G  (4+1)PCS	H  Ø3x15mm (4+1)PCS	I  1PC
J  Ø3x12mm (2+1)PCS	K  4PCS	L  1PC
M  Ø3.5x14mm 2PCS	N  (2+1)PCS	 1PC
 1PC		


STEP 1

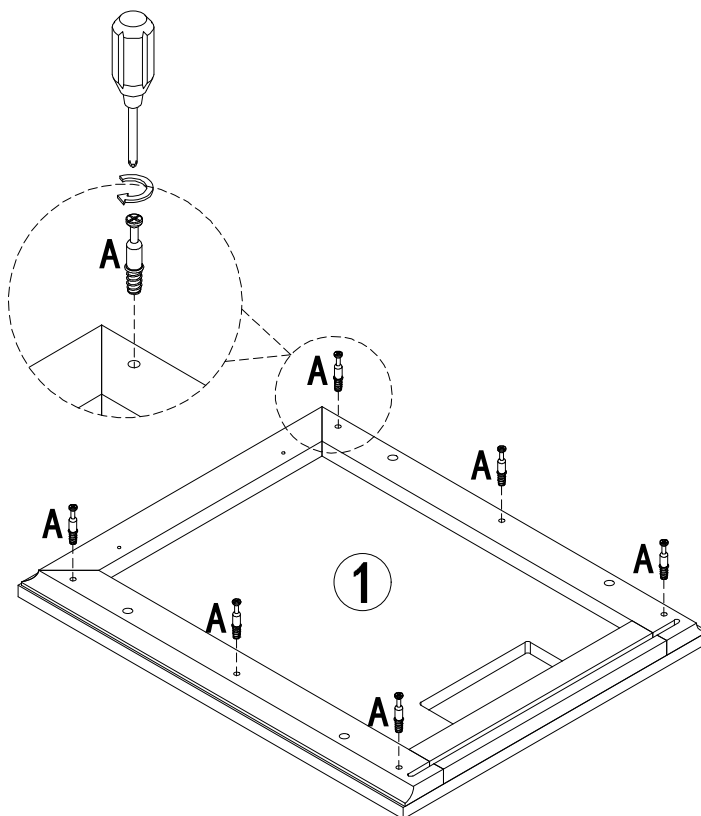A**X 6PCS**


STEP 2

N**X 2PCS**


NOTE: Pay attention
to the hole location

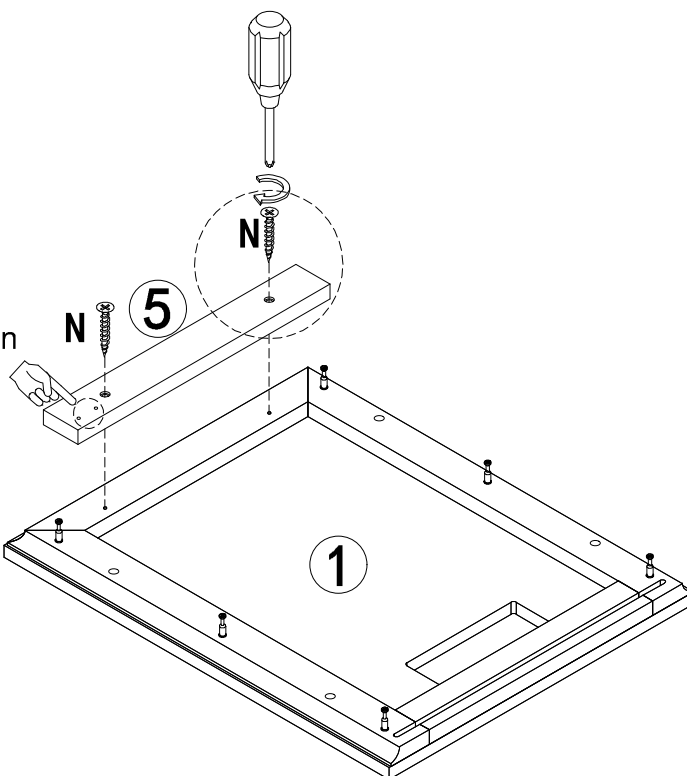


STEP 3

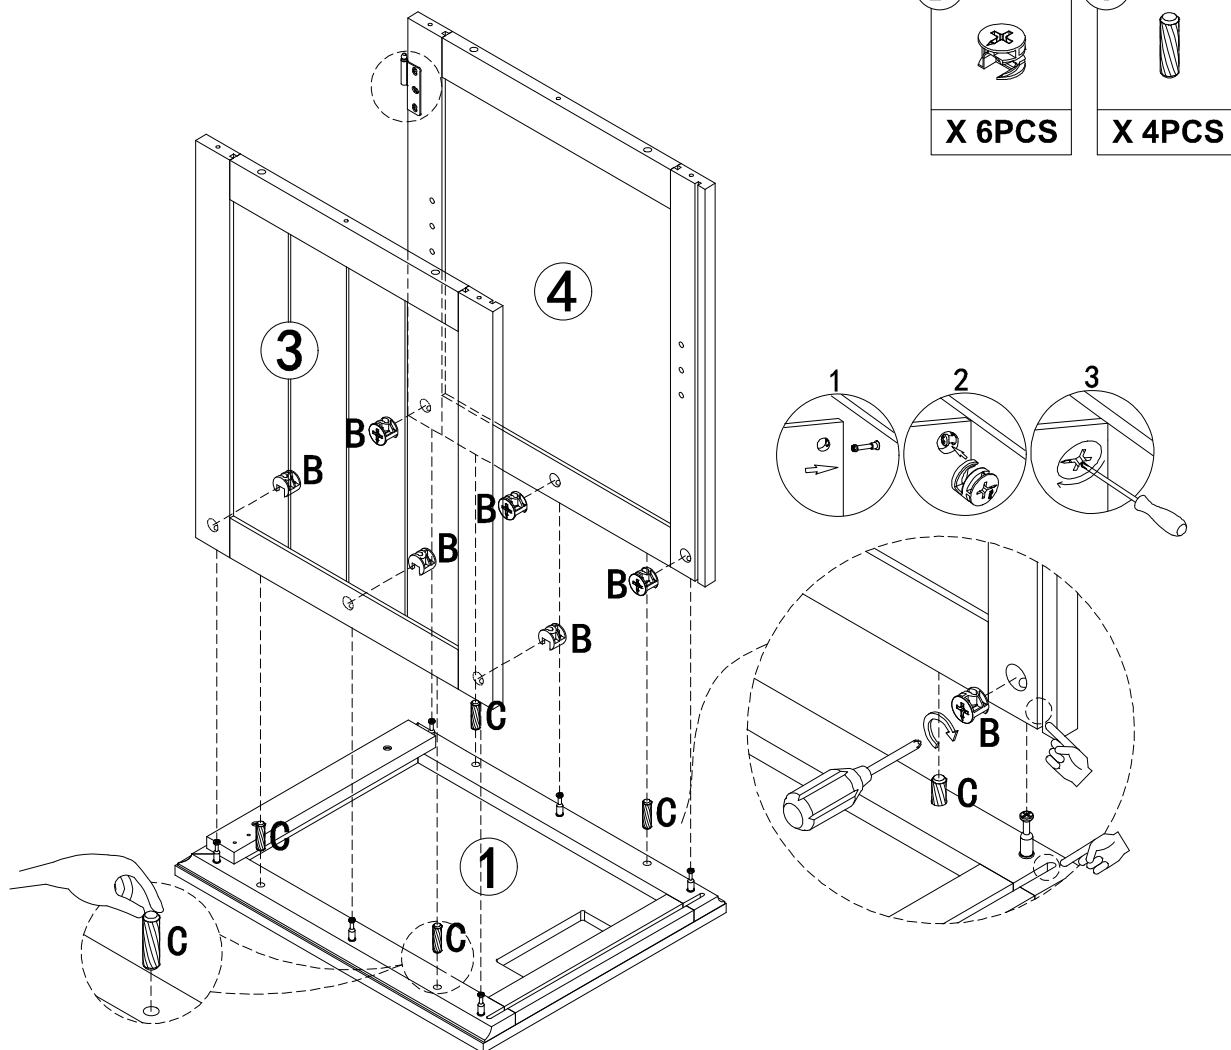


STEP 4

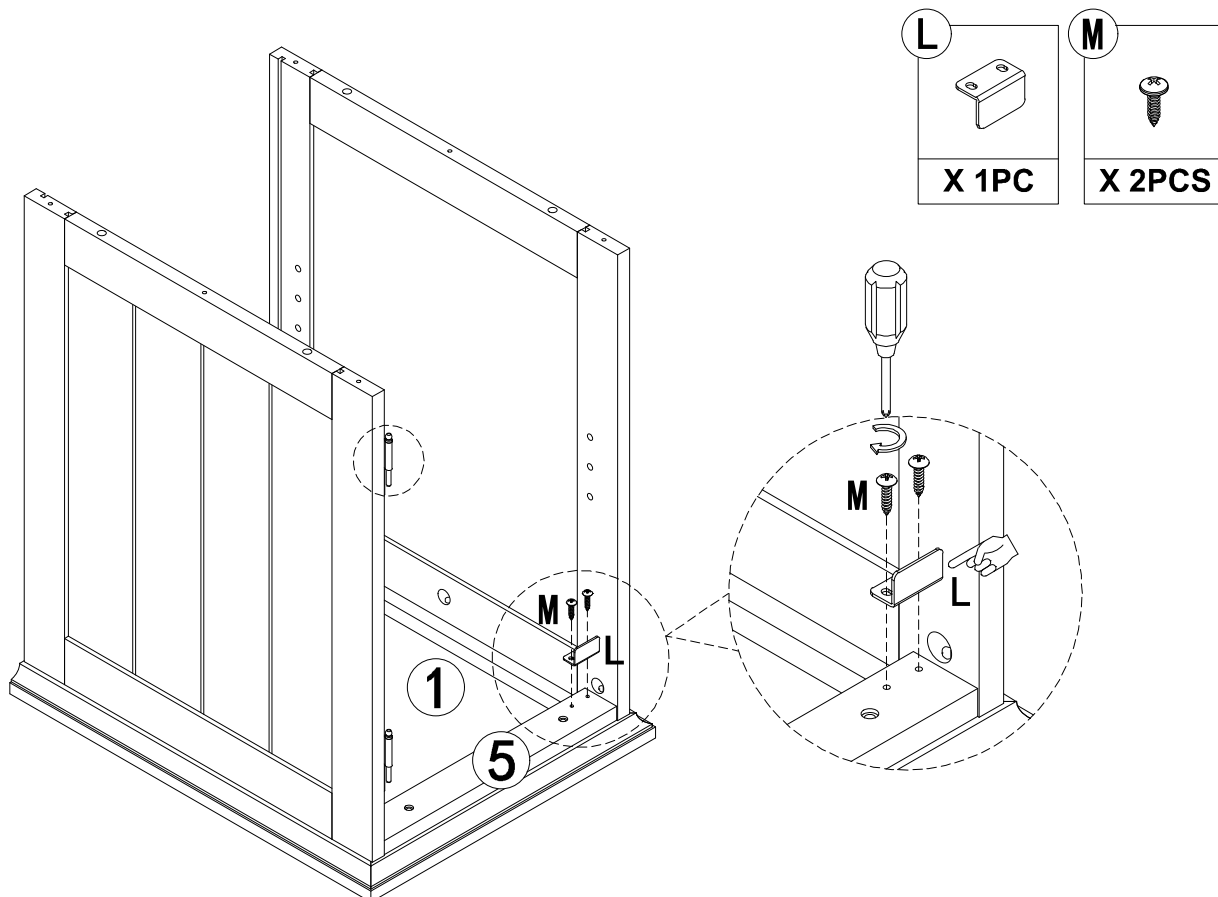


STEP 5

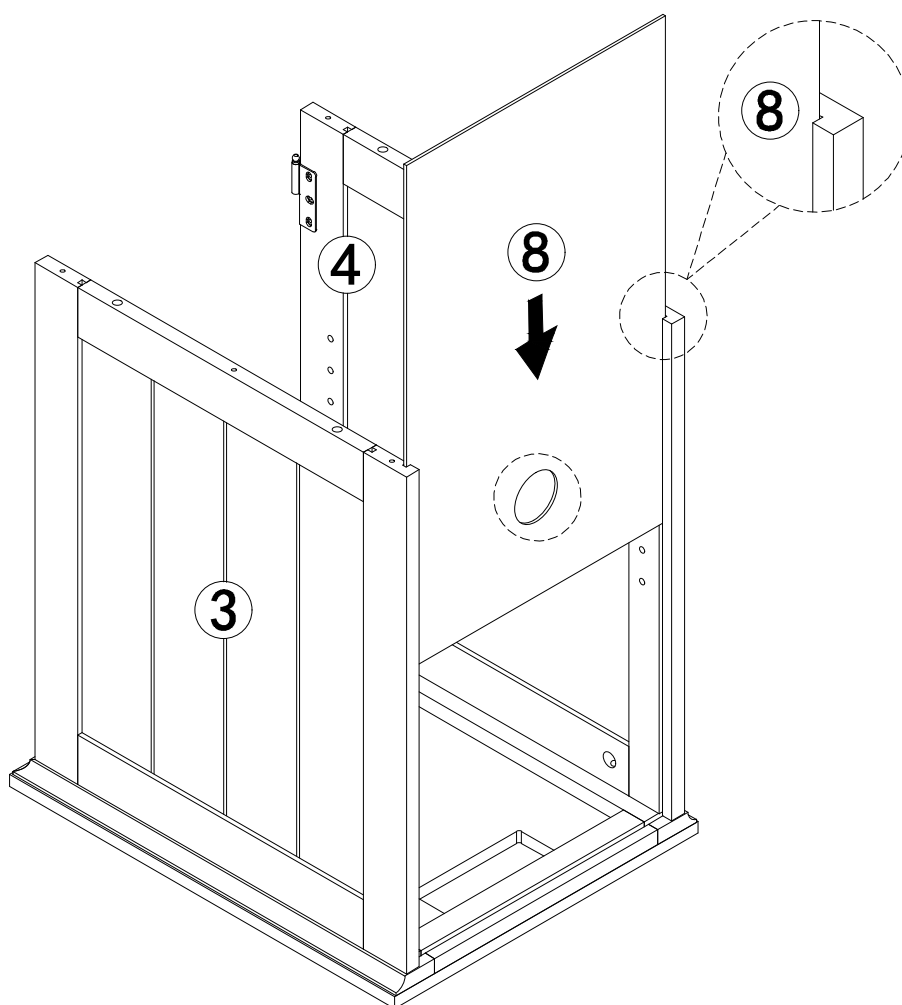




STEP 6

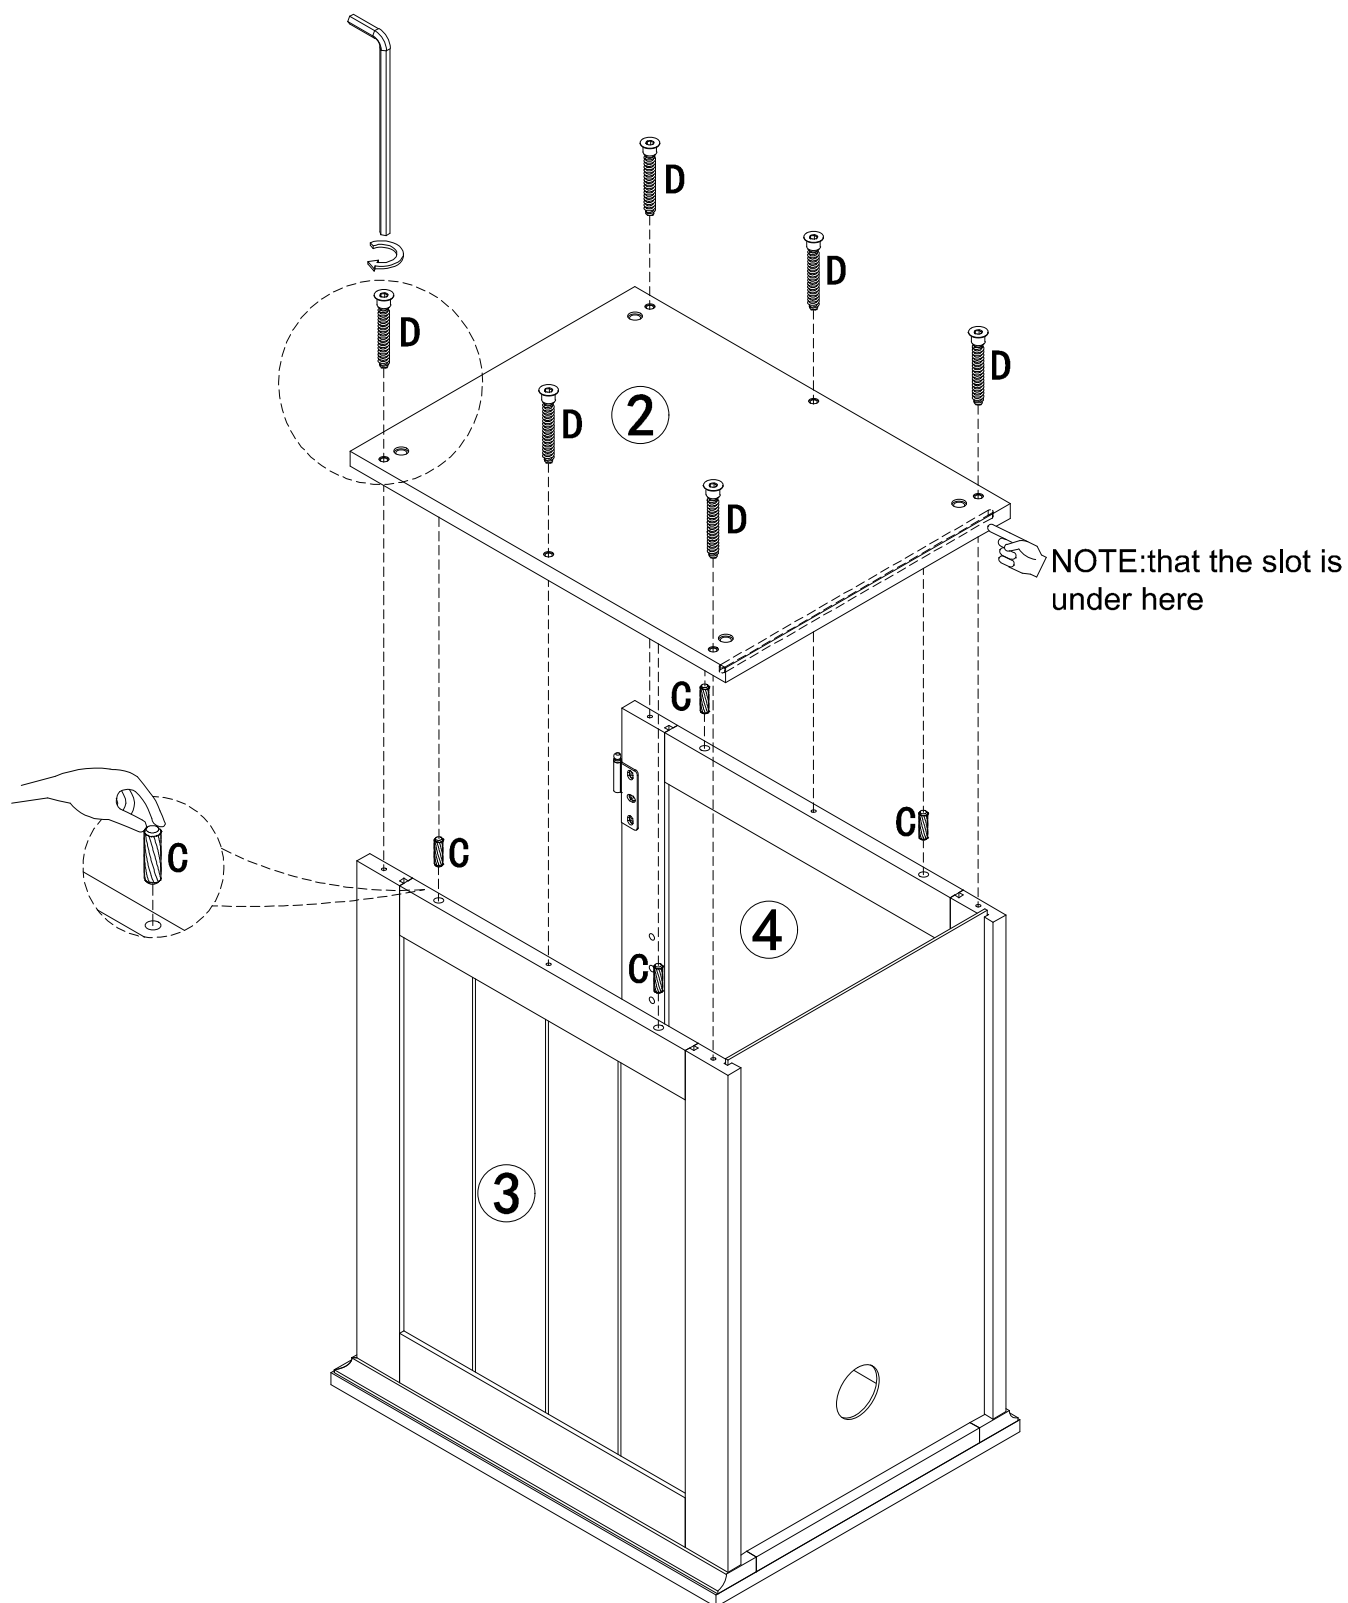C**X 4PCS****D****X 6PCS**



STEP 7

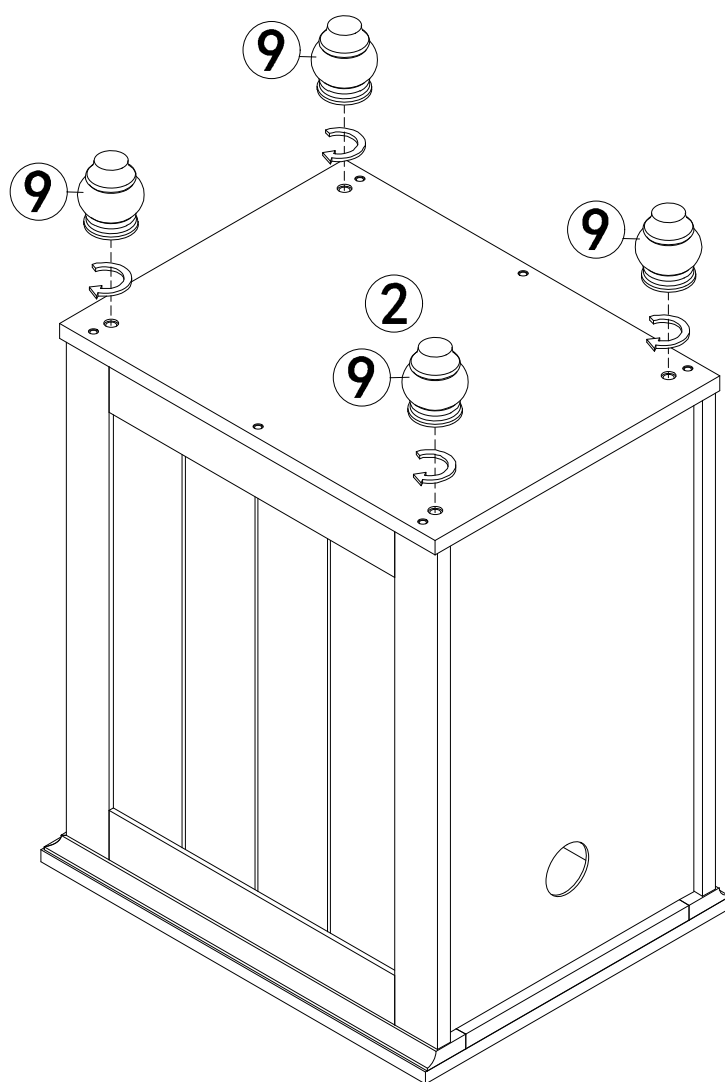


STEP 8

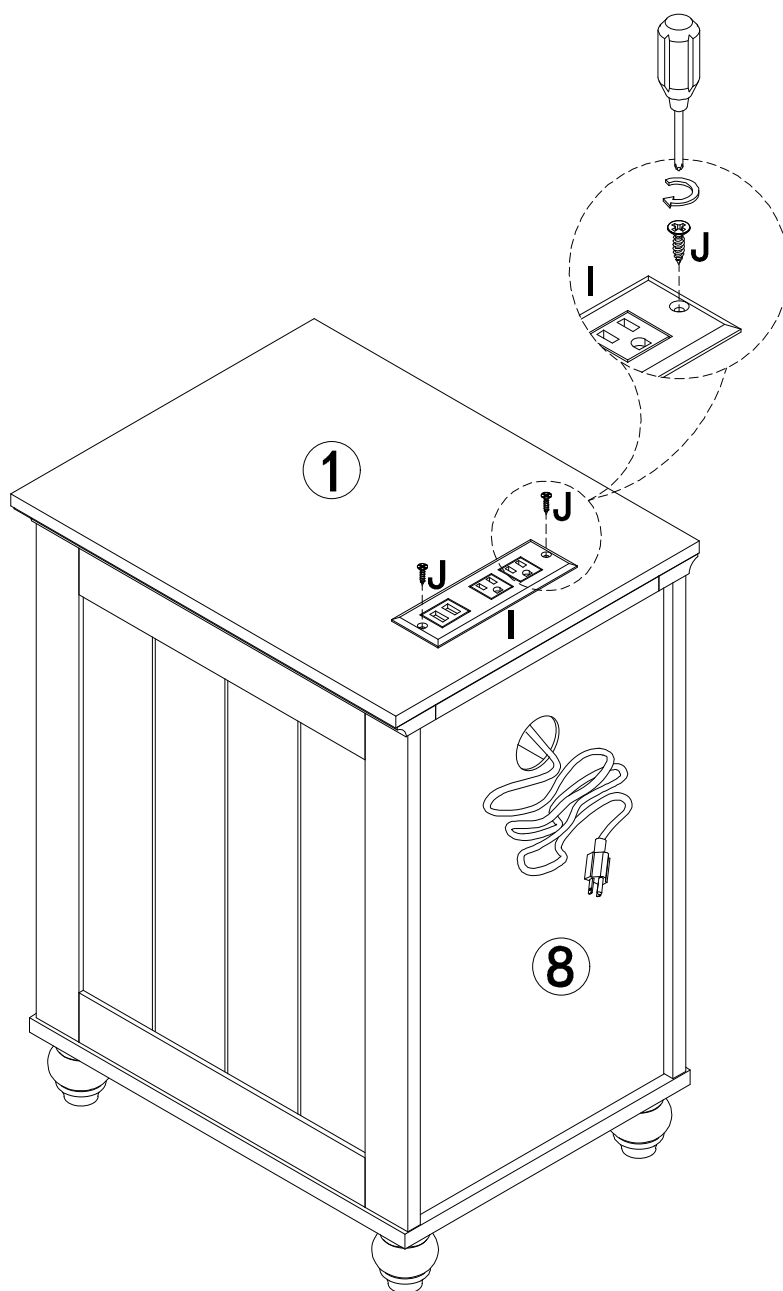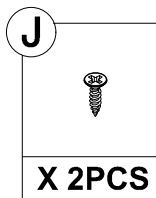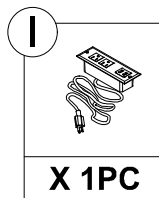


STEP 9

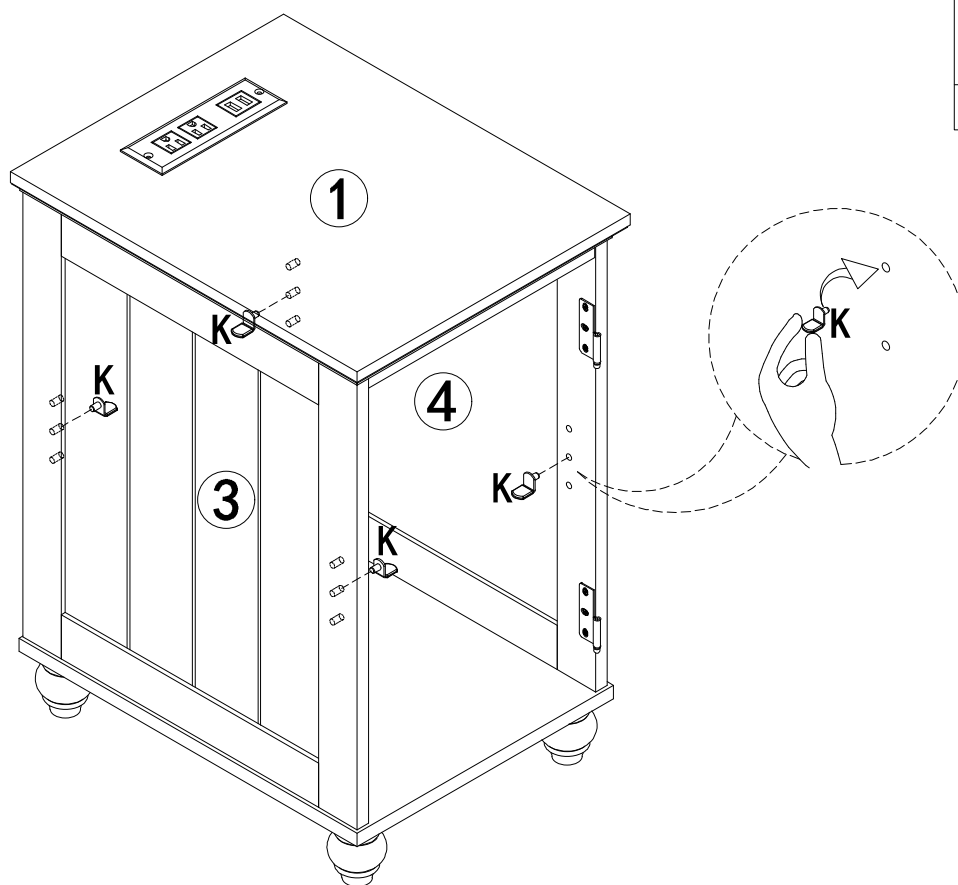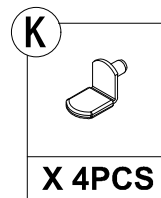


STEP 10

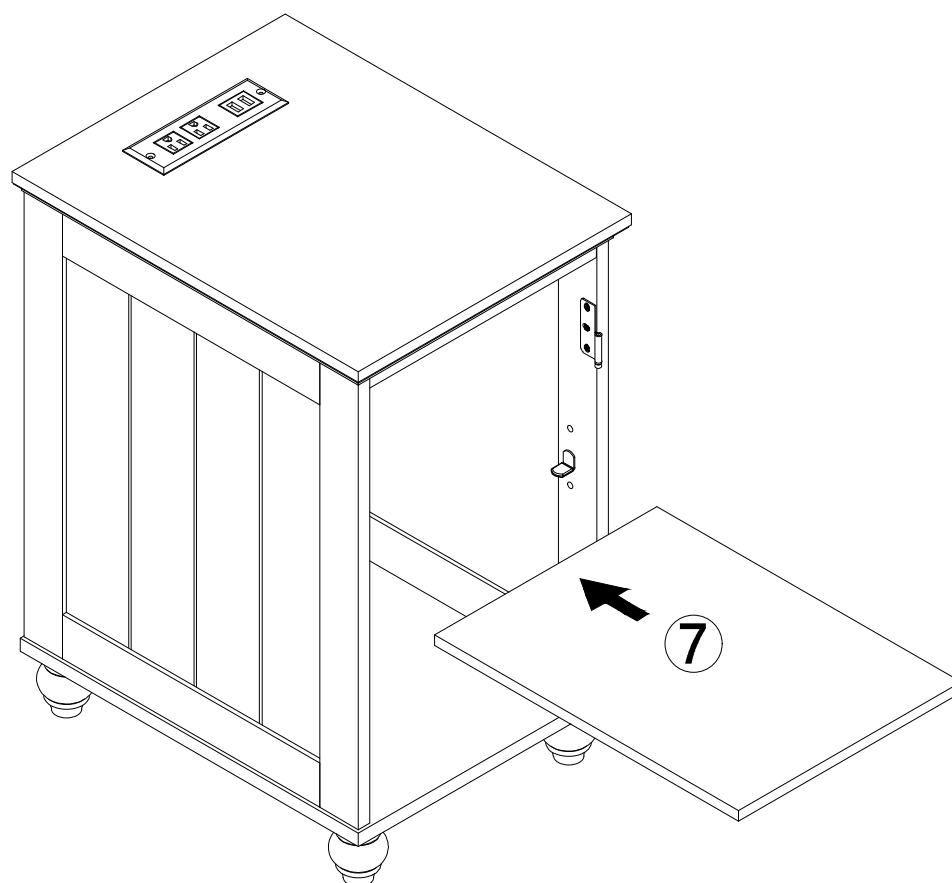

STEP 11

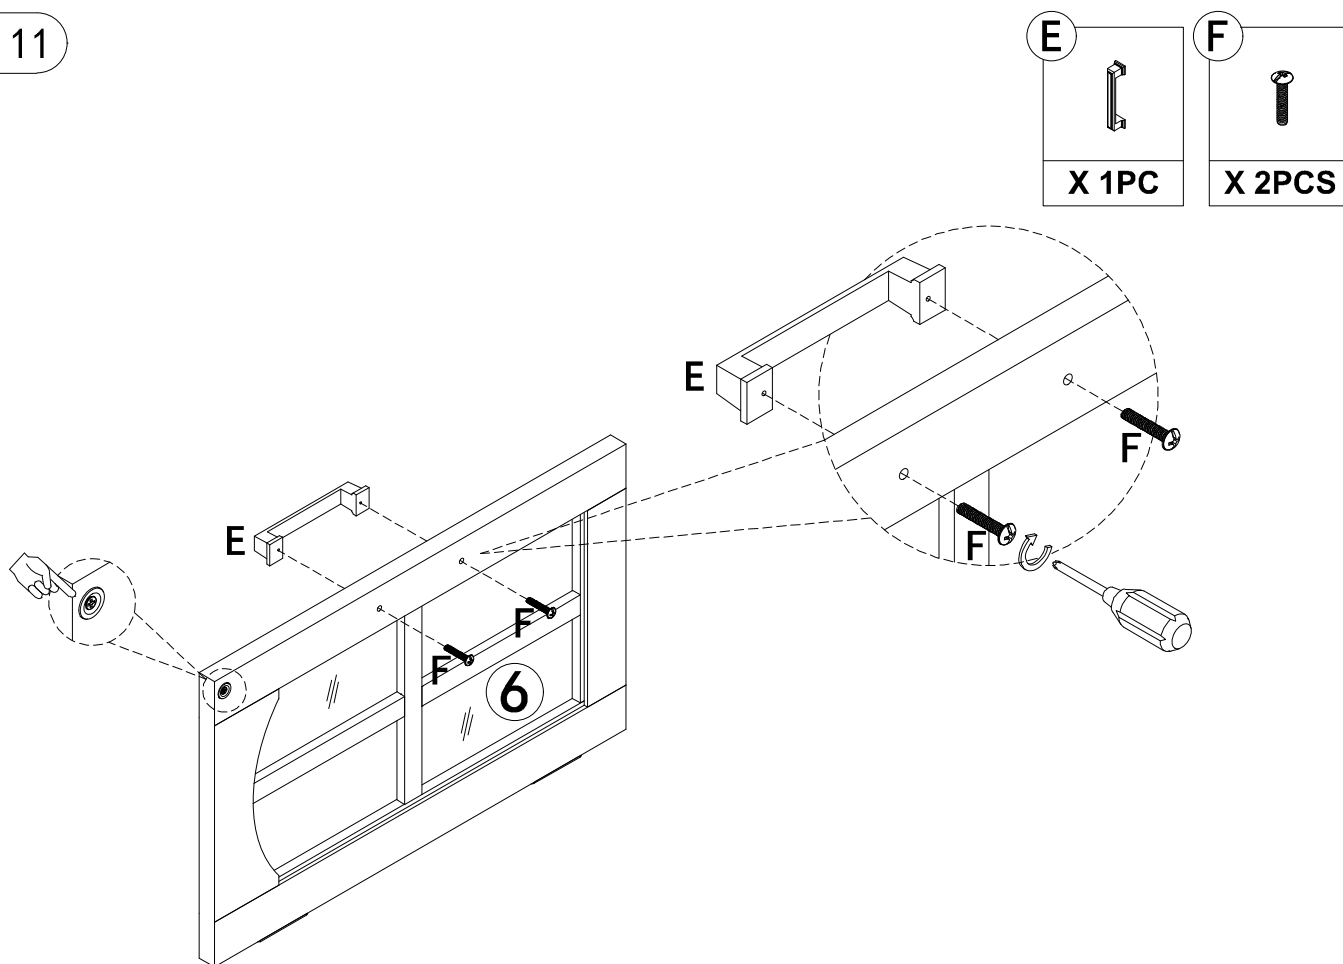

STEP 12

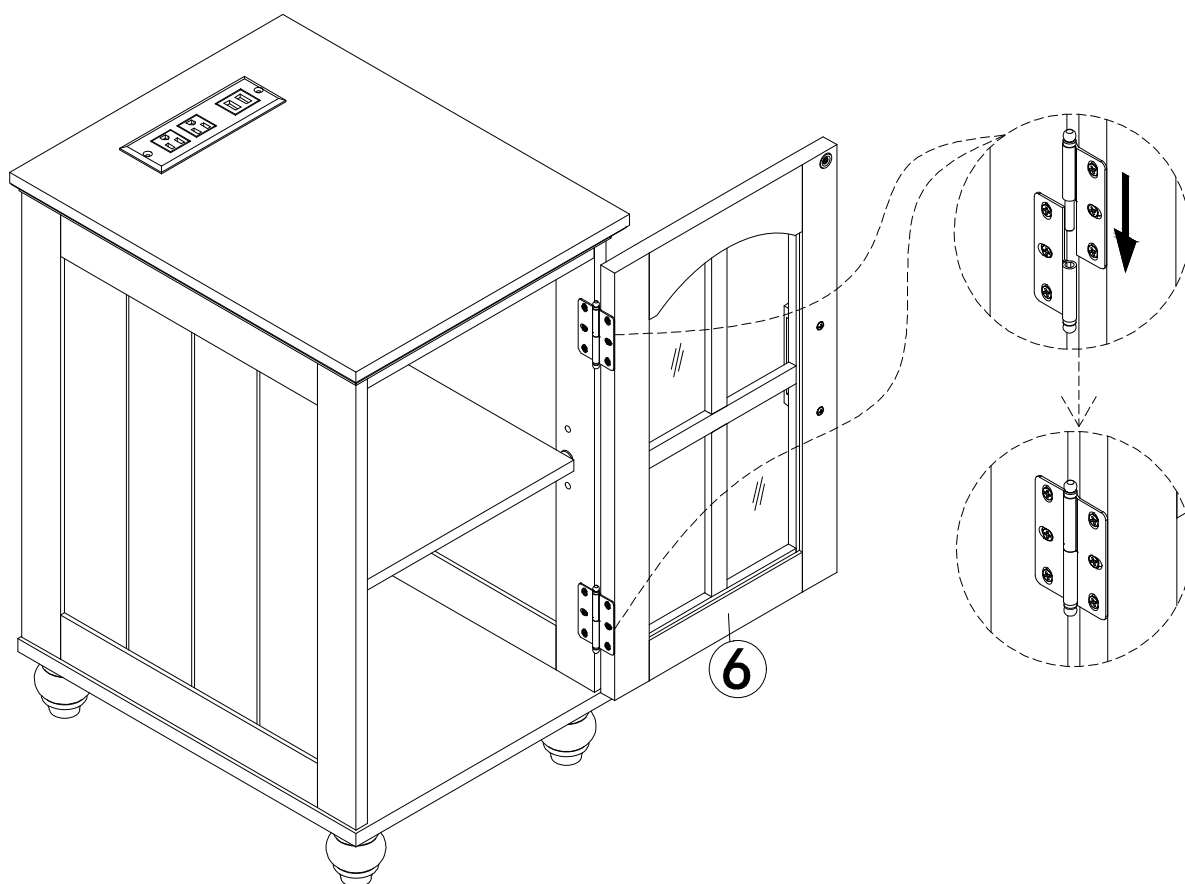

STEP 13

G**X 4PCS****H****X 4PCS**

NOTE: If the gap at the bottom of the door is too small, please follow the steps below to adjust it.

