


ASSEMBLY INSTRUCTIONS

20INCH BATH VANITY (COMBO)


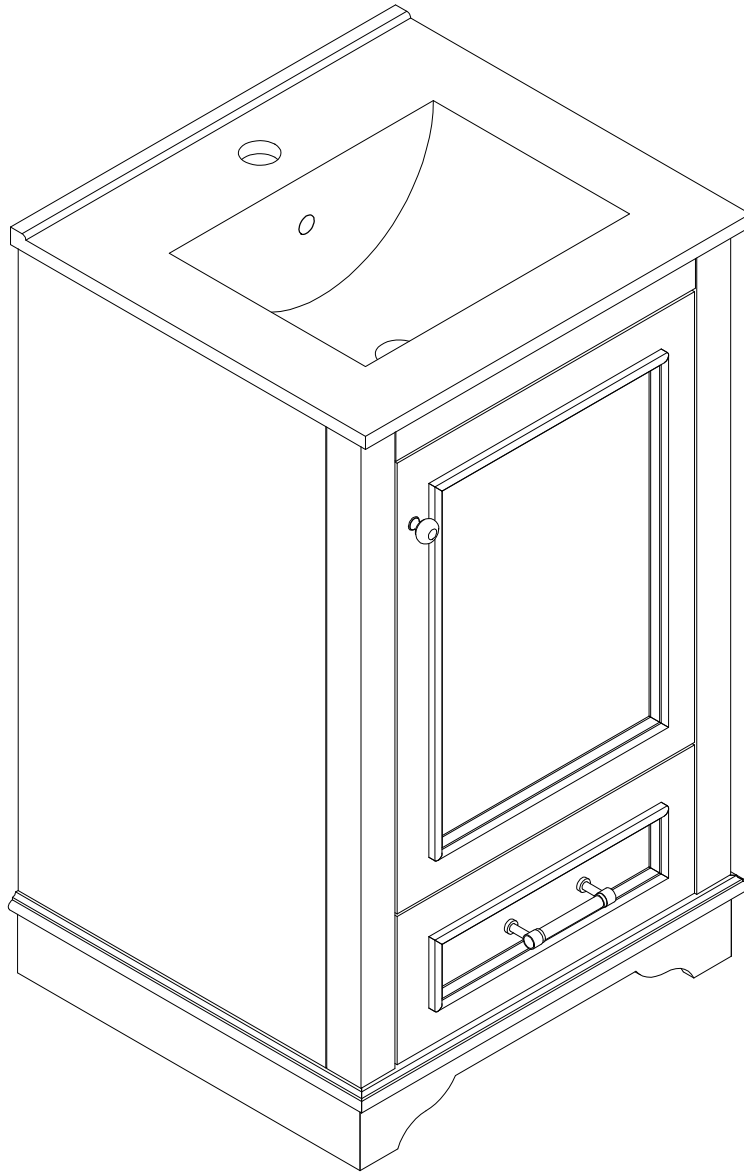


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

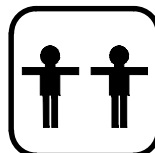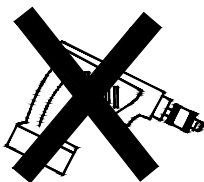


+

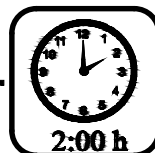

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

Detail View - CABINET

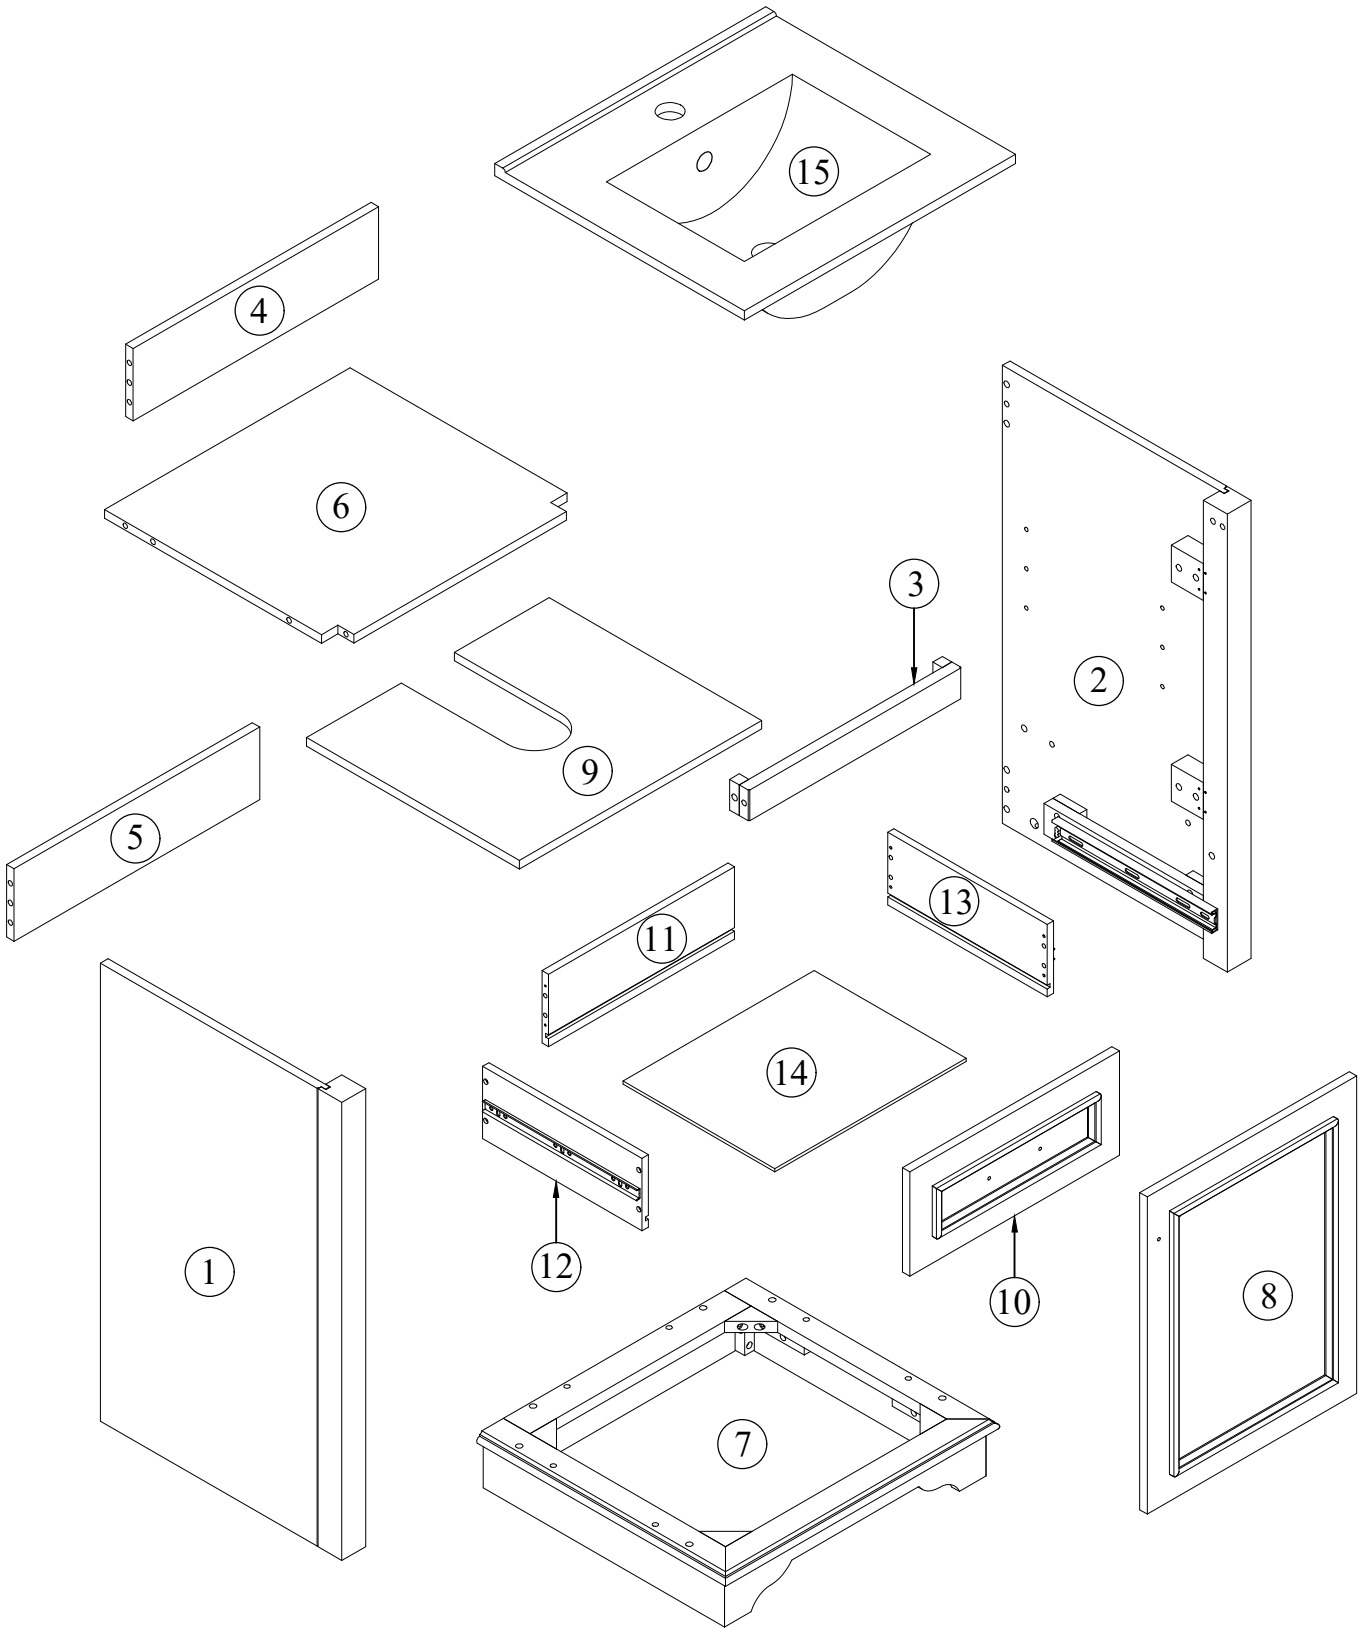


Identifying the Hardware-Identify the hardware using the illustrations below.

Part List-N710P458427

1 Side Panel (L) - 1pc	2 Side Panel (R) - 1pc
3 Front Bar - 1pc	4 Top Panel Rear - 1pc
5 Bottom Panel Rear - 1pc	6 Middle Panel - 1pc
7 Bottom Panel - 1pc	8 Door - 1pc
9 Adjustable Shelf - 1pc	10 Drawer Front - 1pc


Part List-N710P458427

11

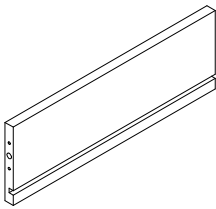


Drawer Back Panel - 1pc

12

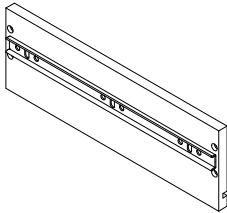


Drawer Side Panel (L) - 1pc

13

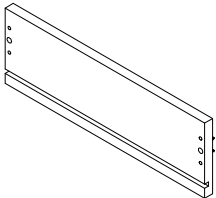


Drawer Side Panel (R) - 1pc

14

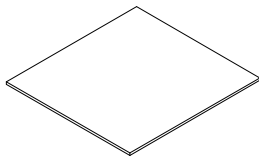








Bottom Drawer Panel - 1pc

15

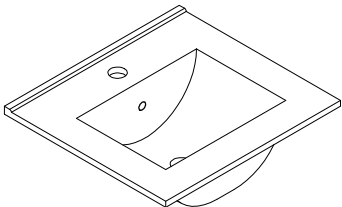


Sink - 1pc

Hardware List -N710P458427




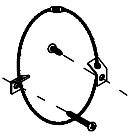
A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(18pcs)	Three in one lock(18pcs)	Wood dowel(16pcs)
D  ø13x1/4"x32mm	E  ø1/4"x16x1mm	F 
Hex-Head bolts(2pcs)	Washer(2pcs)	Laminate pad(4pcs)
G 	H  ø7xø3.5x12mm	I 
Damping hinge (2pcs)	Flat head screw(12pcs)	Handle (1pc)
J  ø5/32"x20mm	K 	L  ø5/32"x32mm
Handle screw(1pc)	Handle (1pc)	Handle screw(2pcs)
M  ø8xø4x32mm	N  ø6x30mm	O  4mm
Round head screw(8pcs)	Wood dowel(8pcs)	Allen key - 1pc
P  Anti fall hardware (2sets)		

STEP: 1


A




18PCS

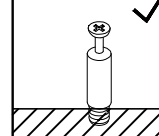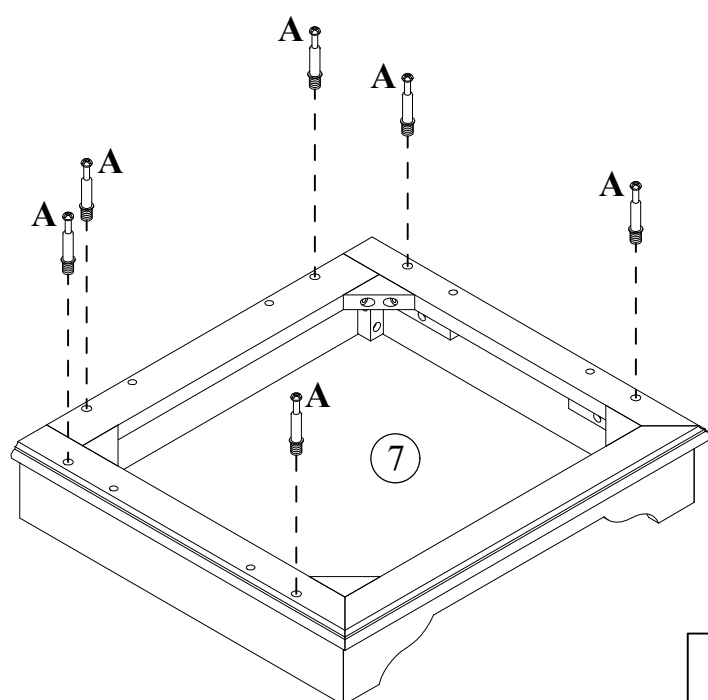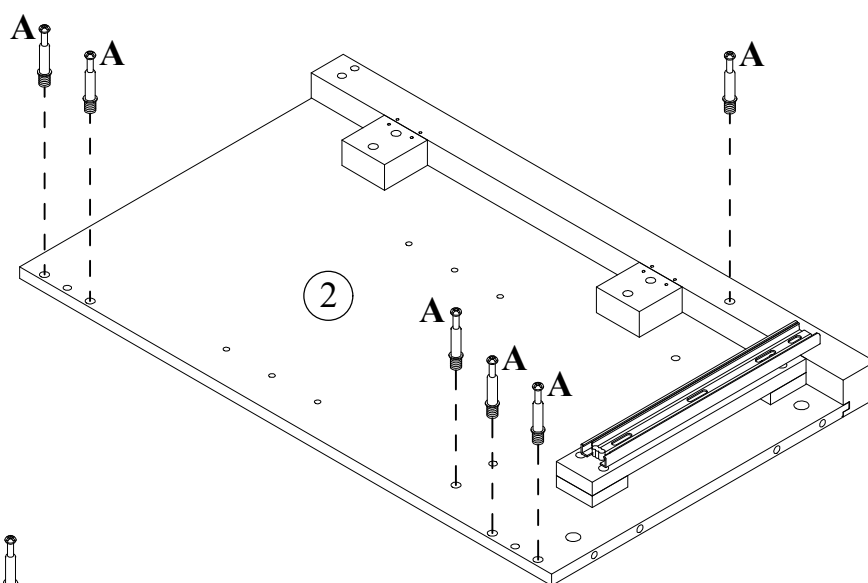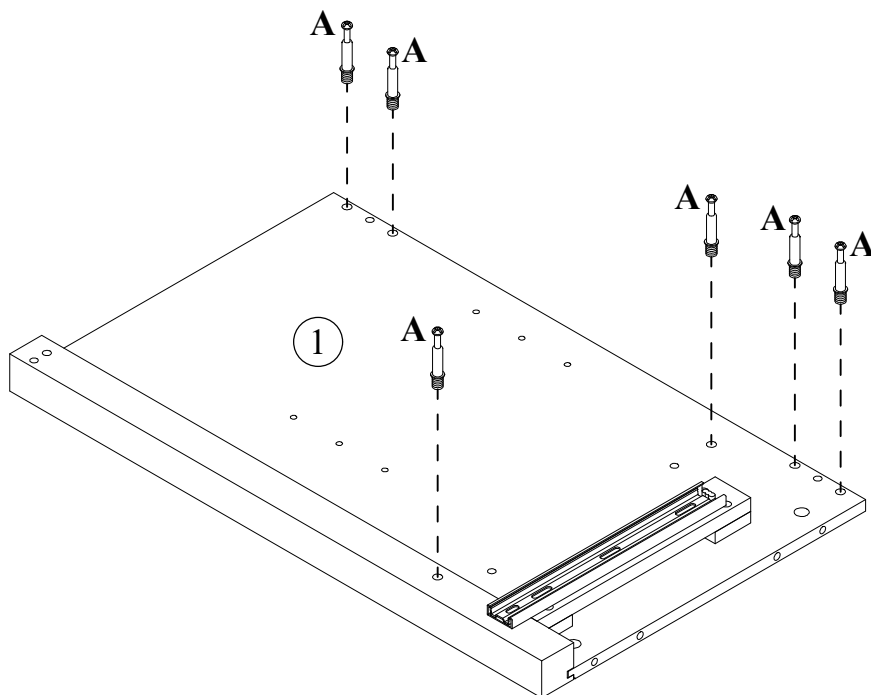


Don't lean **×**

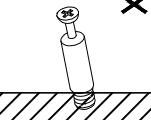


Don't over tighten **×**

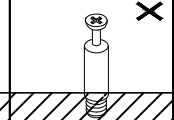


STEP: 2


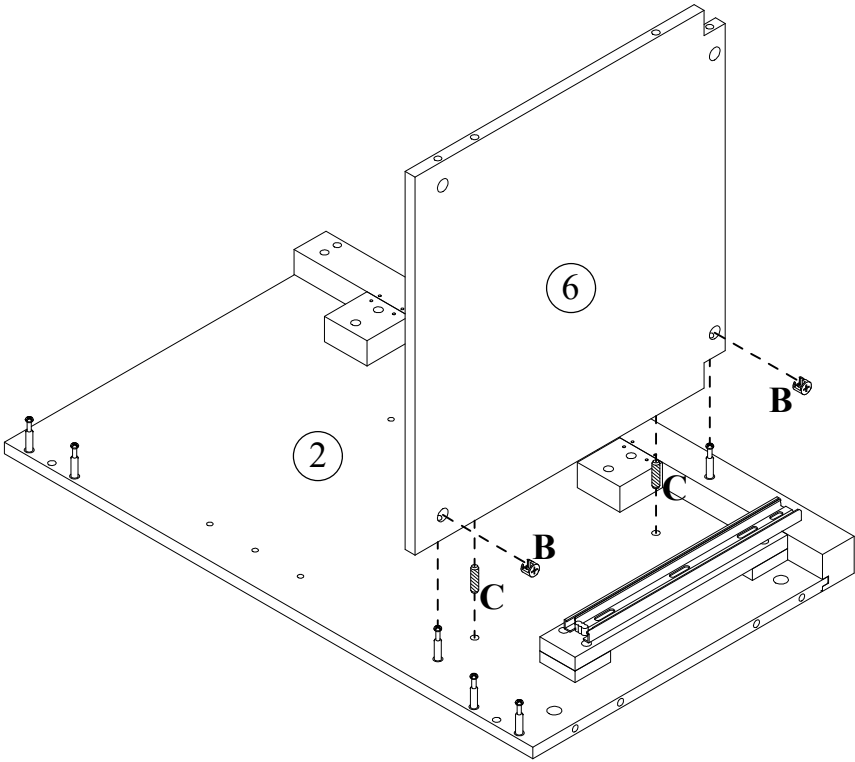


B	C
	
2PCS	2PCS

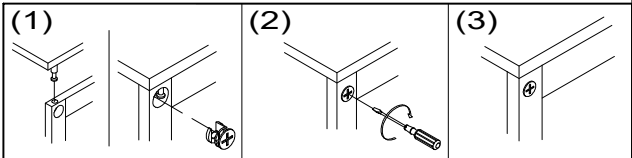

STEP: 3

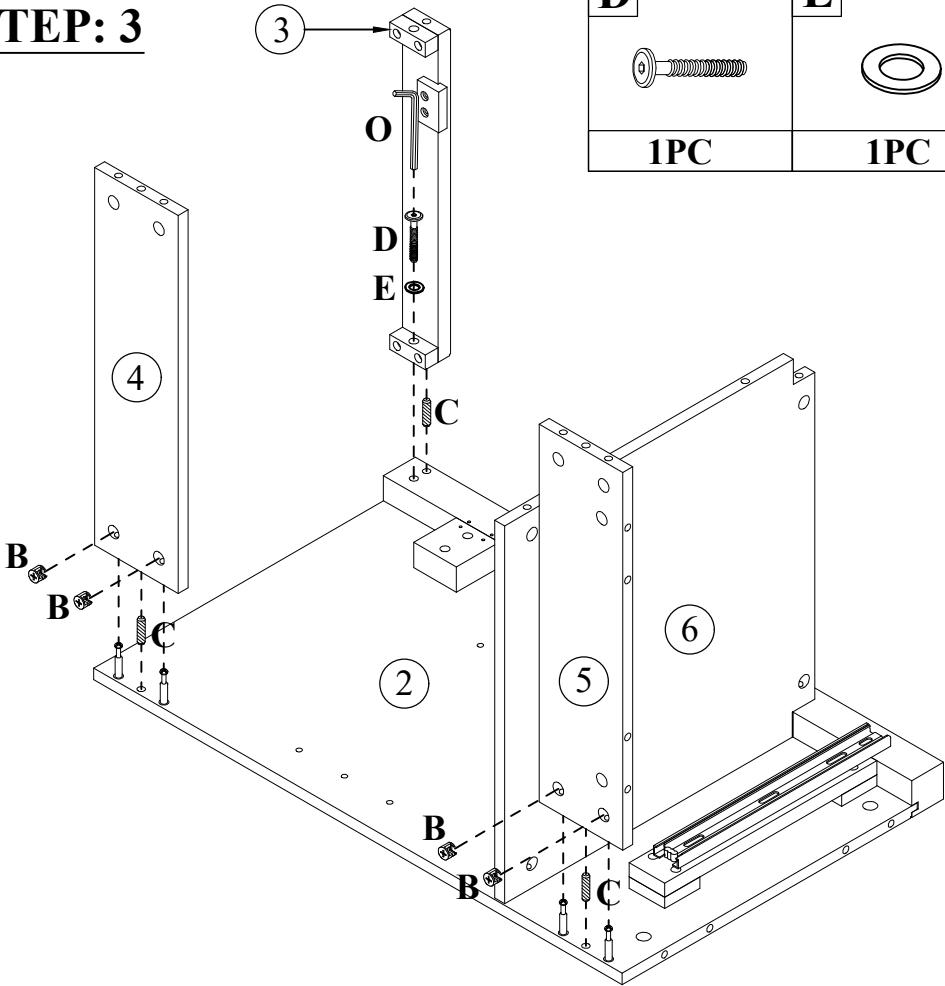



D	E	B	C
			
1PC	1PC	4PCS	3PCS

O


1PC


STEP: 4

O	D	E	B	C
				
1PC	1PC	1PC	6PCS	5PCS


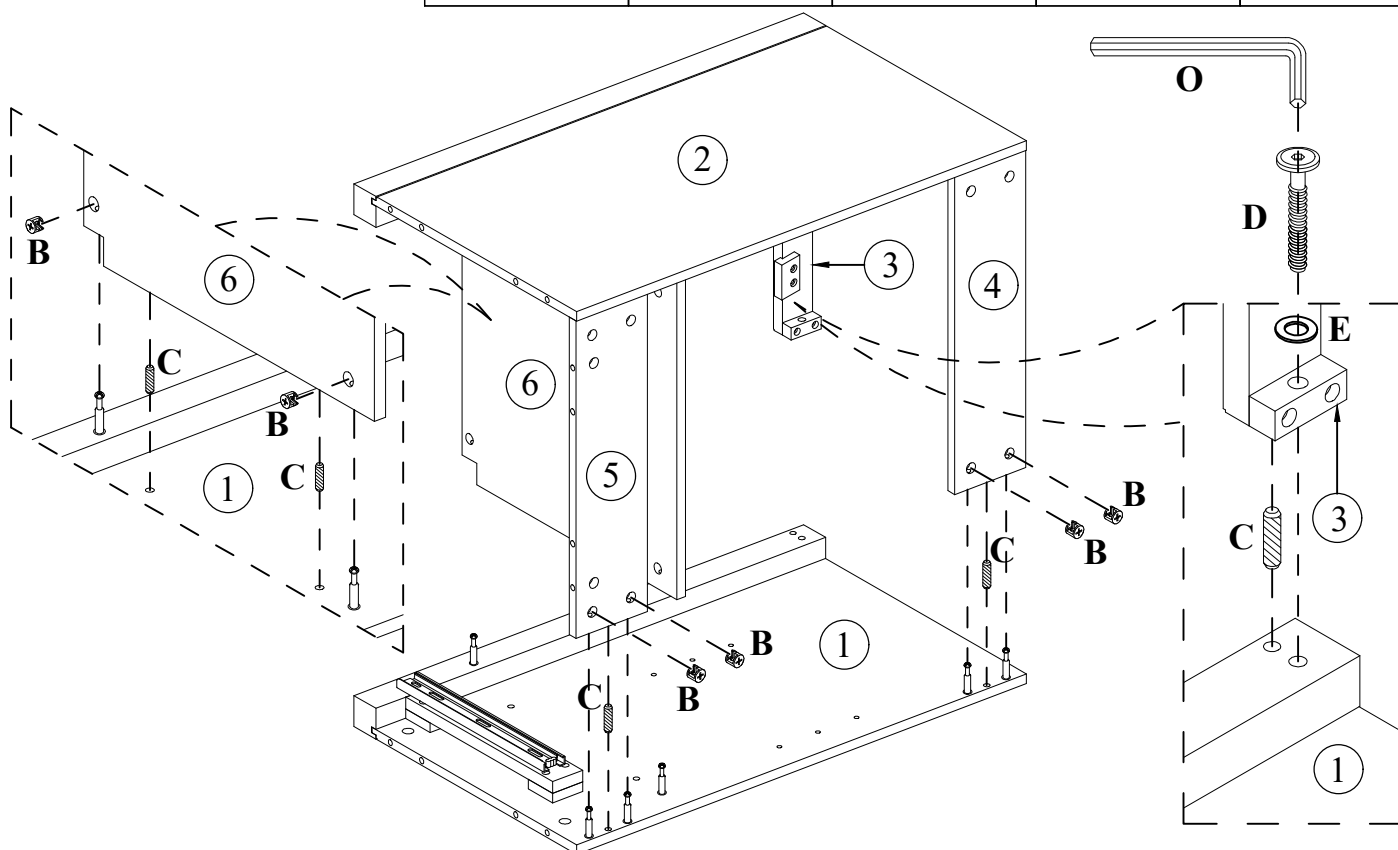


STEP: 5




B	C
	
6PCS	6PCS

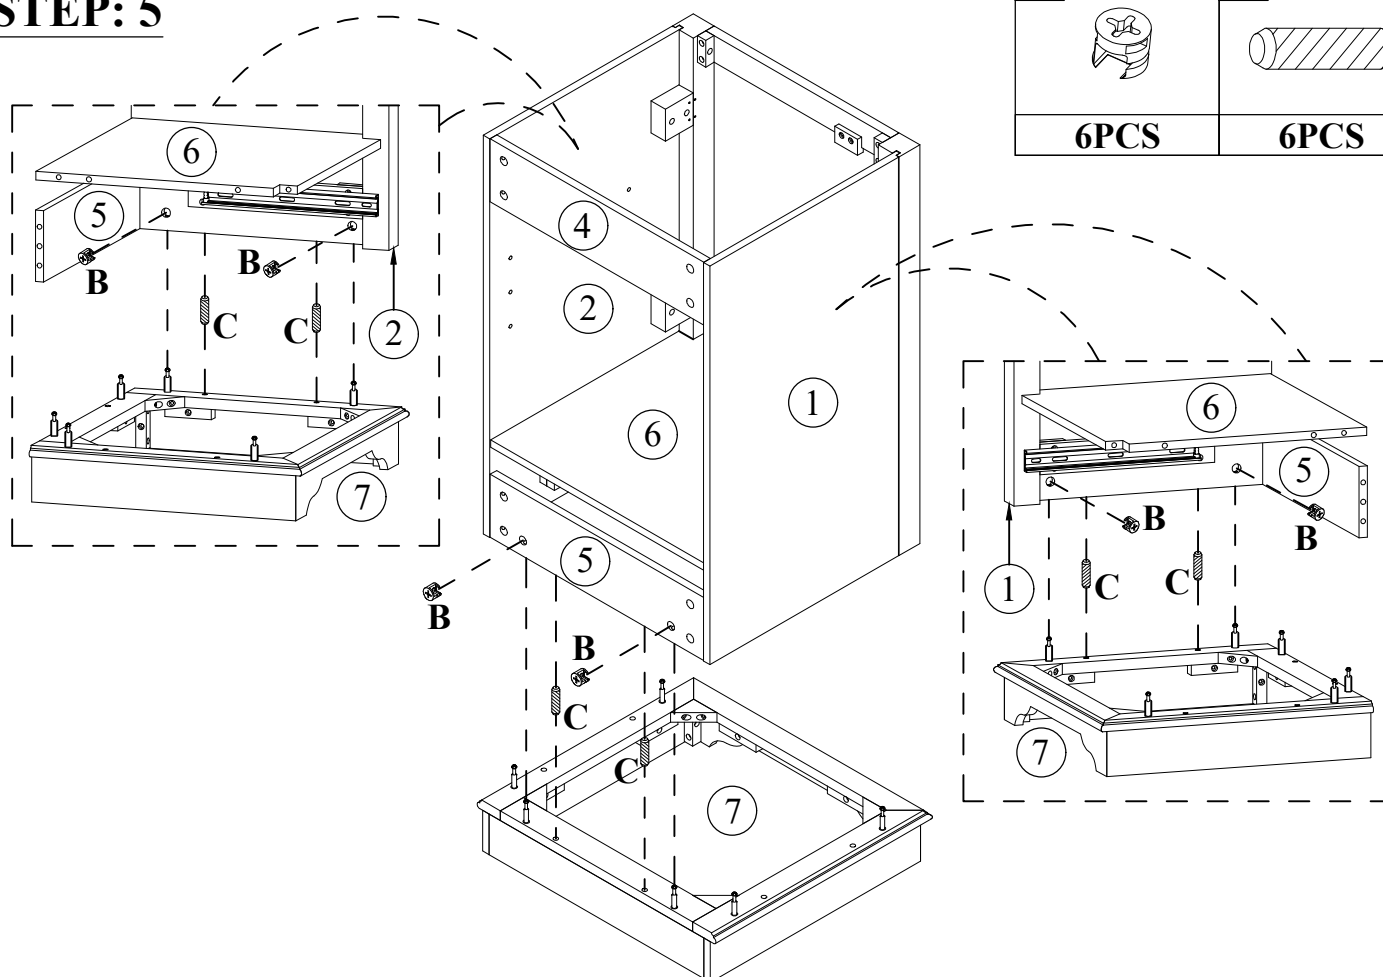


STEP: 6


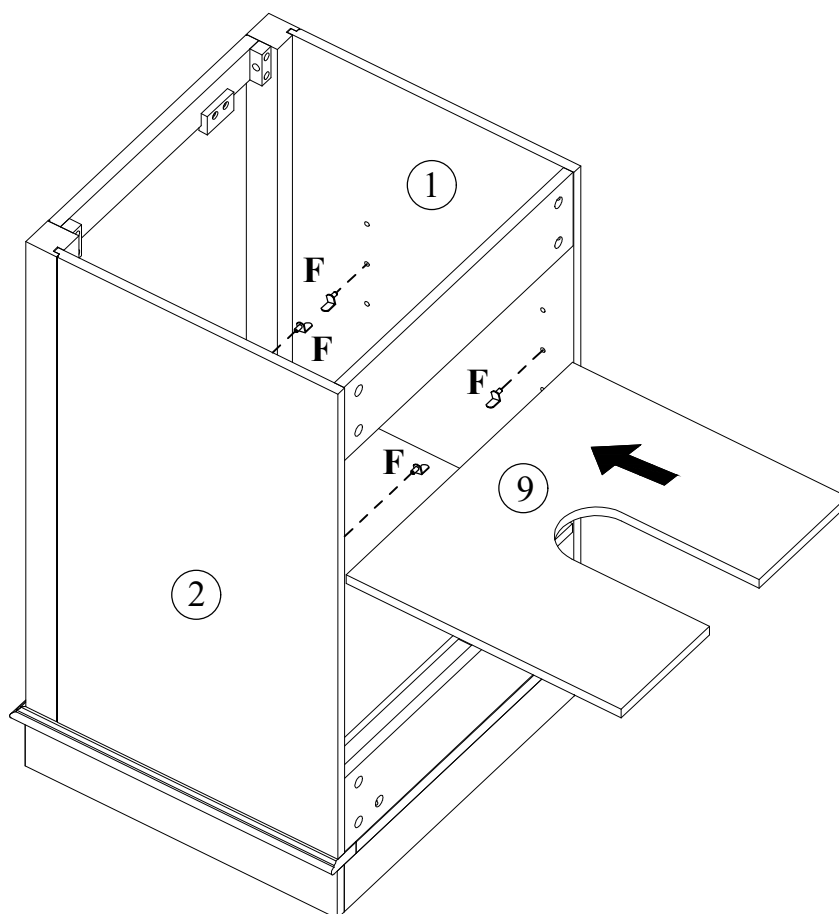
F**4PCS**


STEP: 7

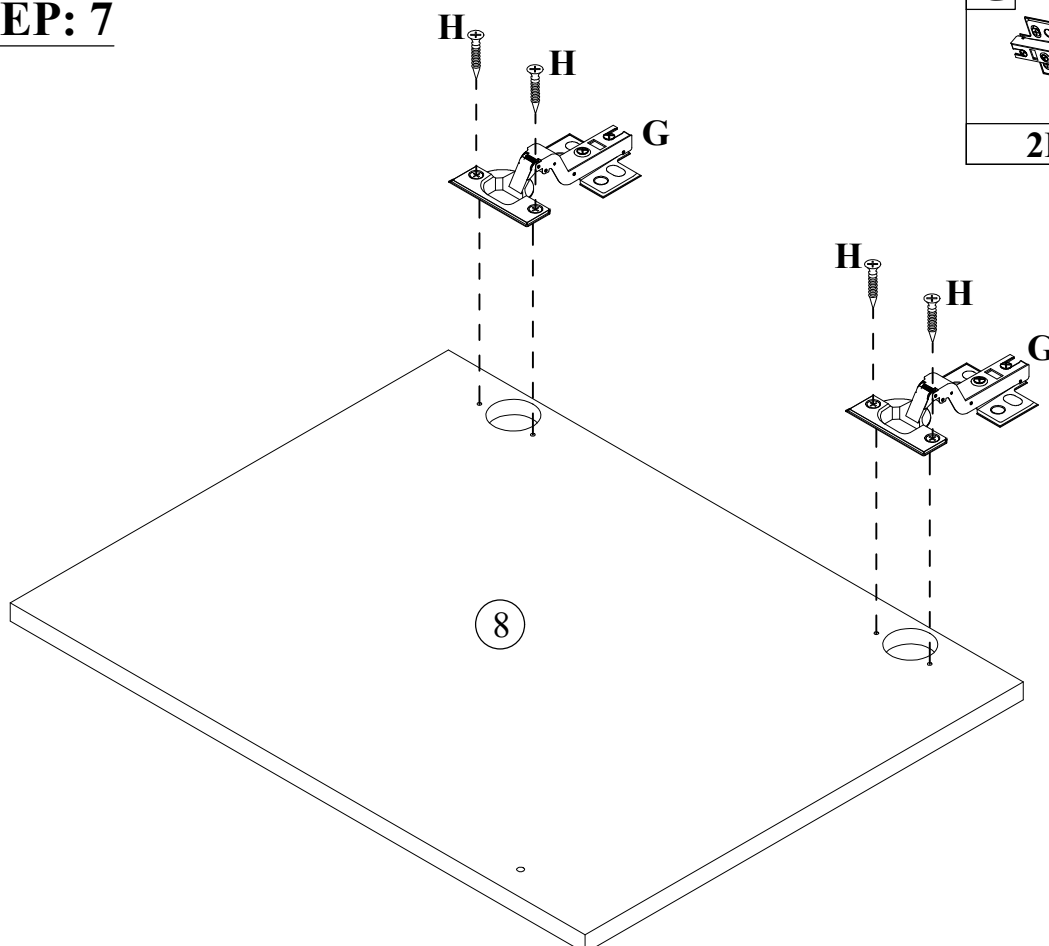G**2PCS****H****4PCS**


STEP: 8



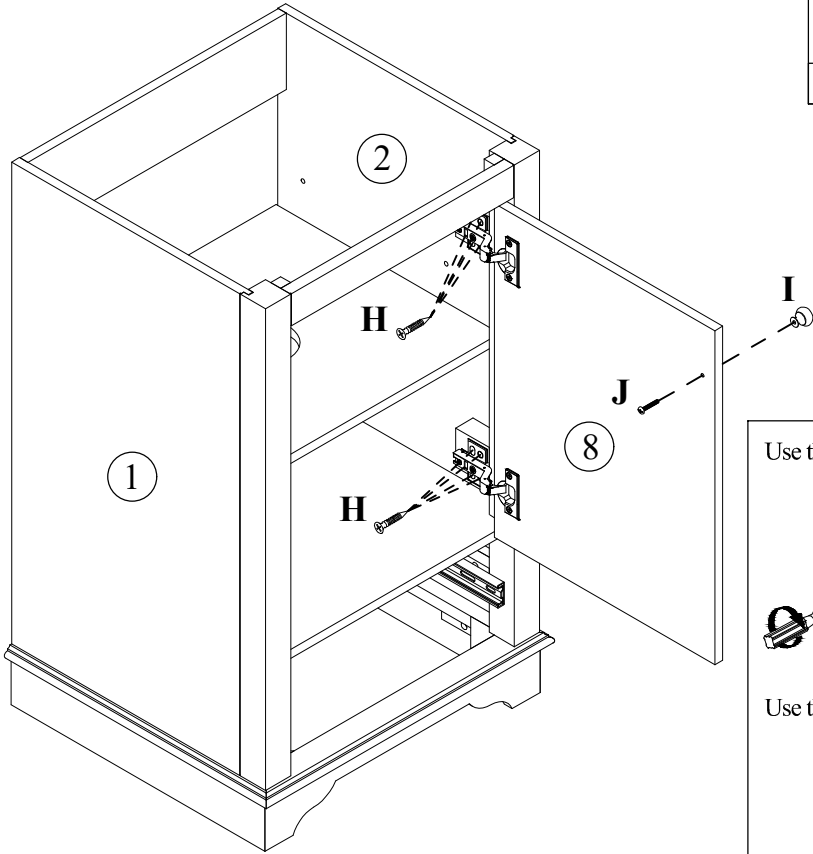



I	J	H
		
1PC	1PC	8PCS

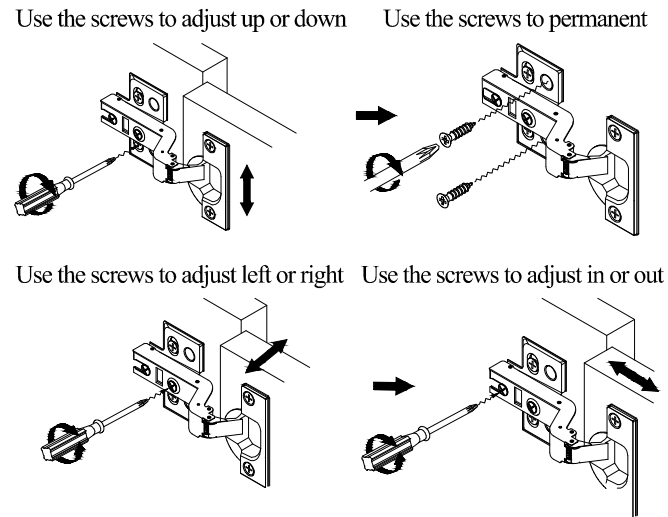


STEP: 9

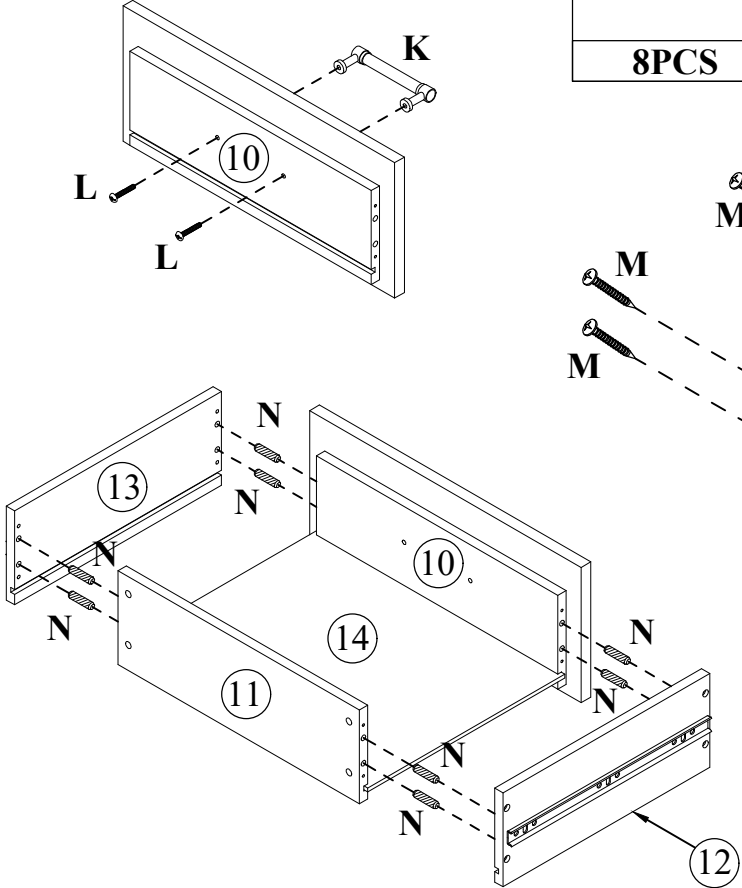



M	N	L	K
			
8PCS	8PCS	2PCS	1PC

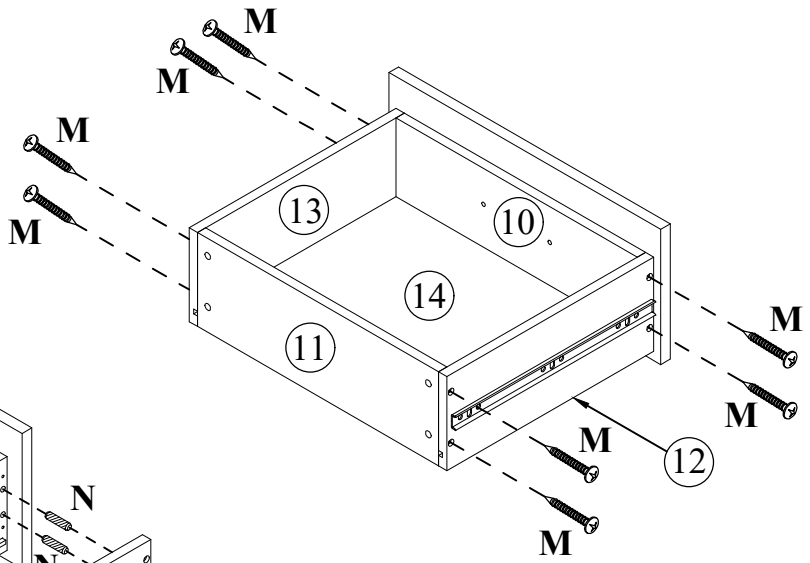

STEP: 10

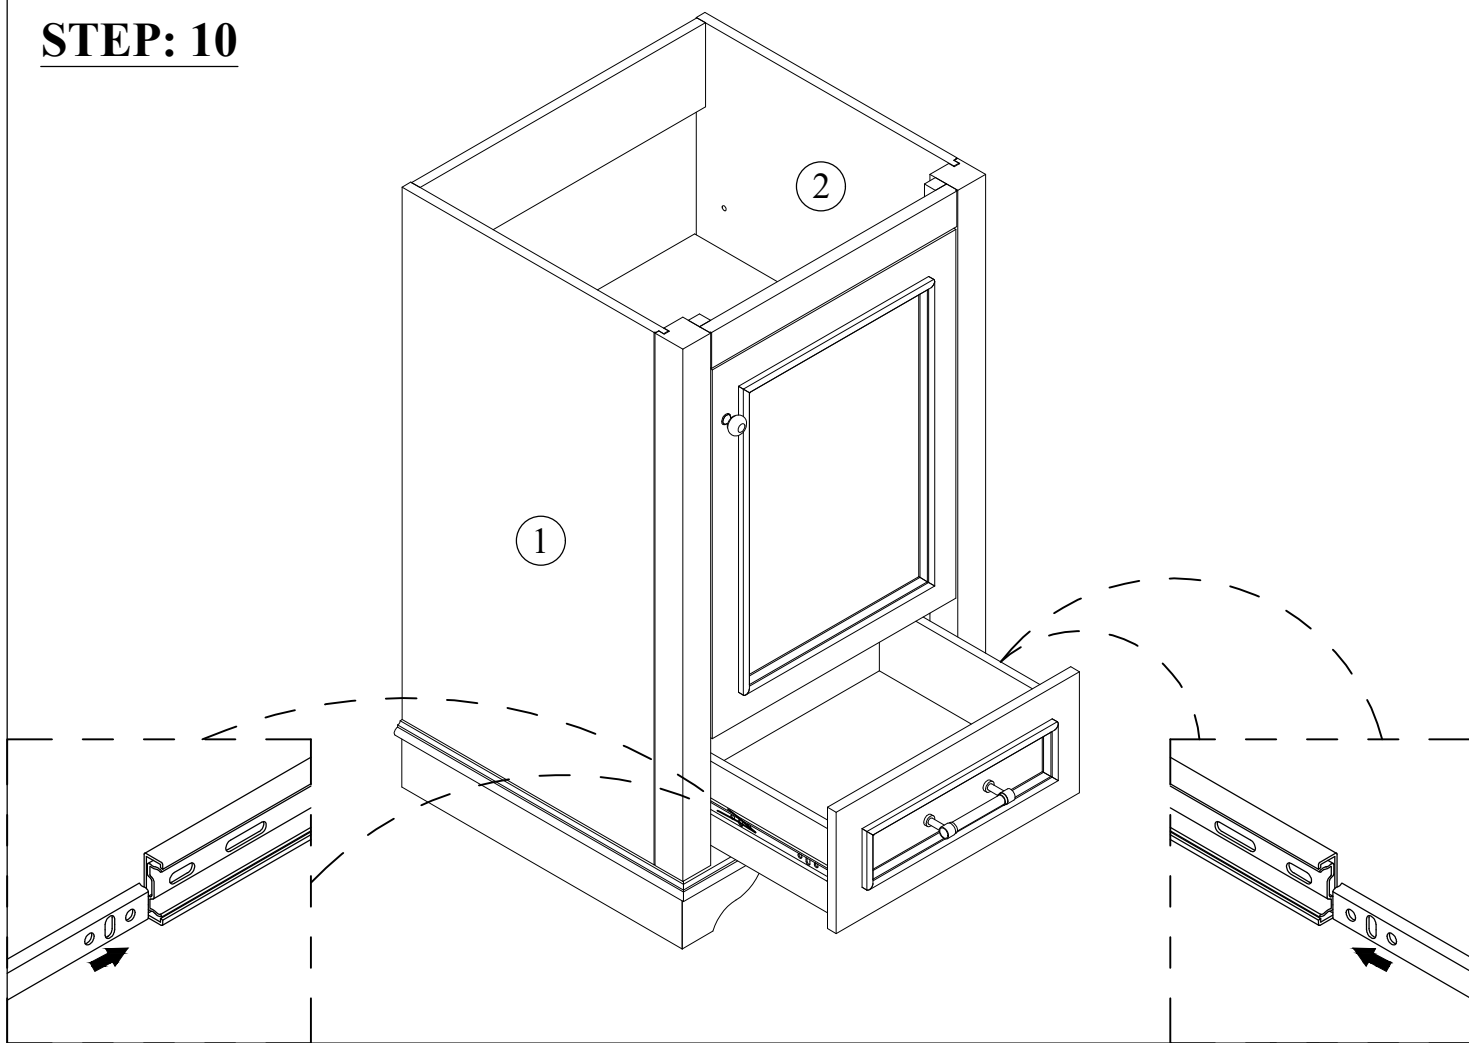


STEP: 11

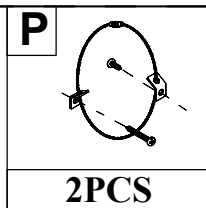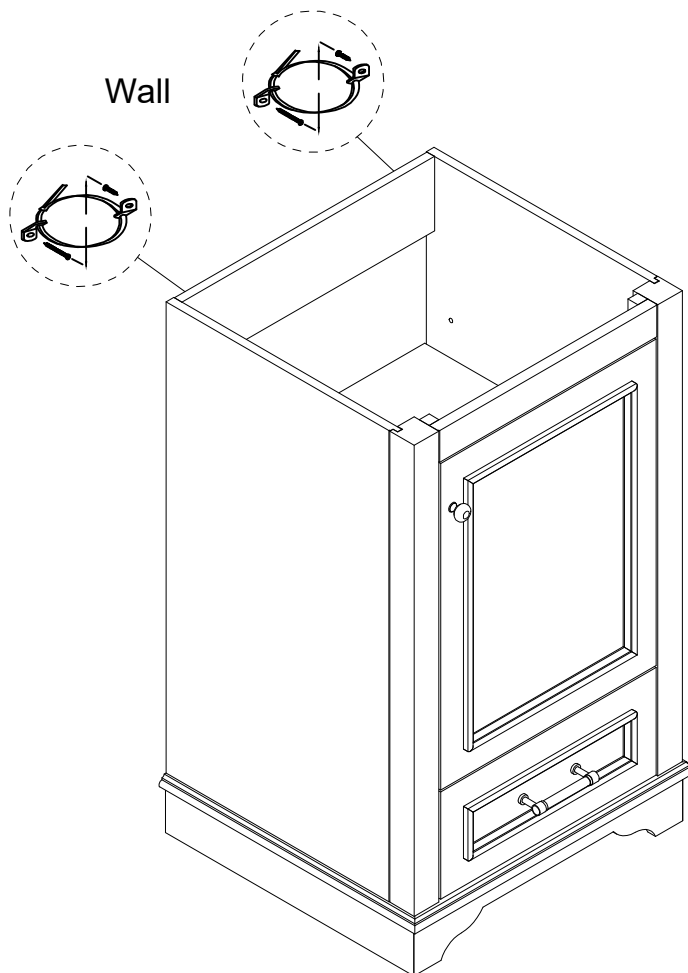



STEP: 12

Install the sink on the cabinet with glue.
Let stand for 24 hours

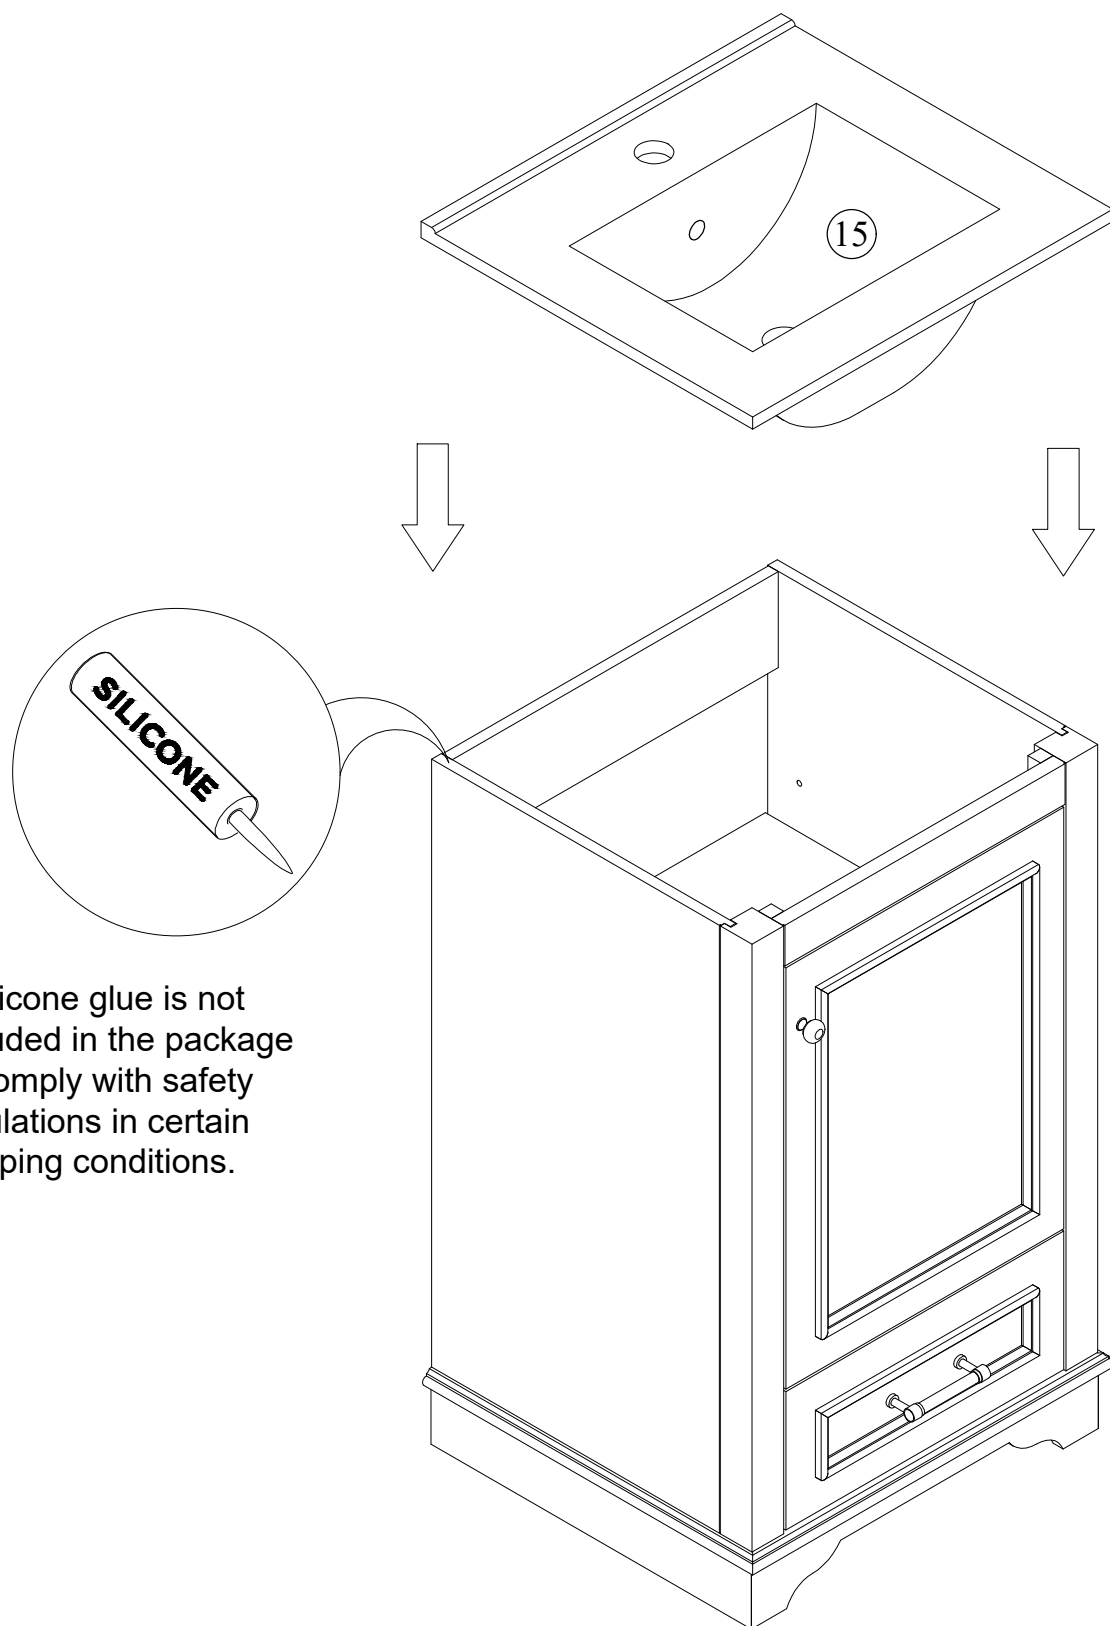


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 13

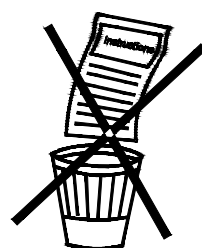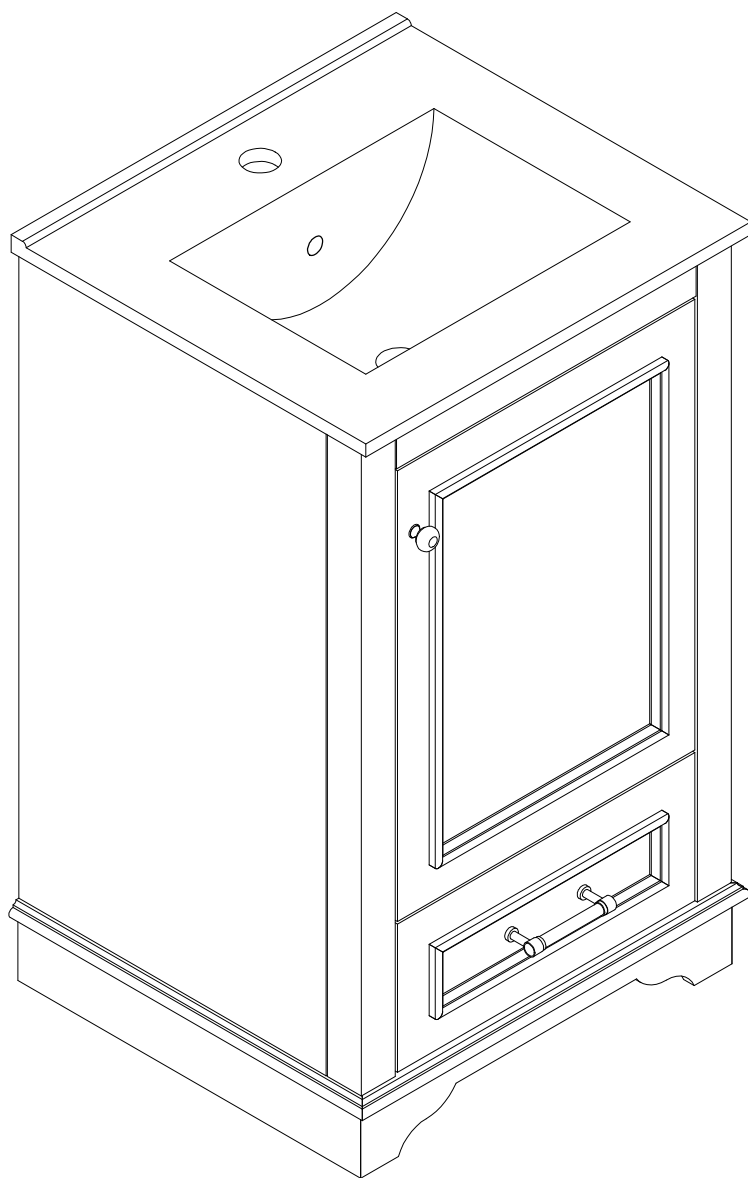


HINGE ADJUSTMENTS

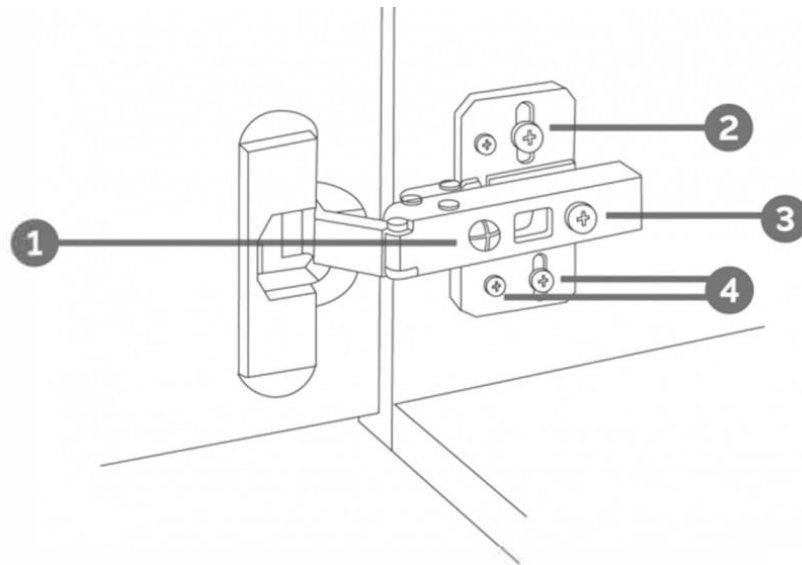


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

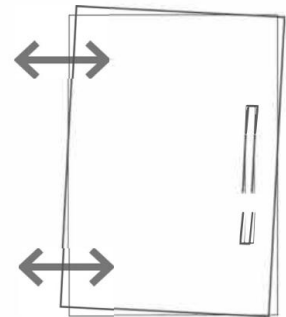

2 4 Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

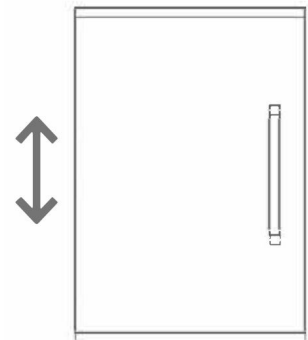

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

