







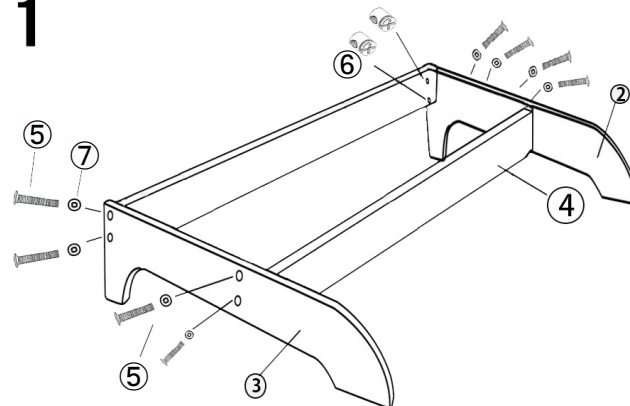


| | |
|--|--|
| ①  × 1 | ⑤  × 12 |
| ②  × 1 | ⑥  × 8 |
| ③  × 1 | ⑦  × 12 |
| ④  × 2 | ⑧  × 1 |

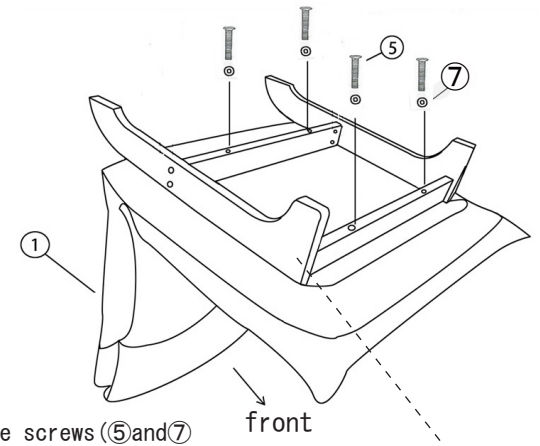
1


1. Take the left and right side strips (the counterbore facing out side) and install them on the two horizontal strips (the counterbore facing downward) (as shown in the figure).

**Do not tighten all the screws until they have been installed.

3


3. Turn the seat over and place it on the horizontal ground. After leveling the wooden footparts, finally use the hexagon wrench to tighten the screws on the side.

2


2. Use the screws (5 and 7) fix footparts on the chair seat. (as shown in the figure).

**Pay attention to tightening.

