

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email us

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

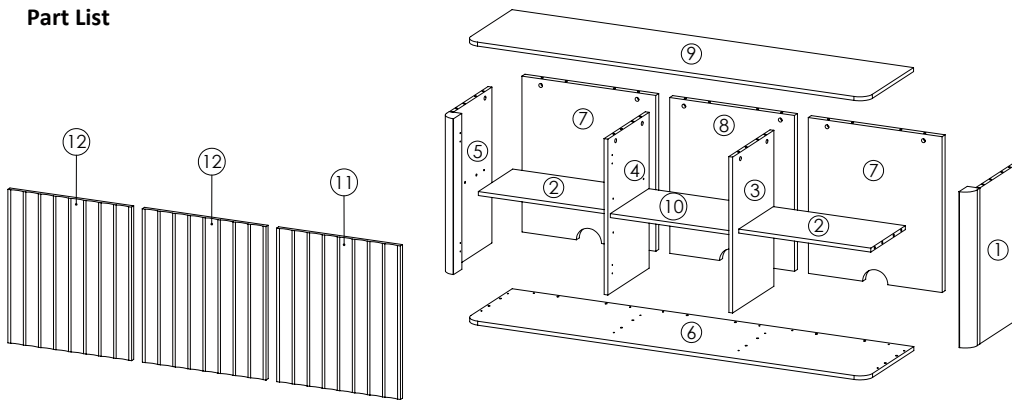

Owner Manual

Product Dimensions: W 62,99" x D 15,67" x H 31,69"

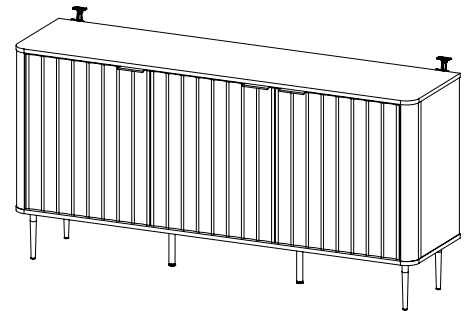

WARNING

TOTAL WEIGHT CAPACITY: 136 LBS







Top Weight Capacity: 40 lbs


Shelf Load Capacity : 16 lbs

Warning: Do not stand on sideboard

Warning: Do not over torque bolt

Hardware List

HW1x22  Ø6x32 mm	HW2x22  Ø15x12 mm	HW3x36  Ø8x32 mm	HW4x14  Ø6x50 mm	HW7x4  Ø26x83mm Full Curve	HW9x20  Ø20 mm
HW10x2  Ø26x83mm Half Curve	HW11x4  Ø5x16 mm	HW12x6  Ø6x12 mm (PH)	HW13x12  Ø5x8,5 mm	HW14x48  Ø5x12 mm	HW16x3  Handle 100 mm
HW17x4  Side Legs	HW18x2  Center Legs	HW19x4  Bumpers Ø8 mm			

Anti-Tip restrain pack	
HW5x4  Ø6x15 mm	HW6x4  Ø10x50 mm
HW8x4  Ø8x35 mm	HW15x2SET  300mm

Part List & HW

Piece	Description	Qty	Carton Call
1	Right Side Panel	1	1 of 2
2	Fixed Shelf	2	1 of 2
3	Center Right Side Panel	1	1 of 2
4	Center Left Side Panel	1	1 of 2
5	Left Side Panel	1	1 of 2
6	Bottom Panel	1	1 of 2
7	Back Panel side	2	2 of 2
8	Back Panel center	1	2 of 2
9	Top Panel	1	1 of 2
10	Adjustable Shelf	1	1 of 2
11	Right Door	1	2 of 2
12	Left Door	2	2 of 2





Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32mm	22	1 of 2
HW2	Camlock Ø15x32mm	22	1 of 2
HW3	Wooden Dowel Ø8x32mm	36	1 of 2
HW4	Screw M6 x 50 mm	14	1 of 2
HW5	Screw M6 x 15 mm	4	1 of 2
HW6	Screw M10 x 50 mm	4	1 of 2
HW7	Full Curve Hinge Ø26x83mm	4	1 of 2
HW8	M8 x 35 mm PLUG	4	1 of 2
HW9	Cover Cap Sticker Ø20mm	20	1 of 2
HW10	Half Curve Hinge Ø26x83mm	2	1 of 2
HW11	Metal Pin Ø5x16mm	4	1 of 2
HW12	Screw M6 x 12 mm (PH)	6	1 of 2
HW13	Screw M5 x 8.5 mm	12	1 of 2
HW14	Screw M5 x 12 mm	48	1 of 2
HW15	Anti-Tip 300 mm	2	1 of 2
HW16	Handle 100 mm	3	1 of 2
HW17	Side Legs	4	1 of 2
HW18	Center Legs	2	1 of 2
HW19	Bumpers Ø8 mm	4	





PREPARATION





Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.





If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 60 minutes.

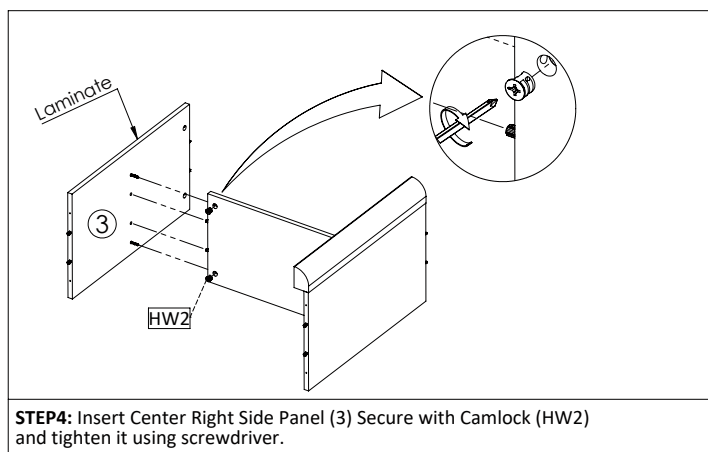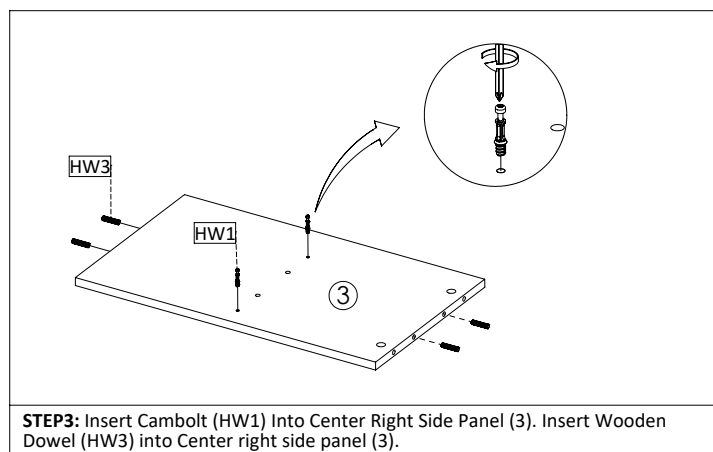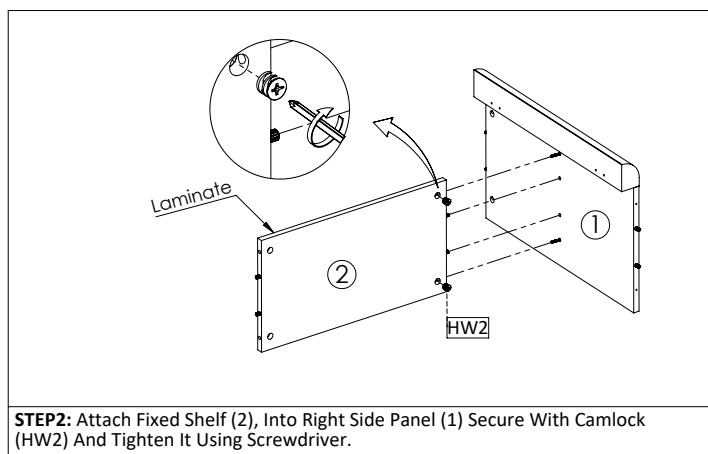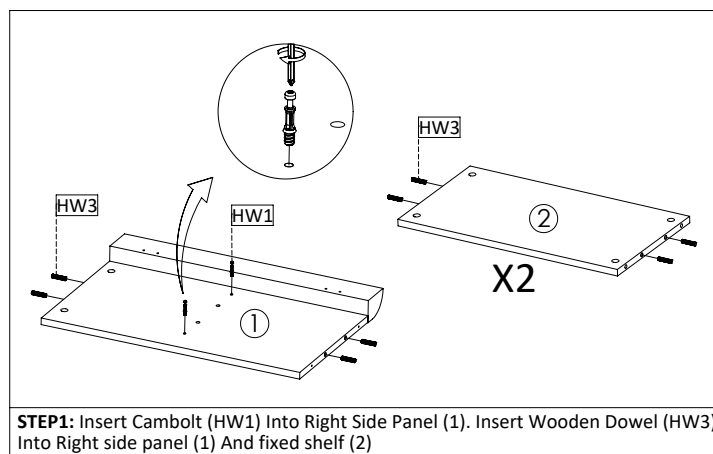

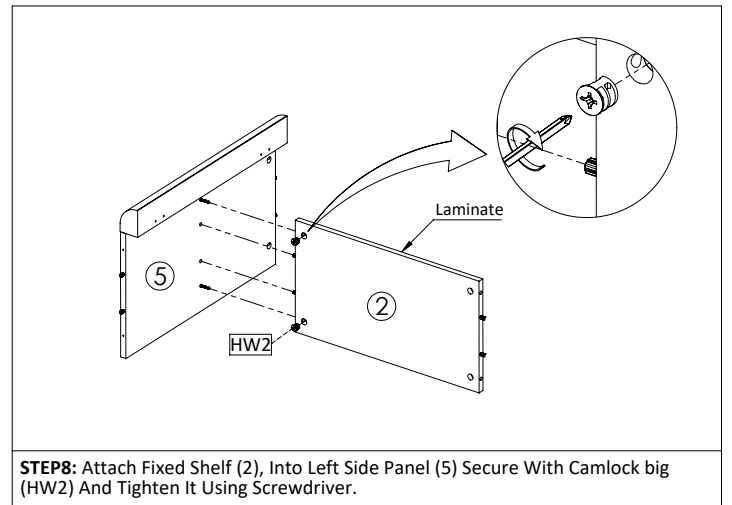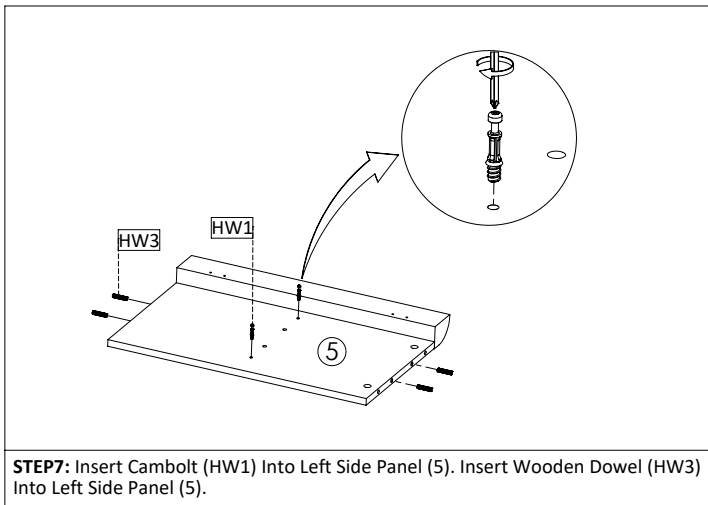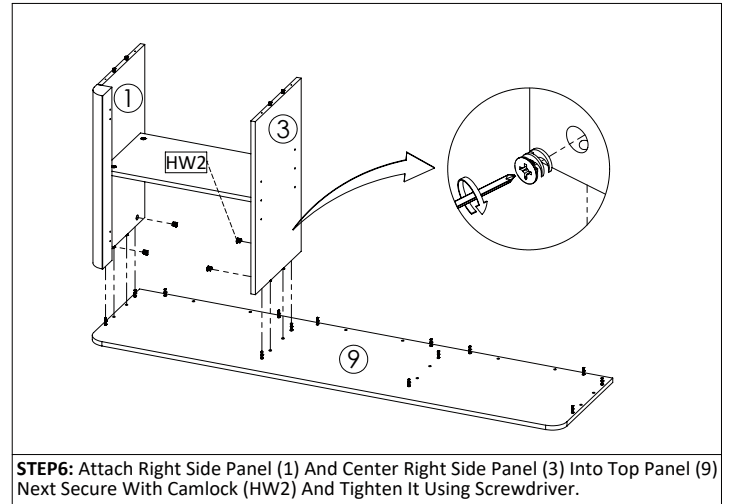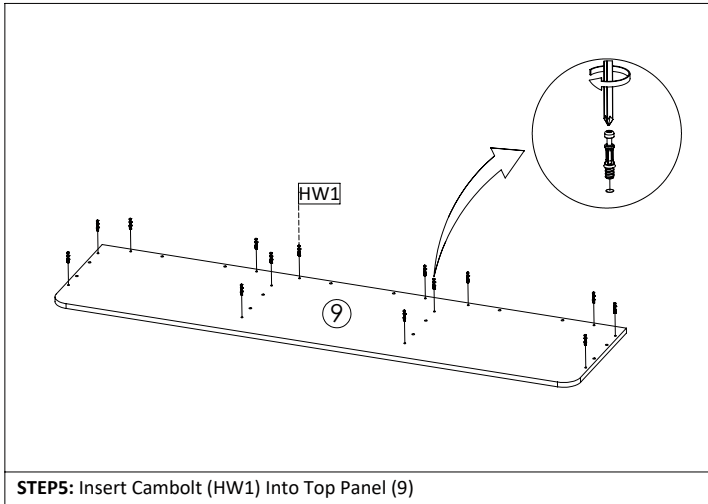


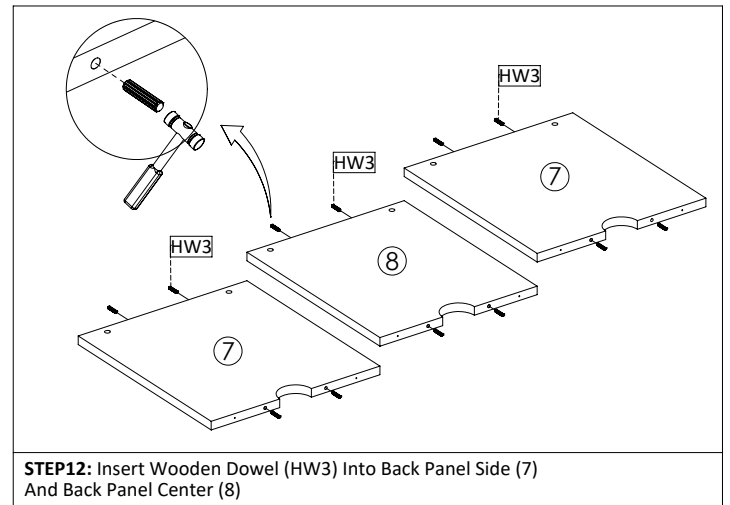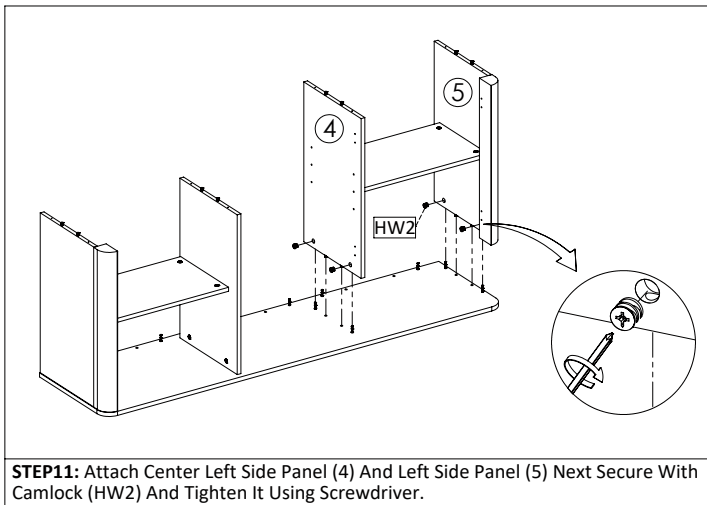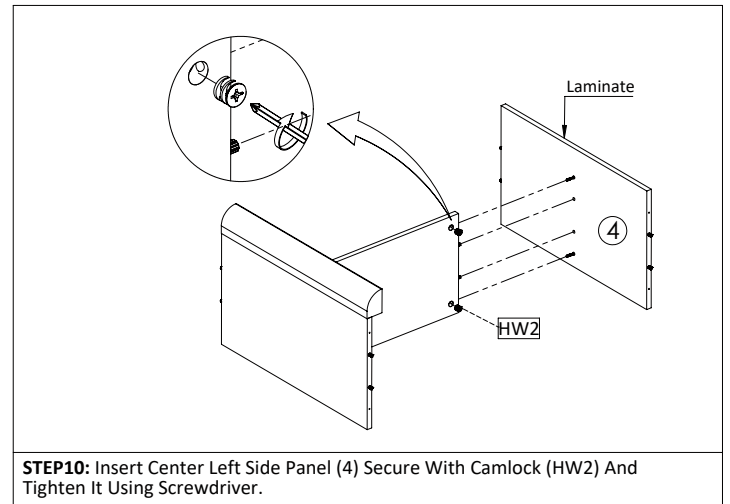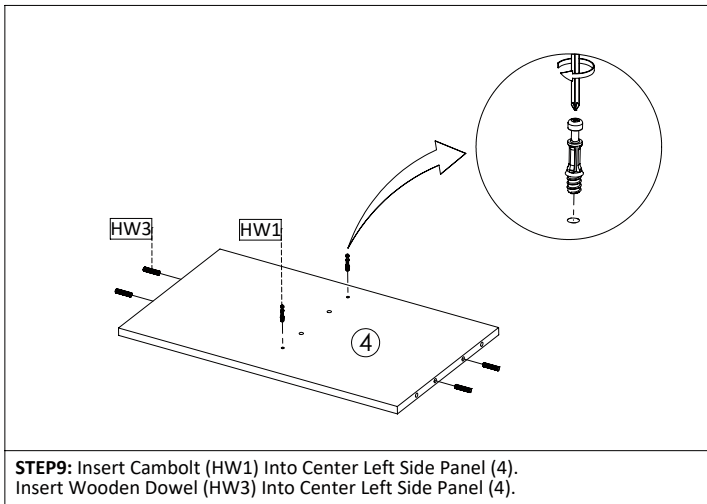

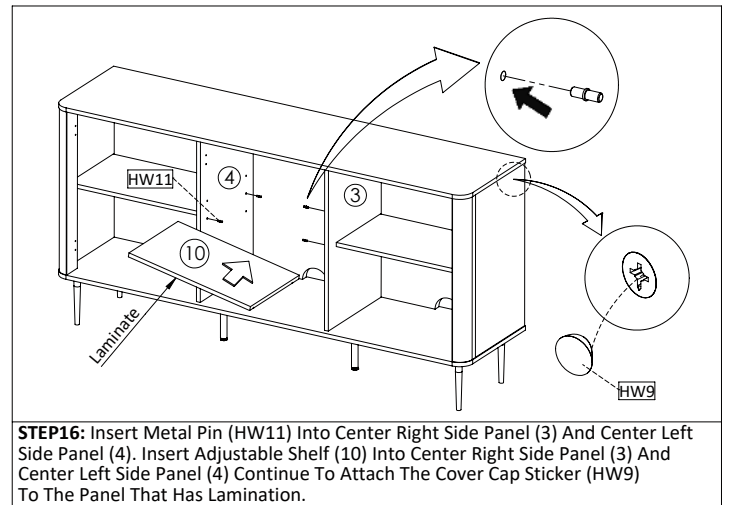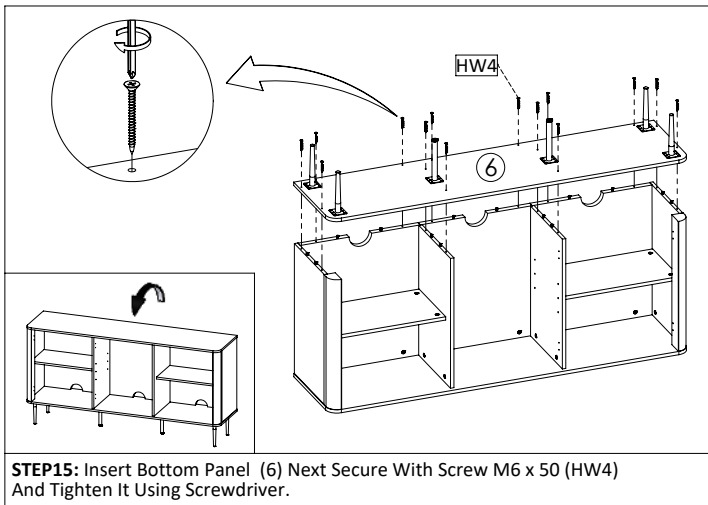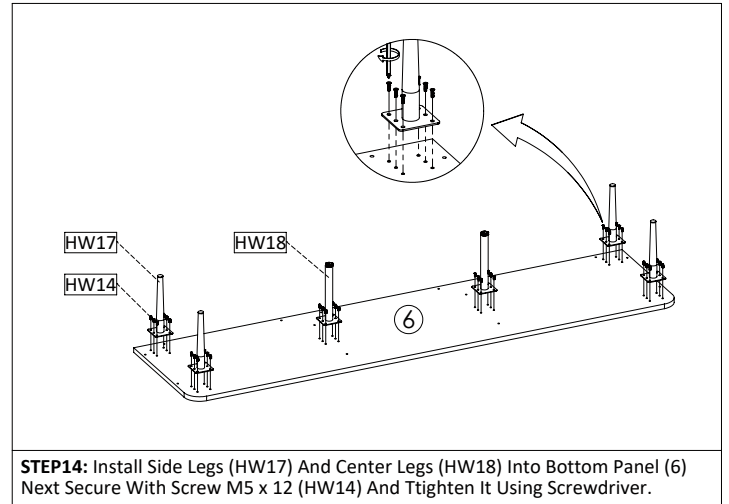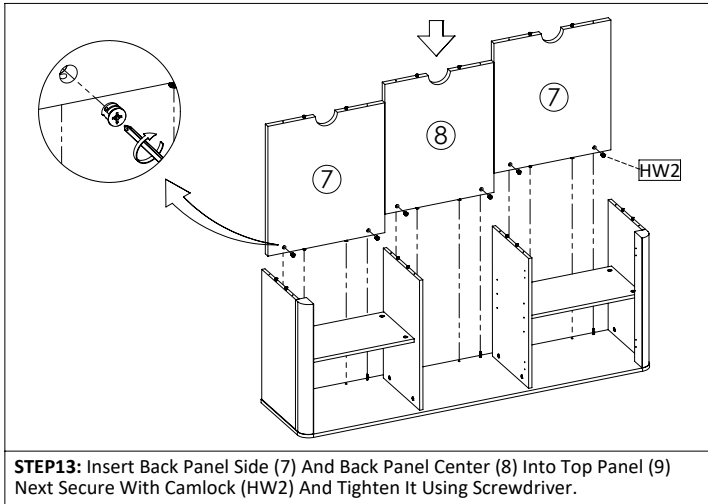


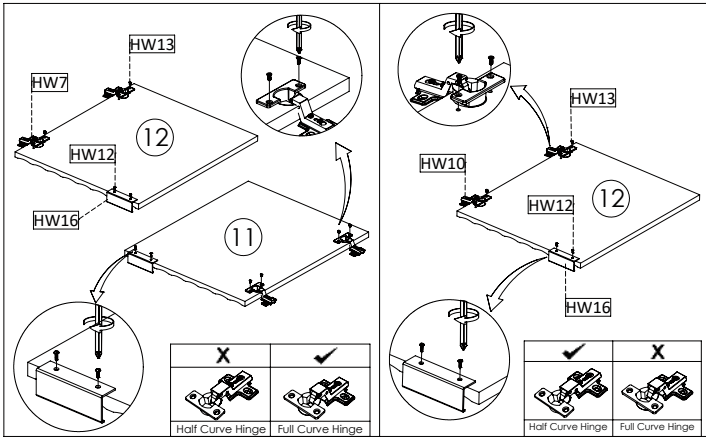

STEP17: Attach Full Curve Hinge (HW7) Into Right Door (11) And Left Door (12). Next Attach Half Curve Hinge (HW10) Into Left Door (12) Using M5x8.5 mm Screw (HW13) And Tighten It Using Screwdriver. Continue To Attach Handle (HW16) Into Right Door (11) And Left Door (12) Using M6x12 mm PH screw (HW12) And Tighten It Using Screwdriver.

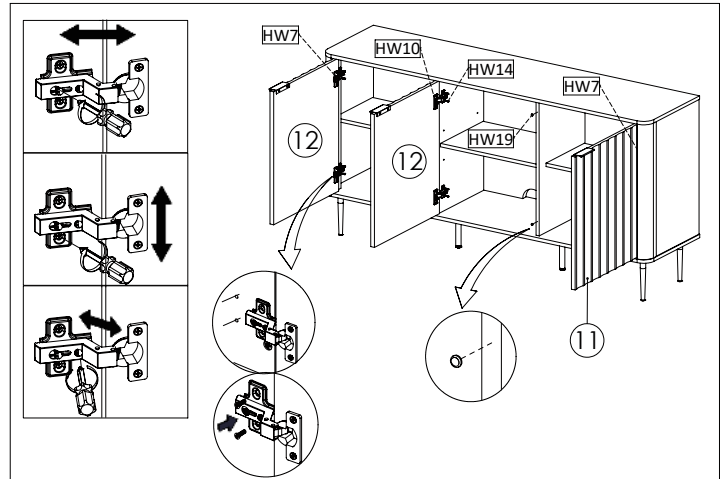

STEP18: Install Full Curve Hinge (HW7) And Half Curve Hinge (HW10) Into Position As Shown In Pictures Secure With Screw M5X12 mm (HW14) Continue Attach Bumpers (HW19) Into Center Right Side Panel (3) And Center Left Side Panel (4)

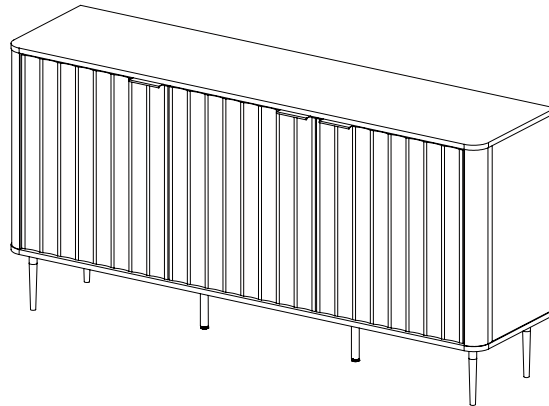

STEP19: Assembly Is Complete




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

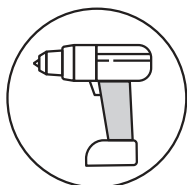

REQUIRED TOOL
8MM / 5/16" DRILL BIT

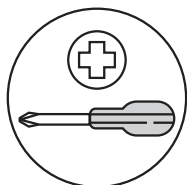


REQUIRED TOOL




Hardware (HW20/HW21) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW15	BRACKET		4
HW5	M6 × 15MM SCREW		4
HW8	M8 × 35MM PLUG		4
HW6	M10 × 50MM SCREW		4
HW15	STRAP		2

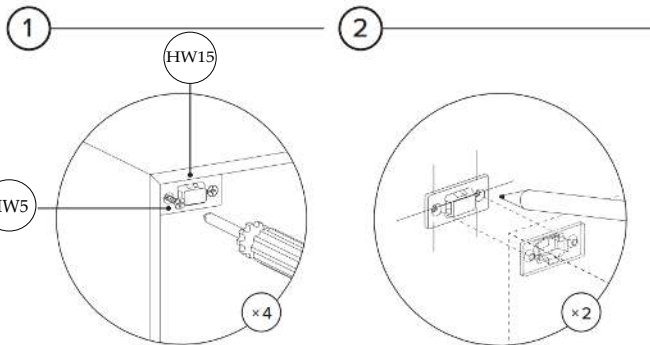


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

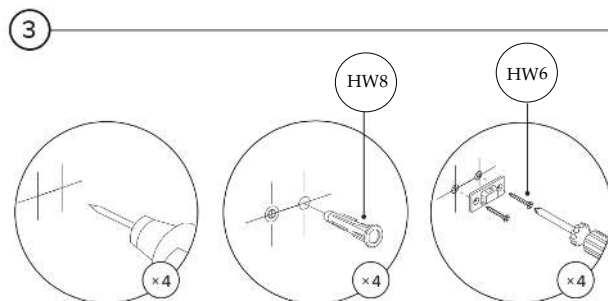

Drill holes in wall using 8mm / 5/16" drill bit.

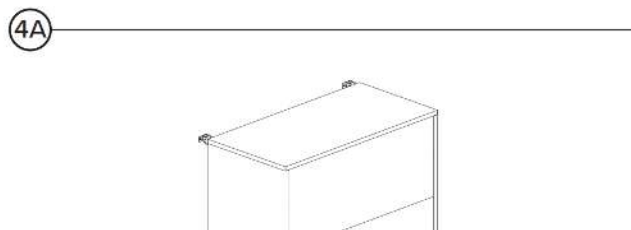

Align brackets on unit with brackets on wall.

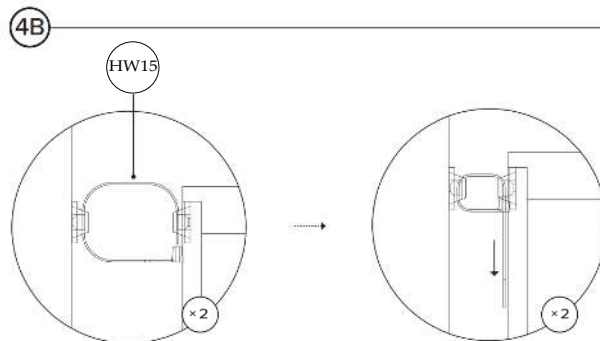

Pull strap down until it snap-locks.