

Twin Over Futon Metal Bed

WF197334AAB


WF197335AAB

WF197334AAE

WF197334AAK

WF197335AAK



WF197335AAE

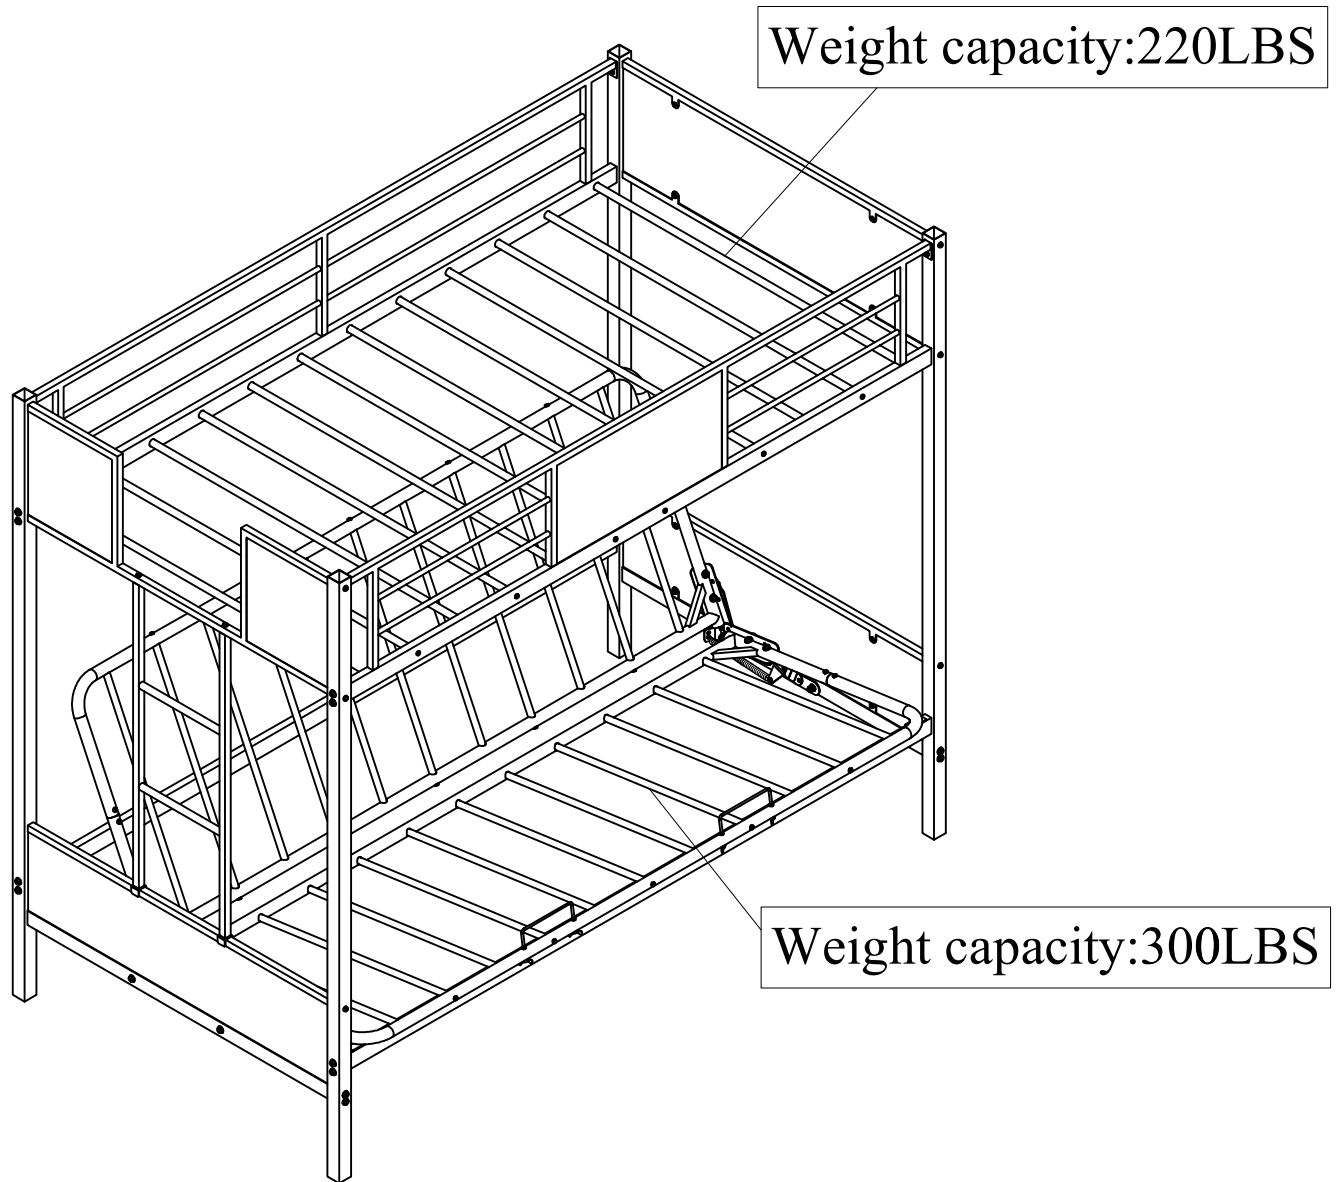

















Product size: 77.56"x54.33"x66.53"

Mattress size: 38.98"x74.8"


Mattress size: 53.94"x74.8"

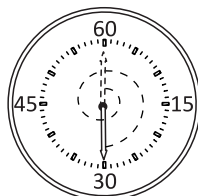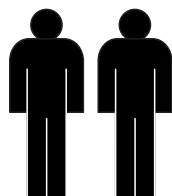


90mins

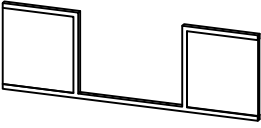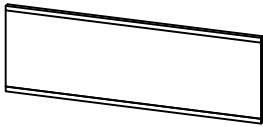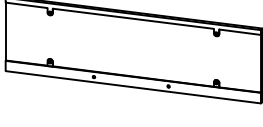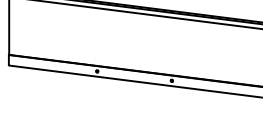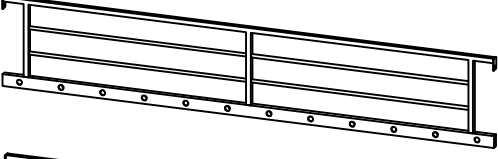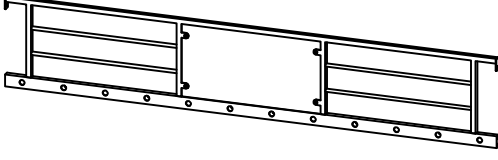	1Pc	①
	1Pc	②
	1Pc	③
	1Pc	④
	1Pc	⑤
	1Pc	⑥
	1Pc	⑦
	4Pcs	⑧
	2Pcs	⑨
	2Pcs	⑩
	1Pc	⑪
	1Pc	⑫
	6Pcs	⑬
	6Pcs	⑭
	12Pcs	⑮
	10Pcs	⑯

		2Pcs	⑰
		4Pcs	⑱
		1Pc	⑲ R
		1Pc	⑲ L

	M6x16mm	12Pcs	A
	M6x24mm	32Pcs	B
	M6x34mm	2Pcs	C
	M6x59mm	12Pcs	D
	M8x60mm	24Pcs	E
	M8x45mm	4Pcs	F
	M8x50mm	8Pcs	G
	M8	12Pcs	H
	M6	4Pcs	I
	Ø17	40Pcs	J
	Ø17	8Pcs	K
	Ø12.5	12Pcs	L
	Ø12	14Pcs	M
	(S13)	1Pc	N
	(S4)	1Pc	O
	(S5)	1Pc	P

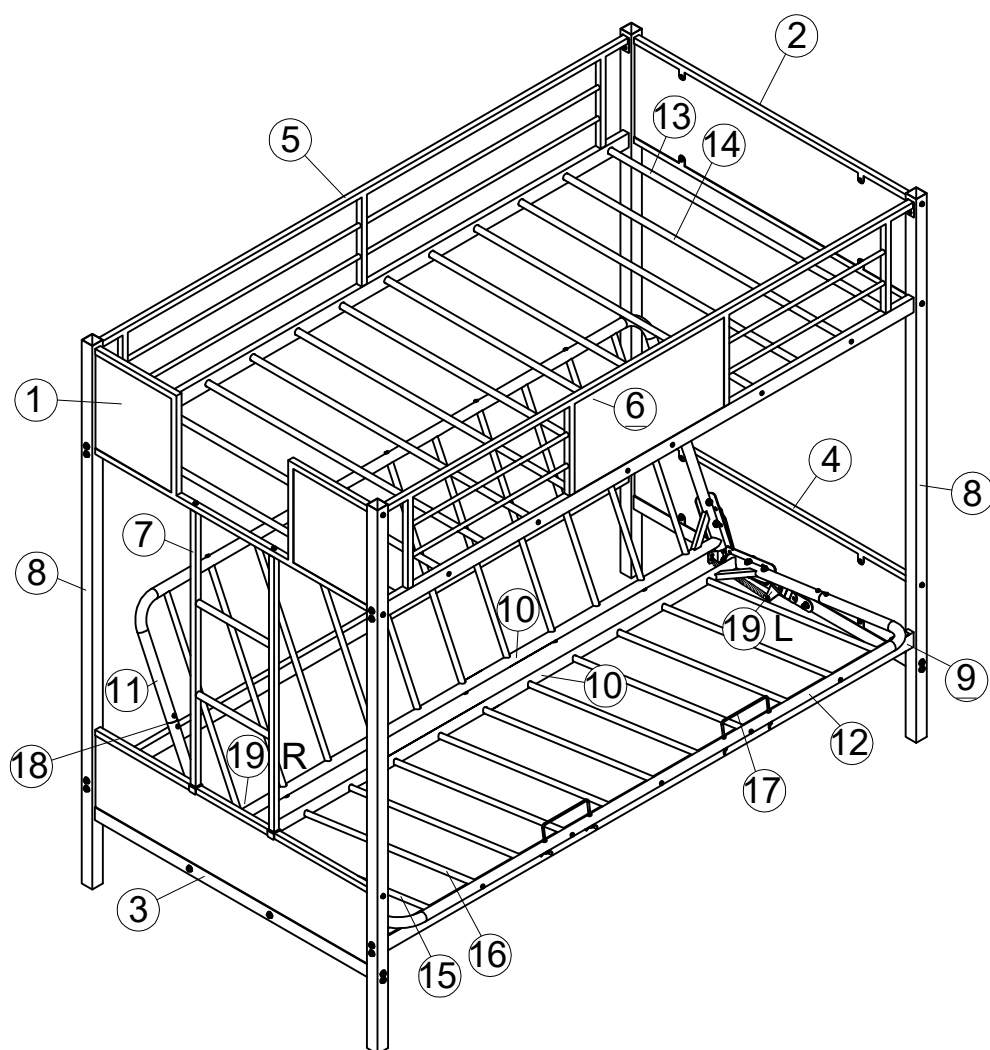


Check all the components & screws before assembly. Please don't hesitate to contact us, if the package you received is missing parts or screws.


Recommendation: **ONLY** clean the bed frame with a dry tissue.

Step 1


Please don't tighten all screws too much.

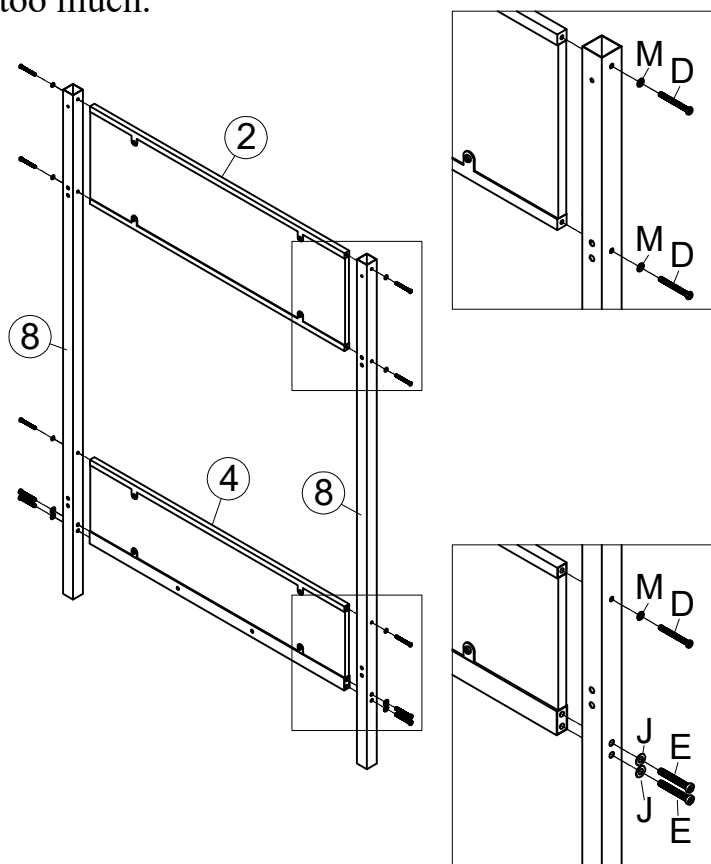



Step 2

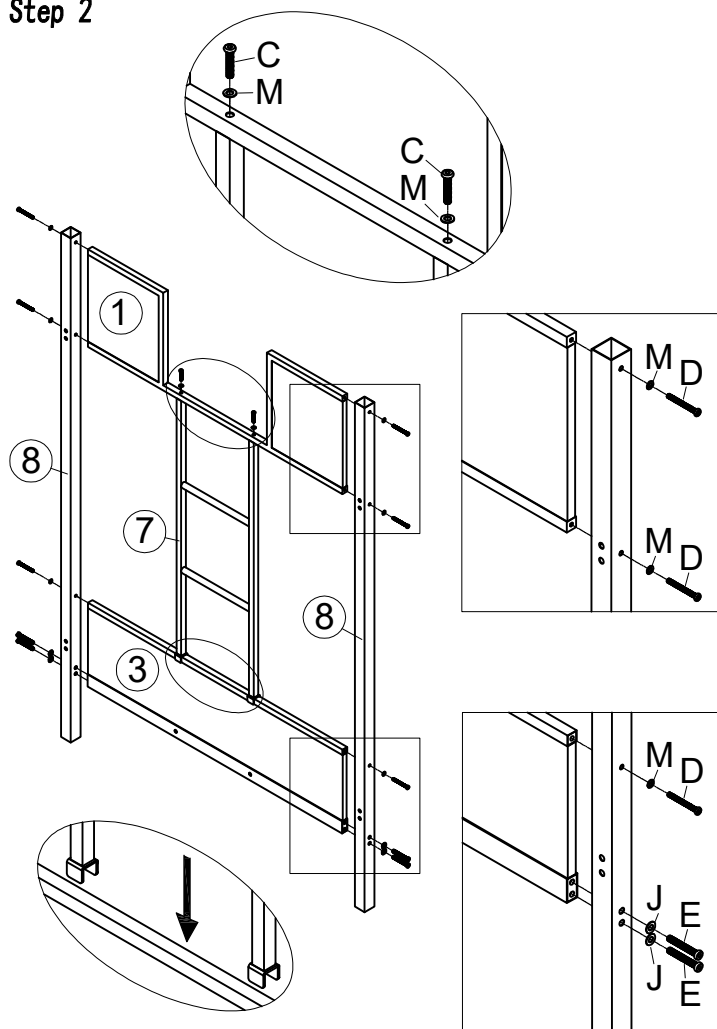



Step 3

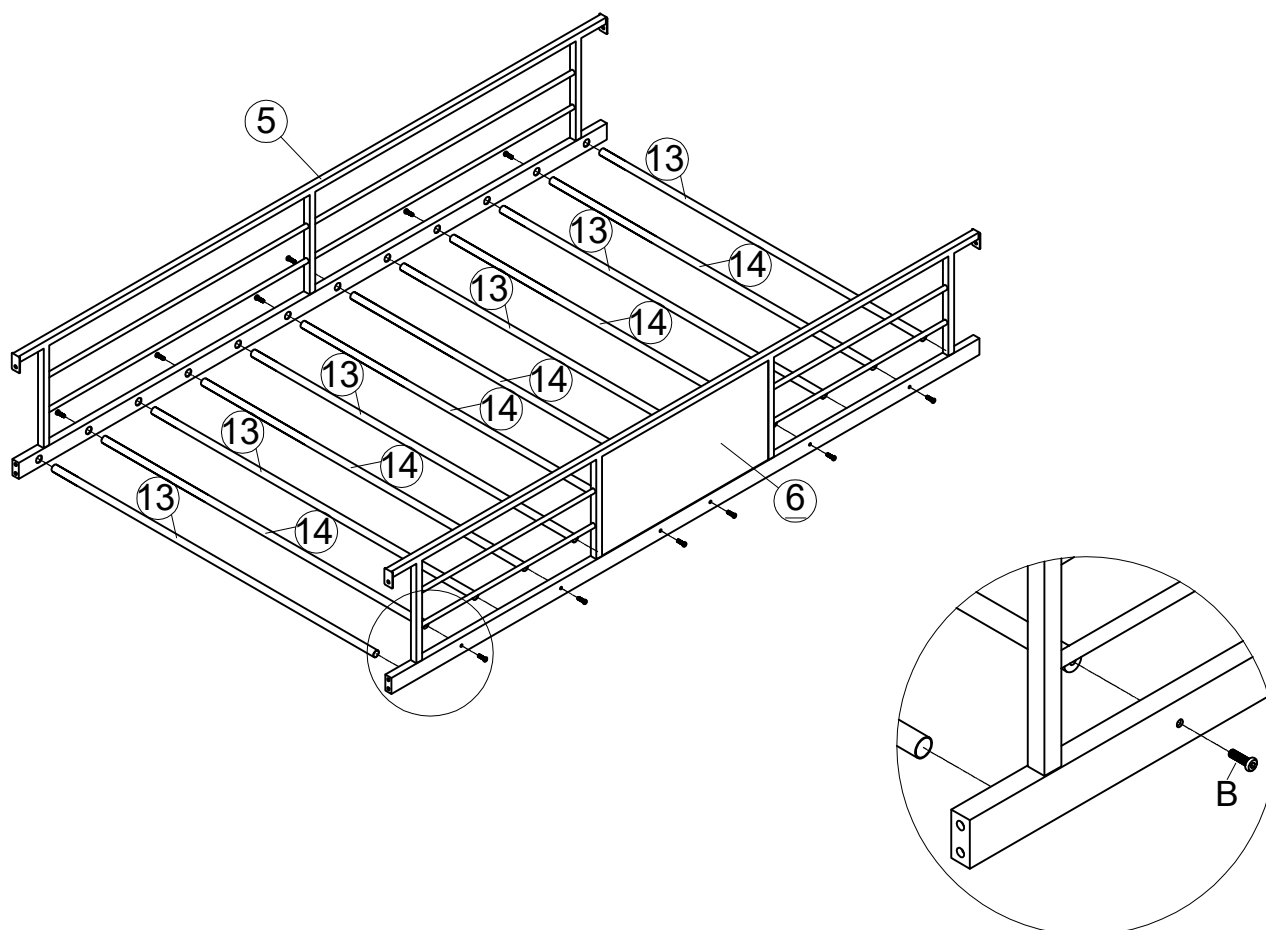


Step 4

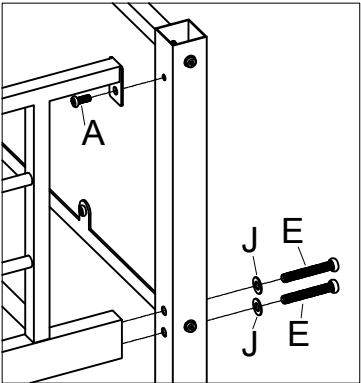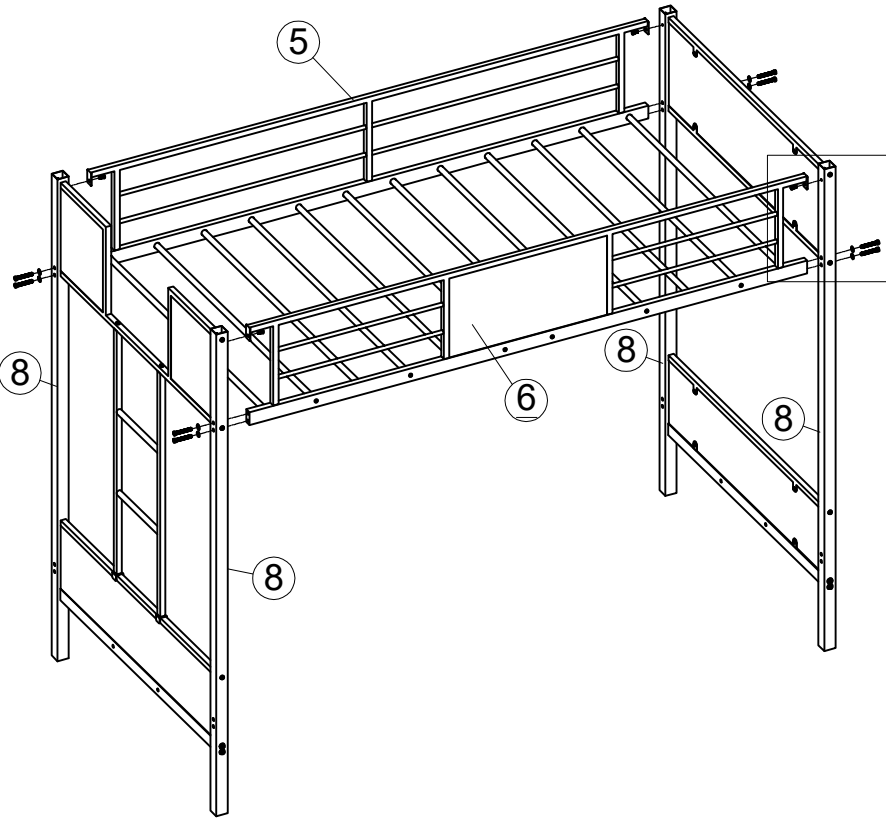


Step 5

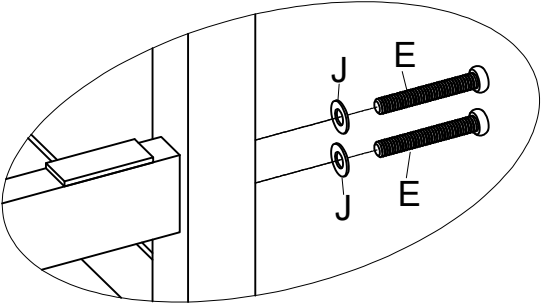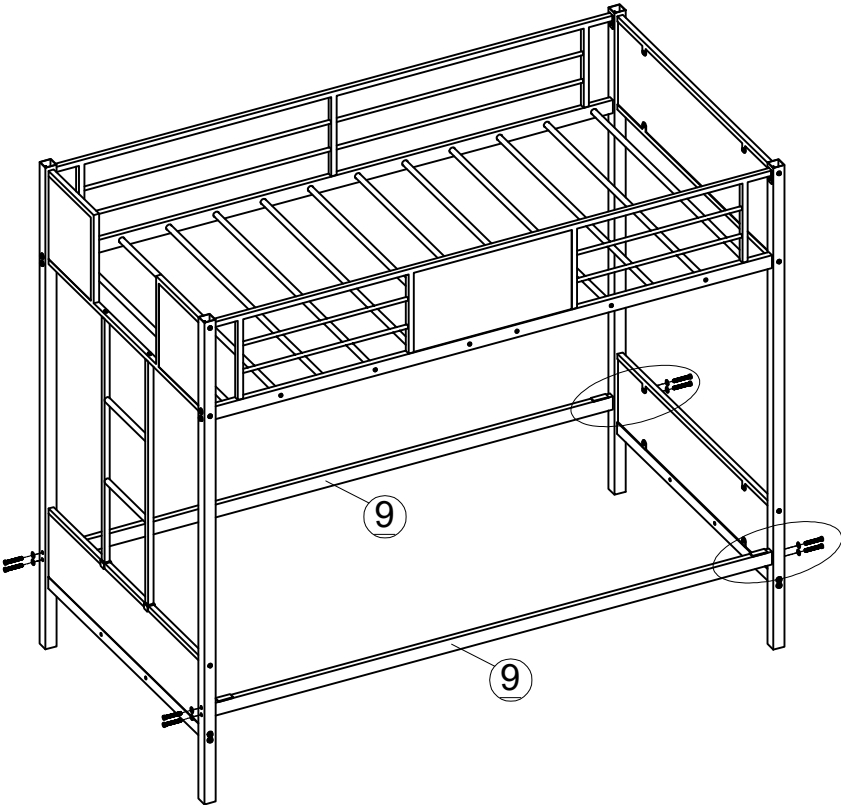



Step 6

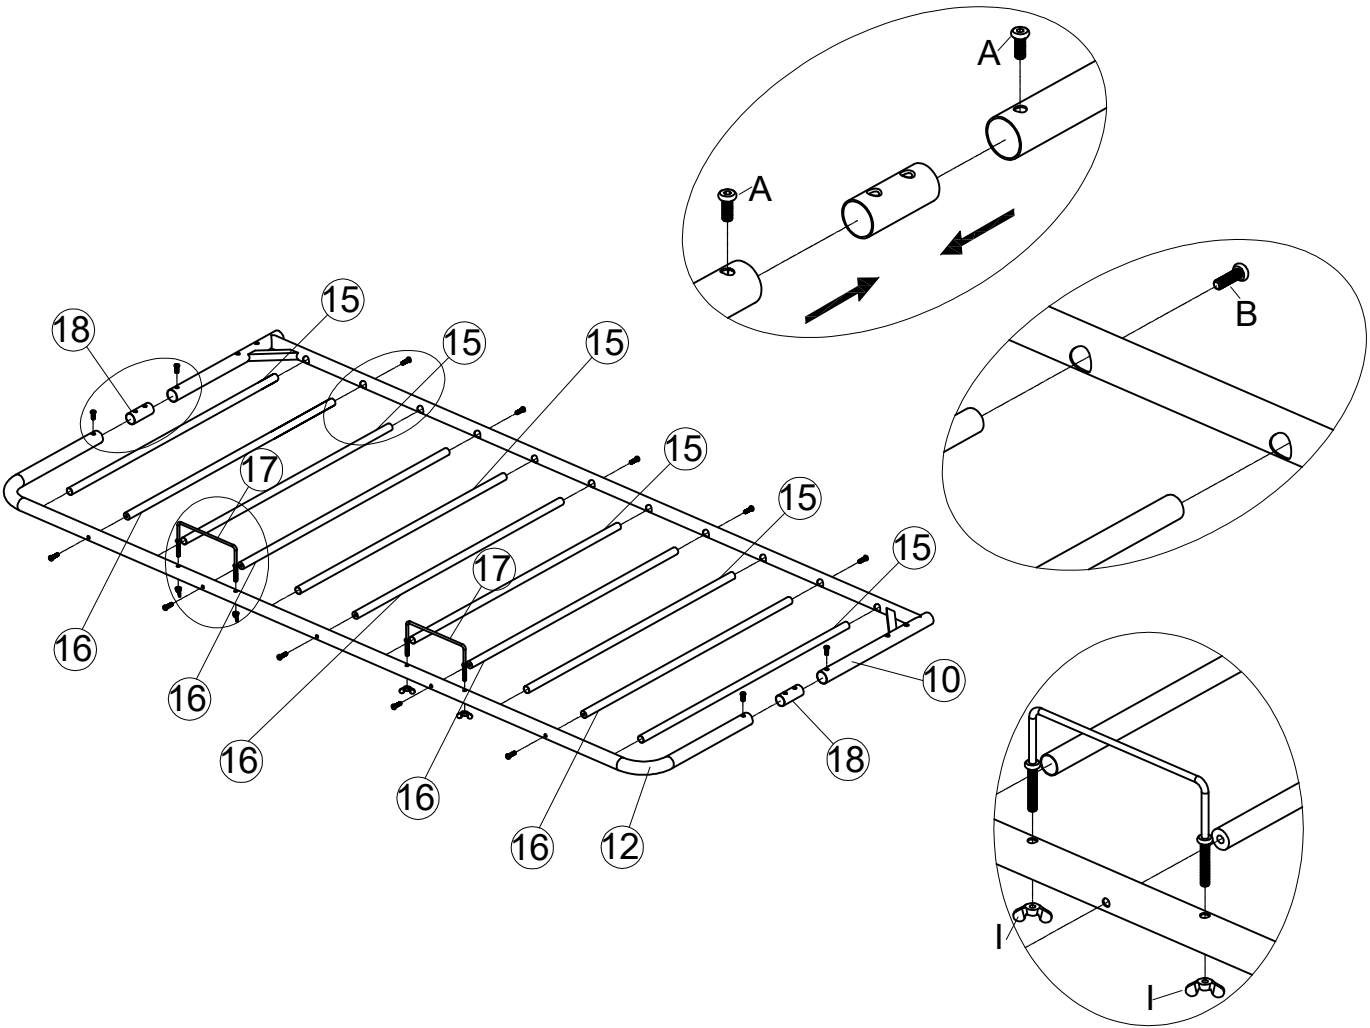



Step 7

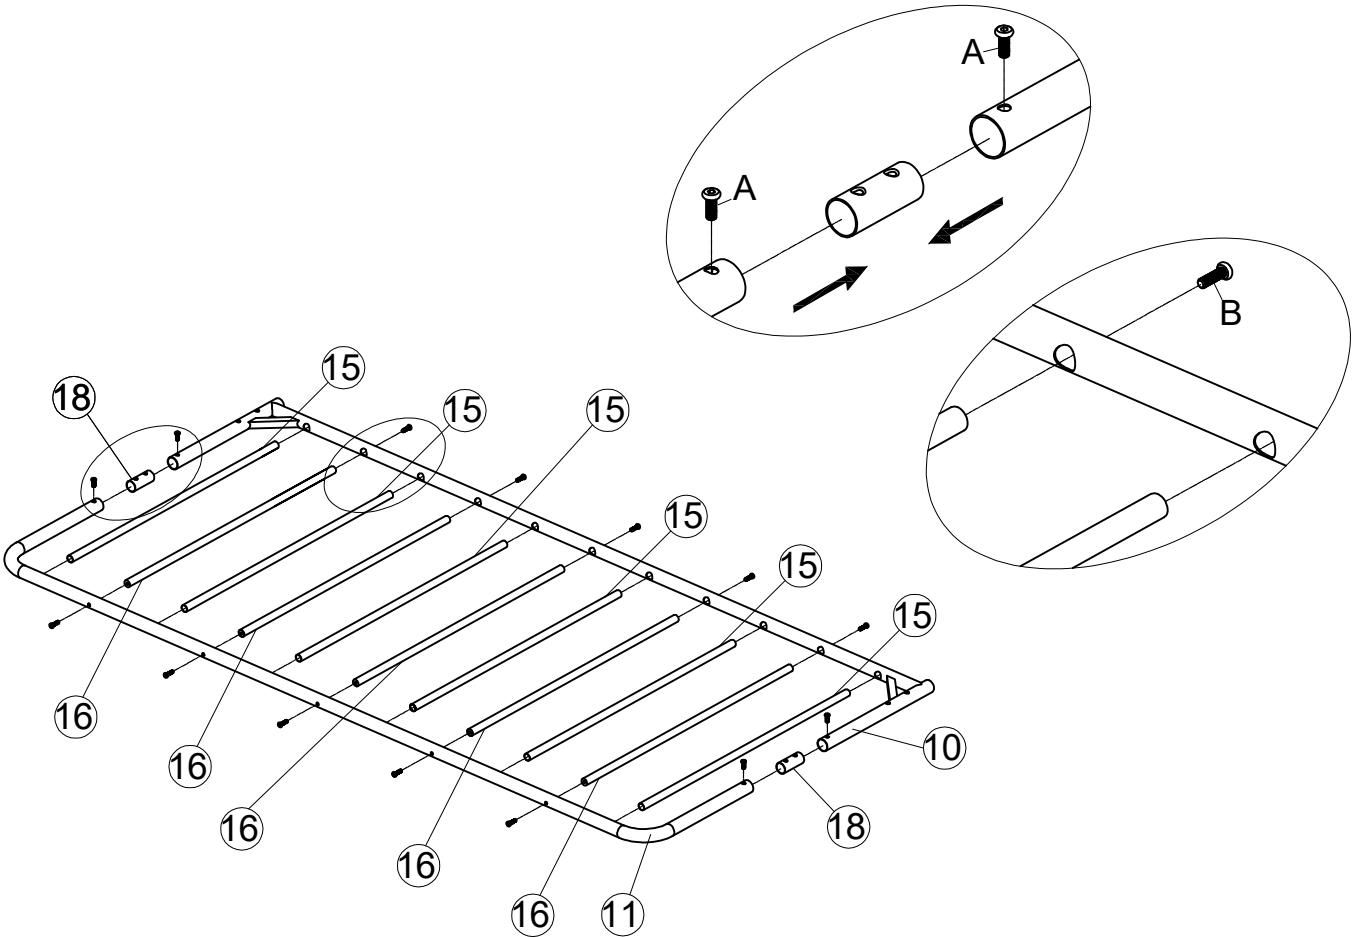

Step 8

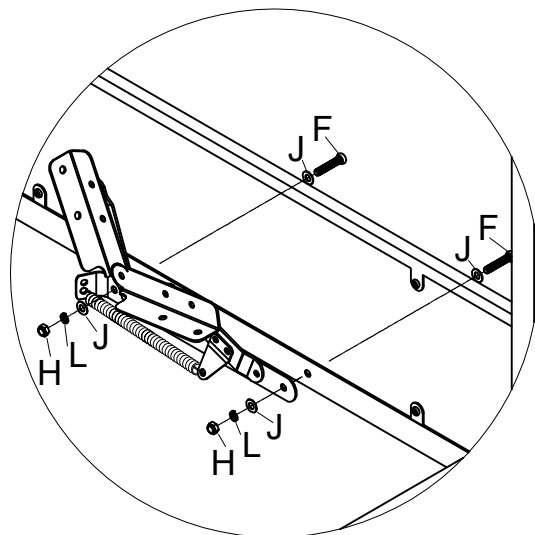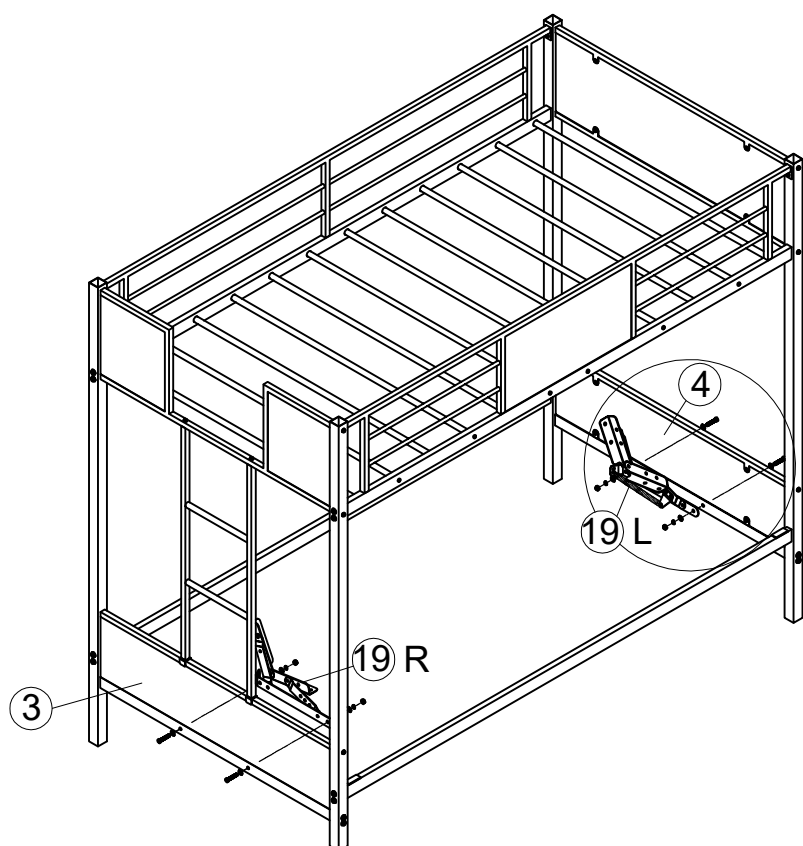


Step 9

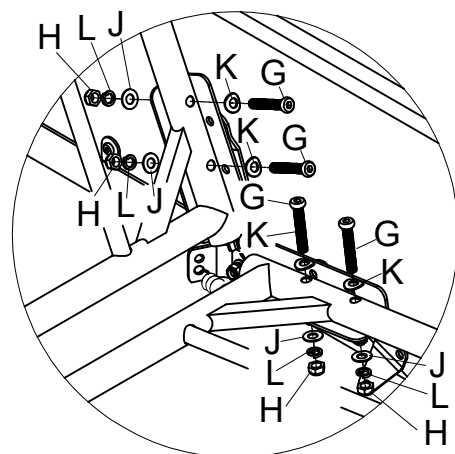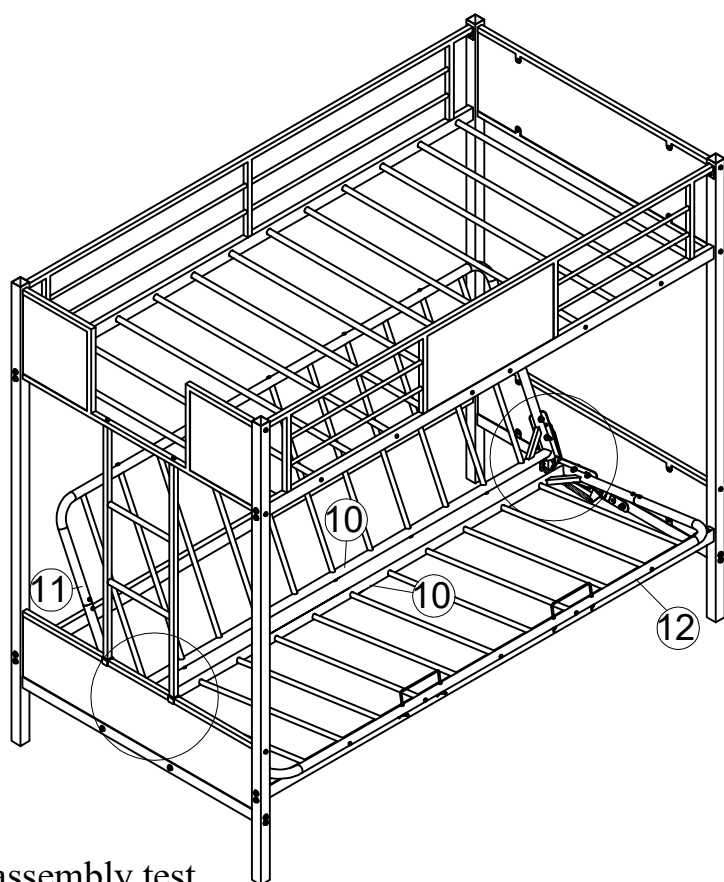

After the assembly test
is completely finished,
tighten them one by one please.

Step 10

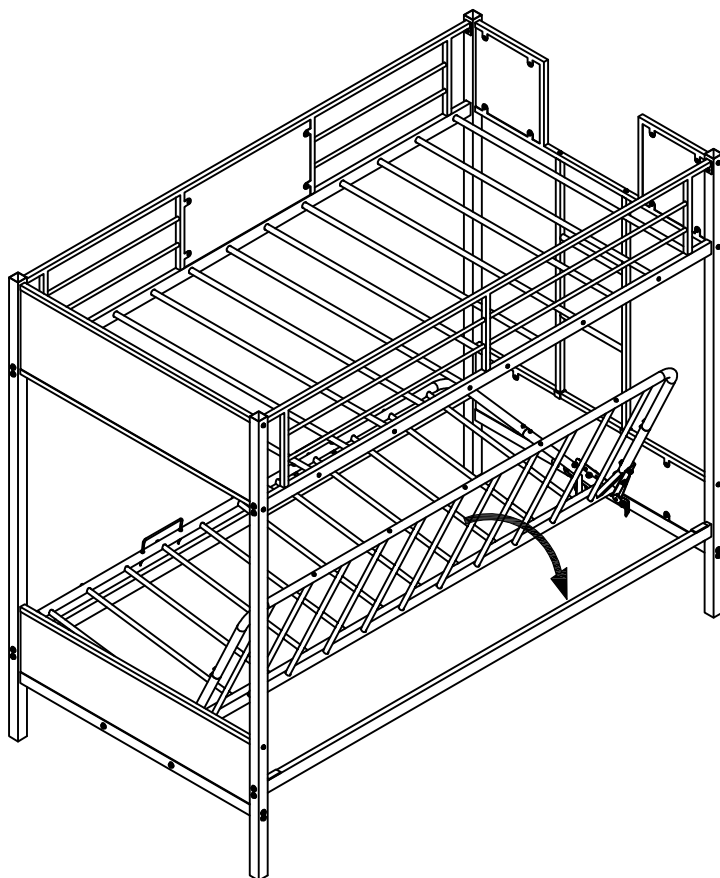

Step 11

