


































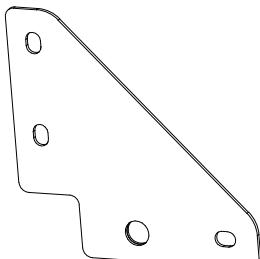
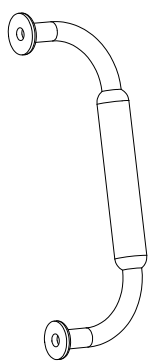


Installation video

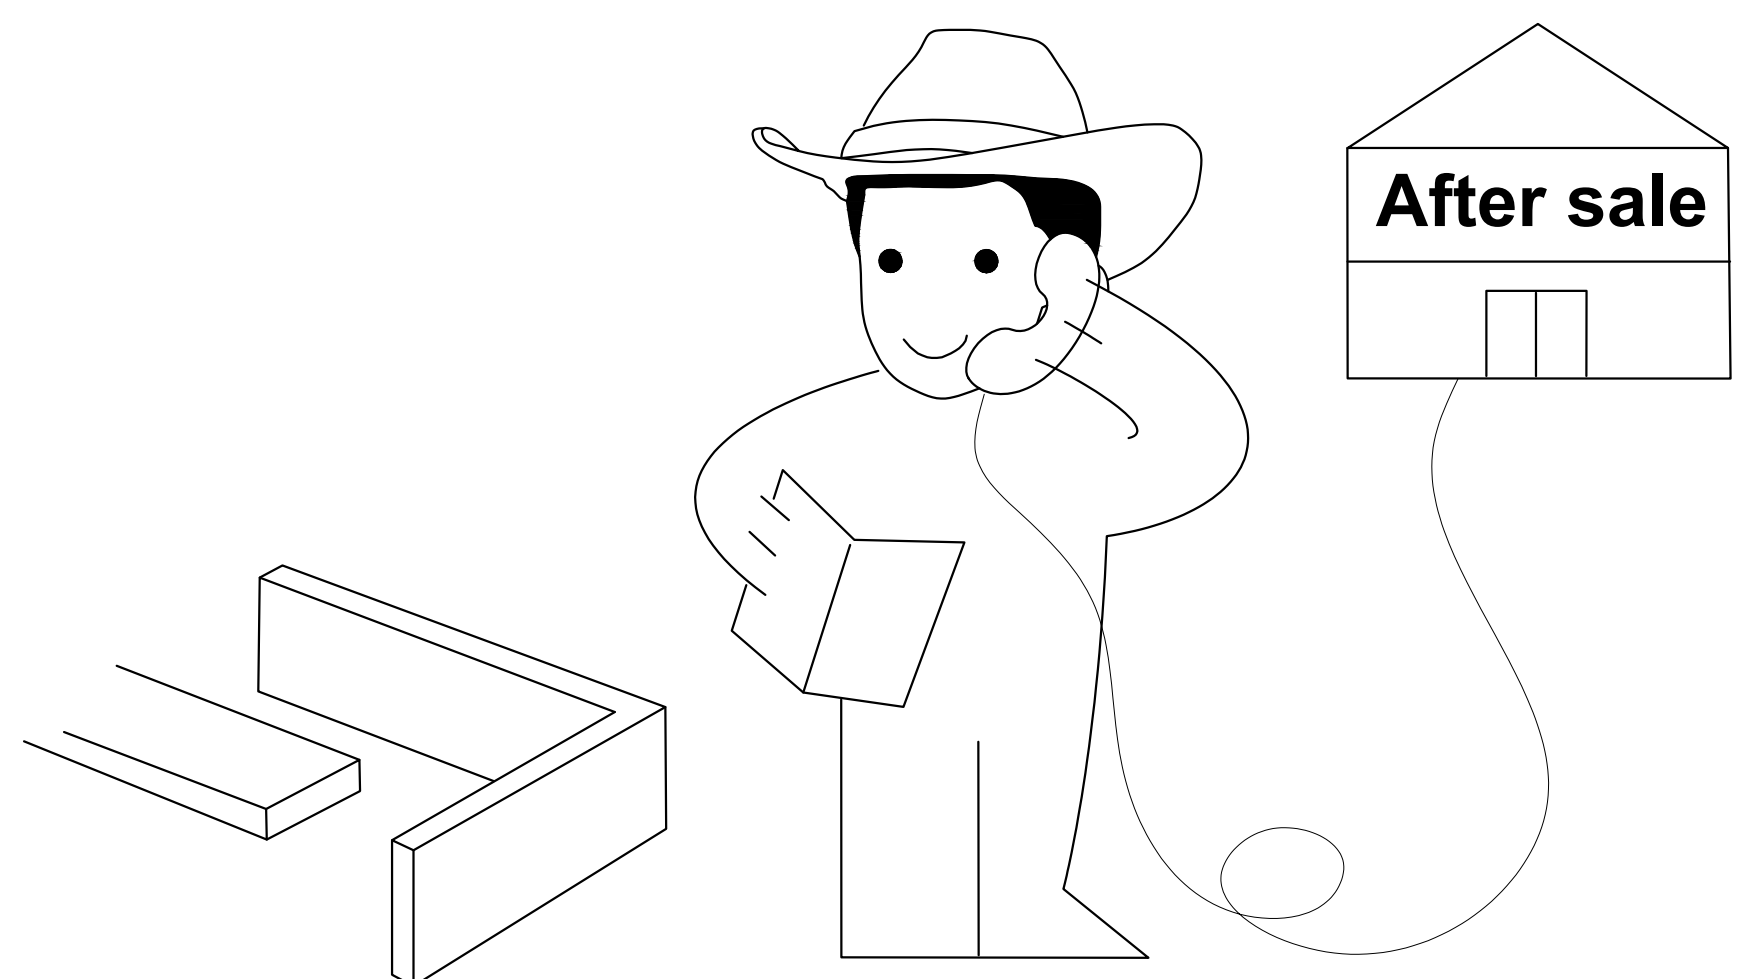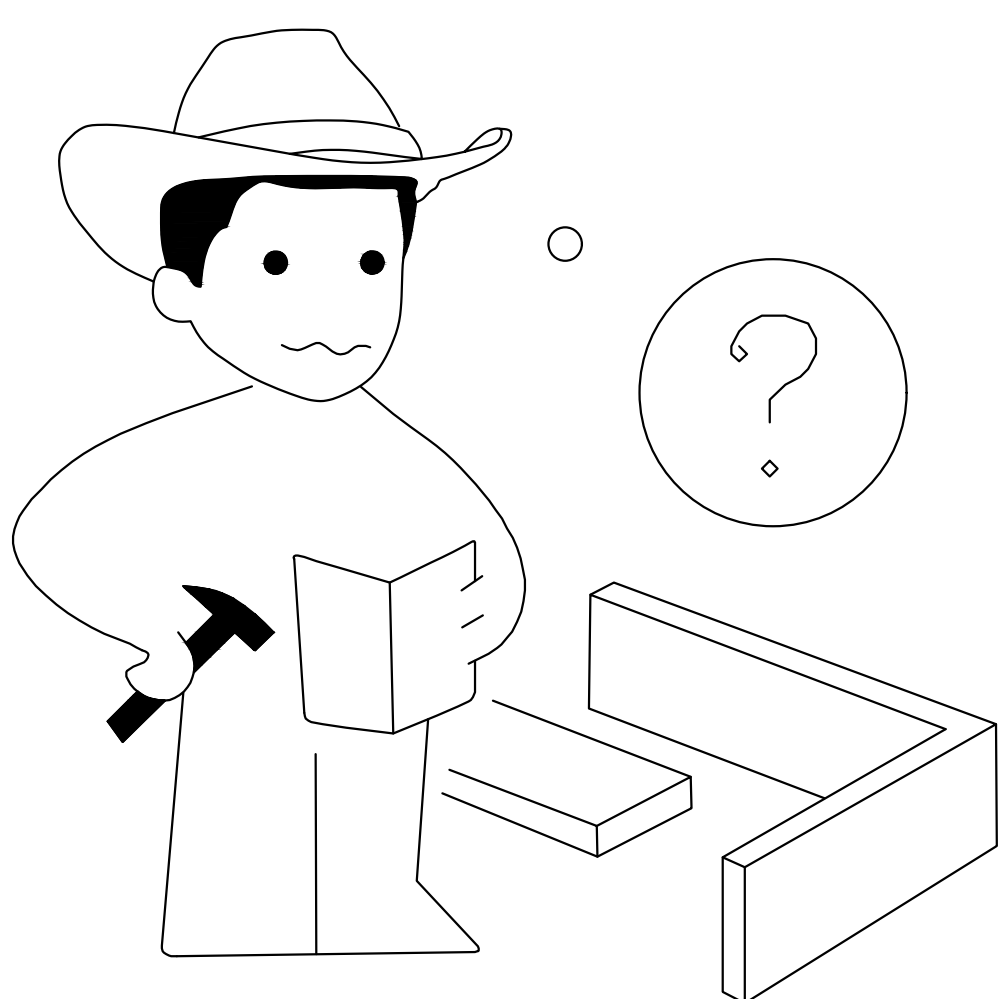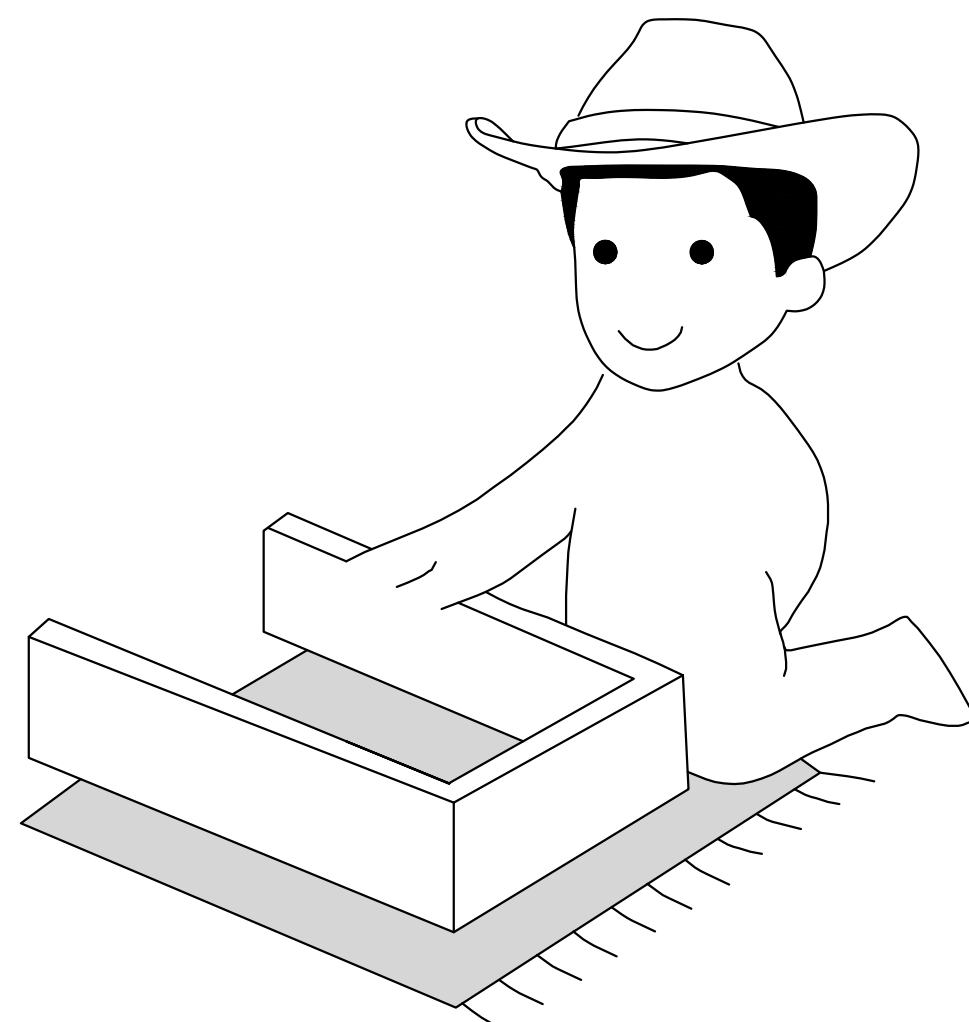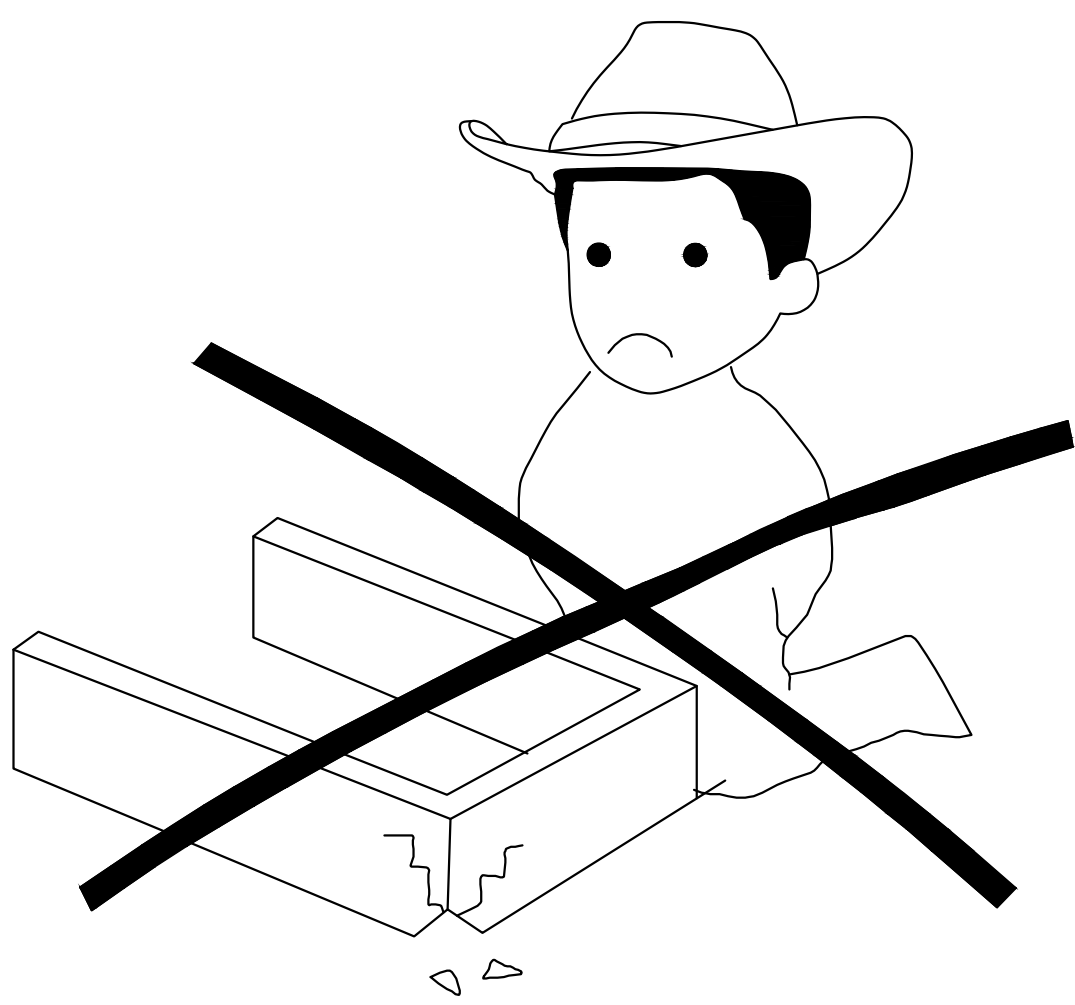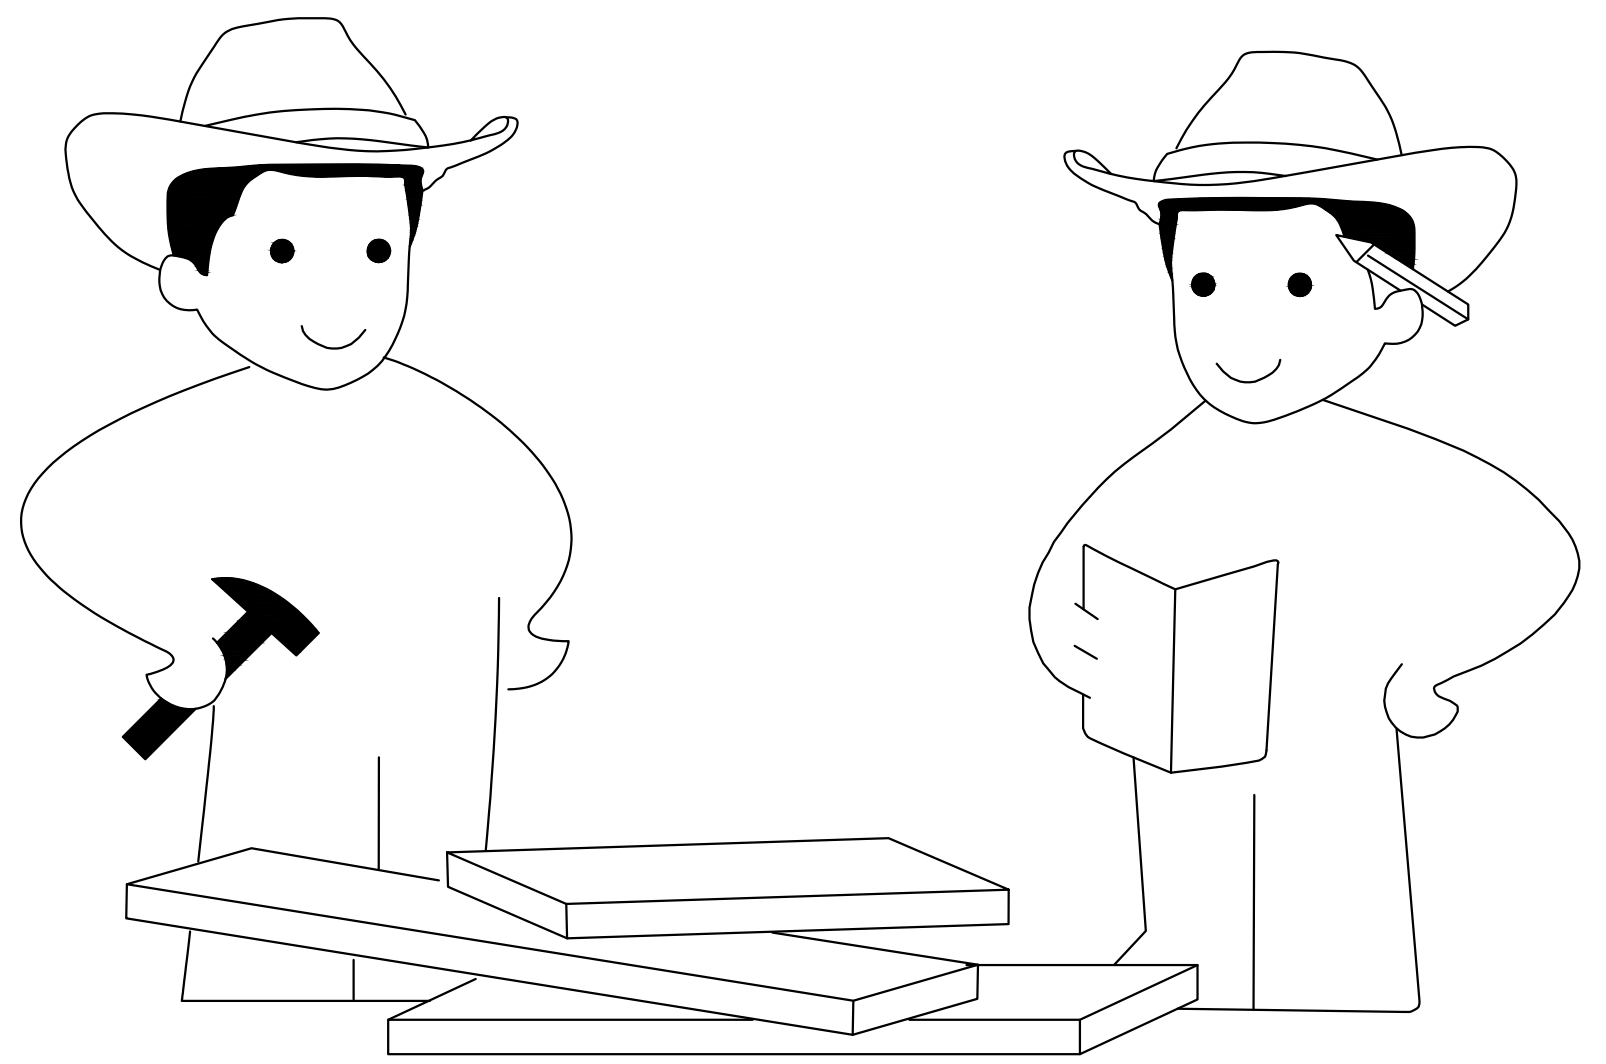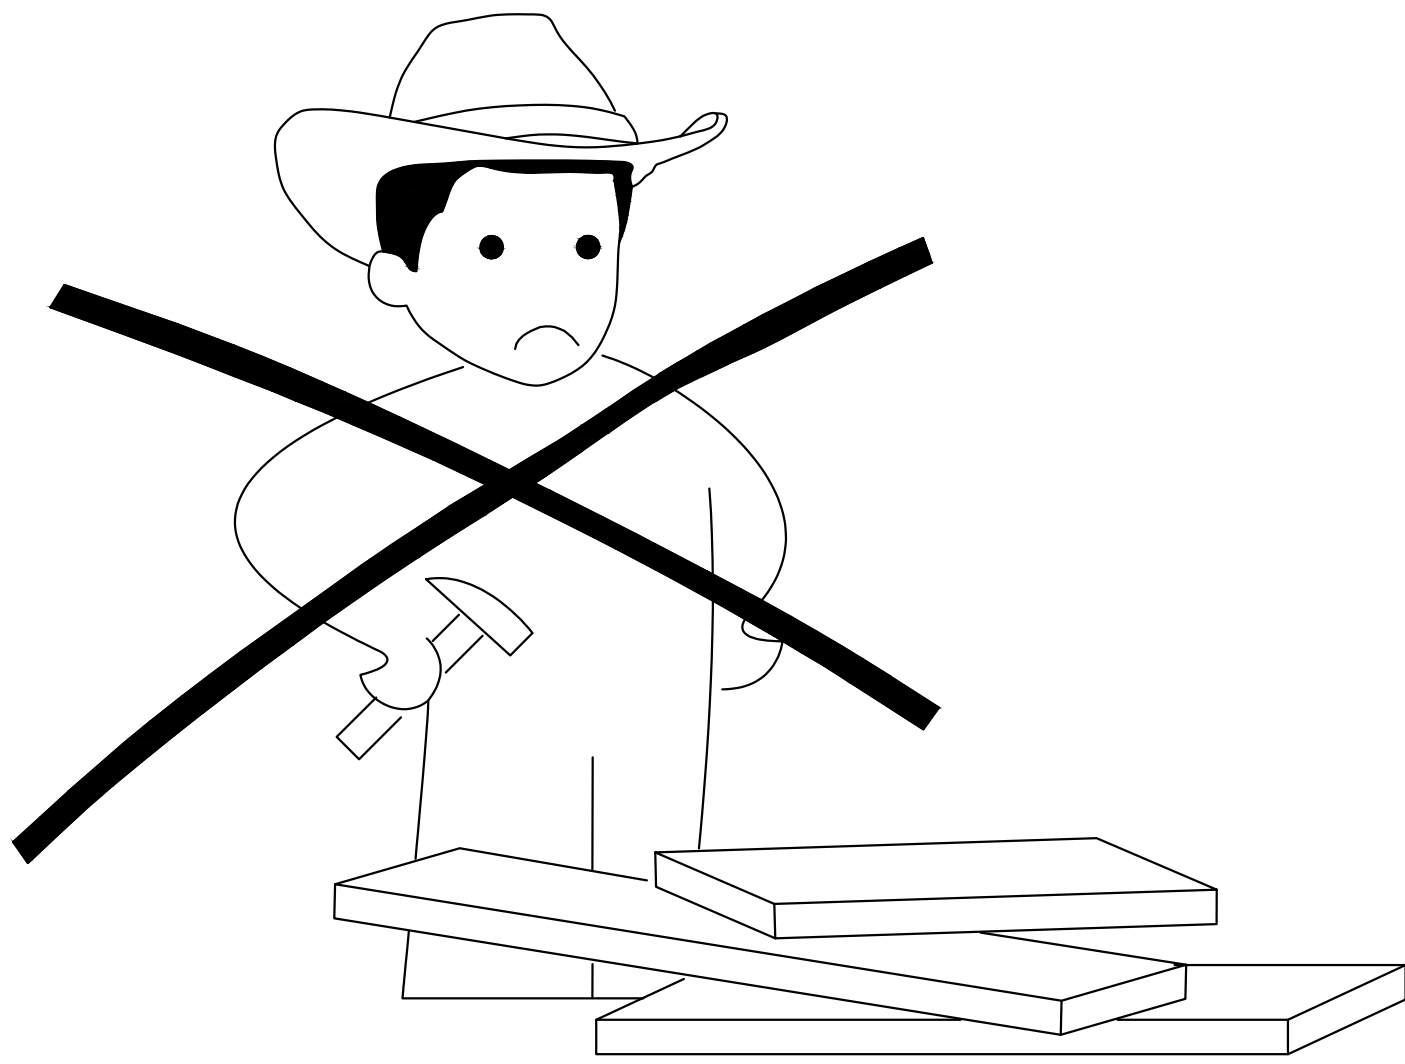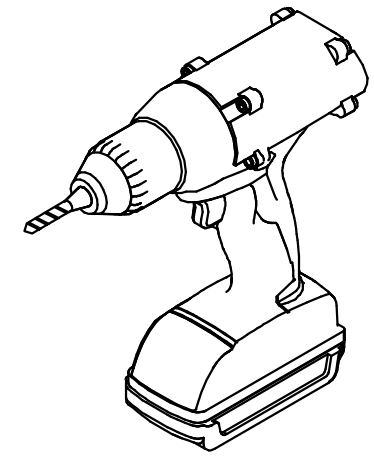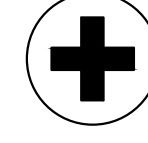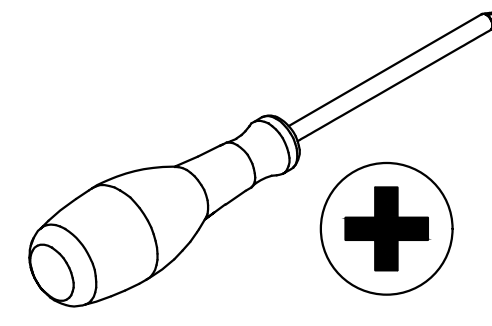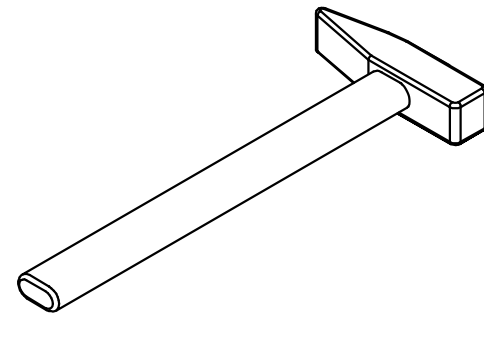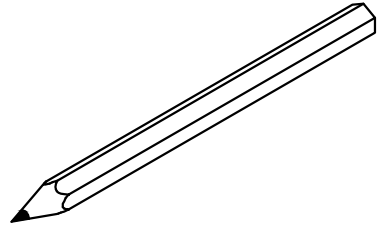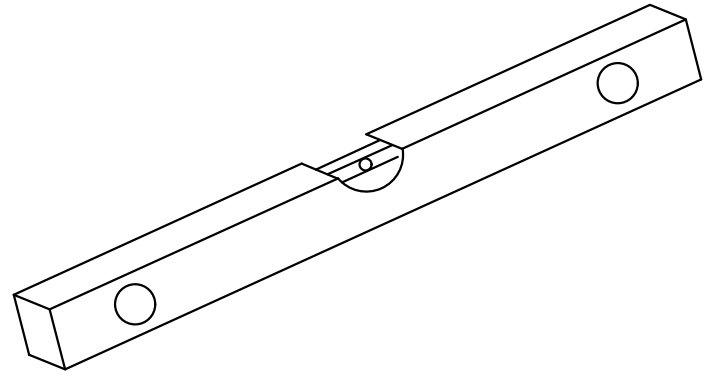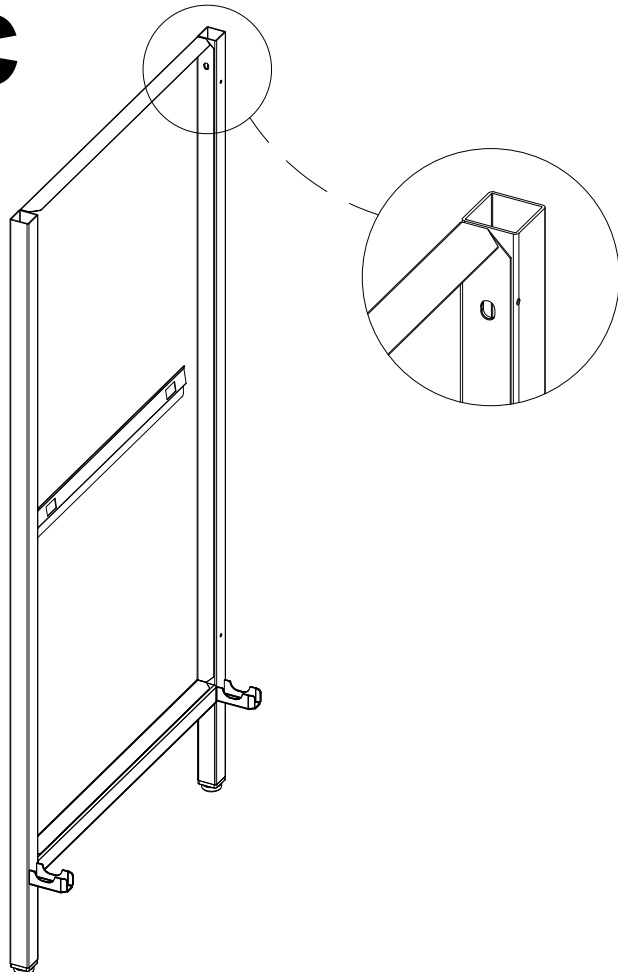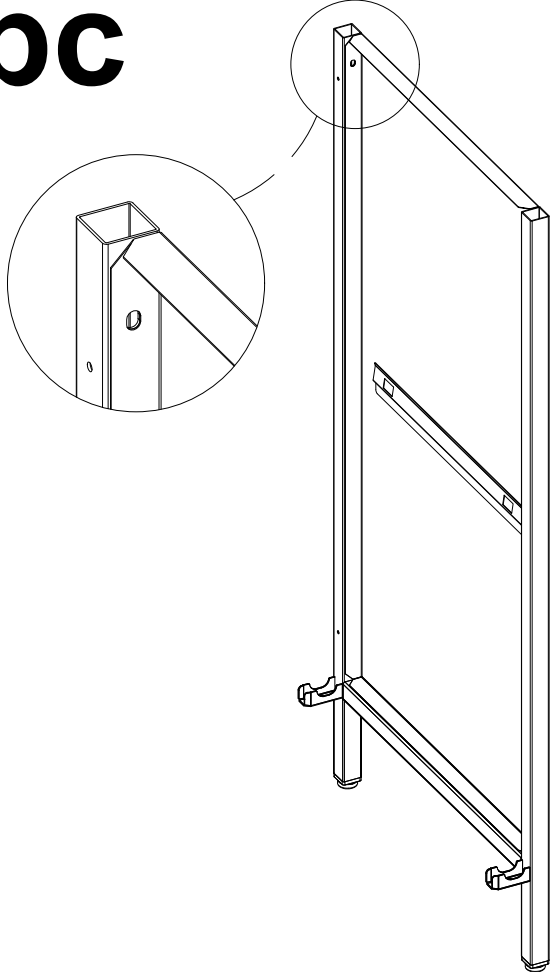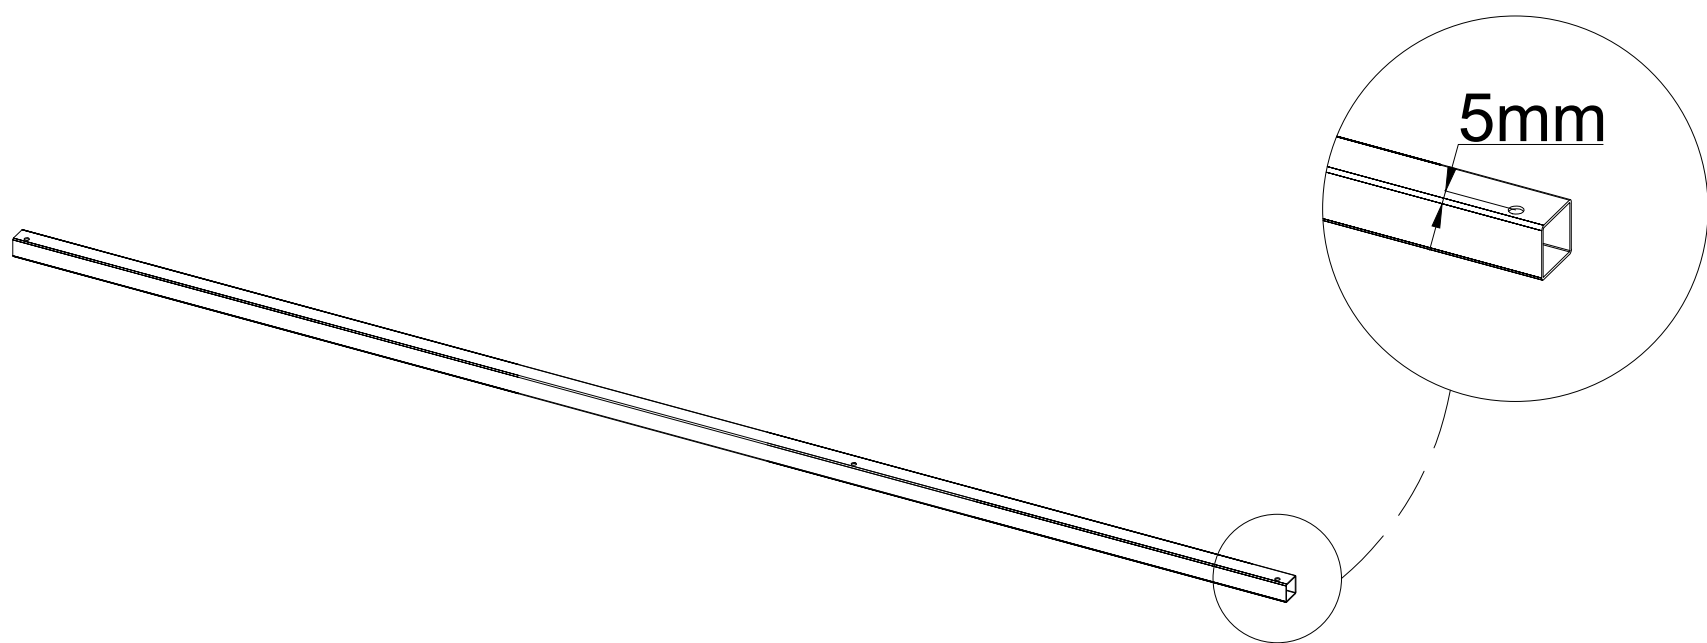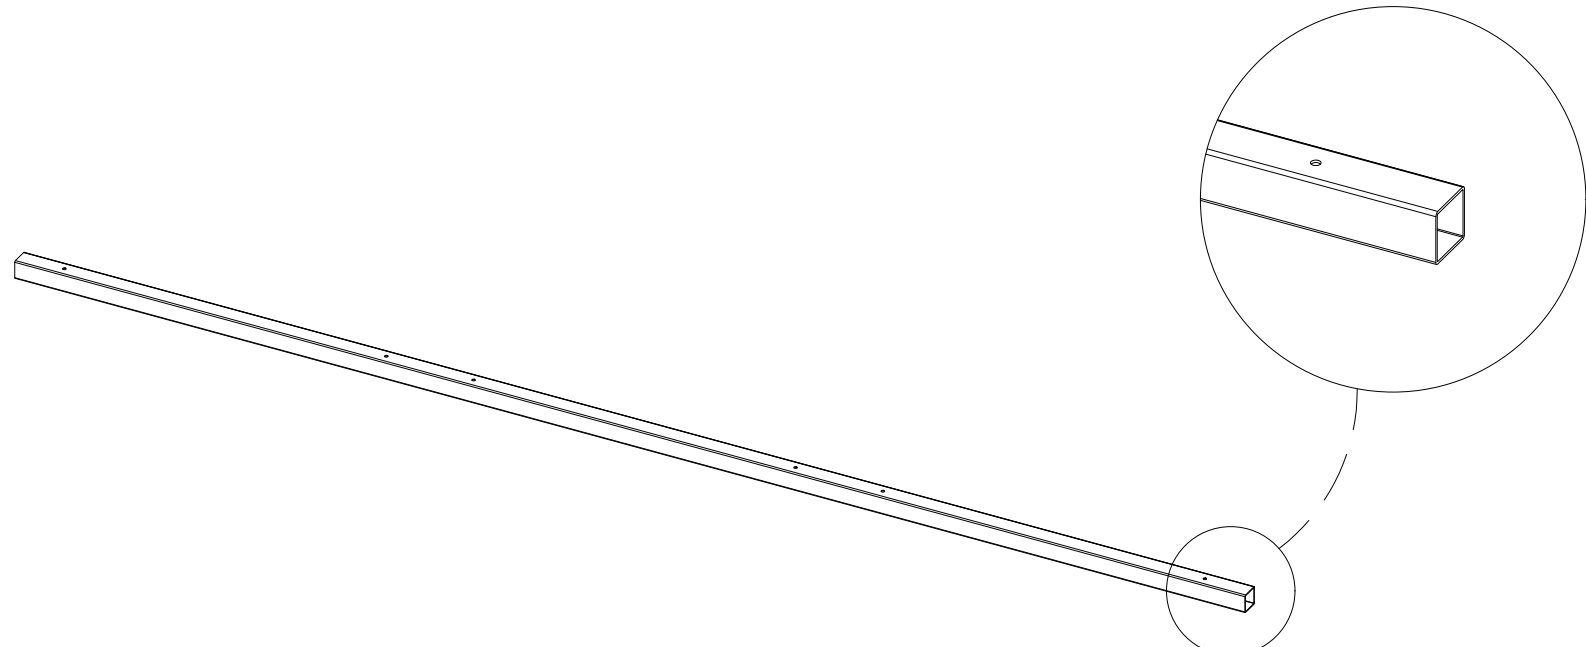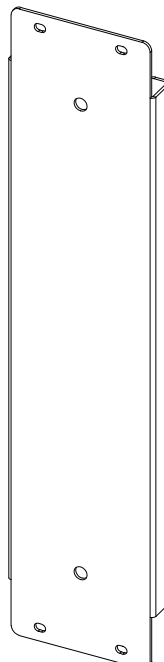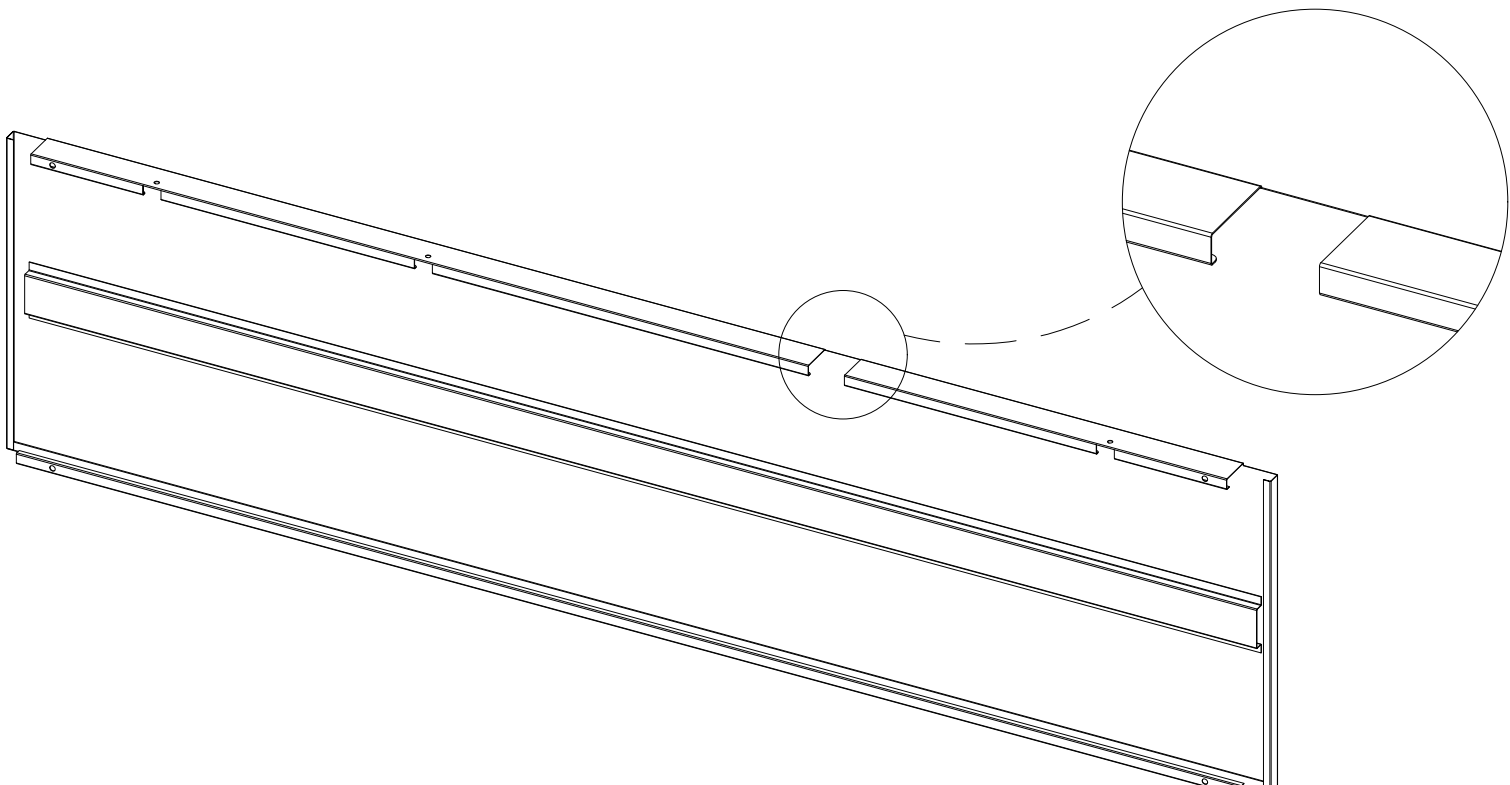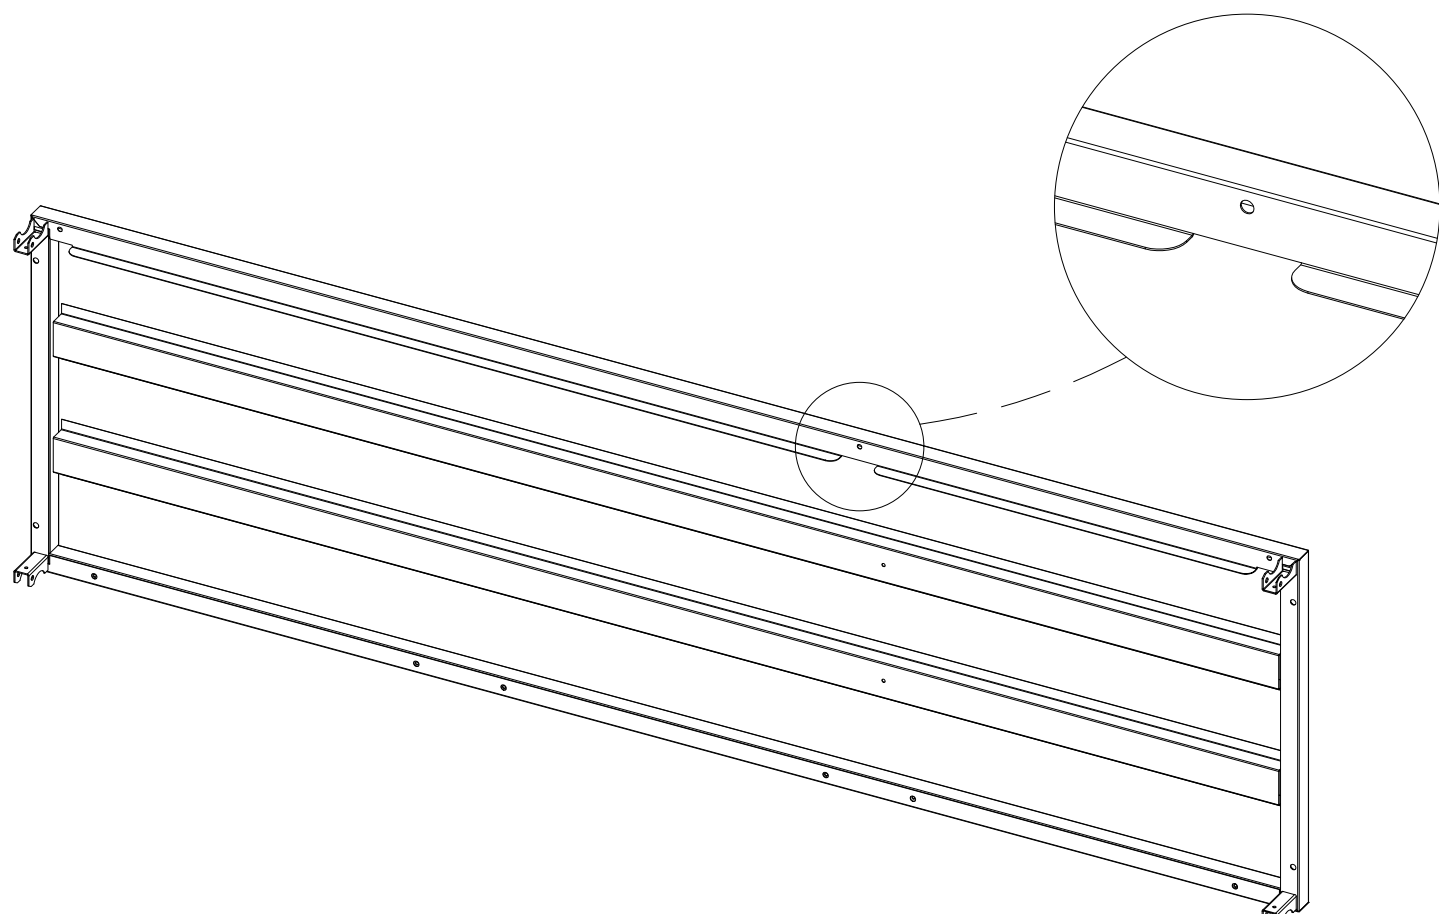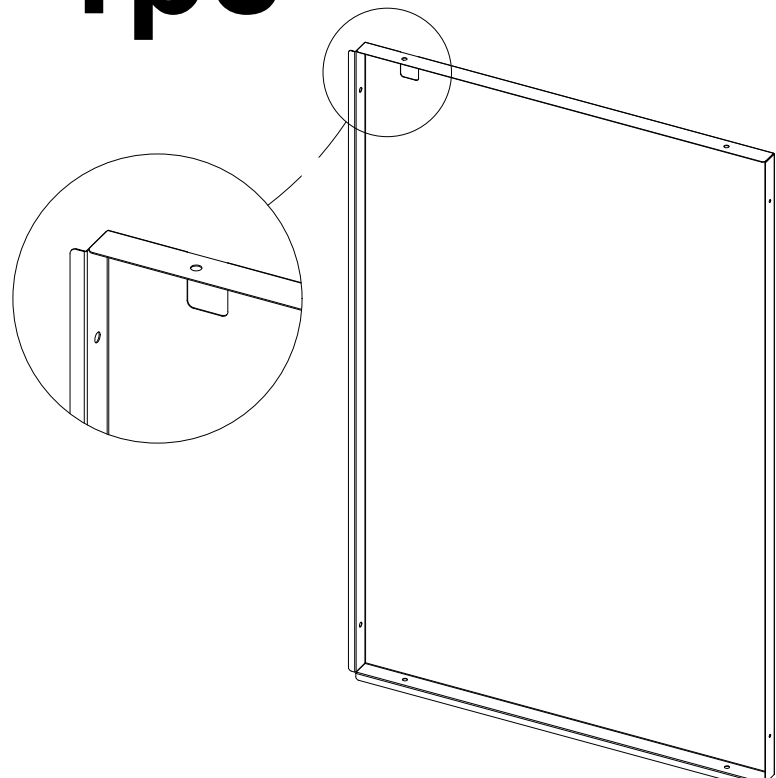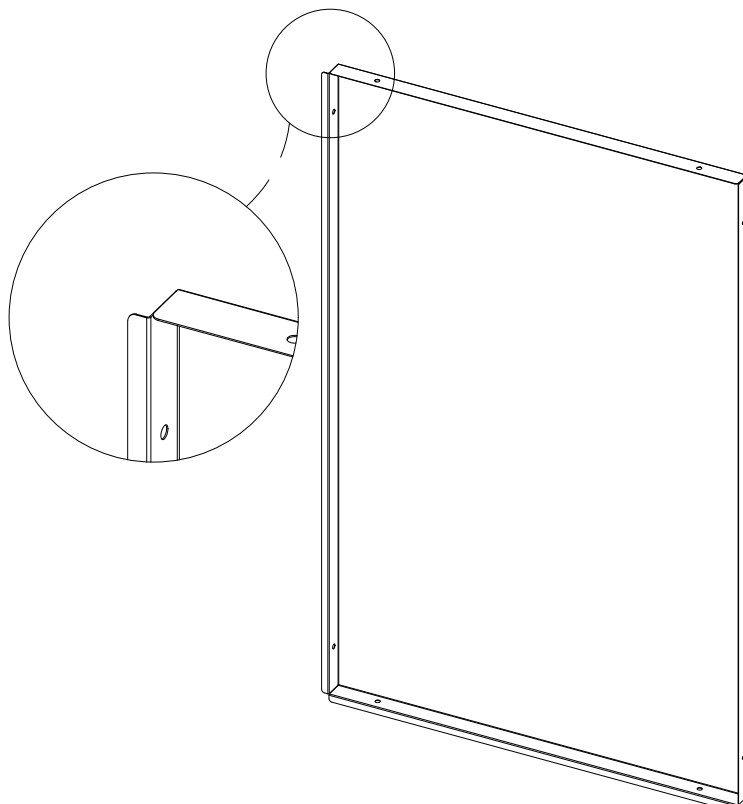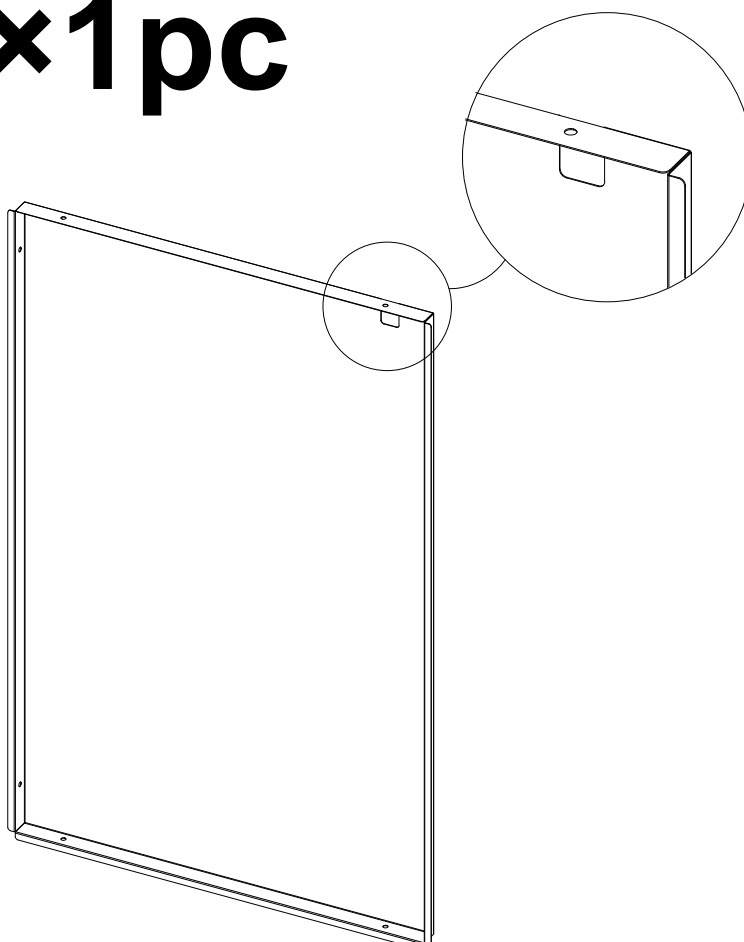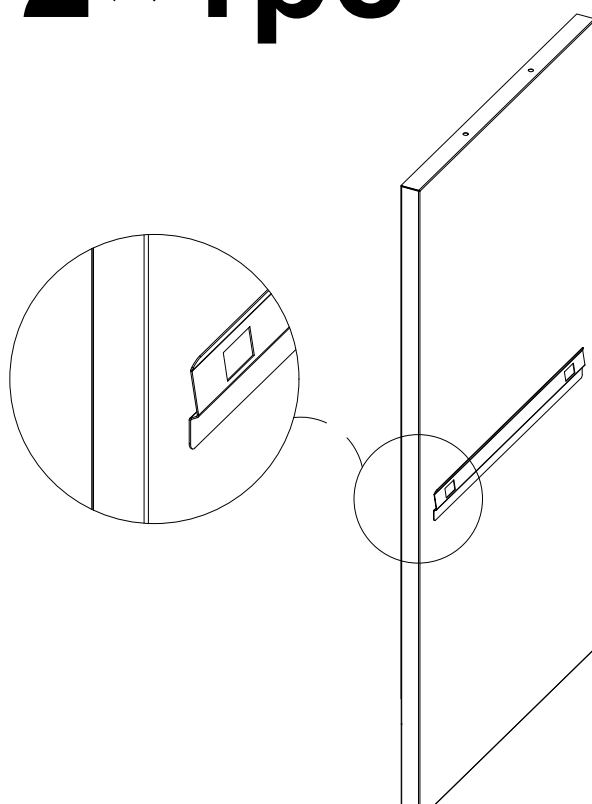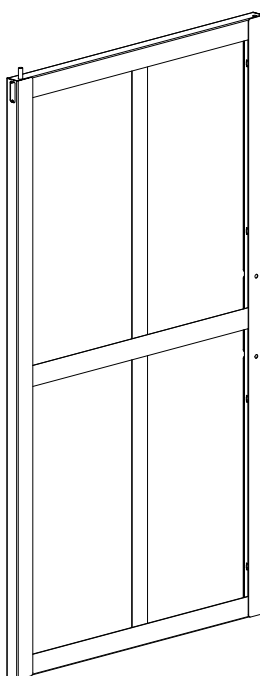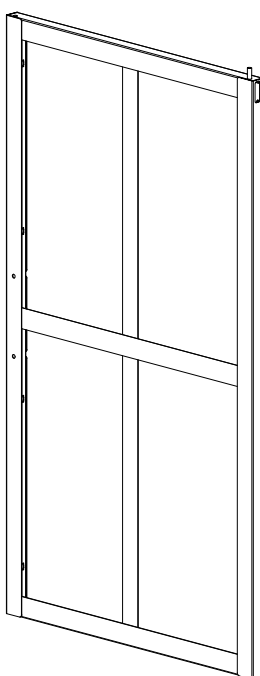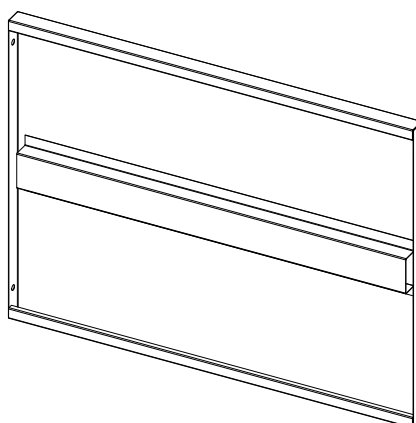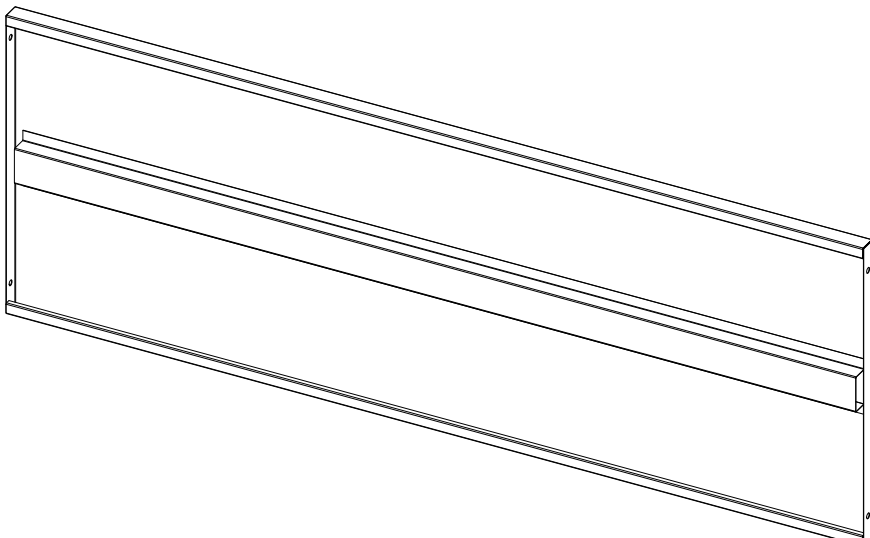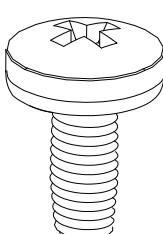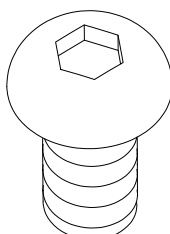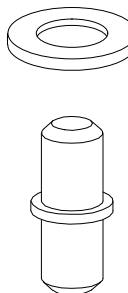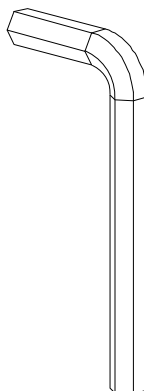


1×1pc 		2×1pc 		3×1pc 			
4×1pc 				5×1pc 		6×2pcs 	
7×1pc 				8×1pc 			
9×1pc 		10×1pc 		11×1pc 		12×1pc 	
13×1pc 		14×2pcs 		15×1pc 		16×1pc 	
A×45pcs  M4×8 mm	B×4pcs  M6×10 mm	C×6pcs  M4×22 mm	D×3pcs  Ø4.8×22 mm	E×1pc  4 mm	G×6pcs 	H×2pcs  M8 M5×40 mm	I×4pcs 

J×3pcs

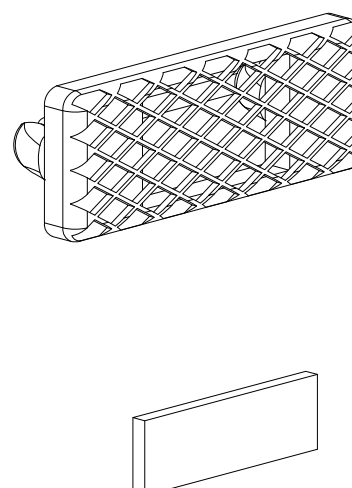


96 mm




K×2pcs

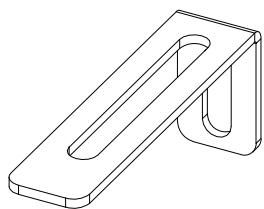


L×2pcs

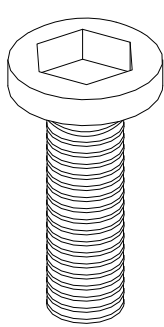


M6×25 mm

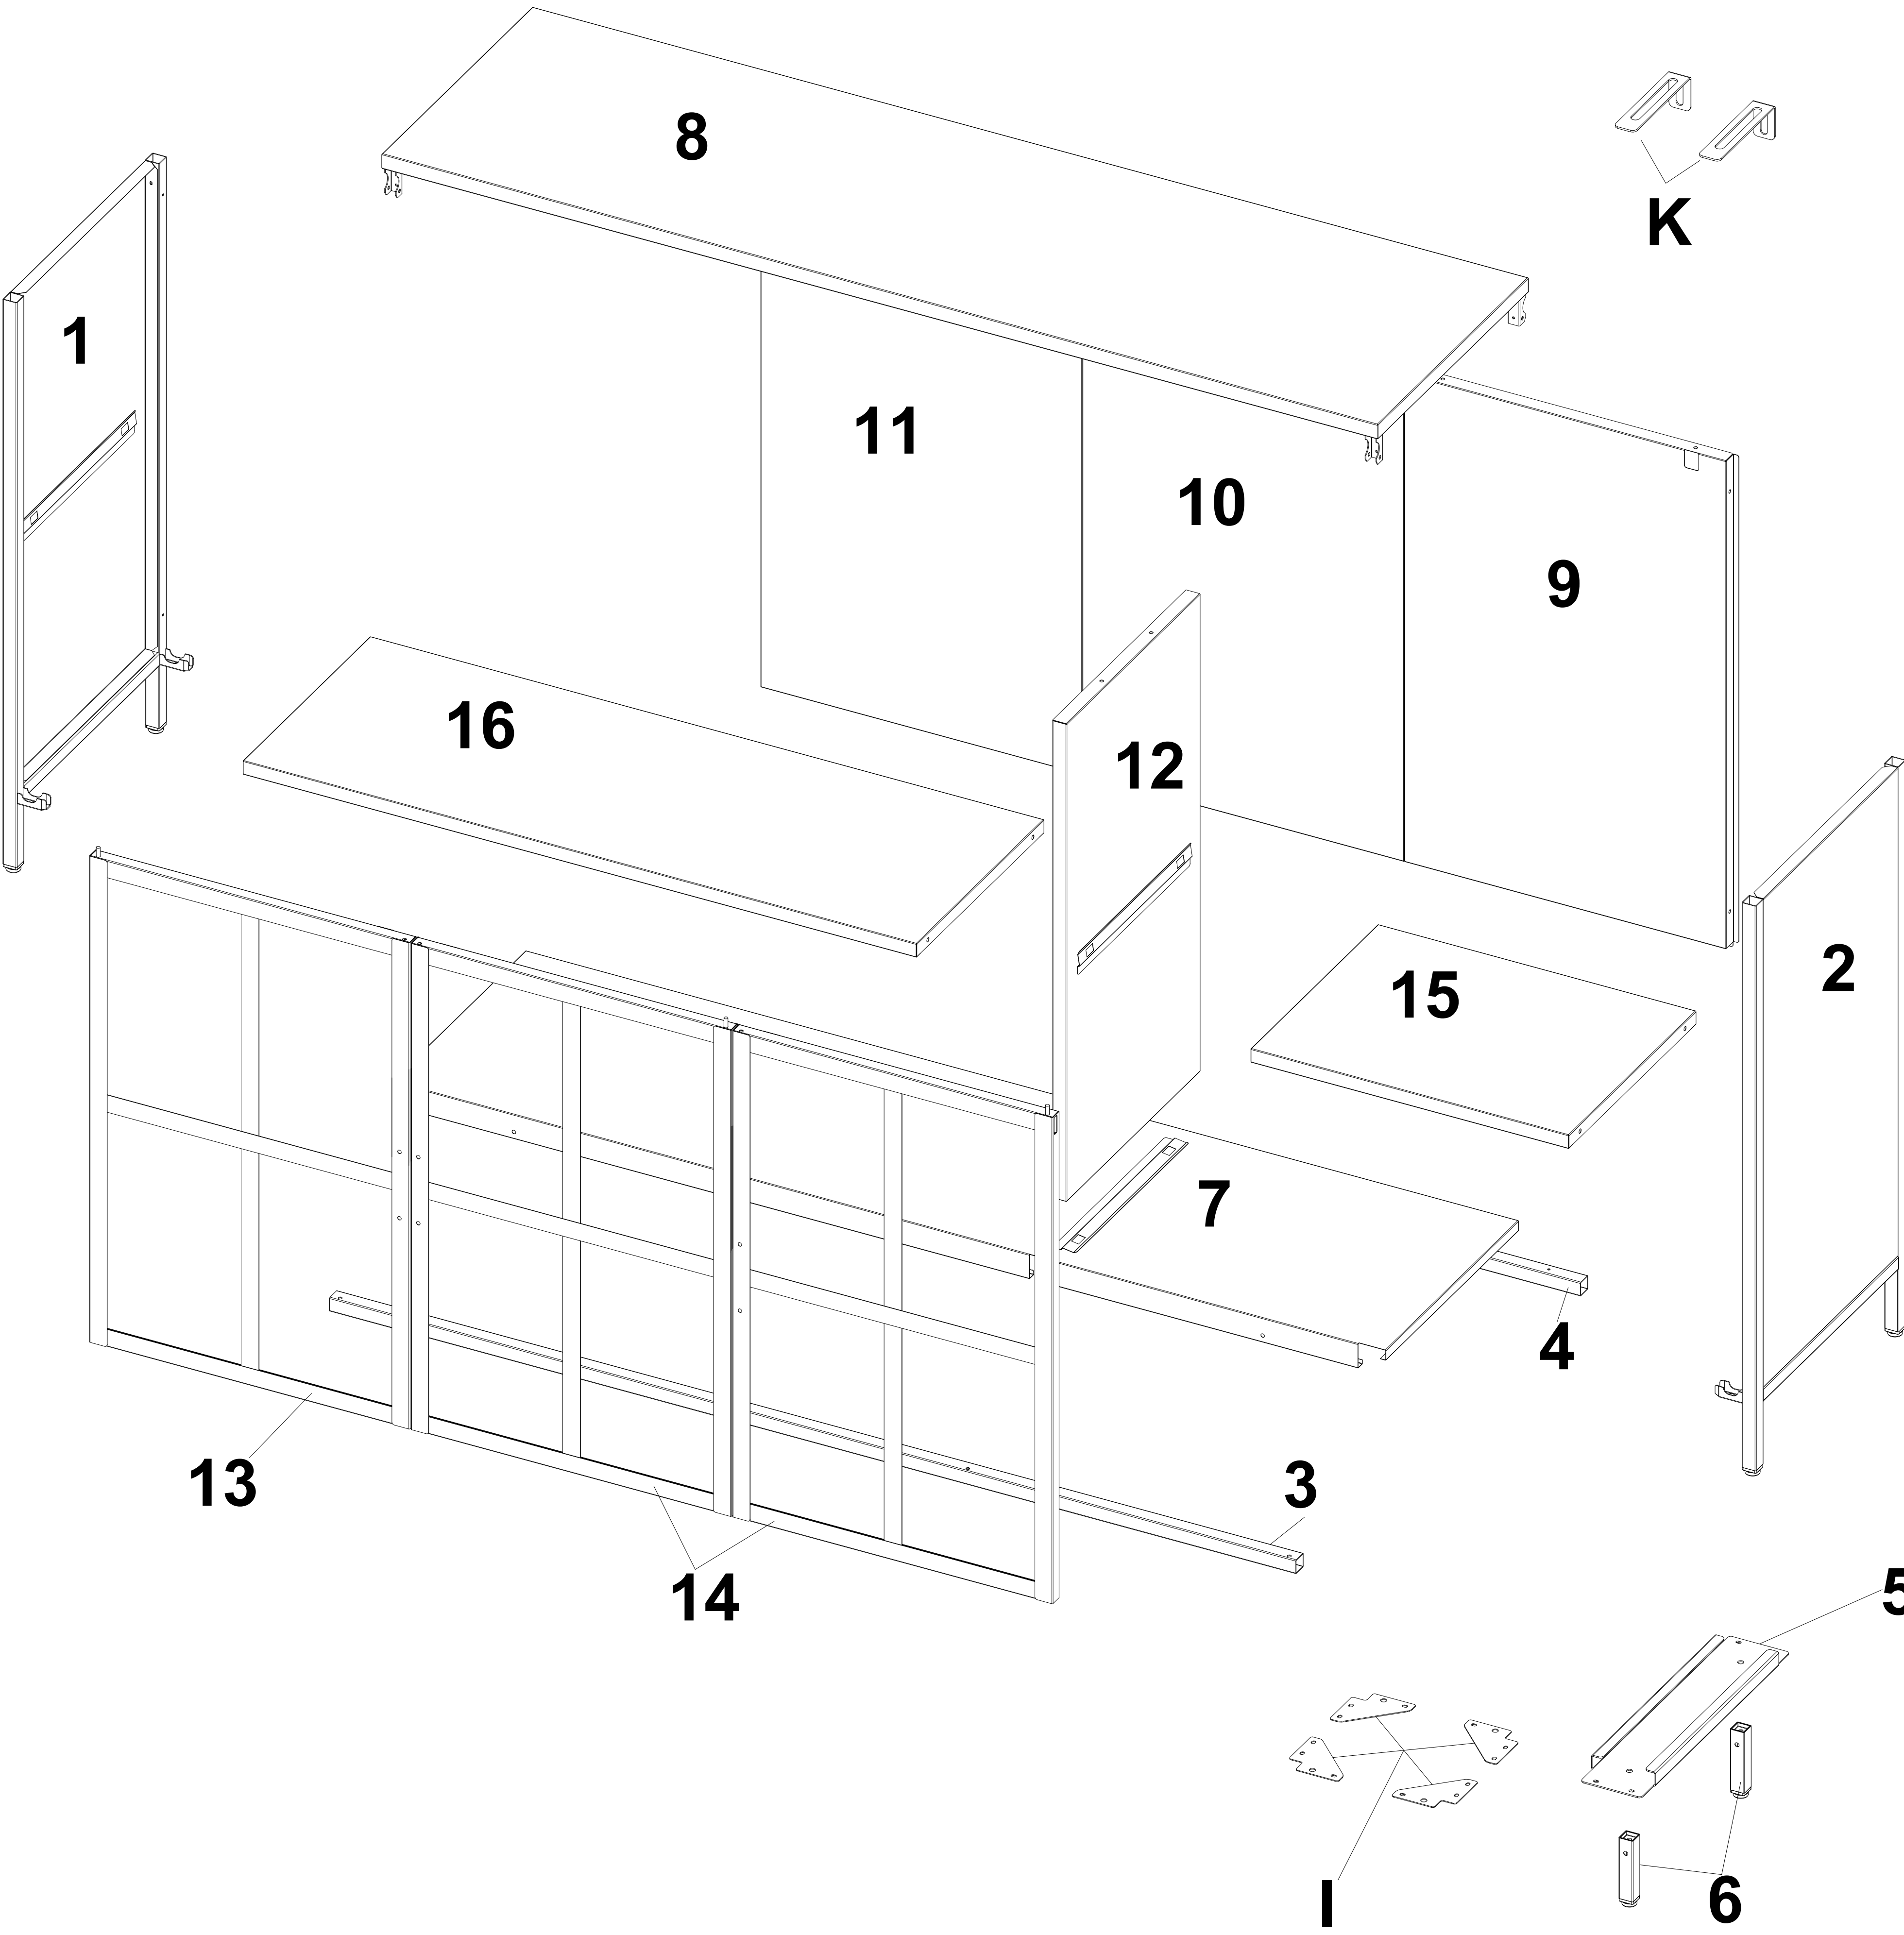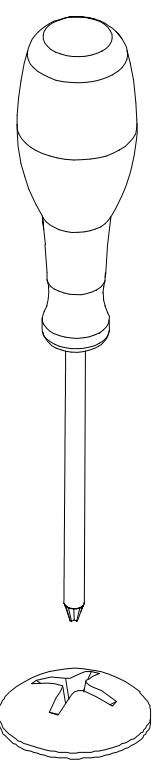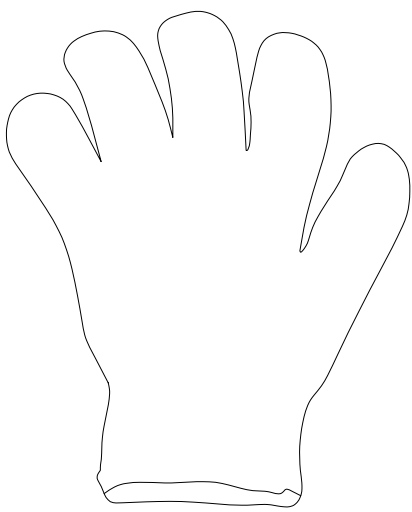



1

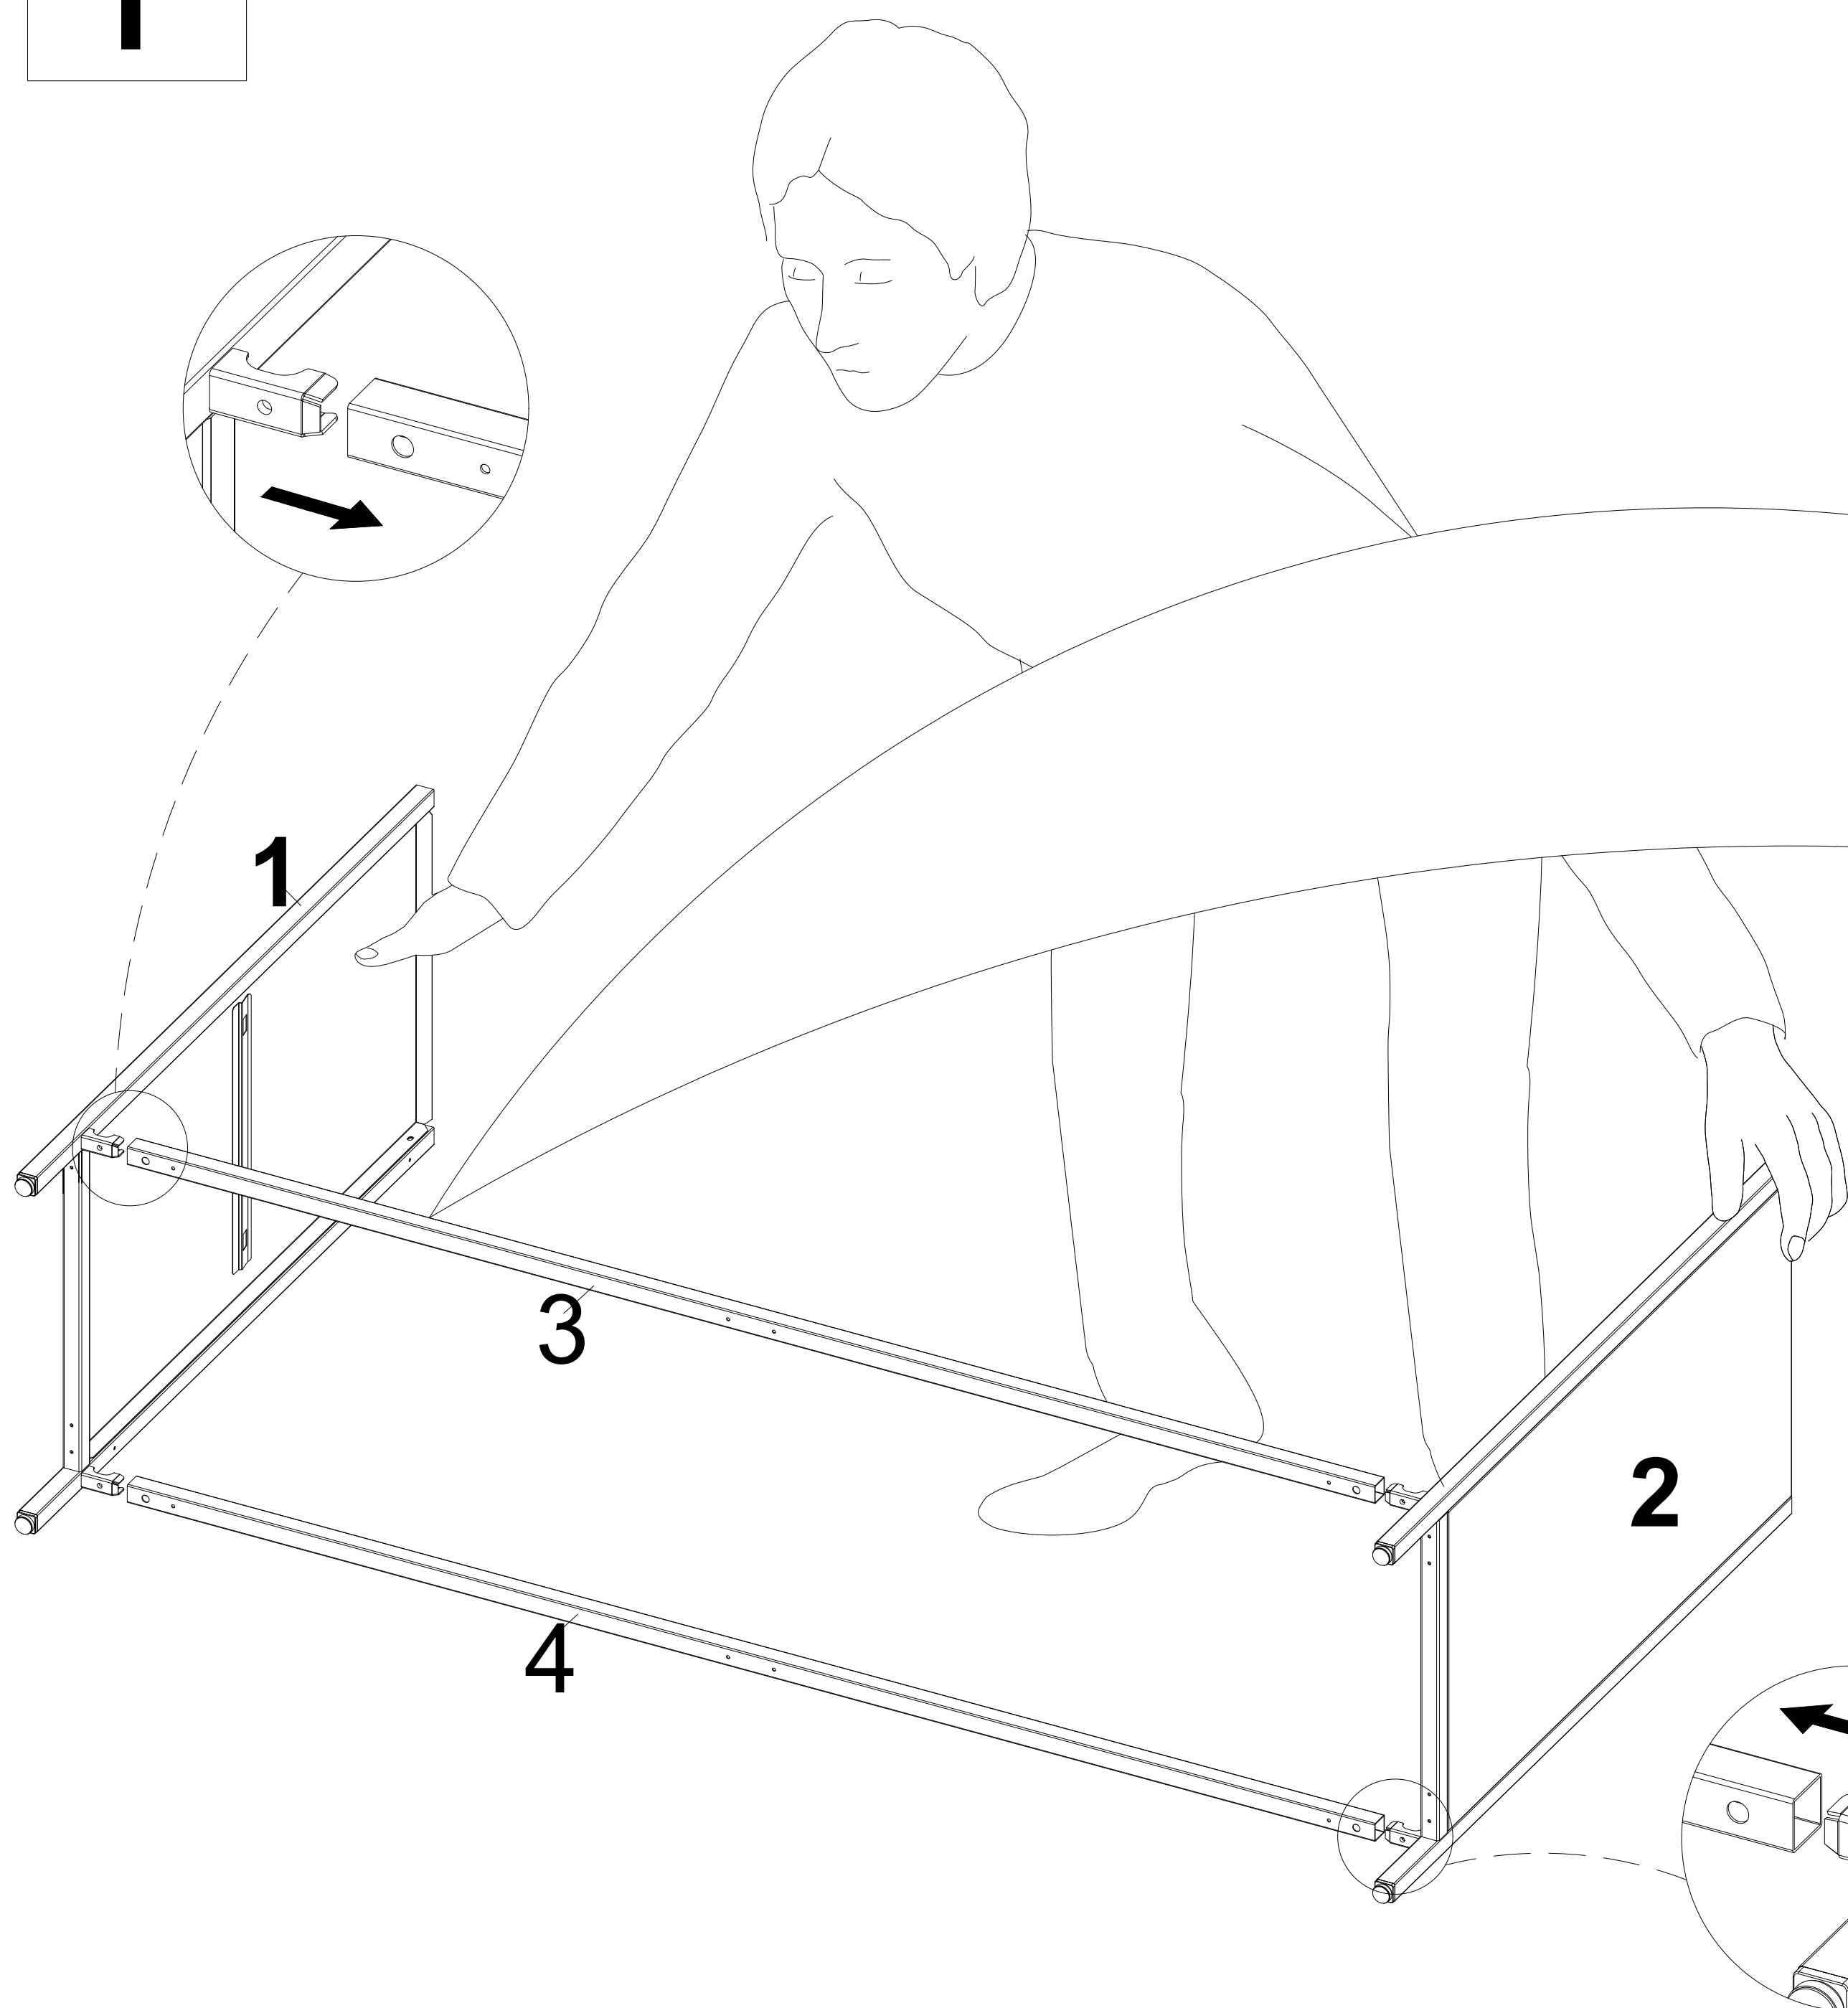


Note that the position of this hole is on the outer side. When installing, differentiate between the front and back orientation of pipe number 3, as well as the left and right direction.

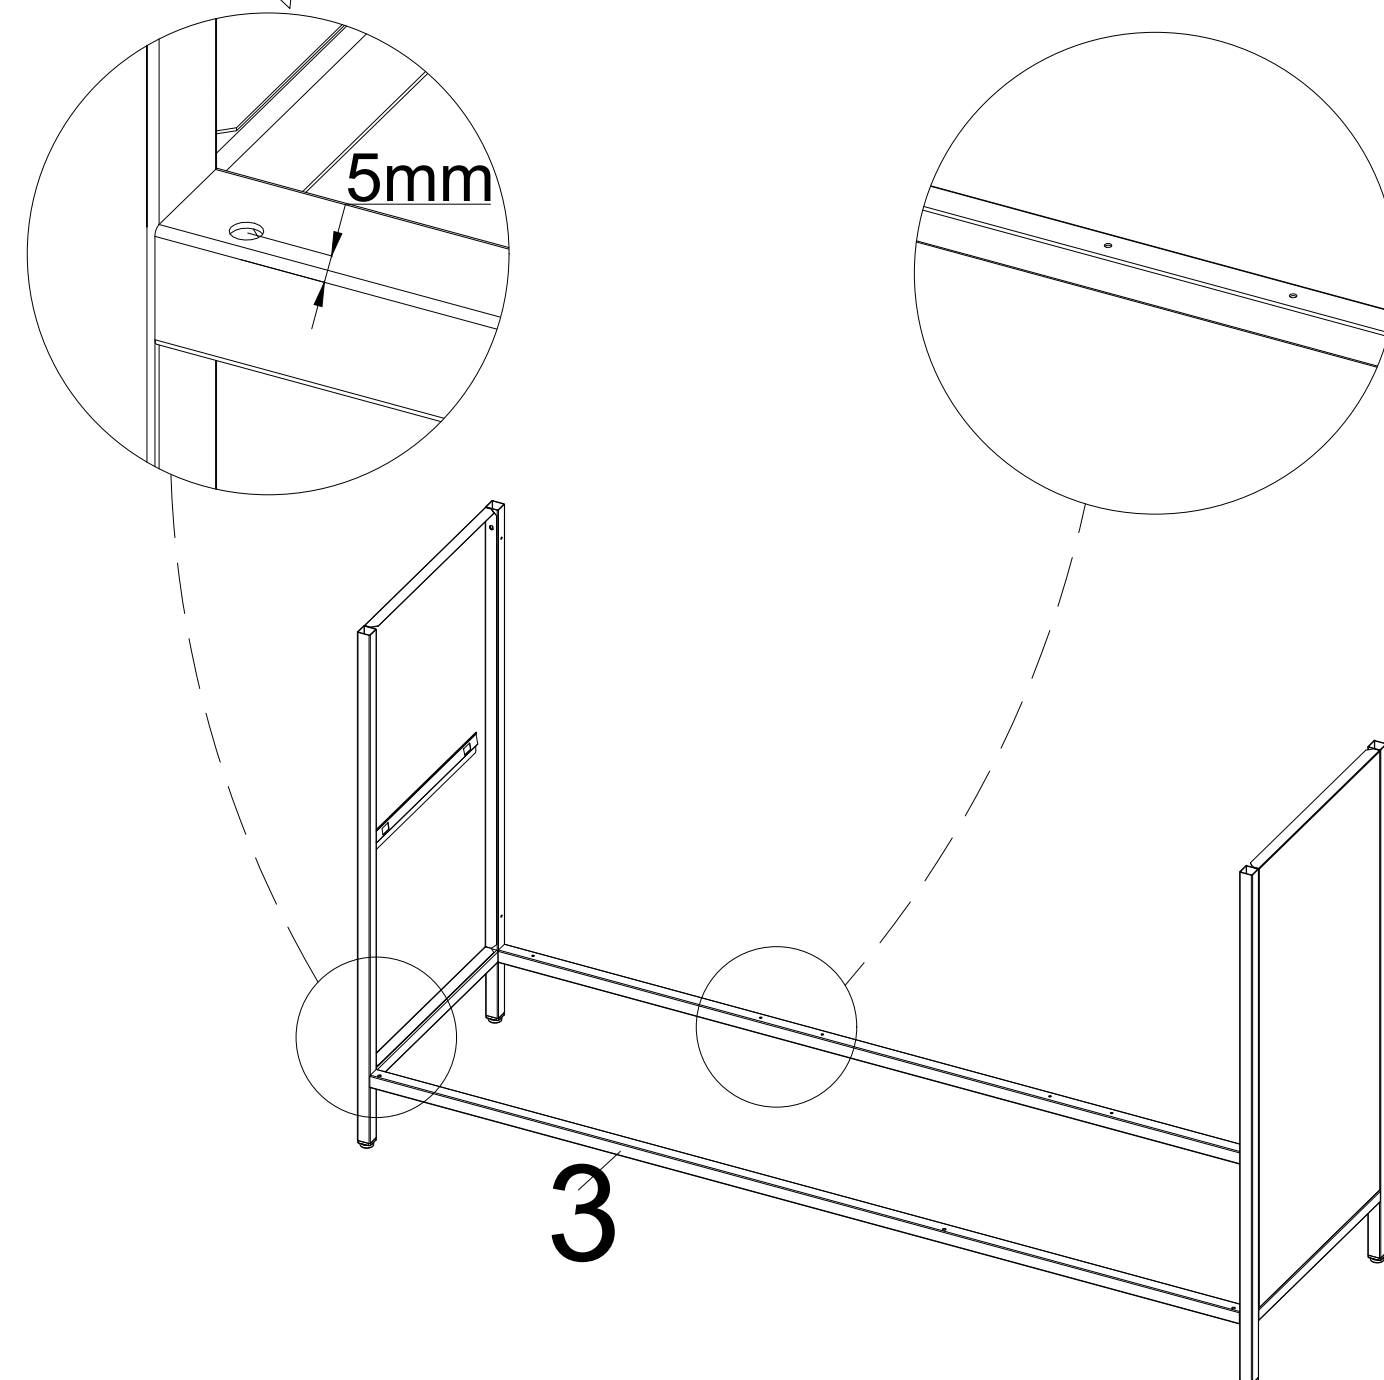


2

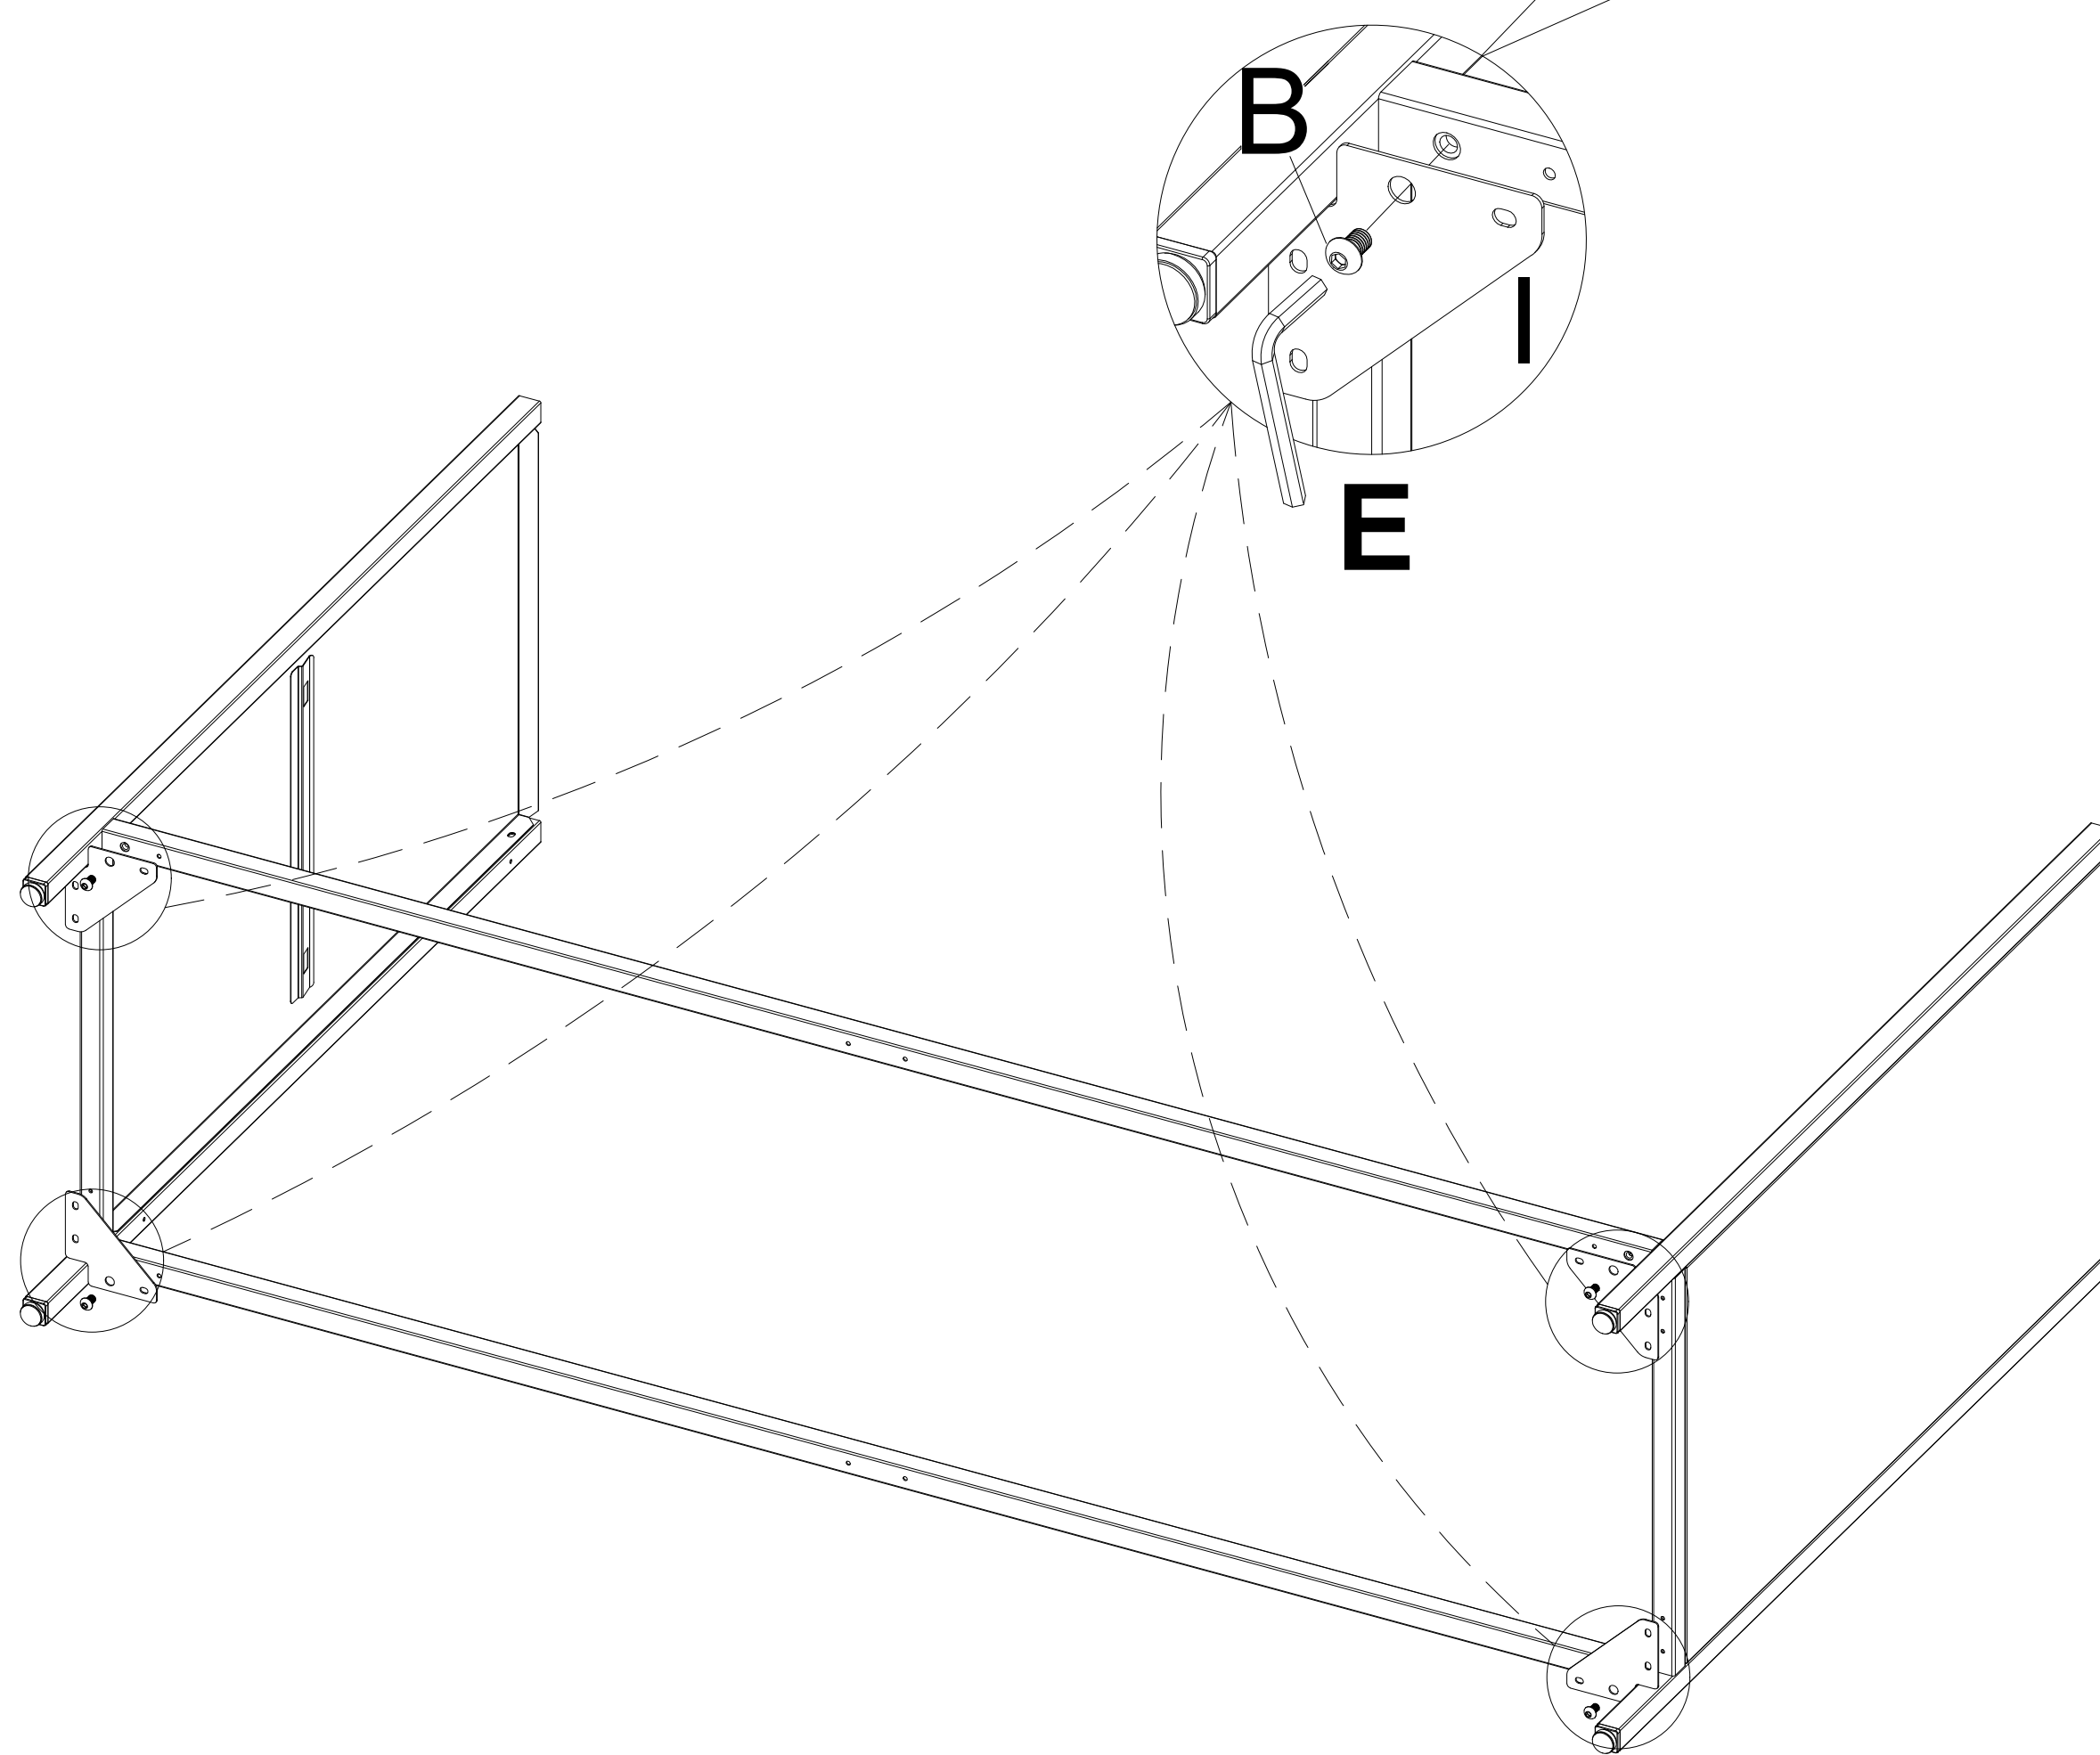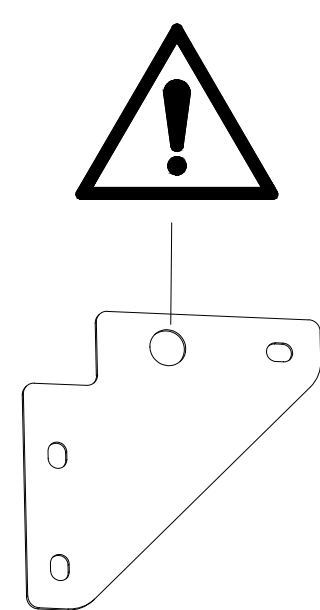


Please align the round hole on the triangular piece with the largest hole on the pipe, and secure it with screw B

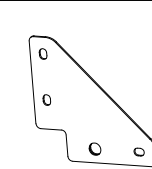

I×4




E×1

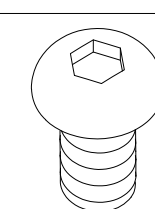

B×4






3

Install the remaining screws on the triangle piece.

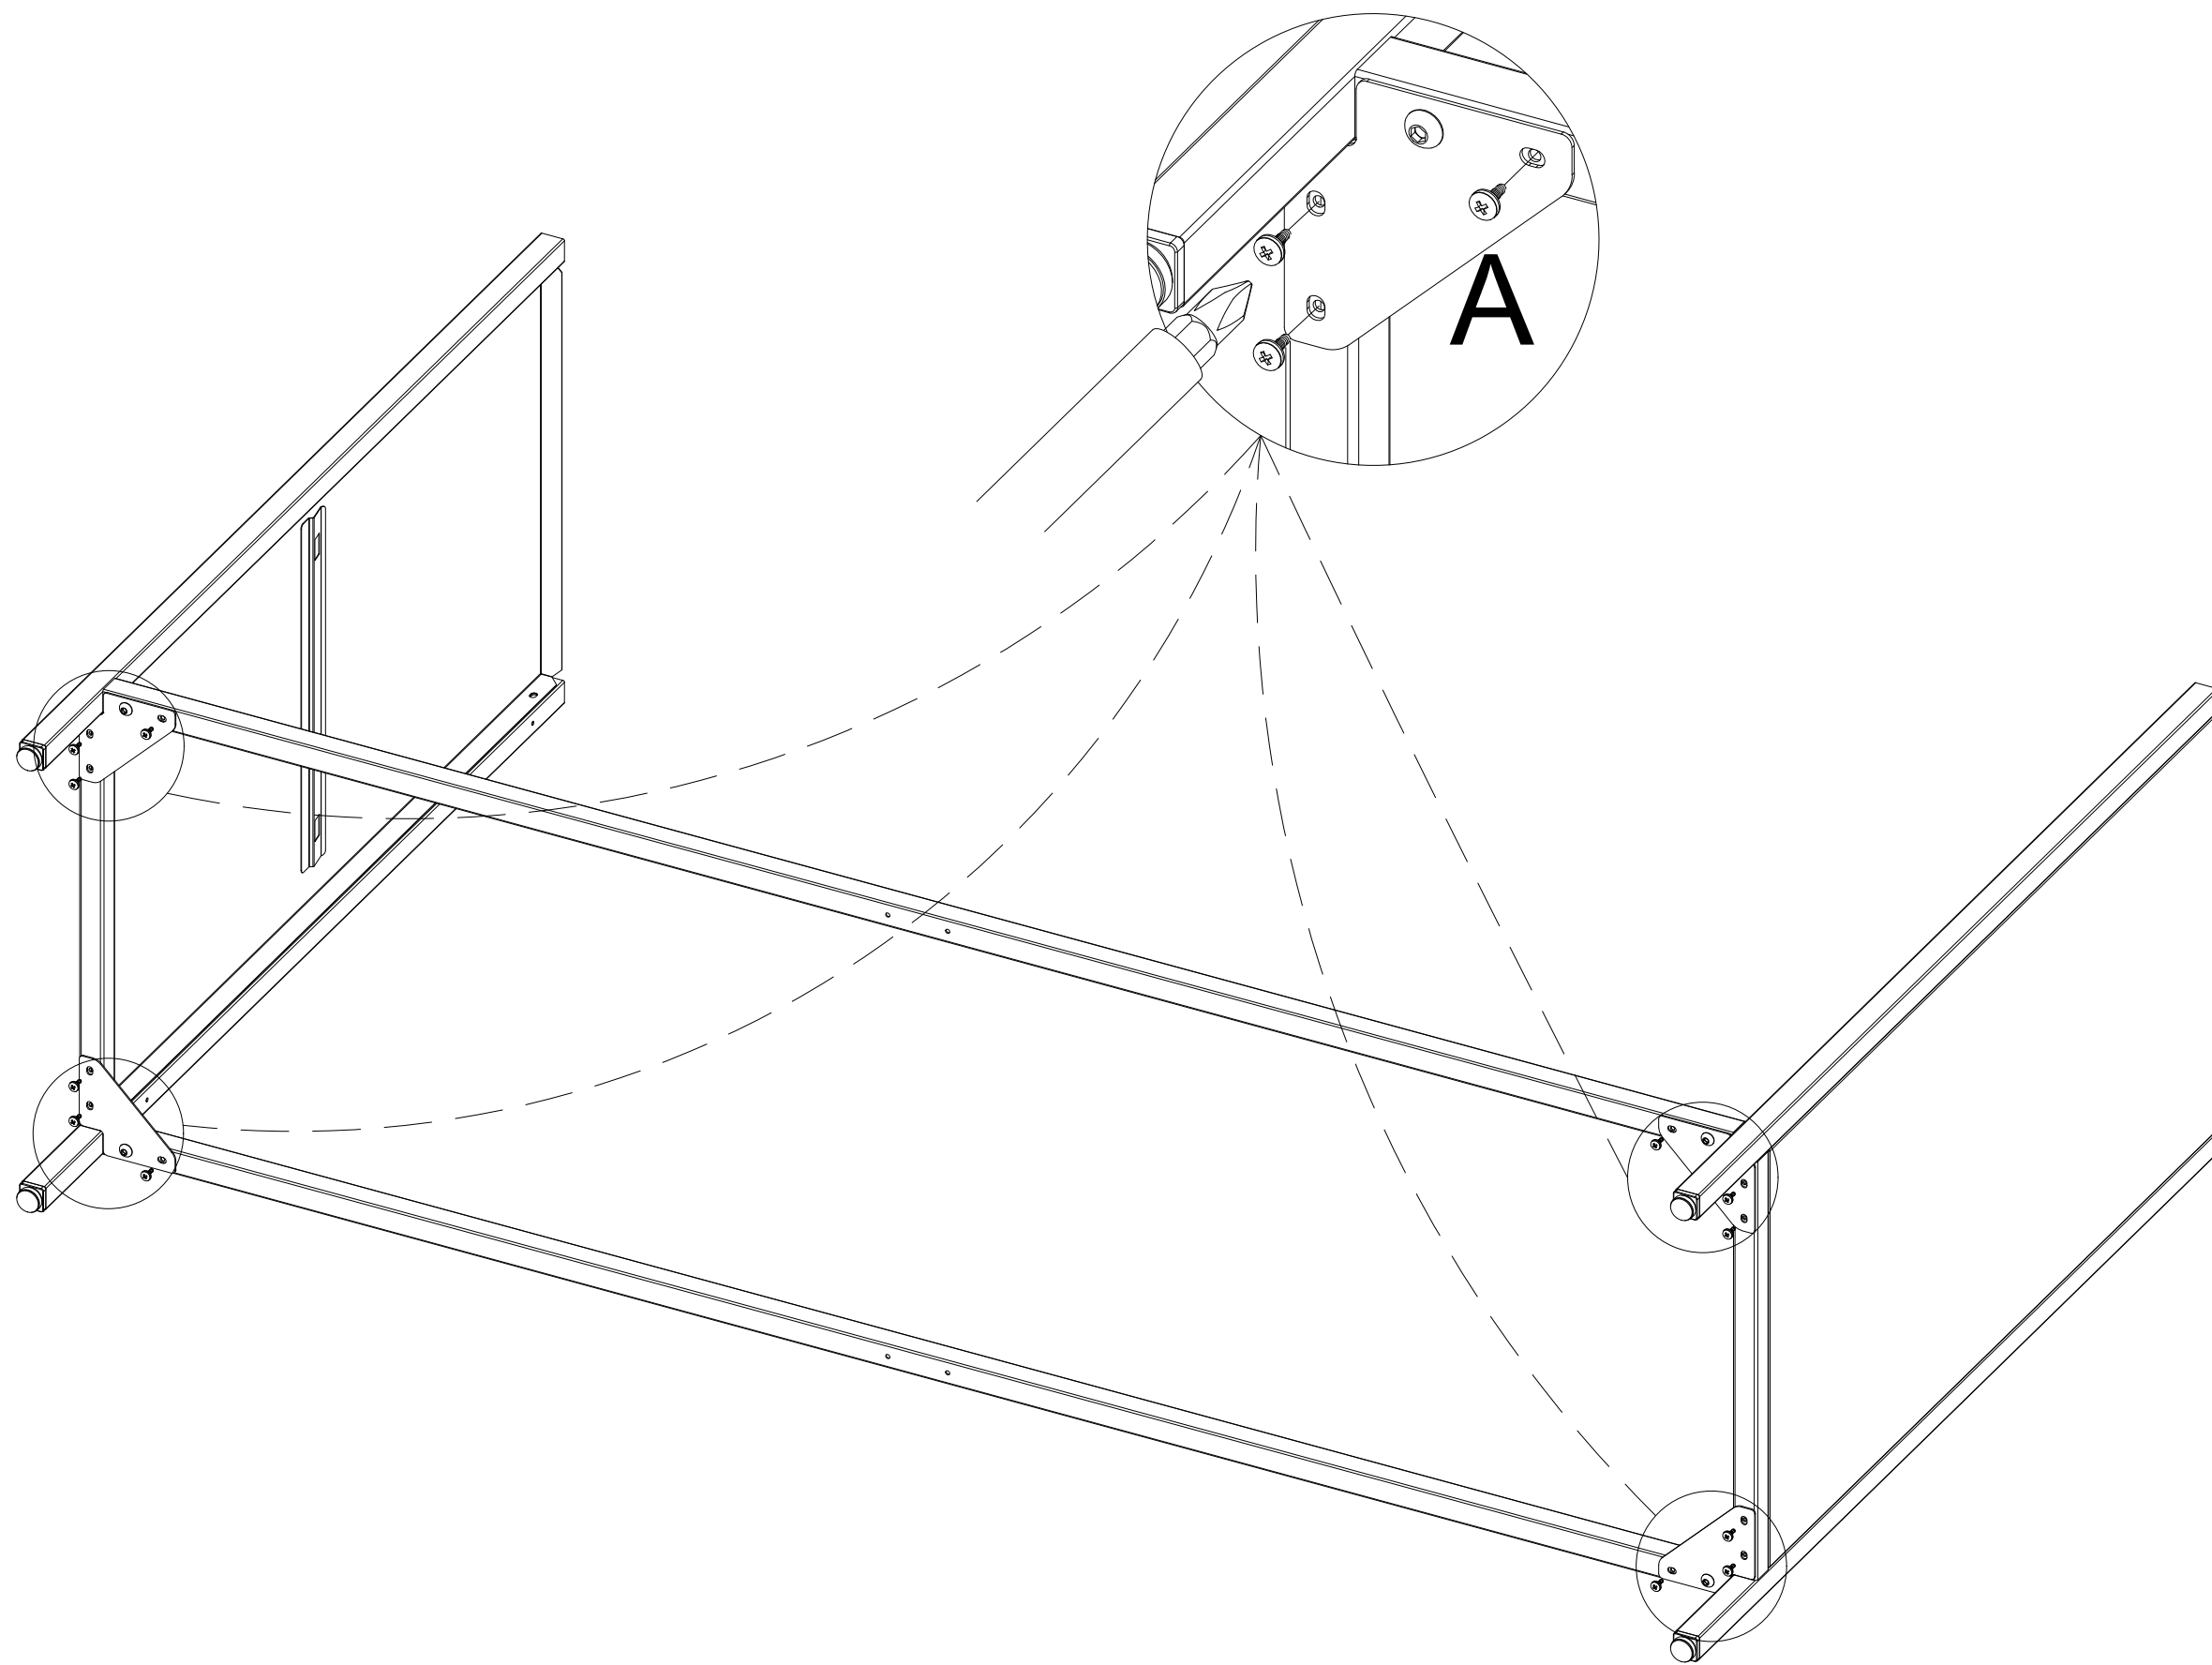


4

After assembling part number 6 onto part number 5 according to the diagram, place it in the illustrated position.

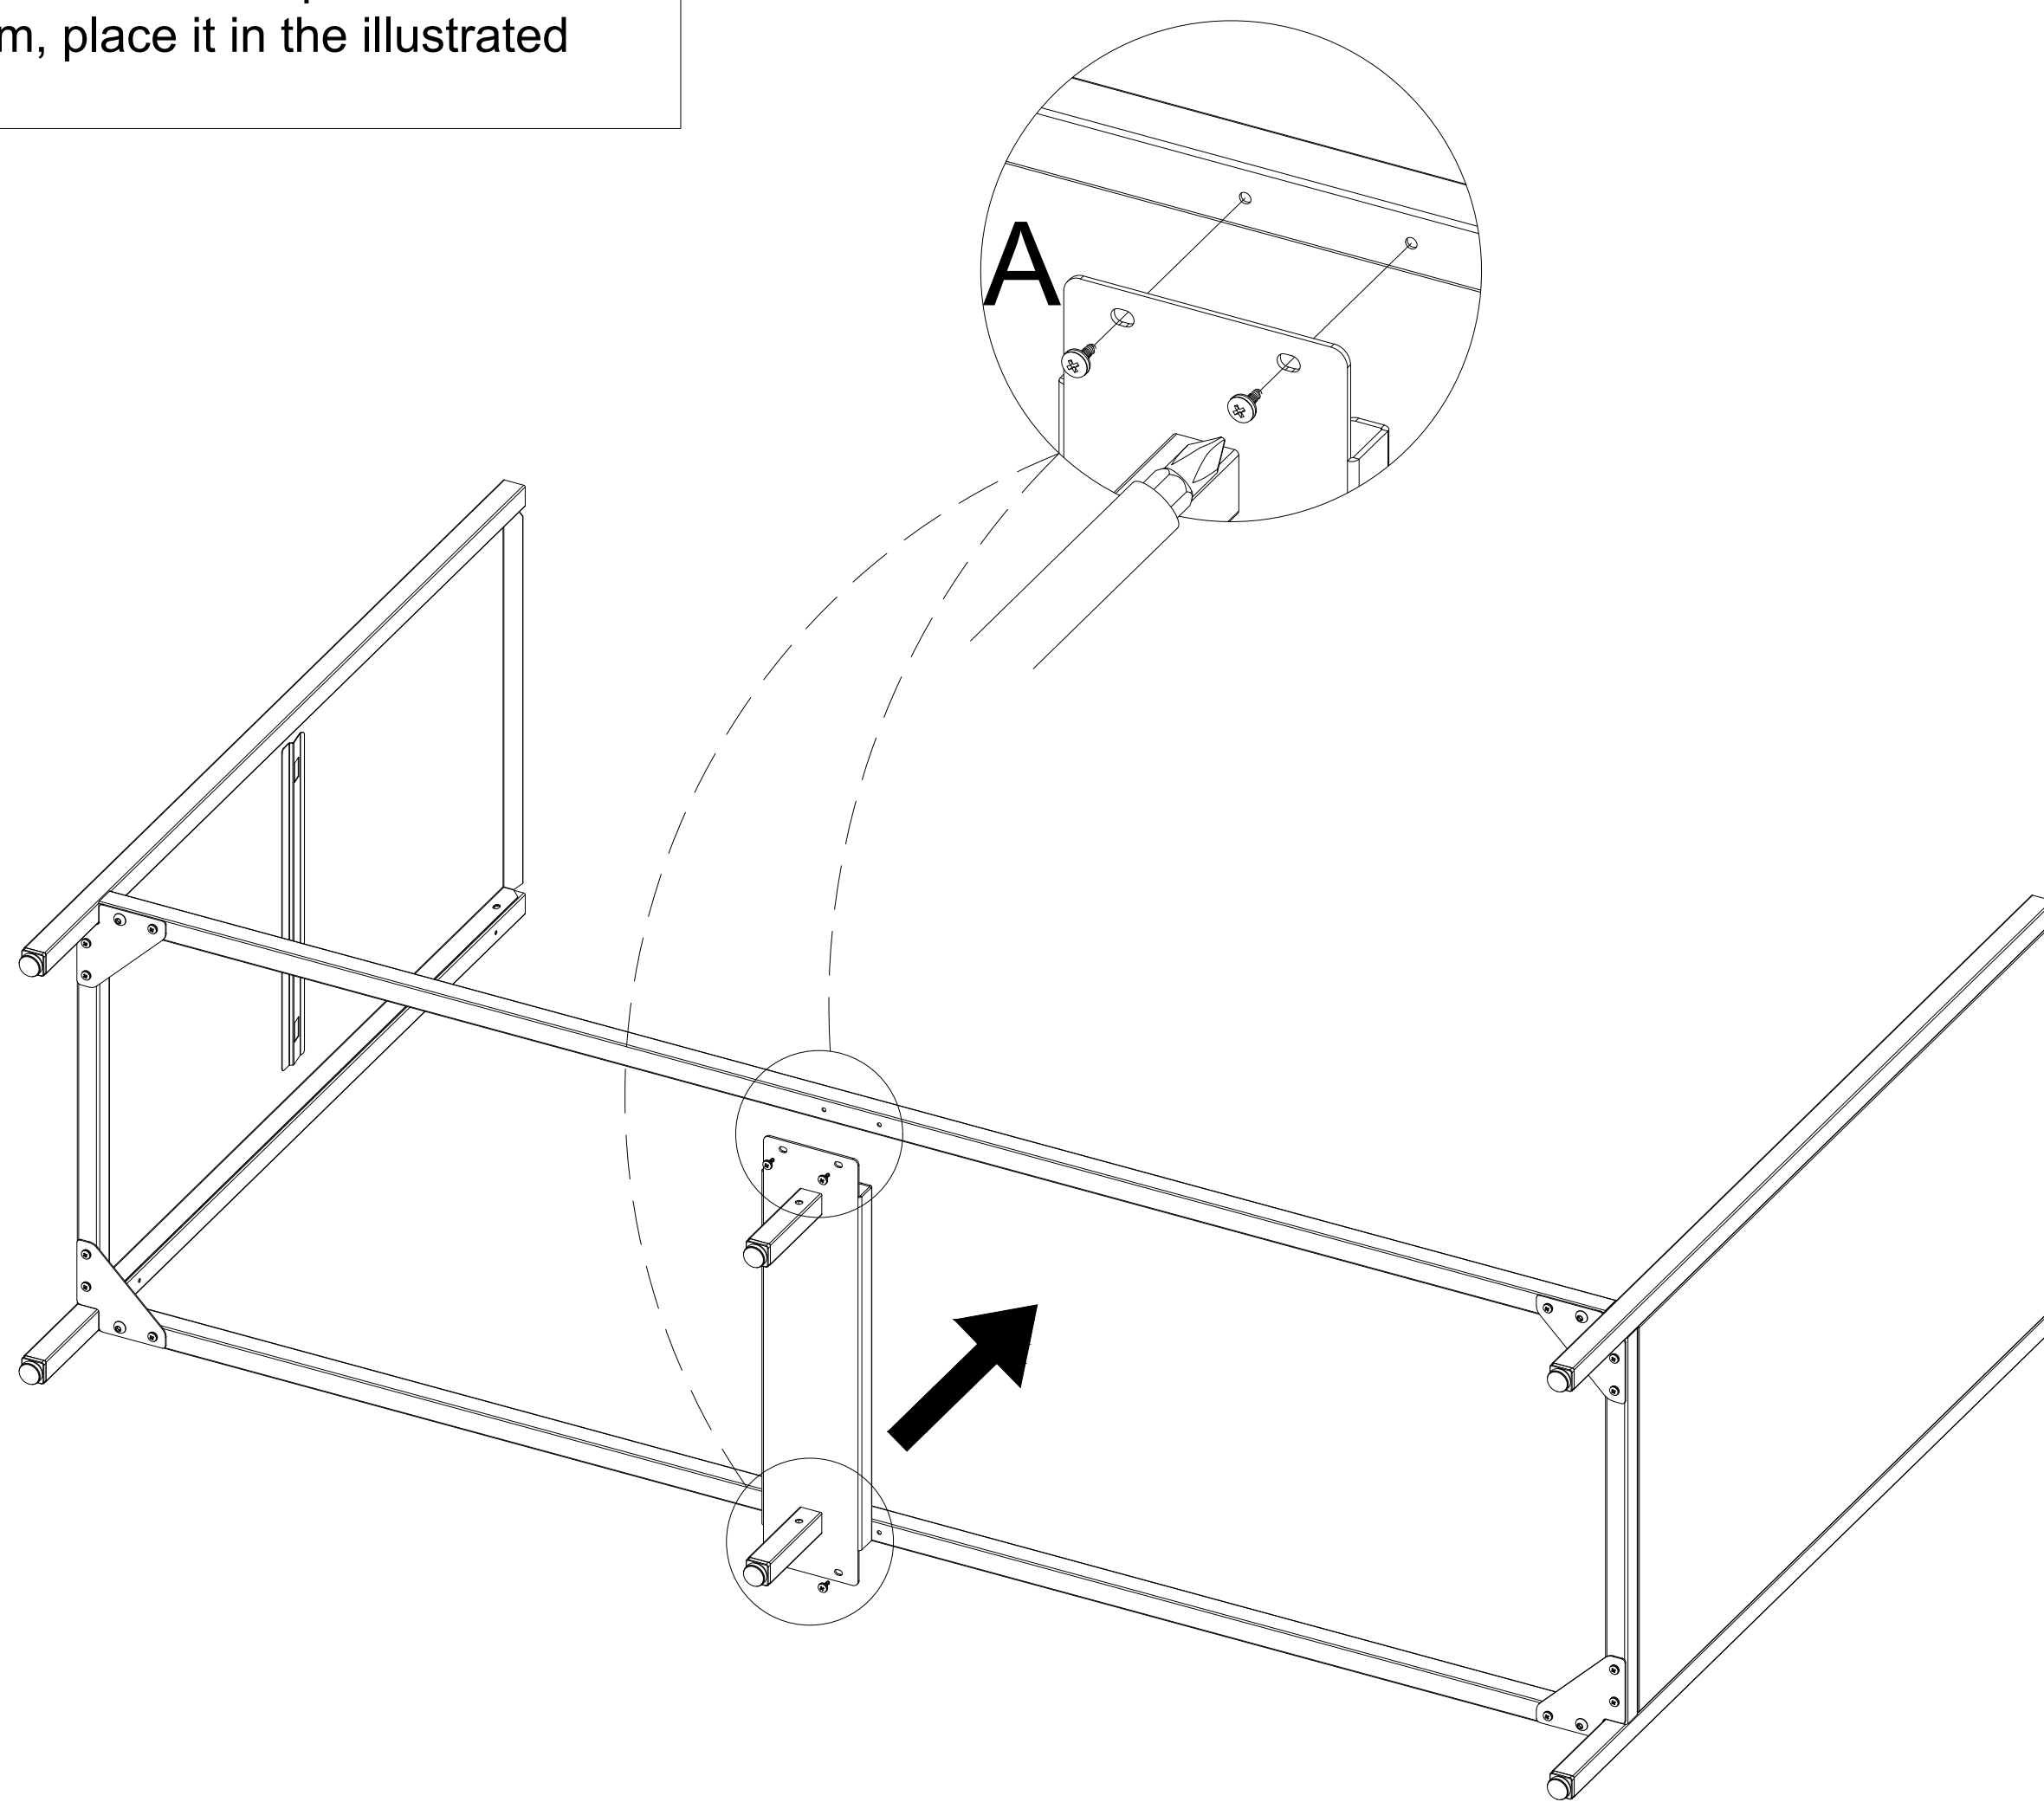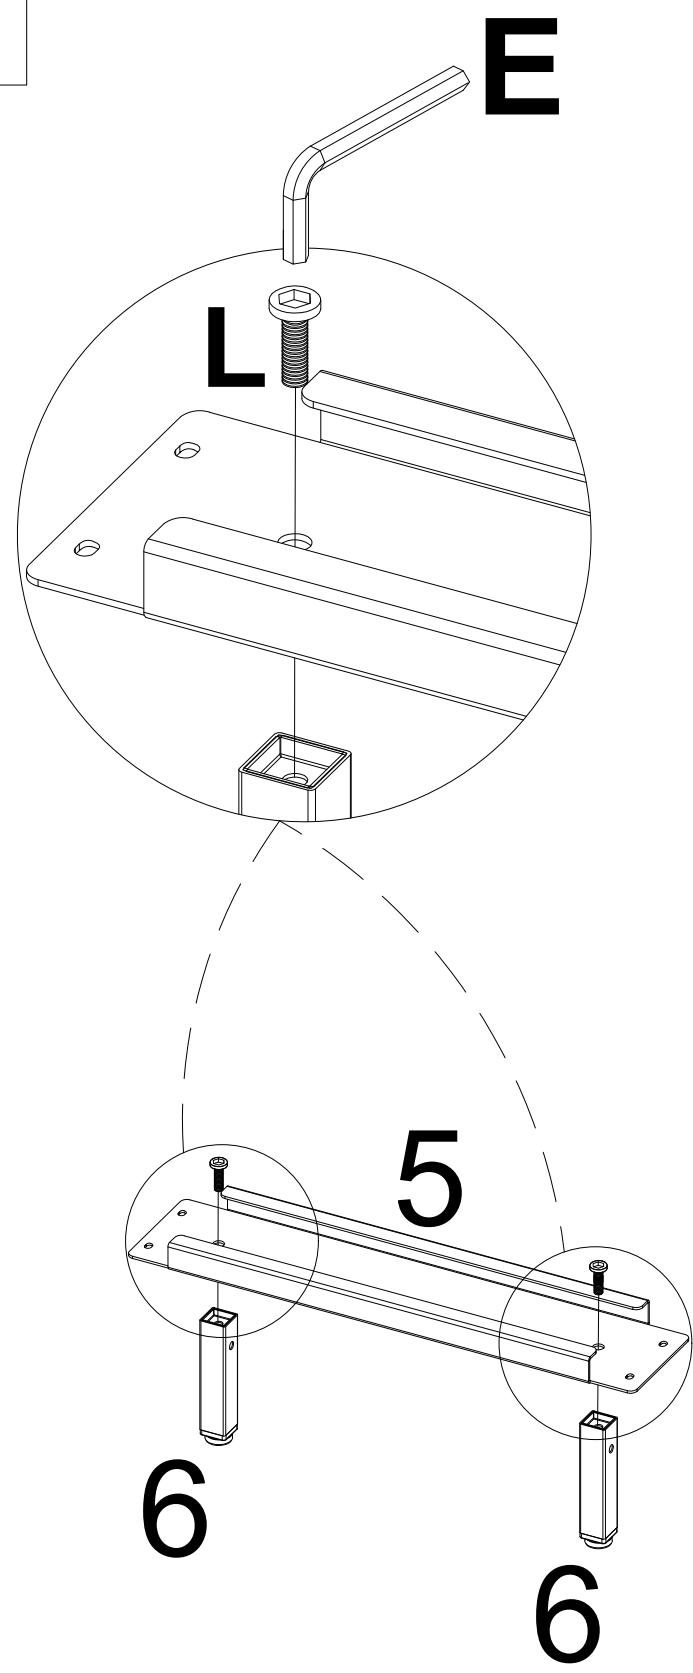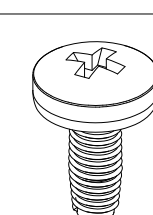**E×1****L×2****A×4**



5

Pay attention to the orientation of part number 7.

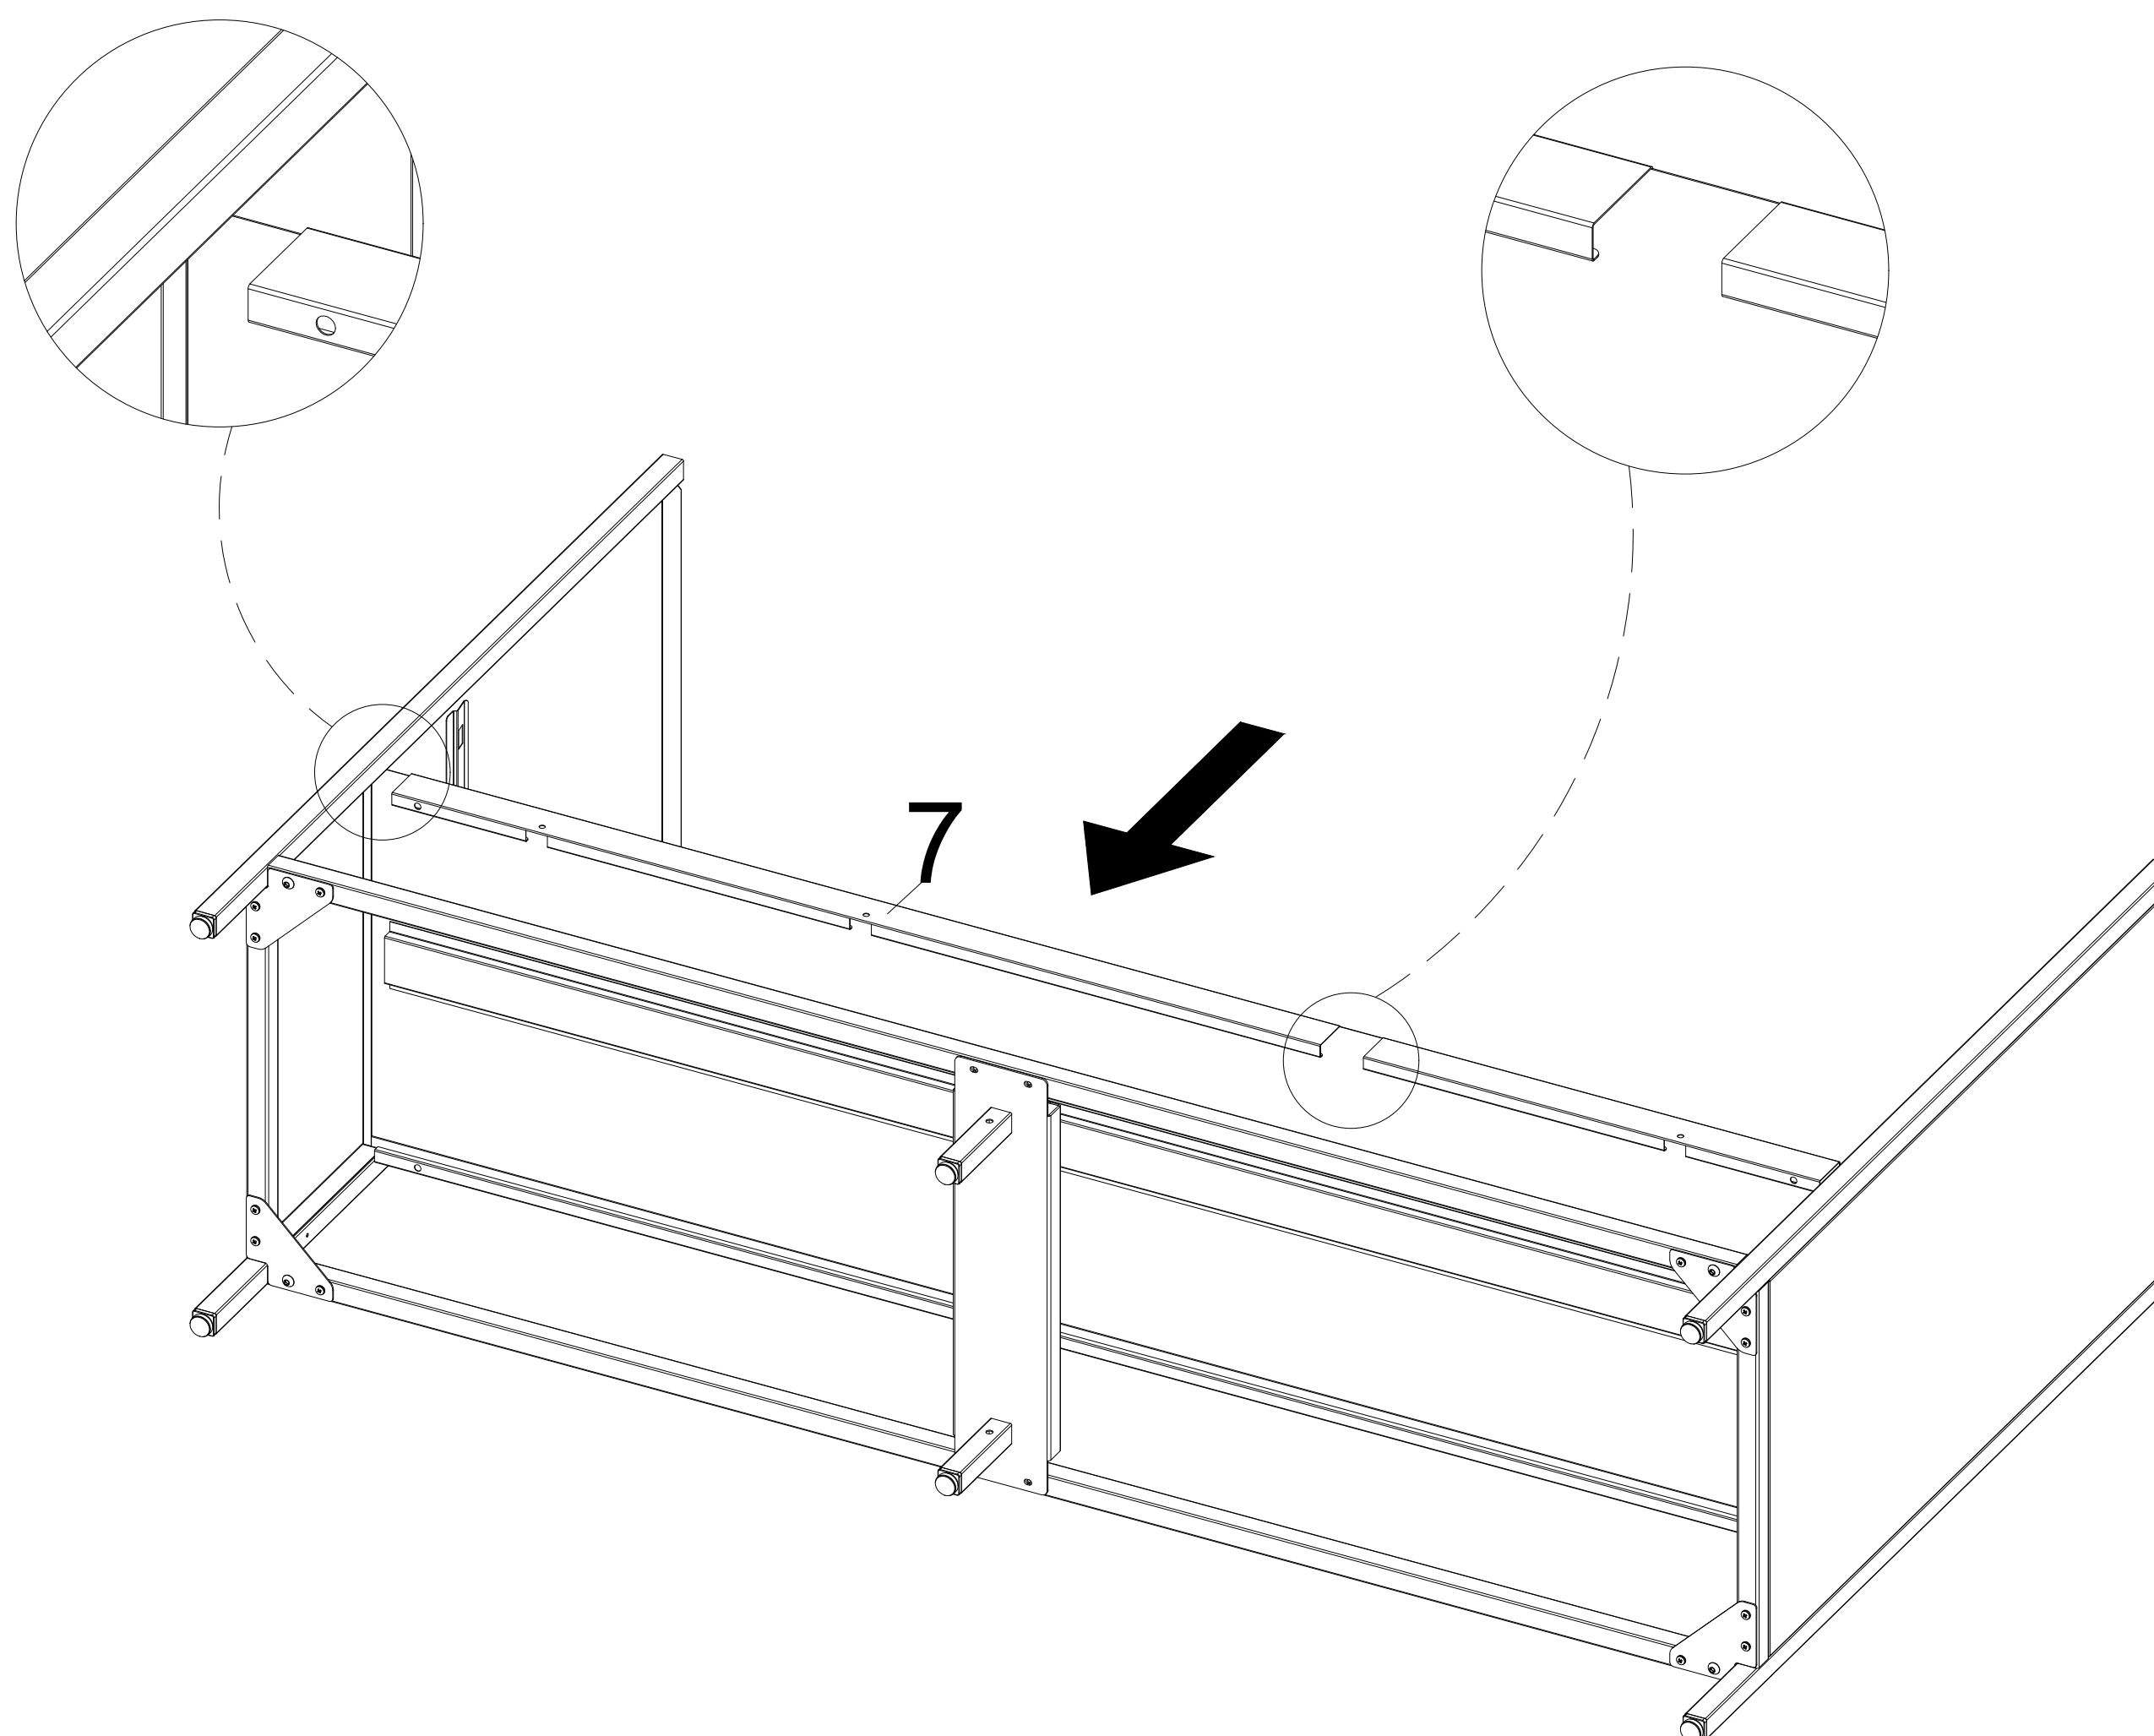

6


Fix part number 7 onto the cabinet and secure it in place with screw A.

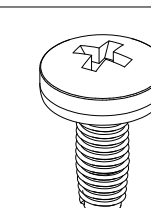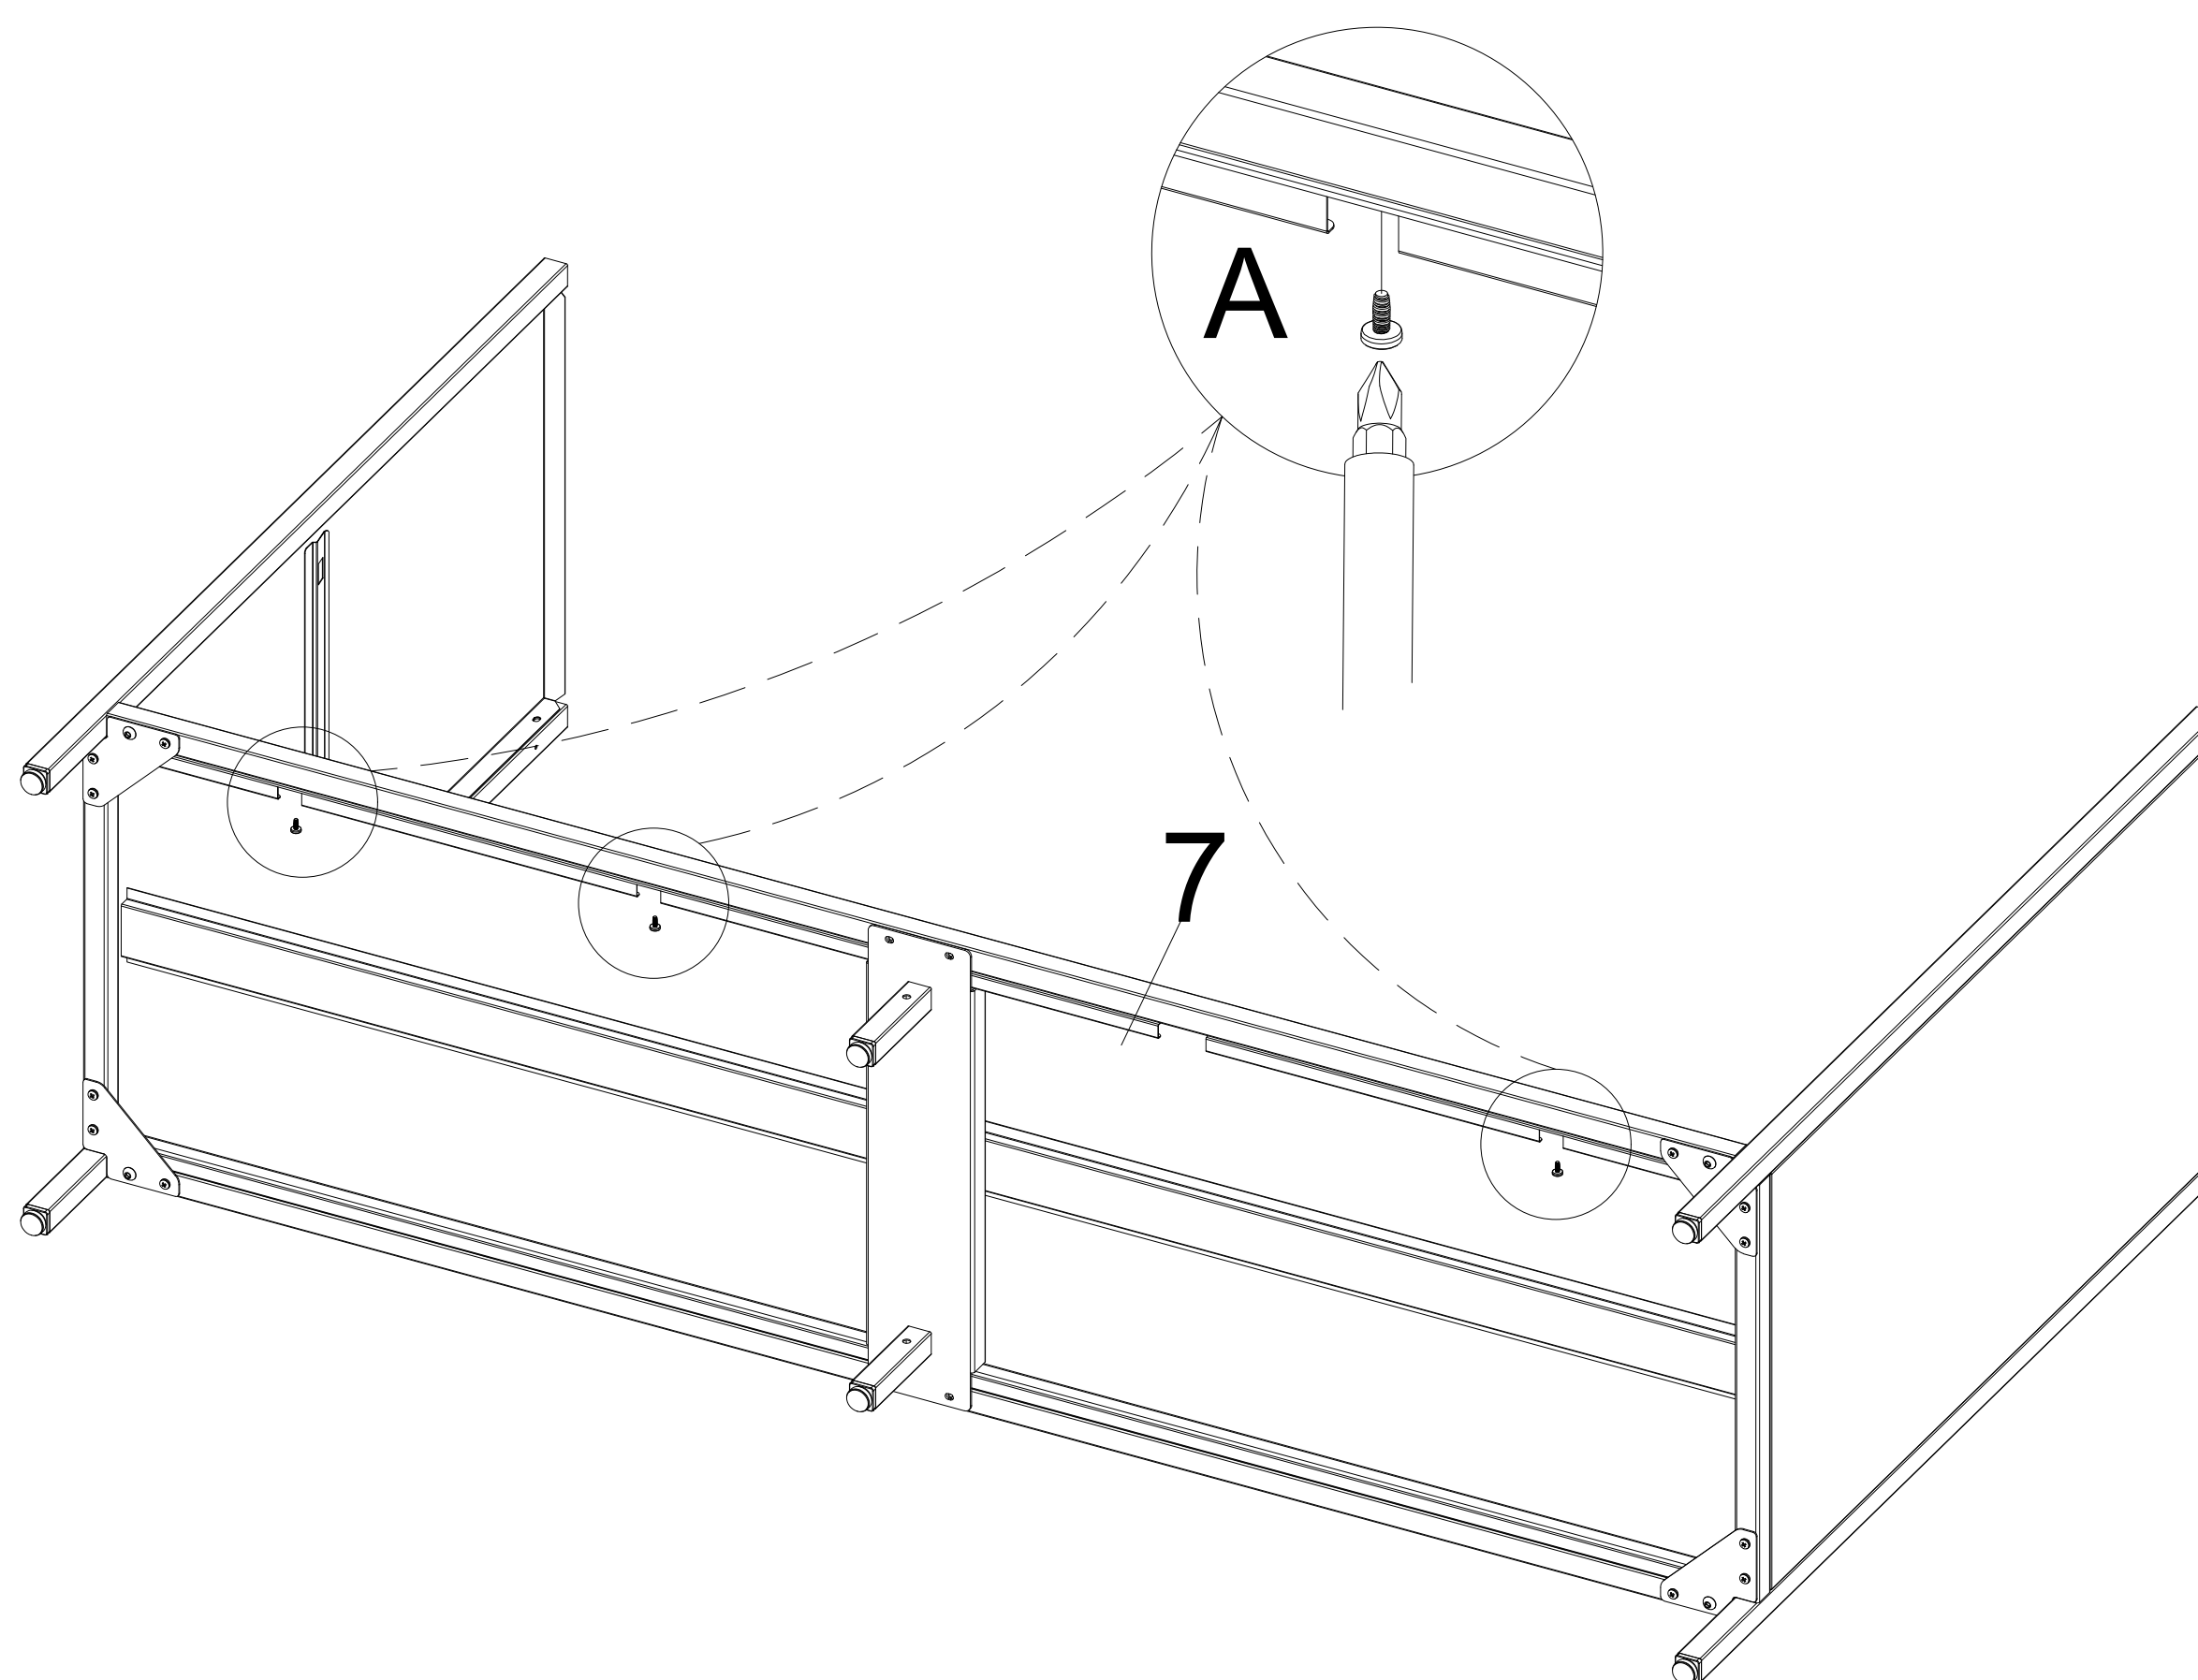


A×3

7



After installing component number 8, you can firmly tap the four corners of the component to reduce the gap between component number 8 and the cabinet.

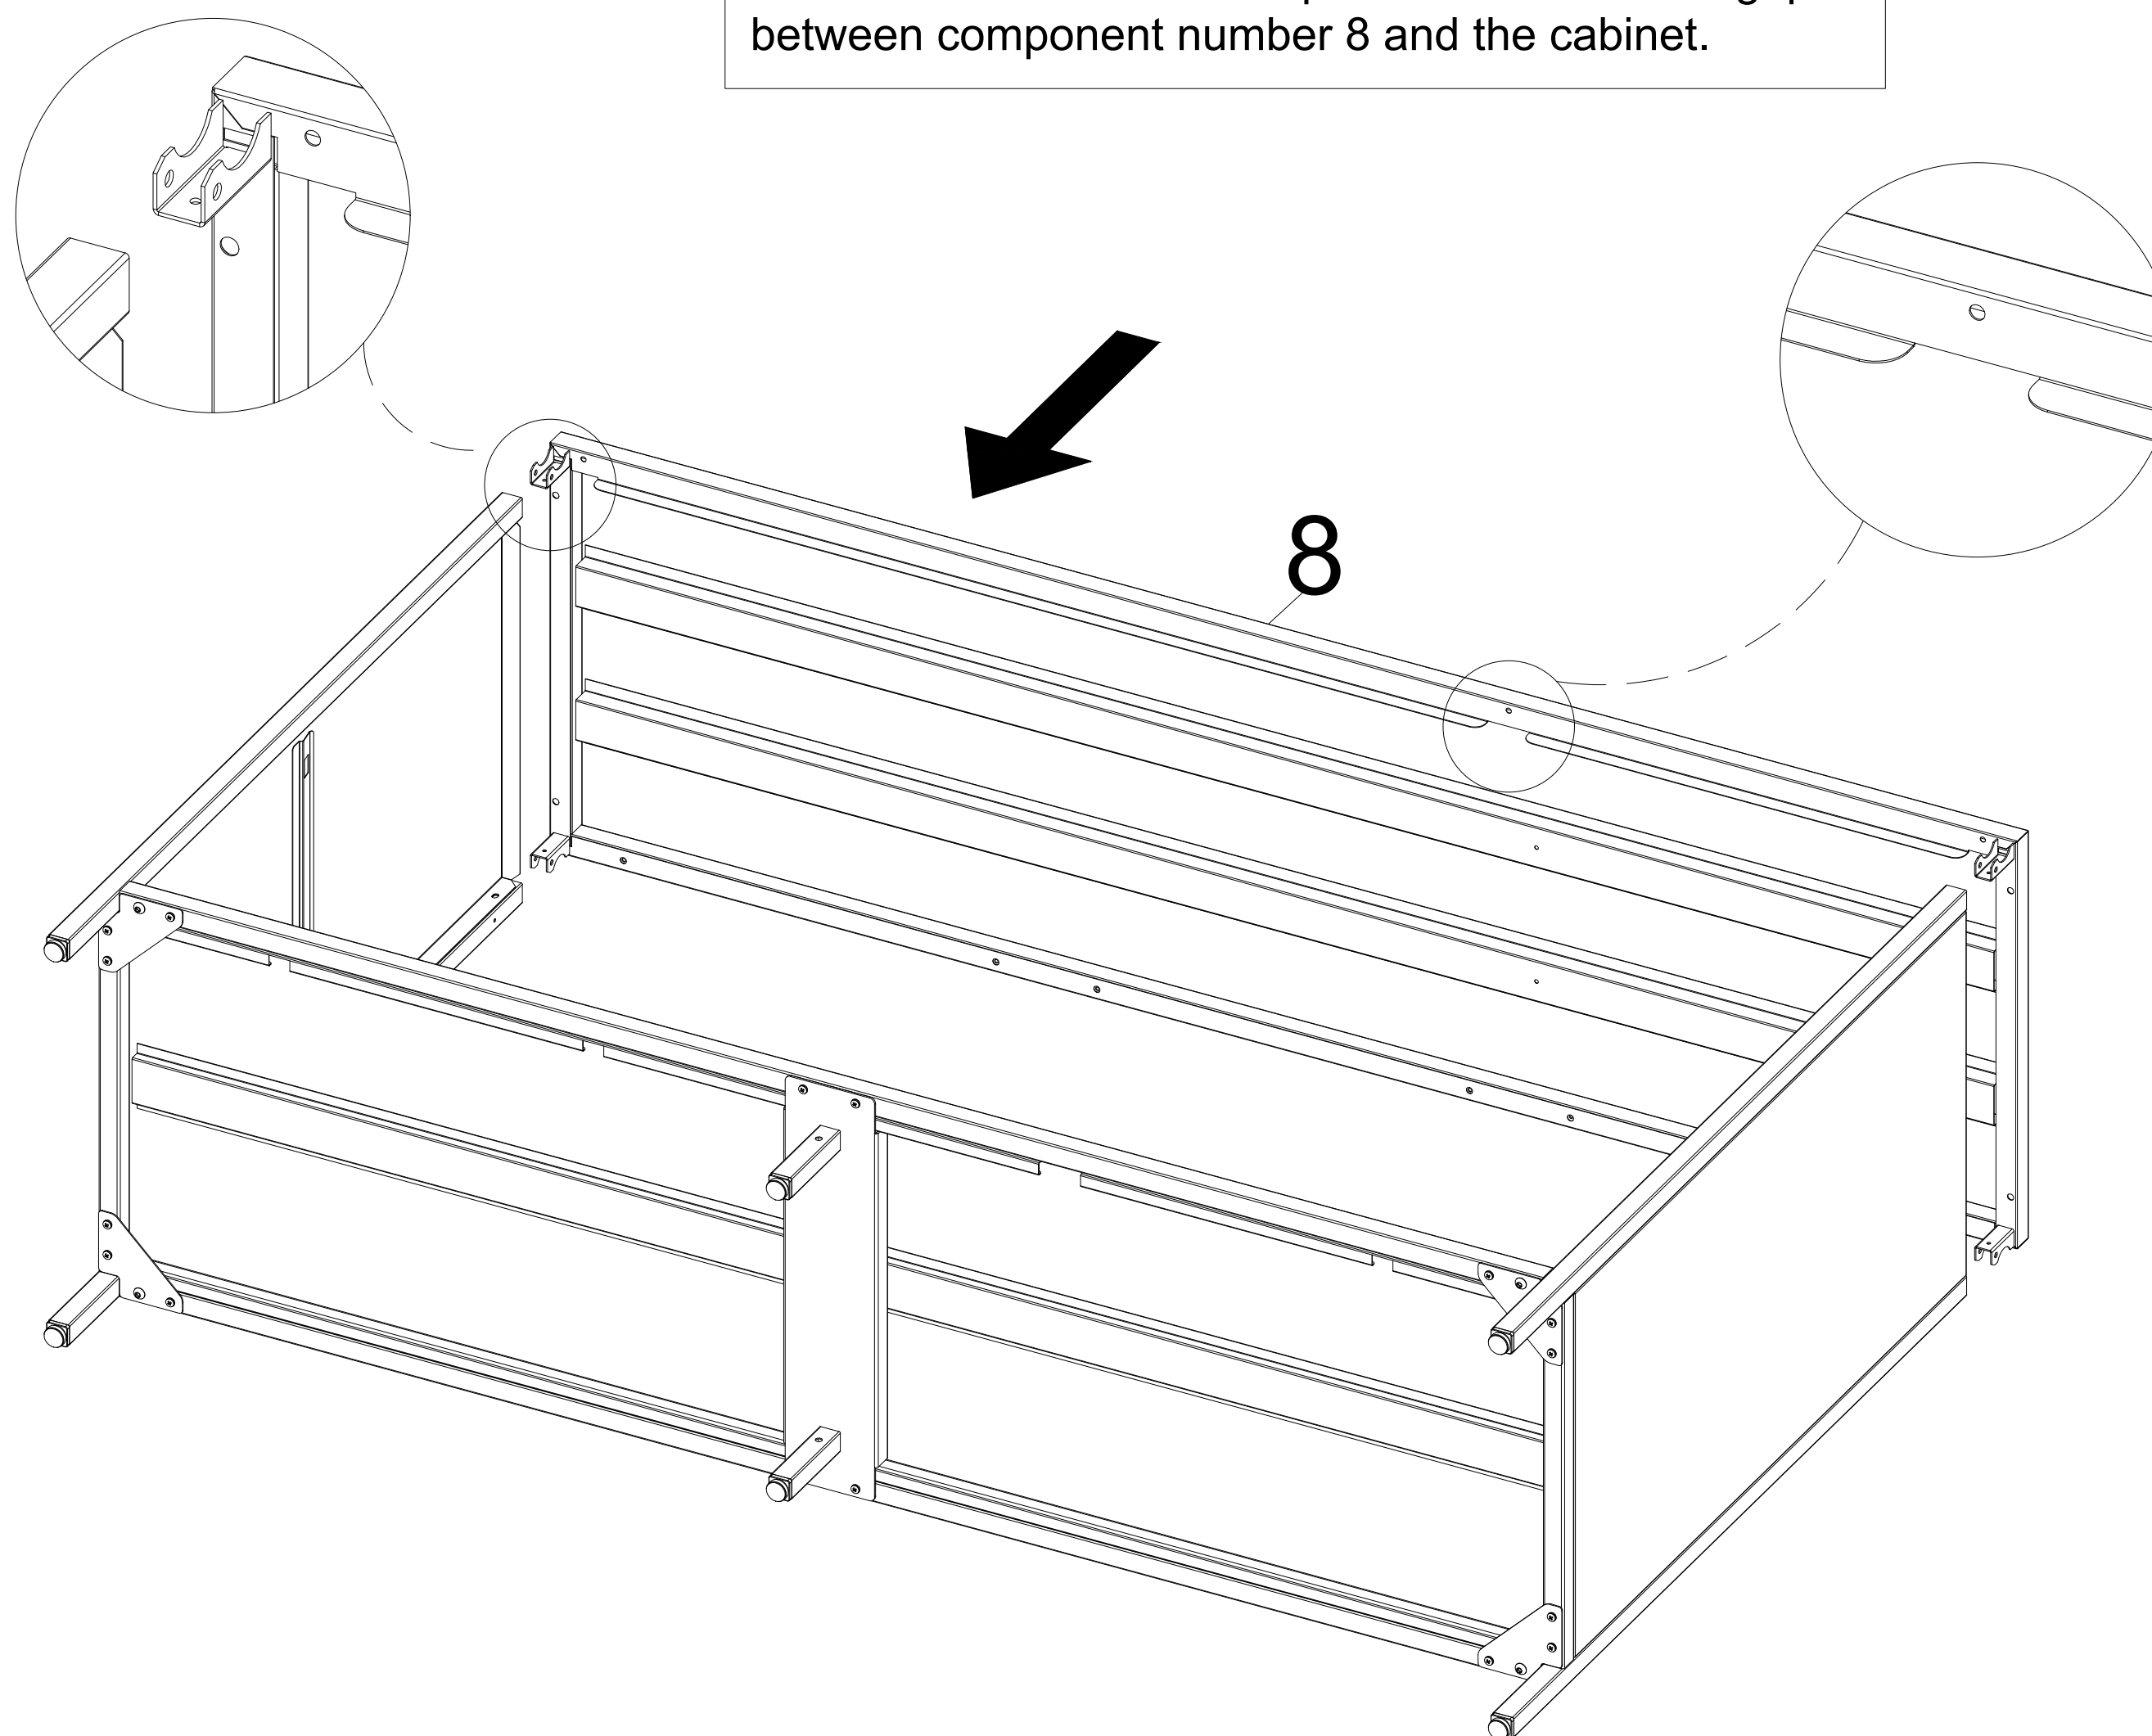


8

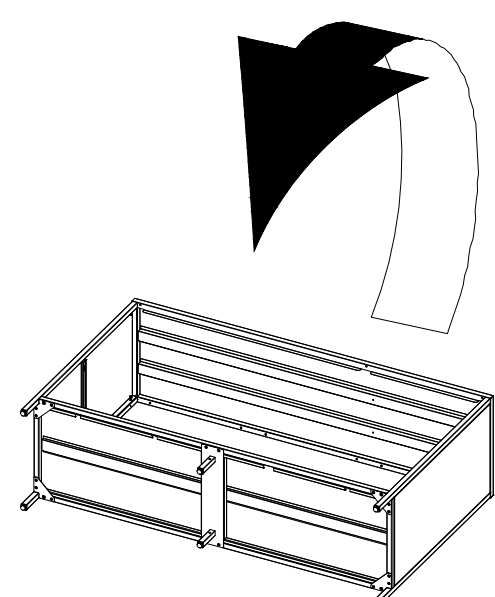






As shown in the figure, install A in place

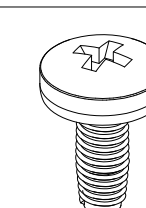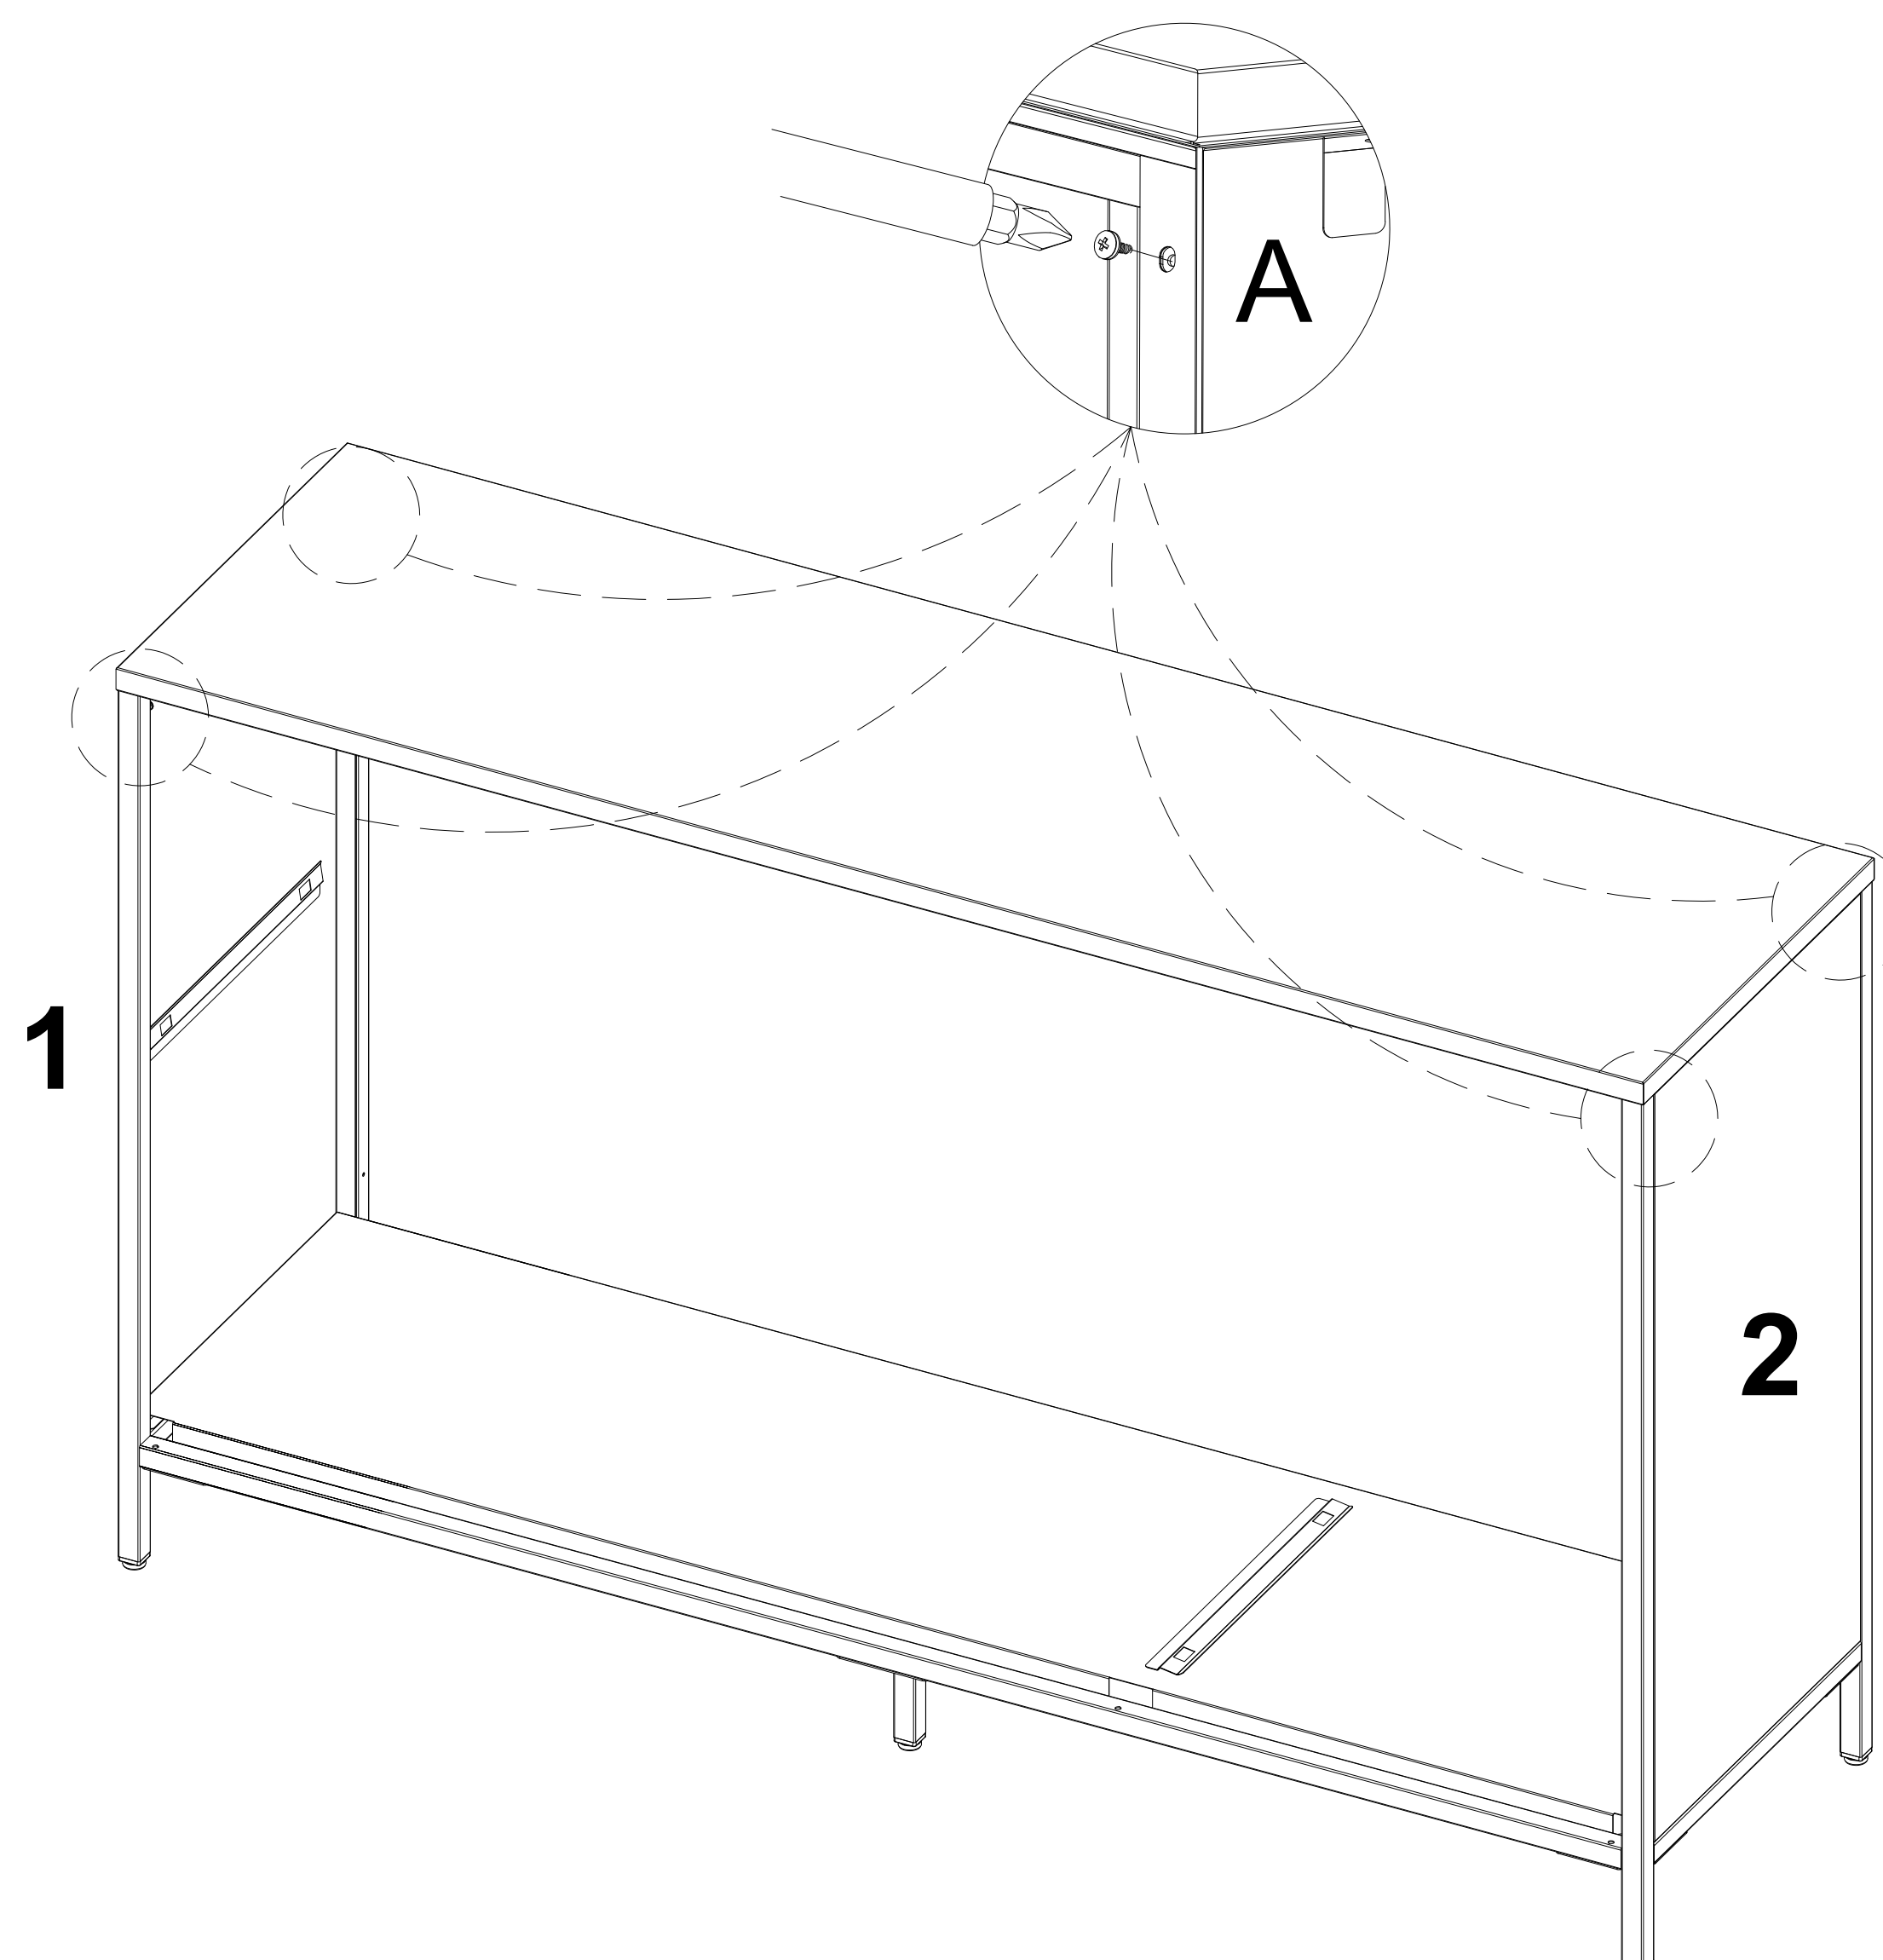**A×4**

9




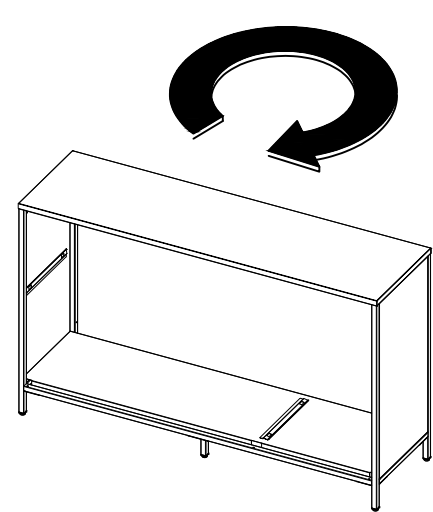


Rotate the cabinet according to the illustration and then proceed with assembly.

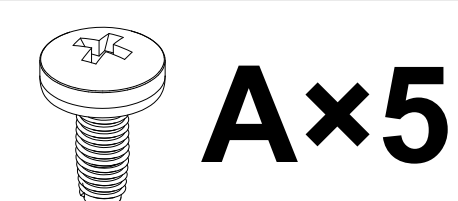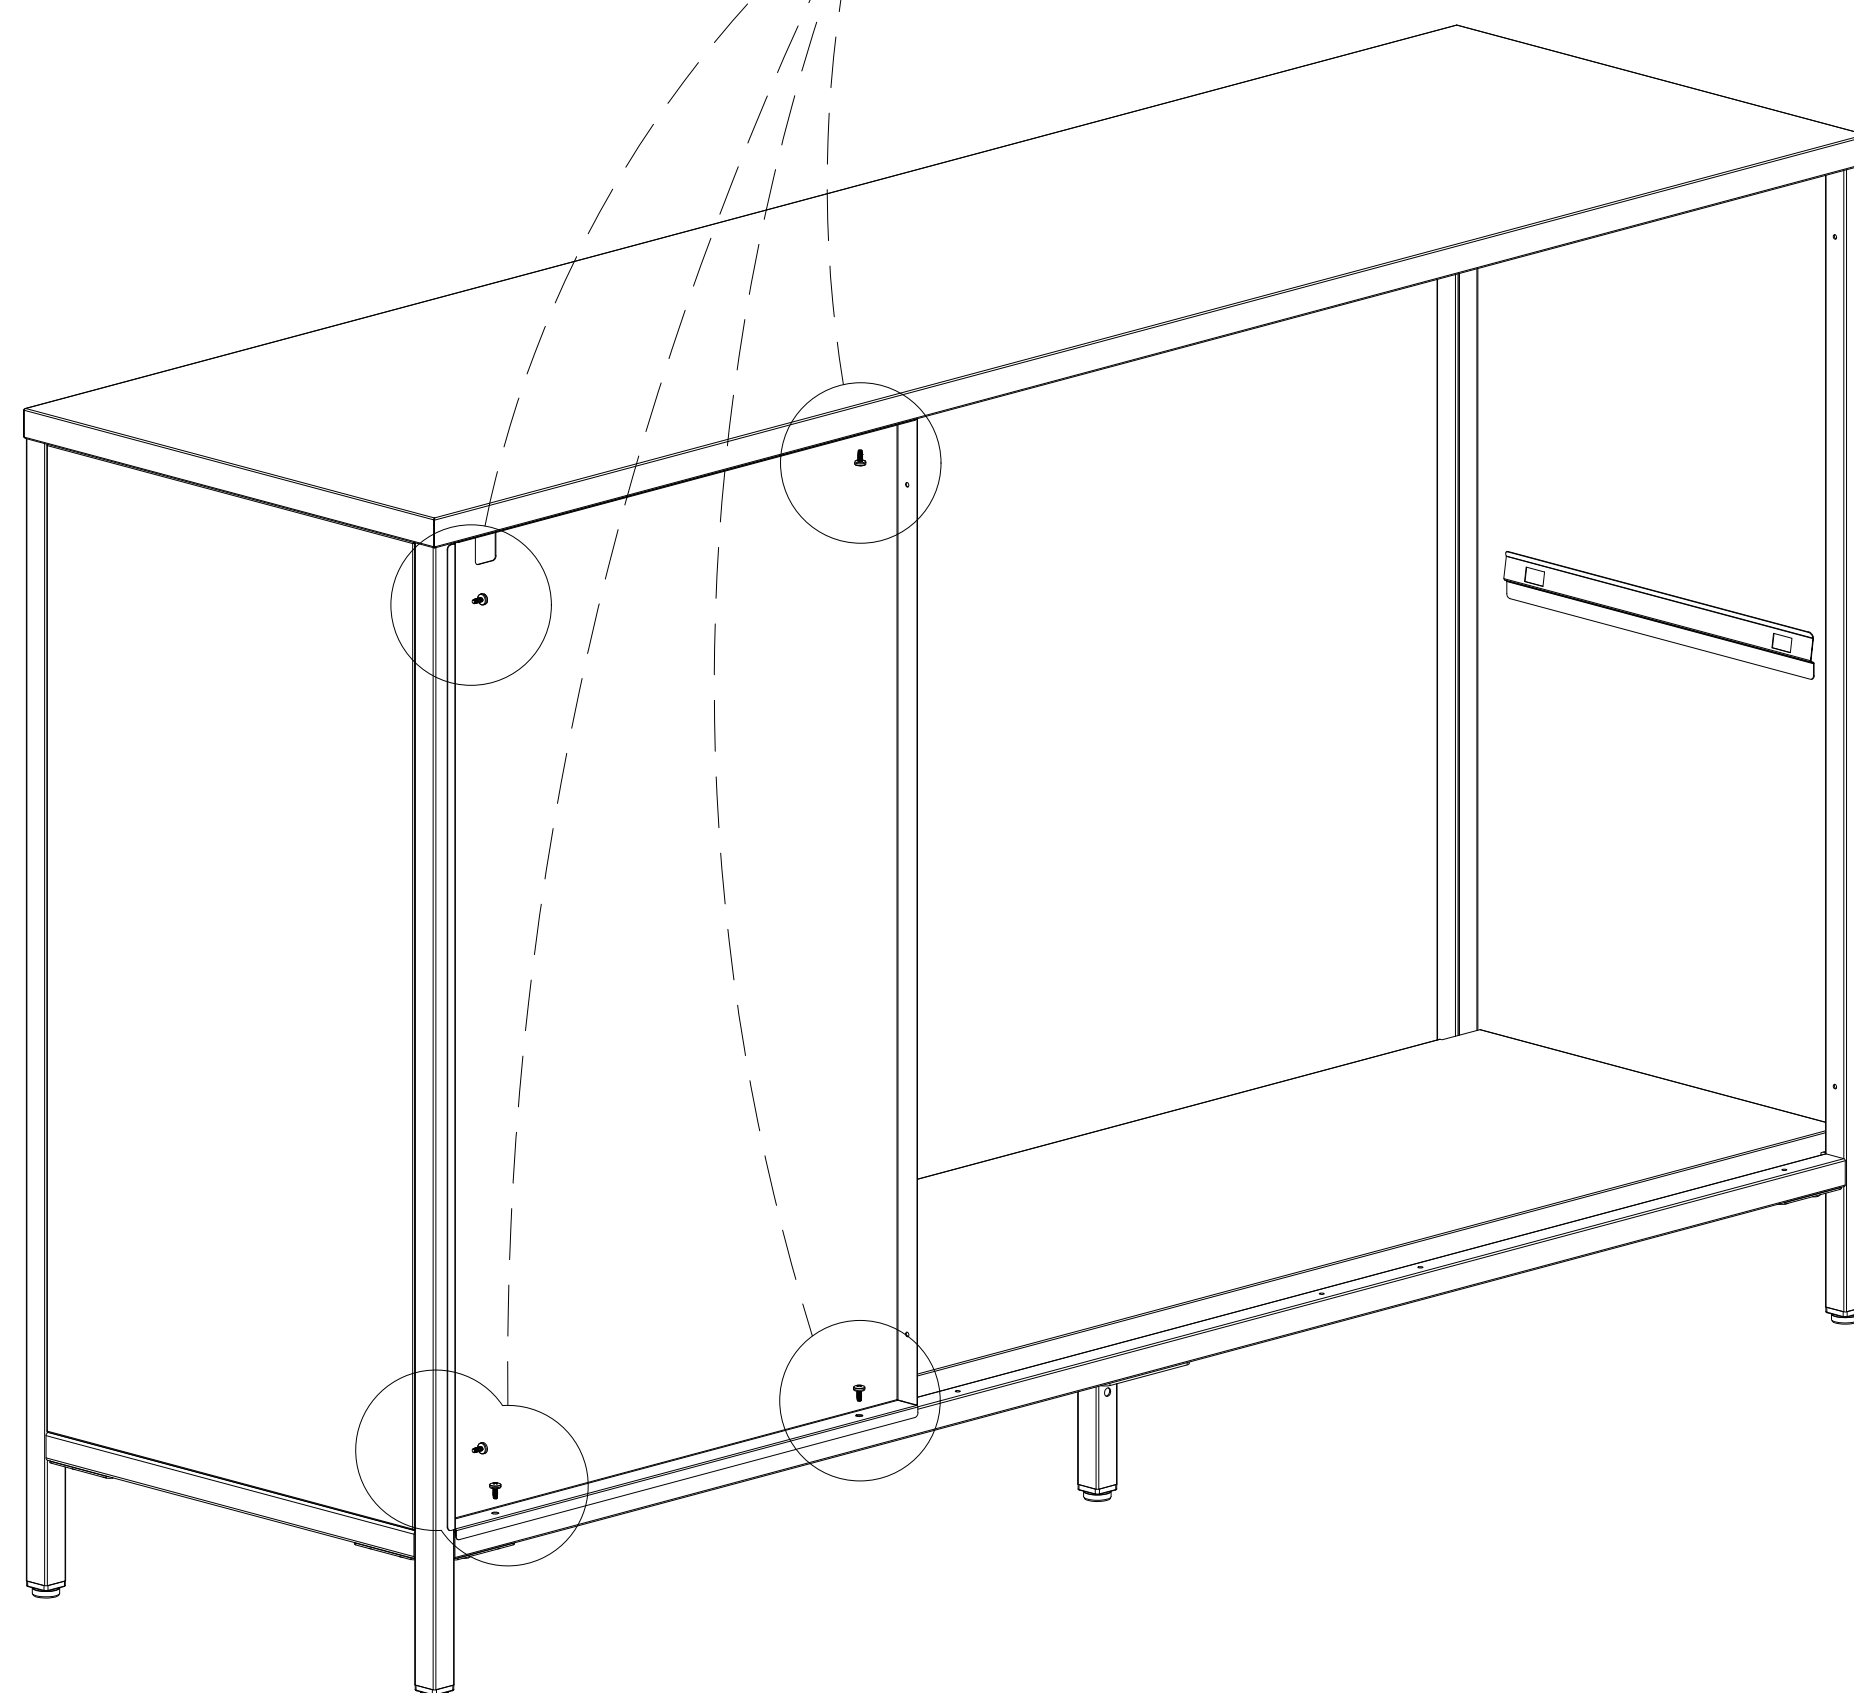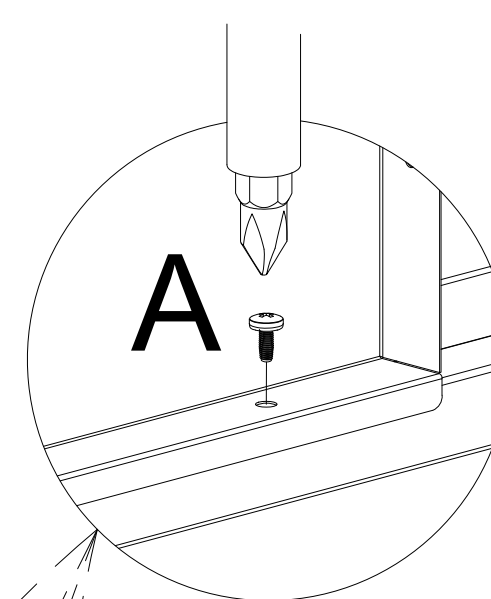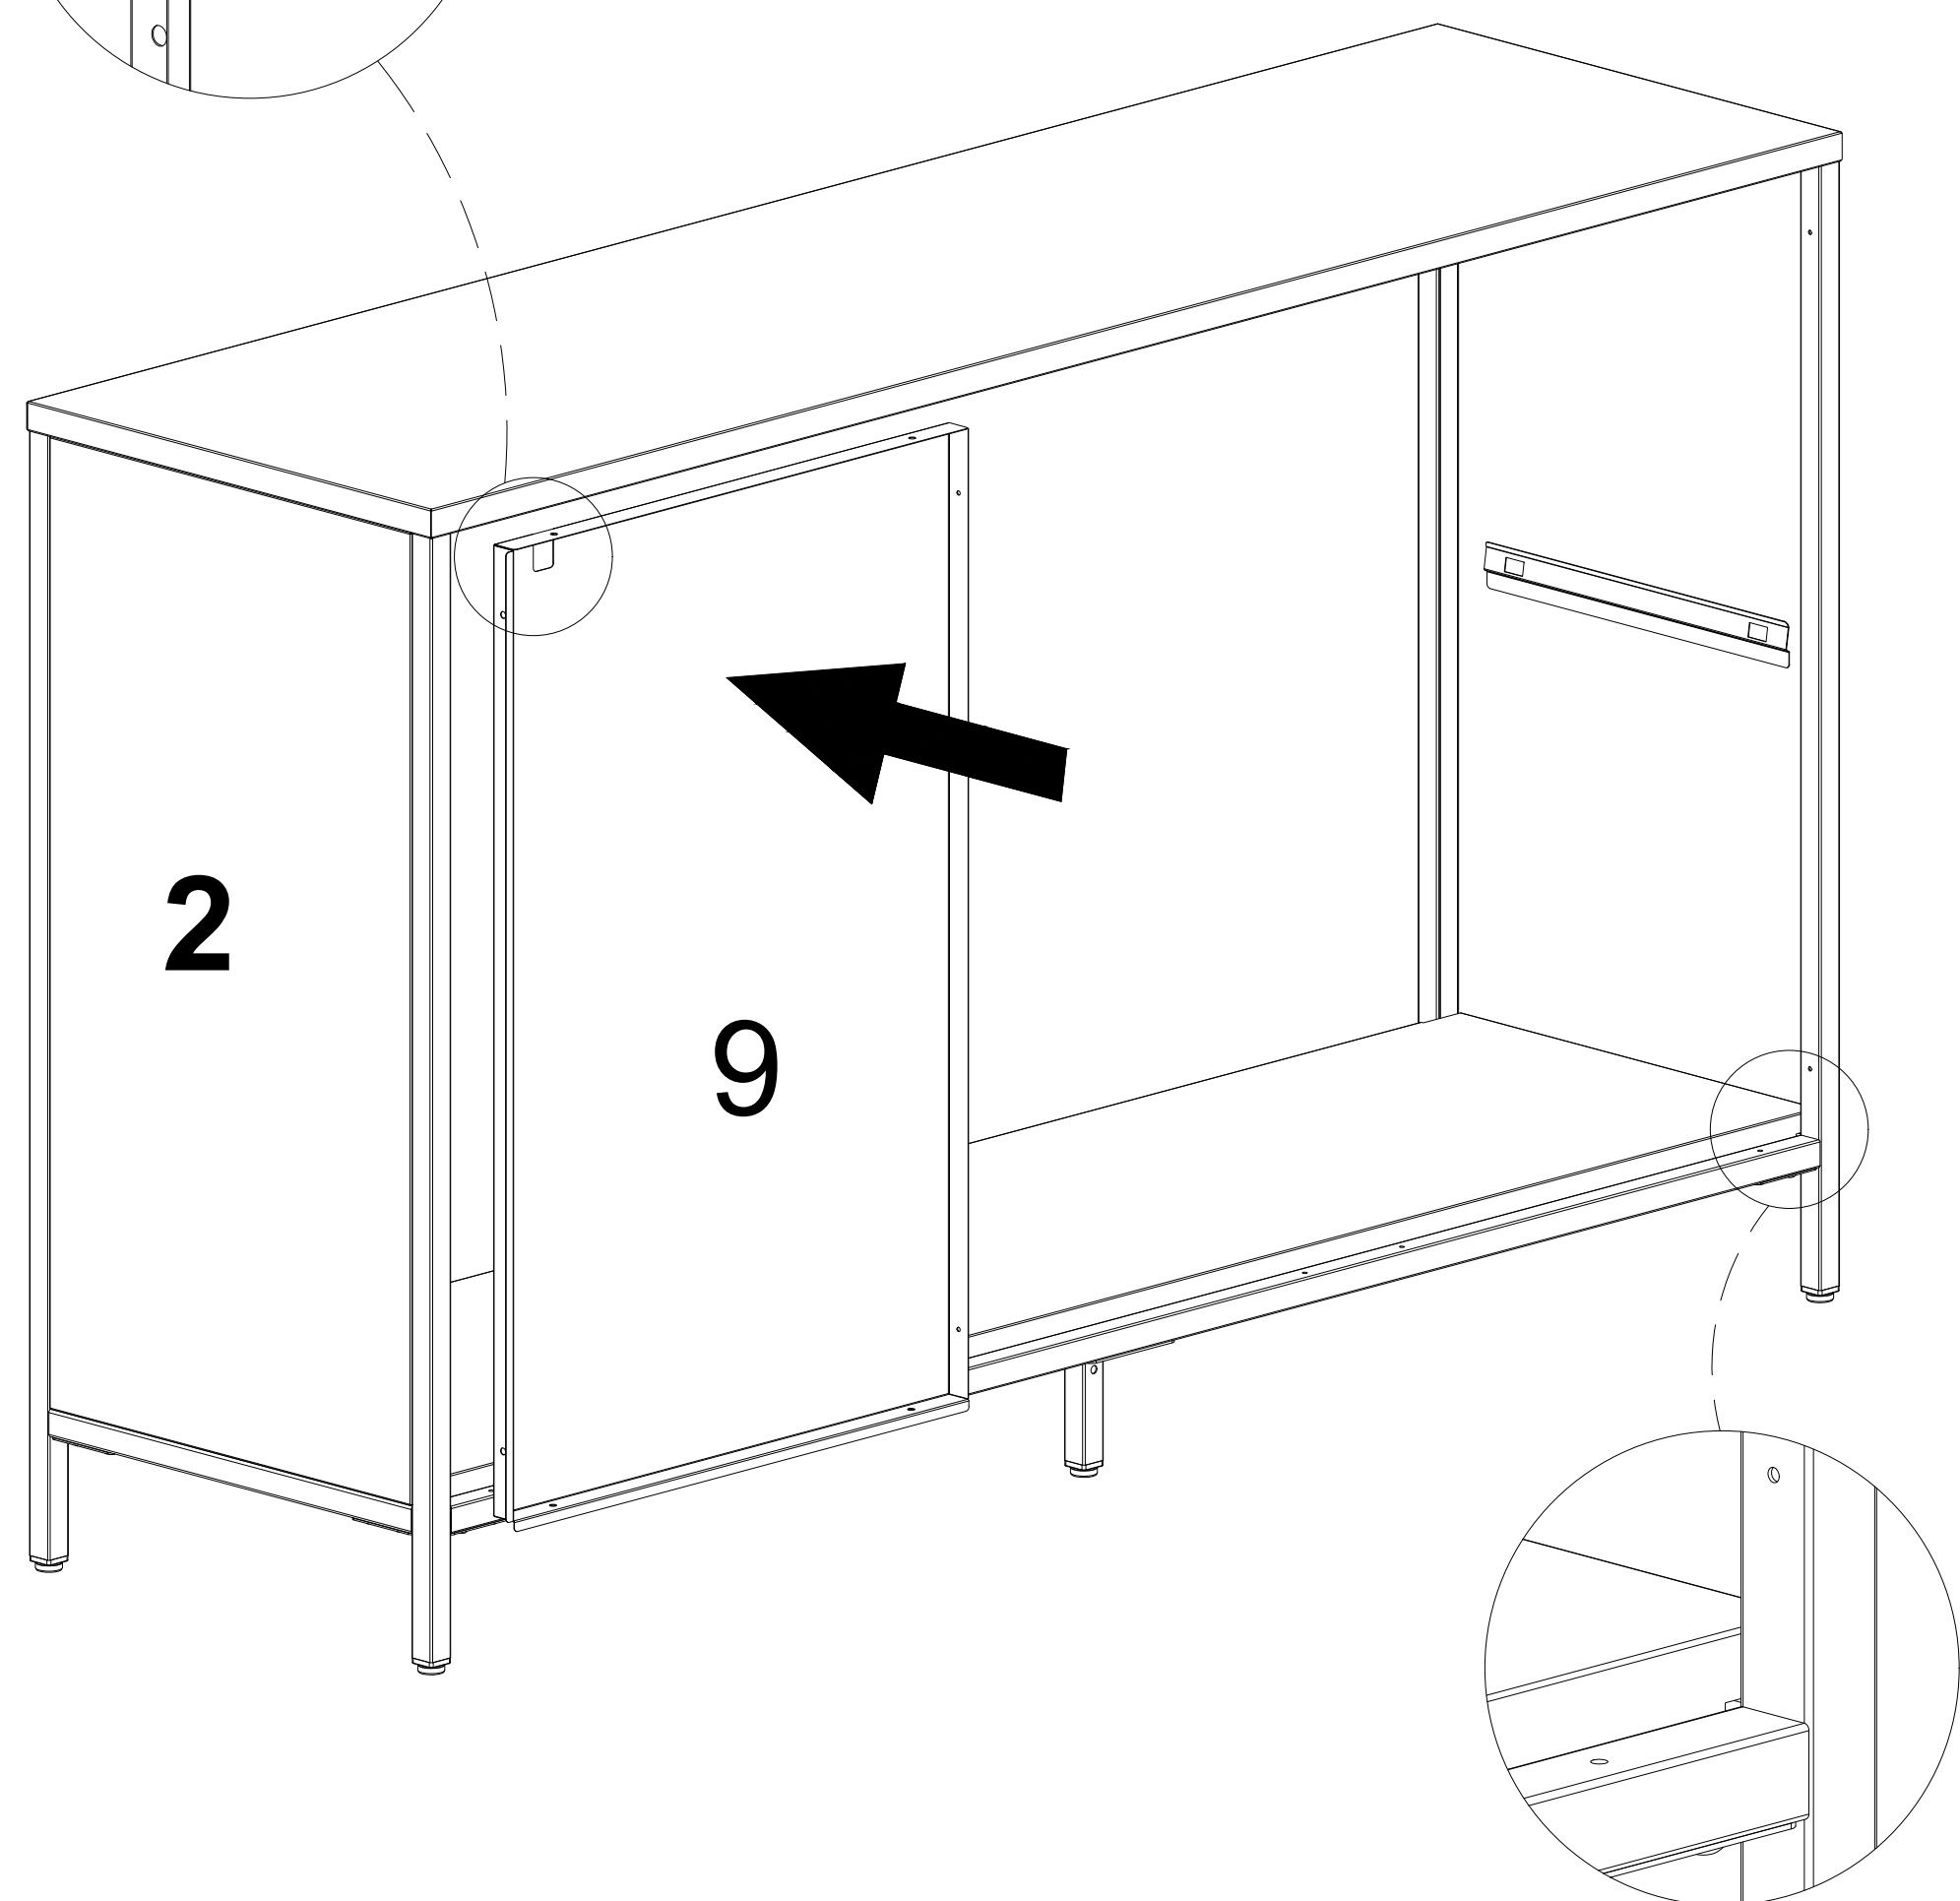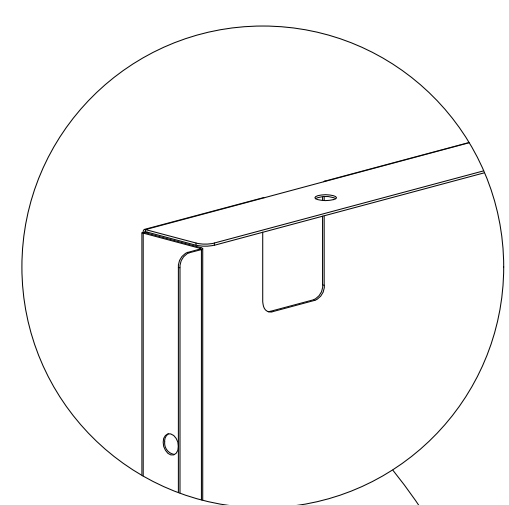


10


Pay attention to the installation orientation of part number 10.

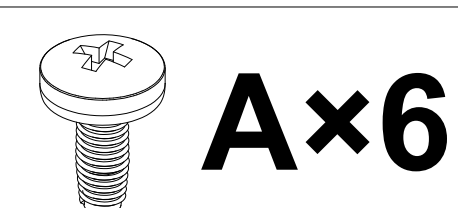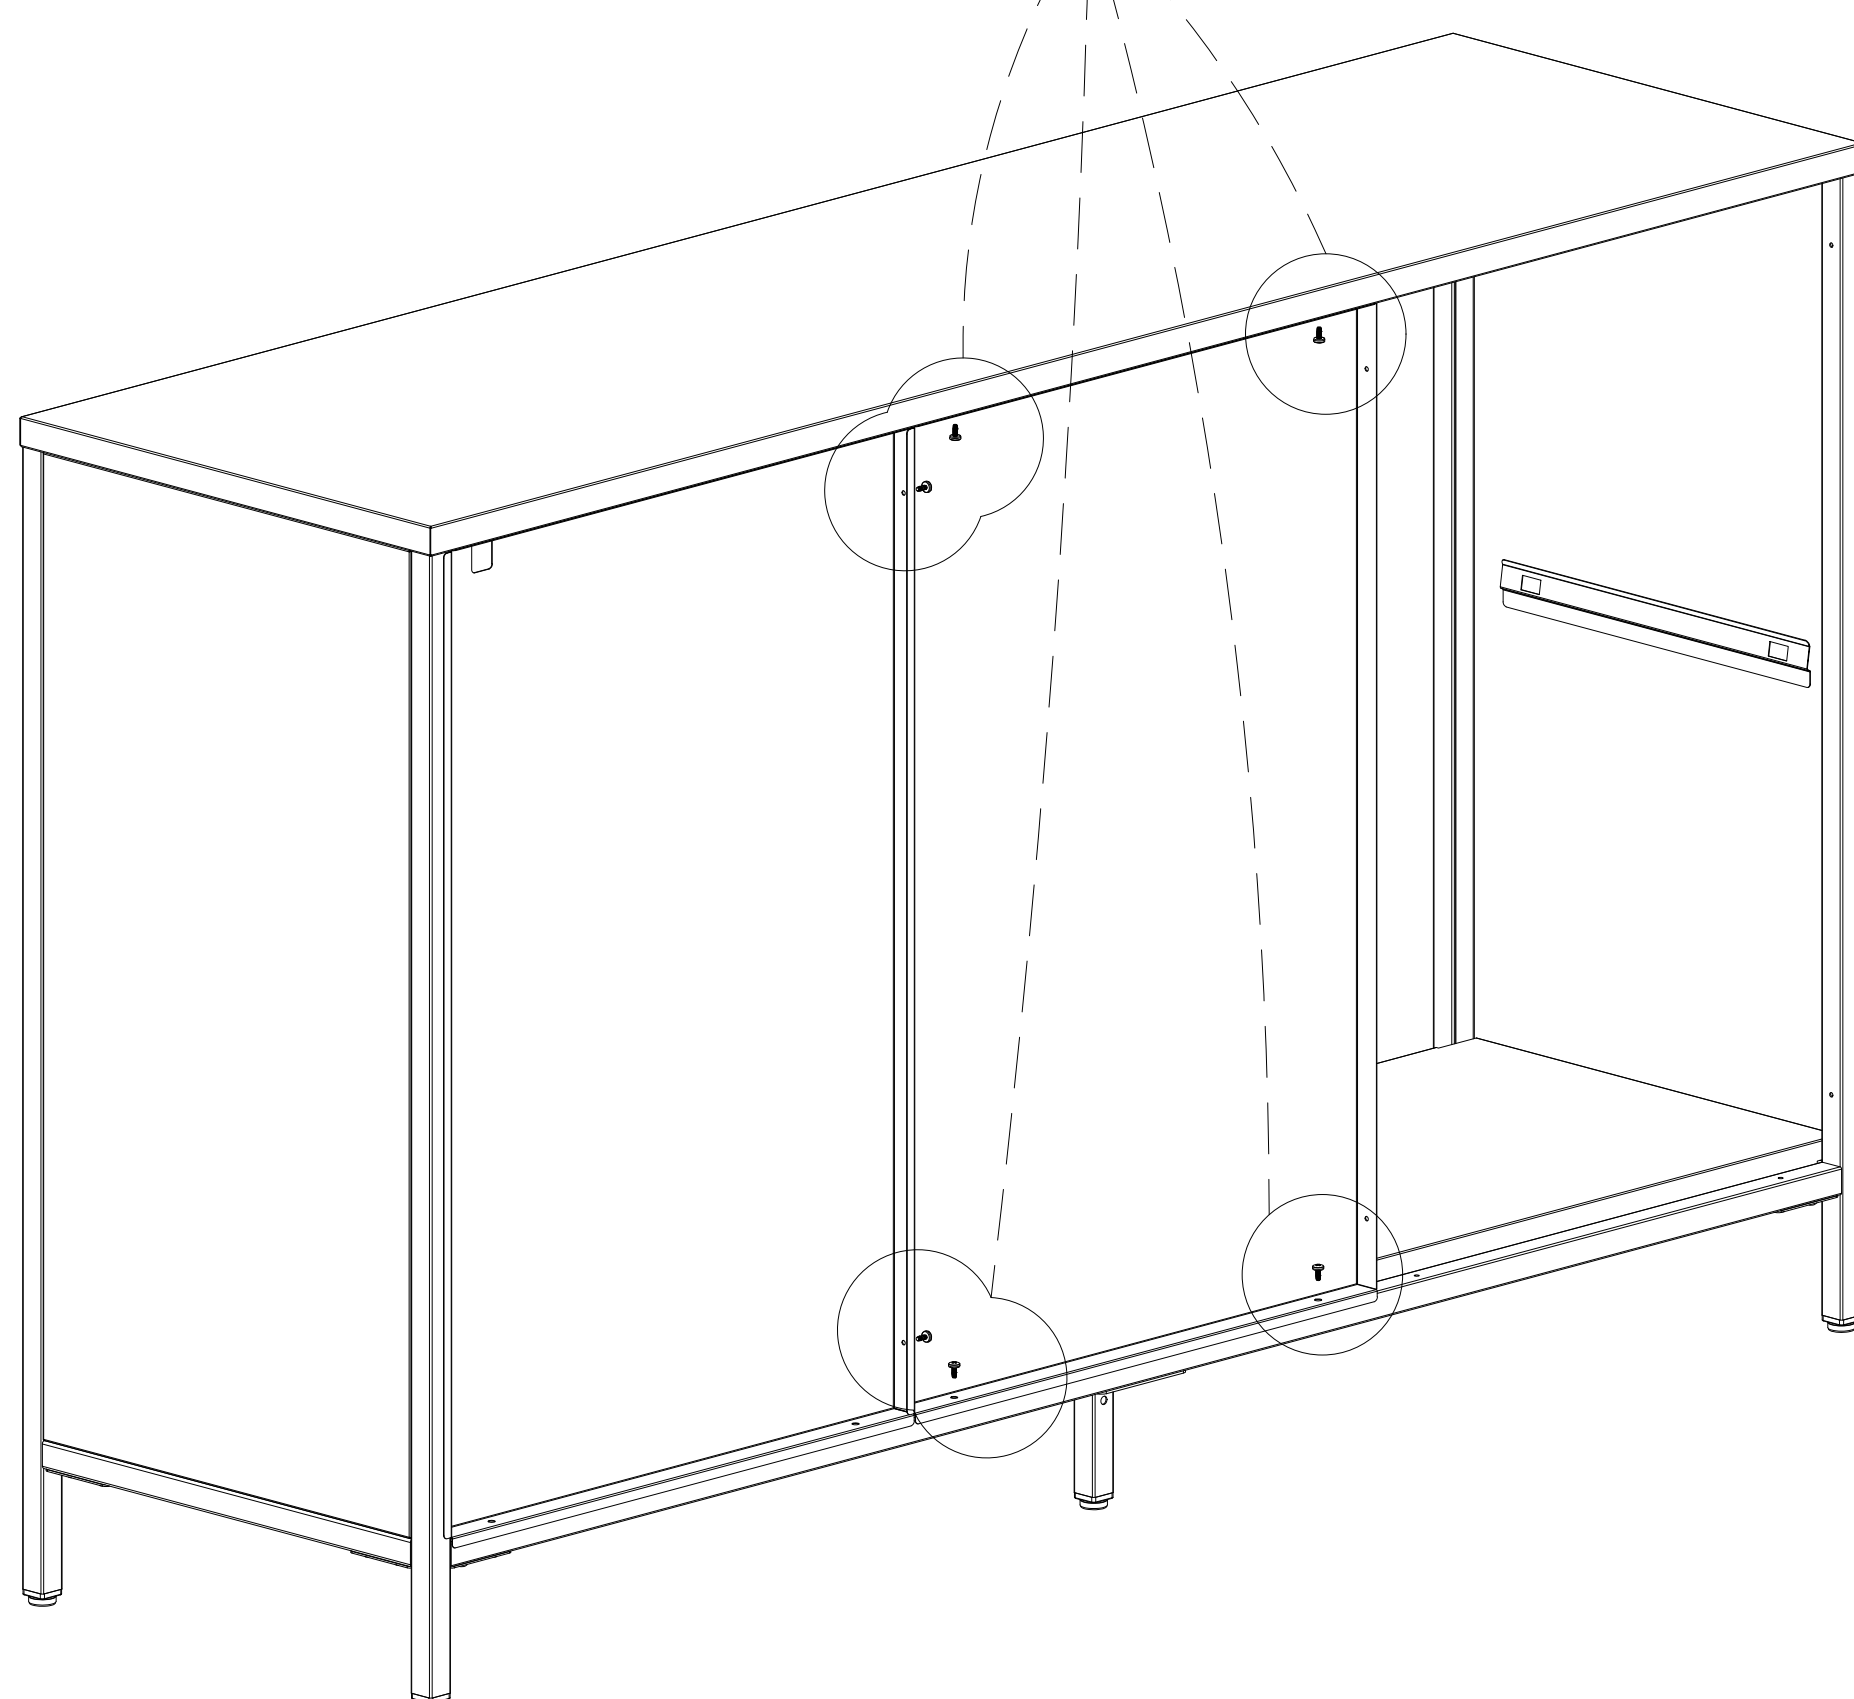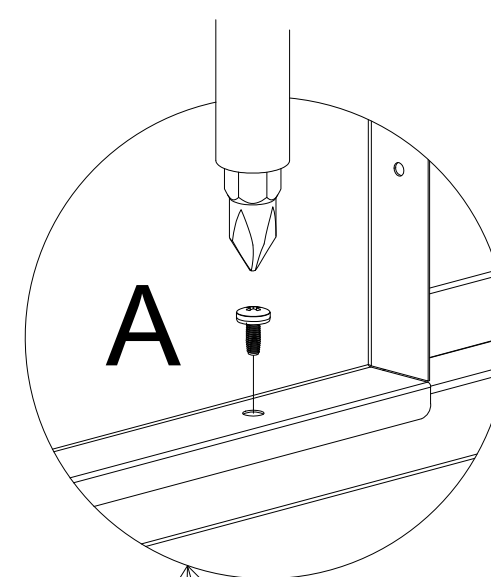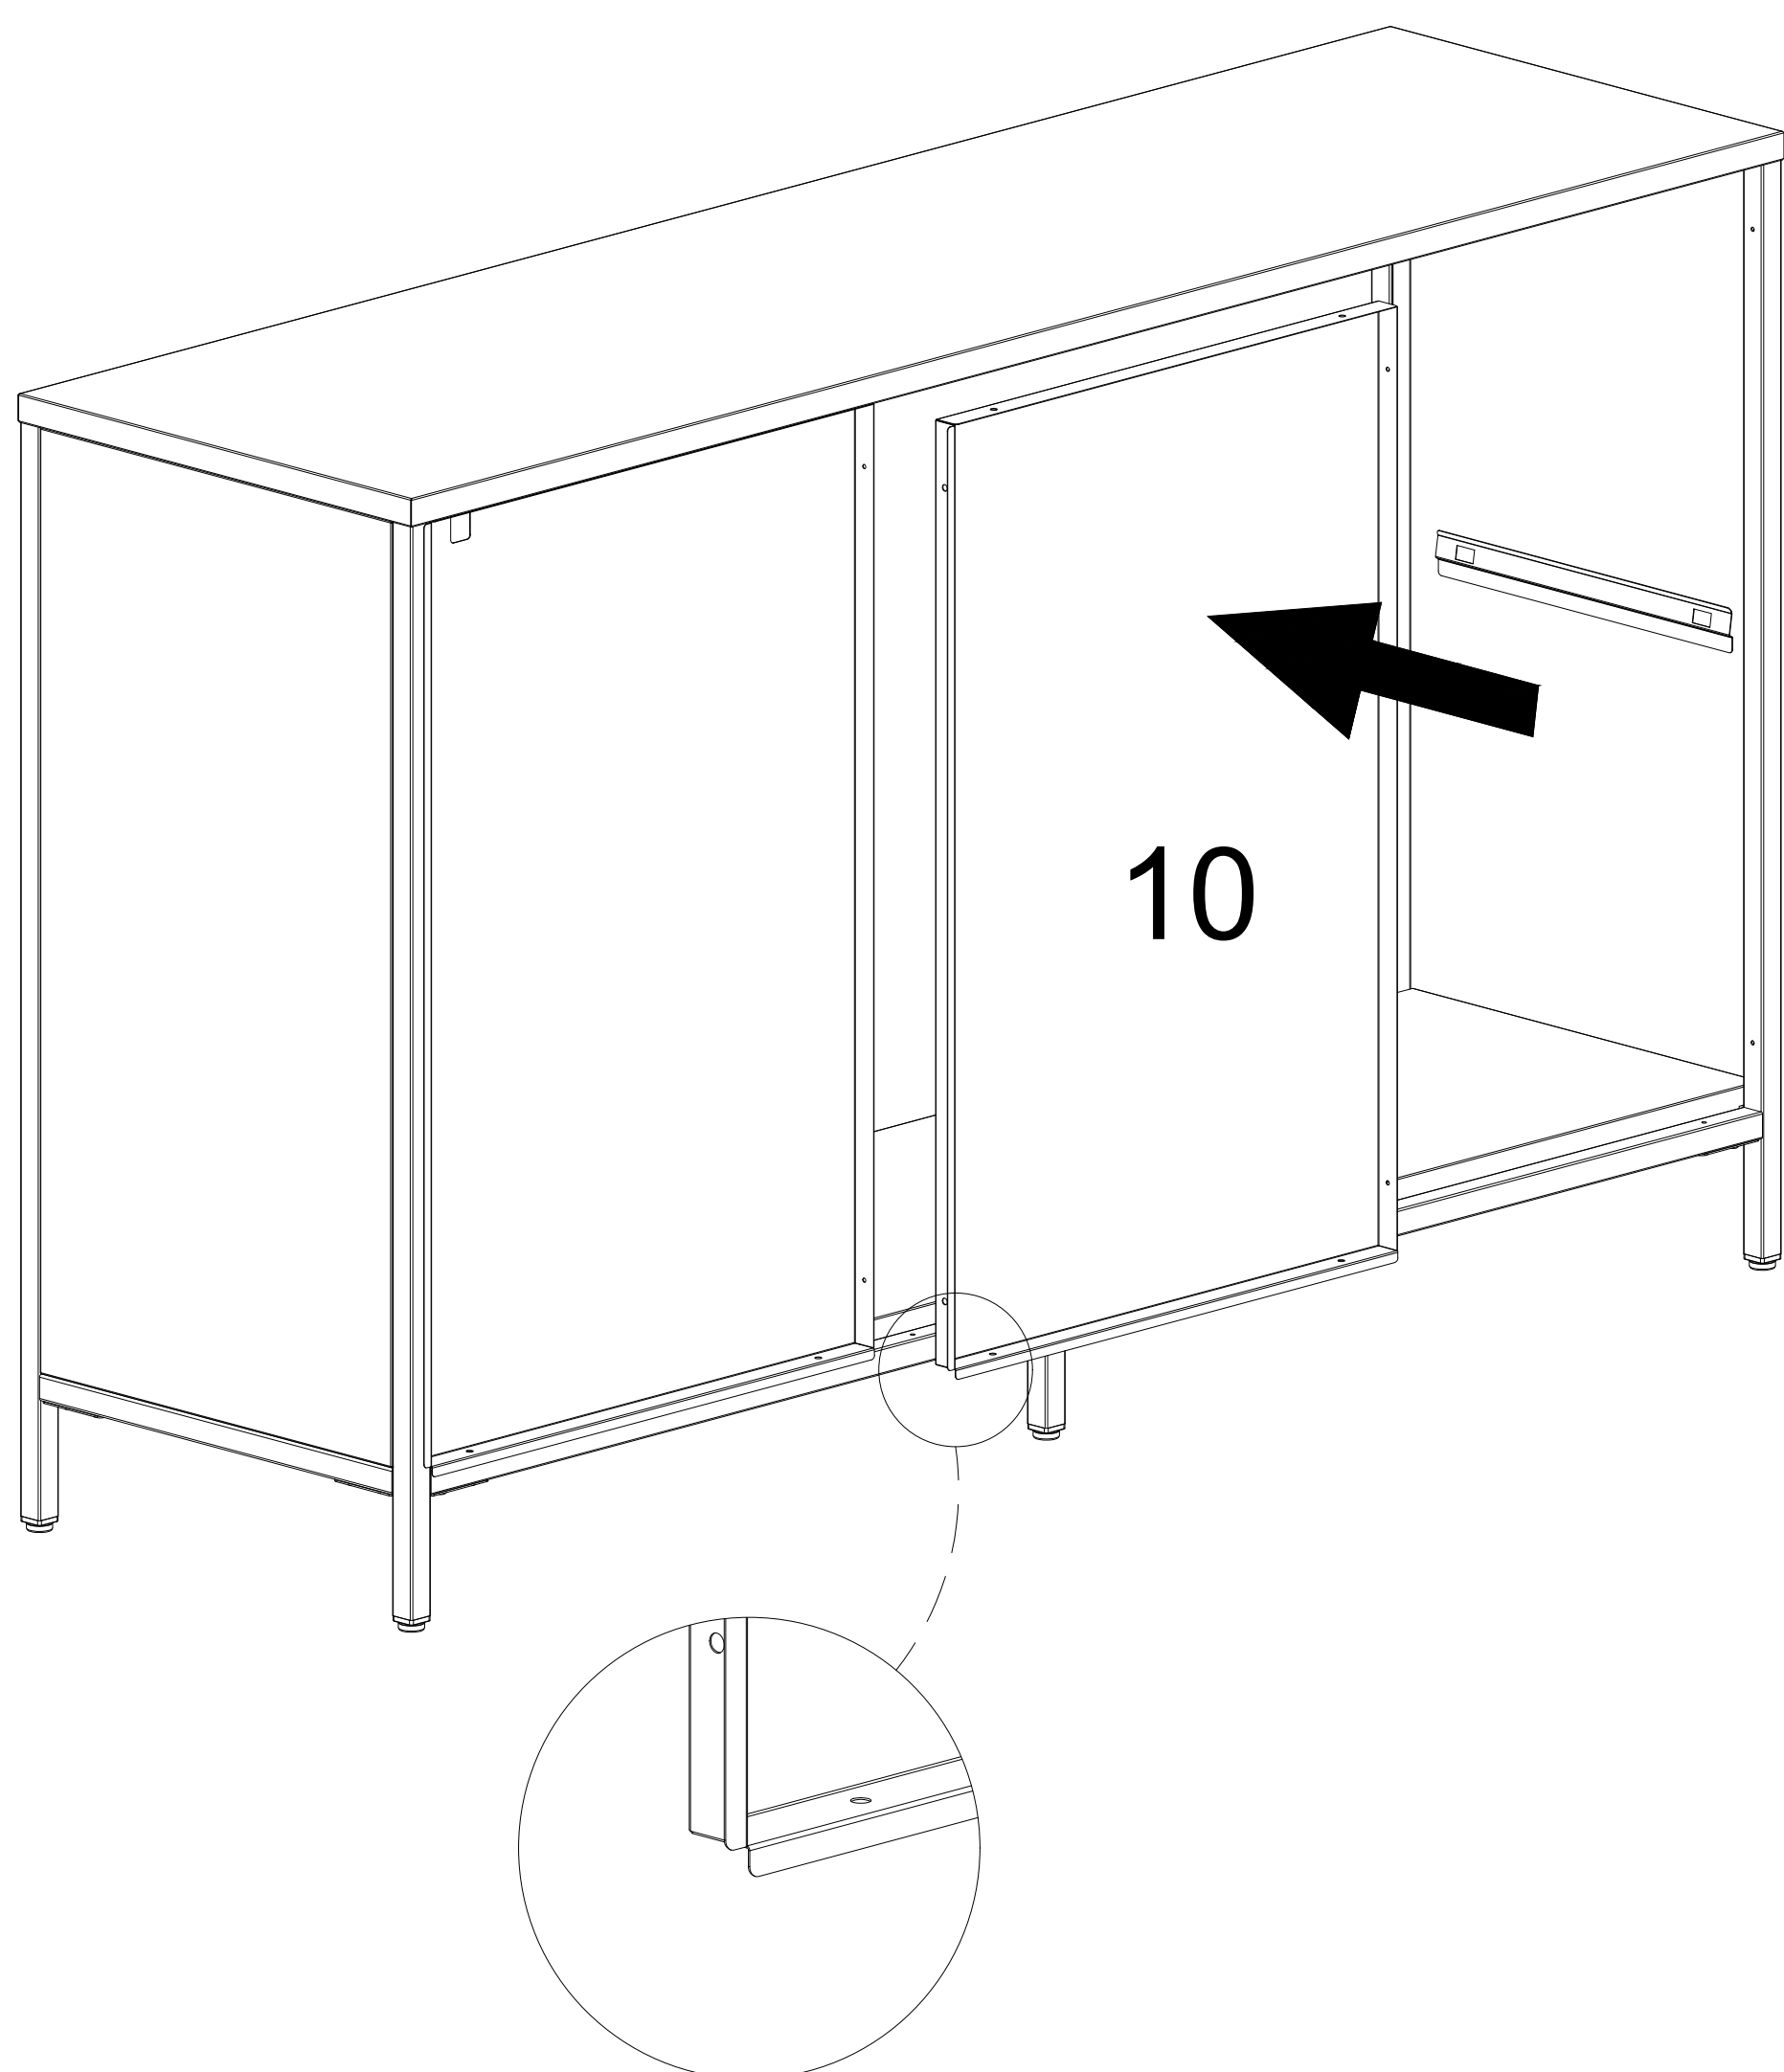



11

Pay attention to the installation orientation of part number 11 and note the position of the notch, which does not require screw installation.

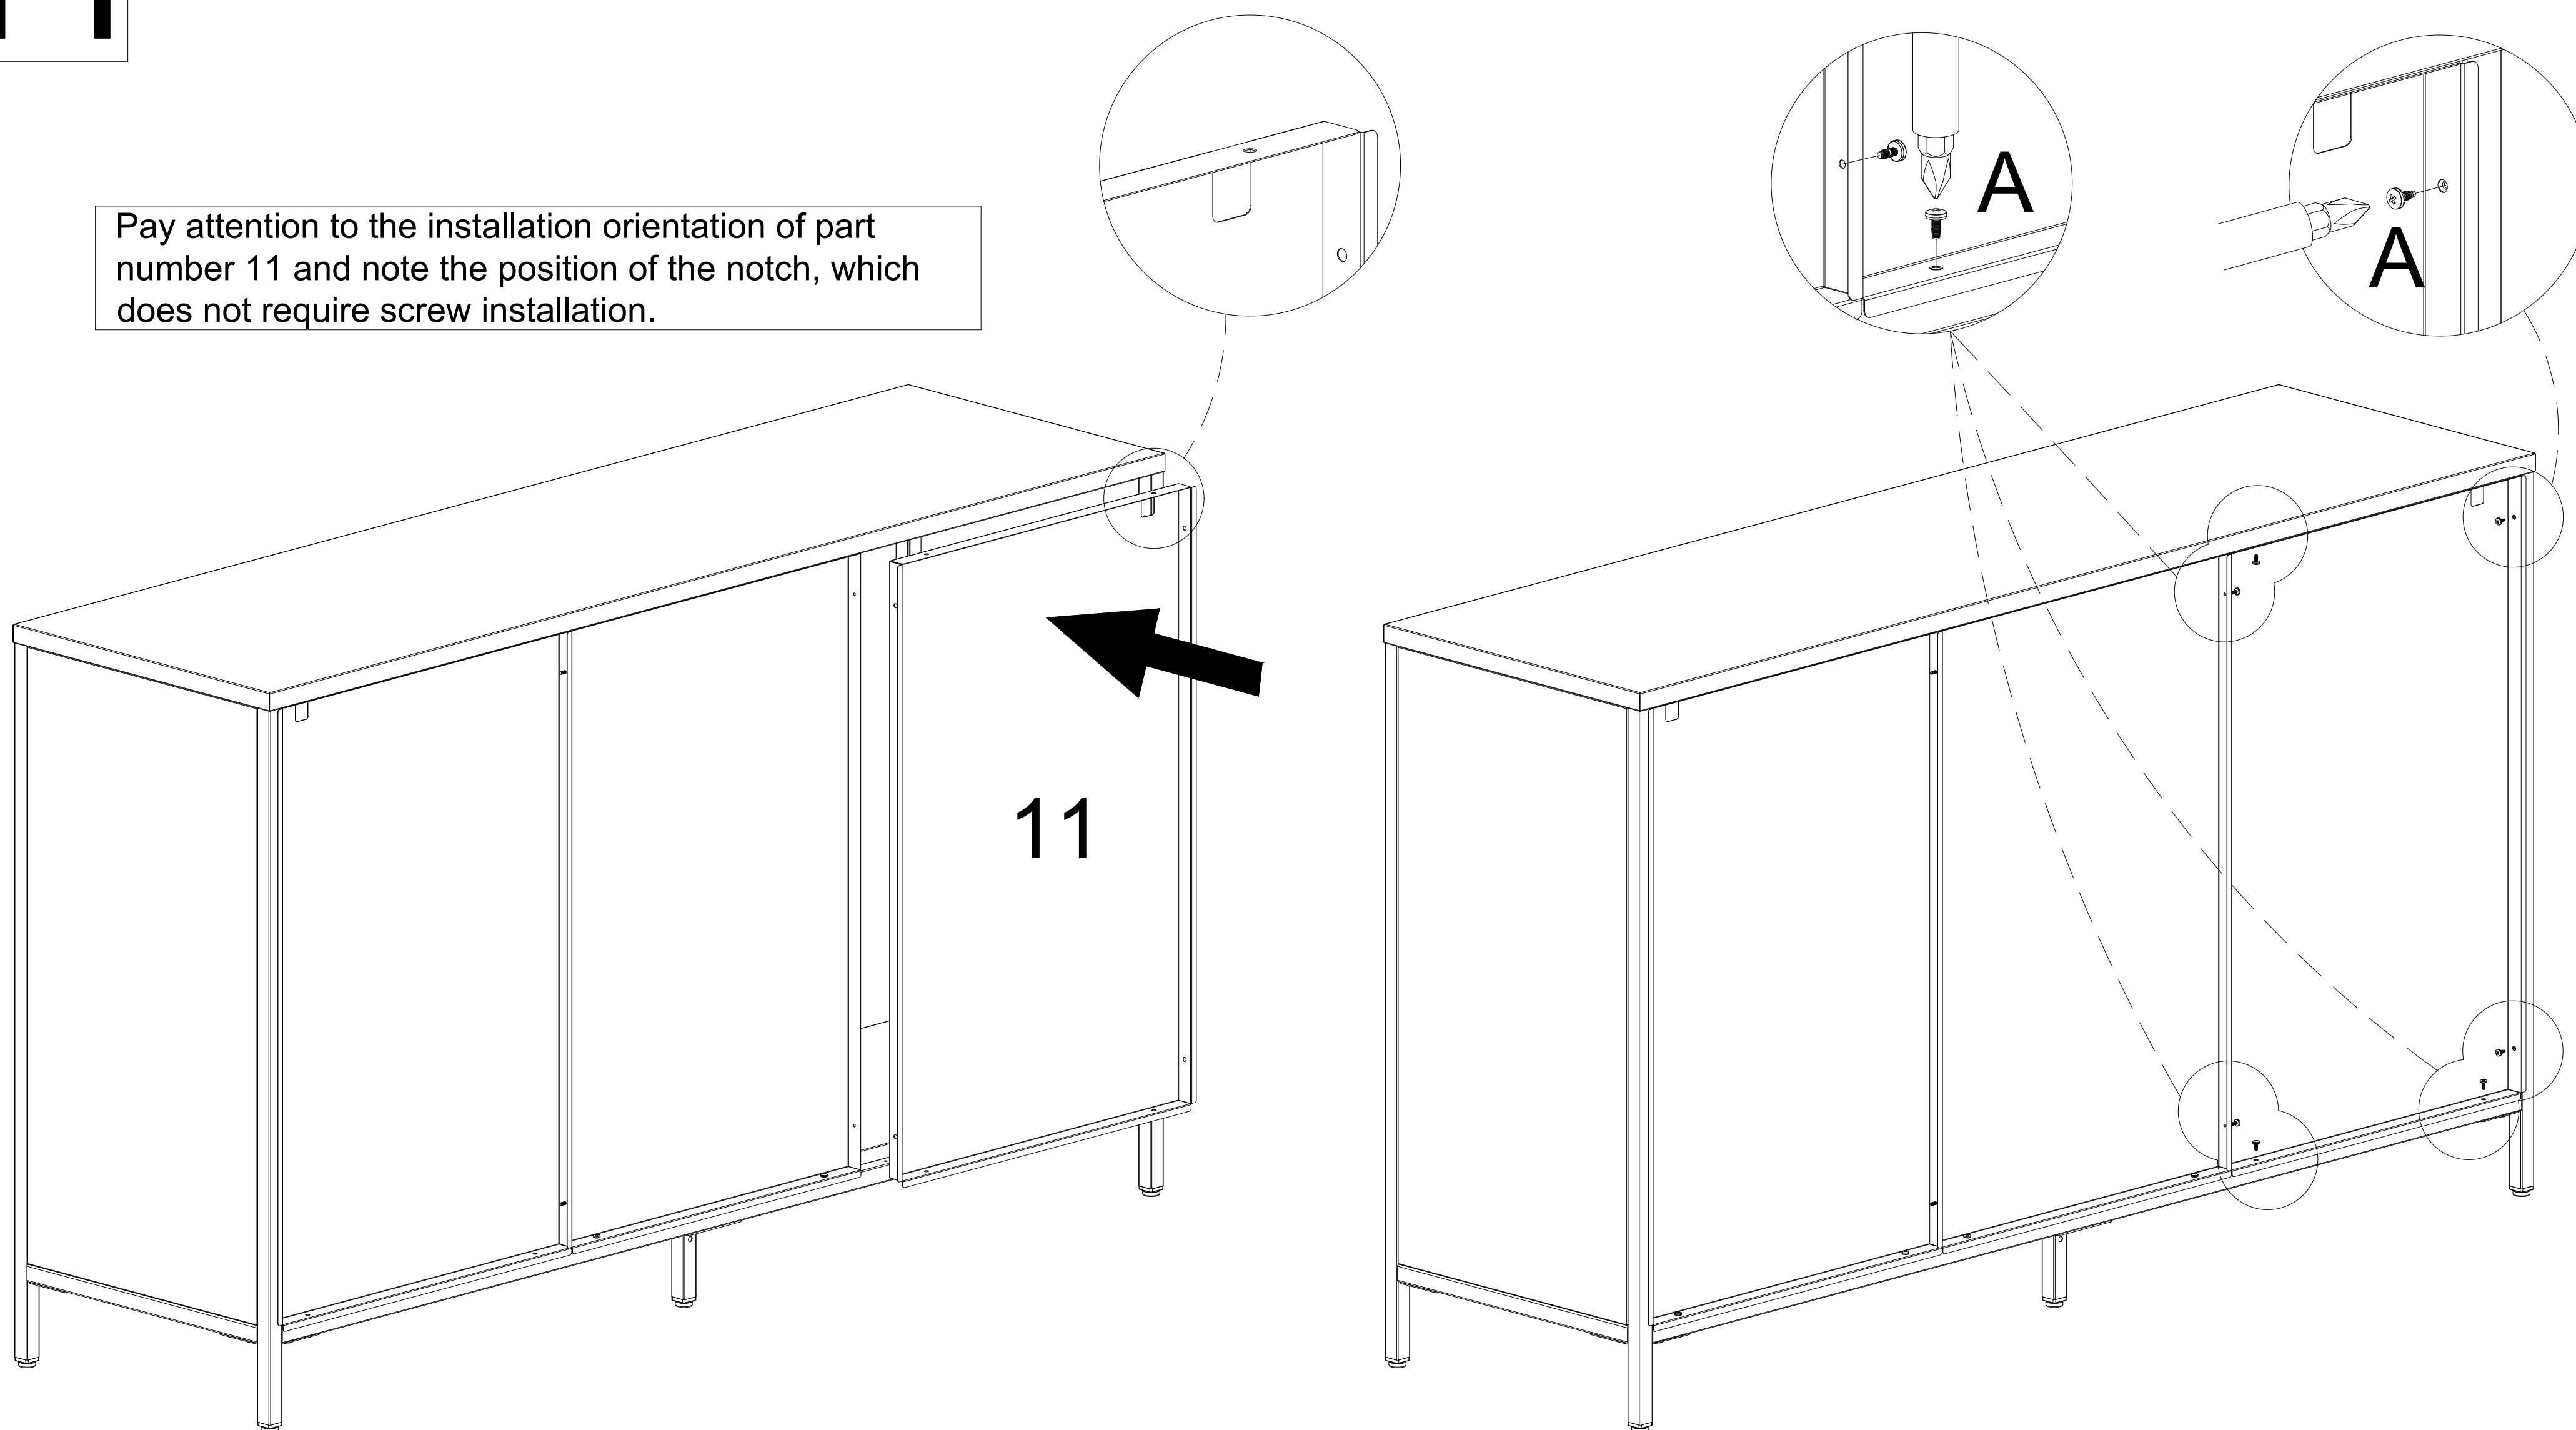


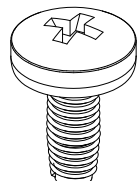 **A×7**

12

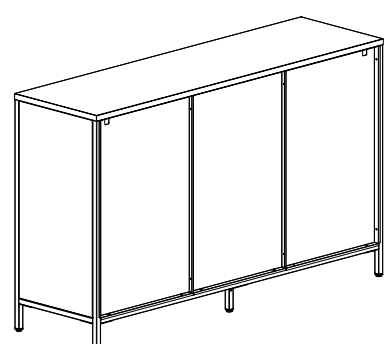
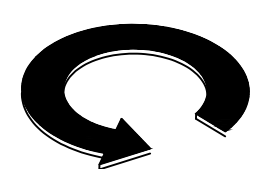


When installing part number 12, apply force and tap on the indicated arrow position until a clicking sound is heard, indicating the installation is complete.

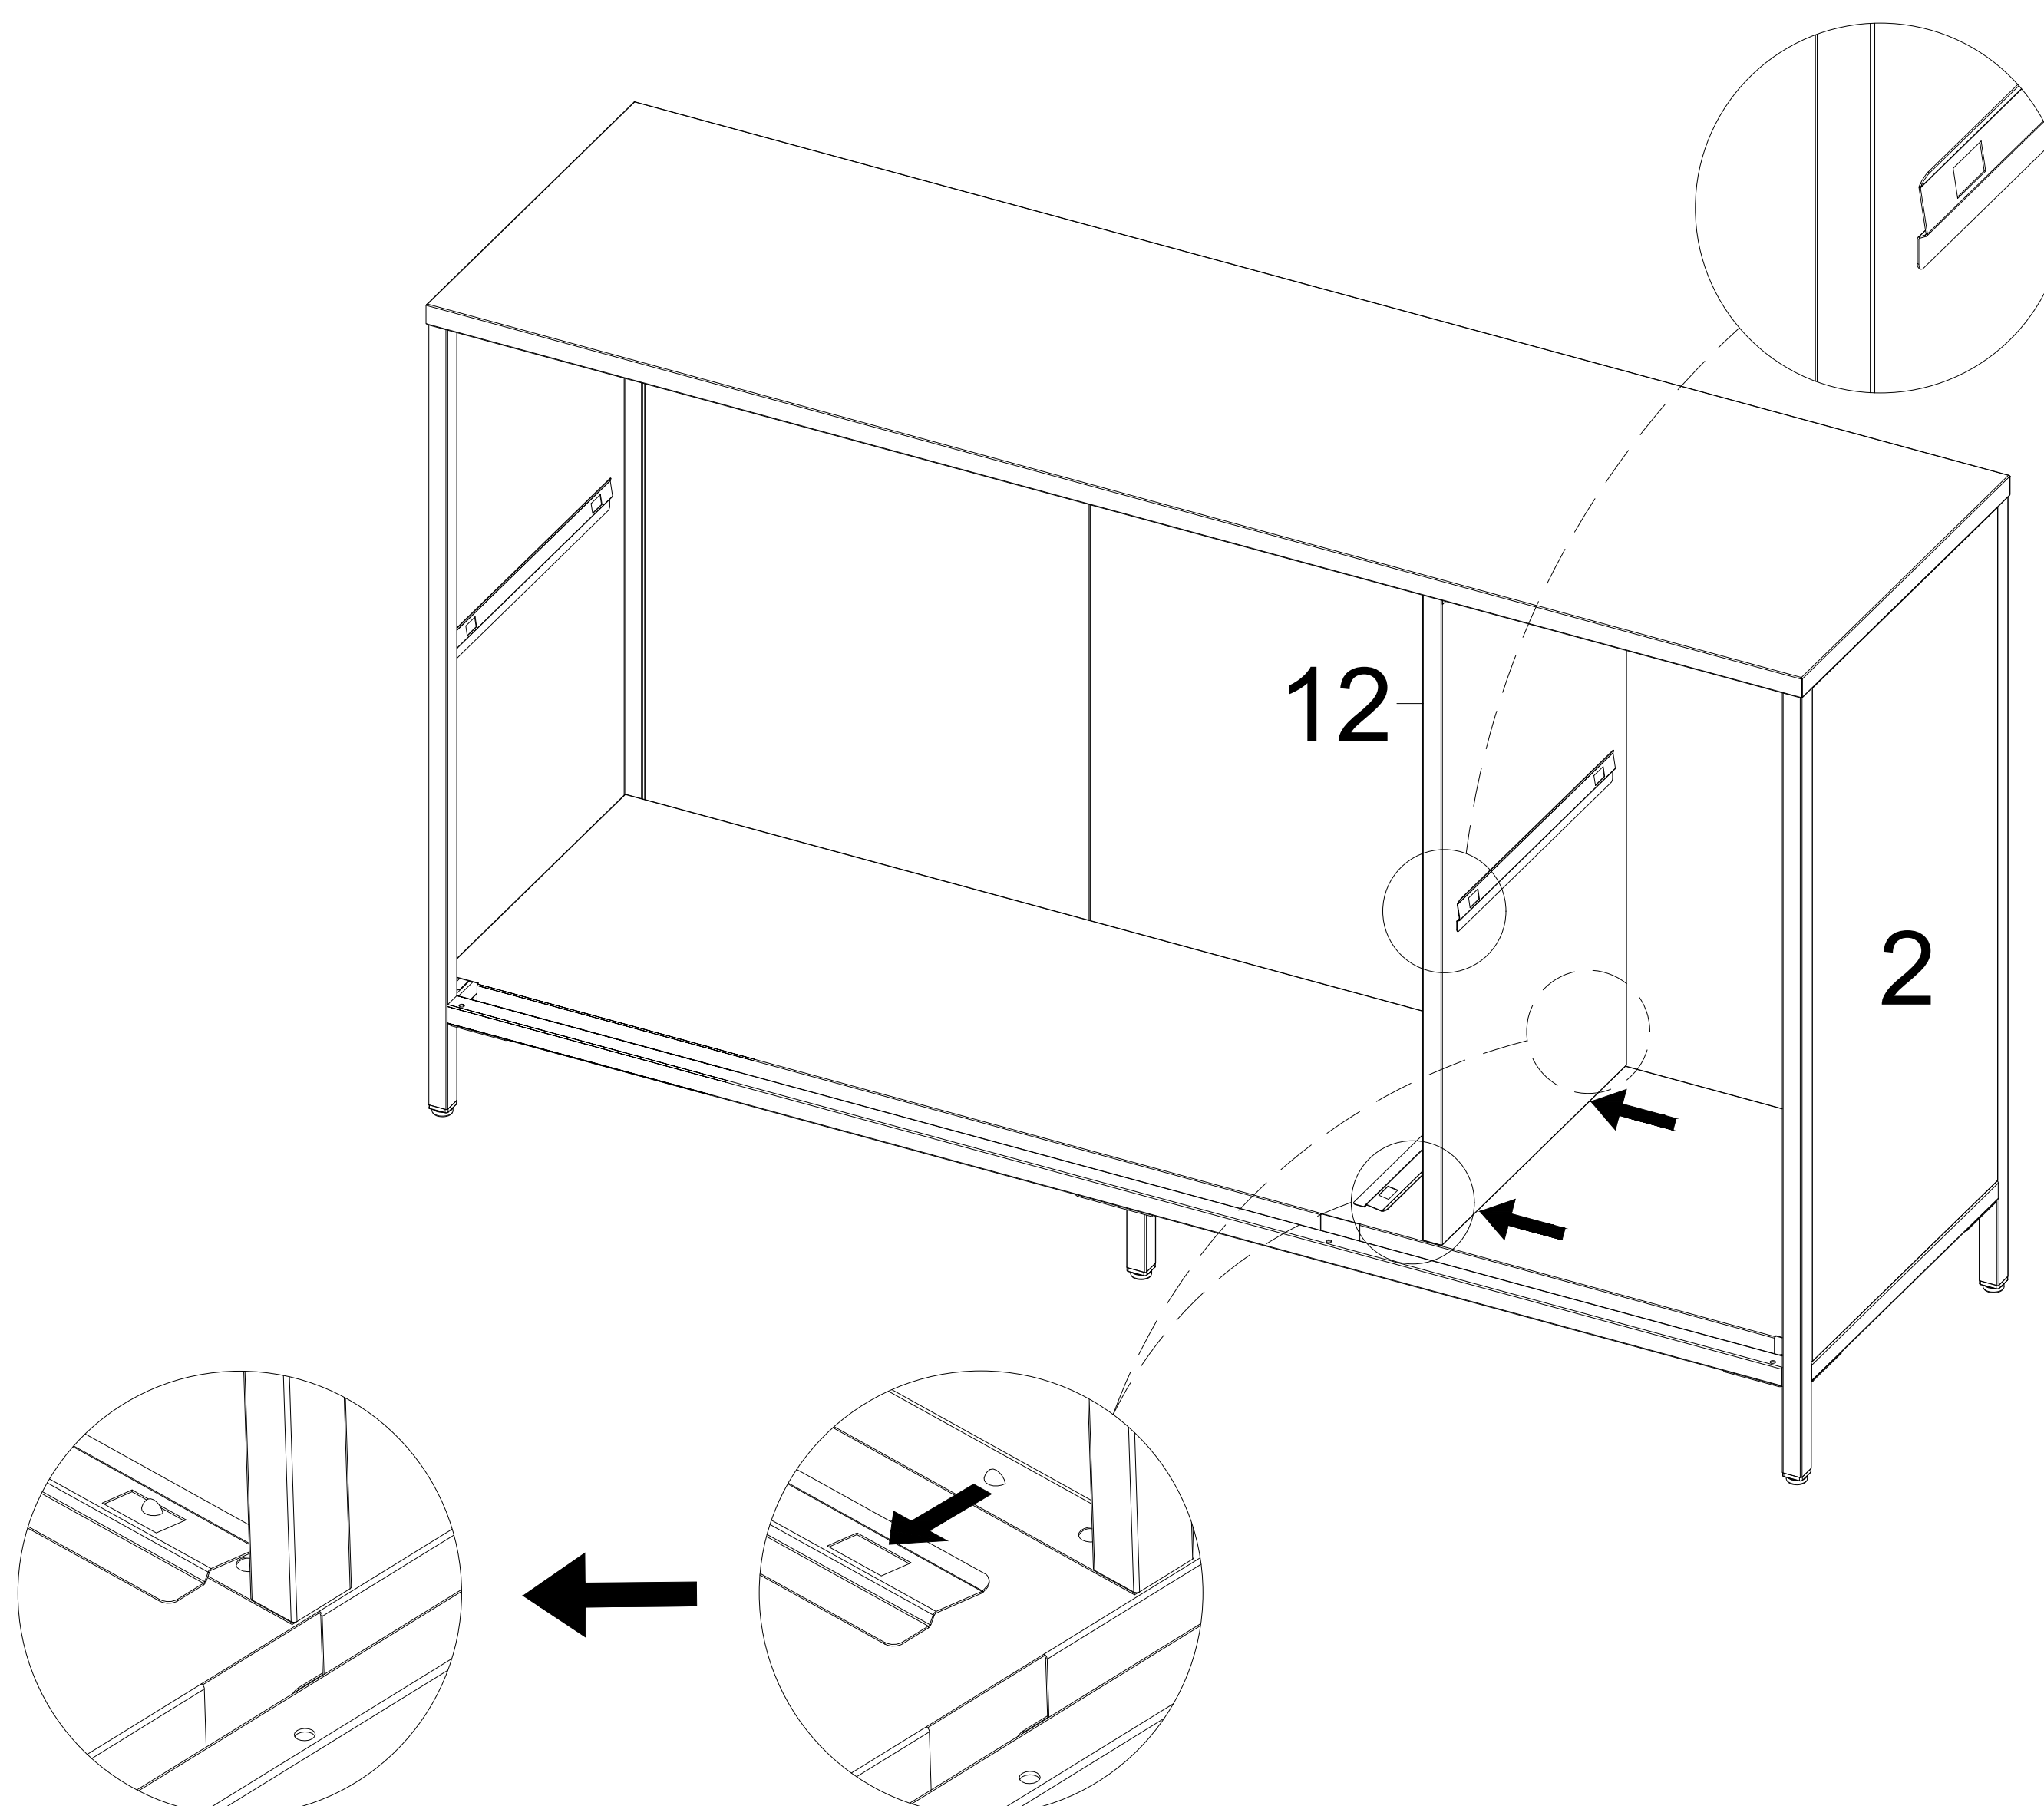


13


Install the top screws of part number 12.

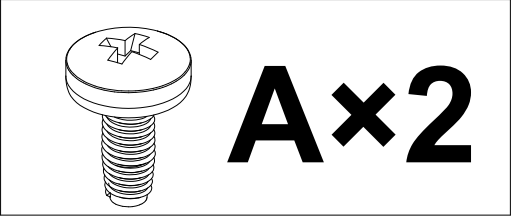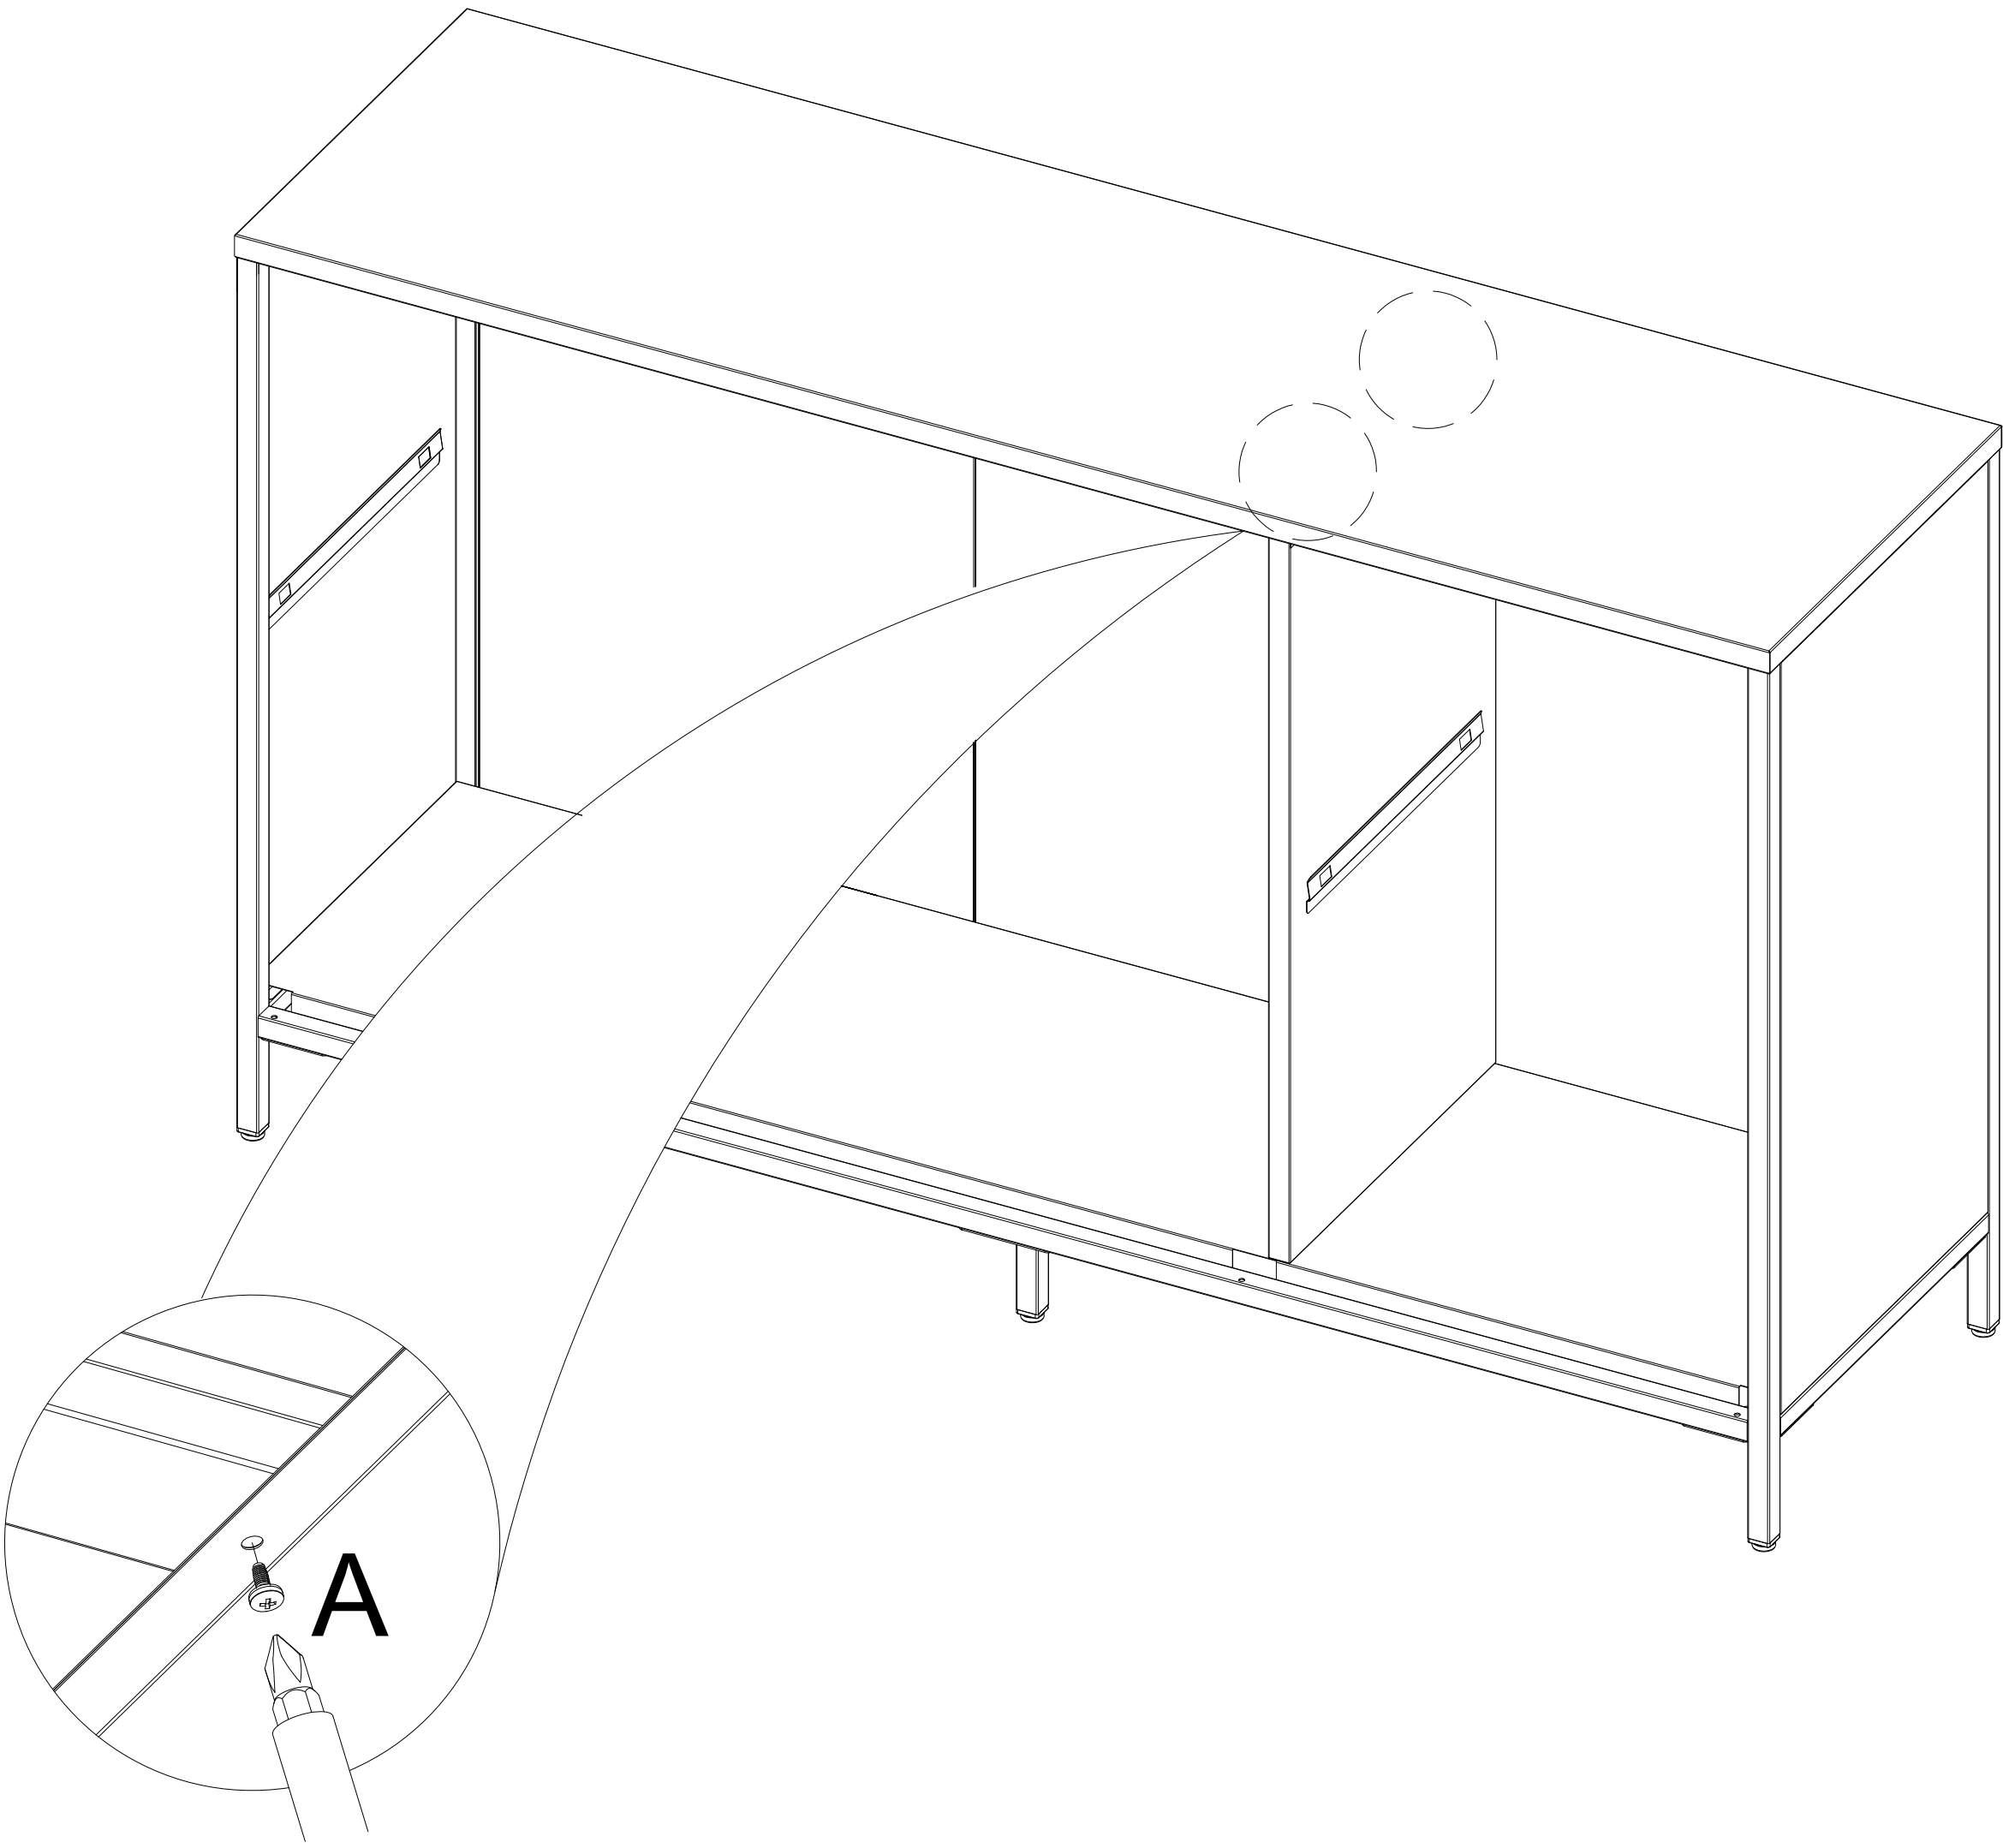

14

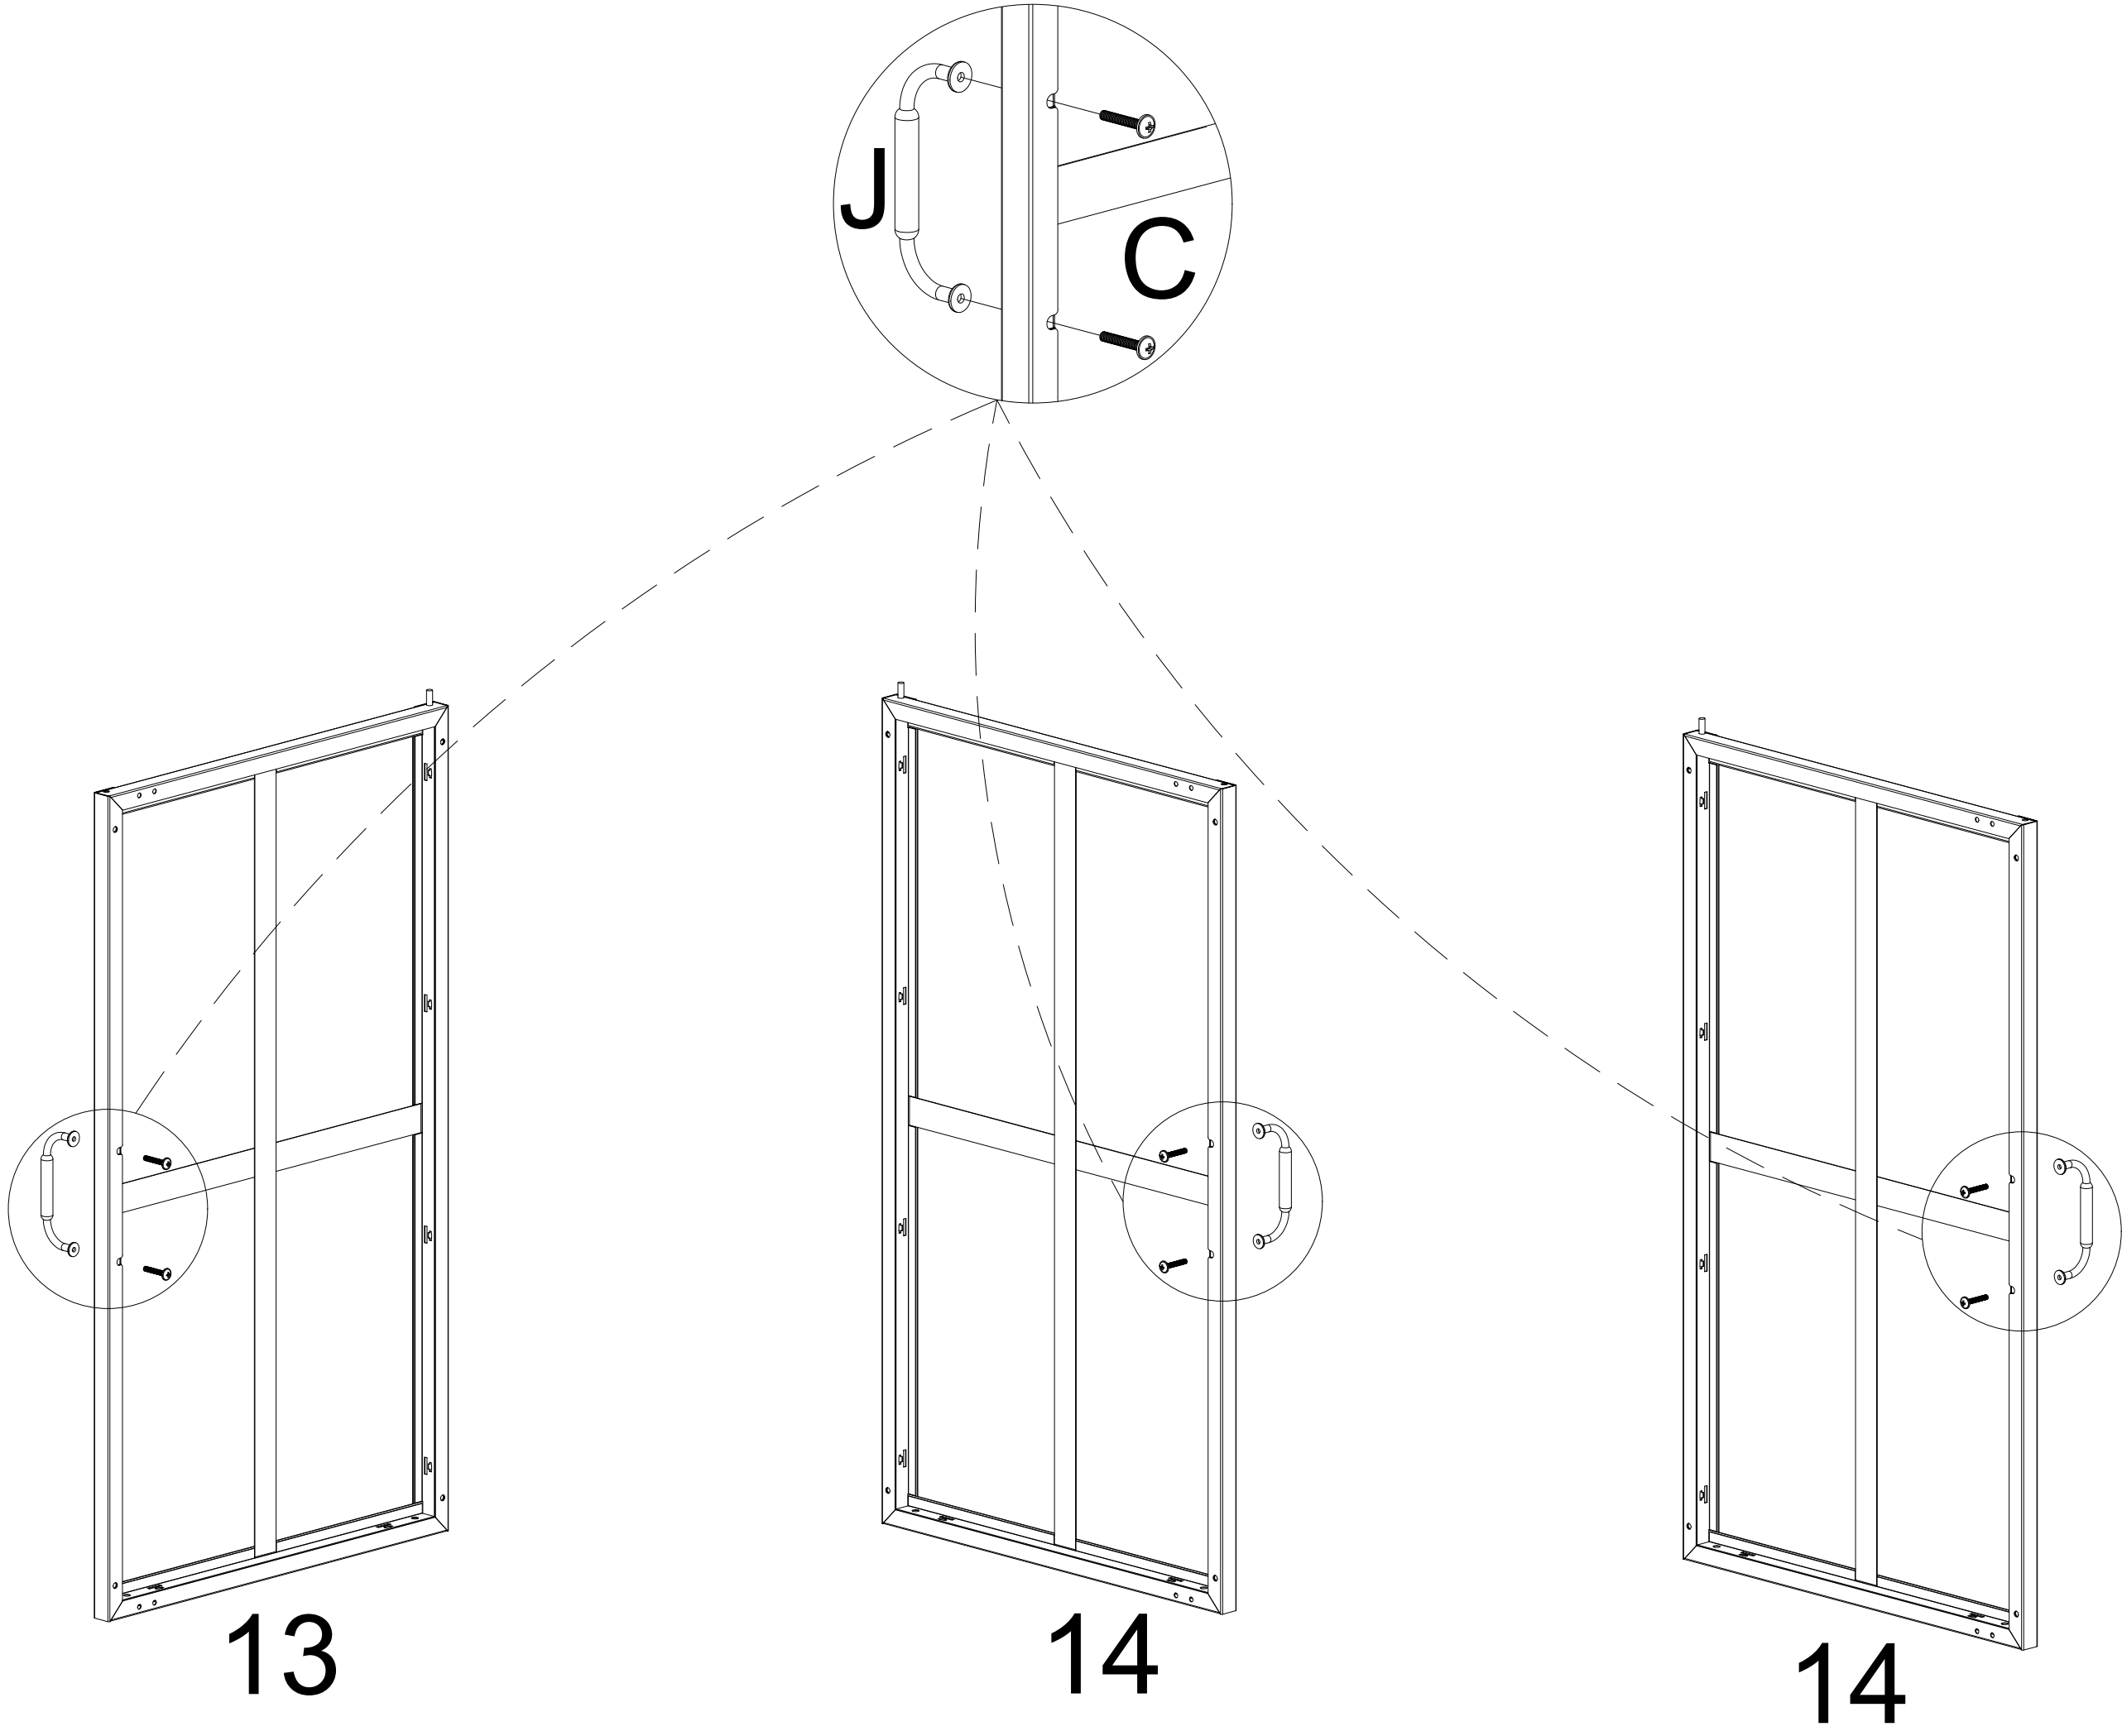



Install the handle in place according to the diagram.

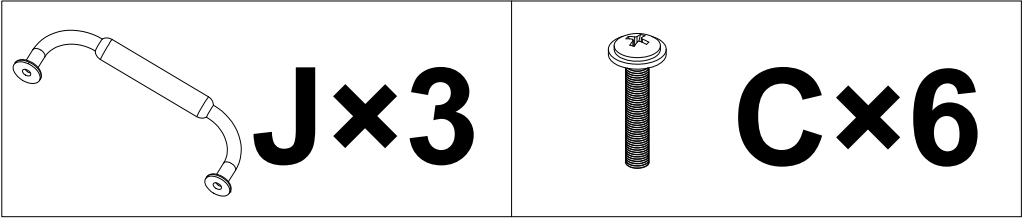

15


One G accessory consists of a magnet and a buckle.

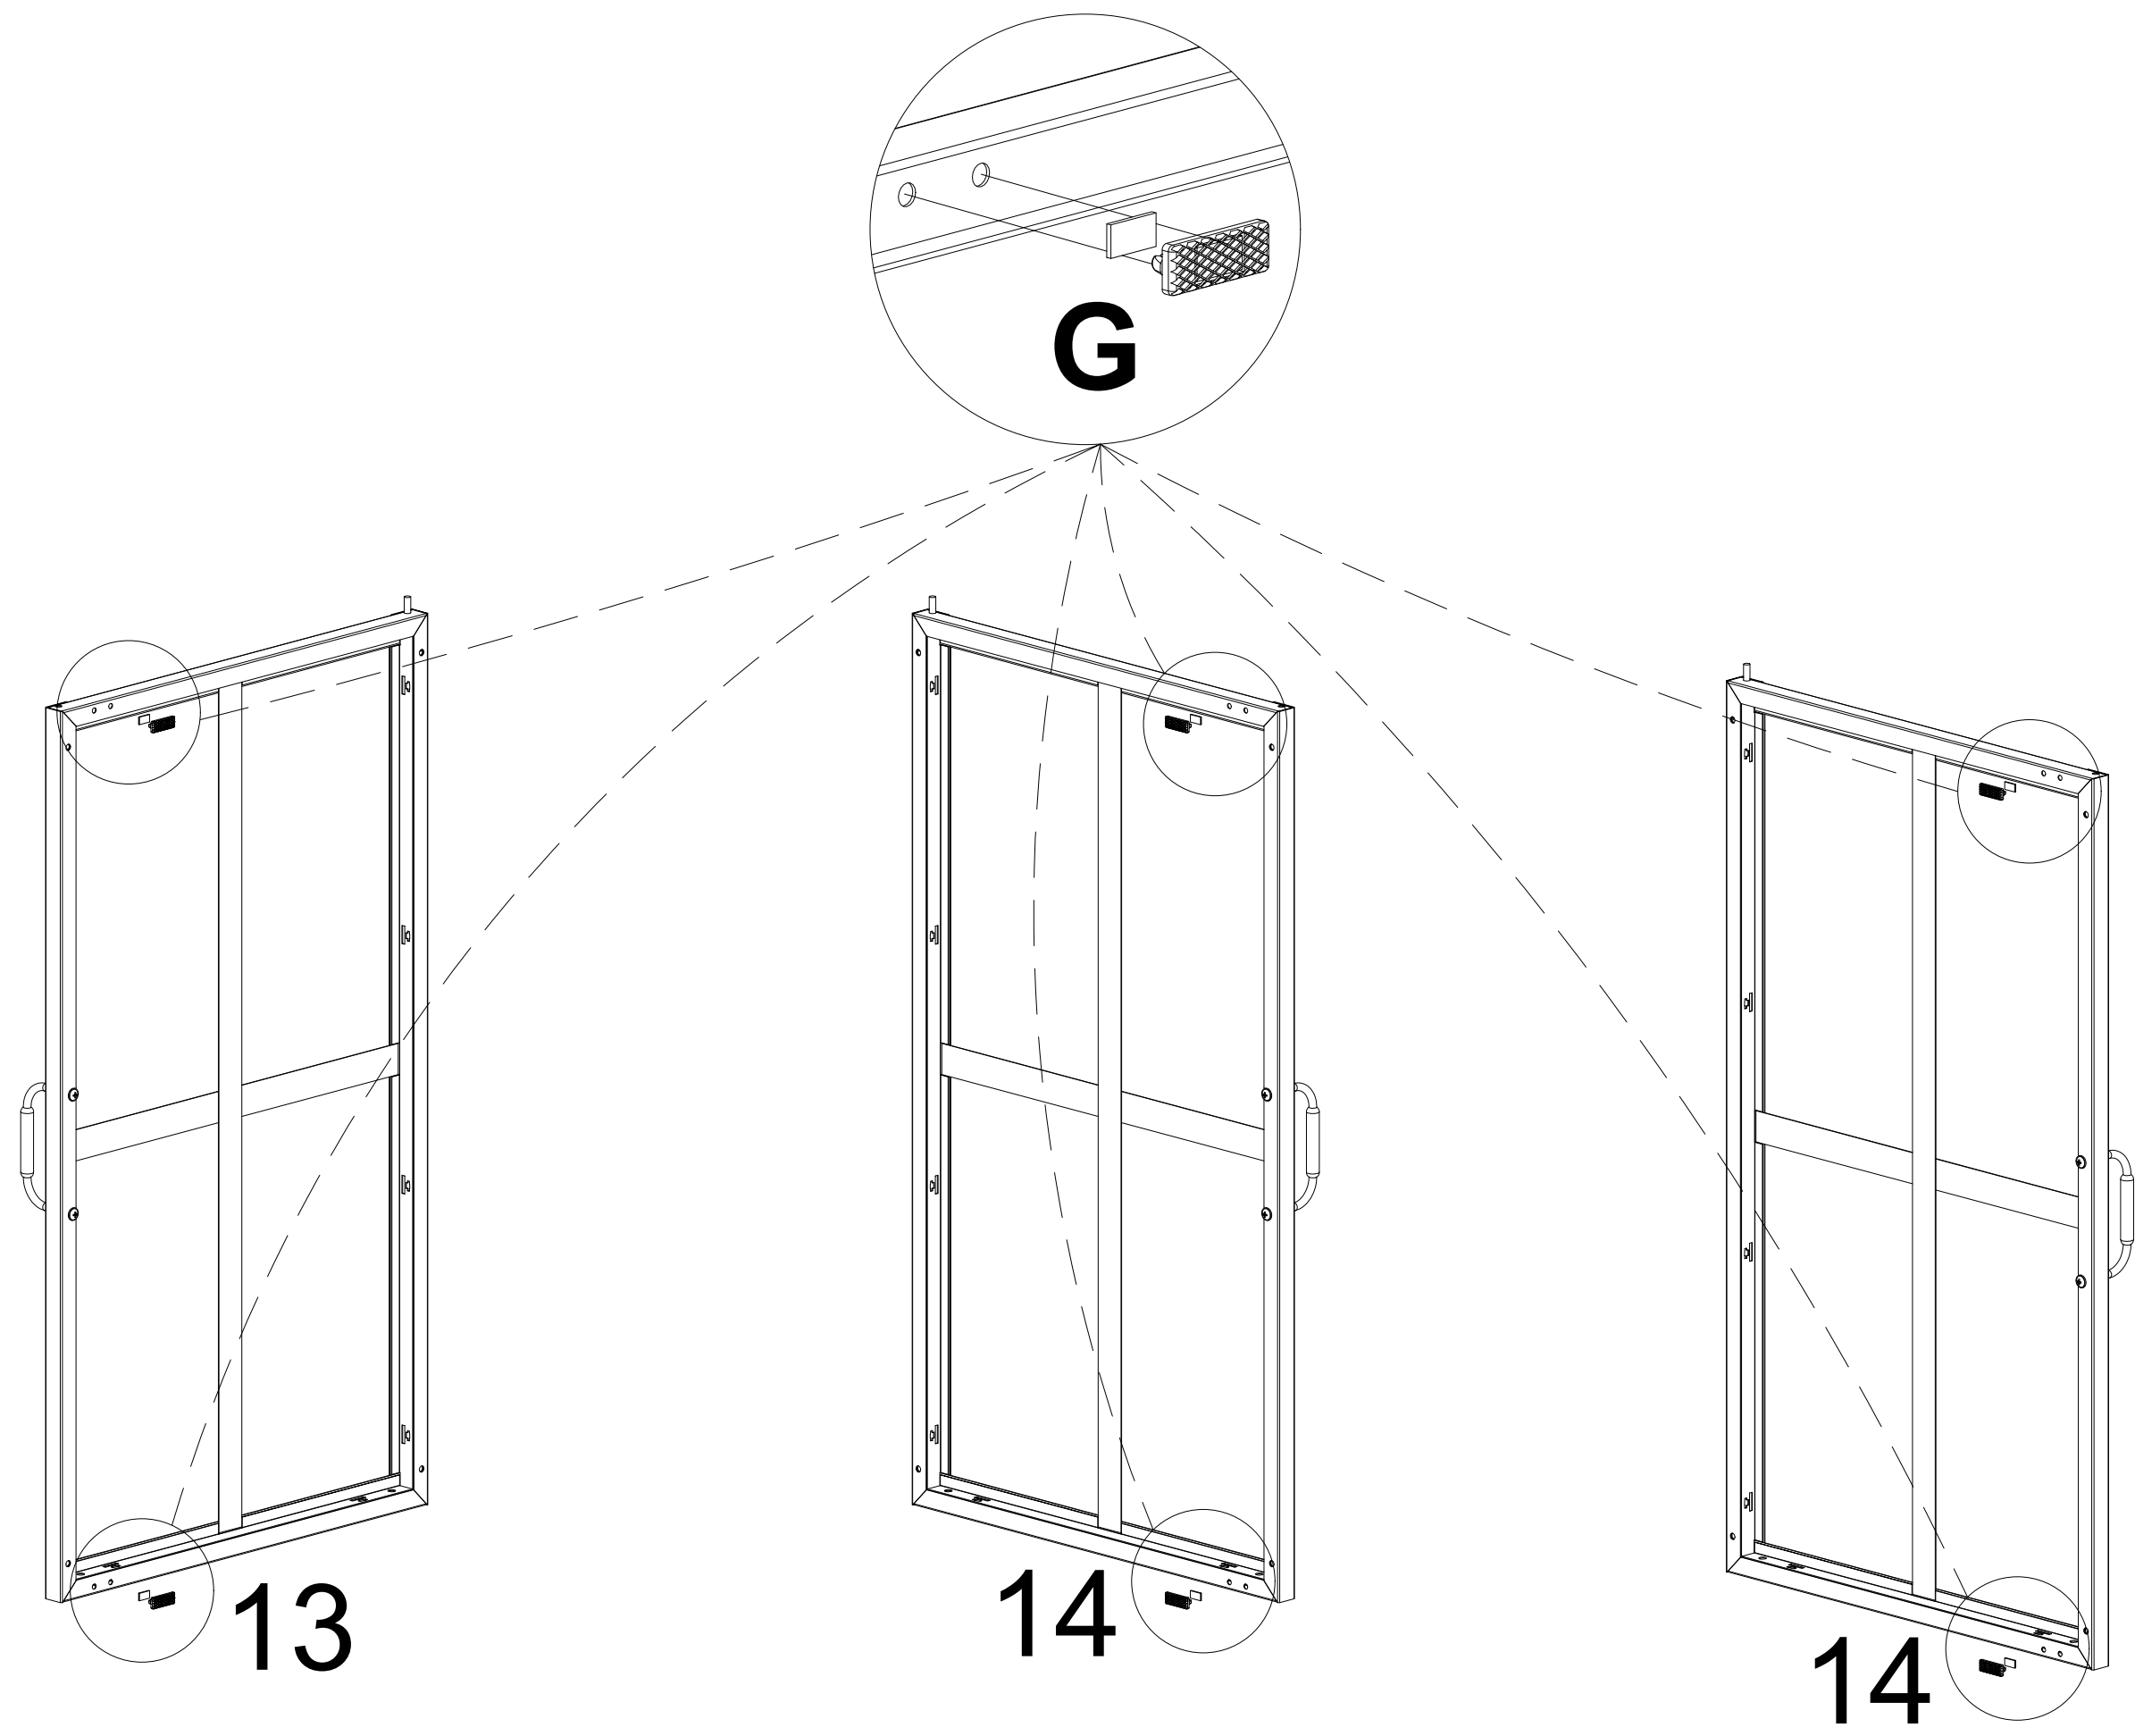

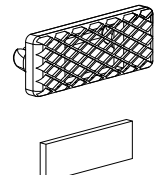 **G×6**


16


STEP 2

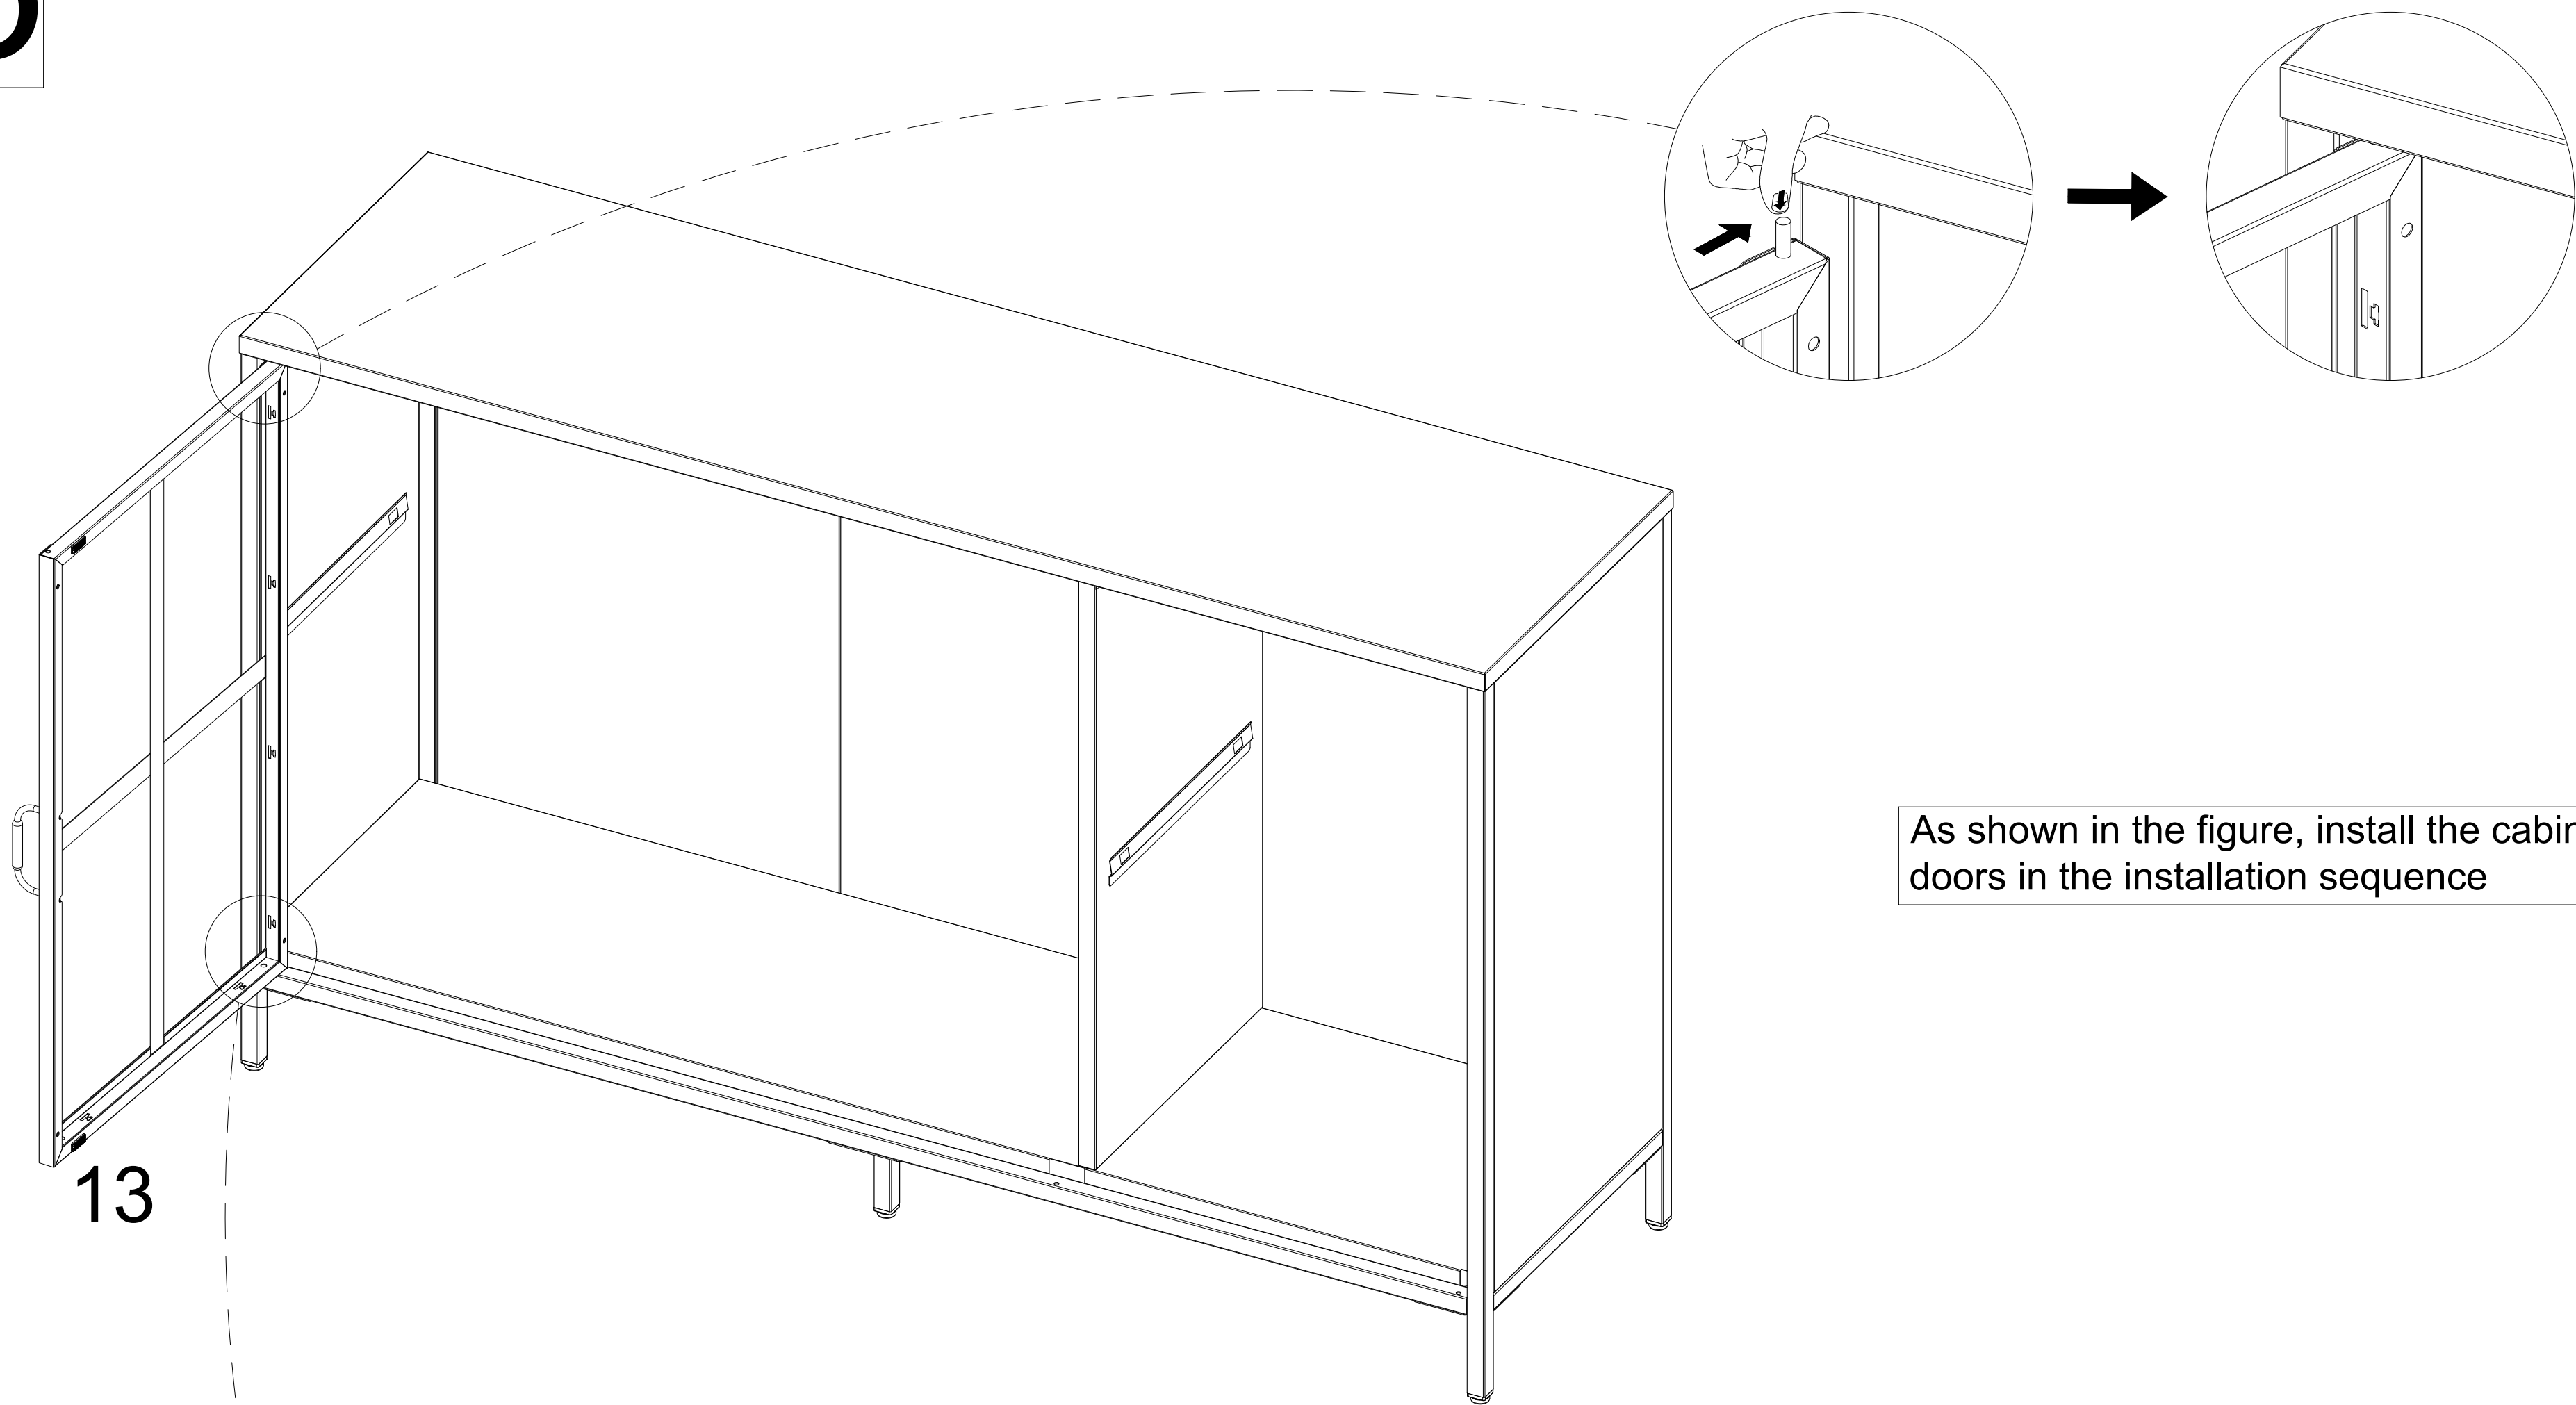

As shown in the figure, install the cabinet doors in the installation sequence


STEP 1

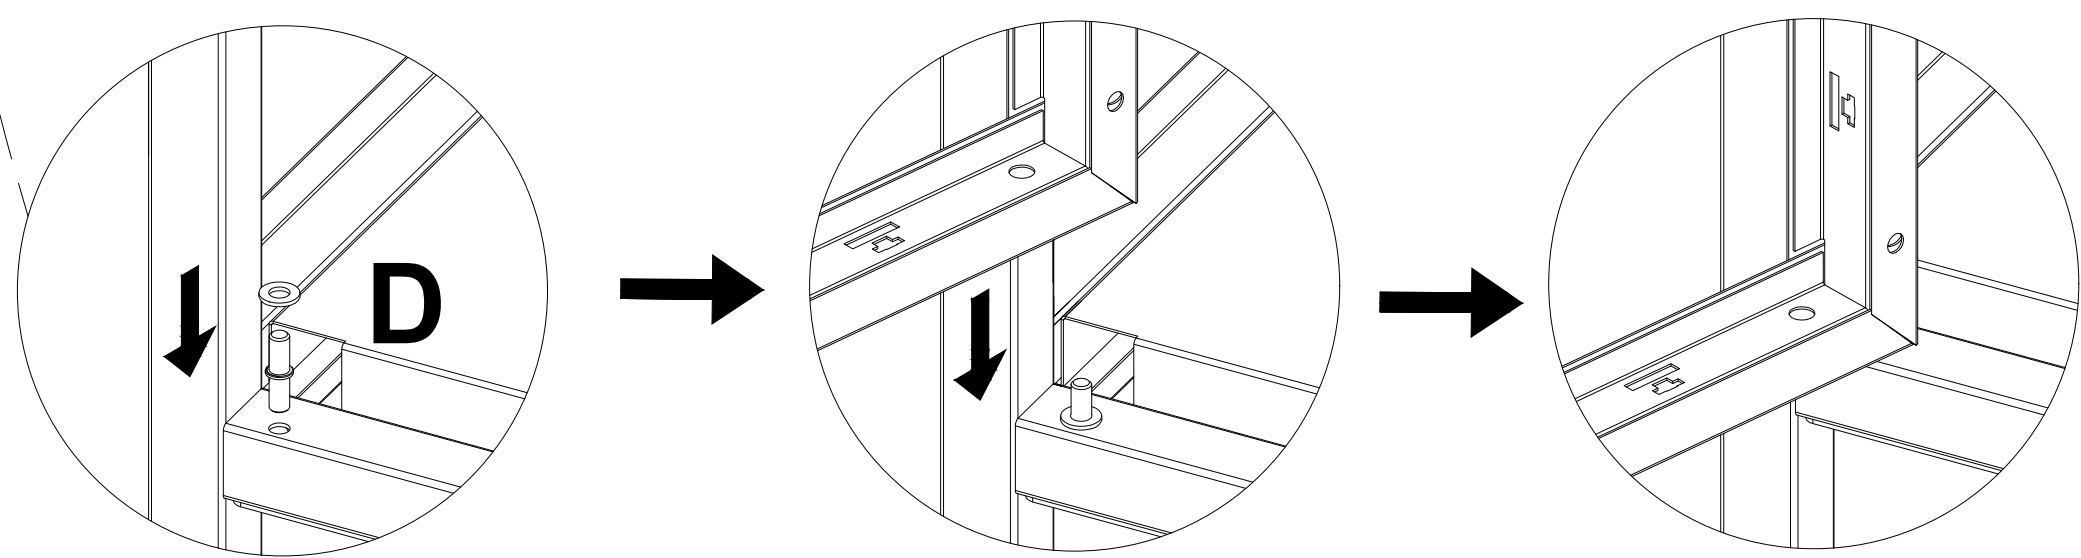


 **D×1**

17


STEP 2

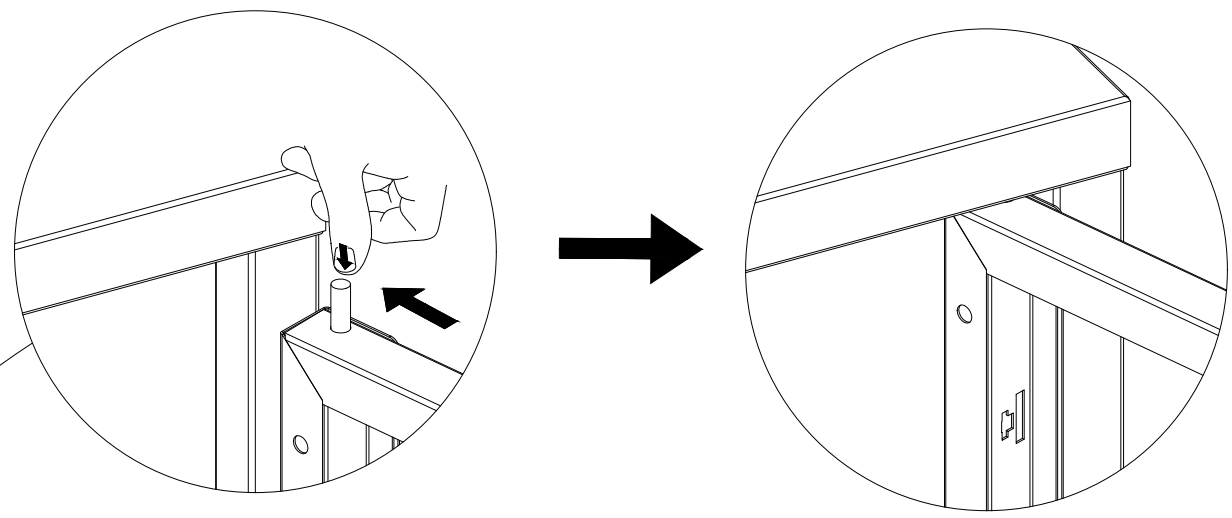


As shown in the figure, install the cabinet doors in the installation sequence

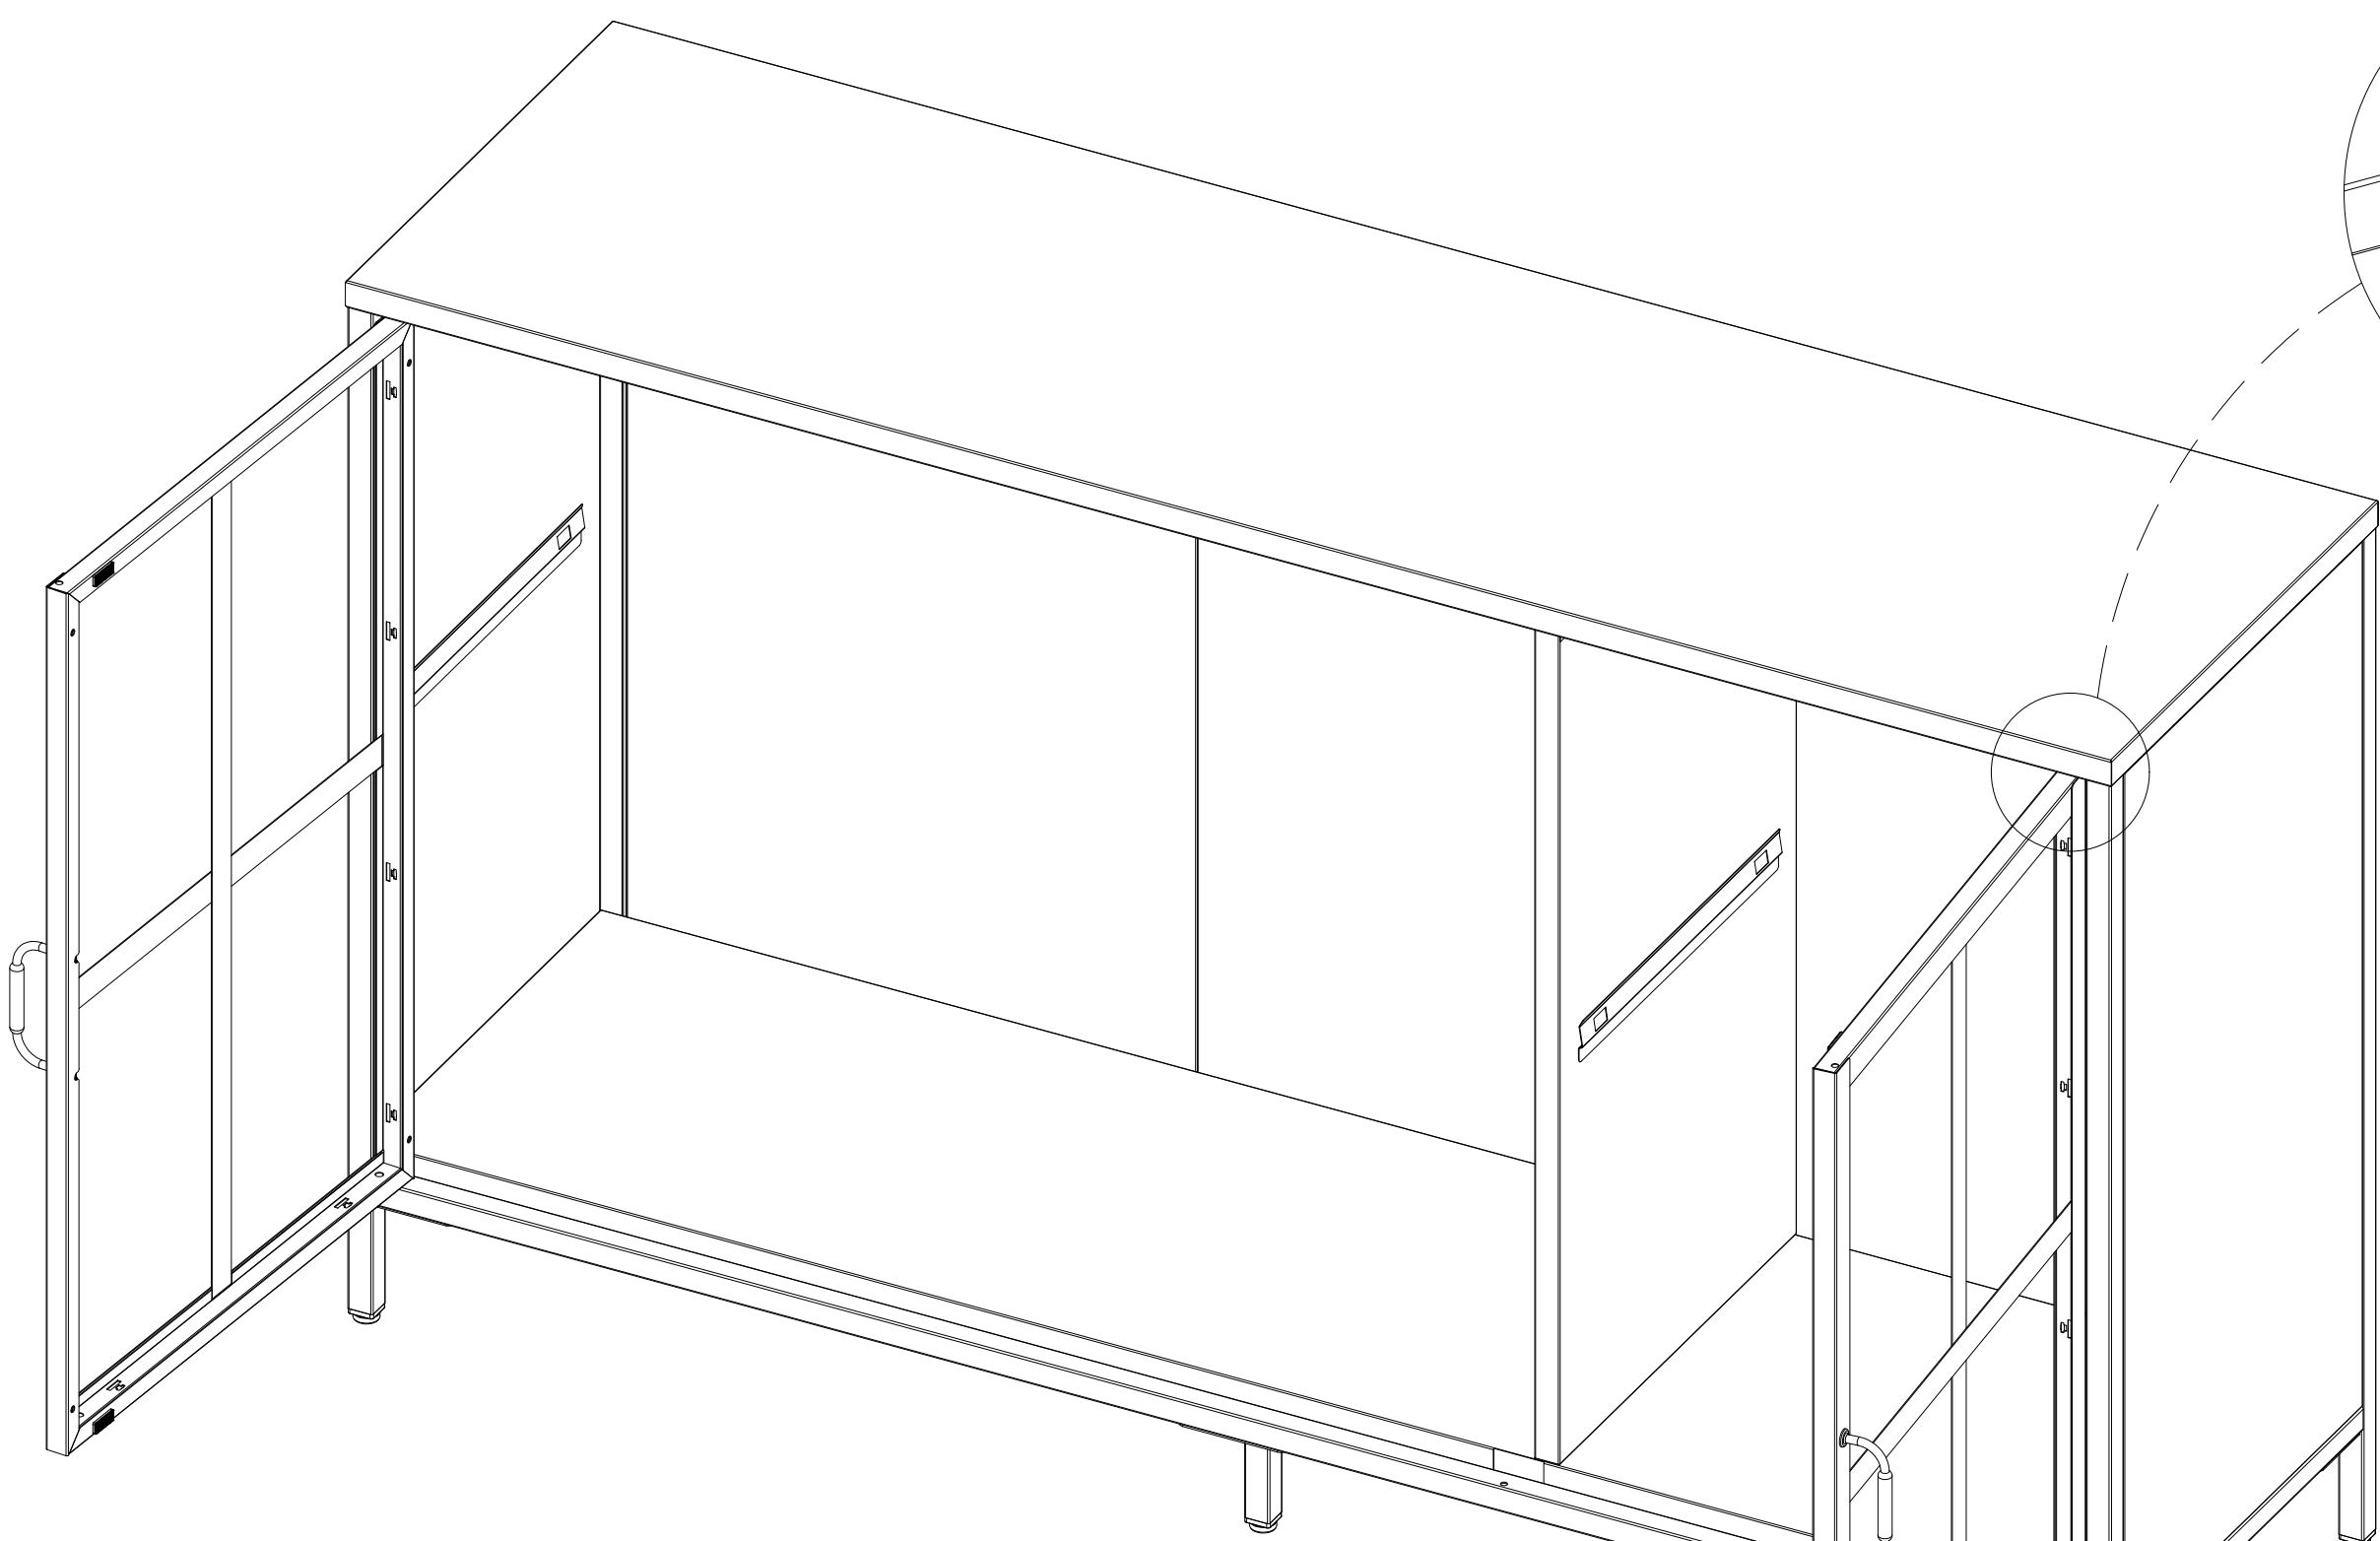

14

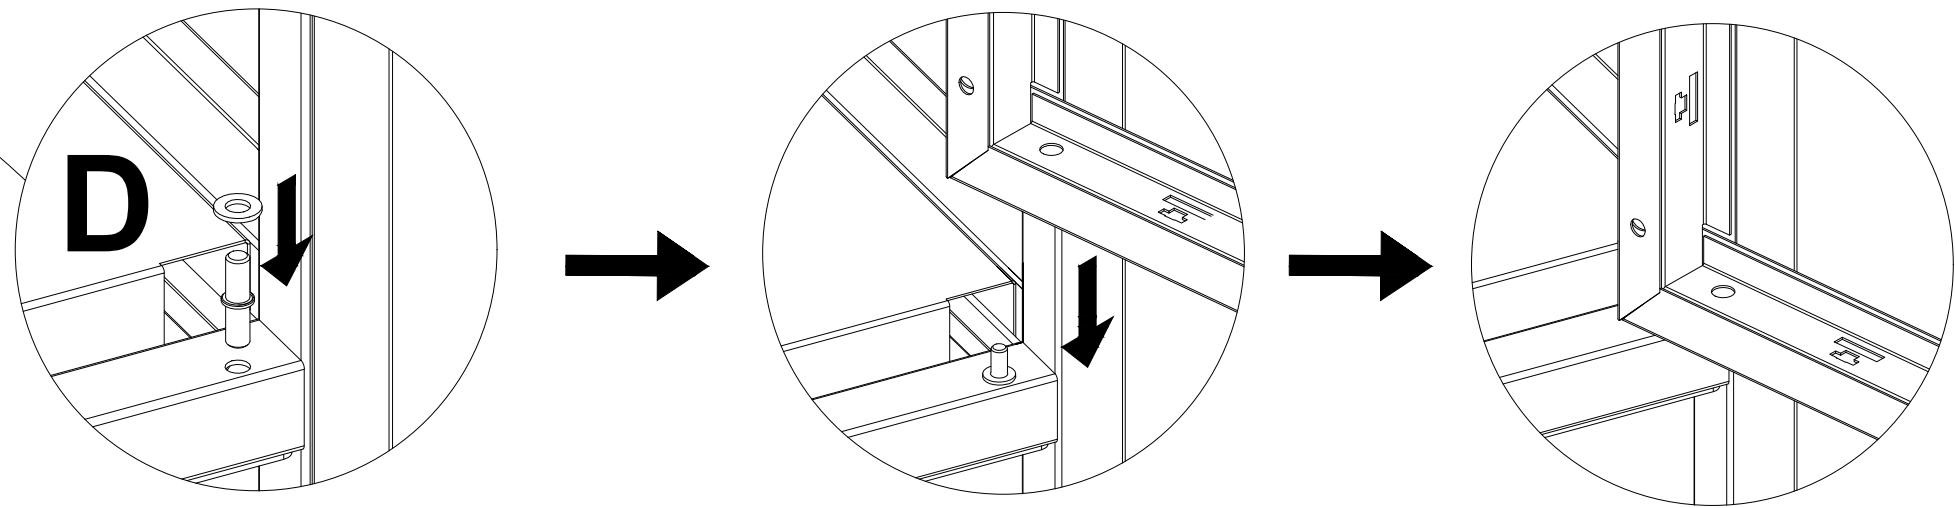


STEP 1

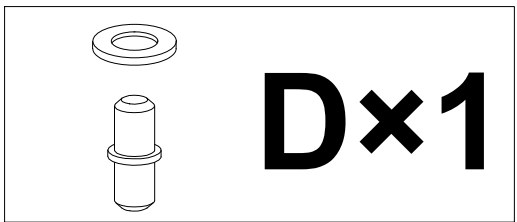


D×1

18

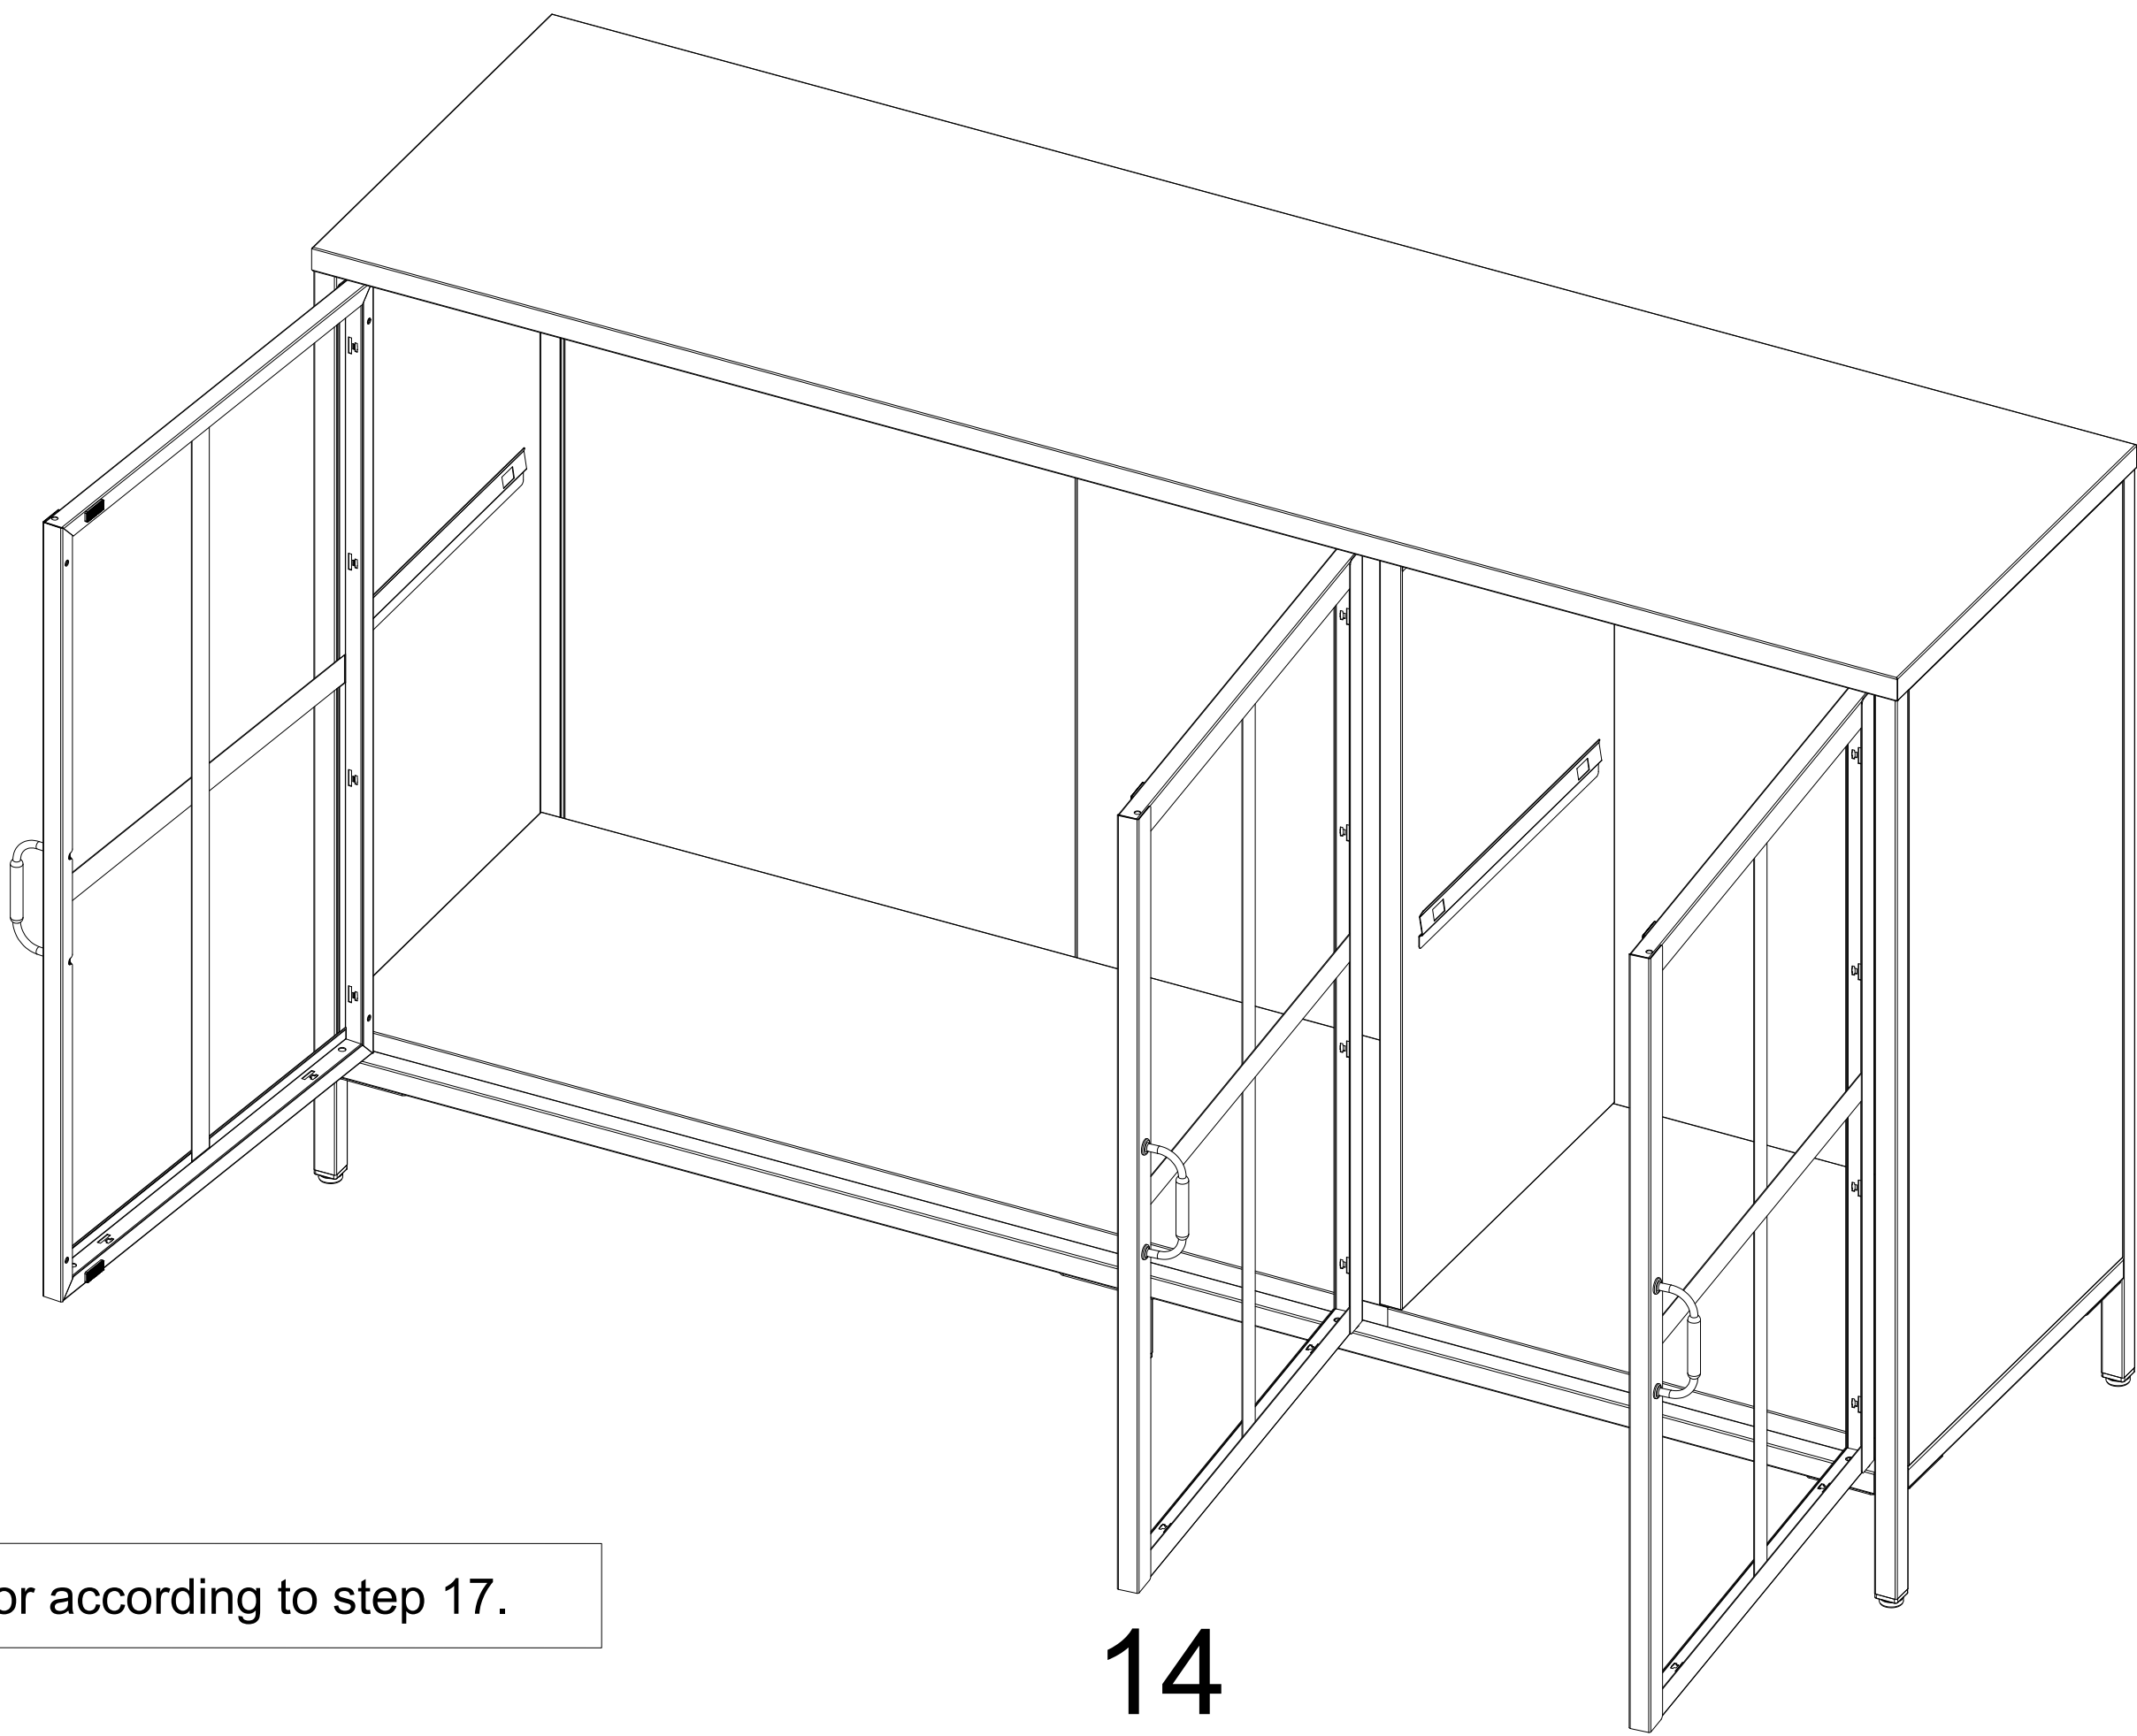

14


Install the remaining door according to step 17.

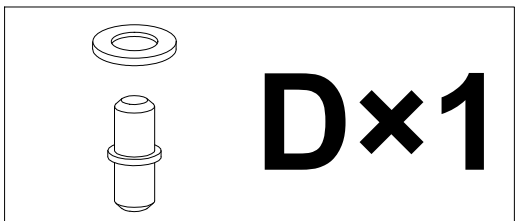

D×1


19

When installing part number 15, tap on the indicated arrow position and make sure both sides are locked inside the bracket pieces.

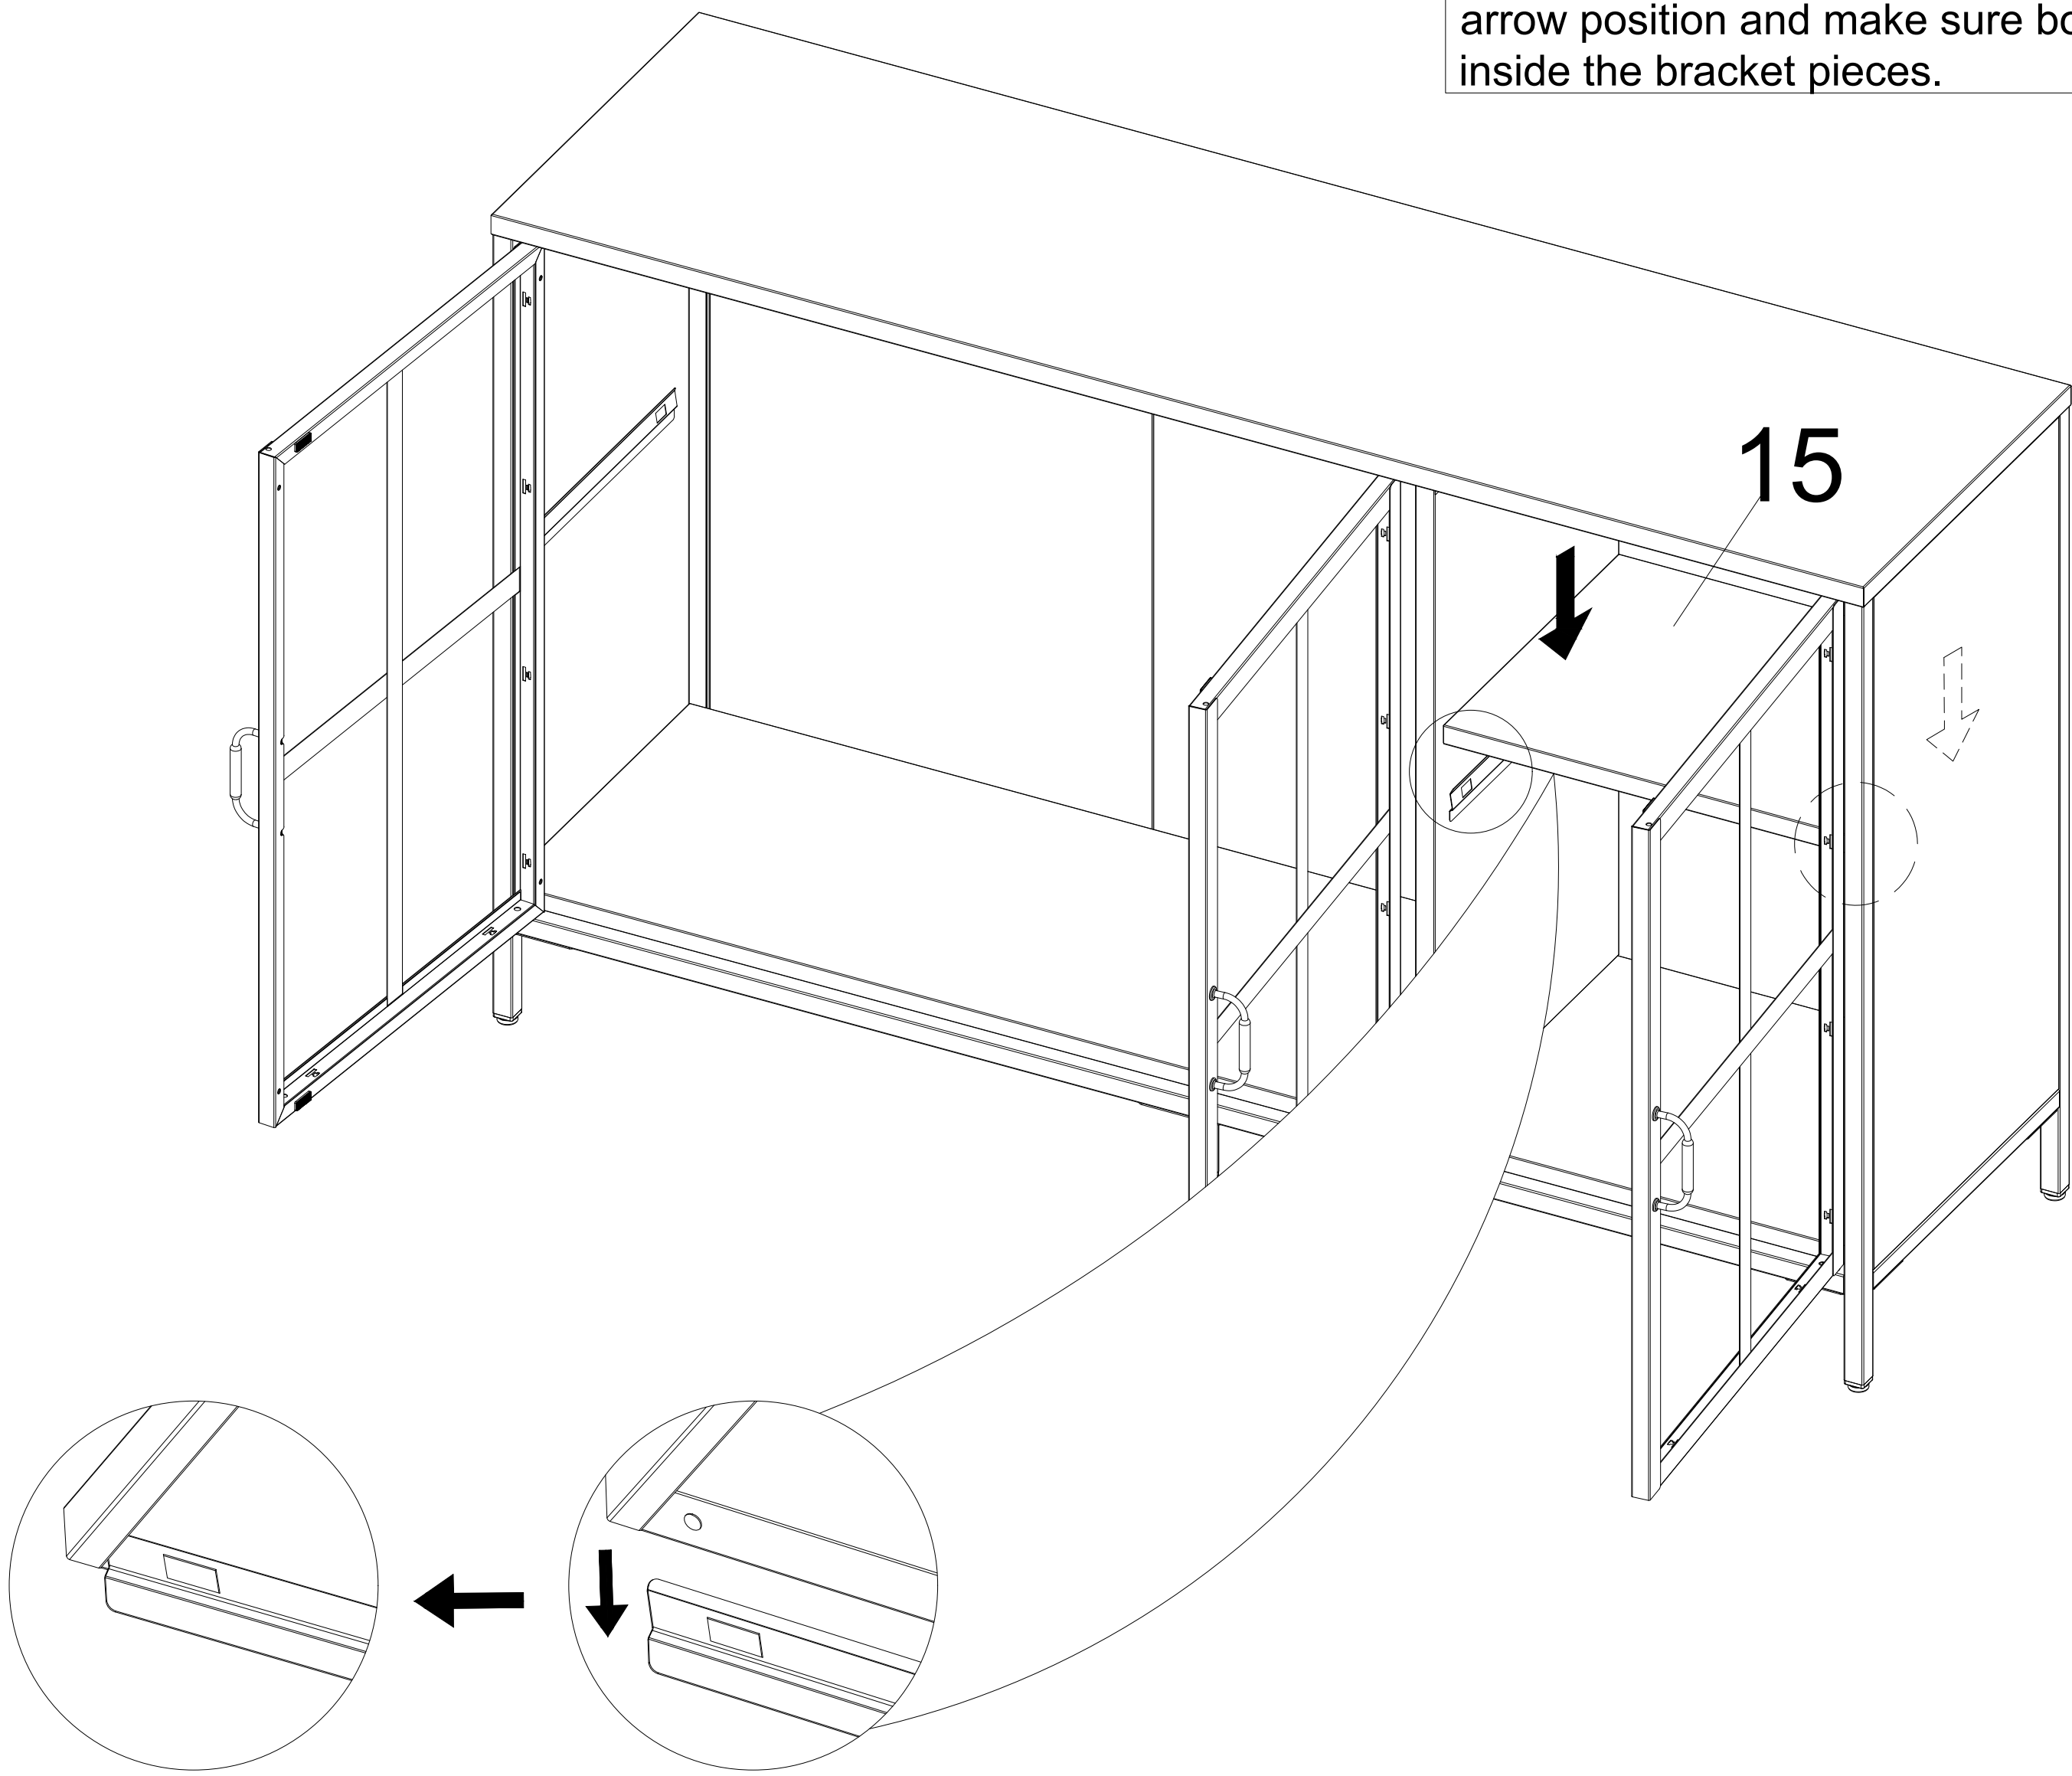


20

When installing part number 16, tap on the indicated arrow position and make sure both sides are locked inside the bracket pieces.

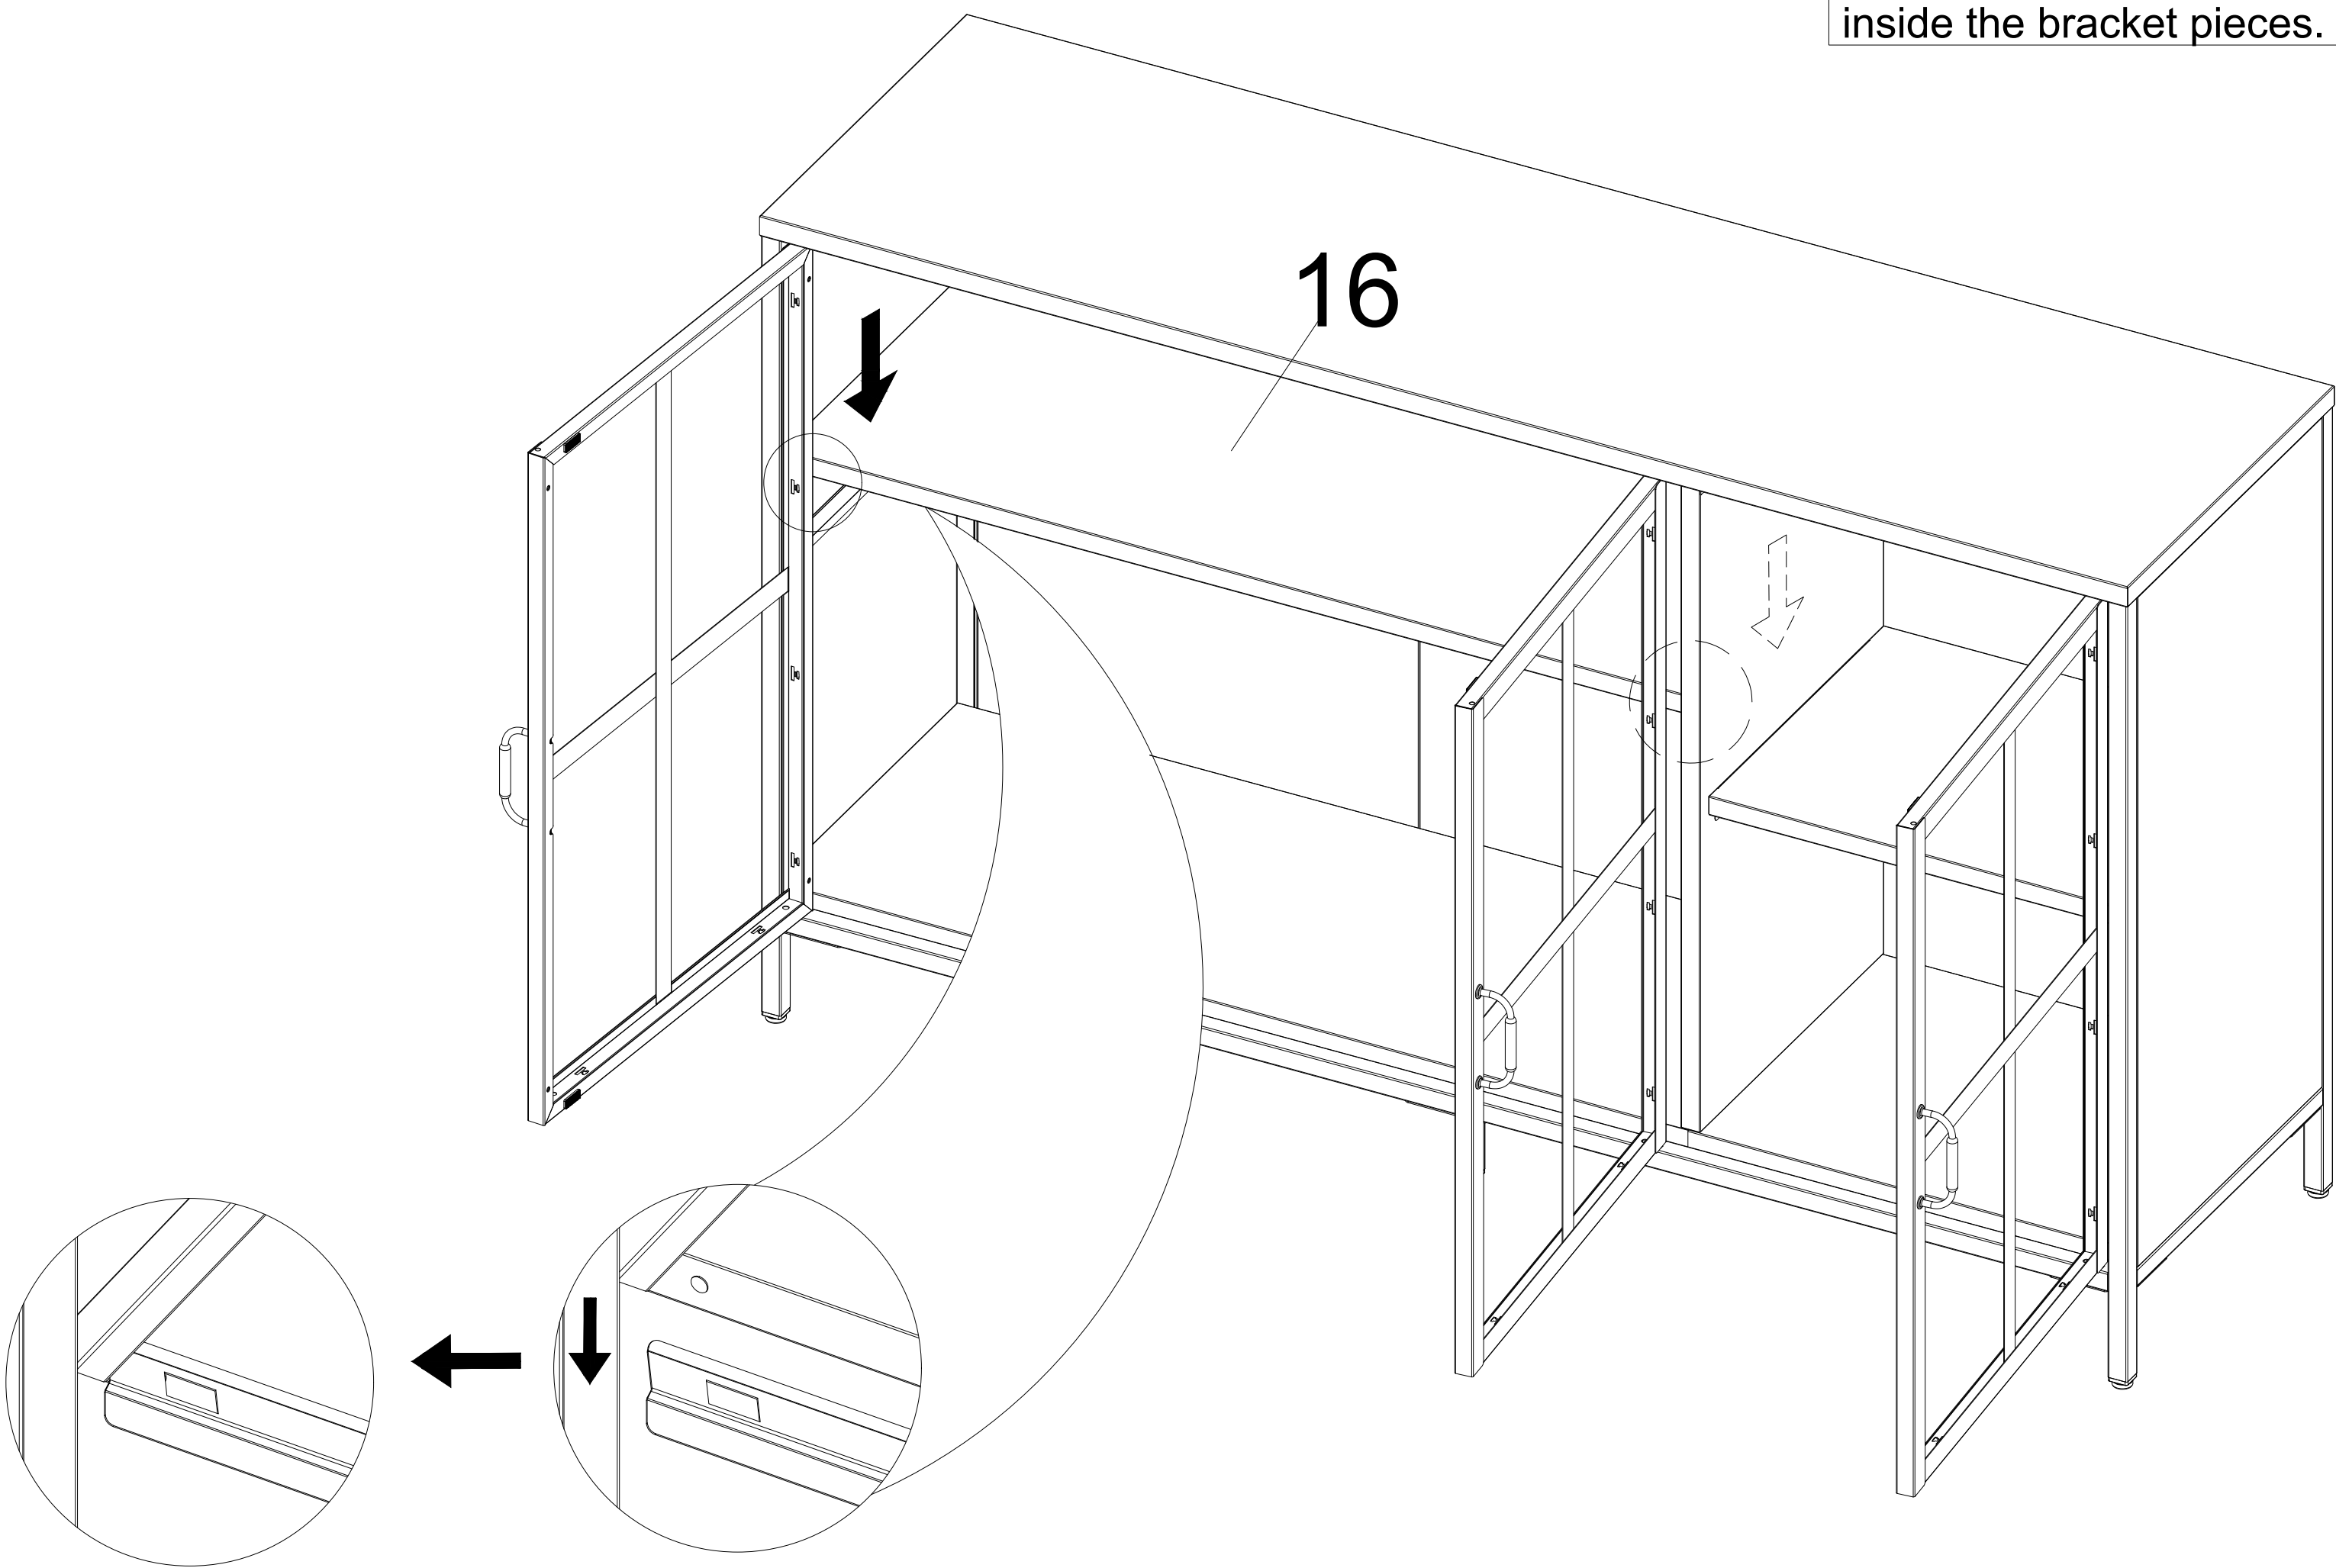

21

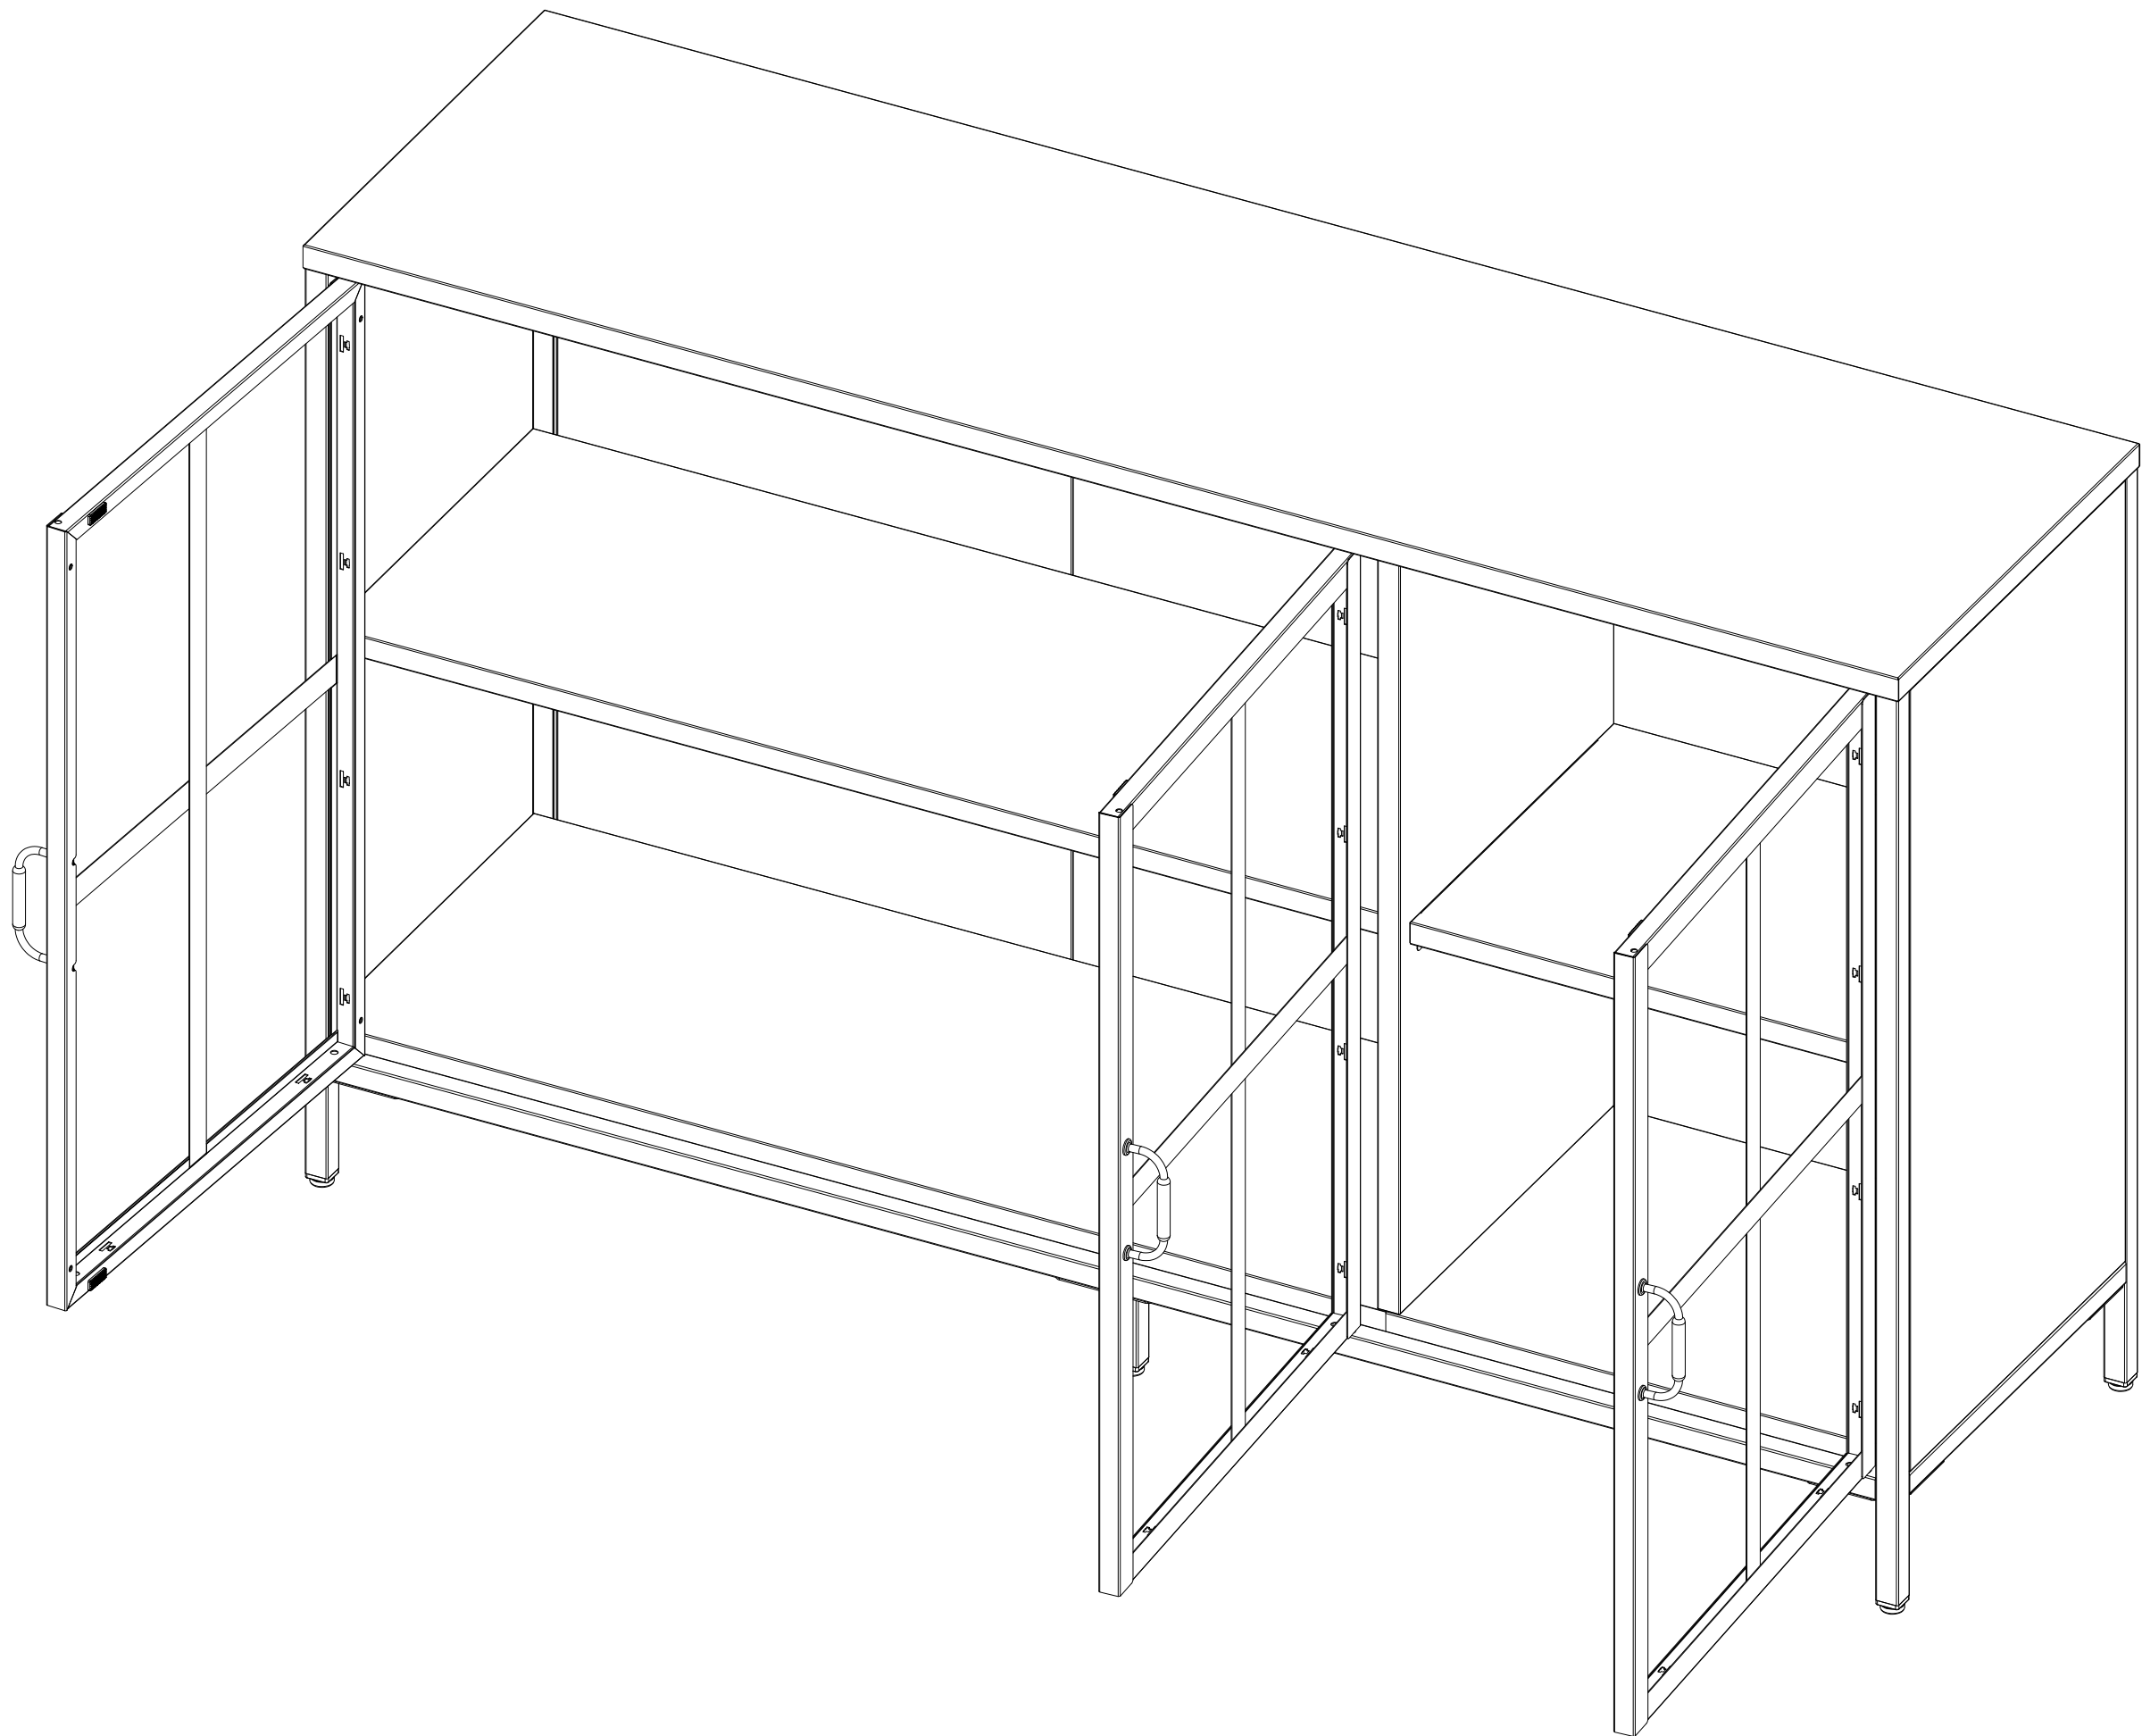

22

If you need to fix the cabinet, please follow the installation steps. If not, please ignore it.

