

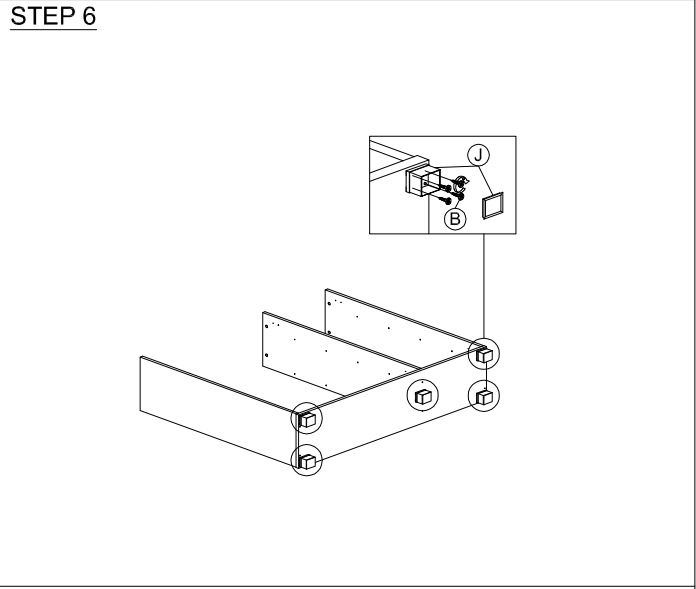
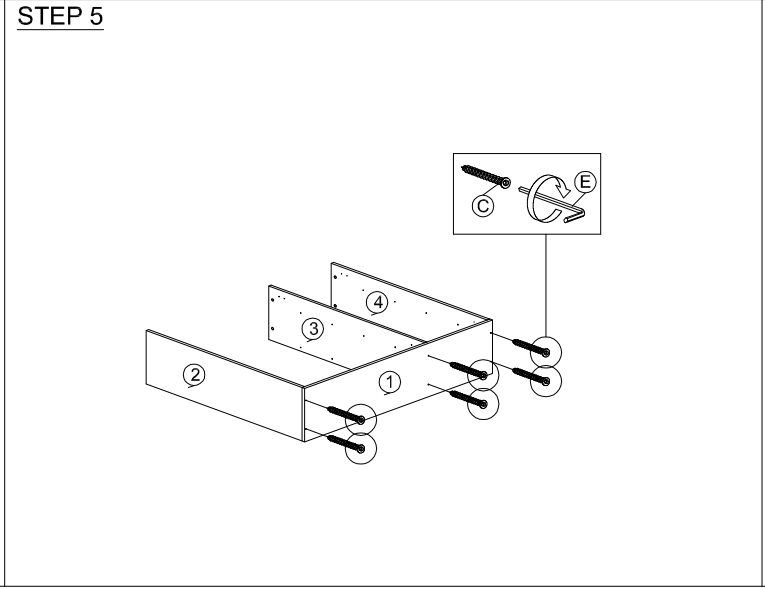
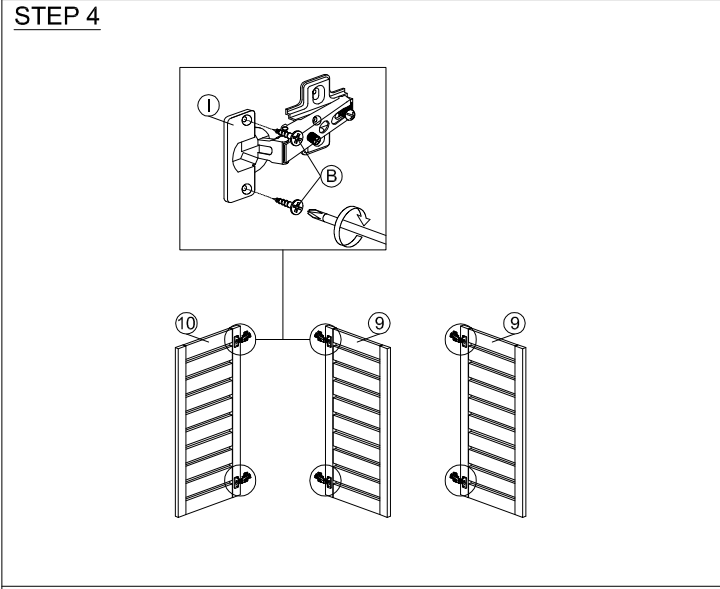
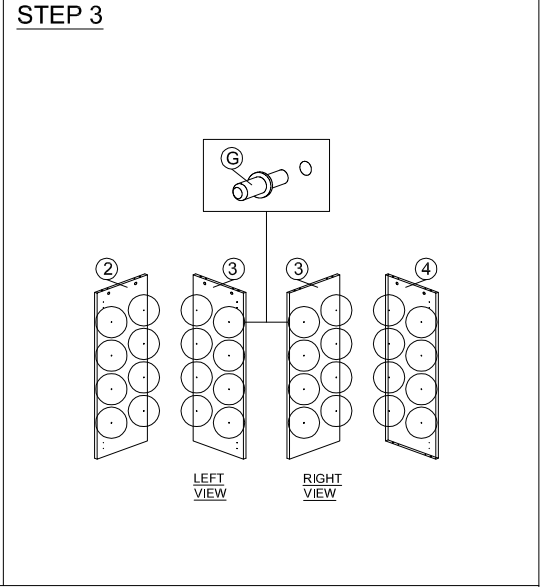
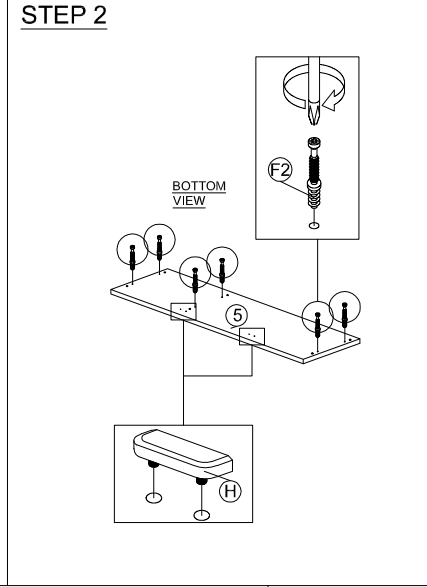


# ASSEMBLY INSTRUCTION


DESCRIPTION : 3 DOORS SHOE CABINET

<b>HARDWARE</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>	<b>I</b>	<b>J</b>
	WOOD DOWEL 8 X 25 1X12	CB SCREW M3.5X16MM 1X44	CSK CAP WOOD M6X50MM 1X6	NAIL 5/8 1X30	L KEY 1X1	F1 F2 F3 MINIFX 5654+5646 MINIFX CAP 6 SETS	PVC SHELF SUPPORT 1X32	2 PIN STOPPER 1X2	HINGES 5/8 6 SETS	5038 PVC LEG 1X5

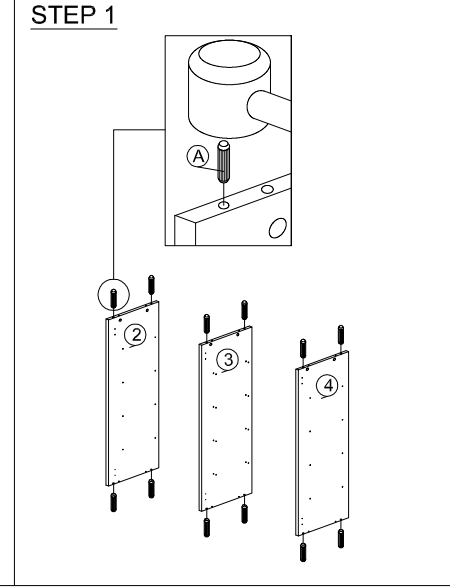


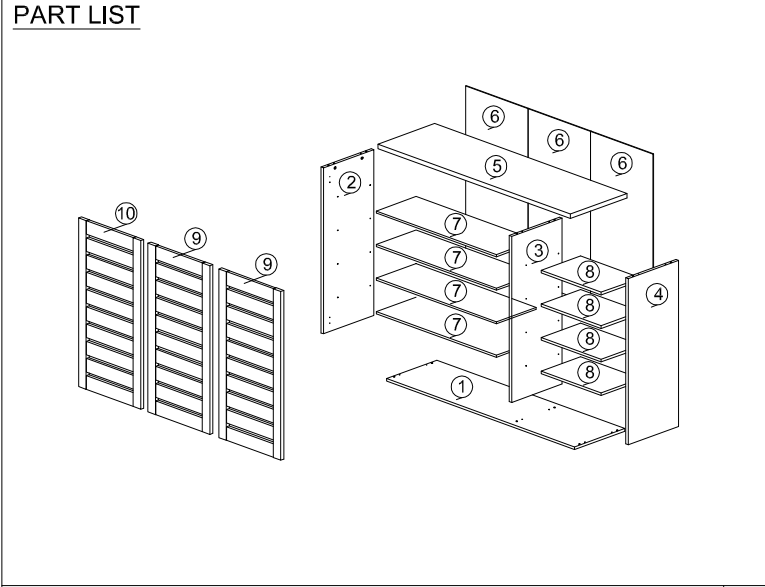

SOFT, DRY CLOTH

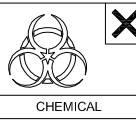

CHEMICAL

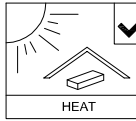

HEAT



KEEP DRY



HANDLE WITH CARE






DO NOT USE KNIFE



# ASSEMBLY INSTRUCTION

DESCRIPTION : 3 DOORS SHOE CABINET


## STEP 7

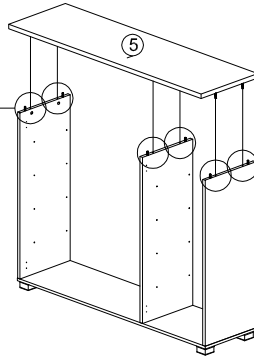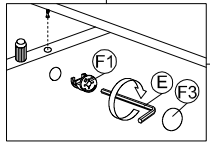





## STEP 8

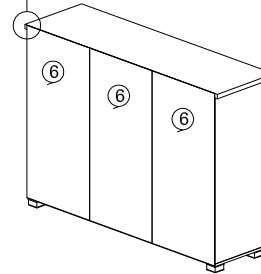

## STEP 9

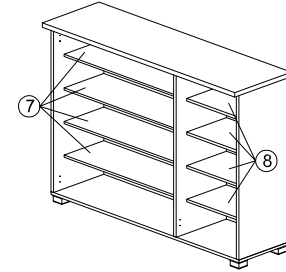

## STEP 10

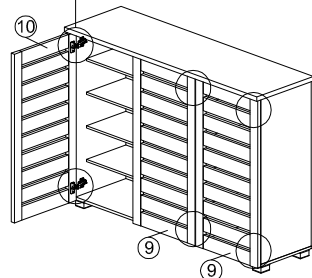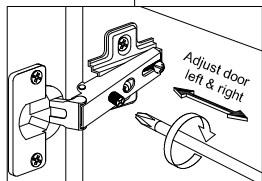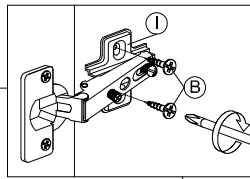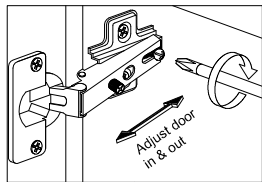

## COMPLETED

