


ASSEMBLY INSTRUCTIONS

TWIN FULL SIZE BUNK BED

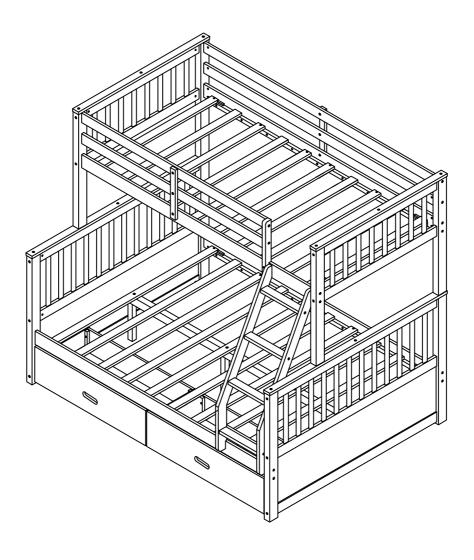

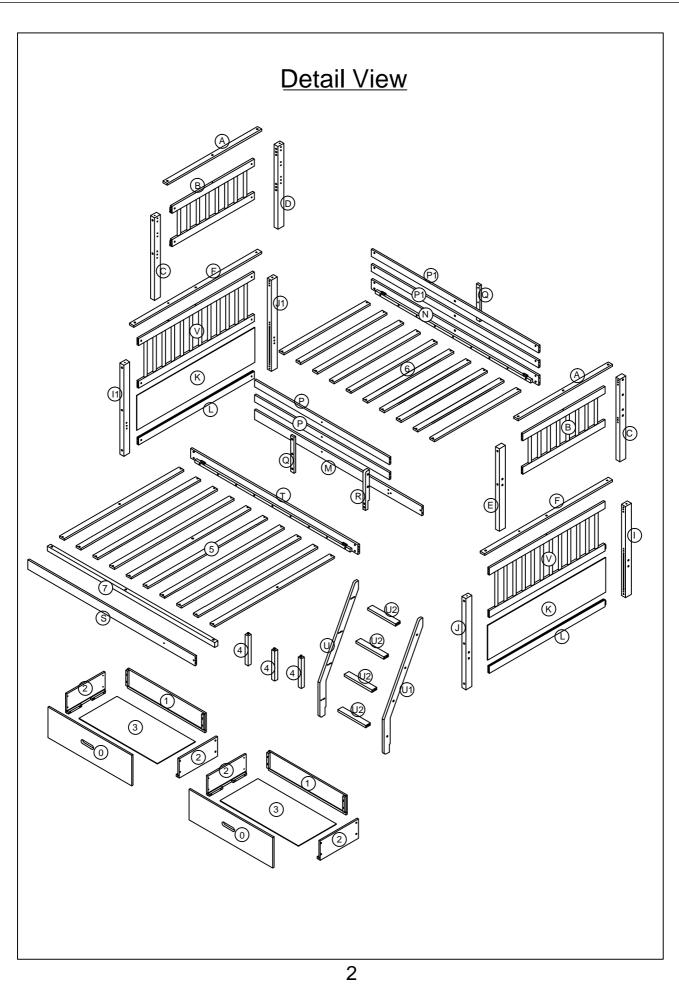


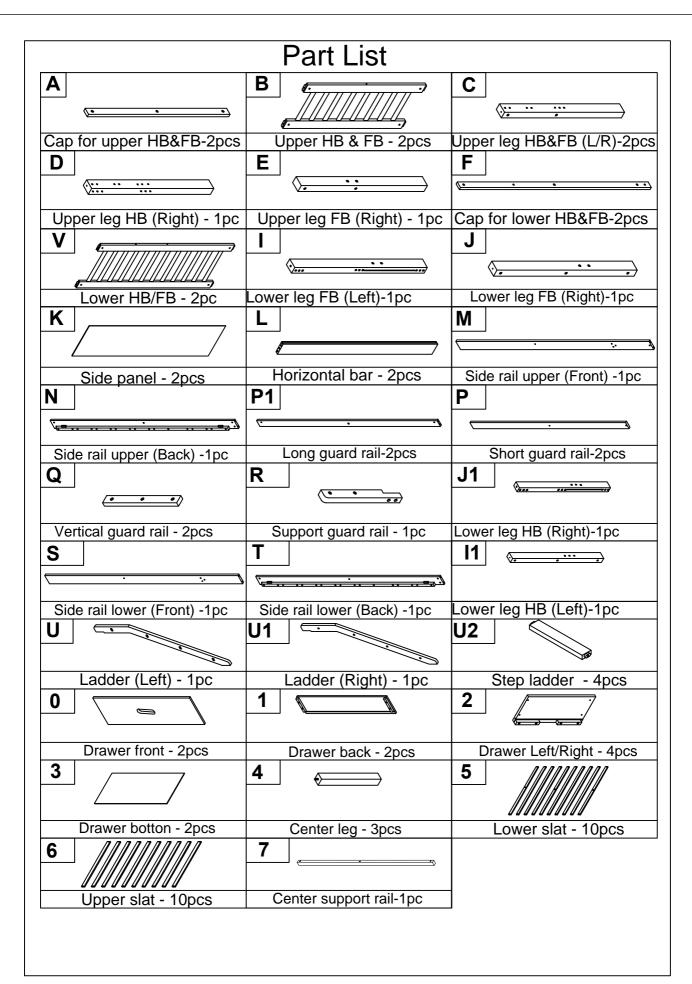

Hardware List

10	11	12
< F€⊞-€{ {	Ç≼FÍDFÐÐÄEFF€{{	Ç≼ FÍDFÐÐÄÐÌÍ{{
Wood dowel (80pcs)	Hex-Head bolts (20pcs)	Hex-Head bolts (22pcs)
13 9	14 ()	15
Ç≼ FODFÐDÄÐHÍ{{	Ç≼ FGDÓ EBFÎÄEH€{{	4mm
Hex-Head bolts (7pcs)	Hex-Head bolts (8pcs)	Allen key (1pc)
16	17 (1)	18
< FÐ ÄÆFÍ { {	ÁkI⊞K€{{	< Ĝ { {
Horizontal-Hole bolts(34pcs)	Screws (50pcs)	Caster (8pcs)
19 (†)	20	21
< HEFÍ { {	< F€ EJ€{ {	Áci EGÍ { {
Screws (16pcs)	Metal dowel (4pcs)	Screws (16pcs)
22	23 (+)	24
<Í⊞FÎÄÉ[{	Ácl∃€{{	< FÐD ÄÐFG({
Hex-Head bolts (8pcs)	Screws (12pcs)	Horizontal-Hole bolts(8pcs)
25		
< FÐ ÄÐ €{ { Hex-Head bolts (2pcs)		
Tiox Tiodd boild (2pos)	J	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

