

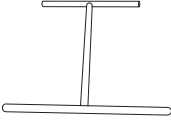

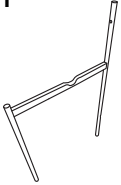





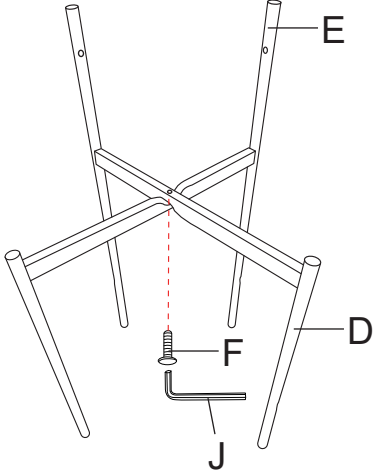


ASSEMBLY INSTRUCTION


<p>A x 1</p> 	<p>B x 1</p> 	<p>C x 1</p> 	<p>D x 1</p> 	<p>E x 1</p> 
<p>F x 5</p>  <p>M6x30mm</p>	<p>G x 2</p>  <p>M6x35mm</p>	<p>H x 4</p>  <p>M6x50mm</p>	<p>I x 4</p> 	<p>J x 1</p> 

①




Tips: There is an indicator arrow installation on the bottom surface.


②

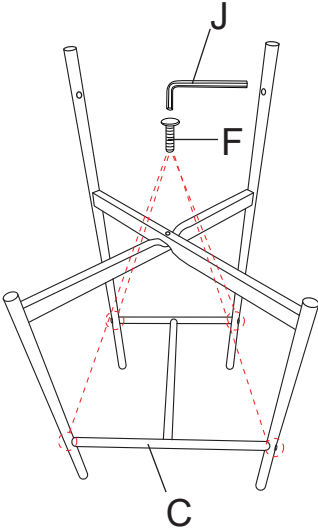


③

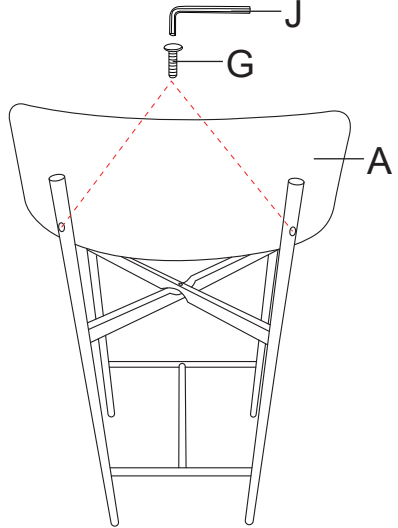

④

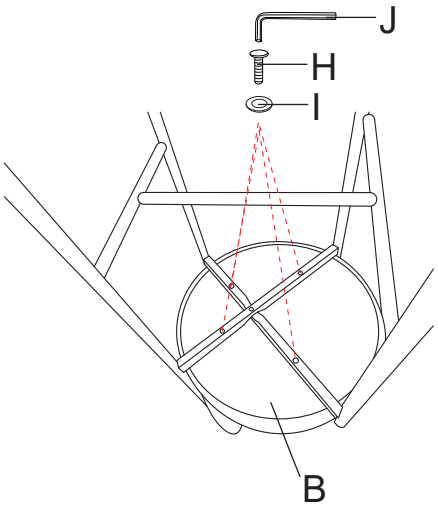

⑤

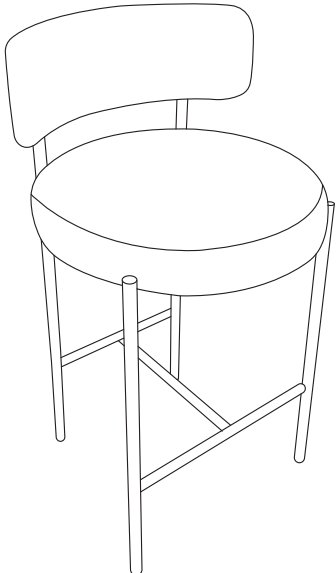

Tips: first tighten the screws 70% and finally tighten them all.