




ASSEMBLY INSTRUCTIONS






1340006



SCAN & WATCH
ASSEMBLY VIDEO

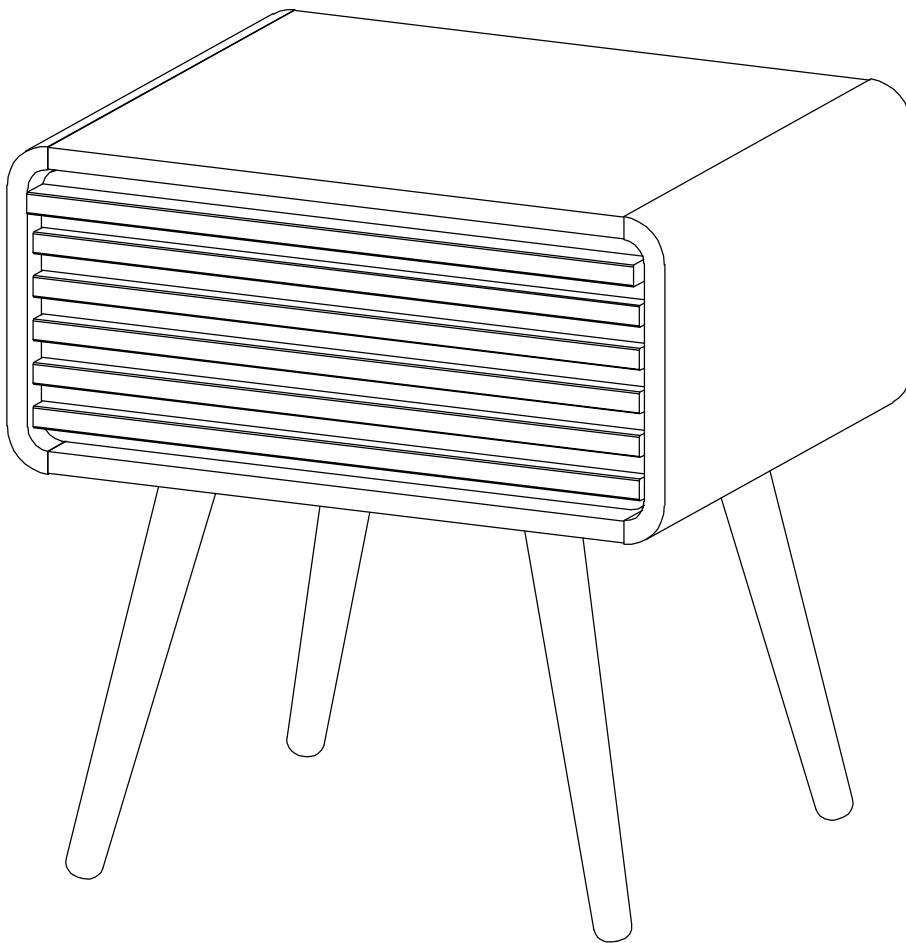

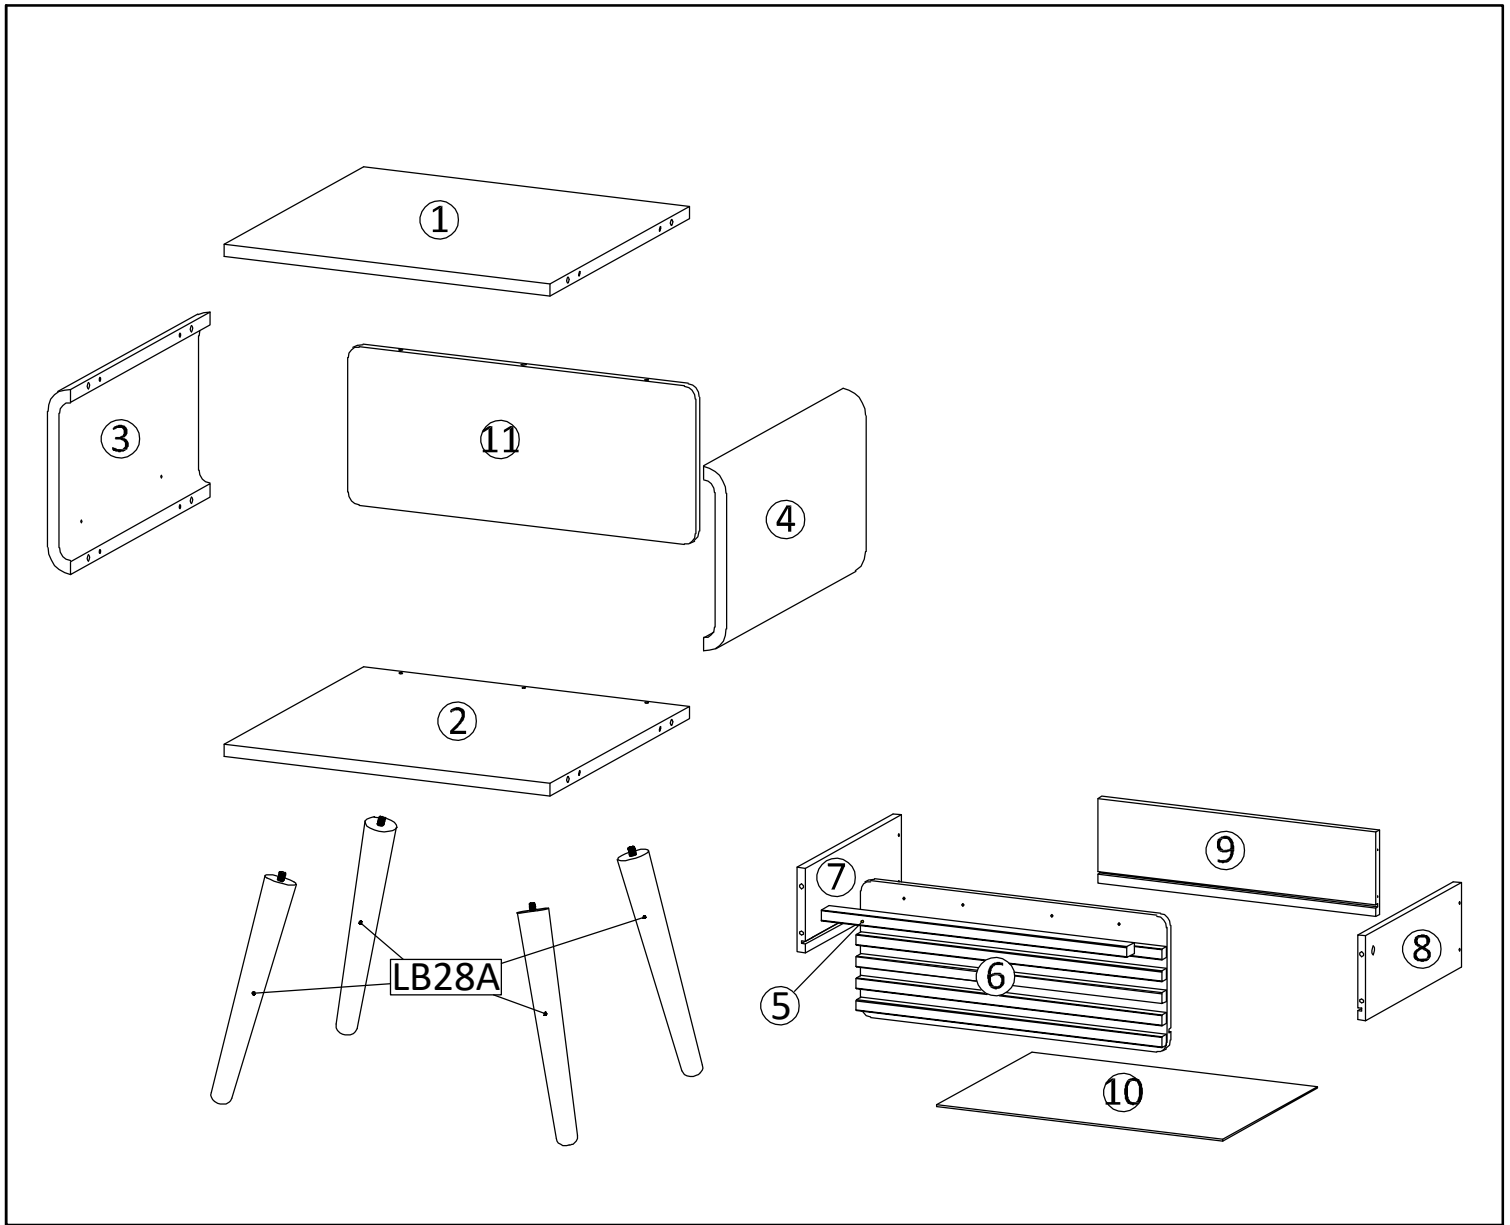

Hardware			
A		x 10	
Ø6 x 35 mm (LONG)			
B		x 2	
Ø6 x 32 mm (SHORT)			
C		x 8	
Ø15 mm (BIG)			
D		x 4	
Ø12 mm (SMALL)			
E		x 8	
Ø8 x 30 mm (BIG)			
F		x 6	
Ø6 x 30 mm (SMALL)			
G		x 4	
M 4 x 18 mm			
H		x 24	
M 6 x 10.5 mm			
I		x 6	
M 3.5 x 13 mm			
J		x 4	
M 4 x 39 mm			
K		x 1	
RM30A		x 1	
300 mm			
PM1		x 4	



SET-UP TIME : 60 MINUTES






NUMBER OF PERSONS : 02







TOOLS :   (Not Provided)


1

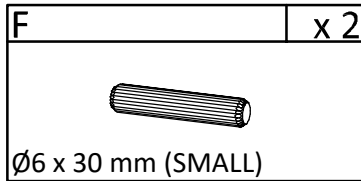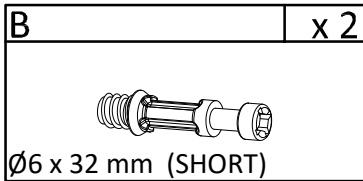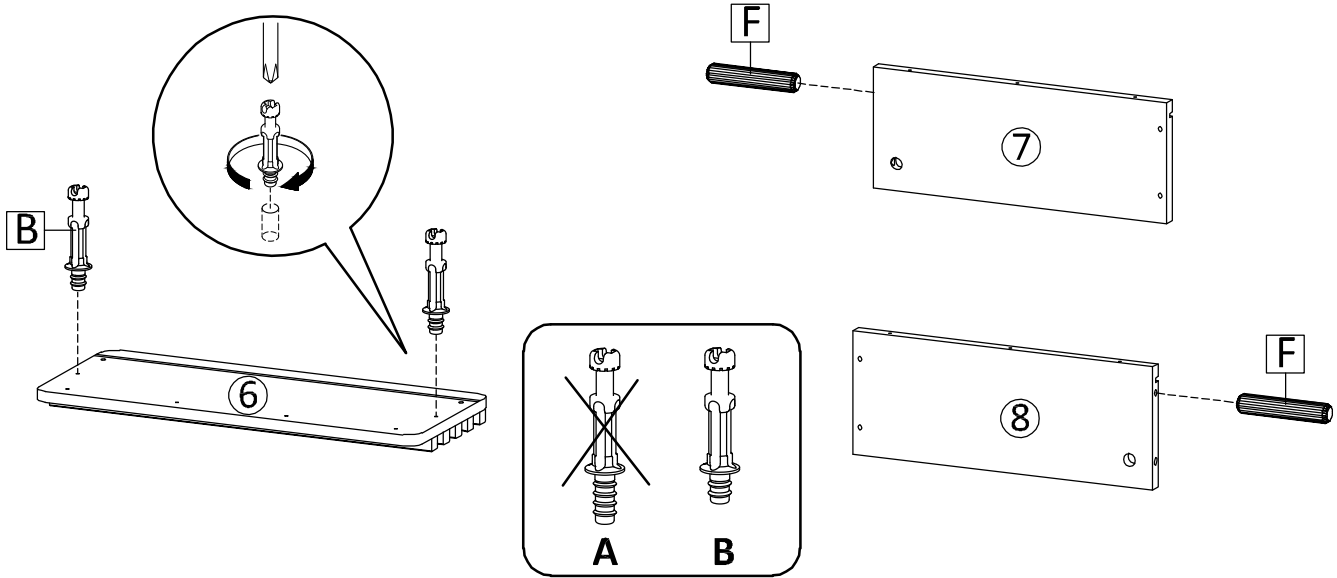


2

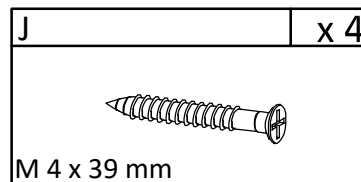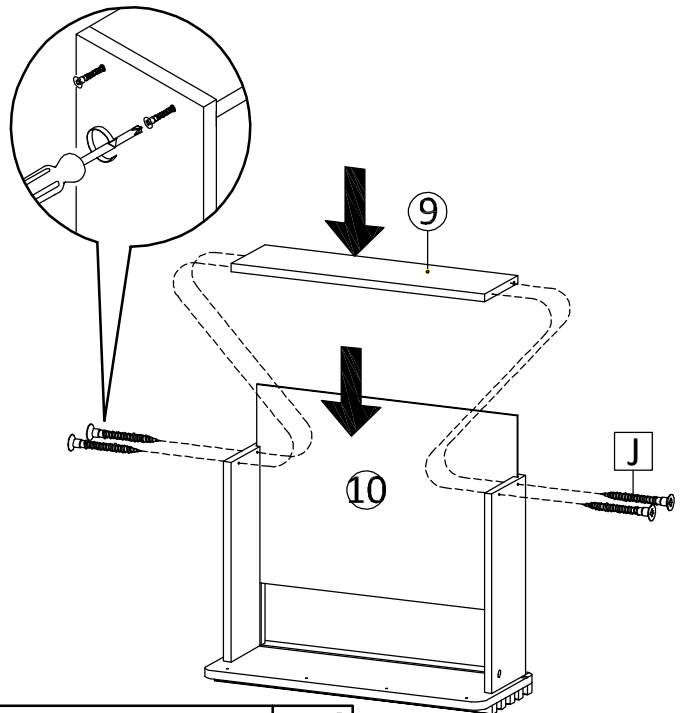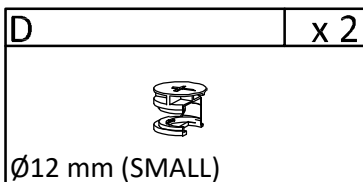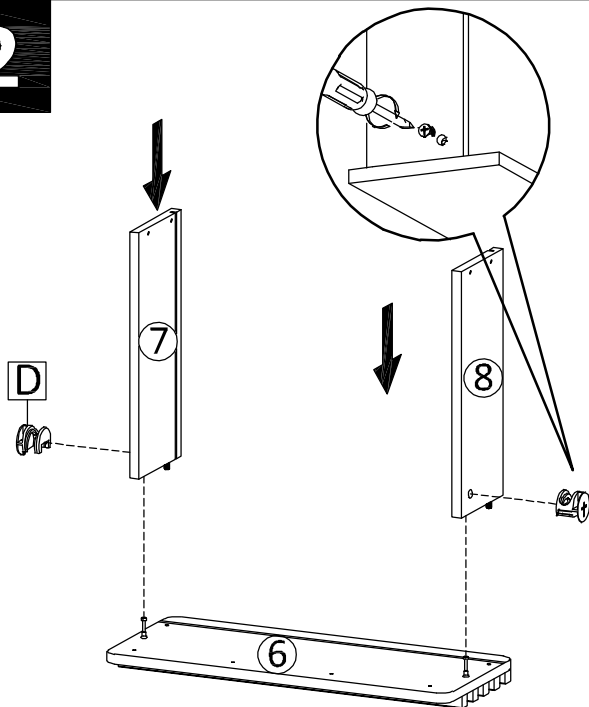



3


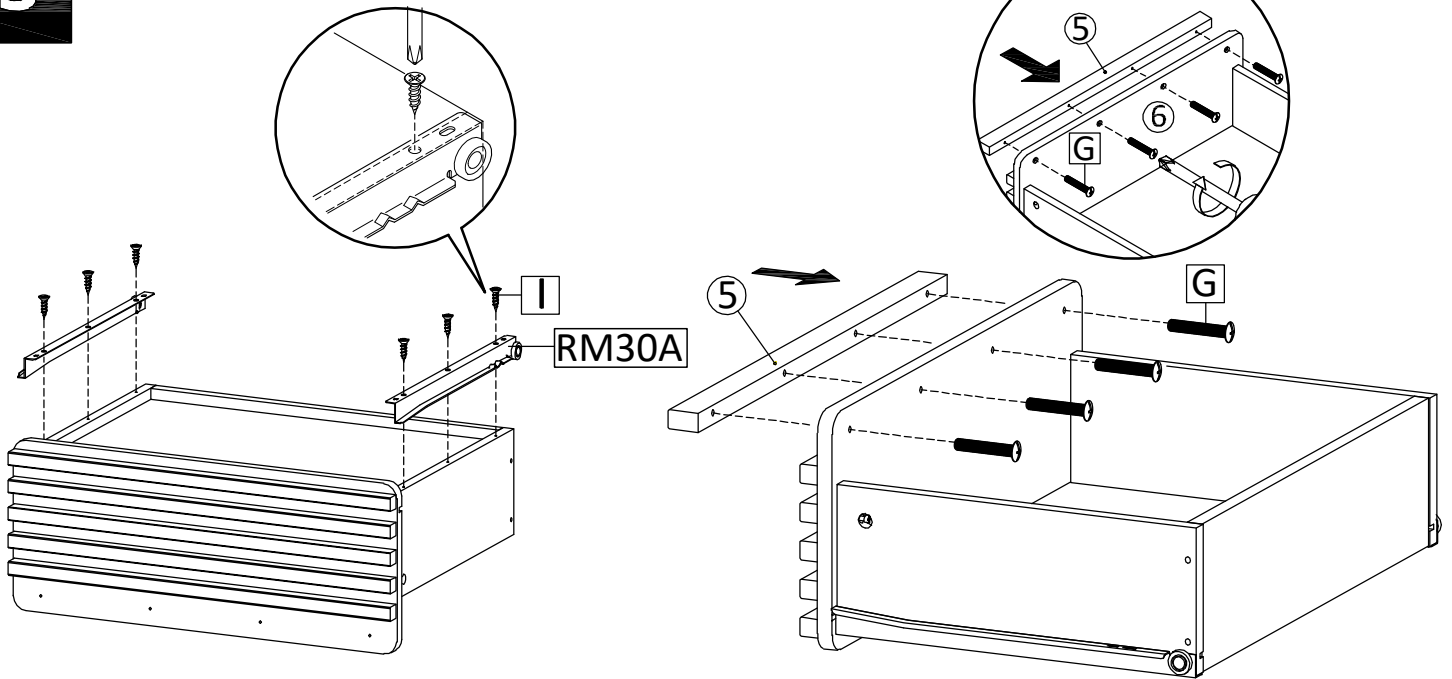


G	x 4	I	x 6	RM30A	x 1
					
M 4 x 18 mm		M 3.5 x 13 mm		300 mm	


4

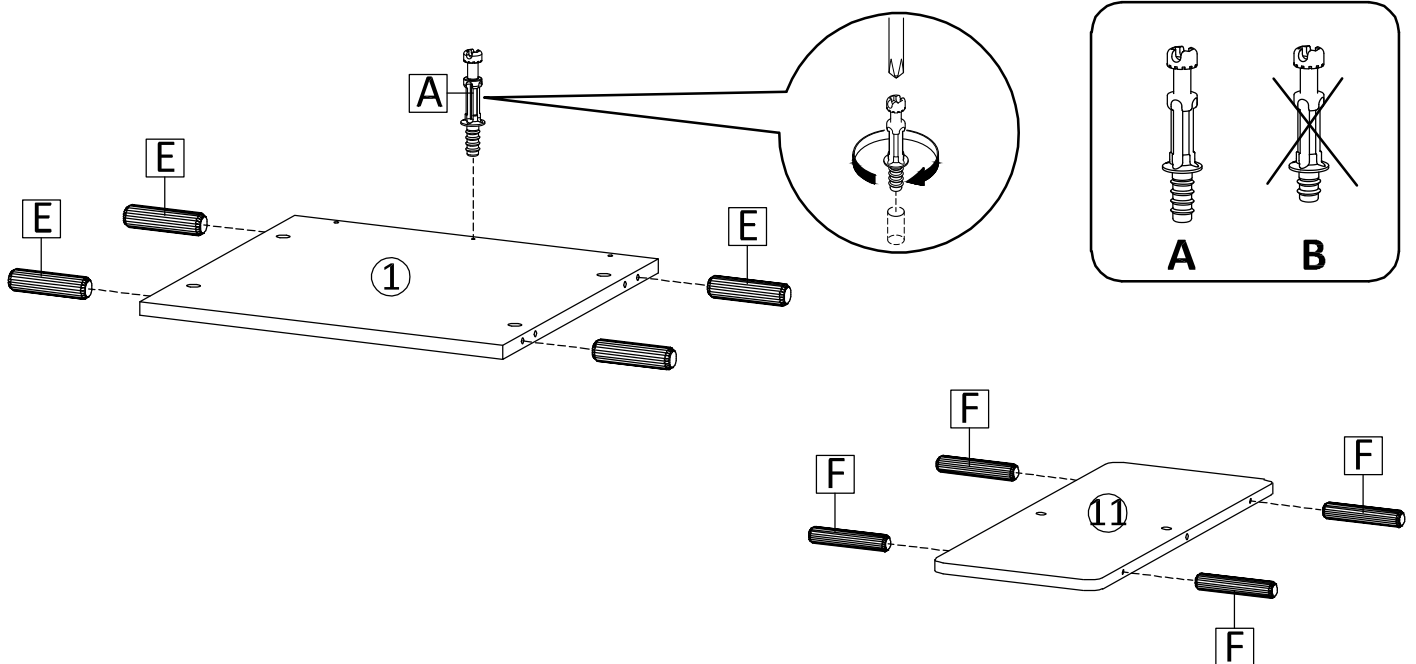

A	x 1	E	x 4	F	x 4
					
Ø6 x 35 mm (LONG)		Ø8 x 30 mm (BIG)		Ø6 x 30 mm (SMALL)	

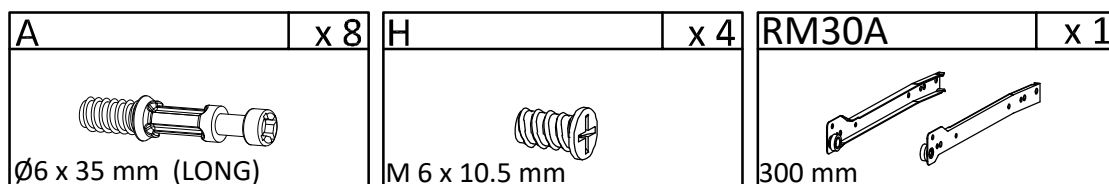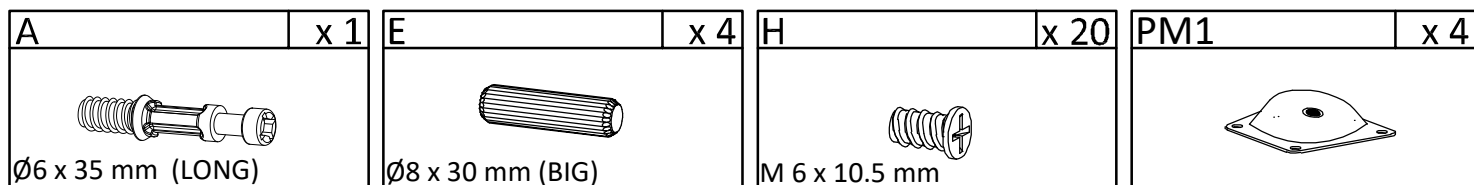


7

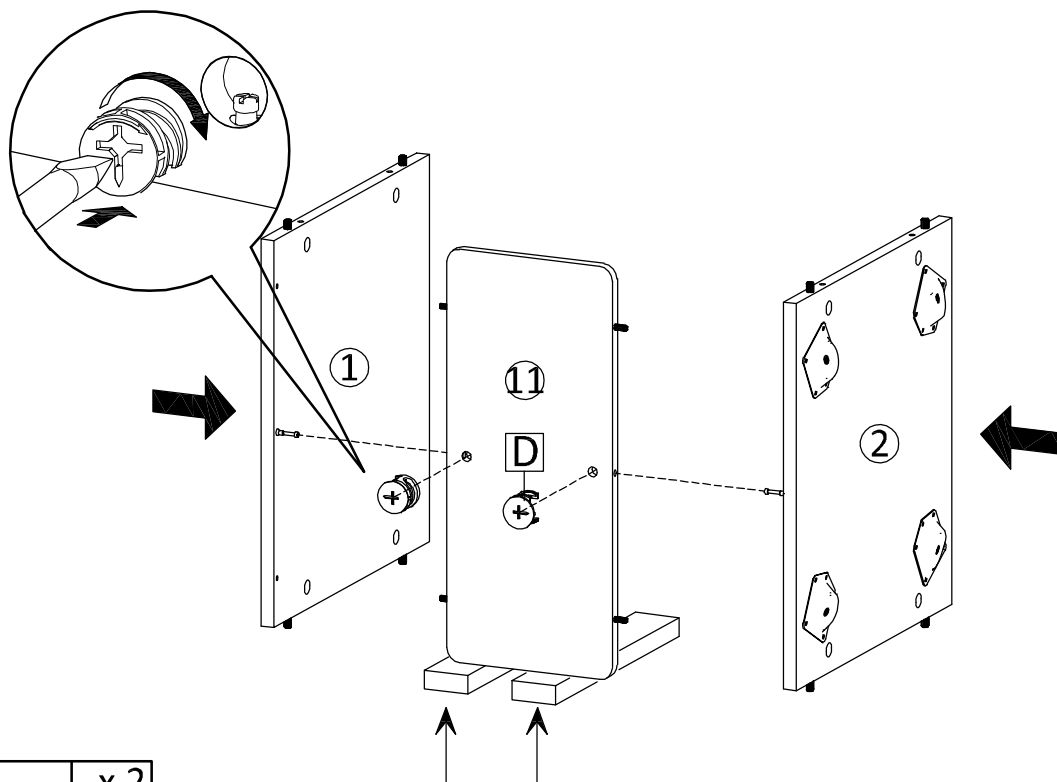

D	x 2
	
Ø12 mm (SMALL)	

USE EPS FROM THE PACKAGING MATERIAL


8

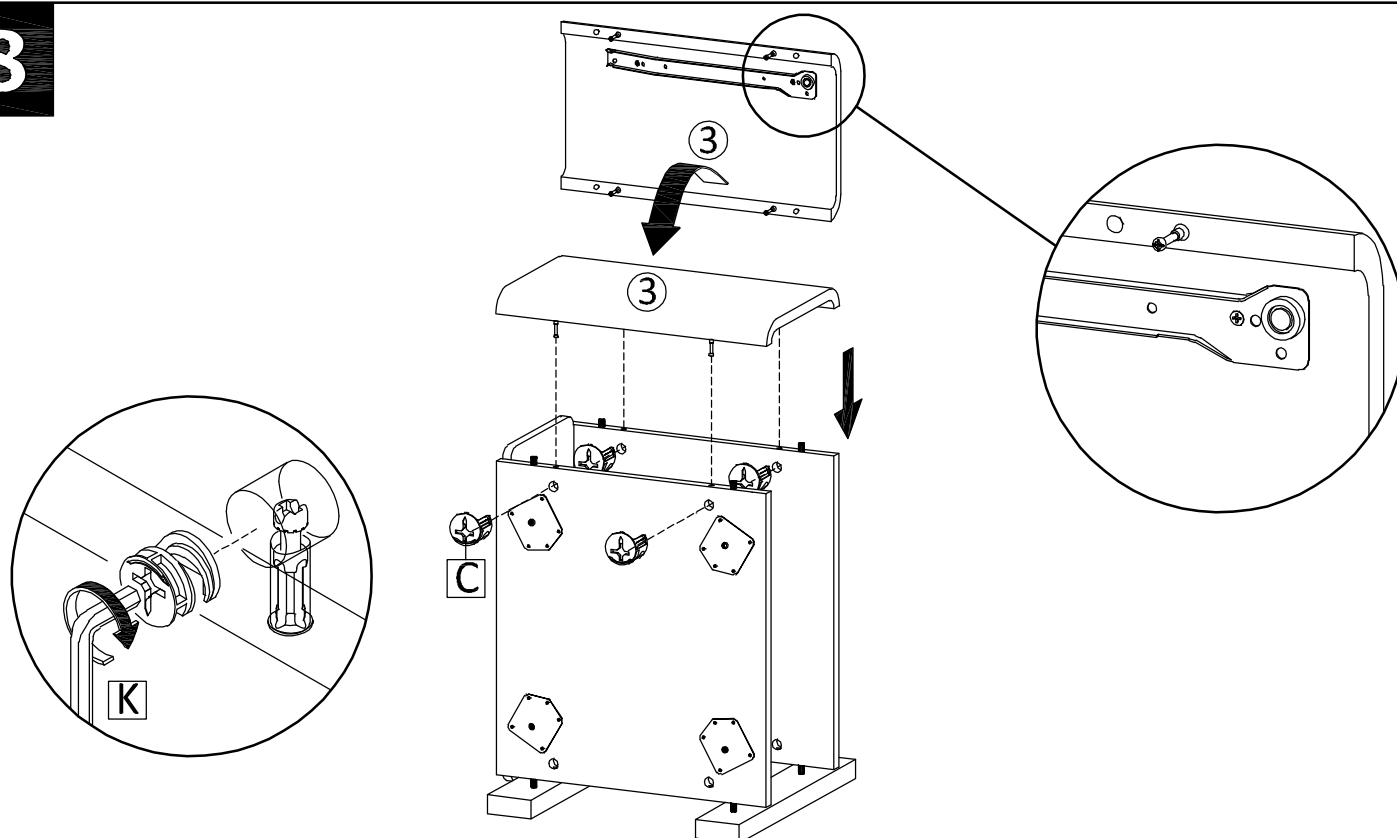

C	x 4
	
Ø15 mm (BIG)	


K	x 1
	

9


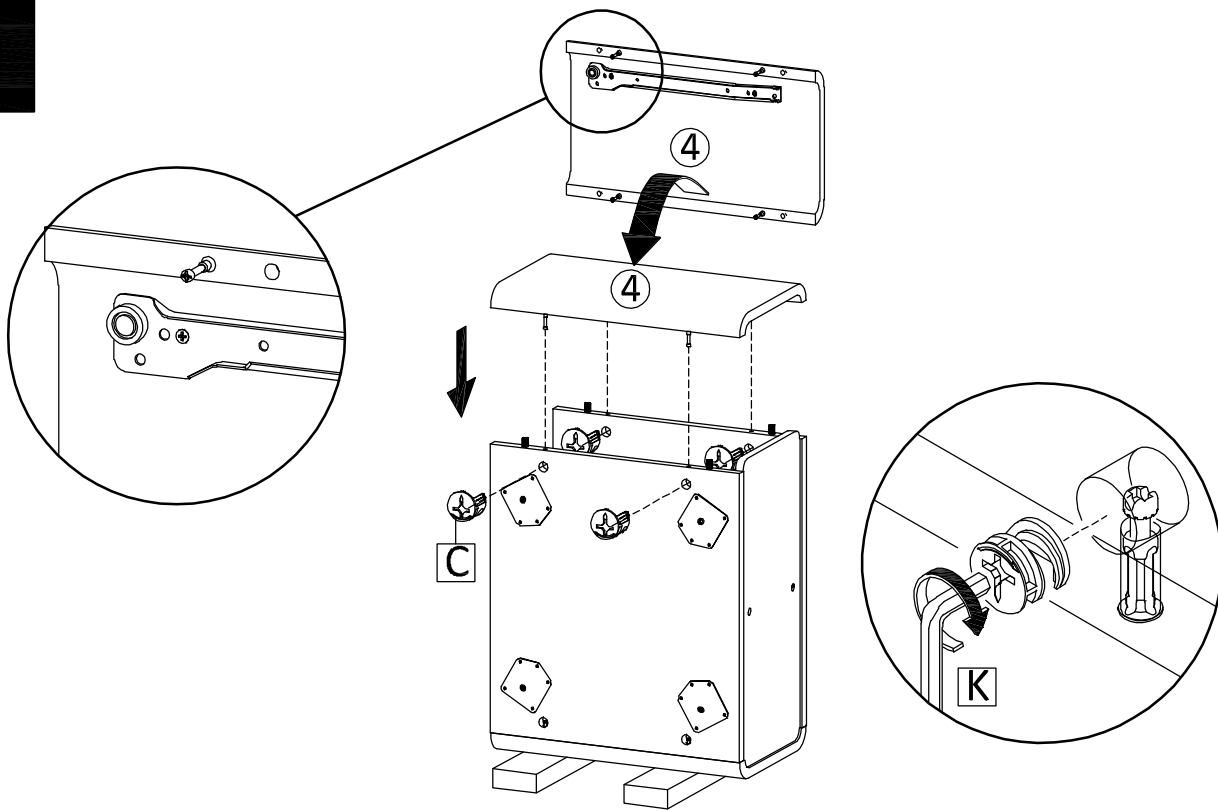


C	x 4	K	
 Ø15 mm (BIG)			

10

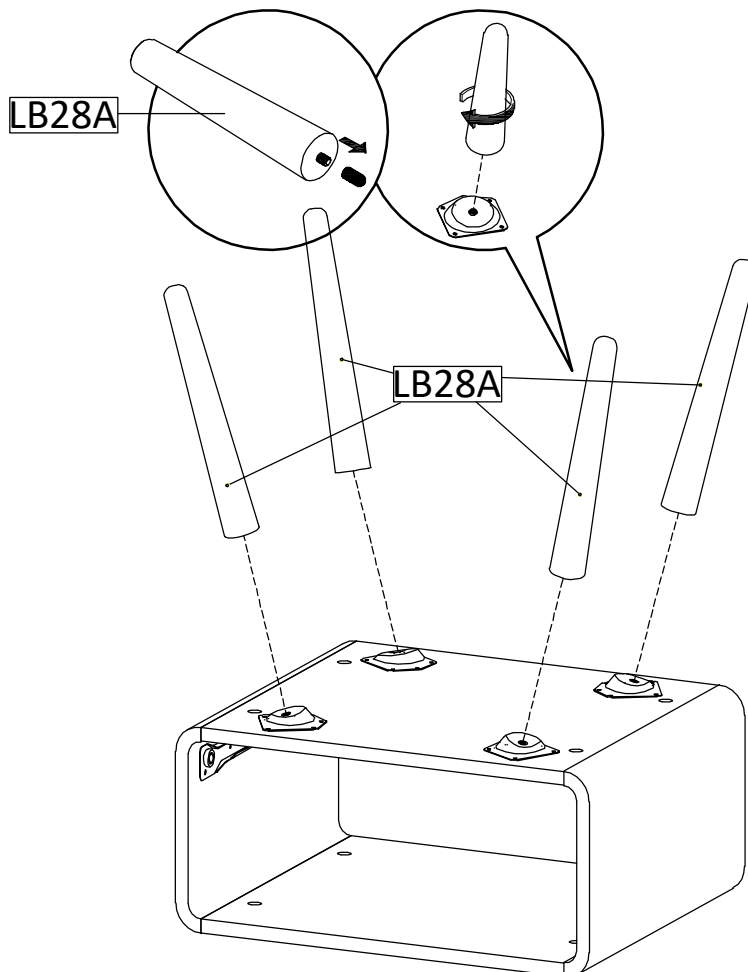

11

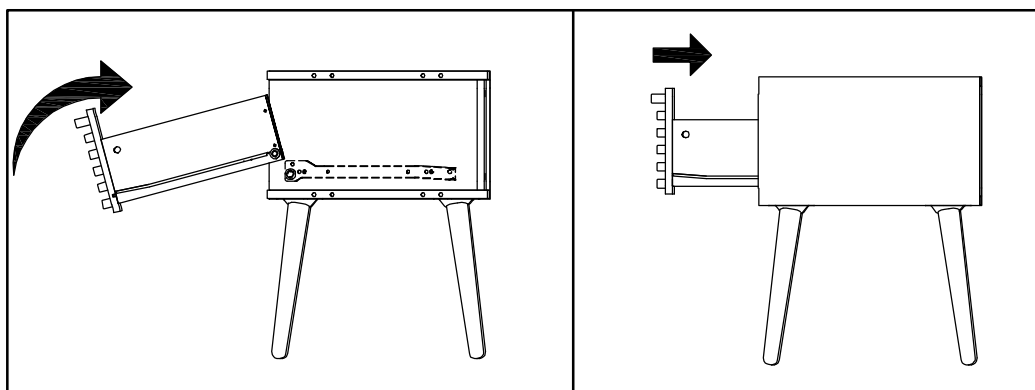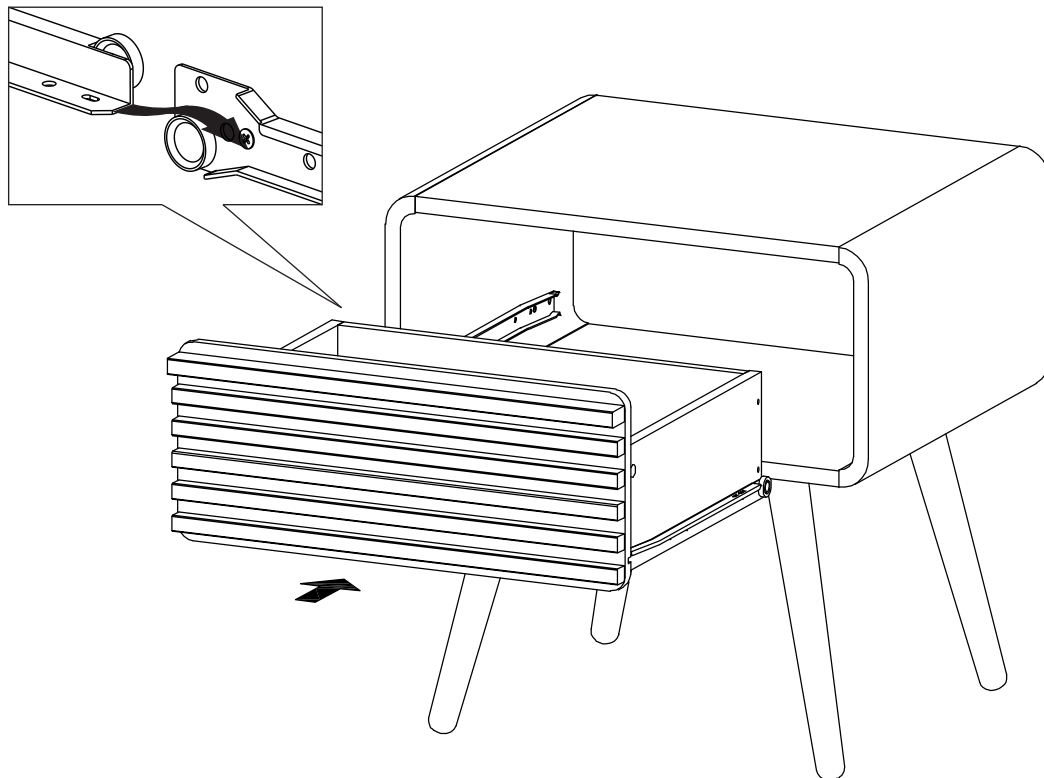

12

