
Shower Door Installation Guide

DS15

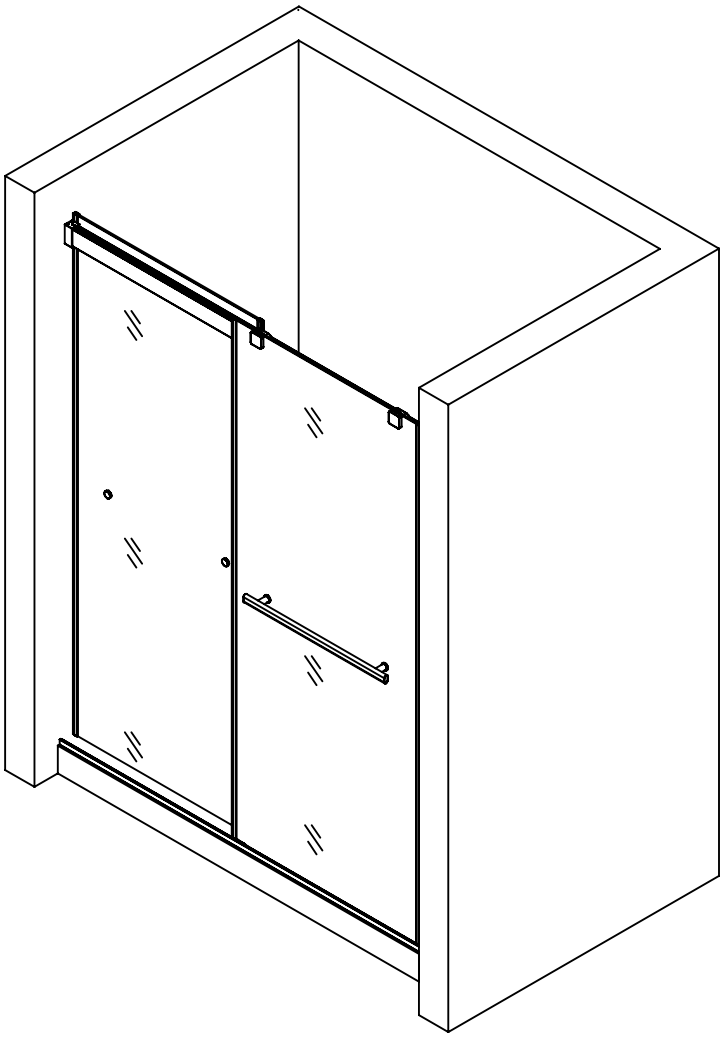


Plz do not just return when meeting difficulties in installation, just contact your seller for help.


Model Specific Preparation

REQUIRED:


Inspect the shower threshold for level with a level or straightedge. Adjust the threshold as necessary until achieving perfectly horizontal.

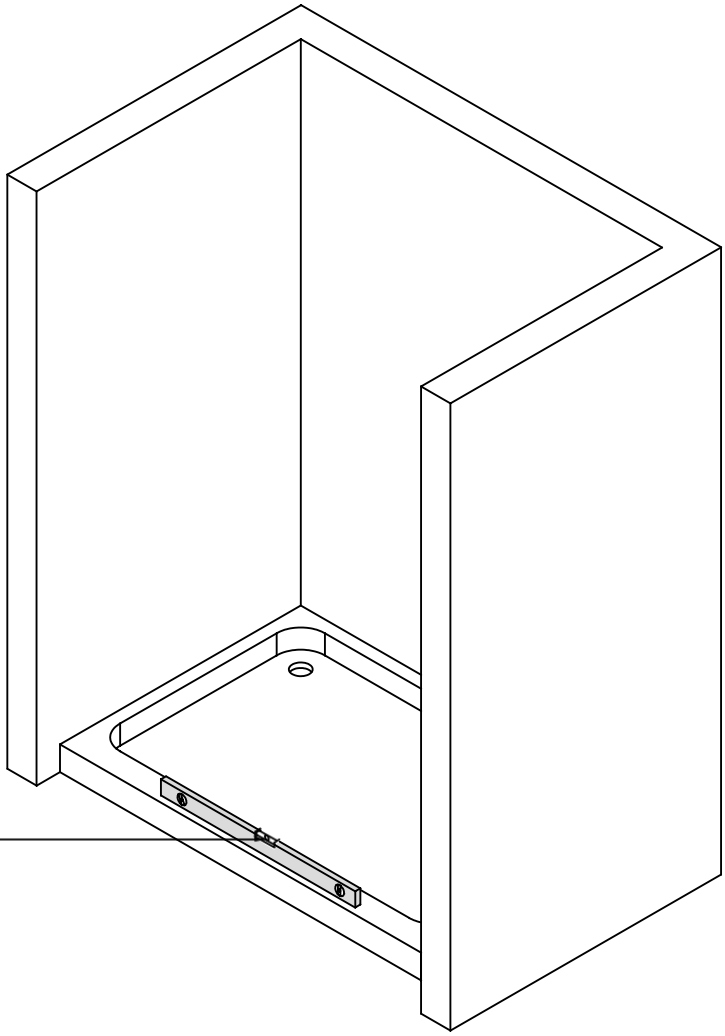

The threshold must be perfectly horizontal.

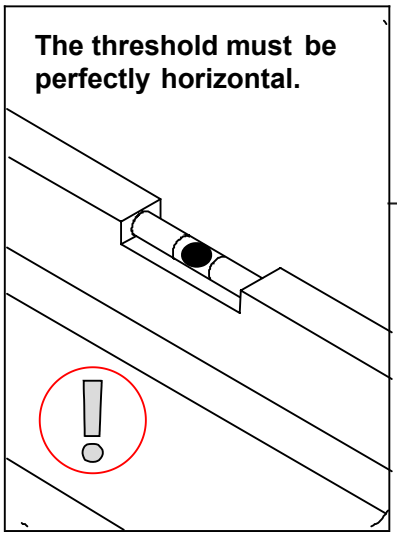

PACKAGE CONTENT

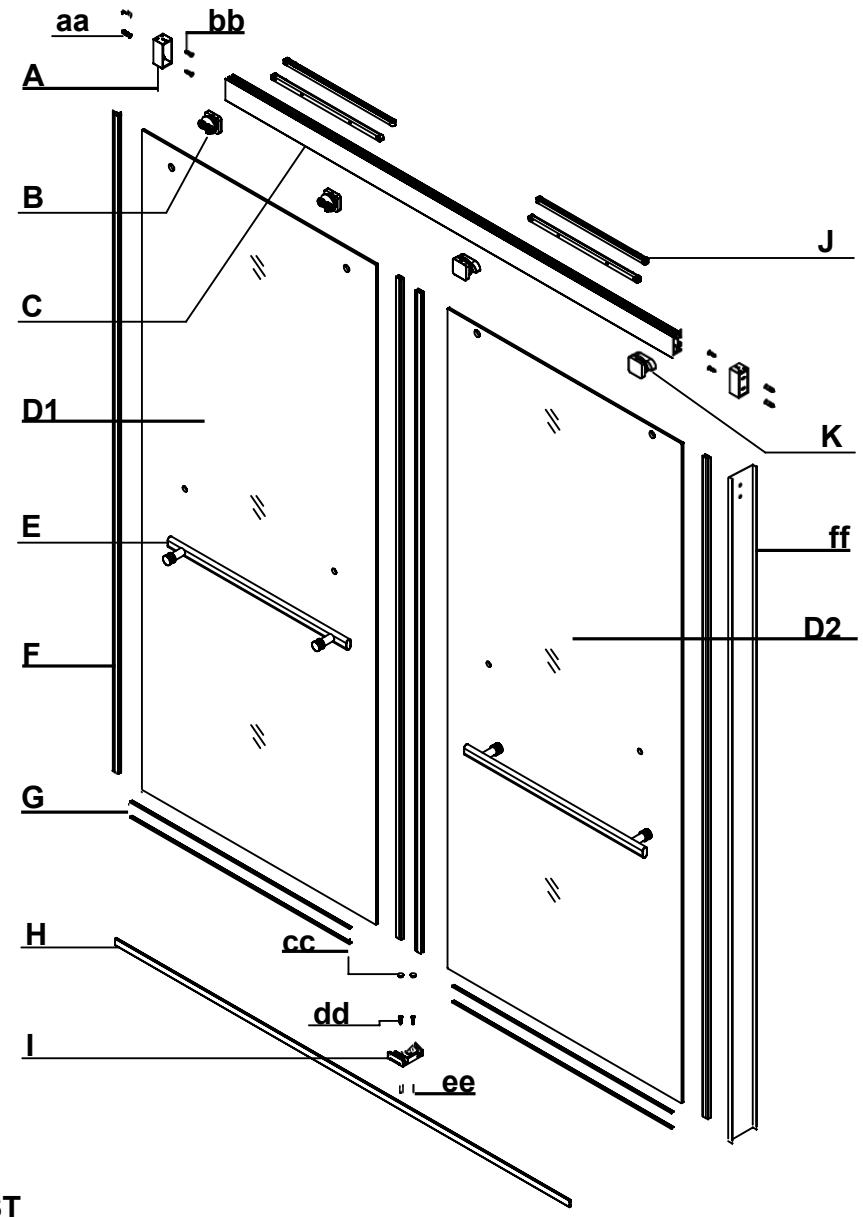

PARTS LIST

PART#	DESCRIPTION	QTY
A	Guide Rail Bracket	2
B	Inner Roller Assembly	2
C	Top Rail	1
D1	Inner Glass Panel	1
E	Handle	2
F	Side Seal Strip	4


PART#	DESCRIPTION	QTY
G	Water Dam Seal	4
H	Threshold Water Dam	1
I	Bottom Guide Block	1
J	Soft-Close Bumper	4
K	Outer Roller Assembly	2
D2	Outer Glass Panel	1

NOTE


Please inspect all parts for missing items before installatio any!


If any part is missing, please contact us.

PACKAGE CONTENT

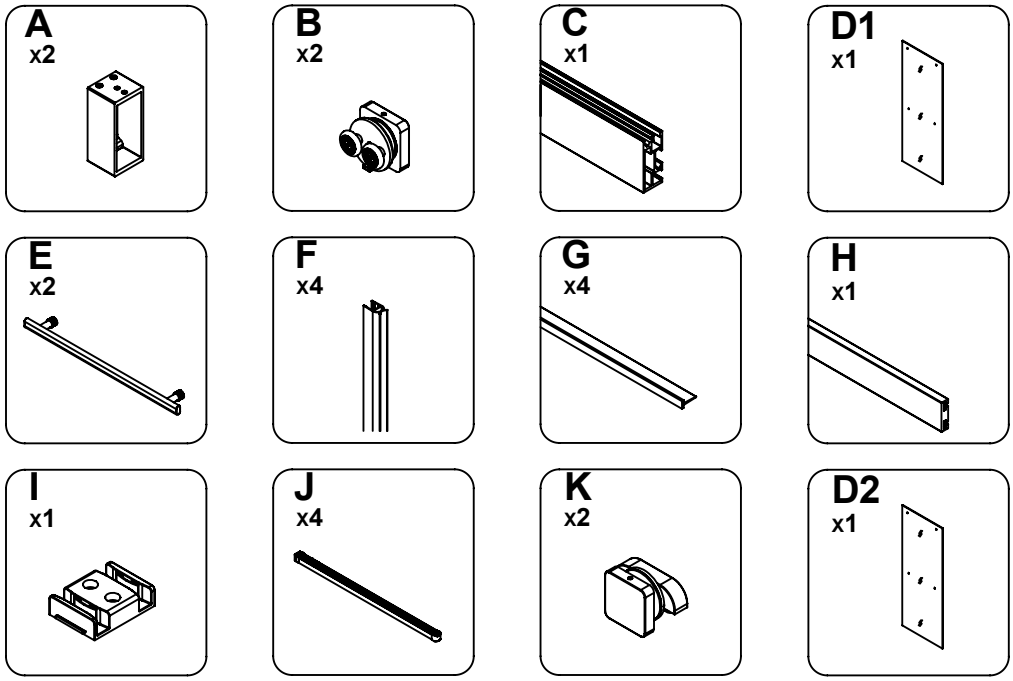

HARDWARE CONTENT

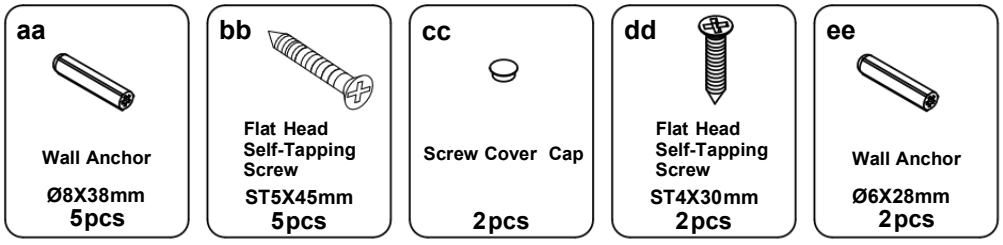

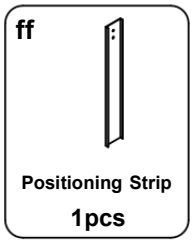



Additional spare parts are included.

NOTE **Inspect all parts for any missing items prior to installation!**
Contact us if any parts are missing.

TOOLS REQUIRED

Drill Bits



Ø1/4"&Ø5/16"(6&8mm)dia.
HSS

Screw Driver




Drill



Level



Silicone

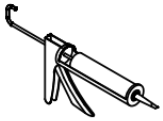

Measuring Tape




Soft Head Hammer



Pencil



Knife

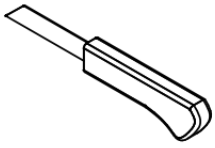

Masonry Drill Bit For Tile Ø6mm




Safety Glasses




Gloves




Carpenter's Squarer




Maksing or Painter's Tape




Hack Saw

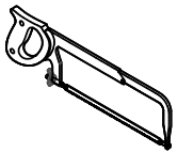


Metal File



Glass suction Cup

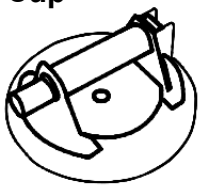

wooden pad

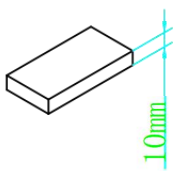

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower.There is a risk of serious injury while handling this product.

To minimize these risks,please note:

- **Always wear safety glasses and gloves while handling.**
- **Always follow the installation instructions.**
- **Inspect the glass for damage before installation.**
- **Extreme caution should be taken while handling the glass during installation, as the tempered glass may shatter if it comes into contact with a hard surface.**
- **Do not cut or modify the tempered glass, as it will shatter if cut.**
- **Carefully remove the product from its packaging and keep the packaging until the installation is complete.**
- **Inspect all parts for damage or missing items. If there is any damage or missing parts prior to installation, please contact your seller for help.**
- **Cover the drain with tape to prevent the loss of small parts.**
- **The shower base and finished walls should be installed before beginning the shower door installation.**
- **During installation, protect the shower floor with a drop cloth to prevent damage.**
- **This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!**
- **Keep this installation manual for future reference.**


NOTE: Two people should perform this installaton.

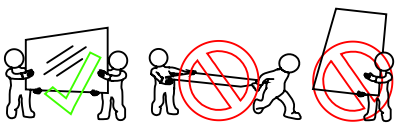



1 Install **Guide Rail Brackets (A)**

NOTE

1.Place the **positioning strip (ff)** flush with the edge. Using a level, ensure the strip is perfectly vertical.
2.Mark drill points through the Strip holes using a pencil.

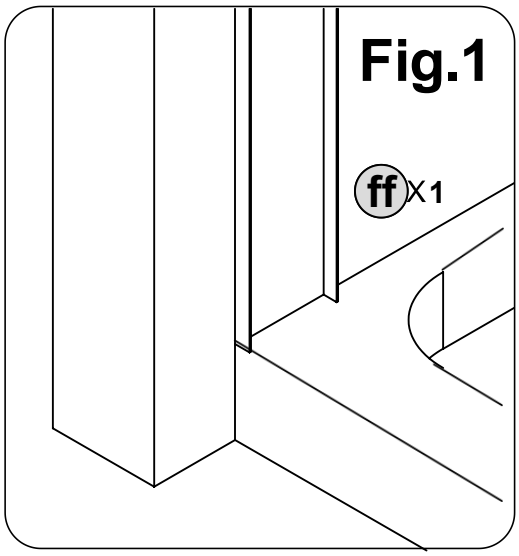

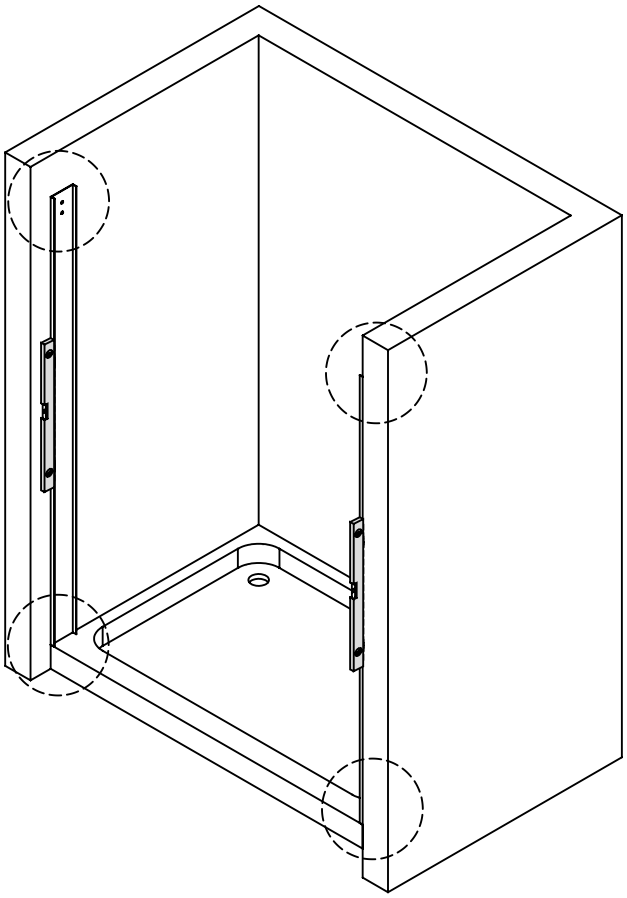


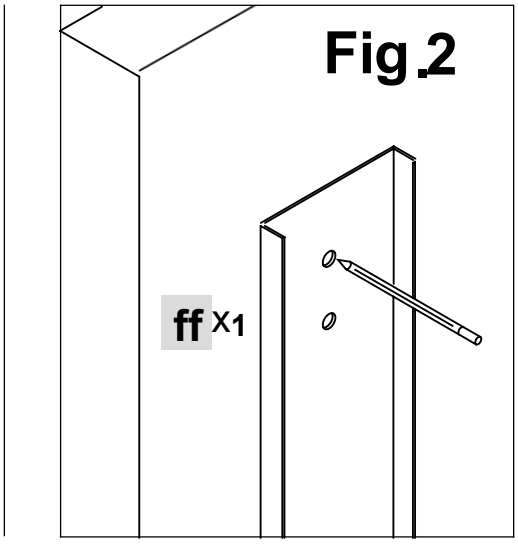



2 Install **Guide Rail Brackets (A)**


NOTE

1.Drill Ø8mm holes at marked points.
2.Insert **wall anchors (aa)** using a soft-head hammer.
3.Secure left/right **Guide Rail Brackets (A)** to the wall using **ST5x45mm flat-head self-tapping screws (bb).**

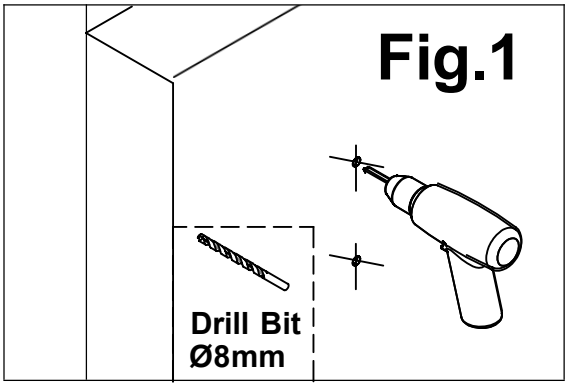

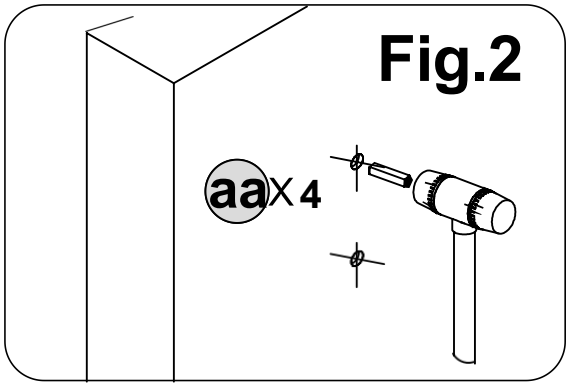

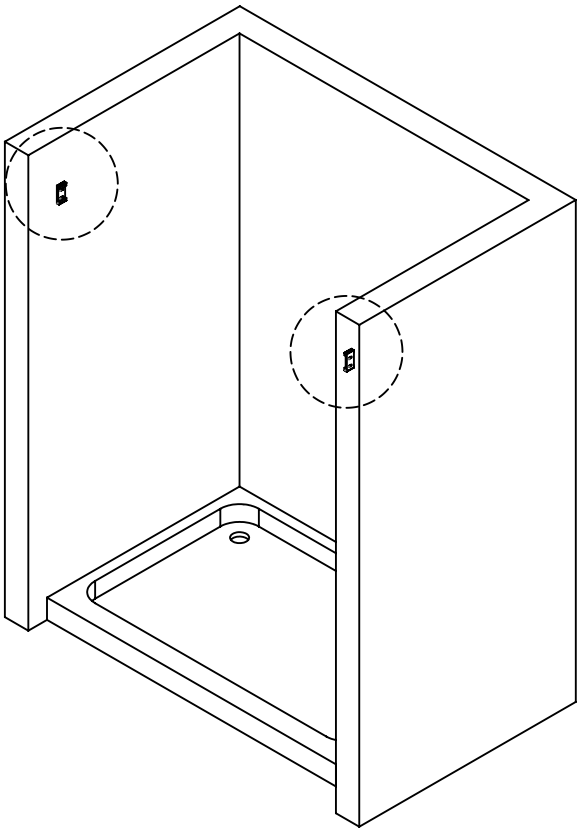

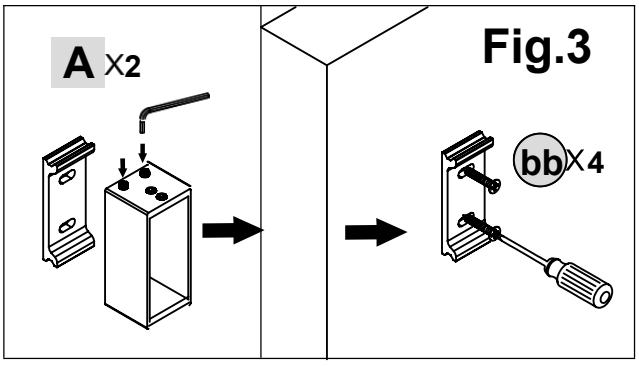



3 Prepare **Top Rail (C)**


NOTE

1.Re-measure the installation width and cut the **Top Rail (C)** to required length.

2.Loosen set screws on **Soft-close bumpers (J)** using a hex key.

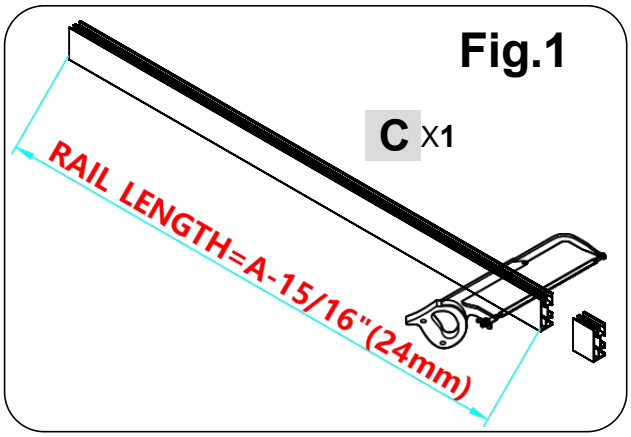

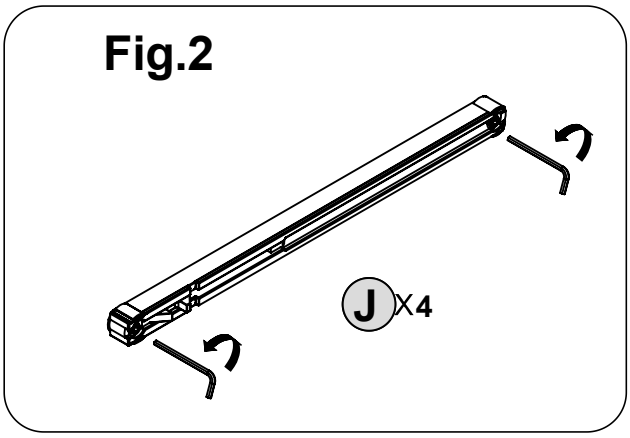

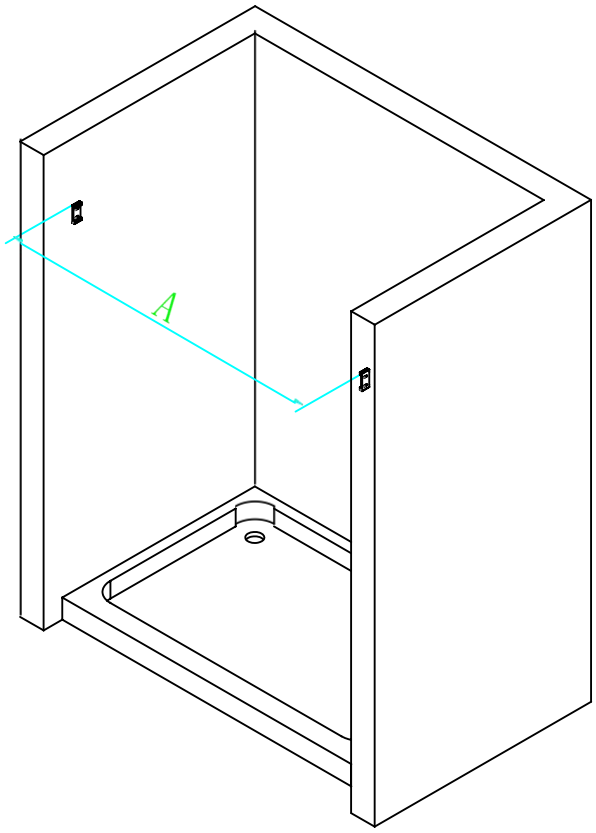



4 Install **Inner Rollers (B)** & **Outer Rollers (K)**

NOTE

1.Insert **Inner Roller assemblies (B)** into the inner channel of the **Top Rail (C)**.

2.Insert **Outer Roller assemblies (K)** into the outer channel of the **Top Rail (C)**.

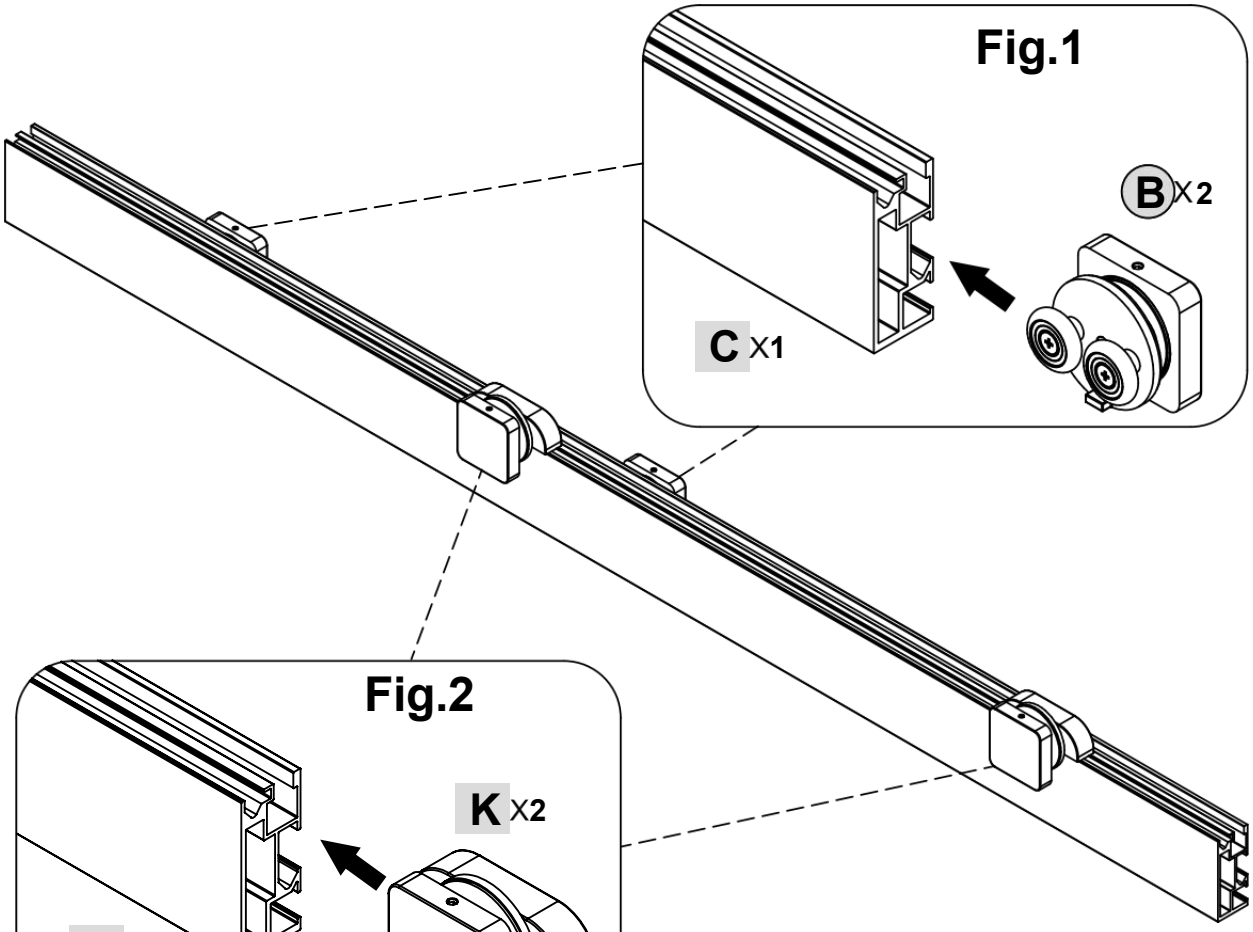

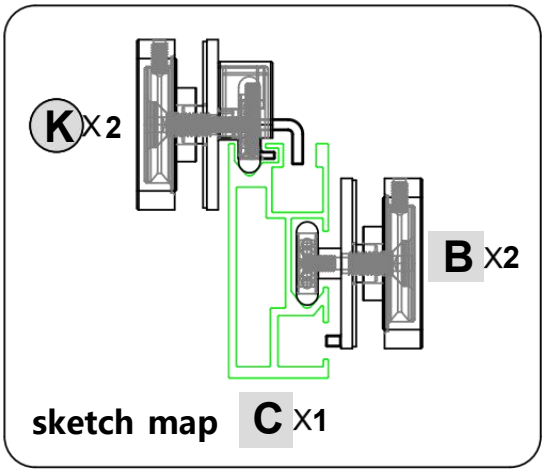



5 Install **Soft-Close Bumpers (J)**


NOTE


1.Insert **Soft-close Bumpers (J)** into both ends of the upper and lower track channels, pay attention to correct orientation.


2.Position **Soft-close Bumpers (J)** 67mm from each end of the track. Tighten set screws with a hex key. Activate the release mechanism as shown in Fig 2.

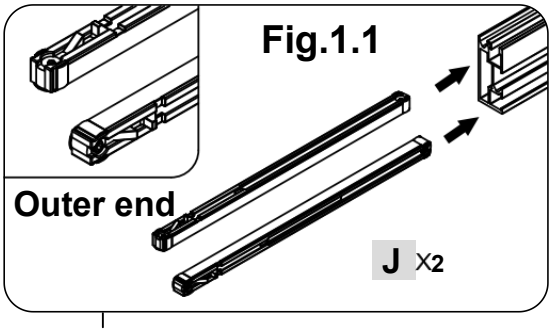

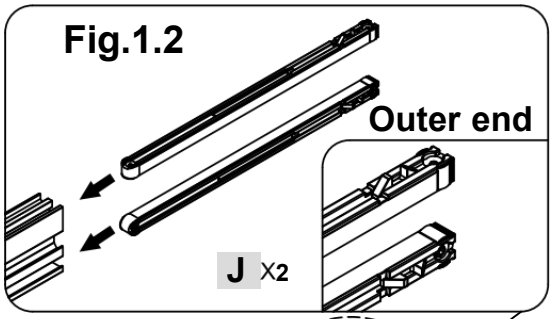

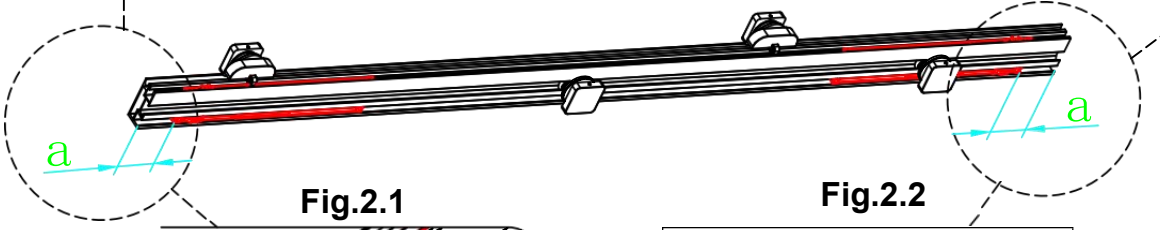

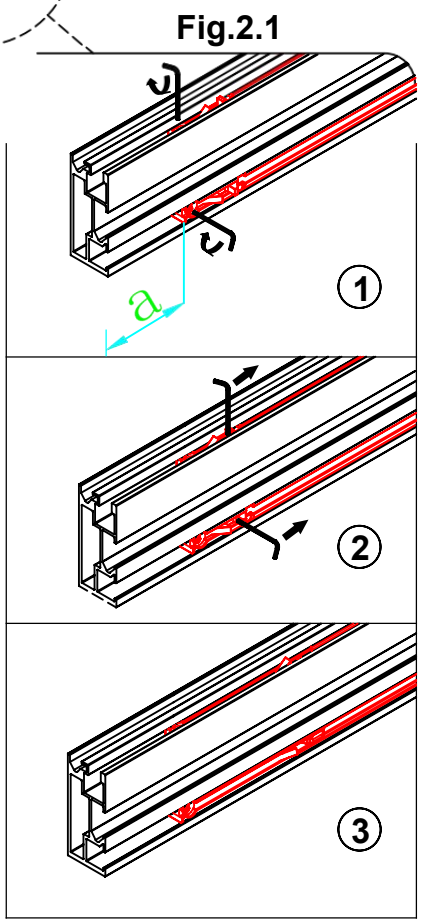

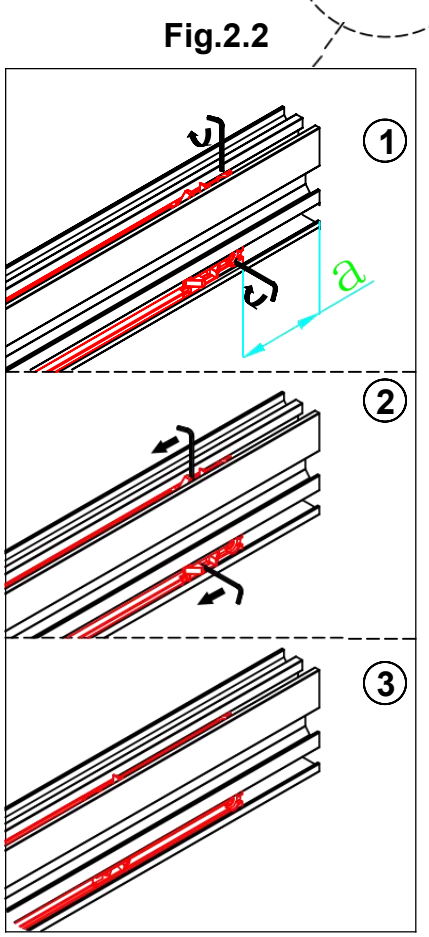

6 Install **Top Rail (C)**

NOTE

1.Loosen set screws on **Guide Rail Brackets (A).** Slide brackets onto both ends of the **Top track (C)**.
2.Mount the track assembly onto the wall-mounted bracket bases.
3.Securely tighten all set screws on **Guide Rail Brackets (A)** and **Top track (C)**. using a hex key.

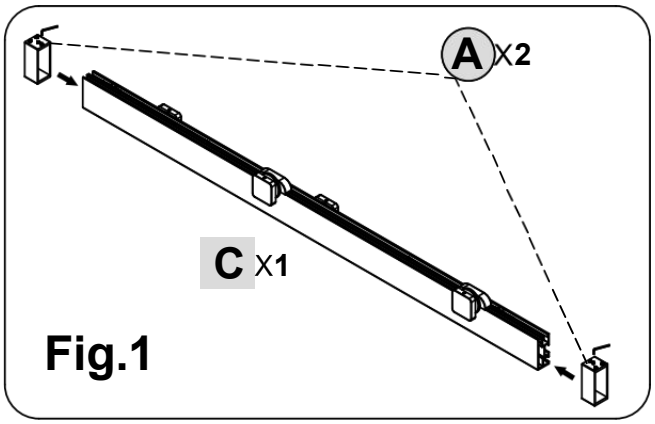
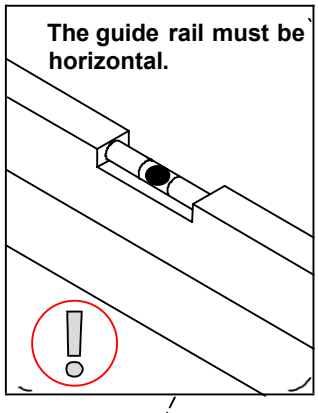


Fig.1



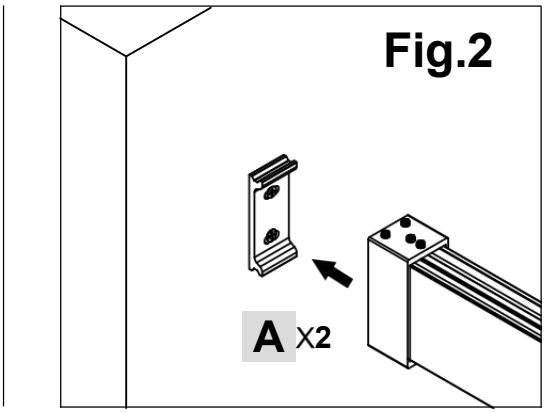


Fig.2


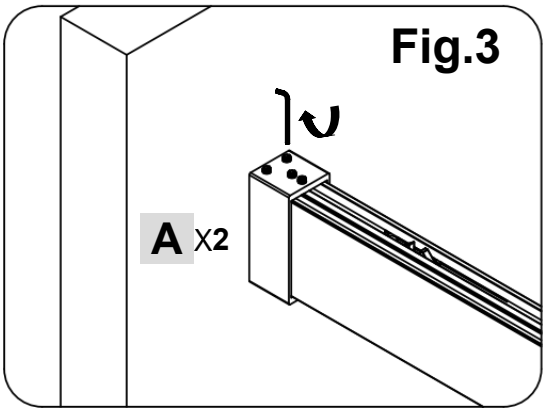


Fig.3

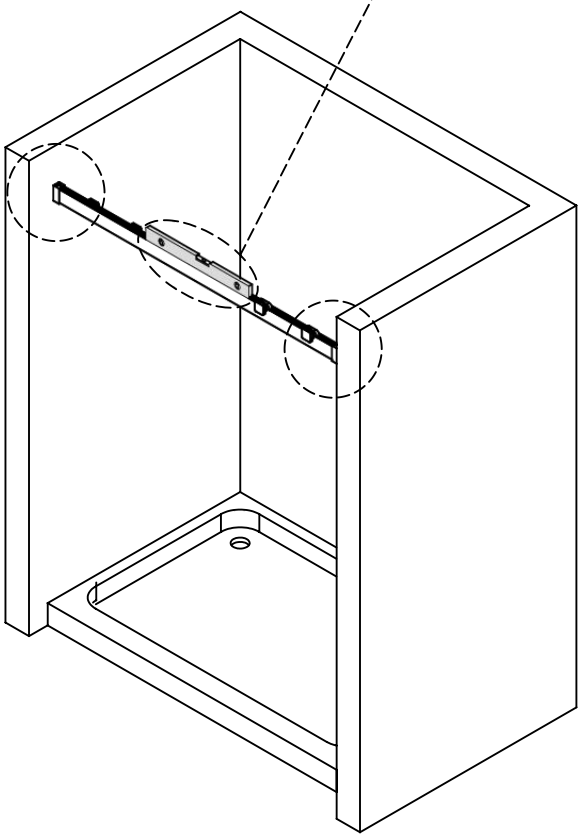

7 Install **Threshold Water Dam (H)**

NOTE

1.Re-measure and cut the **Threshold Water Dam (H)** to required length.
2.Install **Bottom Guide Block (I)** onto **Threshold Water Dam (H).**
3.Position **Guide Block (I)** at the center (L/2) of **Threshold Water Dam (H)**. Install **Water Dam Seals (G)** along the water dam and trim excess.
4.Position water barrier 8mm from the edge during installation.

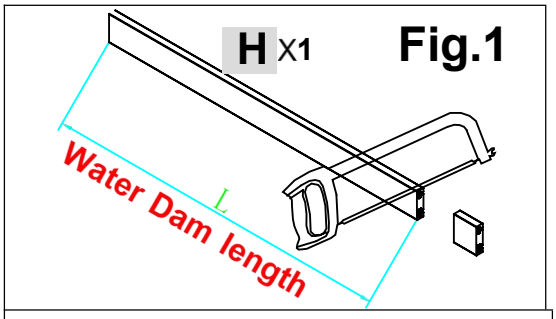


Fig.1

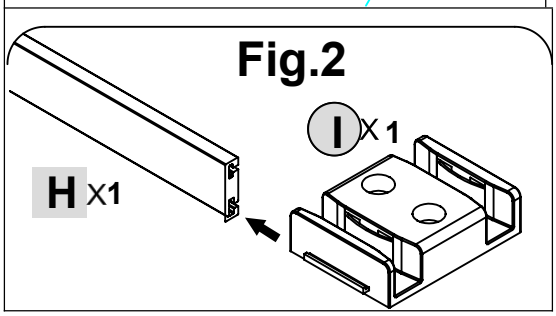


Fig.2




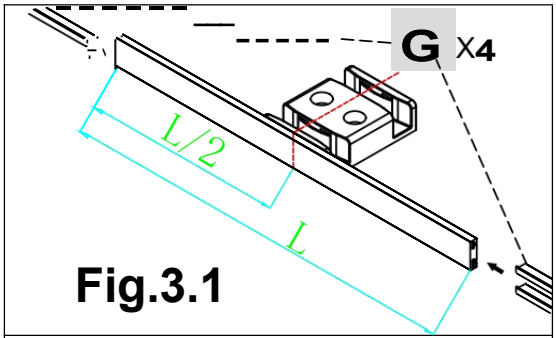


Fig.3.1


Fig.3.2

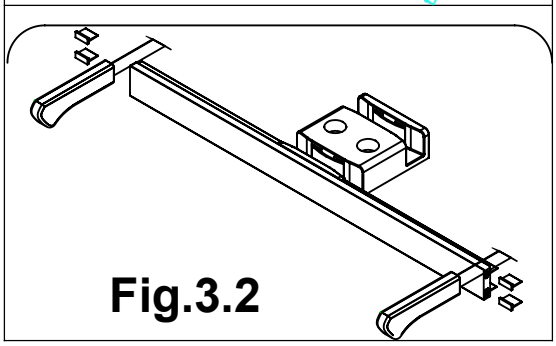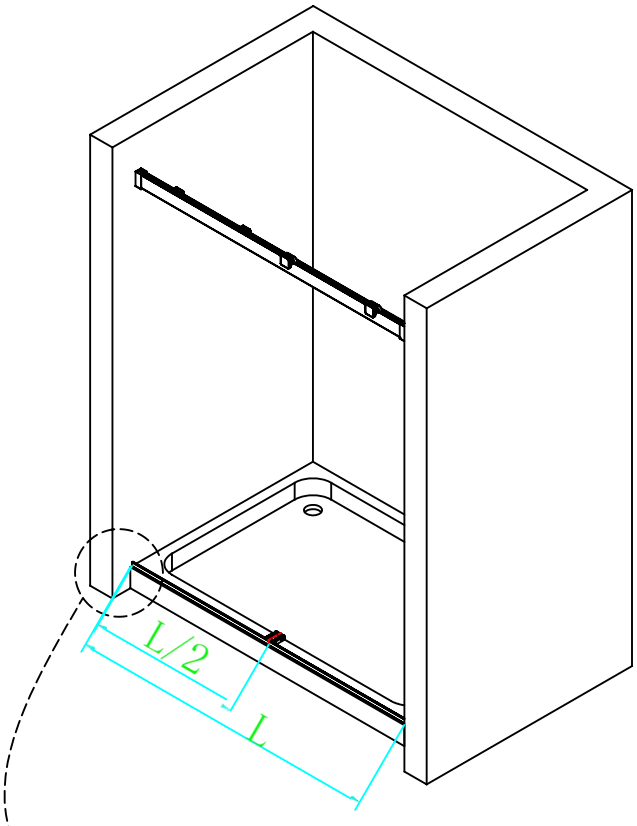


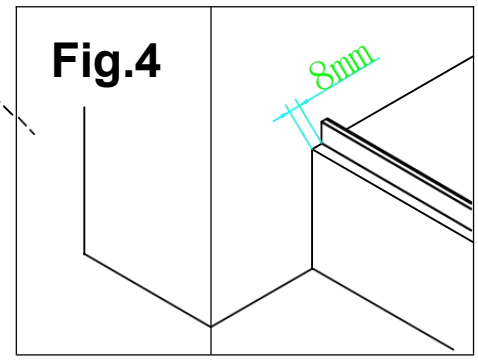



8 Install **Bottom Guide Block (I)**


NOTE


1.Mark drill points through **Guide Block (I)** holes,
2.Drill **Ø6mm** holes at marked points.
3.Insert **wall anchors (ee)** using a soft-head hammer.
4.Secure **Guide Block (I)** to the floor using **ST4x30mm flat-head screws (dd).** Install **screw cover caps (cc).**

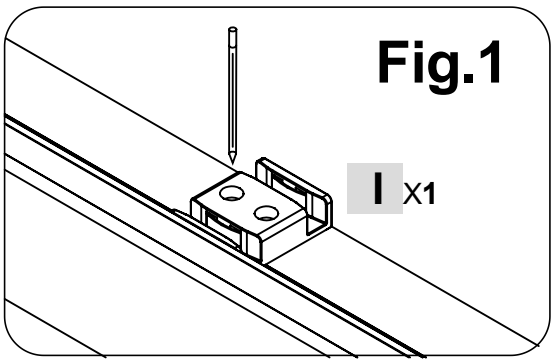

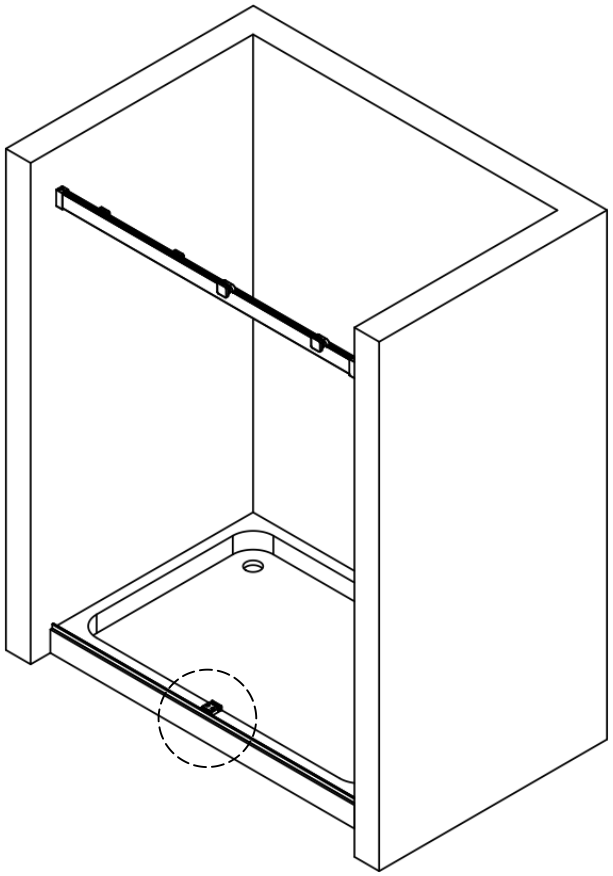

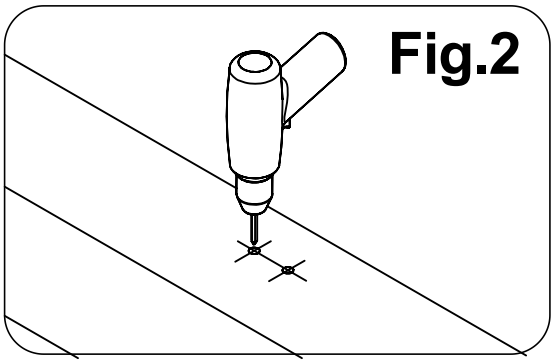

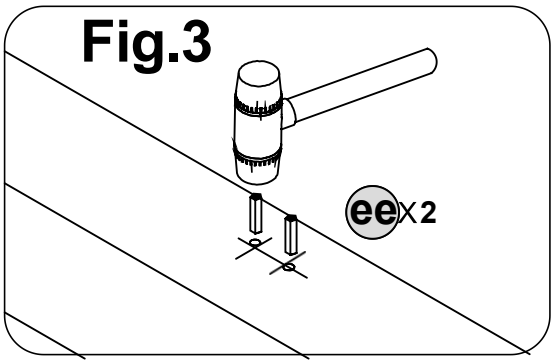


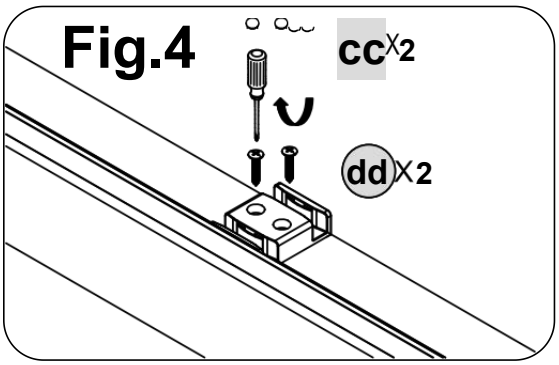



9 Install **Inner Glass Panel (D1)**

NOTE


1.Place wooden blocks under **Inner Panel (D1)**. Align panel holes with **Inner Rollers (B)**. Press eccentric collars into panel holes.
2.Adjust roller height via eccentric collars until panel slides smoothly and parallel to wall for proper seal when closed. Tighten collars with hex key and secure covers.

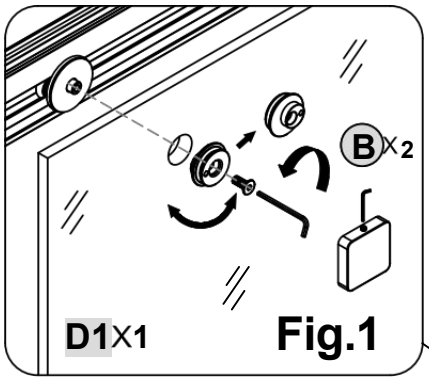


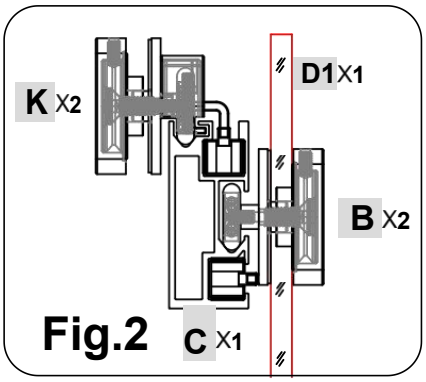


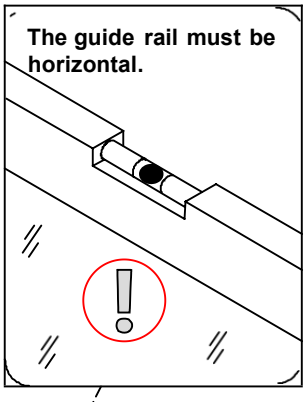


3. Engage bottom of panel into **Guide Block (I)** channel.

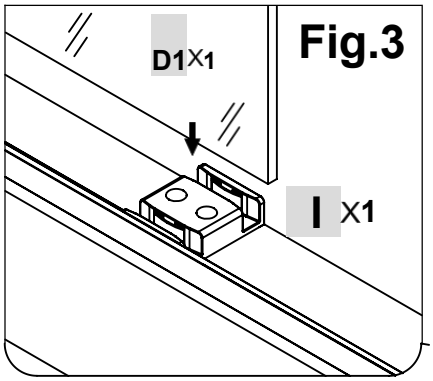

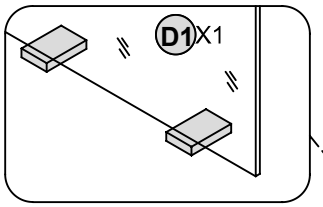

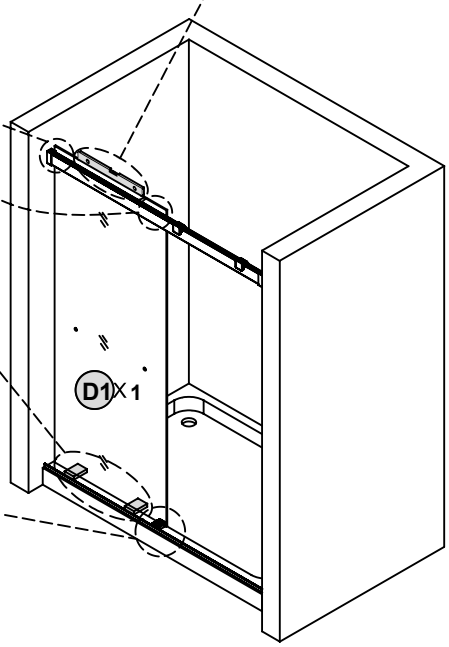

NOTE

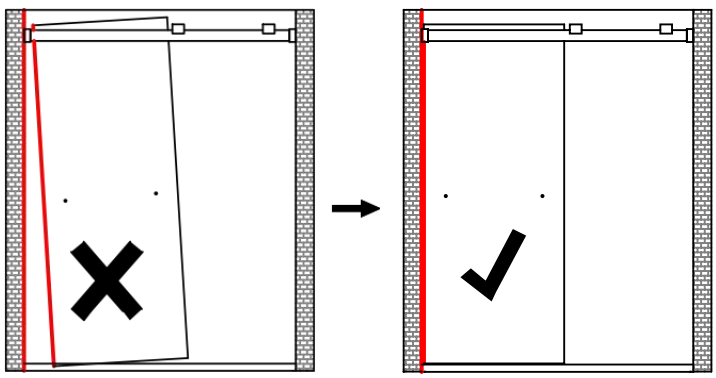



10 Install **Outer Glass Panel (D2)**


NOTE

1.Place wooden blocks under **Outer Panel (D2)**. Align holes with **Outer Rollers (K)**. Press eccentric collars into panel holes.


2.Adjust roller height via eccentric collars until panel slides smoothly and parallel to wall for proper seal. Tighten collars and secure covers.

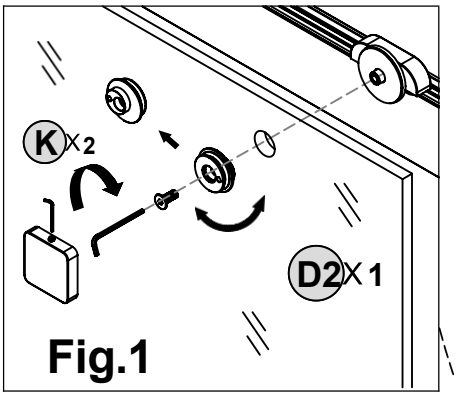


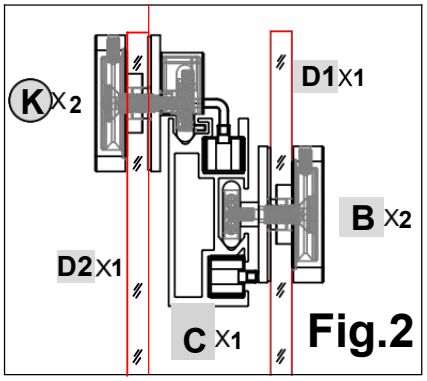

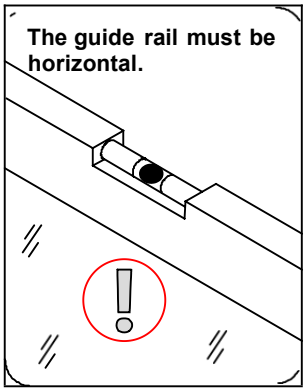



3. Engage bottom of panel into **Guide Block (I)** channel.

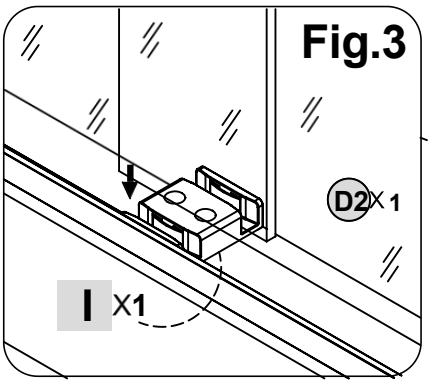

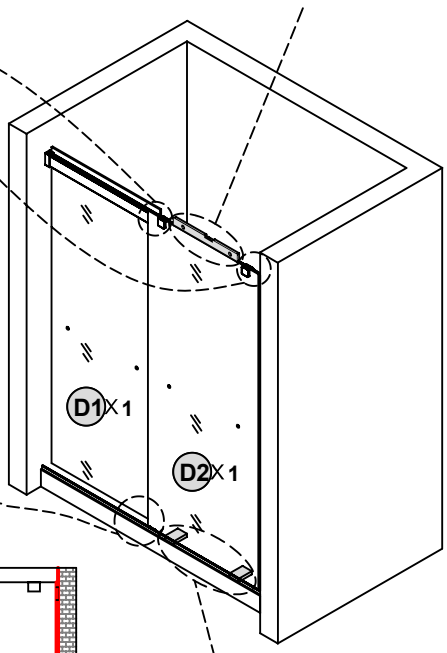

NOTE

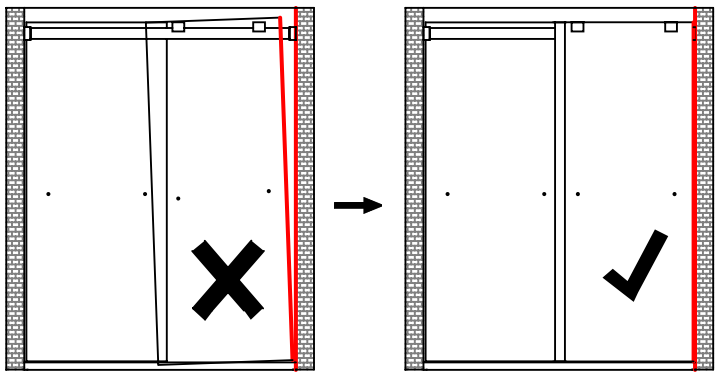


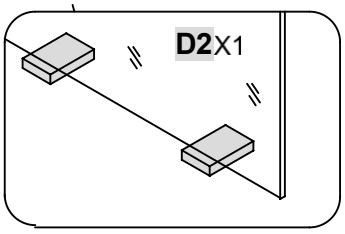

11 Install **Side Seal Strips (F)**

NOTE


Install **Side Seal Strips (F)** along the vertical edges of both **inner (D1) and outer (D2) glass panels**.

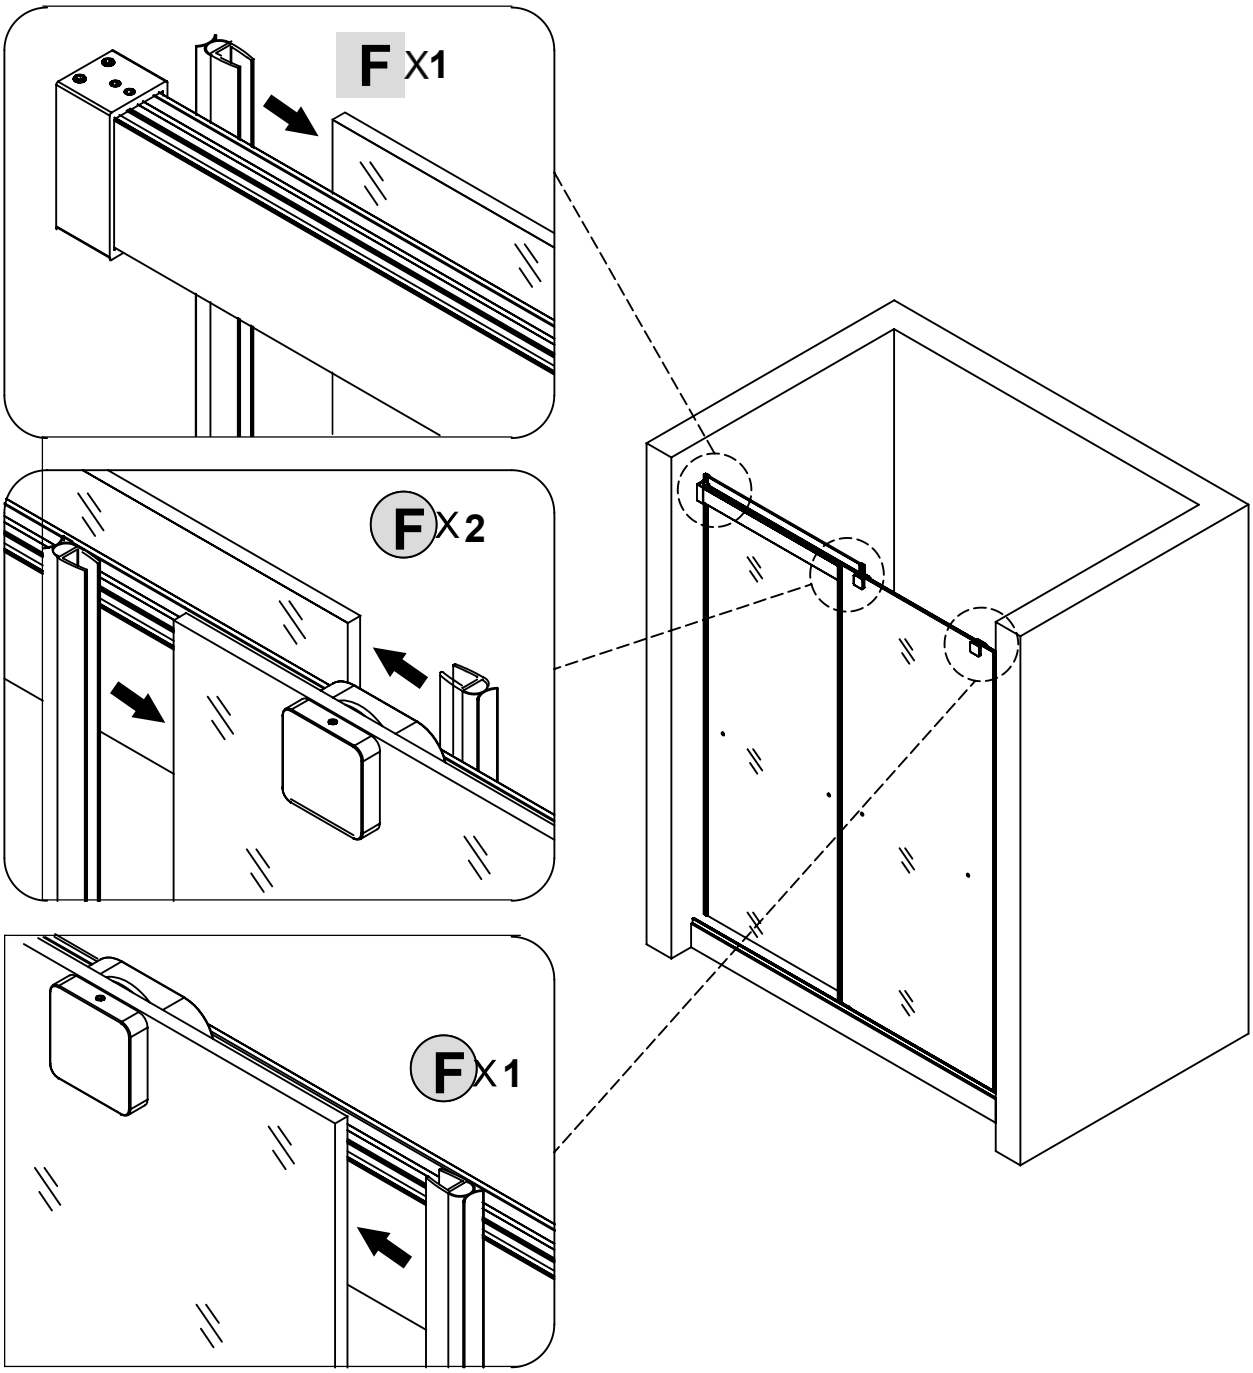



12 Install **Handles (E)**

NOTE

Mount **Handles (E)** on both **glass panels (D1 & D2)**. Ensure all provided plastic washers are used between hardware and glass.

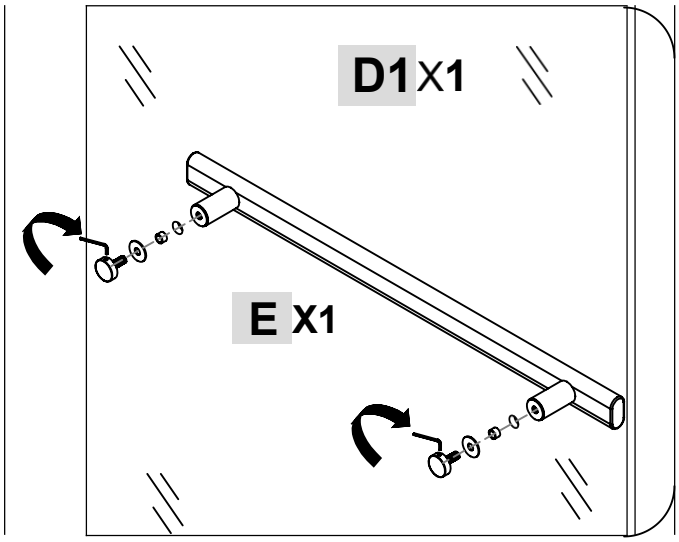

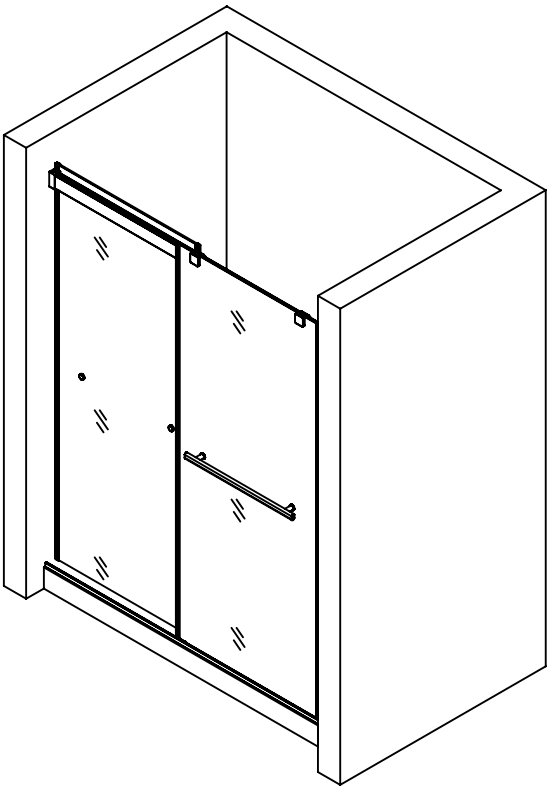

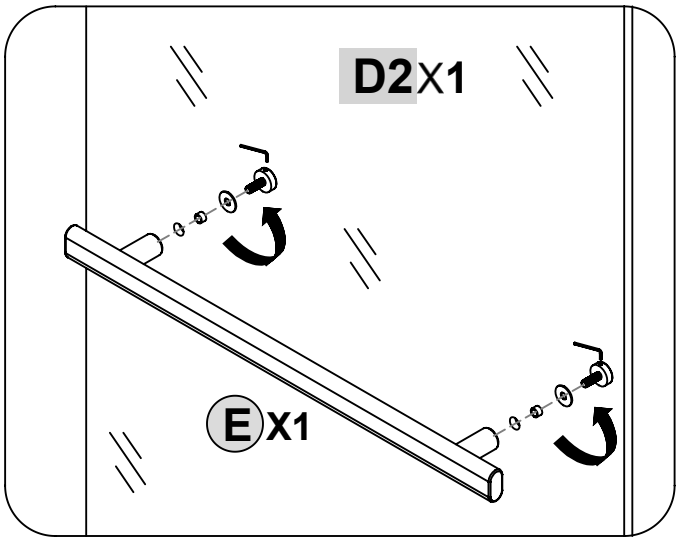

13 SEALING


NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure the shower door is tightly closed and opens smoothly。 Apply high-quality silicone sealant along the bottom of the fixed glass and the bottom of the lower water barrier.

! Allow 24 hours for the silicone to cure before using the shower.



! **Apply Silicone Sealant,(not supplied).**

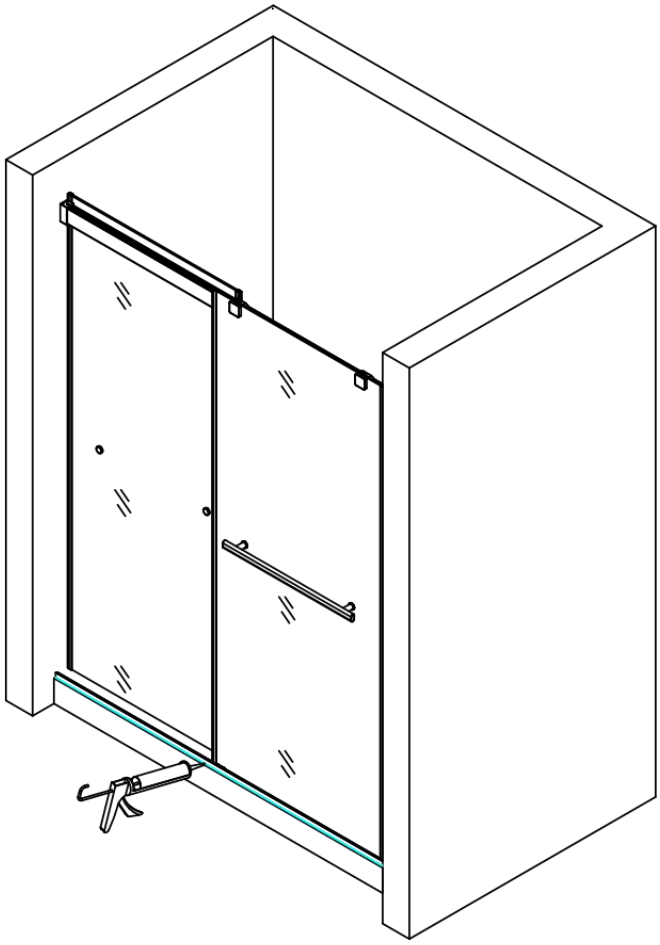

Apply silicone around the fixed glass and the lower water barrier.

