Assembly instructions

Solid wood widened coat hanger

Pre-assembly instructions:

1. **Please confirm whether the product parts are complete before assembly.**
2. **Follow the instruction manual and assemble it correctly and safely. Please**
3. **keep the assembled parts out of the reach of children.**

Maintenance and use:

1. **Please stop using it if it is damaged or deformed during use.**
2. **It is recommended to carefully check the parts regularly after 3 months of use. If there is any safety hazard, stop using it.**
3. **Please do not repair or modify this product by yourself to avoid affecting its service life.**

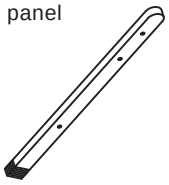
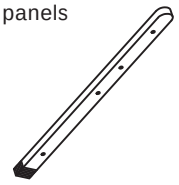
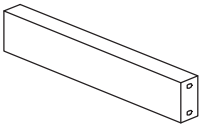
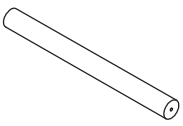



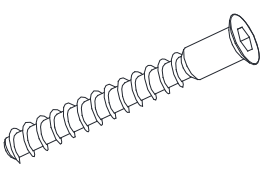

Note on usage:

1. **Please do not sit or jump on this product, or use this product as a platform to pick up items, especially children. To avoid**
2. **overturning, deformation, and damage, please use this product on a flat place.**
3. **Please do not use this product beyond its intended purpose.**

After-sales service:


1. **If you don't understand something or if you have quality problems, missing accessories, or installation difficulties, please consult the customer service staff of the store where you purchased it.**
2. **We are not responsible for the consequences and associated losses caused by natural disasters, improper repairs, modifications, etc.**
3. **Please use appropriate methods to dispose of the packaging materials of this product**

Accessories details


① 740mm Short upper side panel  X1	② 810mm Long upper side panels  X1	③ 800mm lower side panel  X2	④ hanging post  X5
⑤ Crossbar  X1	⑥ round rod  X1	⑦ metal sleeve  X2	⑧ Chassis  X1
⑨ Hanging post screws  X5	⑩ Straight repair screws  Contains 1 spare piece X11	⑪ metal set screws  X4	⑫ Hex wrench  X1

Assembly steps:

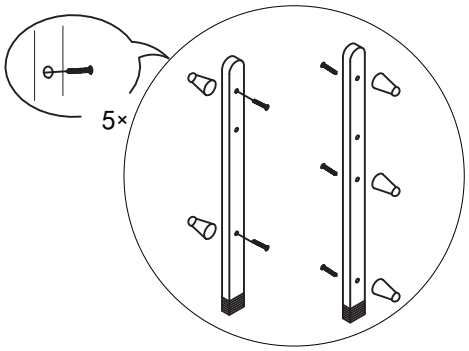
Insert the screw throughhe large hole



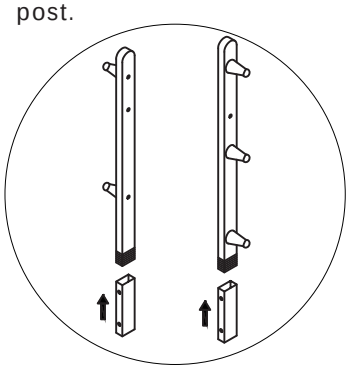
❶ Pass the No. 9 hanging post screws through the large countersunk holes on the sides of the two upper side panels and lock them with the No. 4 hanging post.




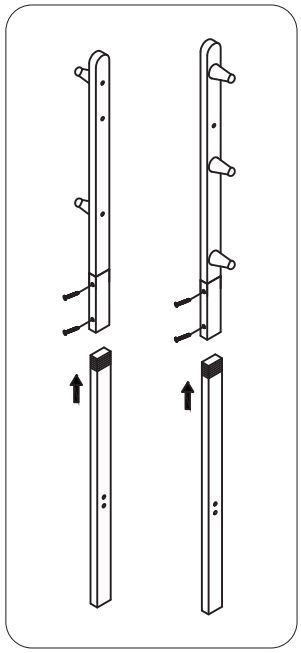❷ Put the metal sleeve on and tighten it with the No. 11 metal sleeve screw




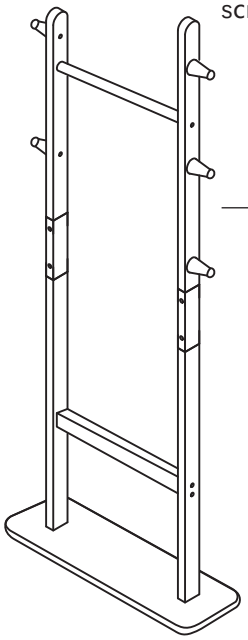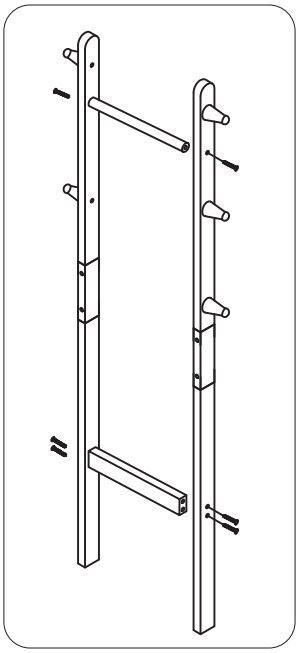❸ Connect the No. 3 lower side plate to the two metal sleeves and lock them with the No. 11 metal sleeve screws.





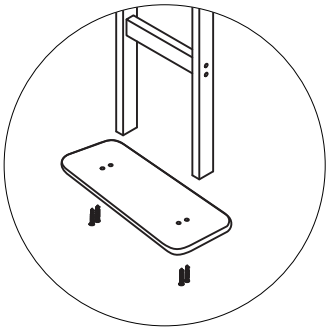❹ Use No. 10 straight screws to install the No. 5 crossbar and metal hanging rod, and install the other side panel.



❺ Secure the bottom of the chassis and side panels with No. 10 straight screws to complete the installation.

Installation completed

Thank you for choosing our products