



# Product Installation Manual

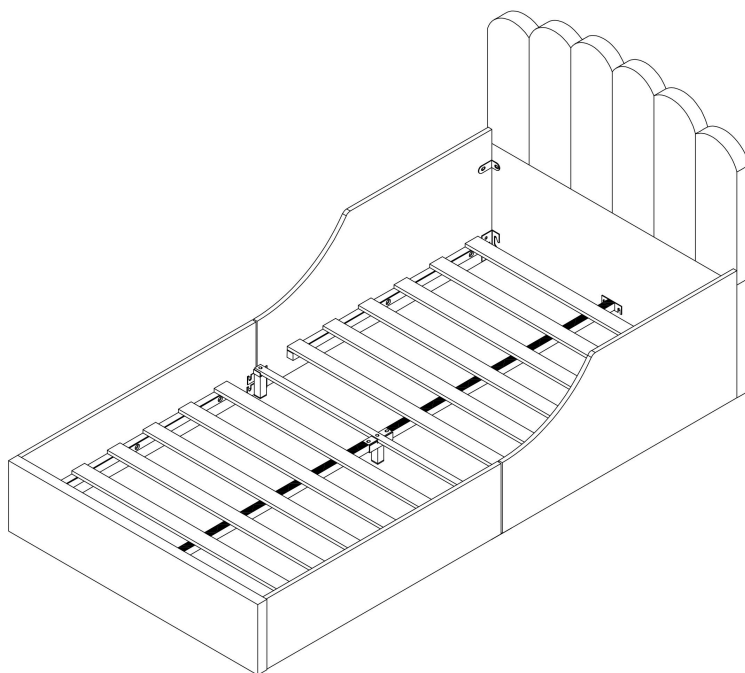











W5305P519386 / W5305P519387

W5305P519389 / W5305P519390

W5305S00195 / W5305S00196

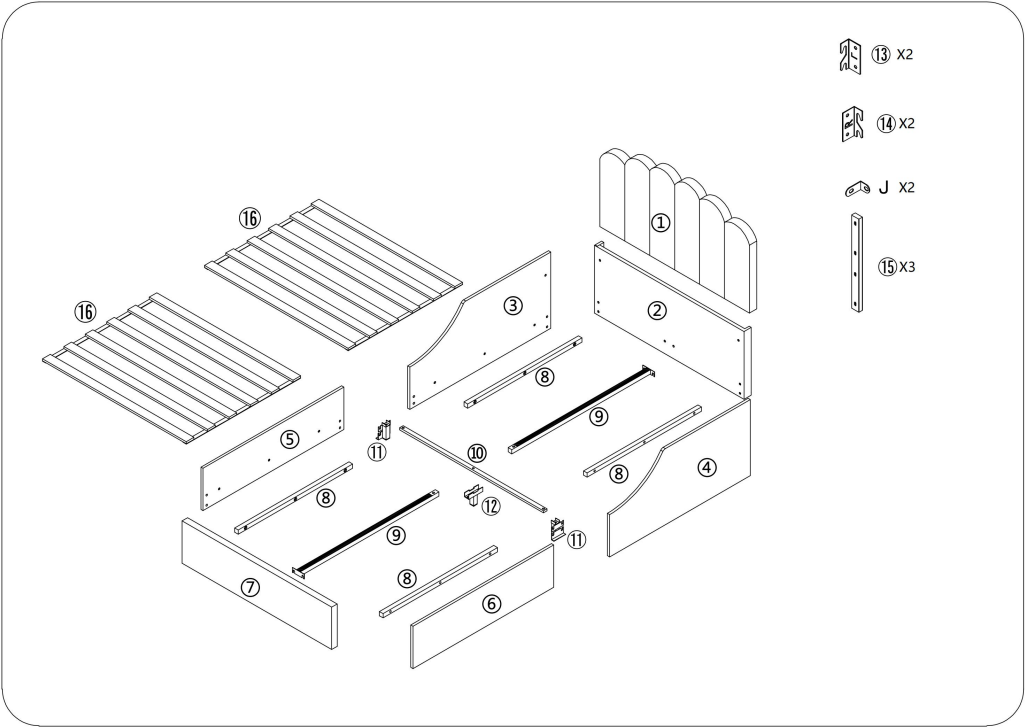


|   |                                                                                     |       |     |
|---|-------------------------------------------------------------------------------------|-------|-----|
| A |  | M8x18 | X32 |
| B |  | M8x35 | X28 |
| C |  | M8x45 | X1  |
| D |  | D5mm  | X1  |
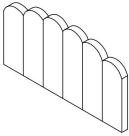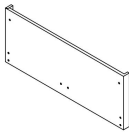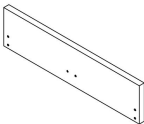
|                                                                                                  |                                                                                                 |                                                                                                |                                                                                                 |                                                                                                  |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  <p>1 x1</p>    |  <p>2 x1</p>   |  <p>3 x1</p>  |  <p>4 x1</p>  |  <p>5 x1</p>  |
|  <p>6 x1</p>    |  <p>7 x1</p>   |  <p>8 x4</p>  |  <p>9 x2</p>  |  <p>10 x1</p> |
|  <p>11 x2</p>   |  <p>12 x1</p>  |  <p>13 x2</p> |  <p>14 x2</p> |  <p>15 x3</p> |
|  <p>16 x2</p> |  <p>J x2</p> |                                                                                                |                                                                                                 |                                                                                                  |

## Step 1


|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| B |  | M8x35 | 12PCS |
| D |  | D5    | 1PC   |

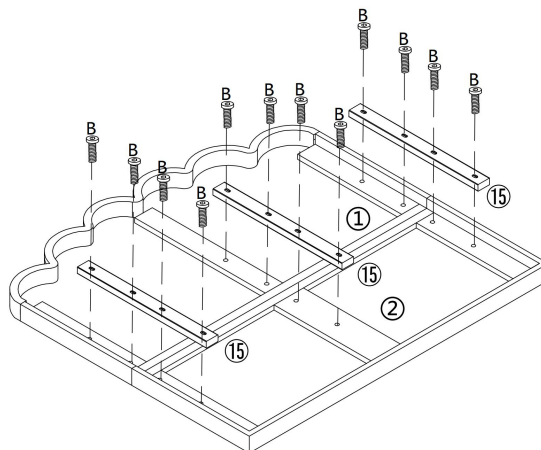

## Step 2

|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |   | M8x18 | 6PCS |
| D |  | D5    | 1PC  |


Please pre-install the screws to 50% first.

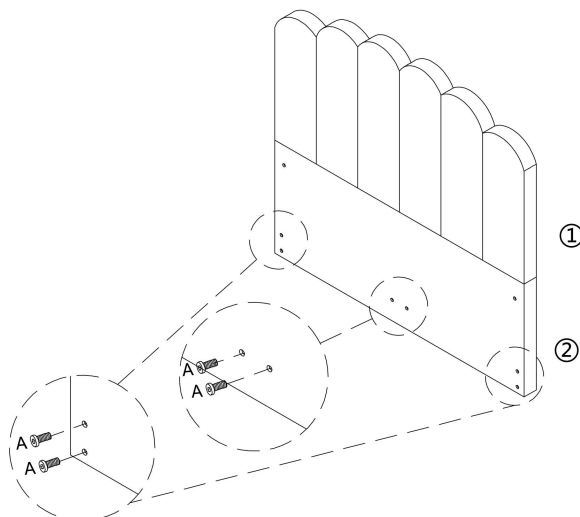

### Step 3


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 6PCS |
| D |  | D5    | 1PC  |

Please pre-install the screws to 50% first.

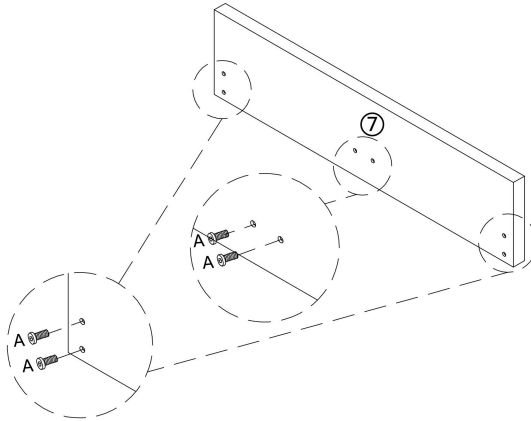


### Step 4


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| B |  | M8x35 | 4PCS |
| C |  | M8x45 | 1PCS |
| D |  | D5    | 1PC  |

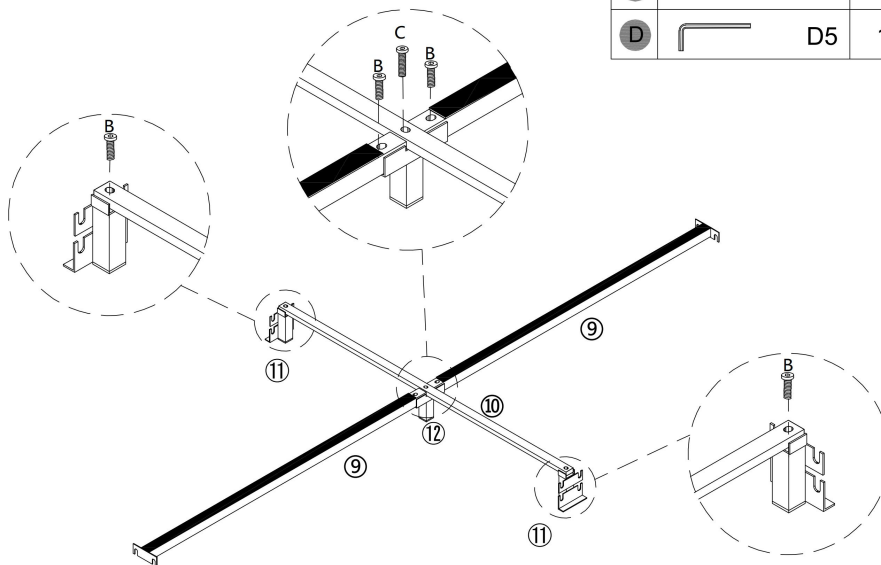

## Step 5

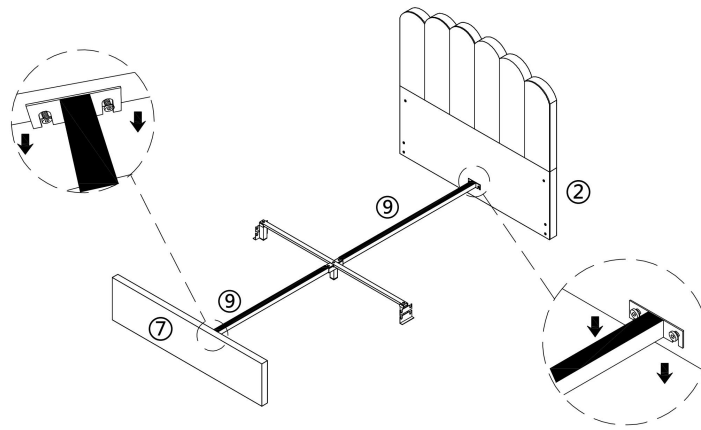


## Step 6

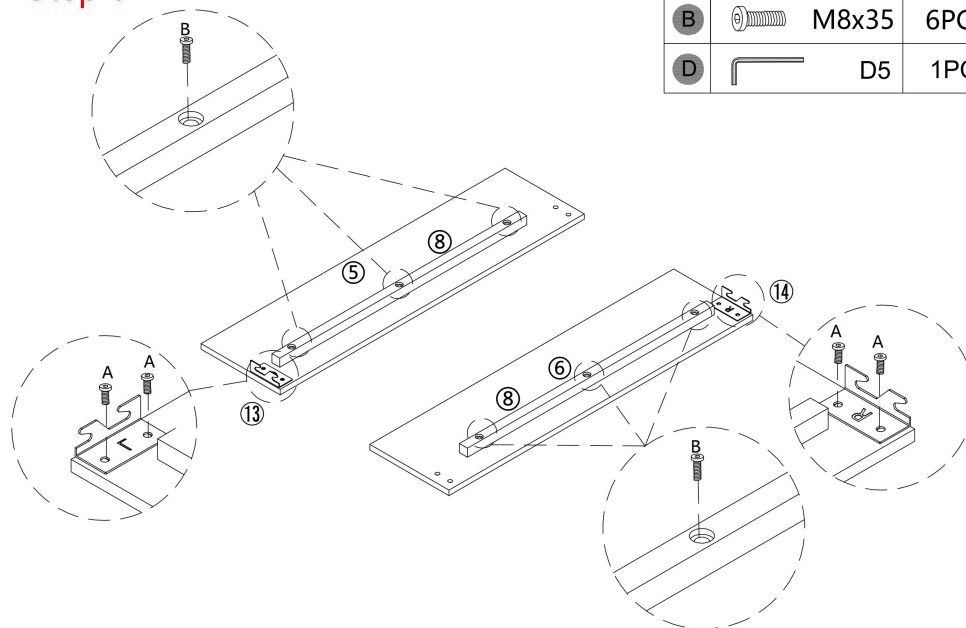

|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| B |  | M8x35 | 6PCS |
| D |  | D5    | 1PC  |


## Step 7

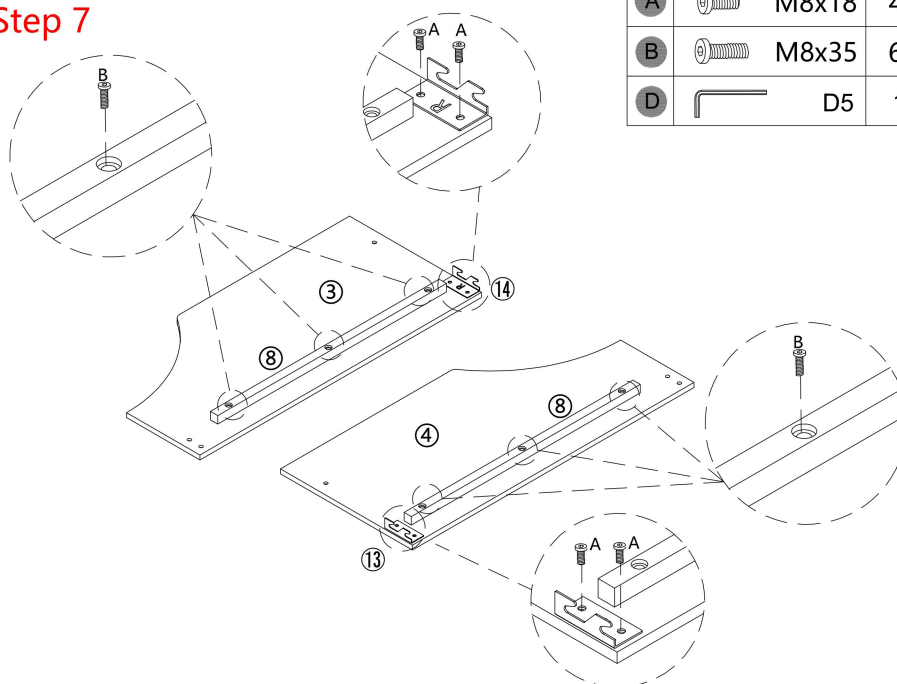

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| B |  | M8x35 | 6PCS |
| D |  | D5    | 1PC  |

## Step 8

Please pre-install the screws to 50% first.

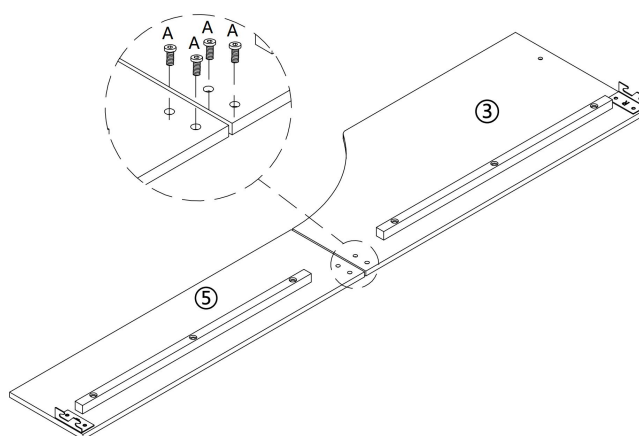


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |   | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

## Step 9


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

Please pre-install the screws to 50% first.

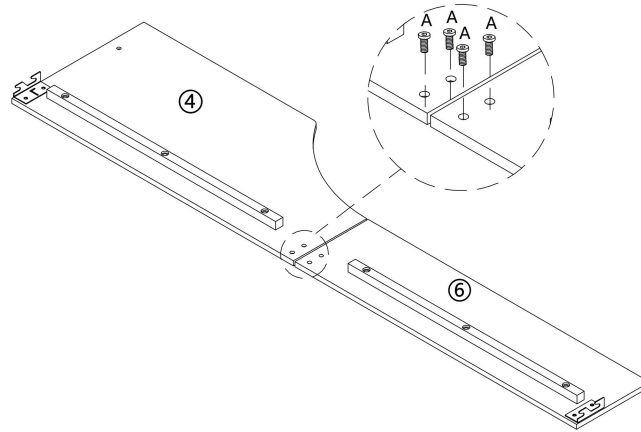

## Step 10

Pass the screws of Part 5 and Part 3 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 13 onto Part 7, and hang Part 14 onto Part 2.

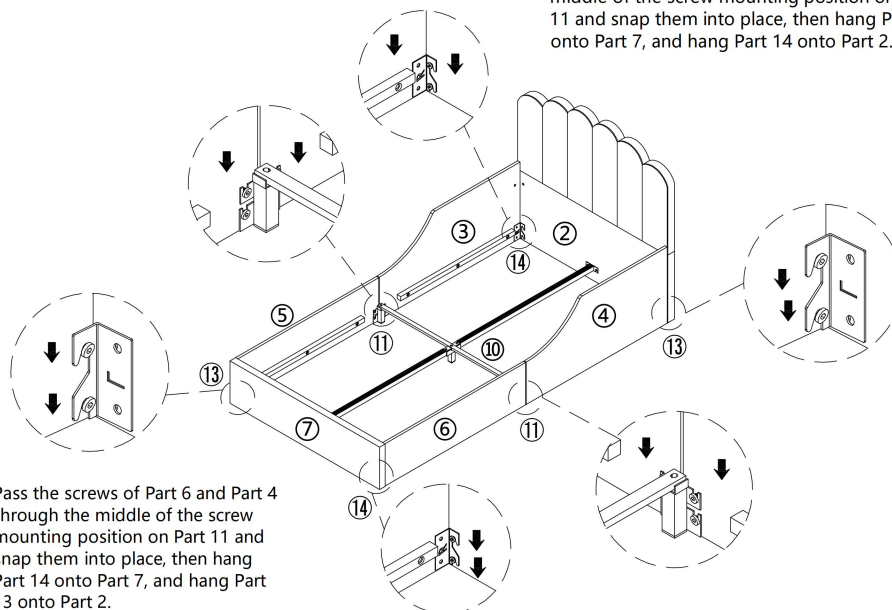


Pass the screws of Part 6 and Part 4 through the middle of the screw mounting position on Part 11 and snap them into place, then hang Part 14 onto Part 7, and hang Part 13 onto Part 2.


## Step 11

Tighten all screws at this step.


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M8x18 | 4PCS |
| D |  | D5    | 1PC  |

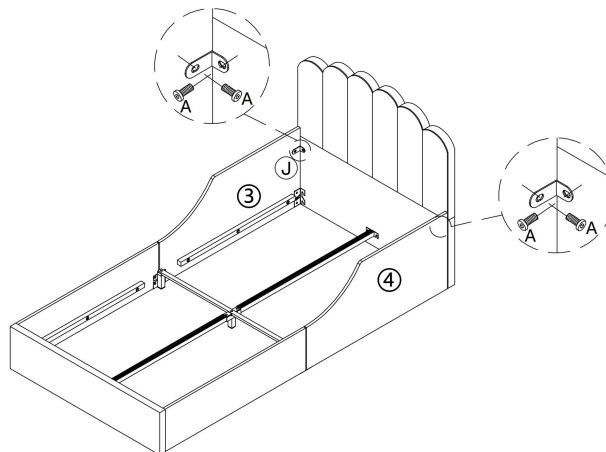

## Step 12

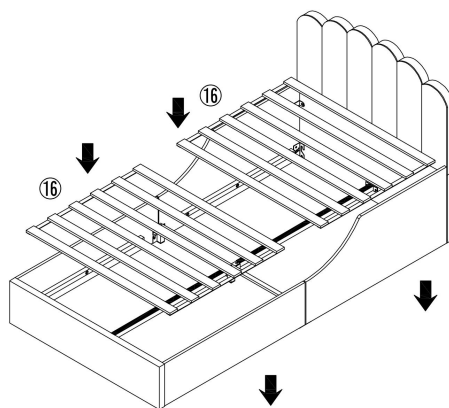

## Step 13

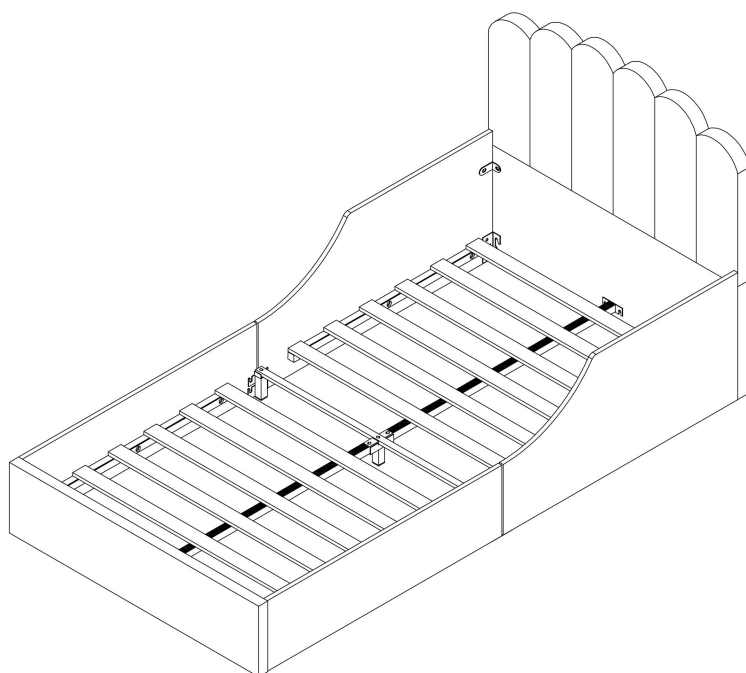

Ventilation Warning: It is recommended to ventilate for 48 hours after installation.