


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET



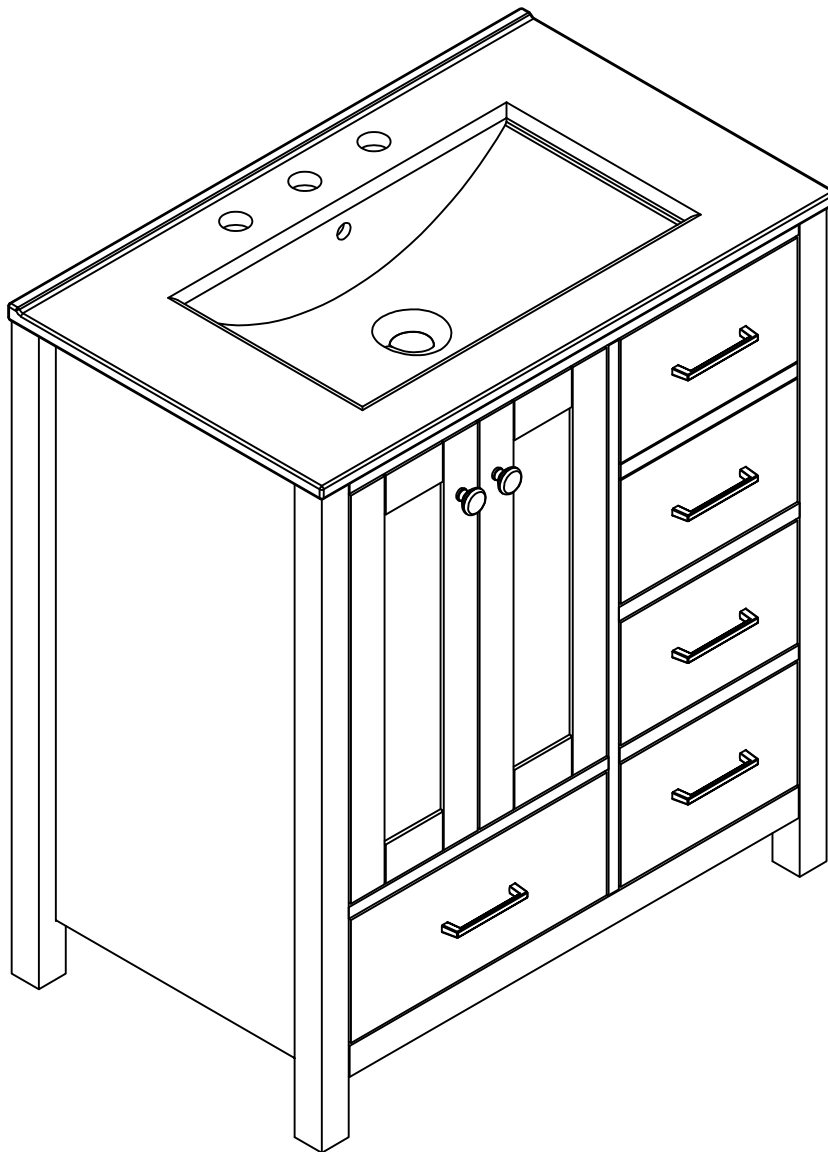


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

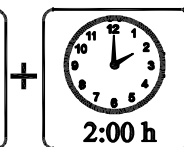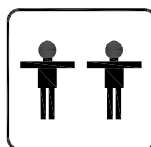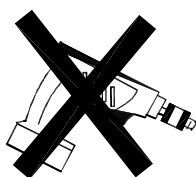

Tools Required



(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions







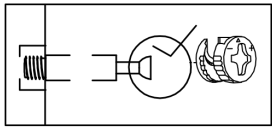

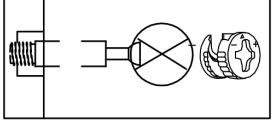

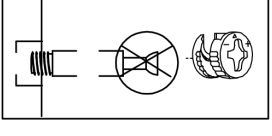
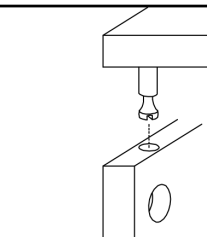
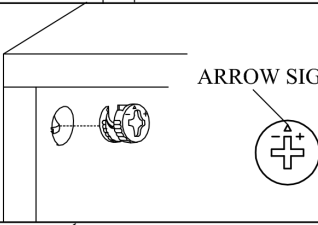
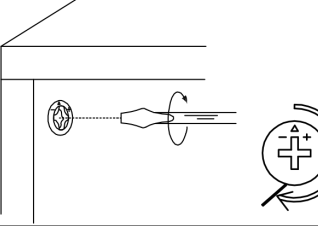
	Diagram A 	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B 	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C 	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.		
 ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
 To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

Detail View

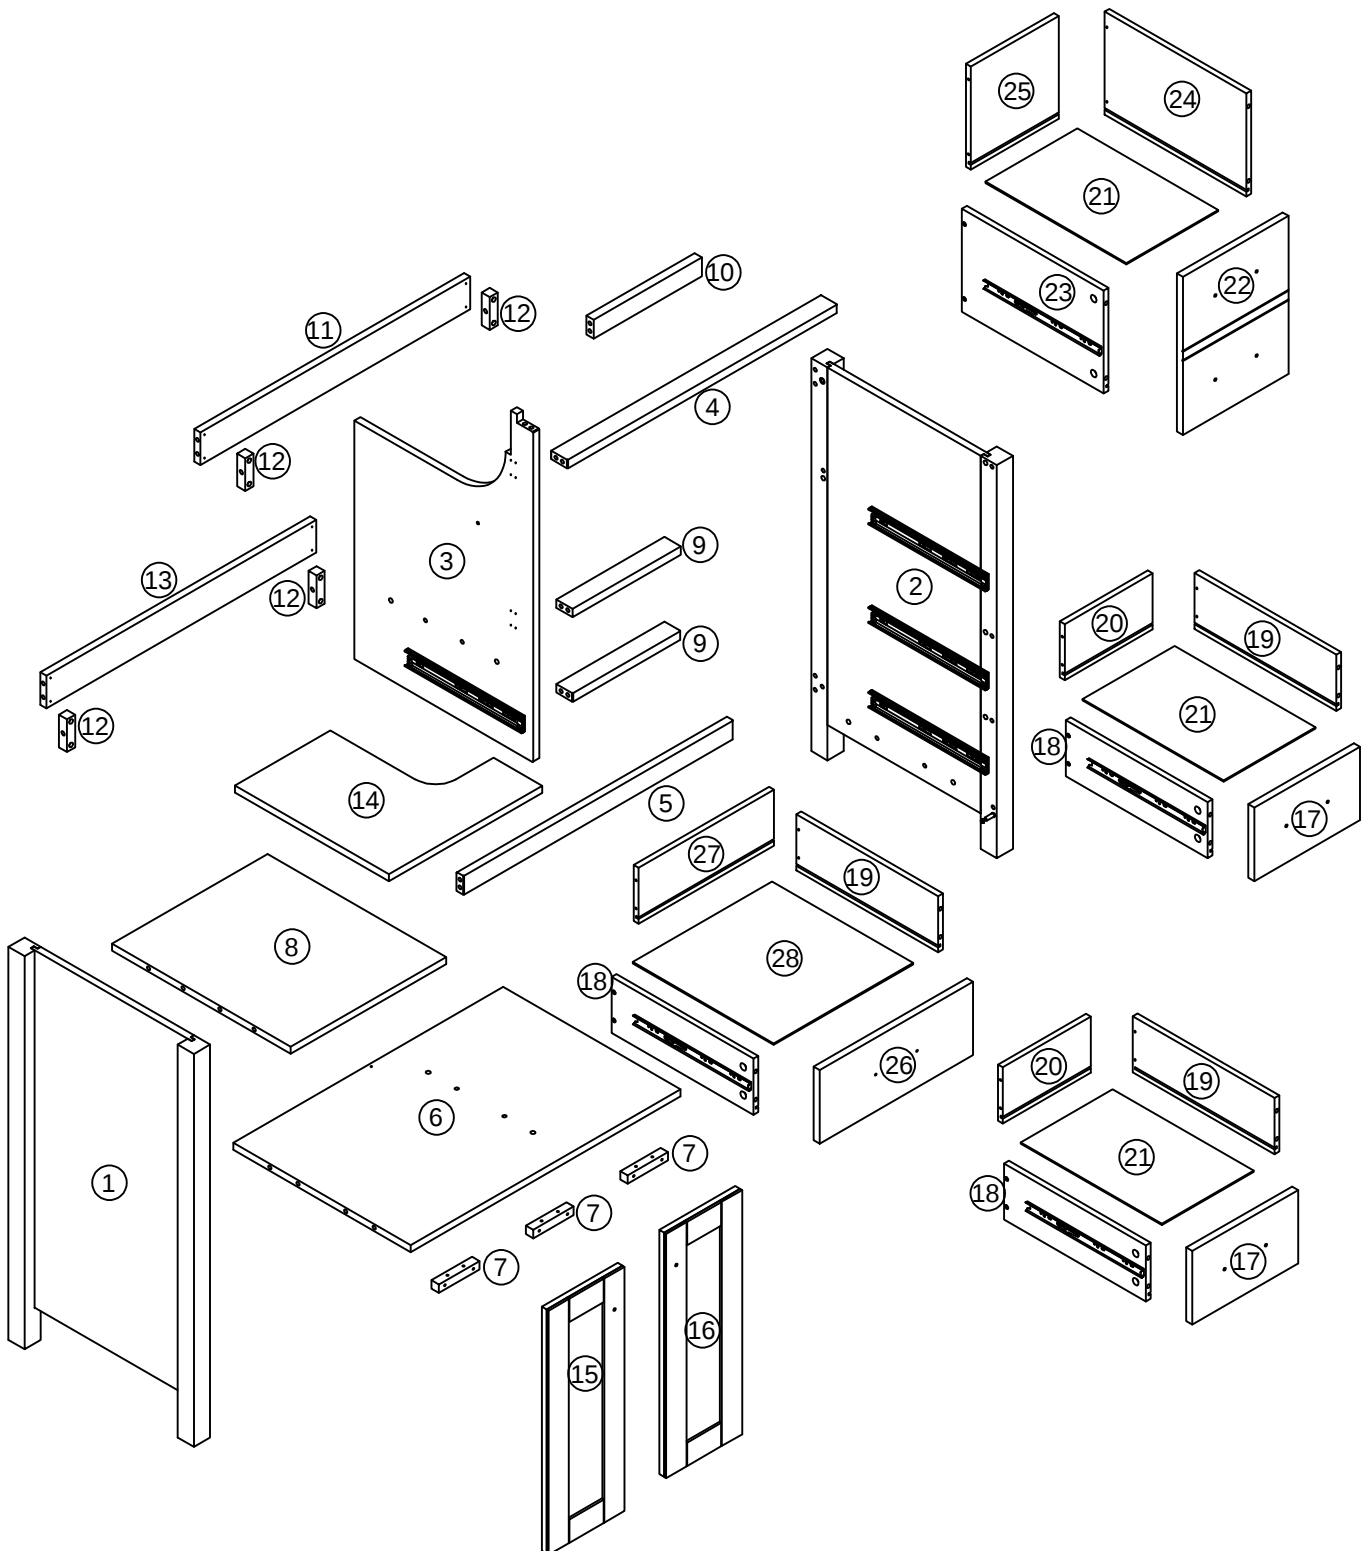


Identifying the Hardware-Identify the hardware using the illustrations below.

Part Lists

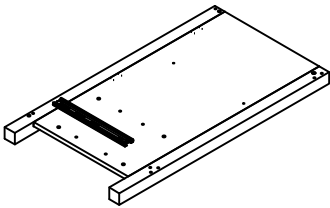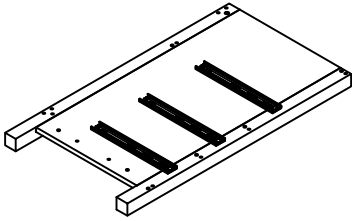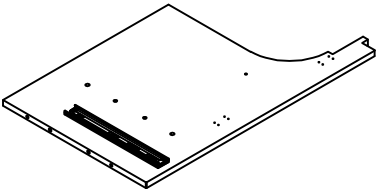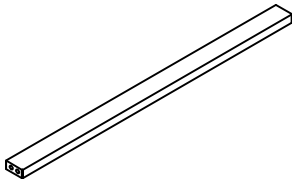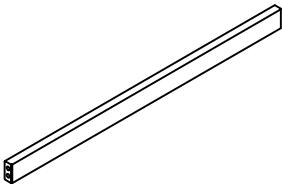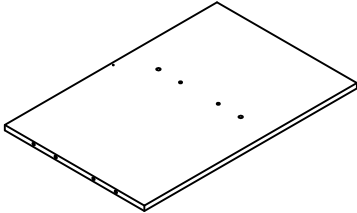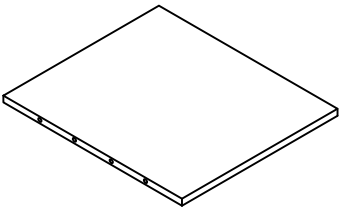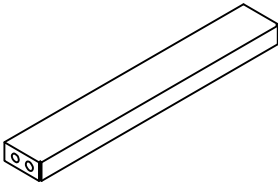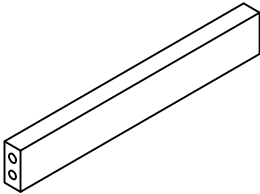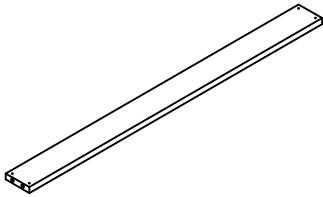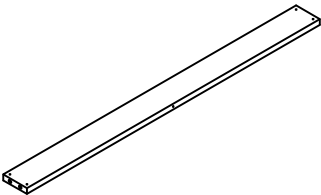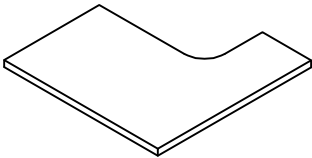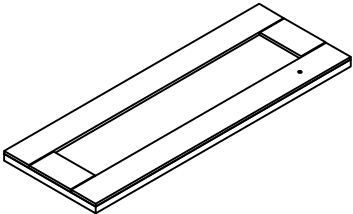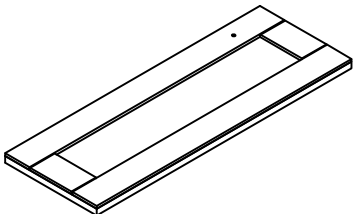1	 Side Panel (L) - 1pc	2	 Side Panel (R) - 1pc
3	 Mid Panel - 1pc	4	 Top Front Crossbar - 1pc
5	 Bottom Front Crossbar - 1pc	6	 Bottom Frame - 1pc
8	 Mid Frame - 1pc	9	 Mid Front Crossbar - 2pcs
10	 Mid Rear Crossbar - 1pc	11	 Top Rear Crossbar - 1pc
13	 Bottom Rear Crossbar - 1pc	14	 Adjustable Shelf - 1pc
15	 Door Cabinet (L) - 1pc	16	 Door Cabinet (R) - 1pc


Part Lists

17

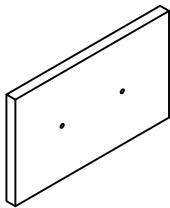


Right Bottom Drawer Face - 2pcs

18

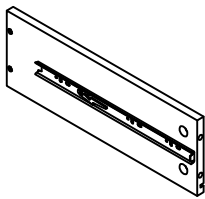


Side Bottom Drawer Panel (L) - 3pcs

19

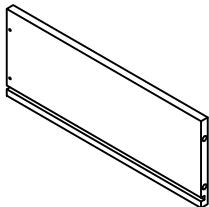


Side Bottom Drawer Panel (R) - 3pcs

20

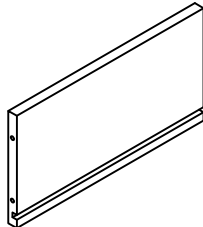


Rear Bottom Drawer Panel - 2pcs

21

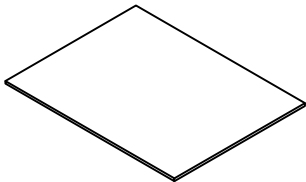


Bottom Panel - 3pcs

22




Top Drawer Face - 1pc

23

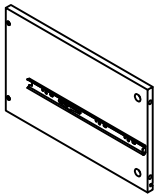


Side Top Drawer Panel (L) - 1pc

24

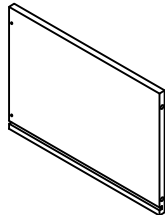


Side Top Drawer Panel (R) - 1pc

25

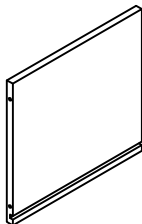


Rear Top Drawer Panel - 1pc

26

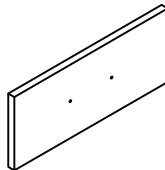


Bottom Drawer Face - 1pc

27

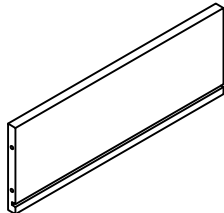


Rear Bottom Drawer Panel - 1pc

28












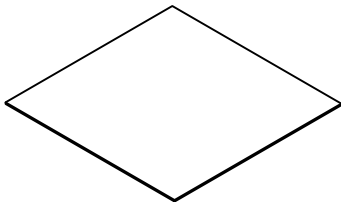


Bottom Panel - 1pc

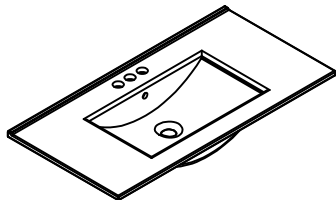


Sink - 1pc

Hardware Lists

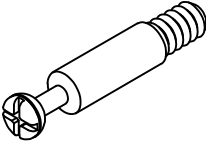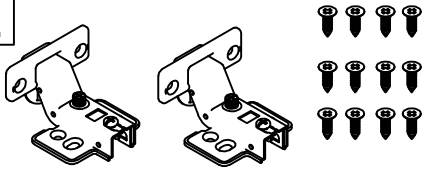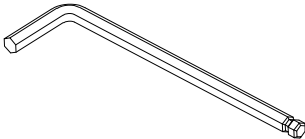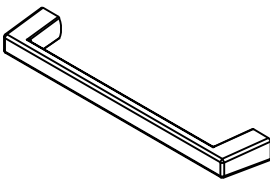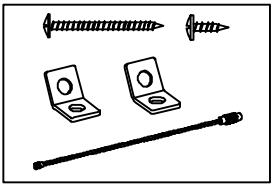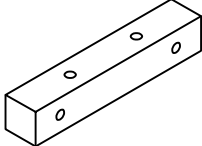

A  Ø8*20mm Wood dowel (29pcs)	B  Ø6*32mm Three in one bolts (37pcs)	C  Ø14.5*9.5mm Three in one locks (37pcs)
D  Ø8xØ4*25mm Round head screw (21pcs)	E  Damping hinge (2set)	F  Ø13xØ1/4*30mm Hex-Head bolt (4pcs)
G  K4mm Allen key (1pc)	H  Shelf Pin (3pcs)	I  Ø6xØ3*12mm Round head screw (3pcs)
J1  Handle(2pcs)	J2  Handle(5pcs)	K1  Ø5/32*19mm Handle screw (2pcs)
K2  Ø5/32*15mm Handle screw (10pcs)	L  45*12*1mm 45*17*14mm Plastic Door Magnet (2set)	M  Ø6xØ3*15mm Flat head screw (8pcs)
N  Ø10x10mm Plastic Canopy (16pcs)	O  Ø8xØ4*50mm Round head screw (16pcs)	P  Anti fall Hardware (2sets)
7  Support Piece (3pcs)	12  Support Piece (4pcs)	

STEP: 1



D




14PCS

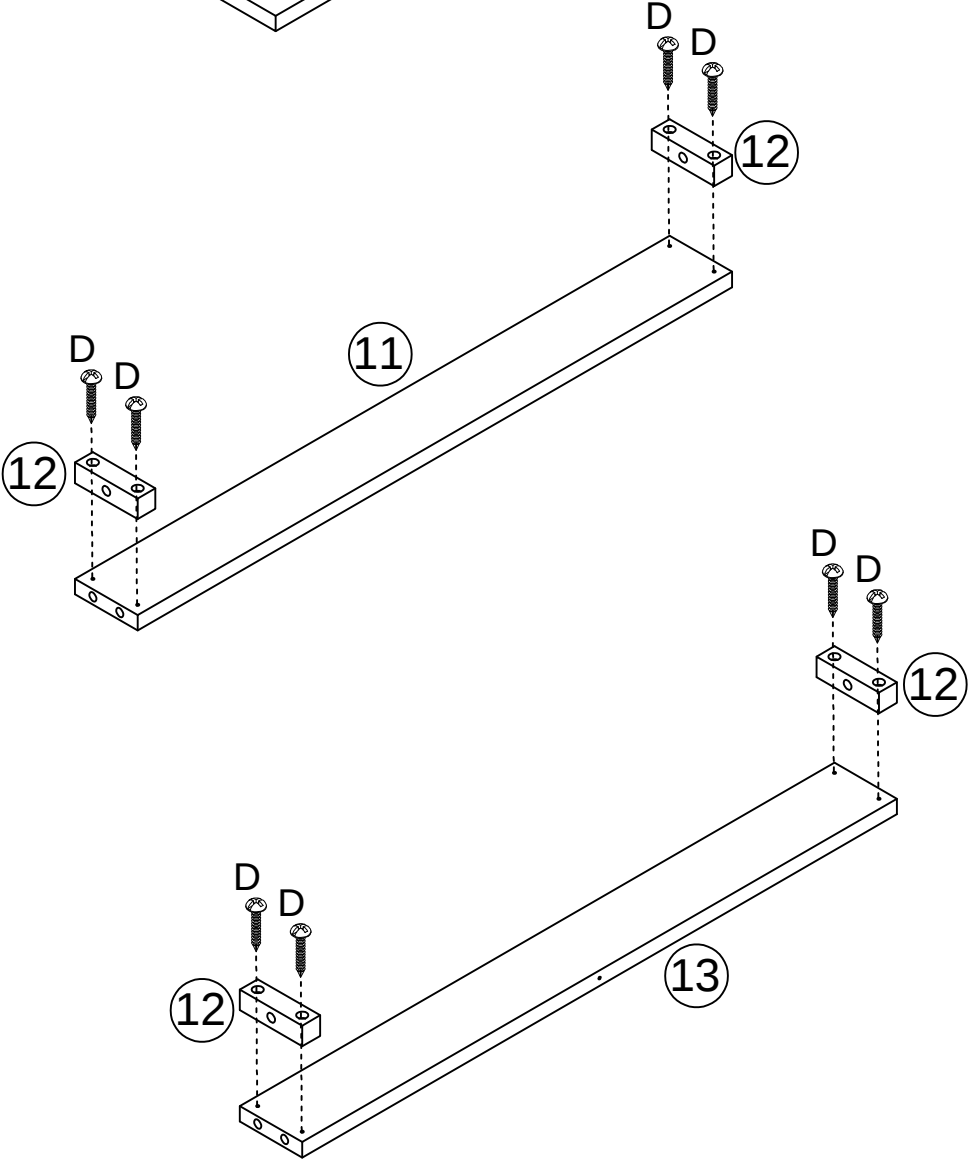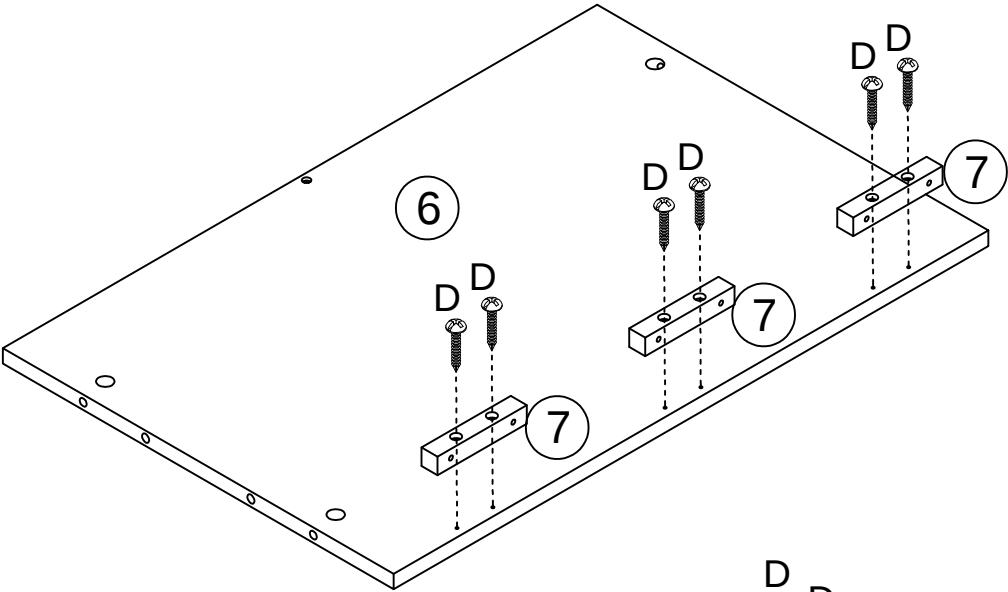

STEP: 2

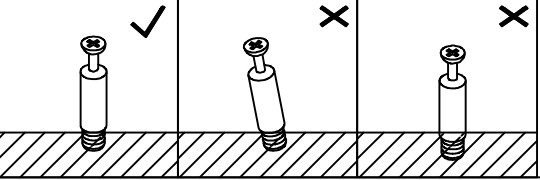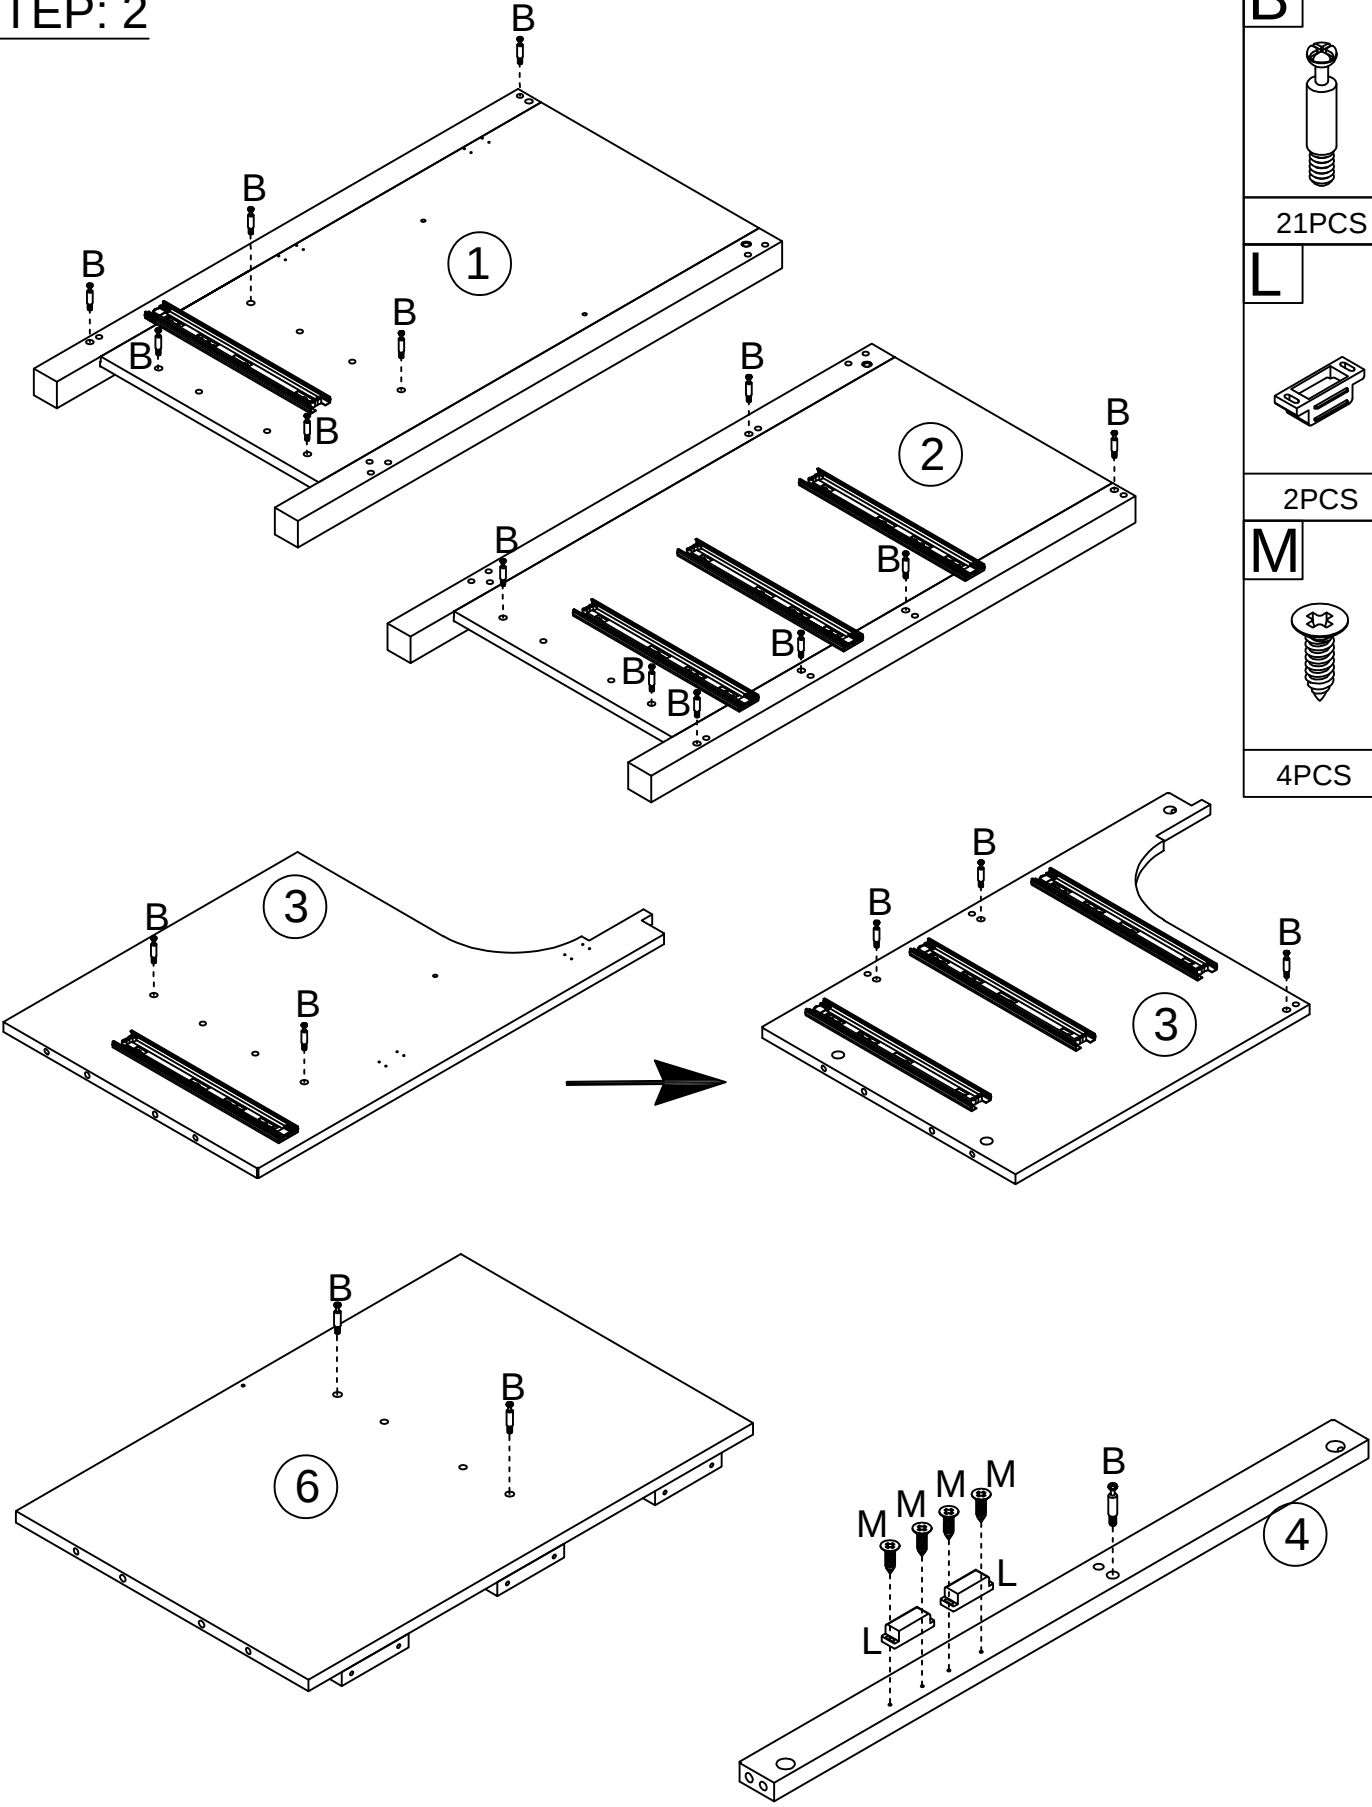

STEP: 3

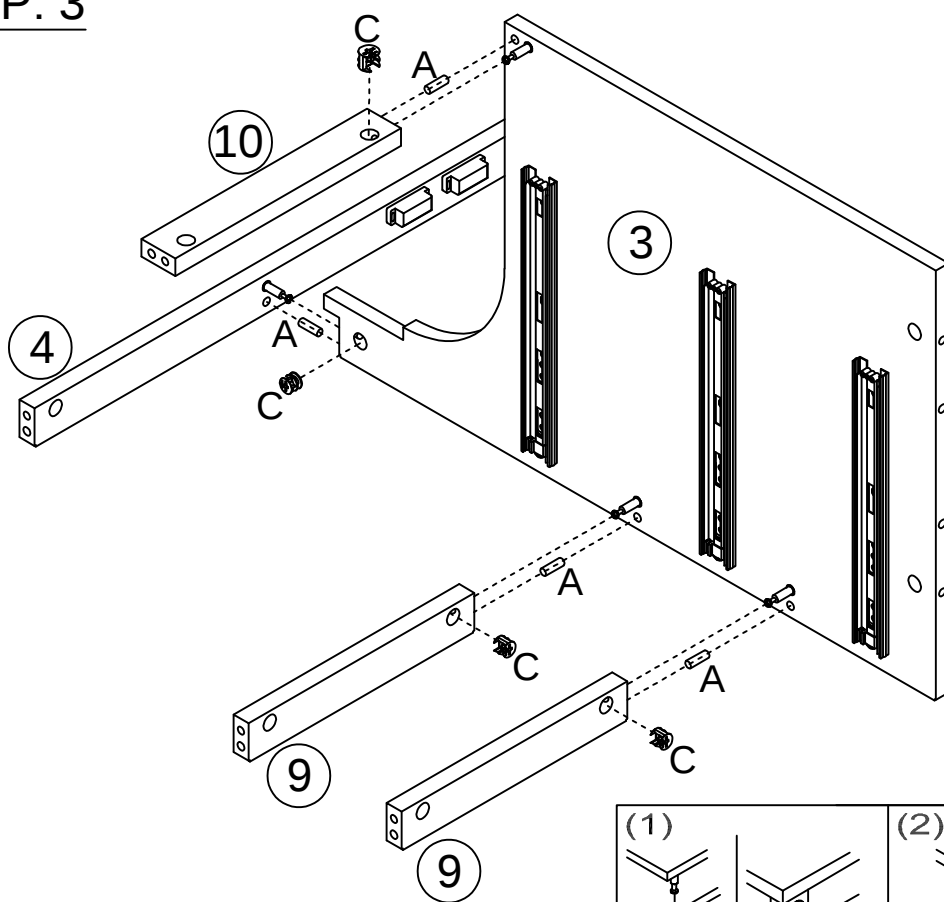

C




4PCS

A




4PCS


(1)

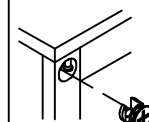


(2)

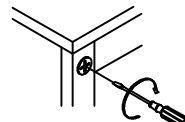

(3)

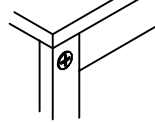

STEP: 4

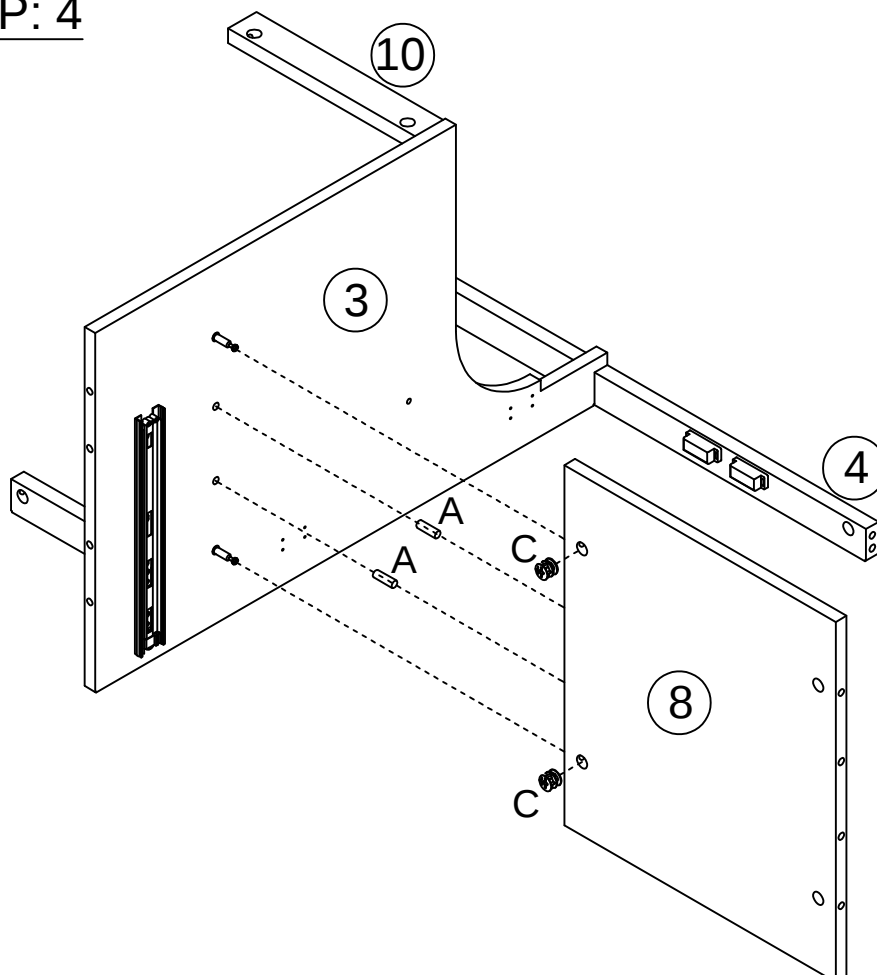

C



2PCS

A



2PCS

STEP: 5

C




2PCS

A



2PCS

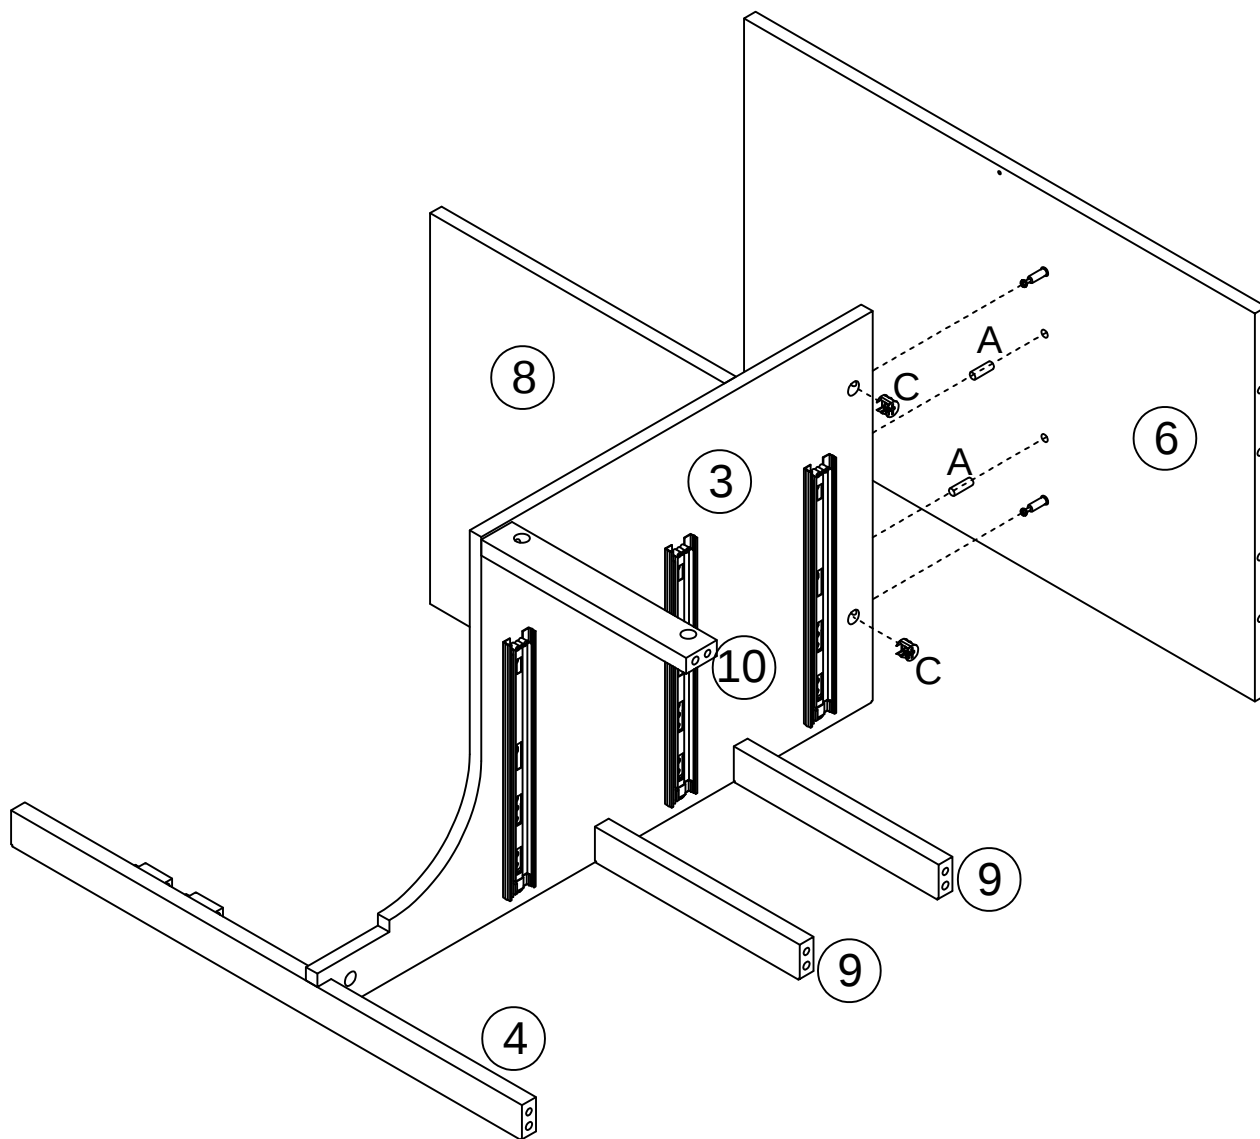

STEP: 6

C




7PCS


A




7PCS

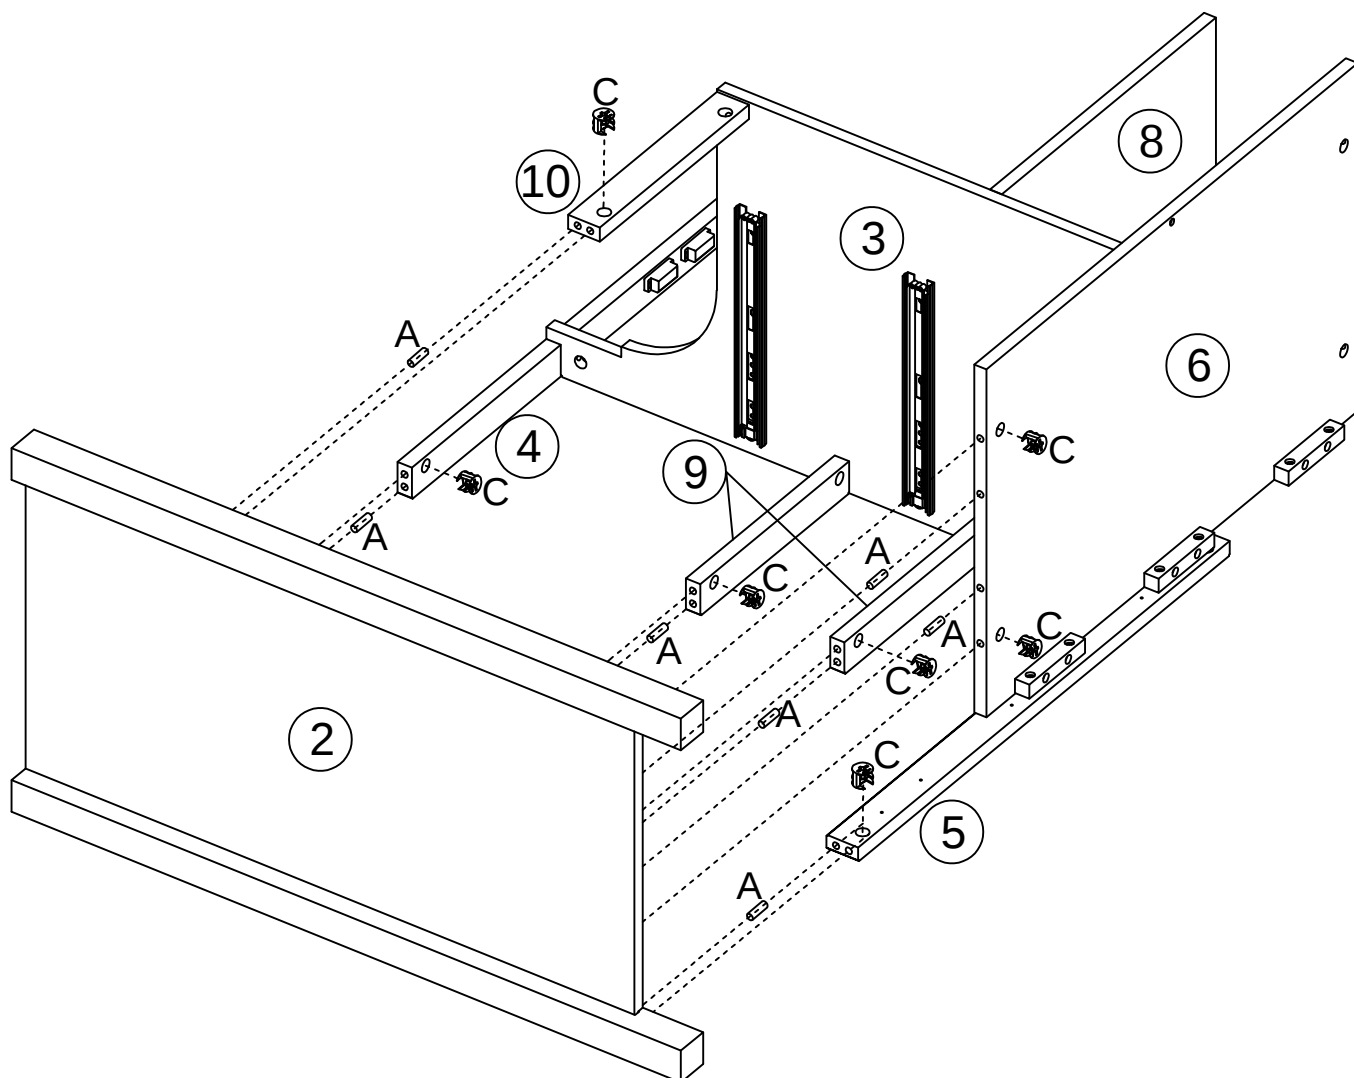



STEP: 7

A	
4PCS	
F	
2PCS	

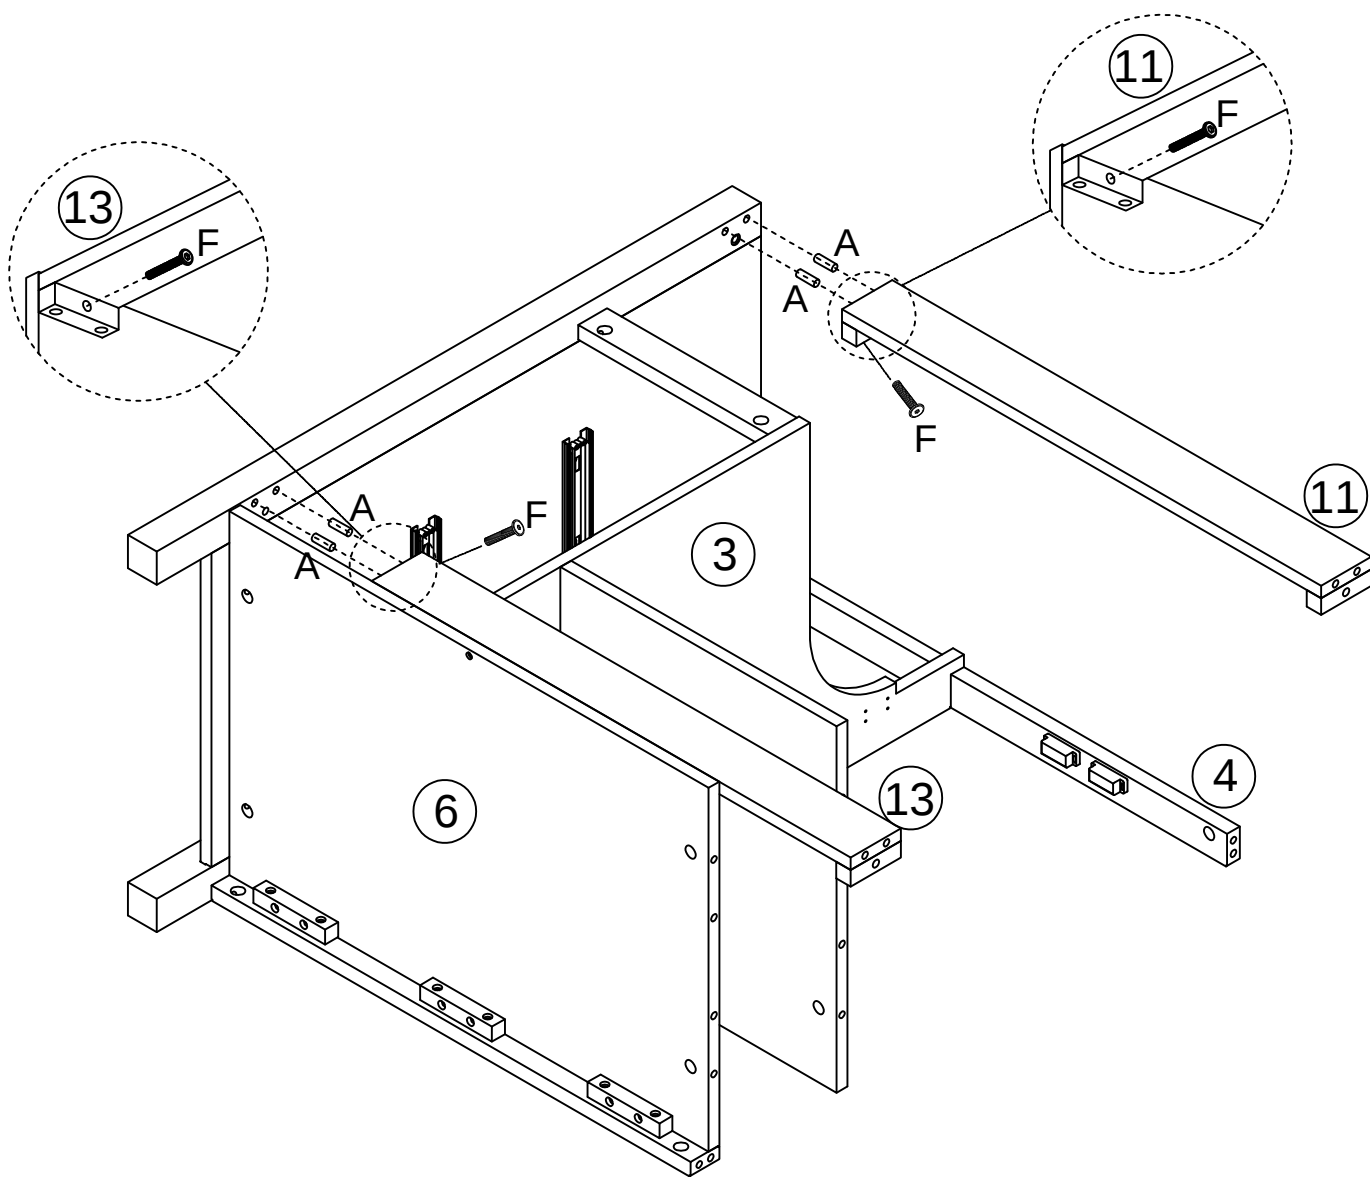


STEP: 8

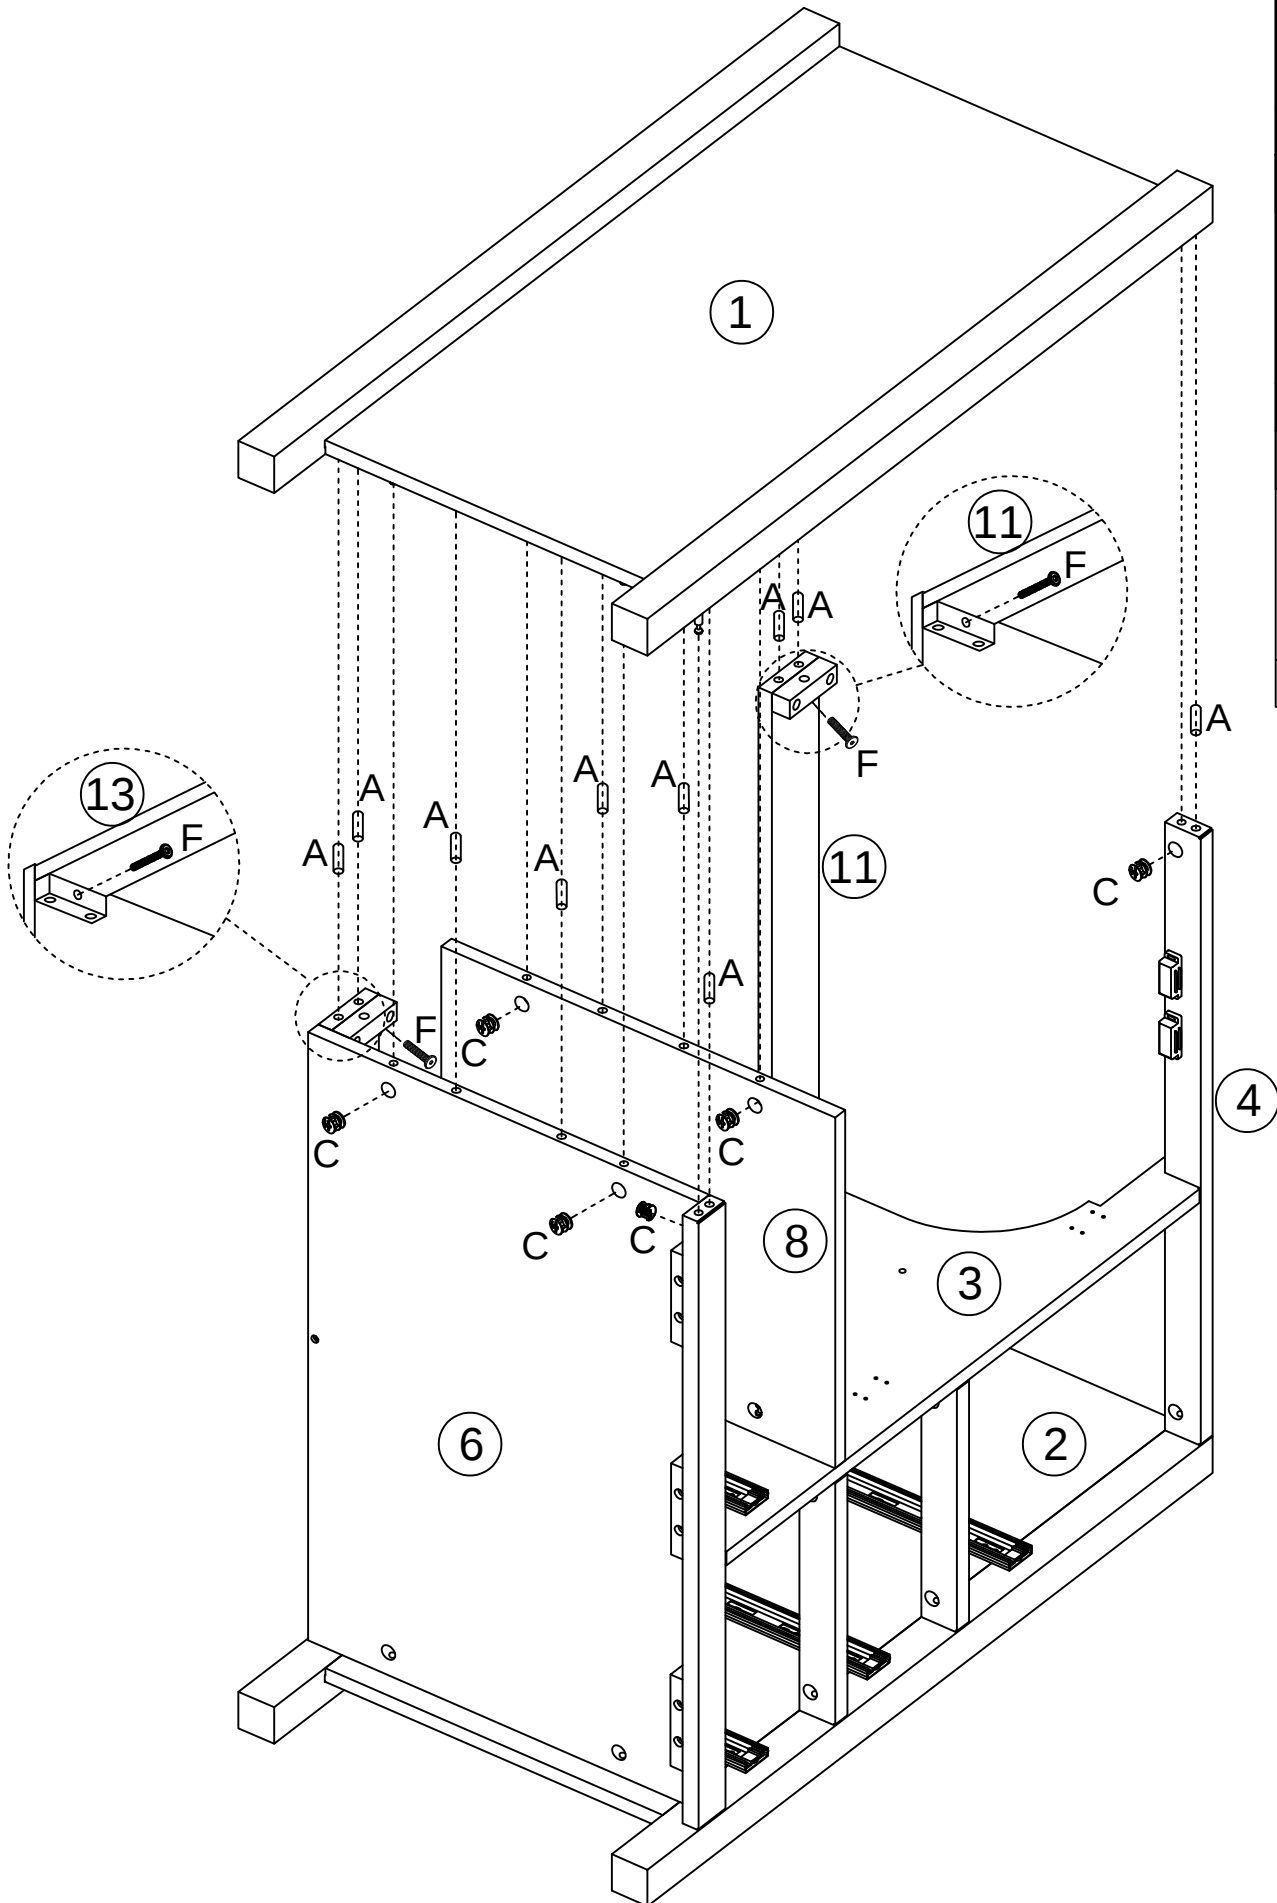

C	
6PCS	
A	
10PCS	
F	
2PCS	

STEP: 9

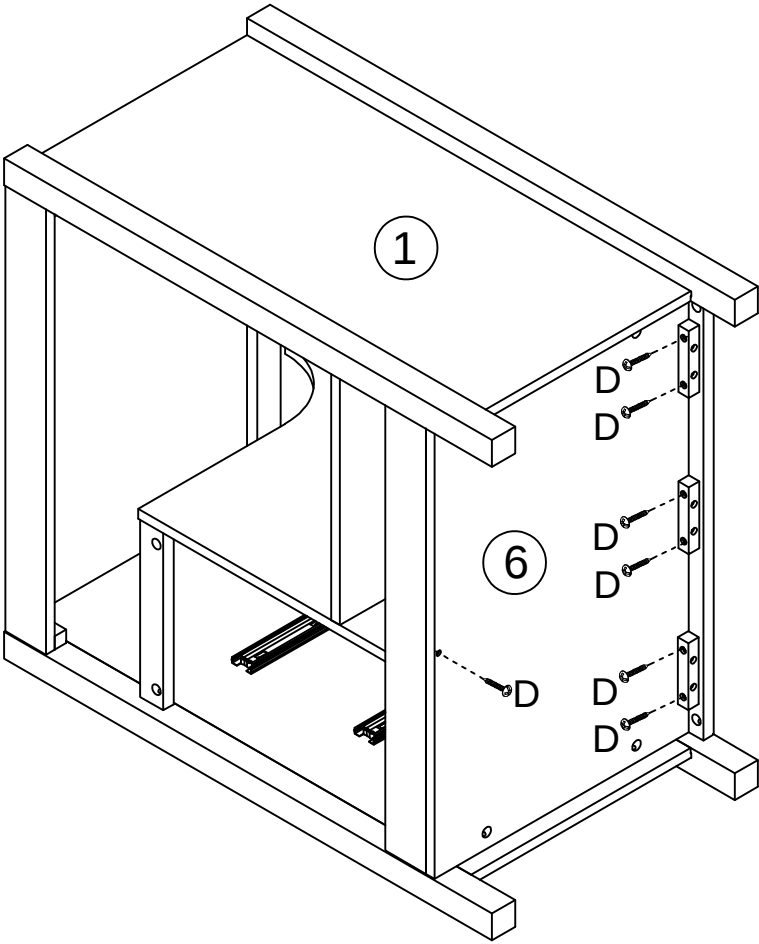


D



7PCS

STEP: 10

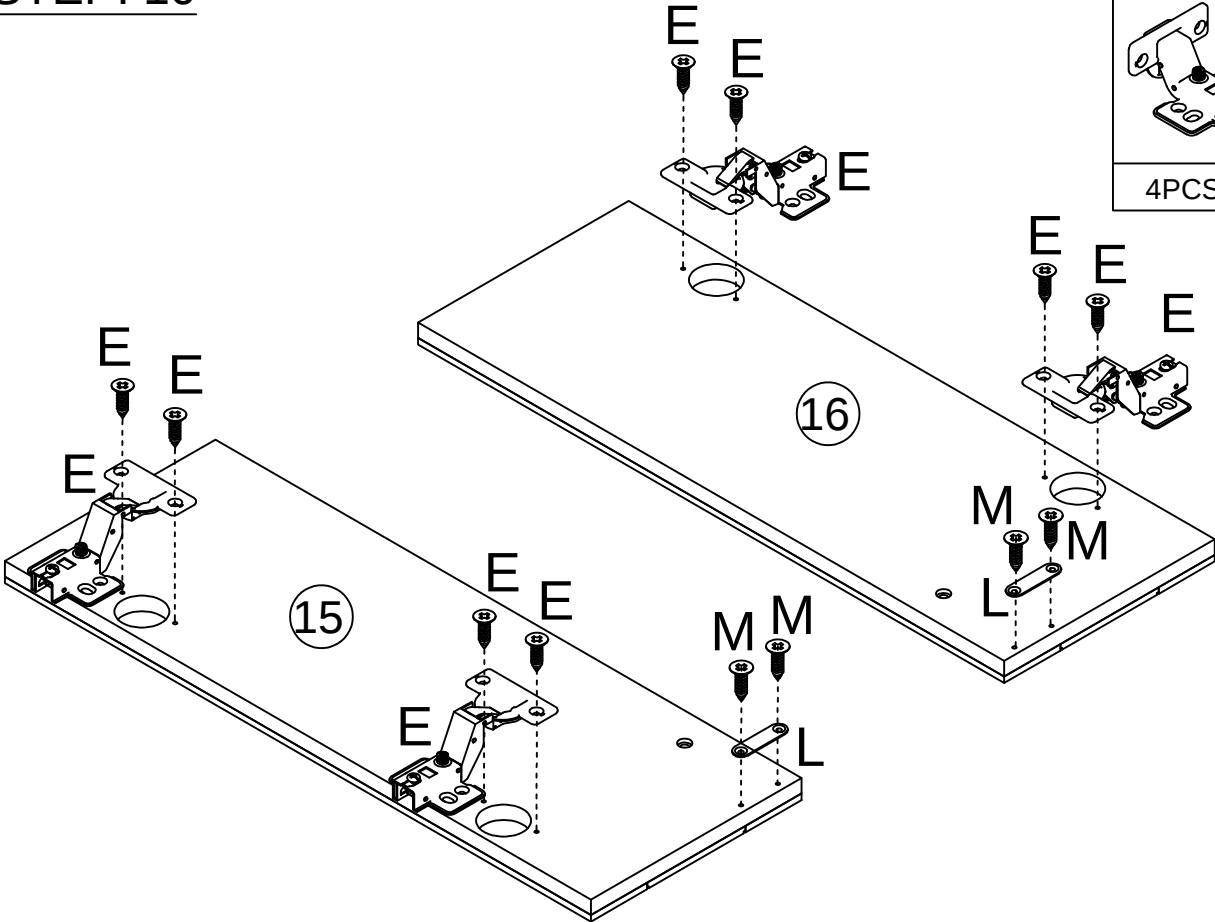


E




4PCS

E



8PCS

L





2PCS



M




4PCS

STEP: 11

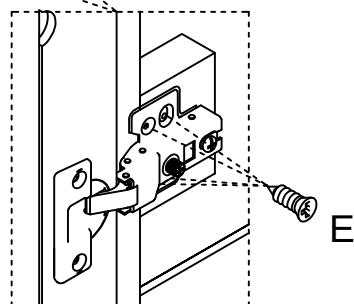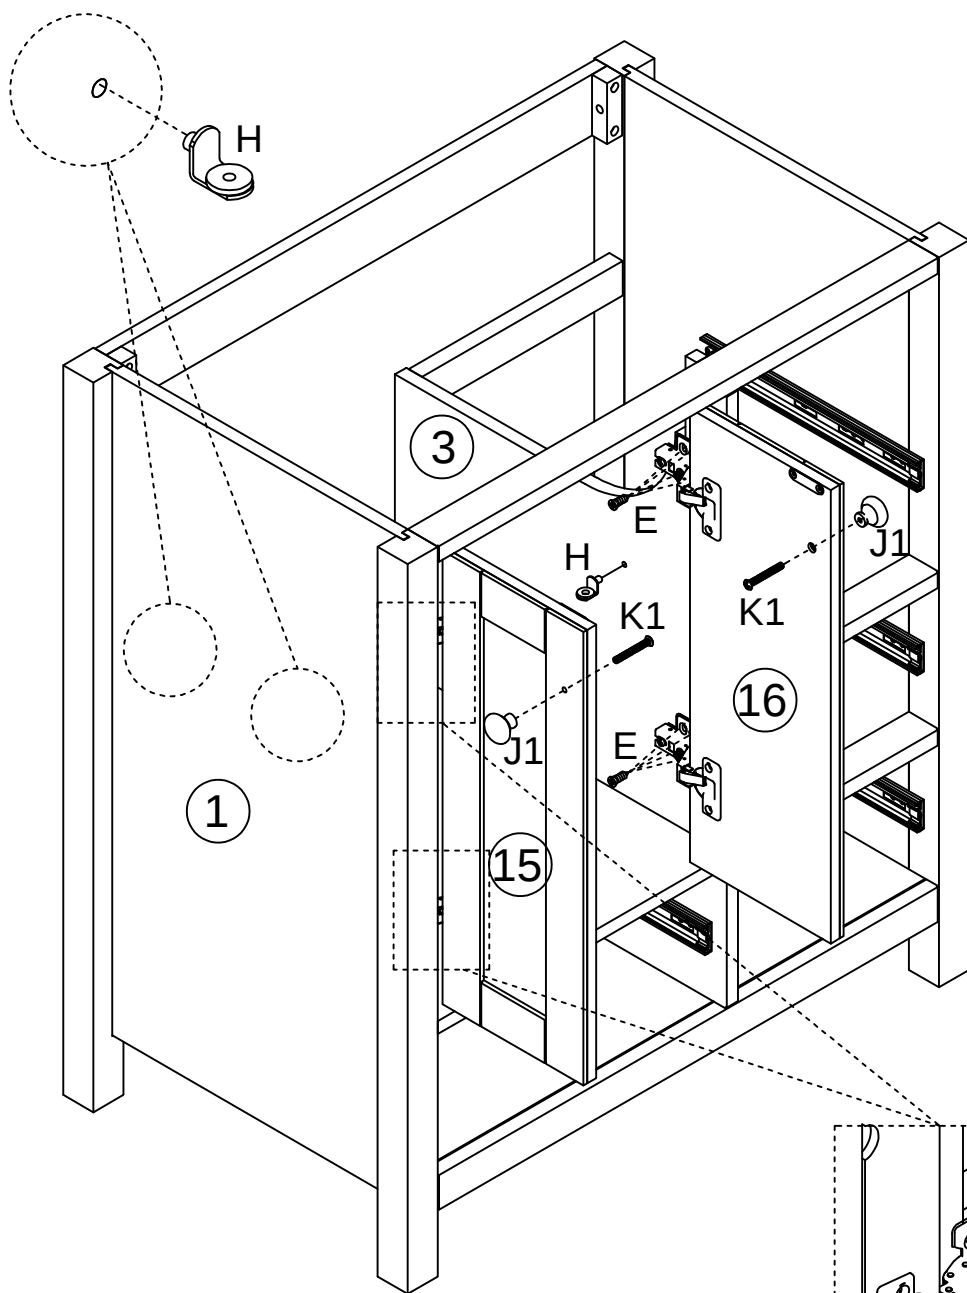


E	
16PCS	
J1	
2PCS	
K1	
2PCS	
H	
3PCS	

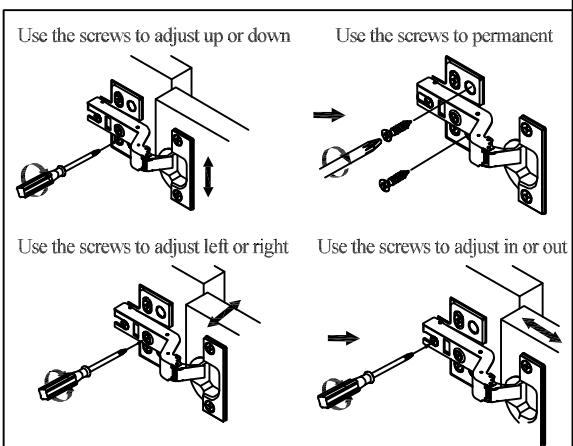


STEP: 12




I

3PCS

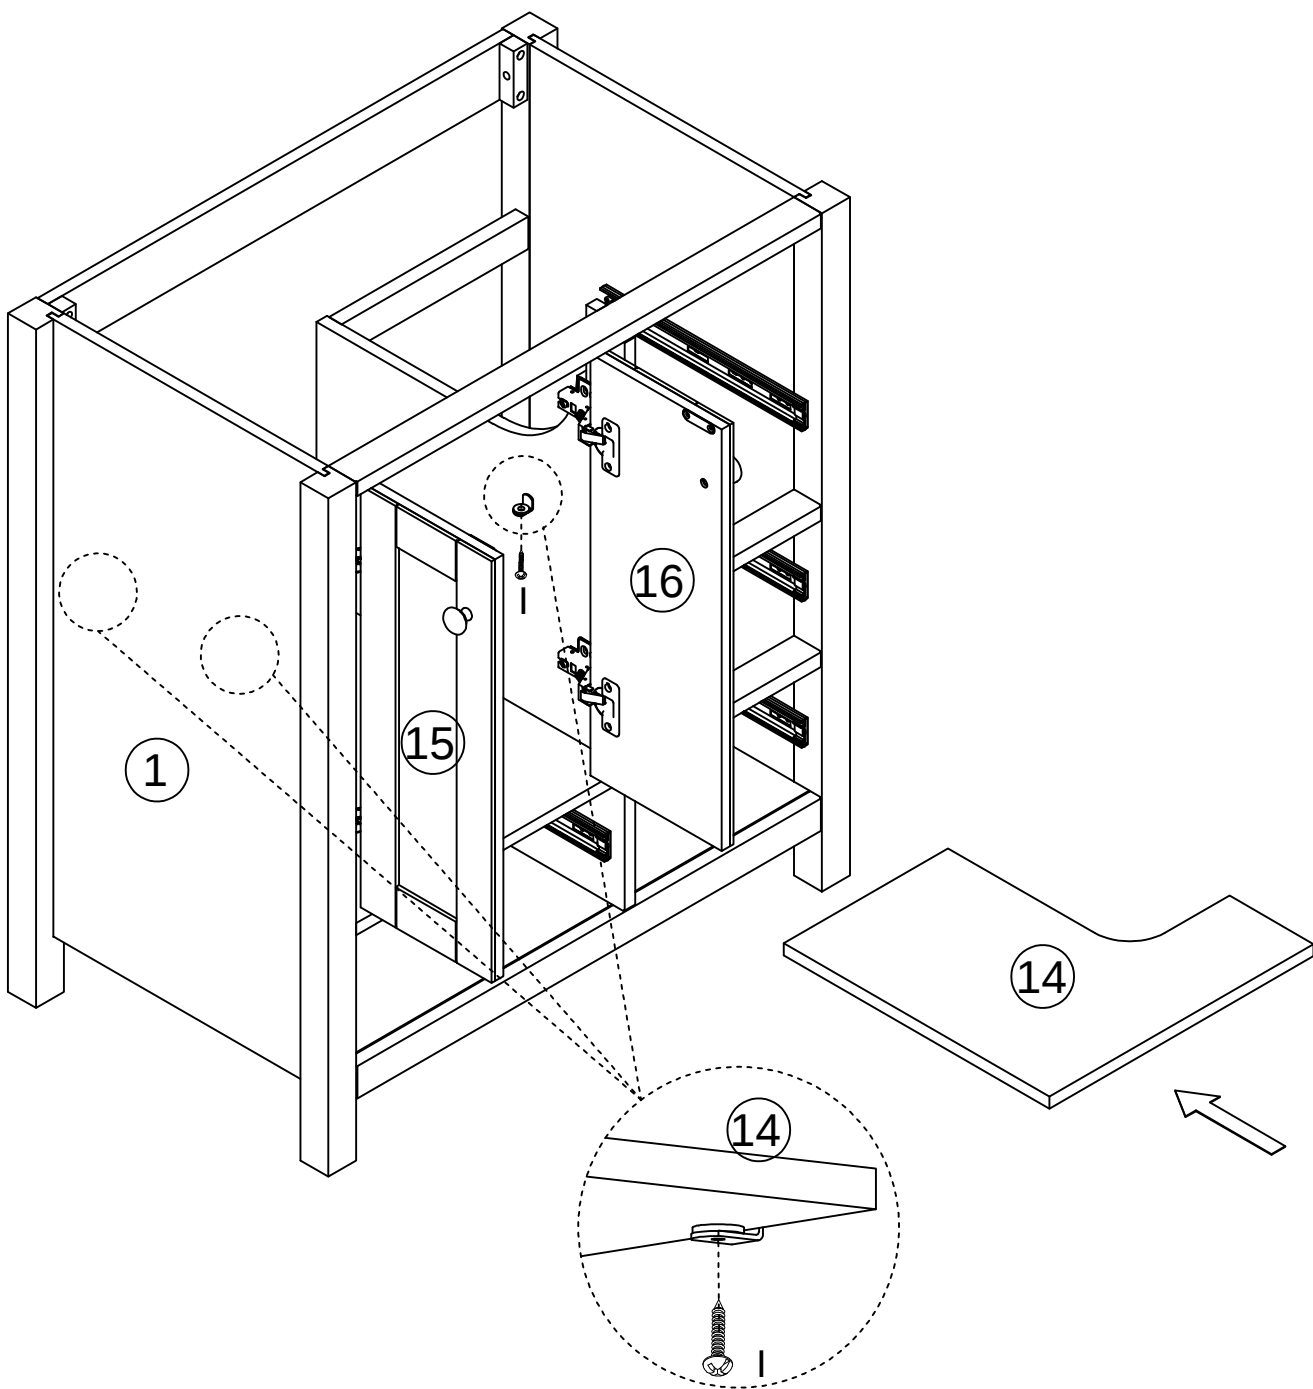





STEP: 13


B	J2	K2
		
8PCS	2PCS	4PCS
C	N	O
		
8PCS	8PCS	8PCS

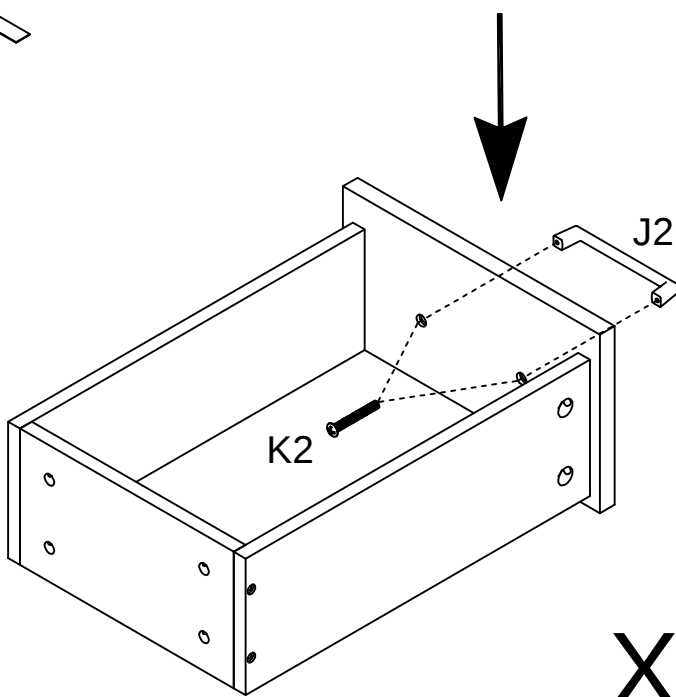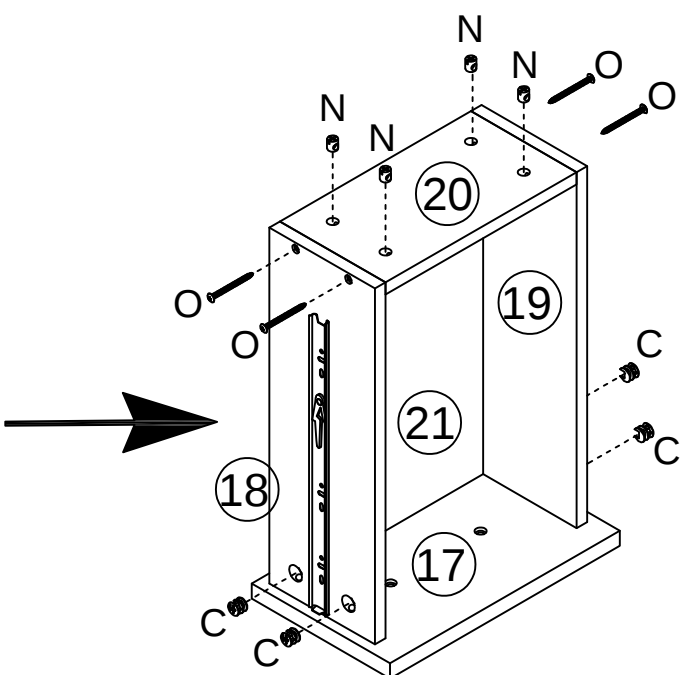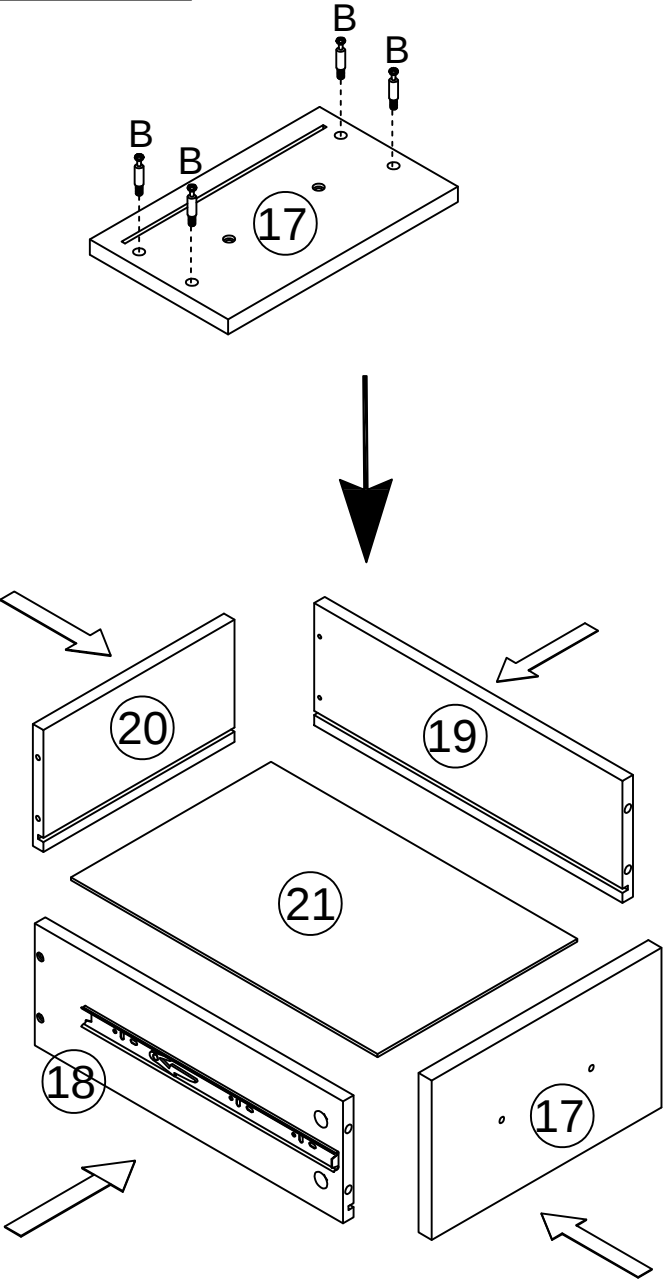




X2




STEP: 14

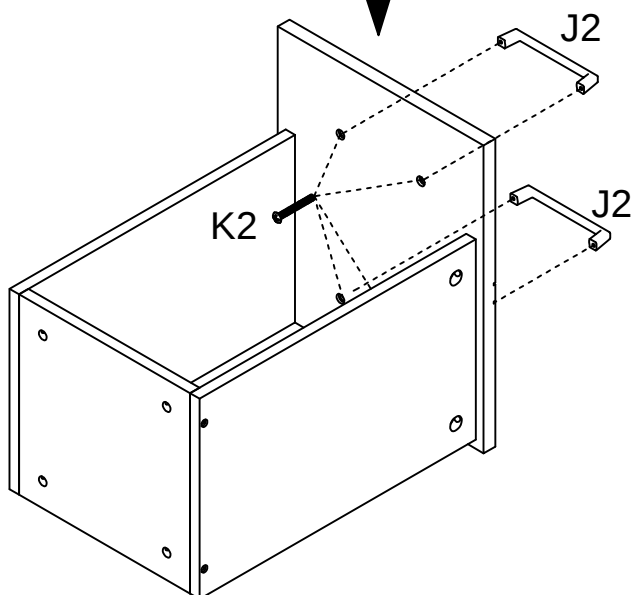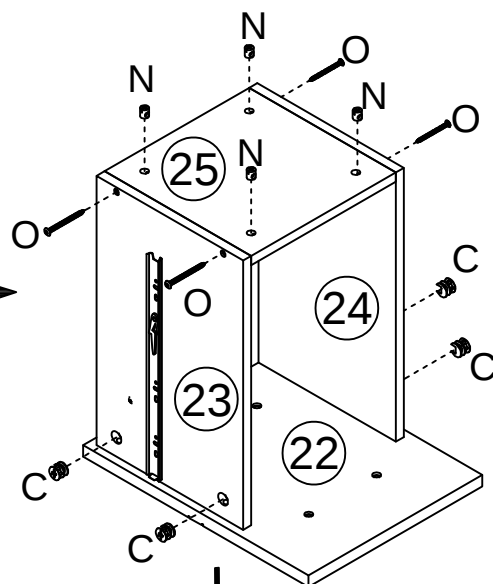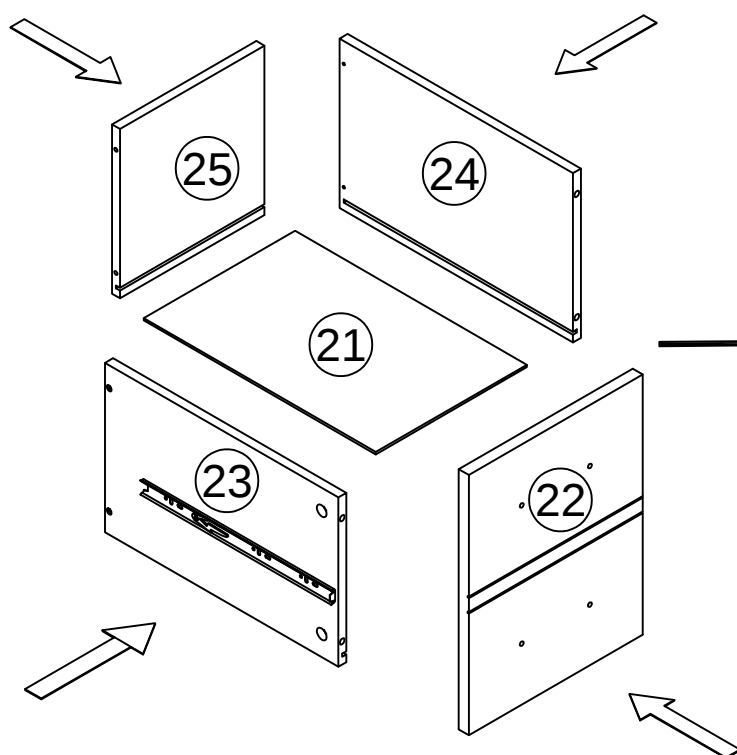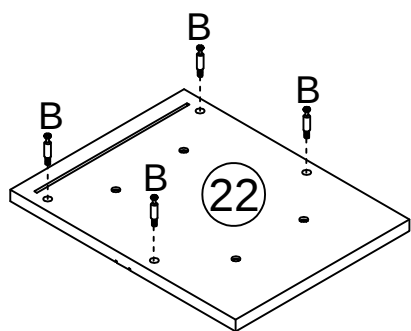


B	J2	K2
		
4PCS	2PCS	4PCS
C	N	O
		
4PCS	4PCS	4PCS

STEP: 15


B	J2	K2
		
4PCS	1PCS	2PCS
C	N	O
		
4PCS	4PCS	4PCS

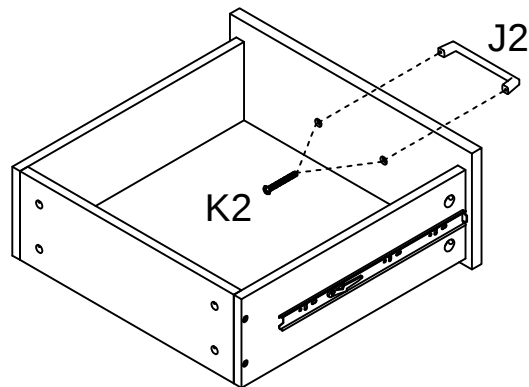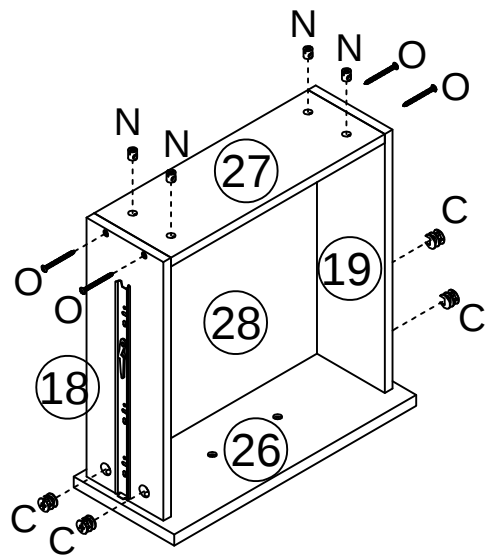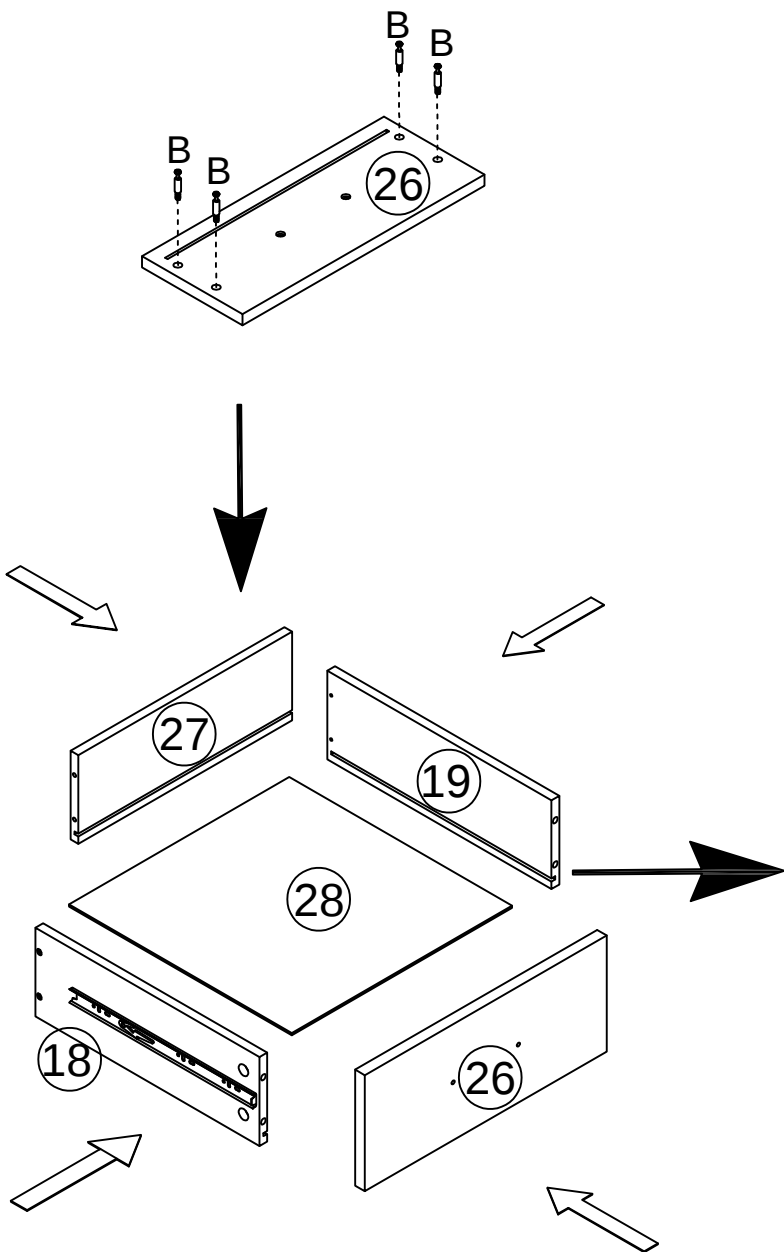

STEP: 16

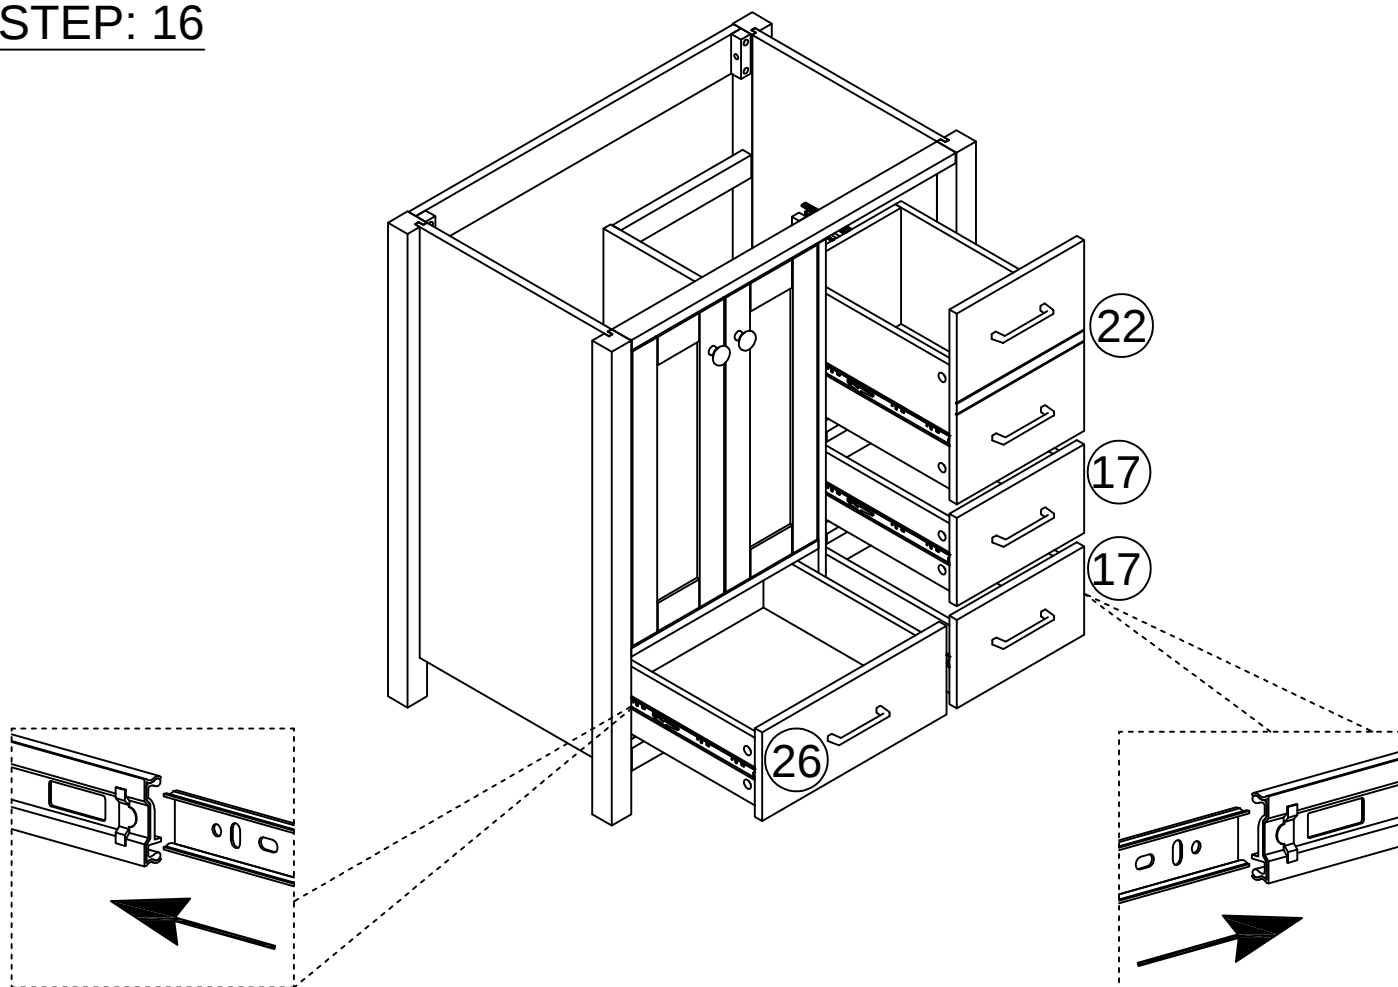


STEP: 14

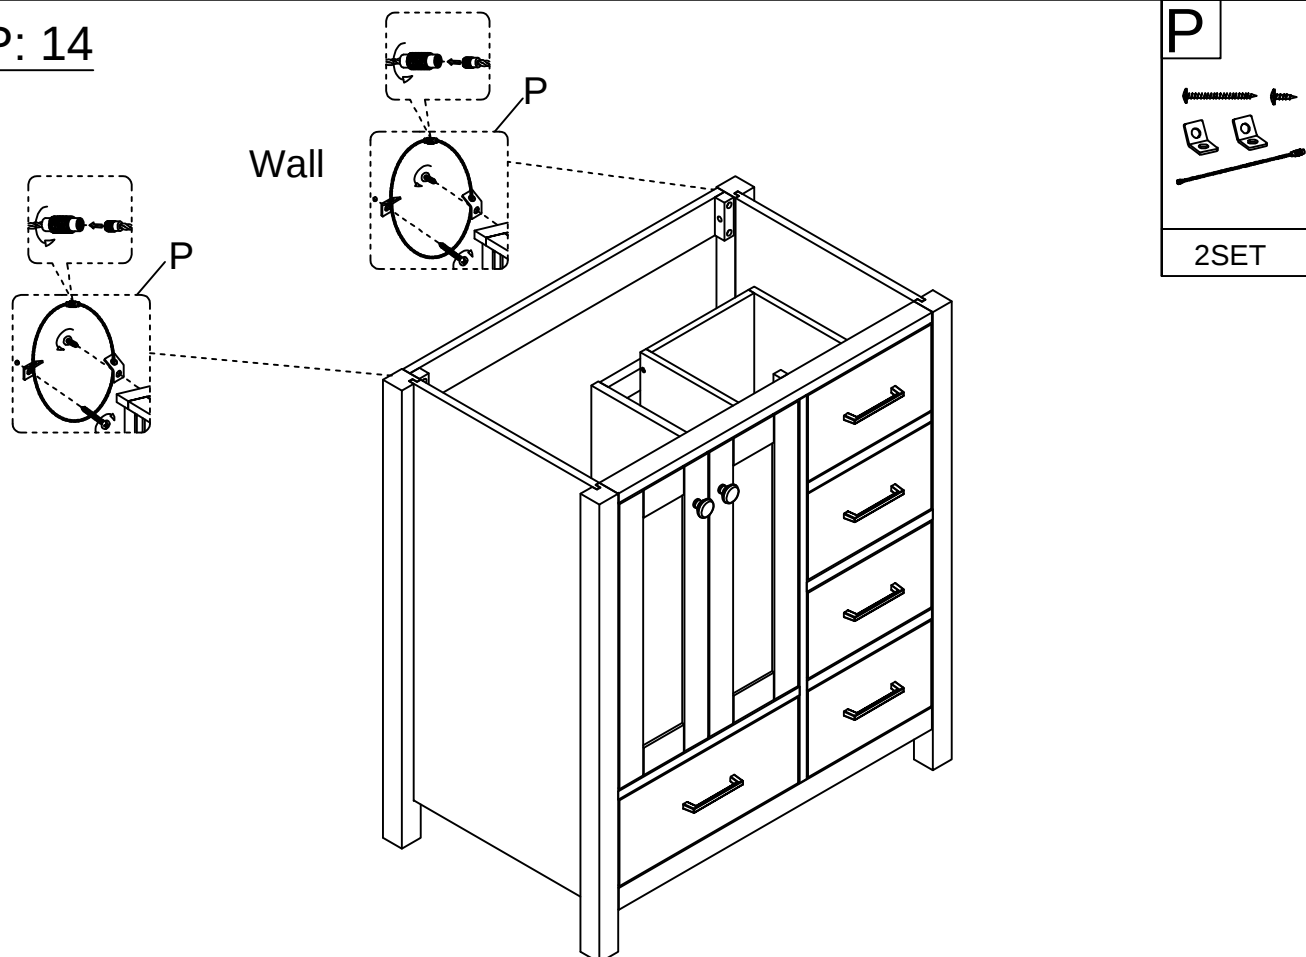



STEP: 17

Install the sink on the cabinet with glue.
Let stand for 24 hours

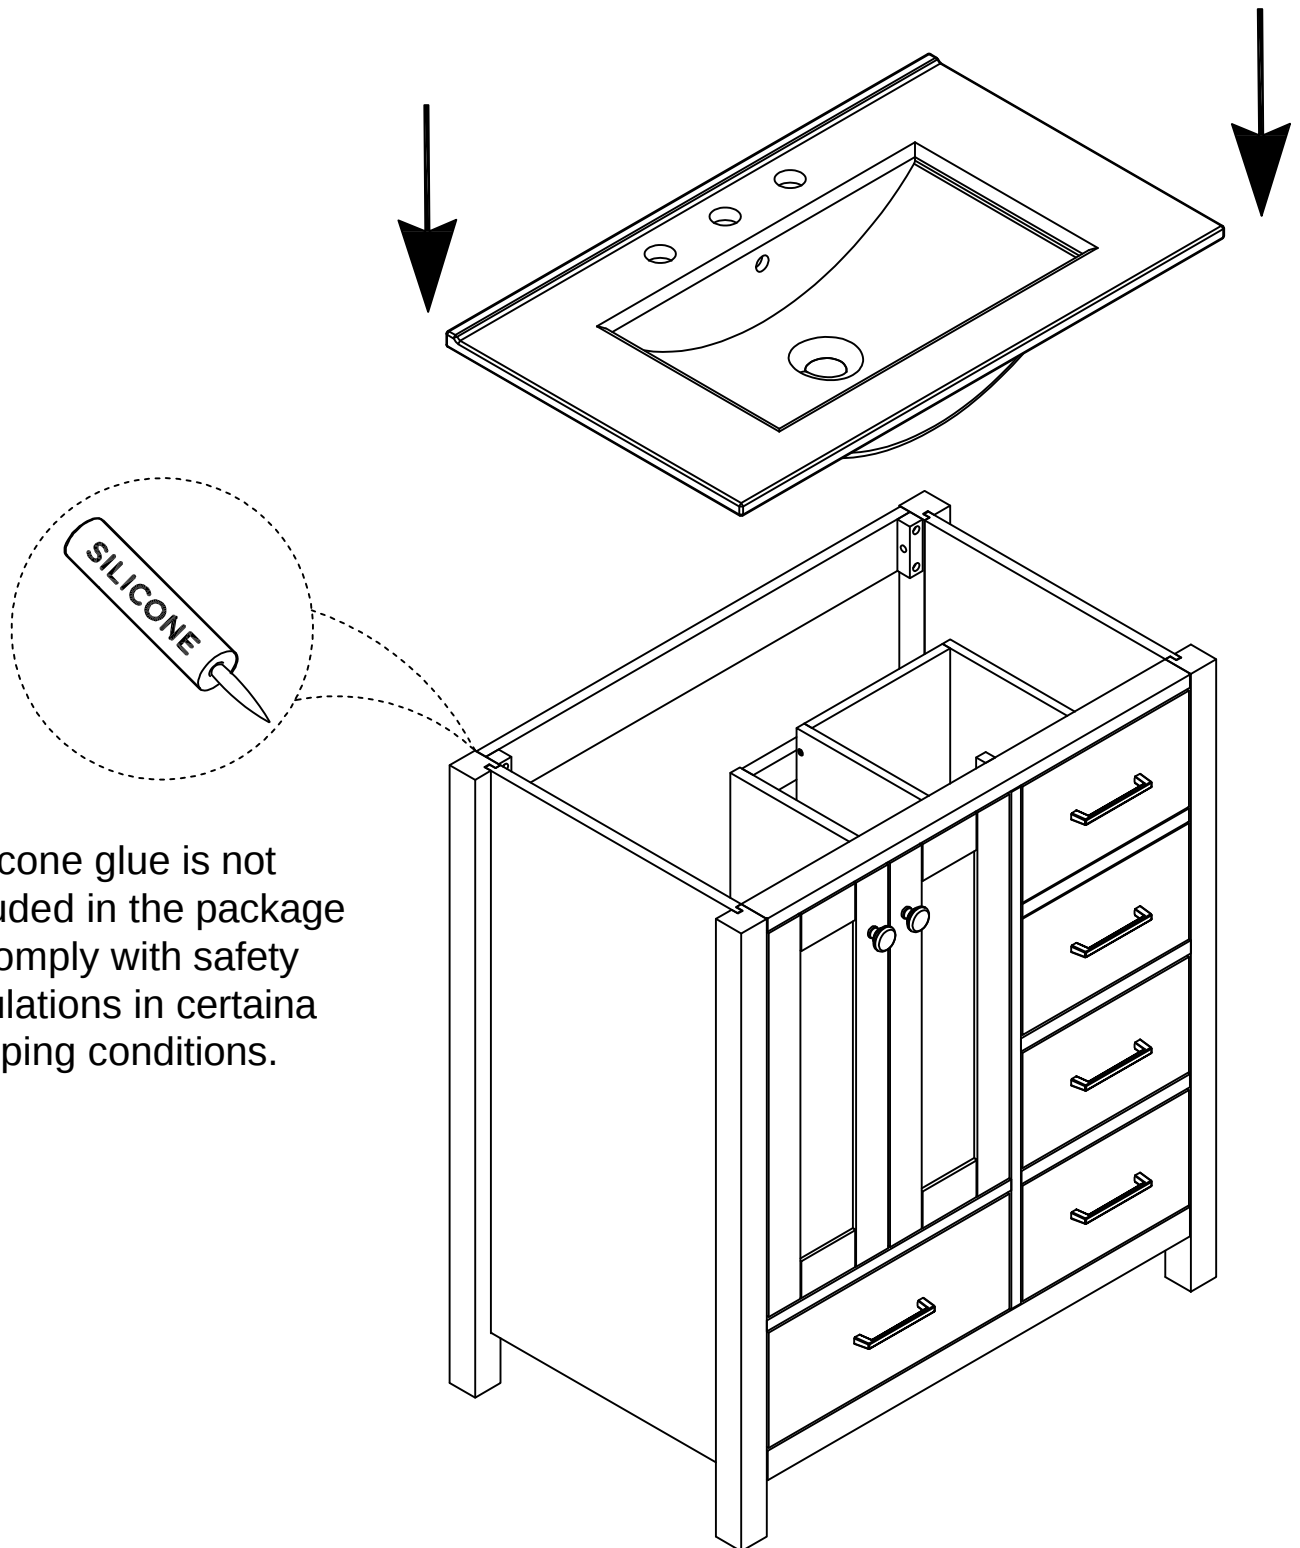


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 18

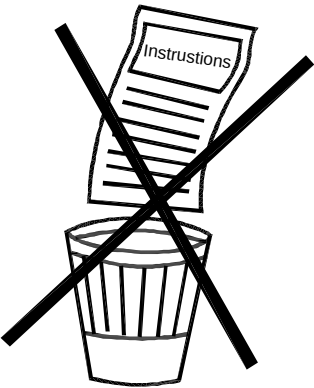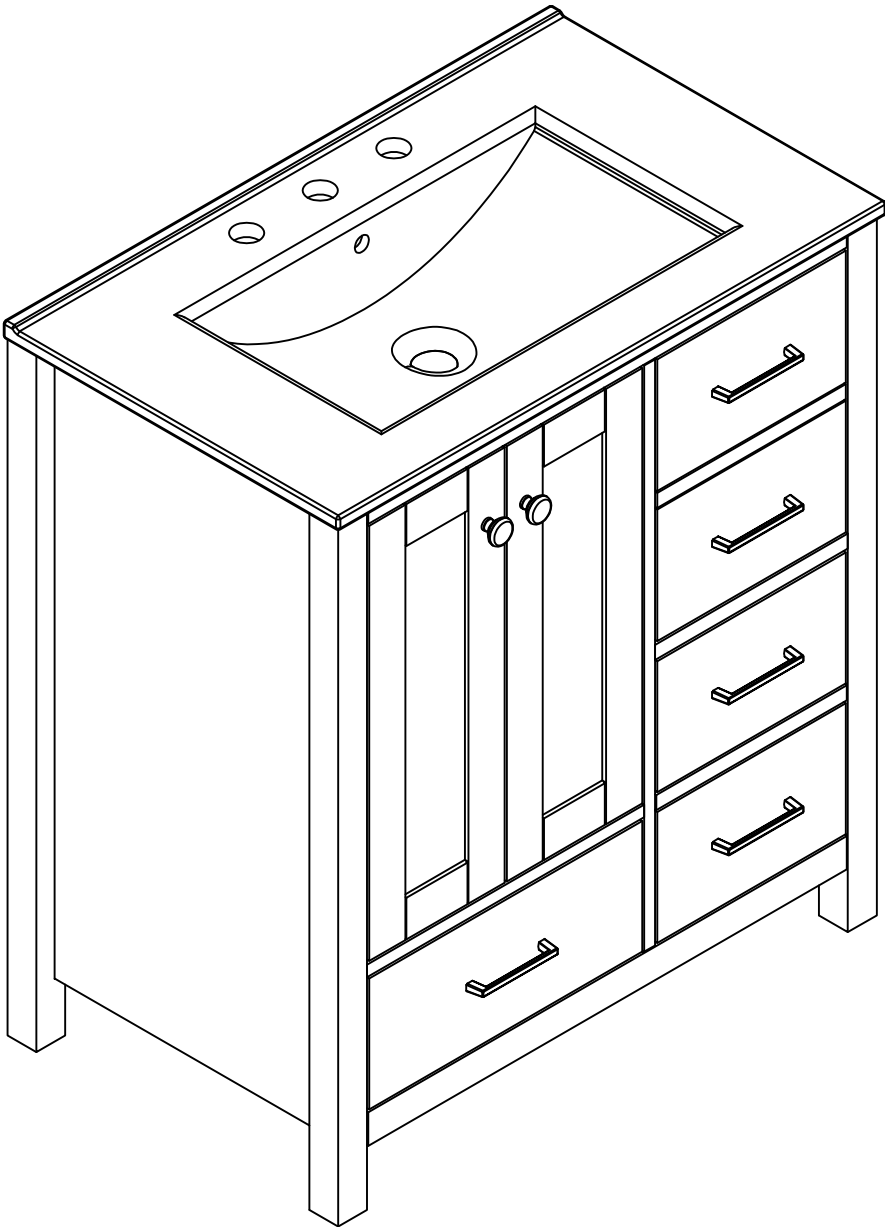

HINGE ADJUSTMENTS

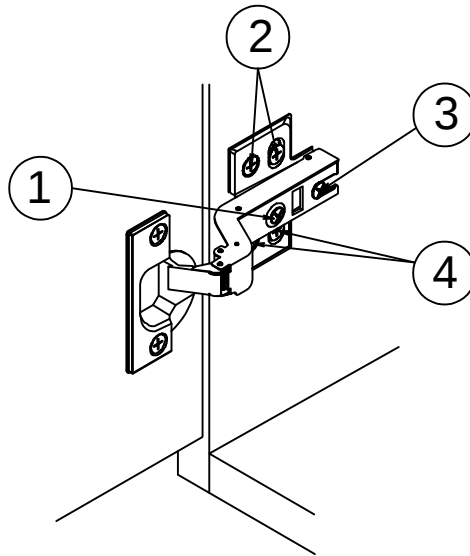


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

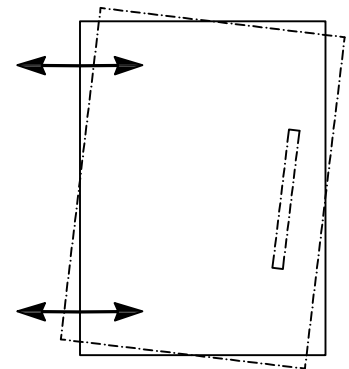


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

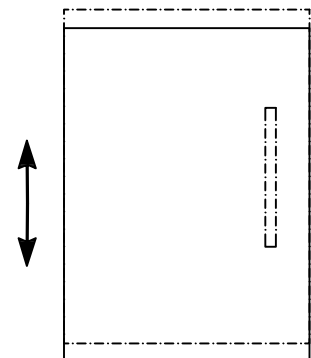

③ Forward and back adjustment

