


Bar Stool

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

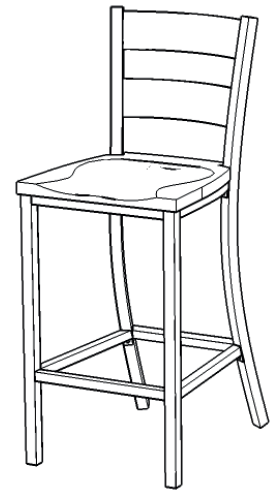


Part List



A.
Seat
1 Pc.

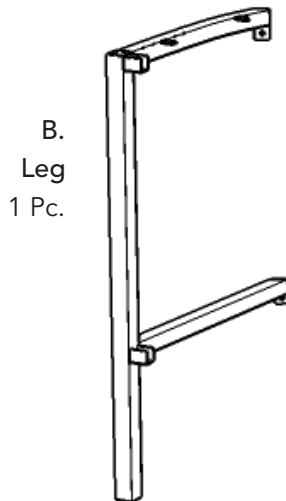


B.
Leg
1 Pc.

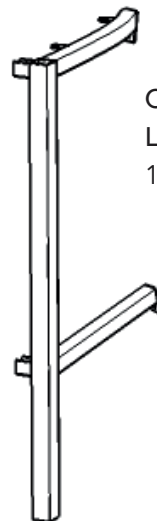

C.
Leg
1 Pc.



D.
Stretcher
2 Pcs.

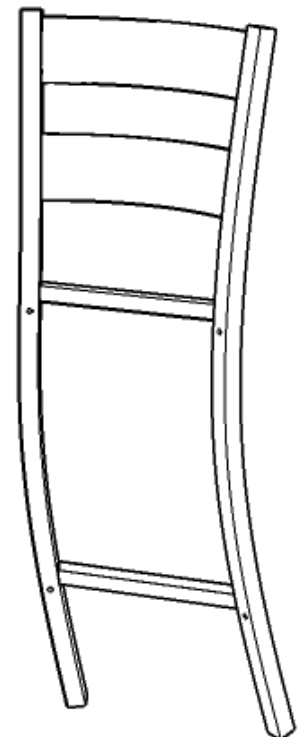

E.
Back Frame
1 Pc.


Hardware List



Small Hex Wrench
1 Pc.



Hex Wrench
1 Pc.

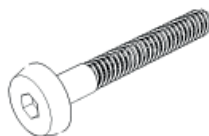

M6x16
Head Cap Bolt
8 Pcs. (+1 extra)



Spring Washer
8 Pcs. (+1 extra)



Flat Washer
8 Pcs. (+1 extra)



M4x19
Wood Screw
4 Pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/2

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

STEP 1

Attach Stretchers (D) to Leg (B) with Head Cap Bolts, Spring Washers and Flat Washers, tightening the bolts only half way. (See Figure 1)

Attach Leg (C) to unit with Head Cap Bolts, Spring Washer and Flat Washers, tightening the bolts only half way.



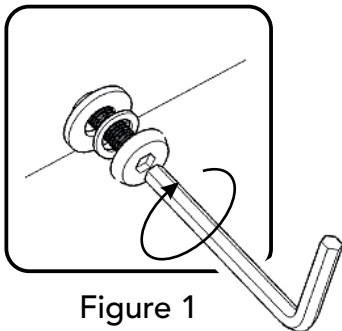


Figure 1

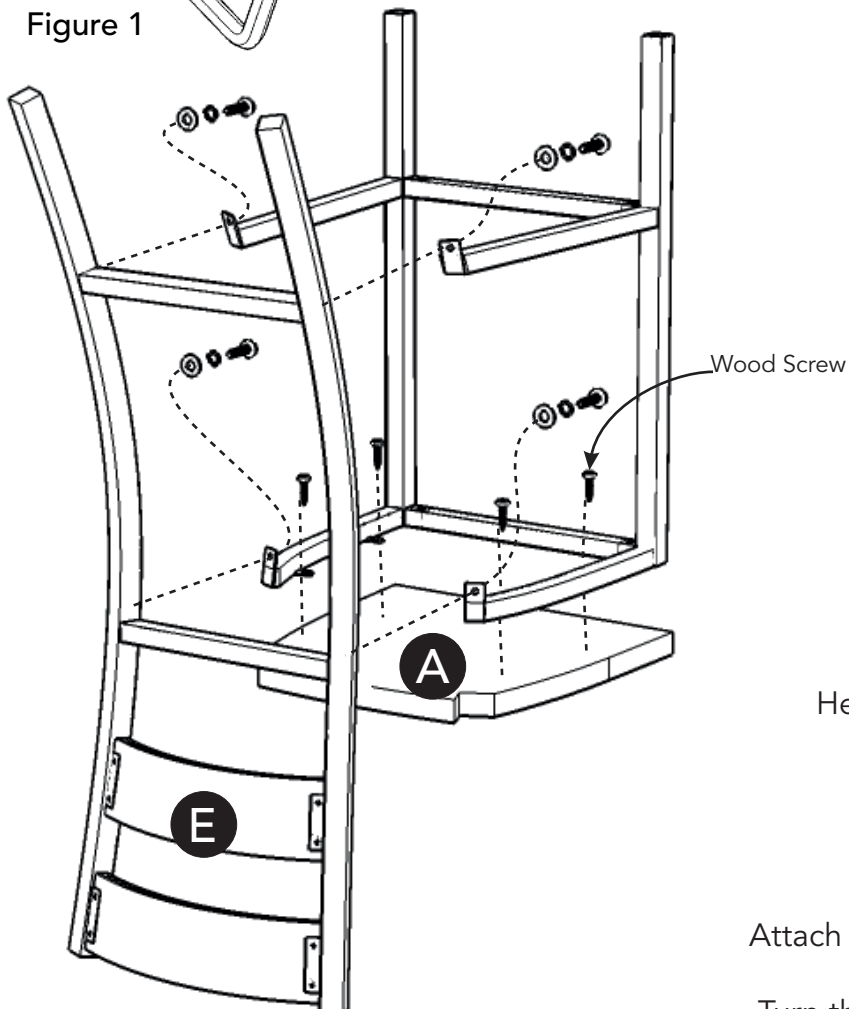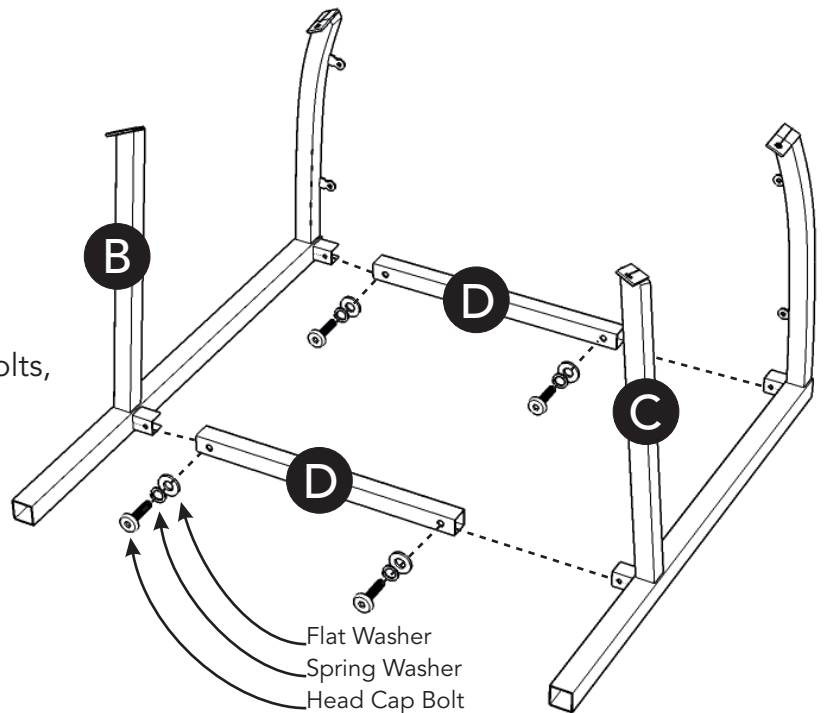

STEP 2

Attach Back Frame (E) to unit with Head Cap Bolts, Spring Washers and Flat Washers, tightening the bolts only half way.

Tighten all Head Cap Bolts.

Attach Seat (A) to unit with Wood Screws.

Turn the unit over to its' upright position.

CARE INSTRUCTIONS

NEVER


allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

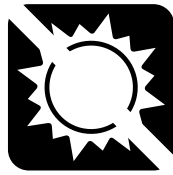


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

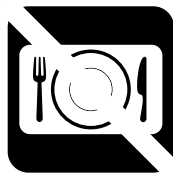

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.

