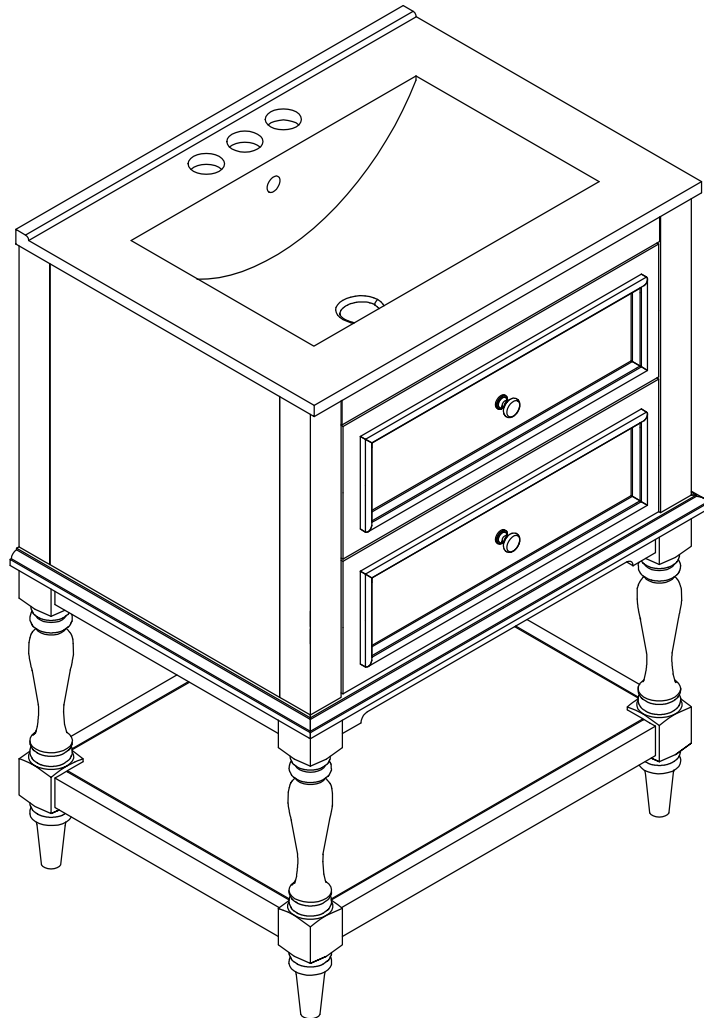


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)

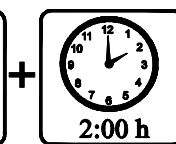
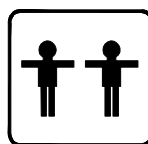
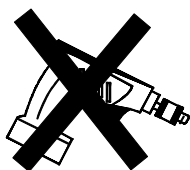


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

Before Installation








Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions













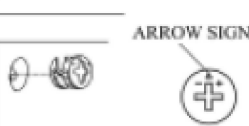
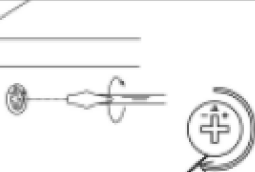
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

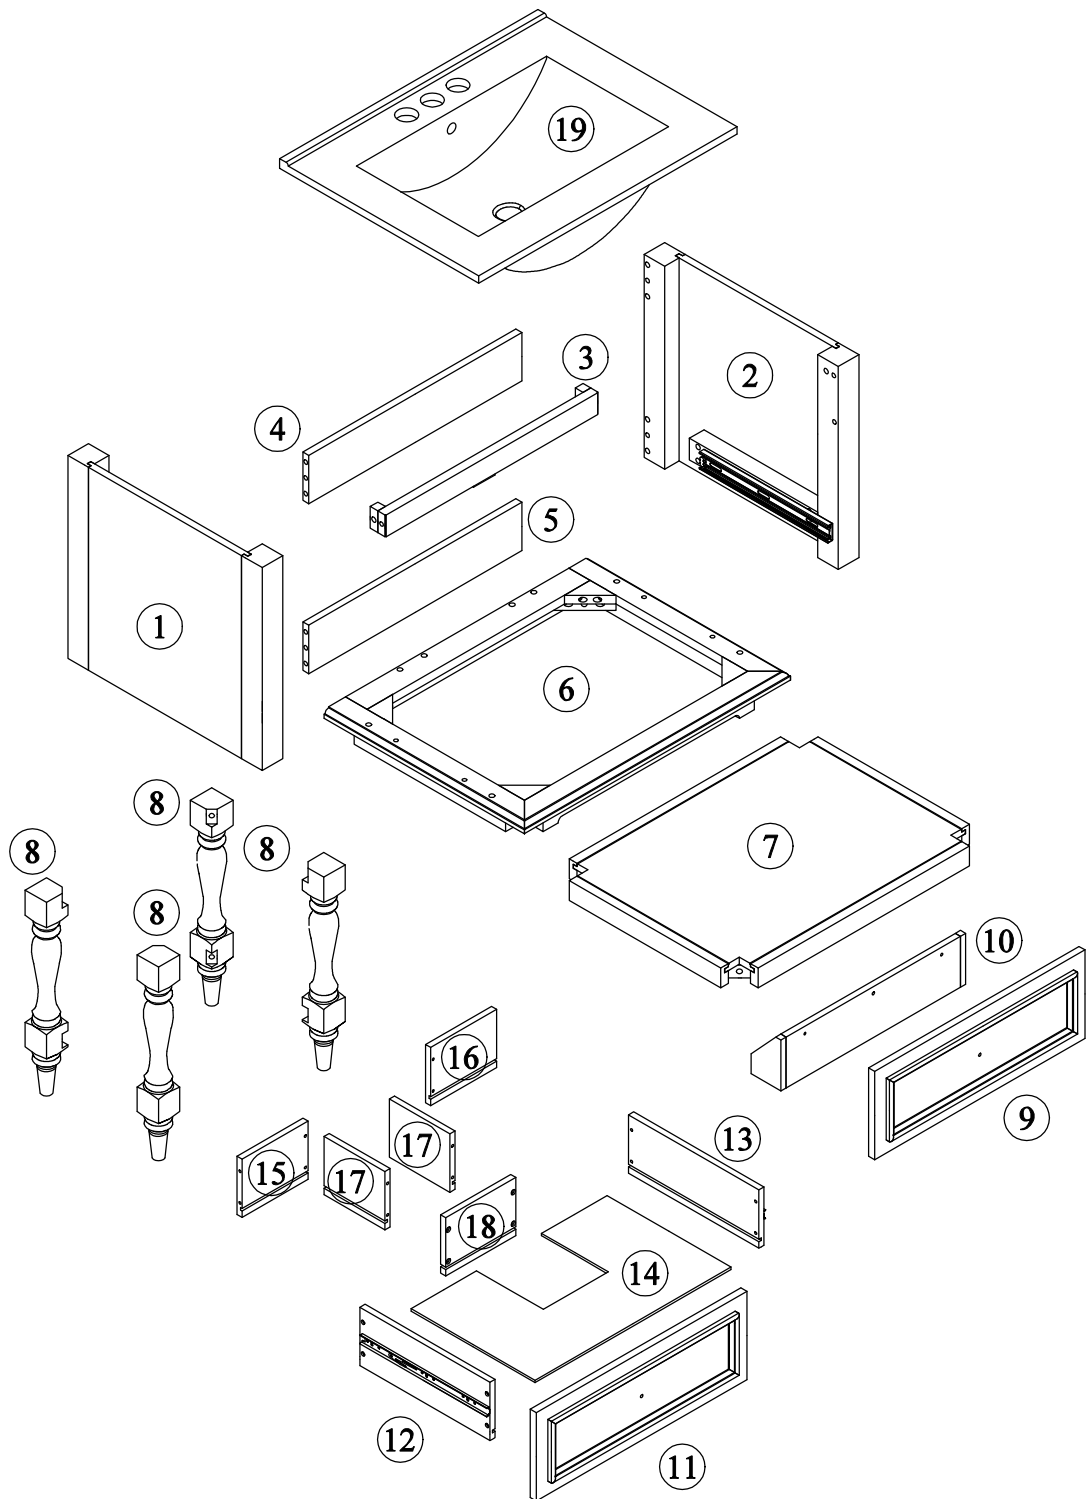Detail View - CABINET






Identifying the Hardware-Identify the hardware using the illustrations below.

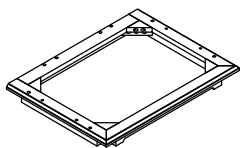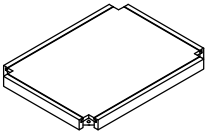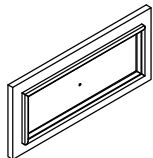




Part List

1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	
15		16	

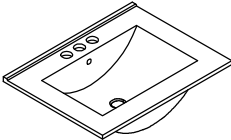Part List

17	 Drawer Side Panel Mid - 2pcs	18	 Drawer Panel Mid - 1pc
19	 Sink - 1pc		


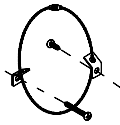
Hardware List

A  ø6x35mm	B  ø14.5x12mm	C  ø13x1/4"x38mm
Three in one bolts(14pcs)	Three in one lock(14pcs)	Hex-Head bolts(8pcs)
D  ø13x1/4"x28mm	E  ø1/4"x16x1mm	F  Handle (2pcs)
Hex-Head bolts(2pcs)	Washer(10pcs)	Handle (2pcs)
G  ø5/32"x30mm	H  ø8x30mm	I  ø6x30mm
Handle screw (2pcs)	Wood dowel(12pcs)	Wood dowel(8pcs)
J  ø8xø4x20mm	K  ø8xø4x32mm	L  Rod Support hinges (1pc)
Round head screw(2pcs)	Round head screw(16pcs)	Rod Support hinges (1pc)
M  Swivel Hinges L/R (2pcs)	N  ø6xø3x12mm	O  4mm
Round head screw (8pcs)	Round head screw (8pcs)	Allen key(1pc)
P  Anti fall hardware (2sets)		




STEP: 1



A

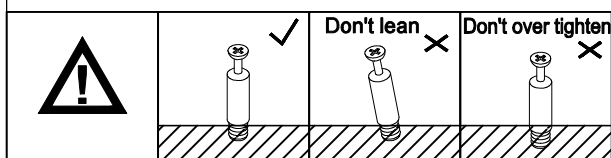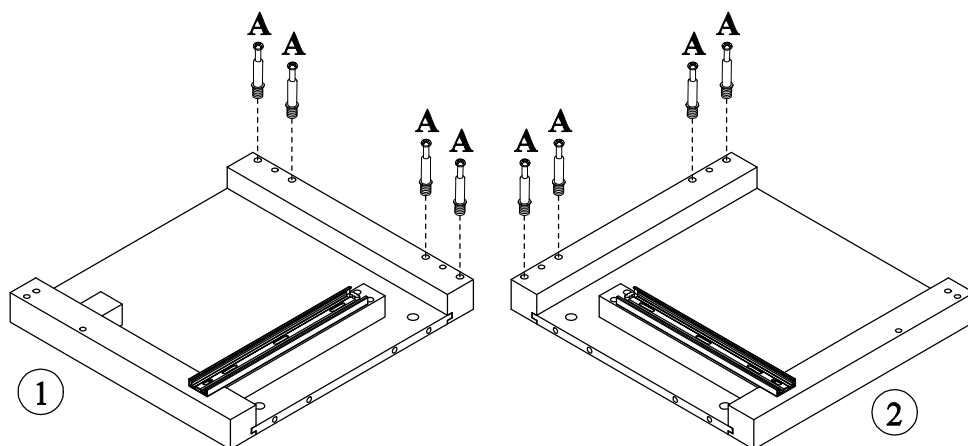8PCS







STEP: 2

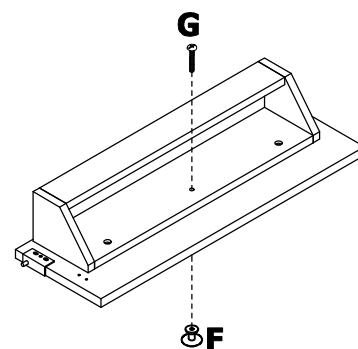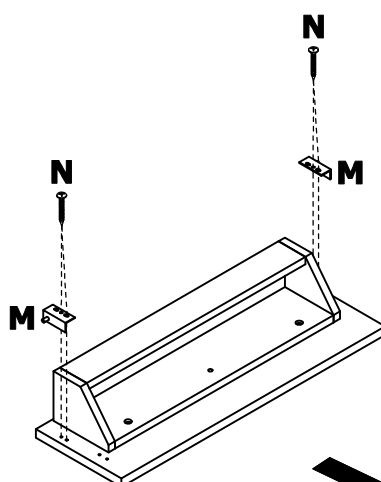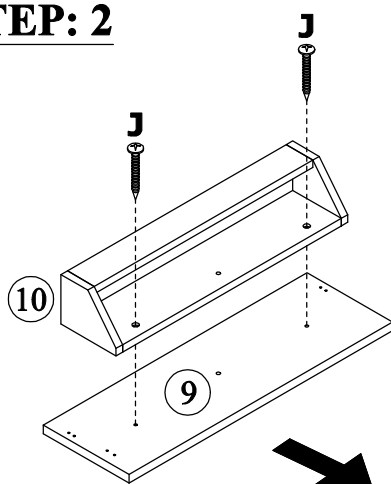

J	F	G
		
2PCS	1PC	1PC
M	N	
		
2PCS	4PCS	


STEP: 3

B		H		D		E	
8PCS		6PCS		2PCS		2PCS	
							O
							
							1PC

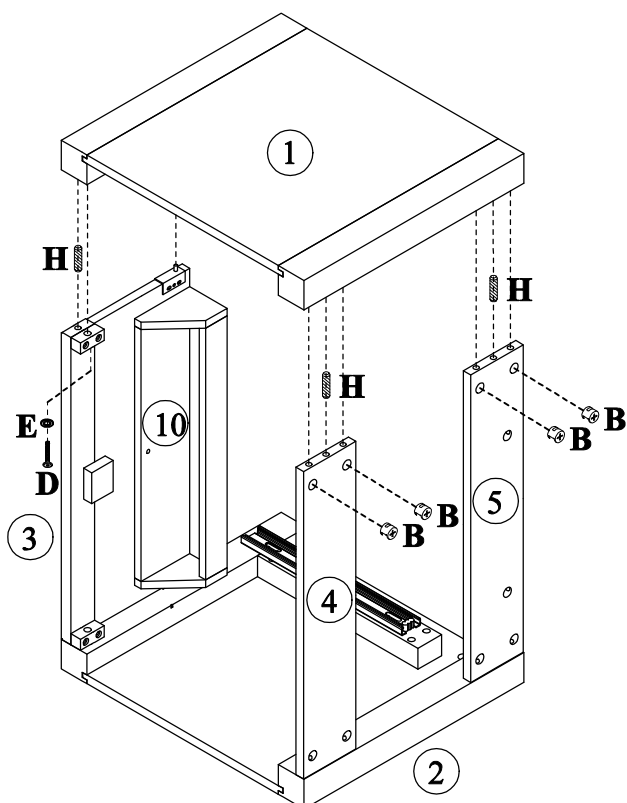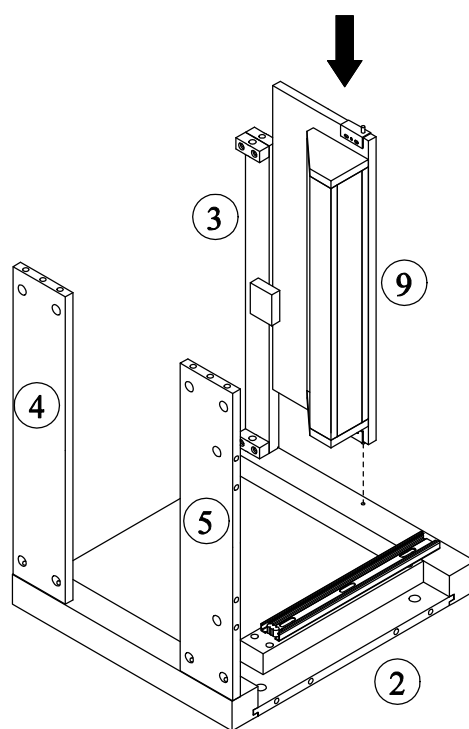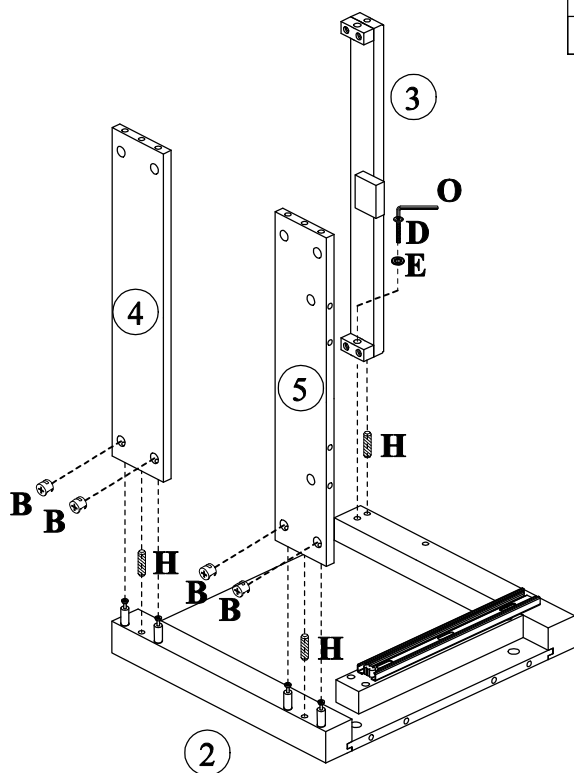


STEP: 4

C	E	O
		
3PCS	3PCS	1PC

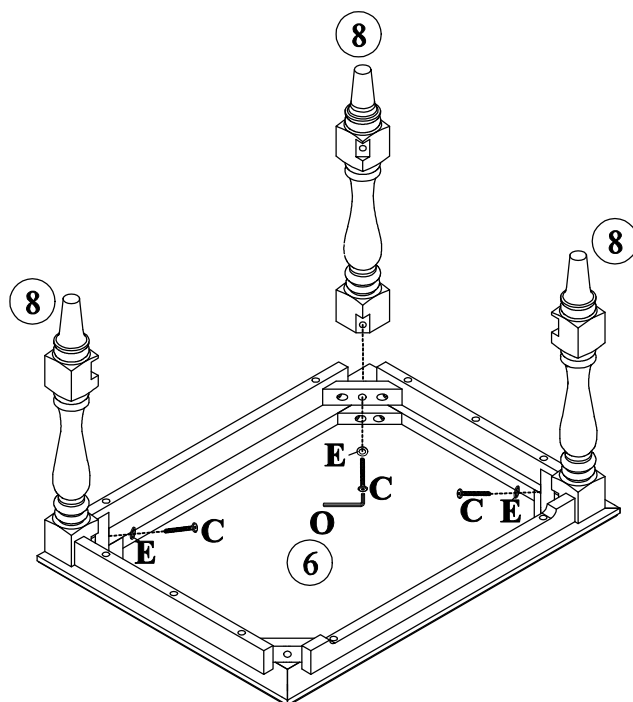


STEP: 5

C	E	O
		
3PCS	3PCS	1PC

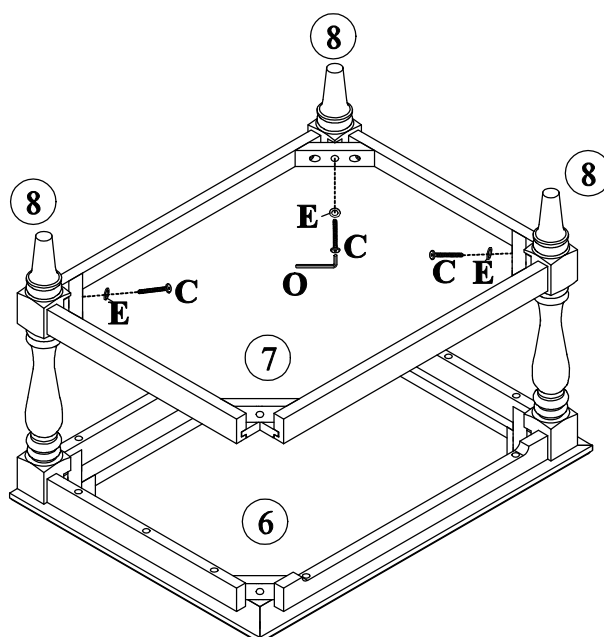



STEP: 6

C	E	O
		
2PCS	2PCS	1PC

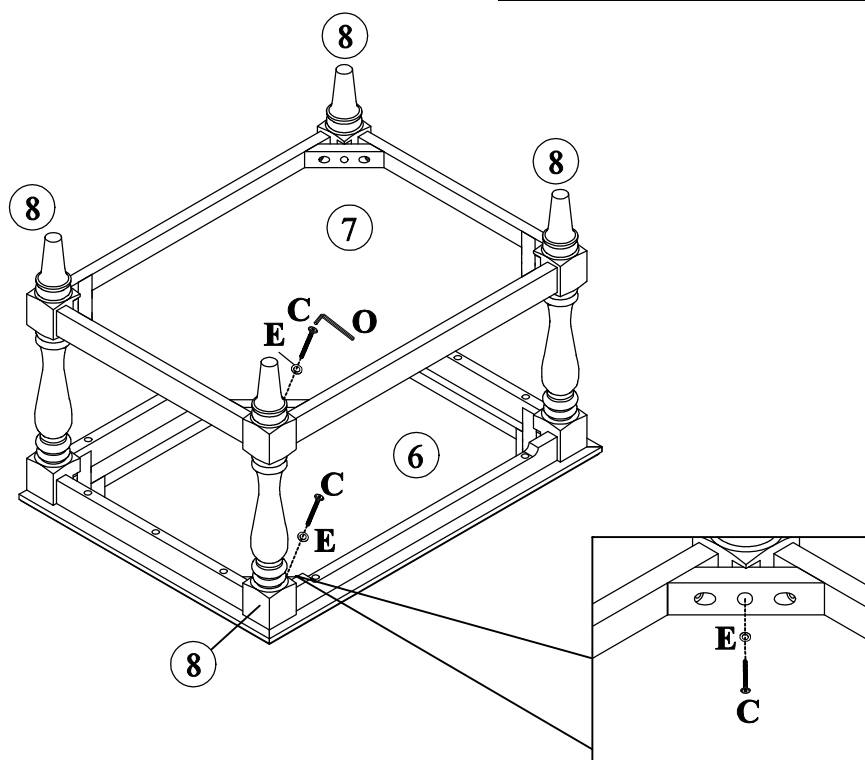


STEP: 7

A

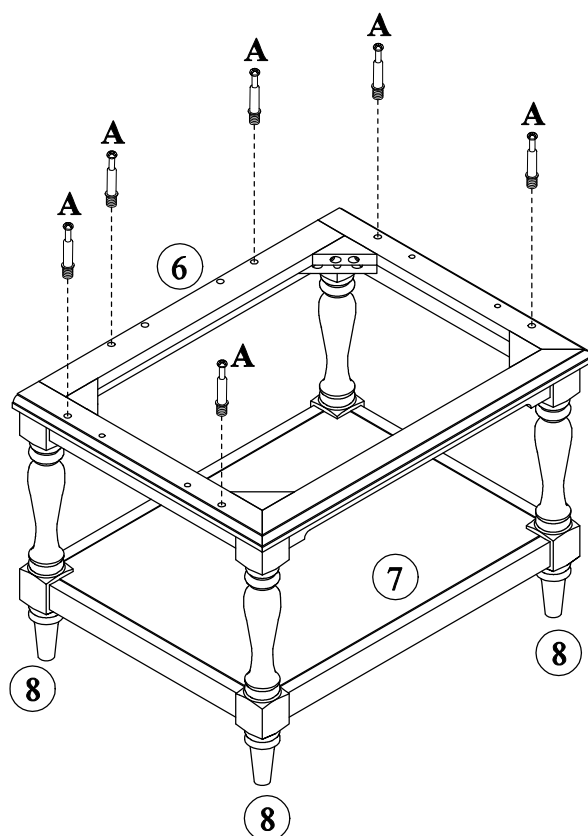6PCS








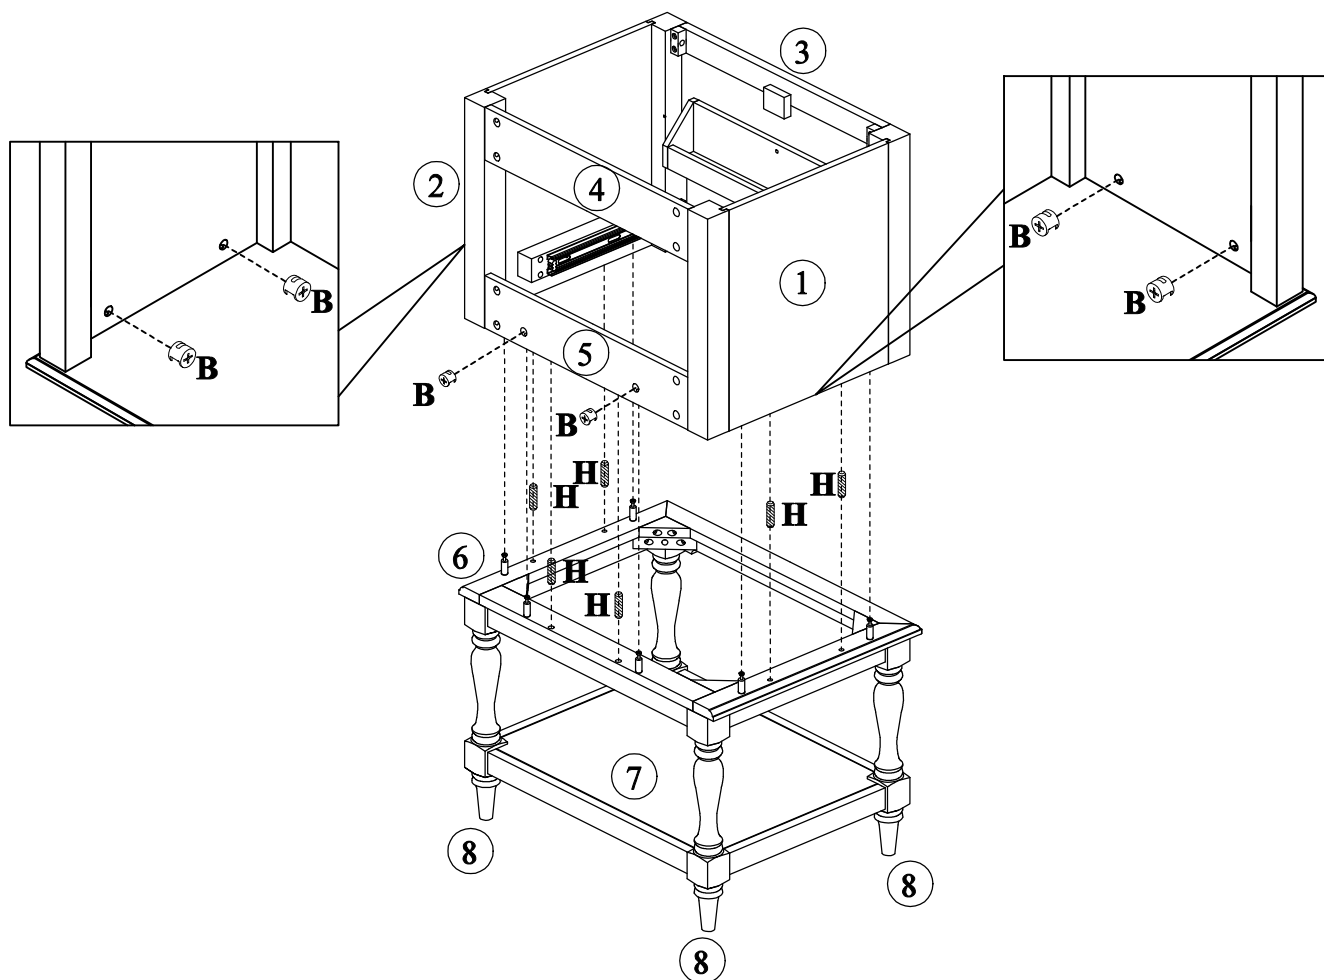
STEP: 8

B	H
	
6PCS	6PCS




STEP: 9


F	G	K	I
			
1PC	1PC	16PCS	8PCS

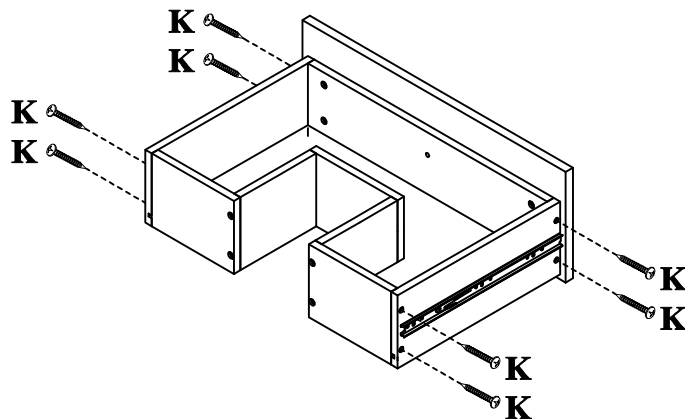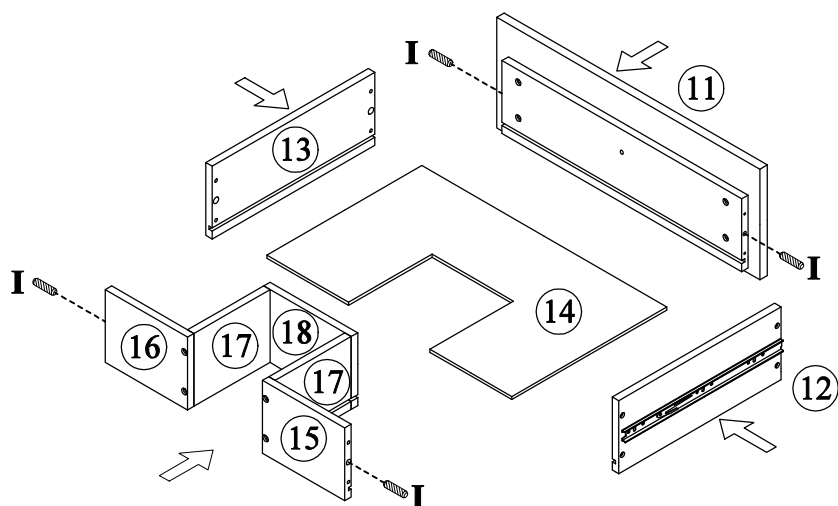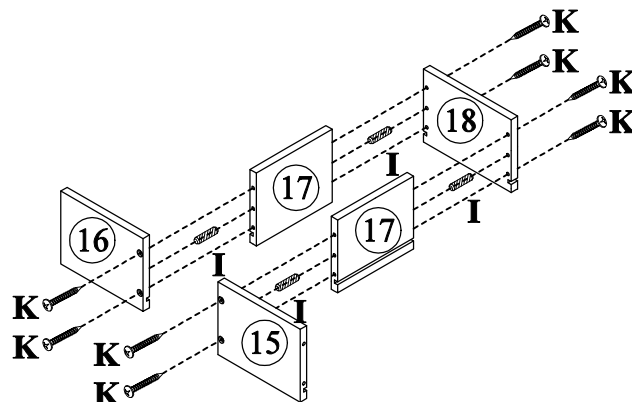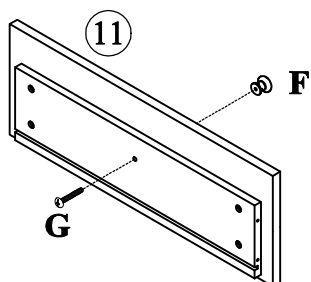



STEP: 10

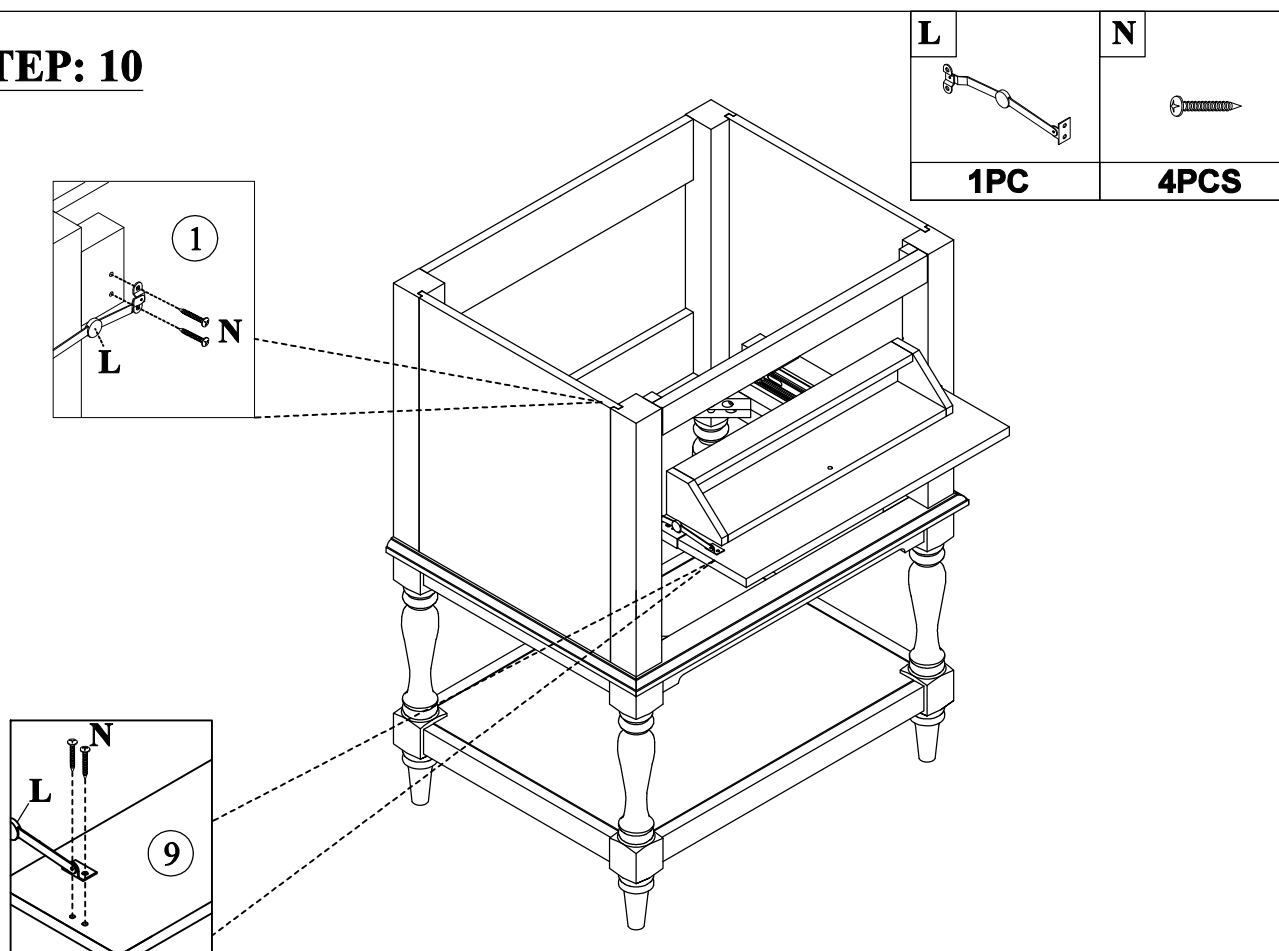

STEP: 11

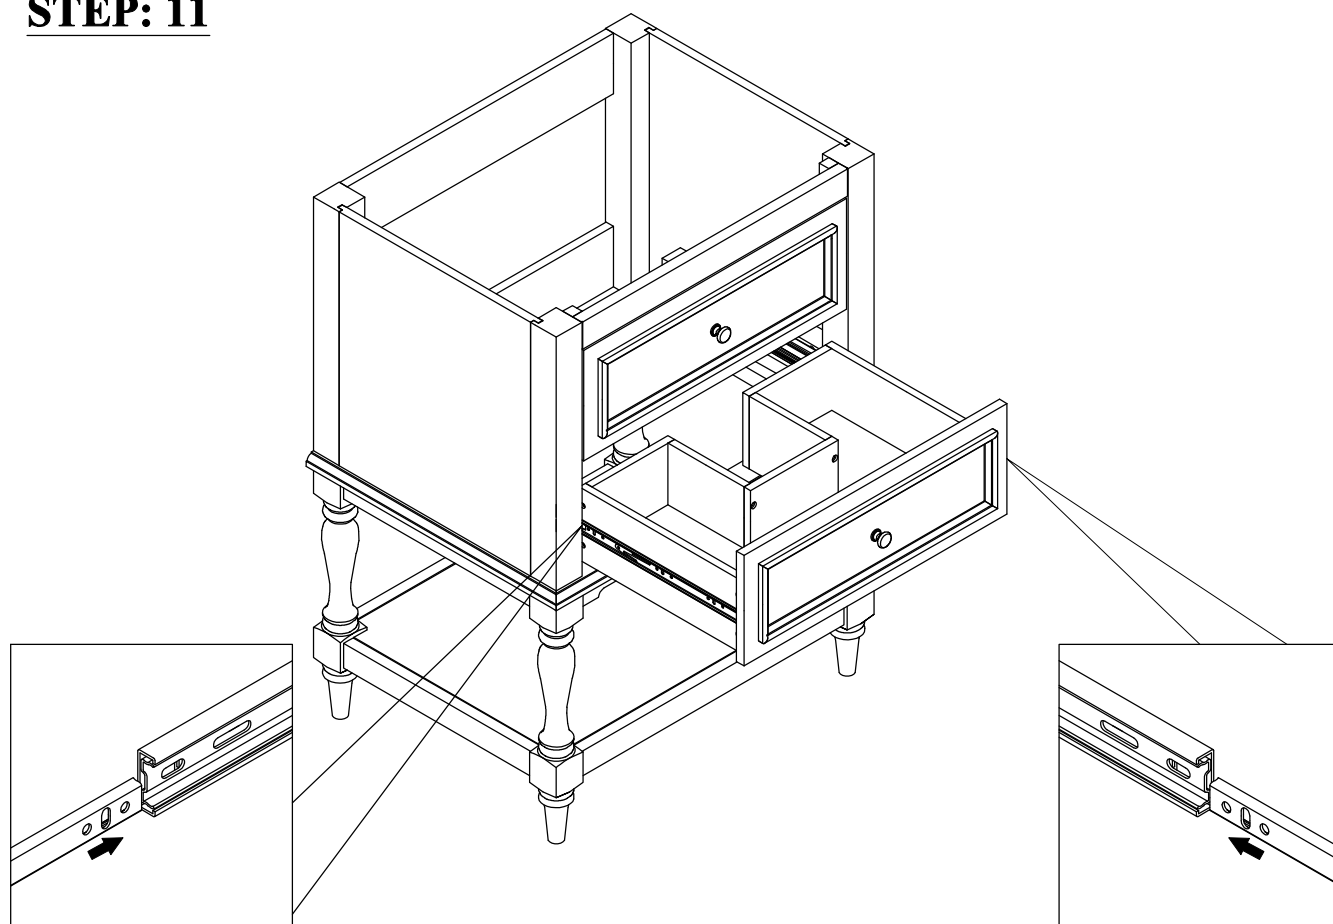


STEP: 12

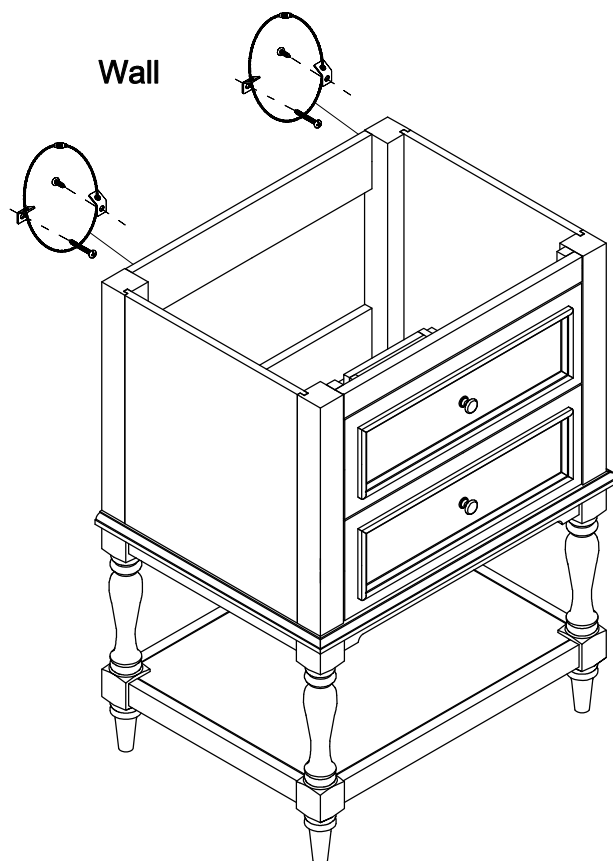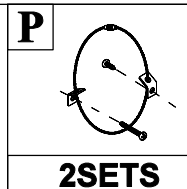

STEP: 13

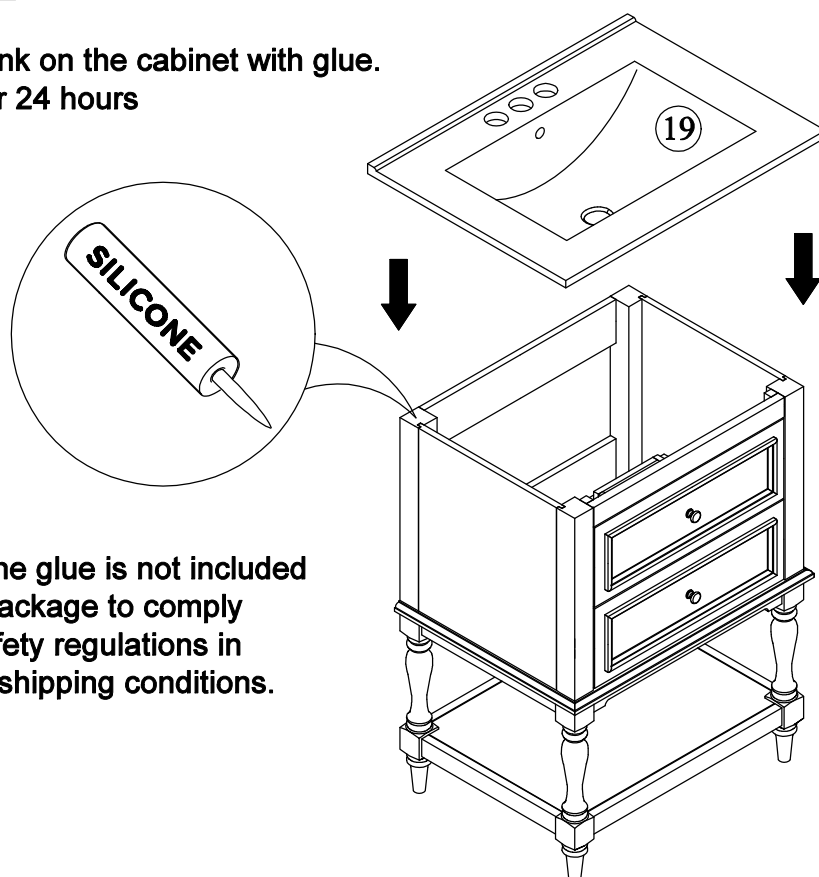Install the sink on the cabinet with glue.
Let stand for 24 hours



*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 14

